


MODEL MOM 7104A48
7107A48


BODY PARTS DRAWING

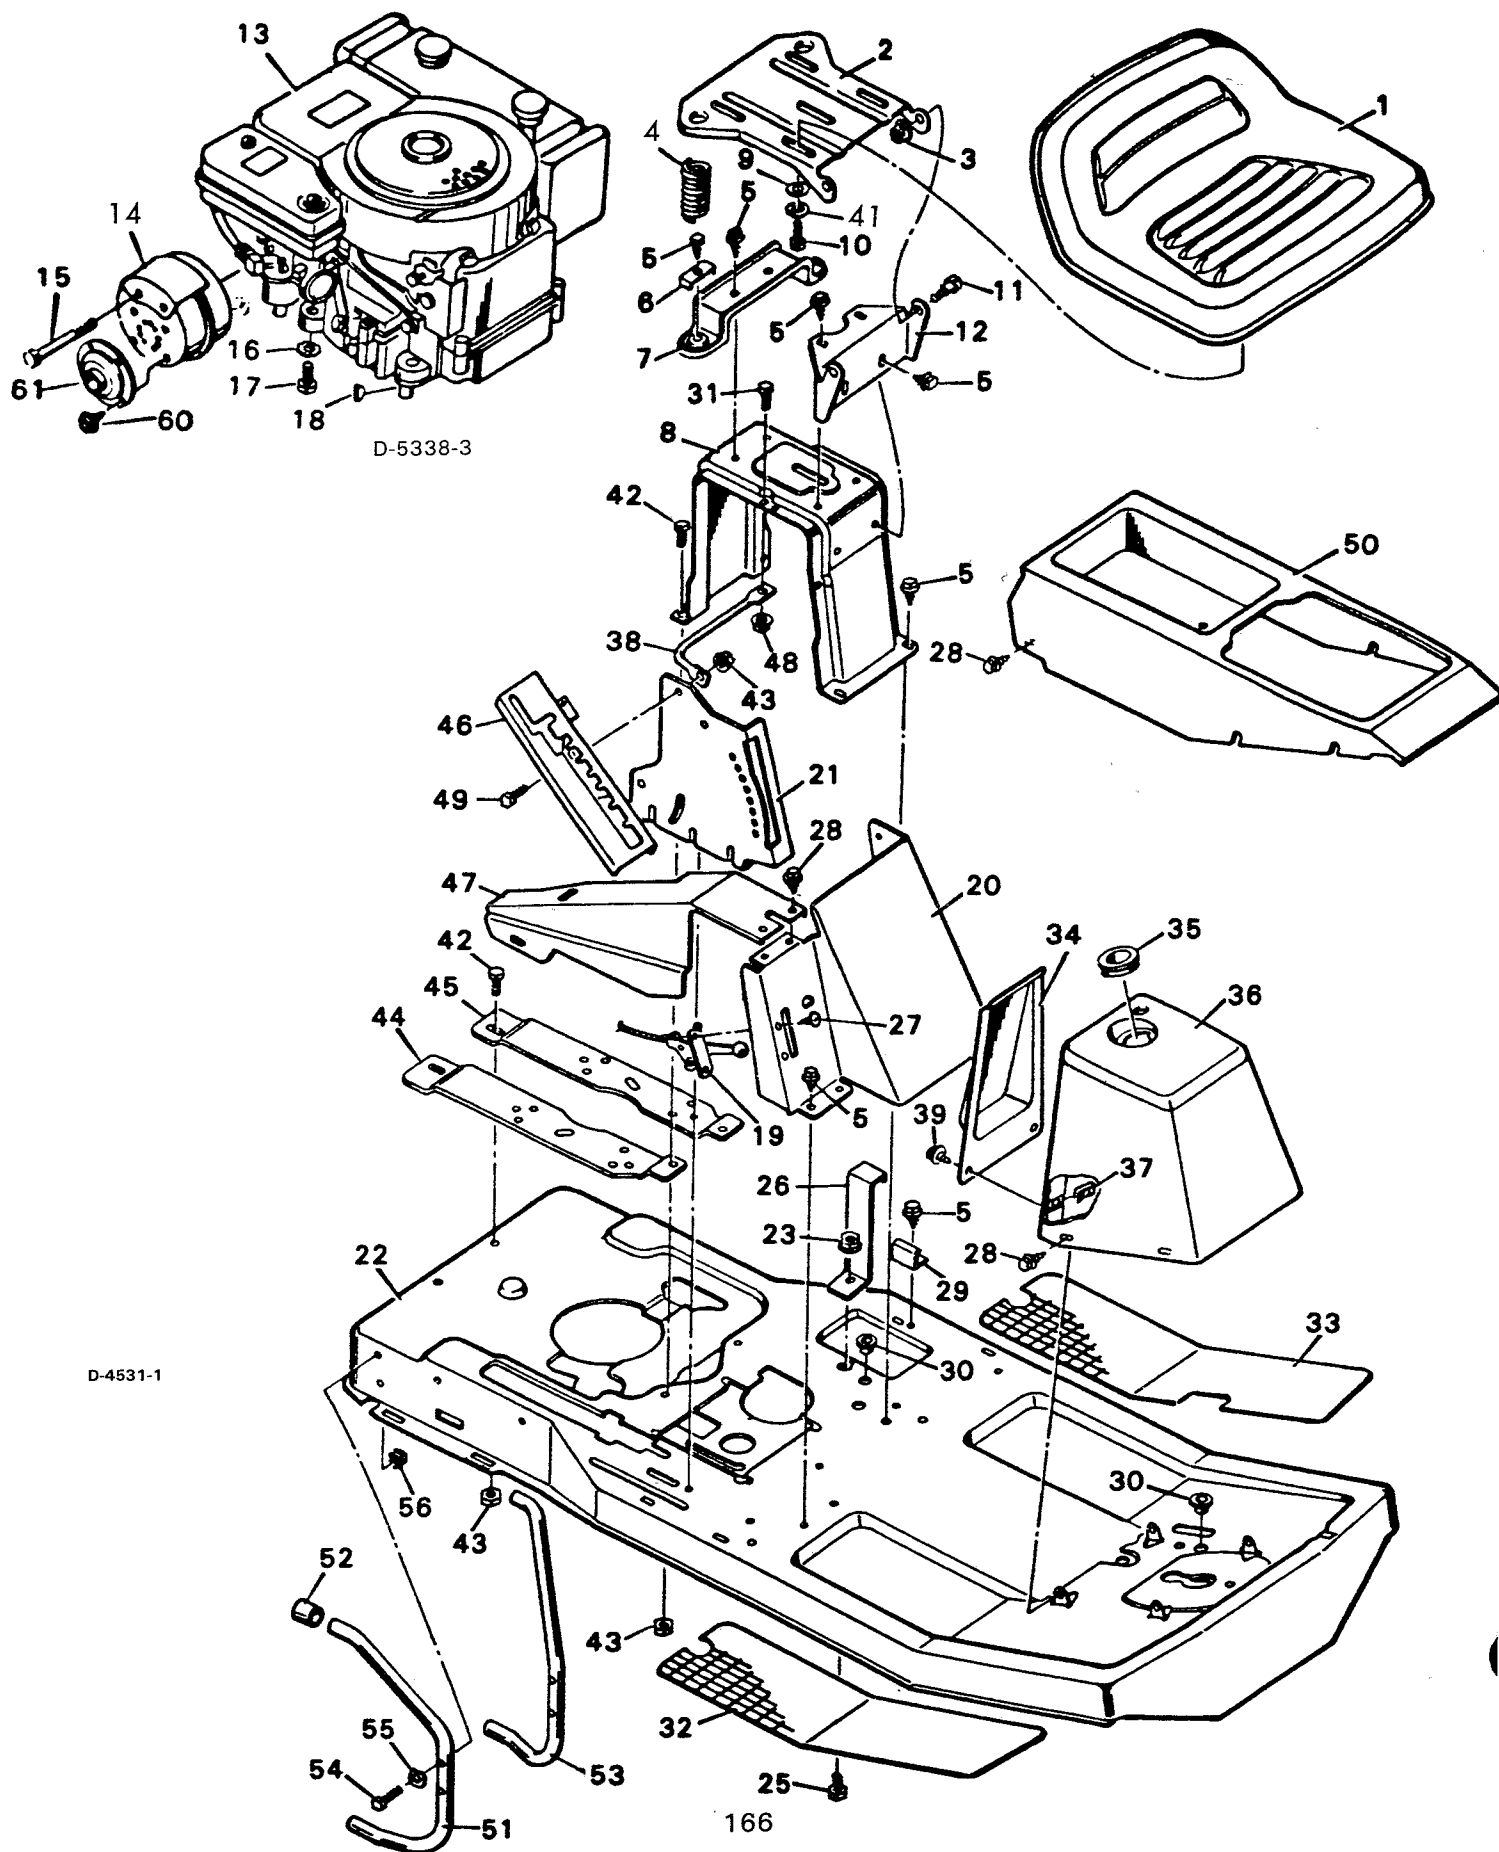

BODY PARTS LIST
MODEL MOM 7104A48
7107A48

KEY NO.	DESCRIPTION	PART NO.
1	Seat	90368
2	Seat Mount	55098
3	Flange Locknut 3/8"-16	15X84
4	Seat Spring	164X13
5	Screw	26X49
6	Spring Retainer	90014
7	Spring Hanger	55062
8	Seat Support	55060
9	Washer	17X47Z
10	Hex Bolt 5/16"-18X1/2"	1X92
11	Shoulder Bolt 3/8"-16X7/8"	9X15
12	Seat Hinge	55061
13	Engine	-----
14	Muffler	90331PA
15	Hex Bolt 1/4"-20X3 1/4"	1X117
16	Shakeproof Washer	19X8
17	Bolt - Engine Mount	20103
18	Woodruff Key No. 6	20062
19	Control & Cable	55628
20	Control Panel	55615
21	Index Plate	55616
22	Frame Channel	55572
23	Keps Nut 1/4"-20	15X66
24	Shakeproof Washer	17X32Z
25	Carriage Bolt 1/4"-20X3/4	2X67
26	Battery Clamp	55210Z
27	Tapping Screw	26X159
28	Tapping Screw	26X214
29	Battery Clip	55149Z
30	Bushing	55176
31	Hex Bolt 1/4"-20X1/2"	1X100
32	Mat-Running Board (R.H.)	55102
33	Mat-Running Board (L.H.)	55103
34	Console Plate	55023
35	Bearing-Steering Post	55004
36	Console Assembly	55018
37	Tinnerman Nut 1/4"-20	28X18
38	Strut	55617
39	Machine Screw 1/4"-20X1/2"	4X24
40	Washer	19X6
41	Lockwasher	18X16
42	Hex Bolt 5/16-18X5/8	1X45
43	Flange Locknut	15X88
44	Right Engine Strap	55205
45	Left Engine Strap	55206
46	Index Bracket	55611
47	Chain Guard	55612
48	Locknut 1/4"-20	15X89
49	Hex Bolt 5/16"-18	1X91
50	Tray	55212
51	Tip Stand R.H.	55307
52	End Caps	55322
53	Tip Stand L.H.	55306
54	Hex Bolt 5/16-18X1 1/2	1X102
55	Cup Washer	17X132
56	Nut (5/16-18)	15X79
57	Exhaust Deflector	23740Z
58	Screws	26X203

**STEERING PART
DRAWING
MODELS MOM 7104A4
7107A4**

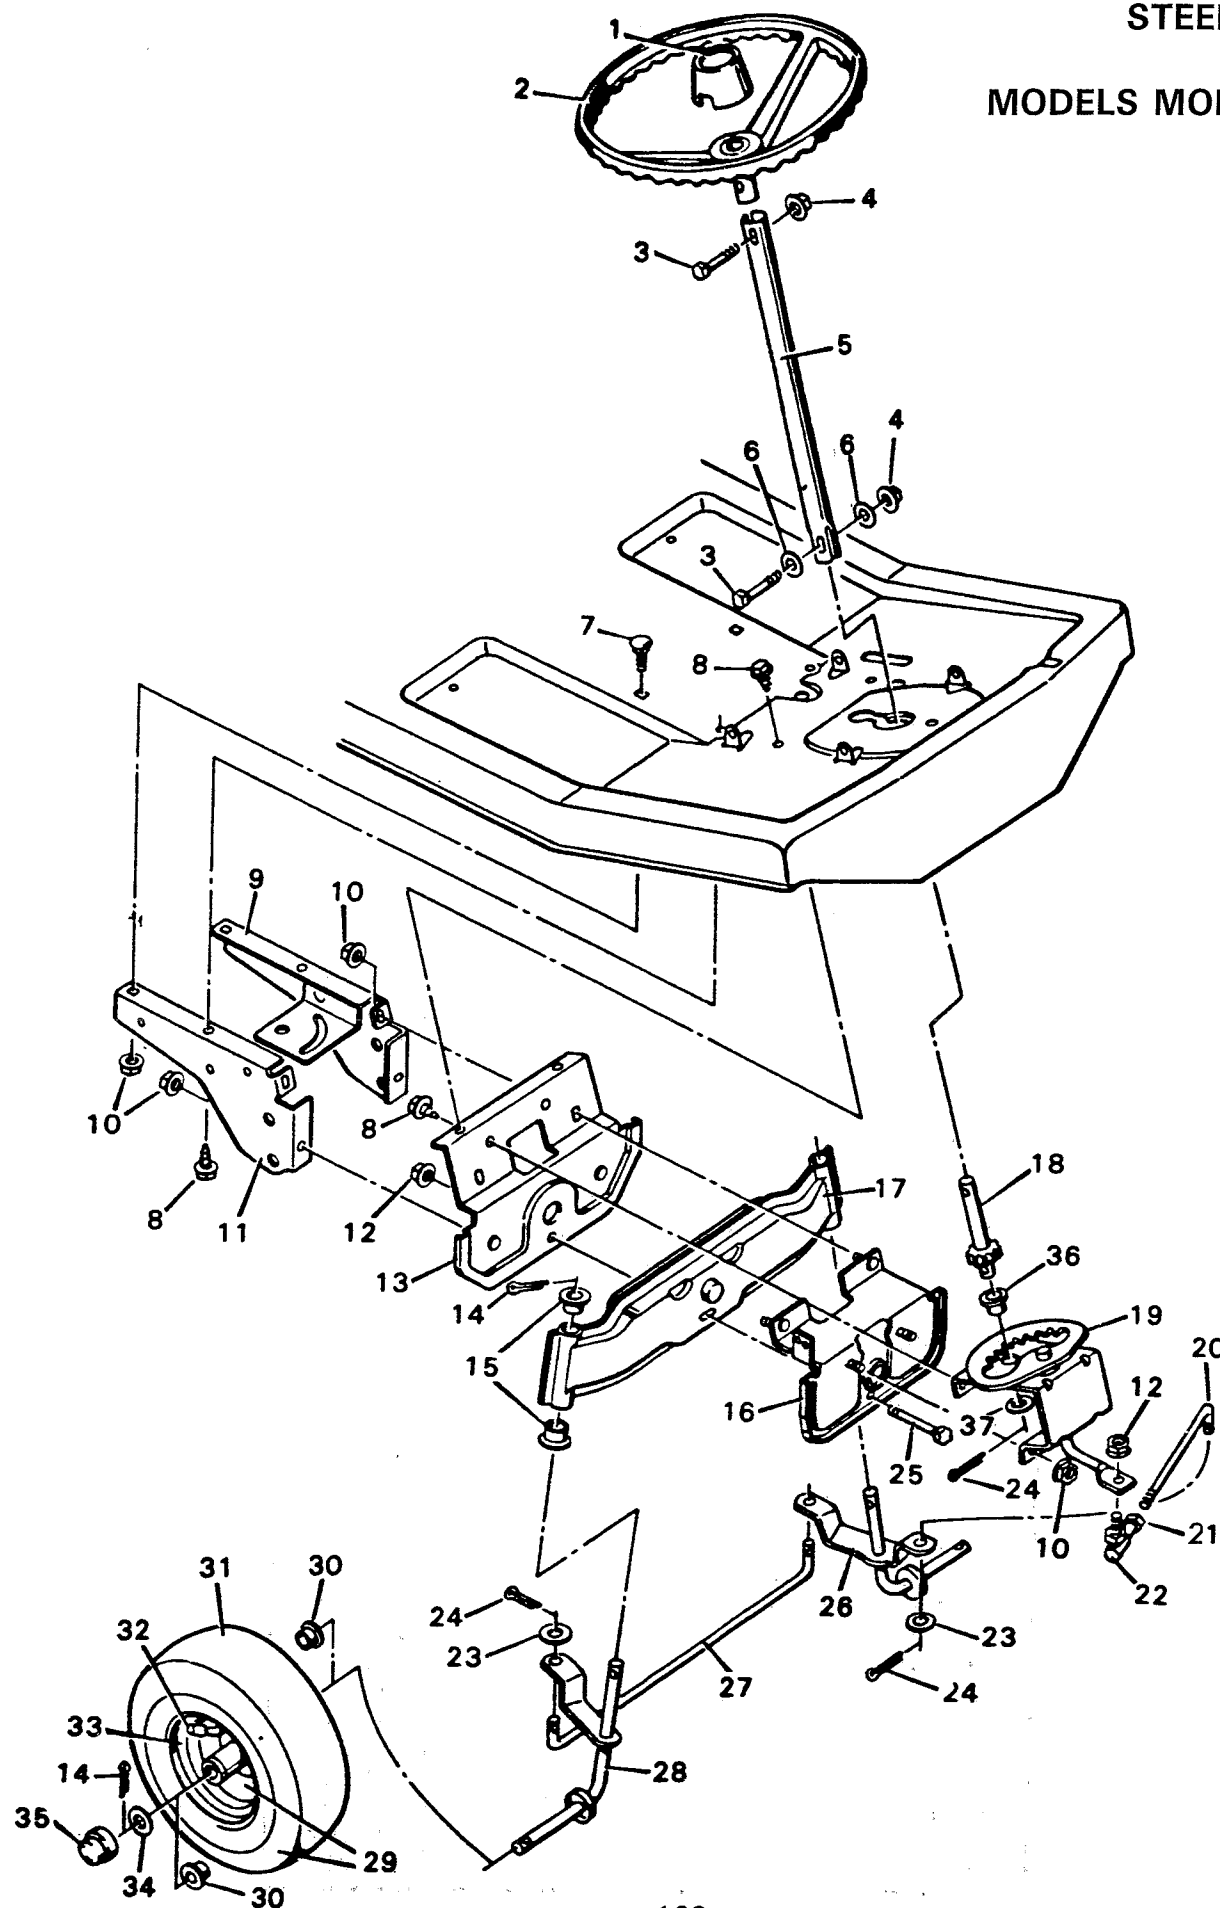

D-4530

STEERING PARTS LIST


MODEL MOM 7104A48

7107A48

KEY NO.	DESCRIPTION	PART NO.
1	Cap-Steering Wheel	23573
2	Steering Wheel	90126
3	Hex Bolt 5/16''-18X1 1/2''	1X102
4	Flange Locknut 5/16''-13	15X88
5	Steering Post	90130E
6	Washer	17X47Z
7	Carriage Bolt 5/16''-18X5/8''	2X53
8	Tapping Screw	26X49
9	Left Suspension Plate	55277
10	Flange Hex Nut	15X79
11	Right Suspension Plate	55201
12	Flange Locknut 3/8''-24	15X87
13	Front Axle Support Assembly	55056
14	Cotter Pin	30X49
15	Spindle Bearing	55003
16	Front Axle Hanger Assembly	55058
17	Front Axle Assembly	55024
18	Pinion Gear	55001
19	Sector Assembly	55041
20	Drag Link	55046
21	Hex Nut 3/8''-24	15X61
22	Steering Ball Joint	21031
23	Washer	17X53
24	Cotter Pin	30X20
25	Hex Bolt 3/8''-24X2 3/8''	1X69
26	Left Spindle Assembly	55039
27	Tie Rod	55026
28	Right Spindle Assembly	55038
29	Wheel & Tire Assembly	55267
30	Bearing*	24368
31	Tire Only*	24394
32	Valve Stem & Cap*	24373
33	Wheel Only*	55266E
34	Washer	24583
35	Hub Cap	24582
36	Bearing	55168
37	Washer	17X100Z

*NOTE: These key numbers are included with key no. 29. When ordering replacement parts specify the brand name of the tire to insure that tread patterns on tire match.

MOTION DRIVE PARTS DRAWING
MODEL MOM 7104A48
7107A48

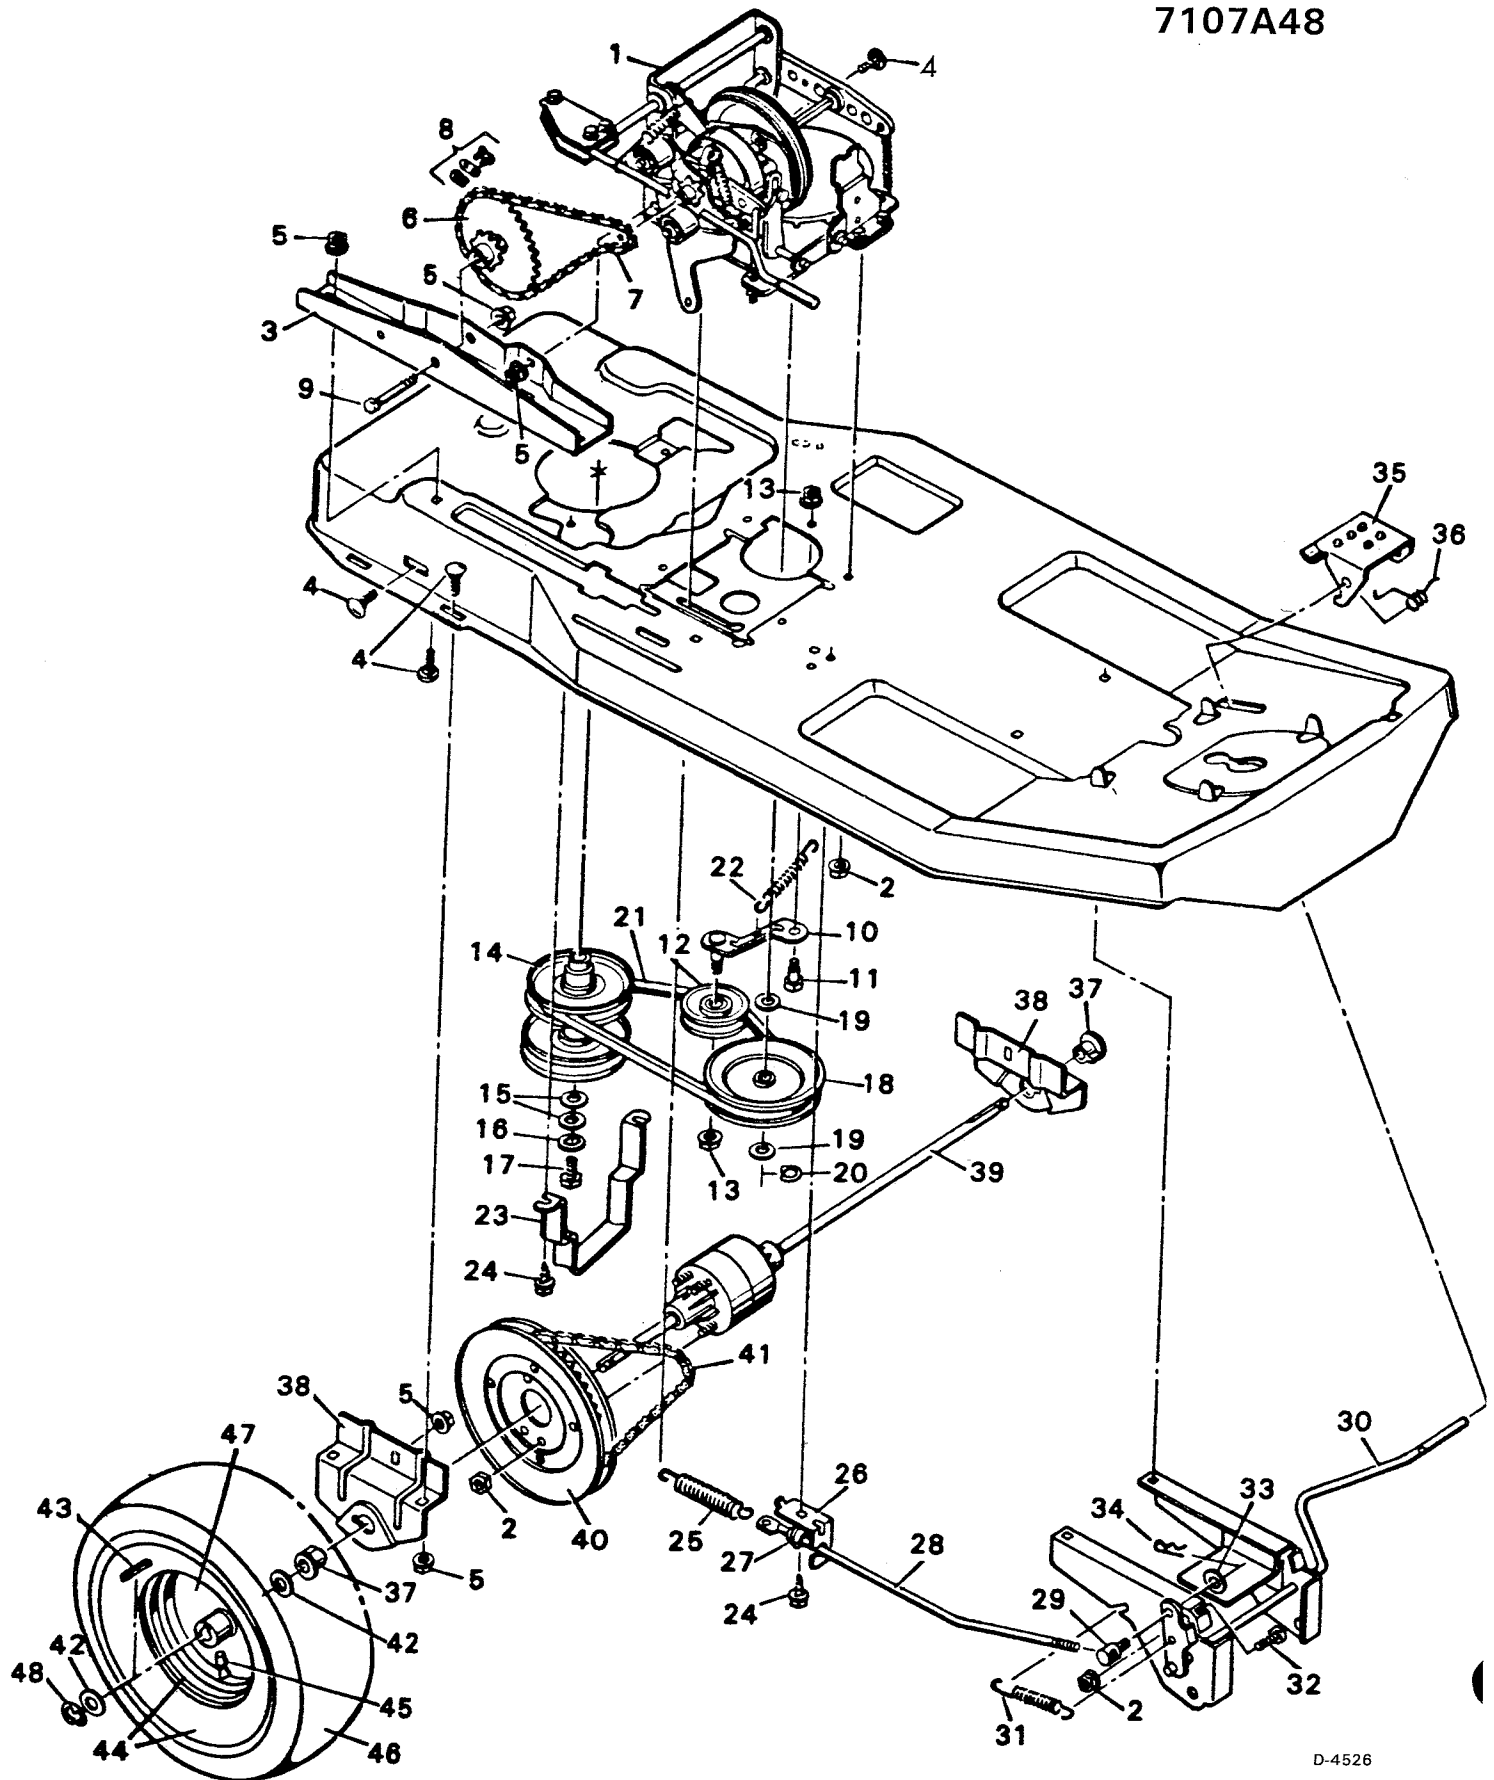


D-4526

MOTION DRIVE PARTS LIST
MODEL MOM 7104A48
7107A48

KEY NO.	DESCRIPTION	PART NO.
1	Transmission Assembly	55610
2	Flange Locknut 5/16"-18	15X88
3	Bridge	55531
4	Carriage Bolt 5/16"-18X5/8"	2X53
5	Flange Hex Nut 5/16"-18	15X79
6	Sprocket & Bearing Ass'y	55538
7	Chain #35	55533
8	Master Link Ass'y #35	55556
9	Sprocket Ass'y Shaft	9X25
10	Idler Arm Ass'y	55512Z
11	Shoulder Bolt 3/8"-16X7/8"	9X15
12	Idler Pulley	20613
13	Flange Locknut 3/8"-16	15X84
14	Stack Pulley Assembly	55303Z
15	Washer	10851Z
16	Shakeproof Washer	19X39
17	Hex Bolt 3/8"-24X1"	1X68
18	Pulley Transmission	55100
19	Washer	17X100
20	Snap Ring	11X7
21	Belt	37X5
22	Extension Spring-Belt	165X43
23	Belt Guide	55304Z
24	Self Tapping Screw	26X49
25	Extension Spring-Brake	165X23
26	Brake Rod Support	55589
27	Grommet-Brake Rod	55605
28	Brake Rod	55576Z
29	Adjusting Nut	21920
30	Brake/Clutch Lever Ass'y	55577
31	Extension Spring-Brake	165X50
32	Hex Bolt 5/16"-18X7/8"	1X84
33	Washer	17X47Z
34	Hair Pin	20692
35	Pedal-Brake/Clutch	55246
36	Tortional Spring-Pedal	166X18
37	Axle Bearing	90225
38	Bracket, Rear Axle	55064
39	Differential	----
40	Sprocket & Guard Ass'y	55621
41	Chain #41	55535
42	Washer	21521
43	Square Key 3/16"	21553
44	Wheel & Tire Ass'y	24392
45	Valve Stem & Cap*	24373
46	Tire Only*	24393
47	Wheel Only*	24391E
48	E-Ring	11X3

**BLADE HOUSING — TOP
HALF PARTS DRAWING
MODELS MOM 7104A48
7107A48**

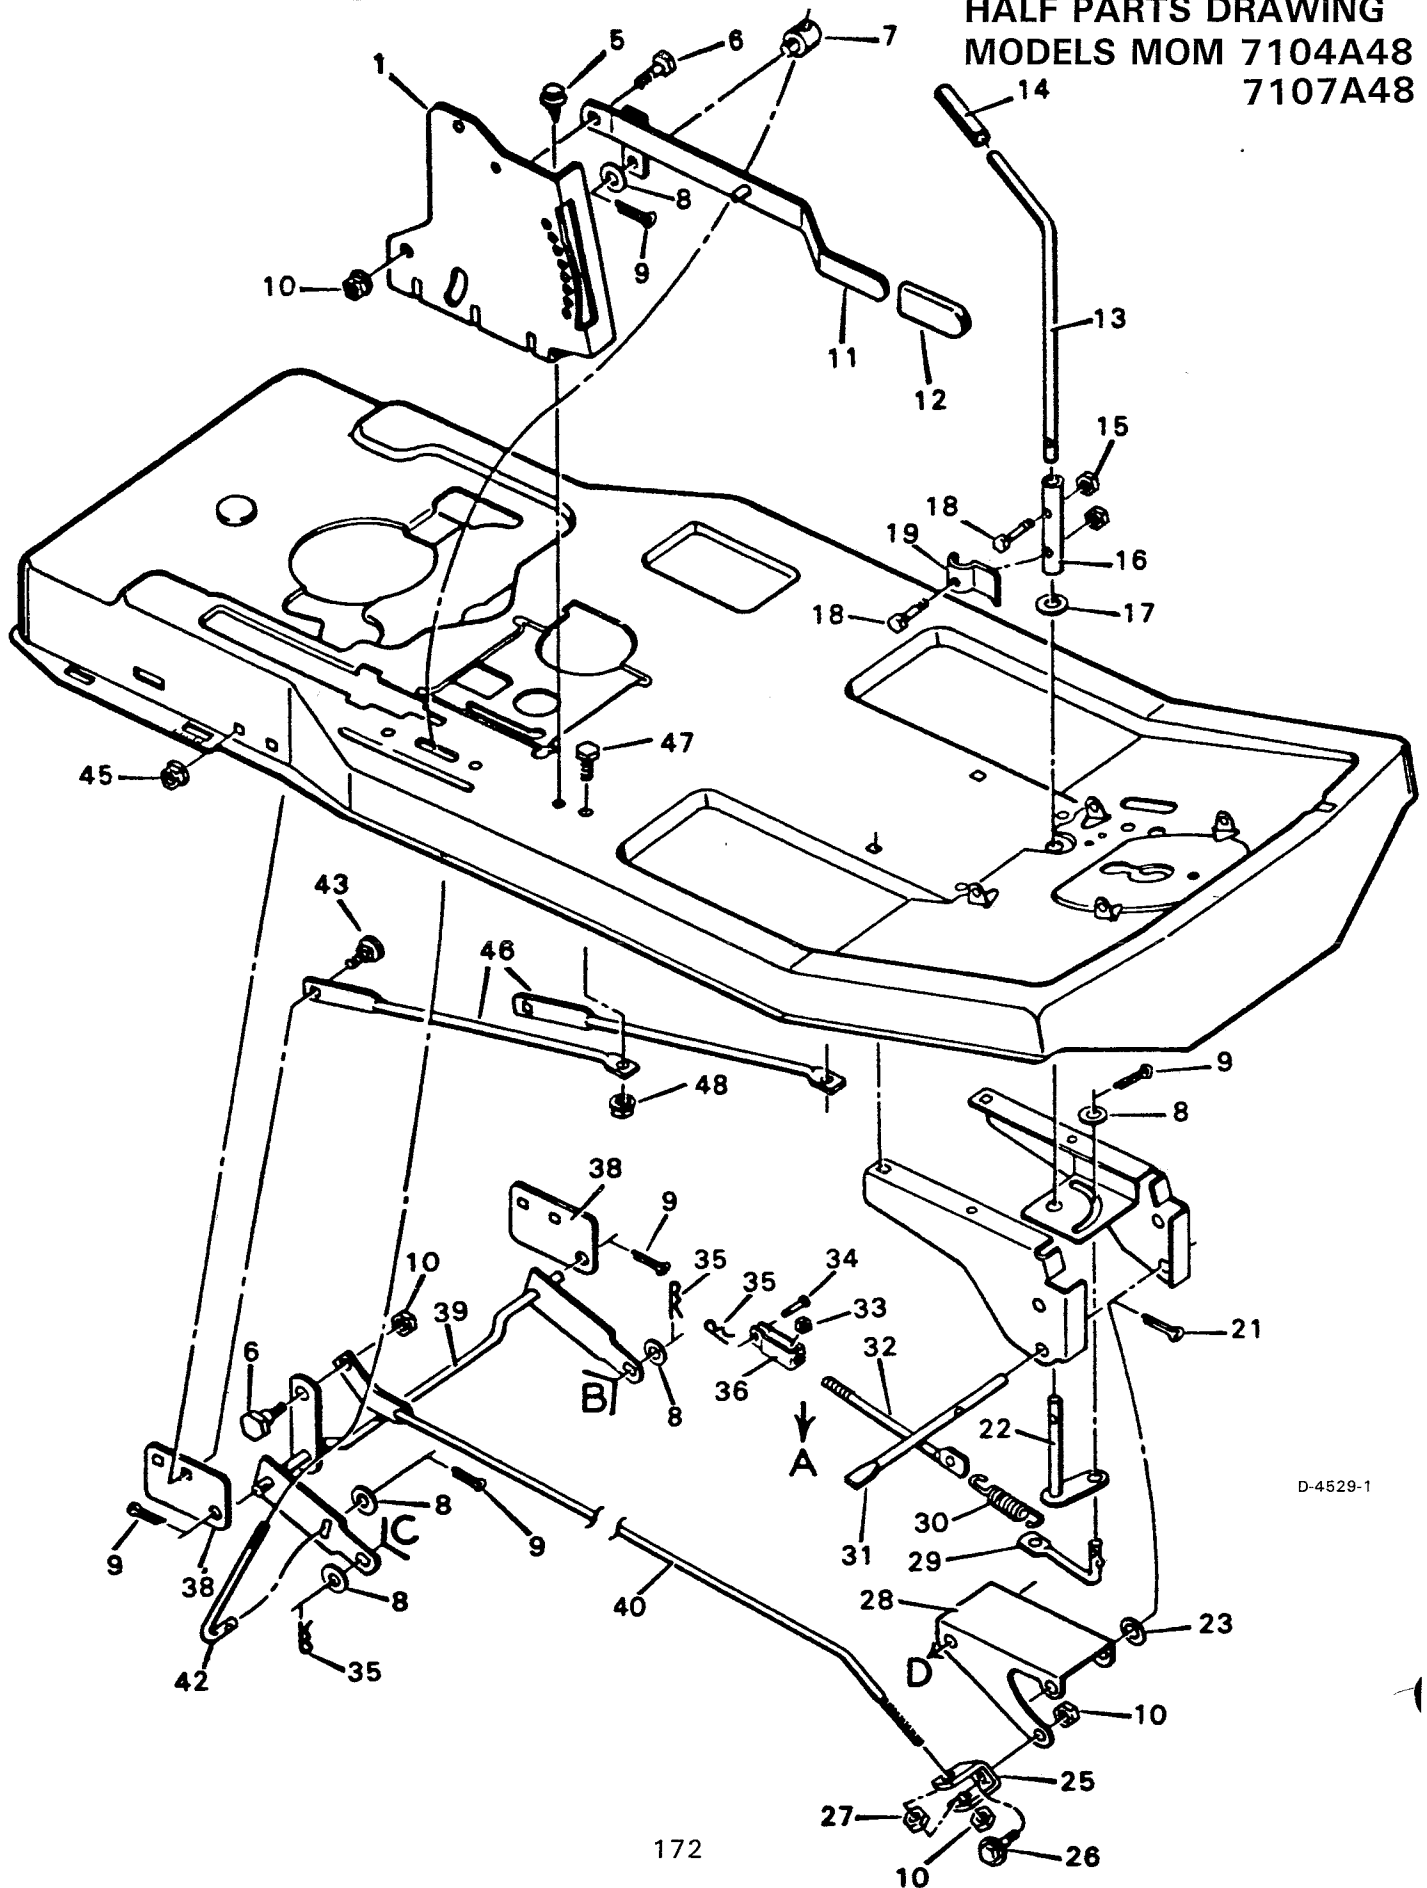


D-4529-1

**BLADE HOUSING — TOP
HALF PARTS LIST
MODEL MOM 7104A48
7107A48**

KEY NO.	DESCRIPTION	PART NO.
1	Index Plate	-----
5	Screw	26X49
6	Shoulder Bolt	9X9Z
7	Adjusting Nut	21920
8	Washer	17X53Z
9	Cotter Pin	30X20
10	Locknut 3/8"-16	15X84
11	Lifter Lever Assembly	55257
12	Grip	21249
13	Blade Lever	55089Z
14	Grip, Blade Lever	20476
15	Flange Locknut 1/4"-20	15X89
16	Tube, Blade Lever	55088
17	Washer	17X67Z
18	Hex Bolt 1/4"-20X1"	1X76
19	Switch Bracket	55300
21	Cotter Pin	30X49
22	Rod & Arm Assembly	55279
23	Washer	17X67Z
25	Clevis	55298
26	Shoulder Bolt	9X12
27	Hex Nut	15X73
28	Bracket, Front Suspension	55139
29	Front Link	55179
30	Extension Spring	165X56
31	Suspension Pin	55141Z
32	Blade Drive Link	55271Z
33	Hex Nut	15X2
34	Clevis Pin	29X99
35	Hair Pin	20692
36	Clevis	21915Z
38	Lifter Mounting Plate	55270
39	Suspension Rod Assembly	55292
40	Linkage Rod	55283Z
42	Lifter Rod	24839
43	Carriage Bolt 5/16"-18X5/8"	2X53
45	Flange Nut 5/16"-18	15X79
46	Strut	55321
47	Bolt	1X45
48	Nut	15X88

**BLADE HOUSING — BOTTOM
HALF PARTS DRAWING
MODEL MOM 7104A48
7107A48**

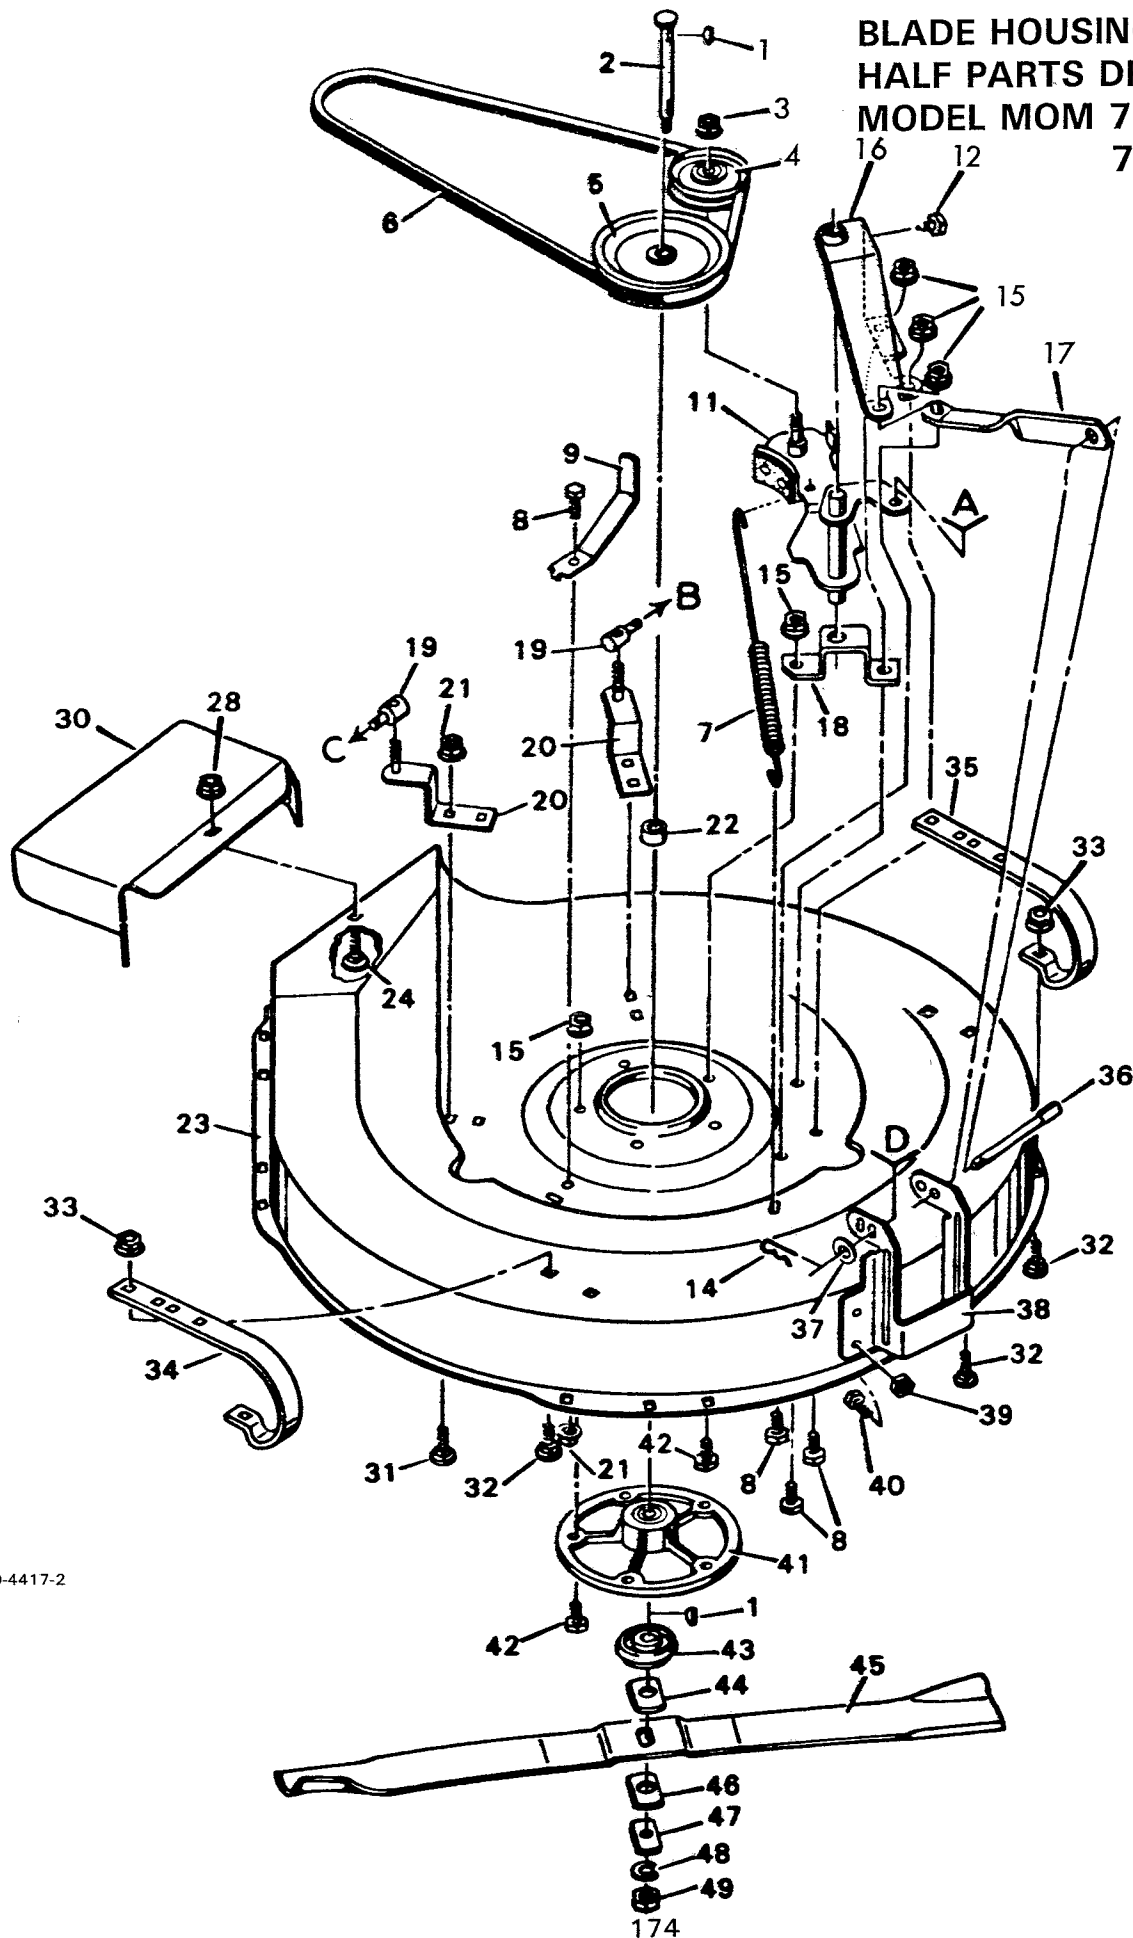

D-4417-2

**BLADE HOUSING — BOTTOM
HALF PARTS LIST
MODEL MOM 7104A48
7107A48**


KEY NO.	DESCRIPTION	PART NO.
1	Woodruff Key #6	20062
2	Jackshaft	55272
3	Flange Locknut 3/8"-16	15X84
4	Idler Pulley	20613
5	Pulley	90242
6	Belt, Blade Drive	37X50
7	Extension Spring-Blade Brake	165X57
8	Hex Bolt 5/16"-18X5/8"*	1X45
9	Belt Guide	55296Z
11	Blade Idler Assembly	55286Z
12	Screw	26X49
14	Hair Pin	20692
15	Flange Locknut 5/16"-18	15X88
16	Top Idler Pivot Bracket	55301
17	Strap	55305
18	Lower Idler Pivot Bracket	55297
19	Adjusting Nut	21920
20	Rear Bracket & Bolt Assembly*	55136
21	Flange Hex Nut 5/16"-18*	15X79
22	Jackshaft Spacer	55273Z
23	Blade Housing Assembly	55314
24	Carriage Bolt Deflector*	2X39
28	Flange Nut Deflector*	15X89
30	Chute Deflector*	24891
31	Carriage Bolt 5/16"-18X5/8"*	2X53
32	Carriage Bolt*	2X67
33	Flange Locknut 1/4"-20*	15X82
34	Skid, R.H.*	90453
35	Skid, L.H.*	90353
36	Pull Pin	55142Z
37	Washer	17X67Z
38	Front Bracket*	55302
39	Keps Nut 1/4"-20*	15X66
40	Machine Screw 1/4"-20X1/2"*	4X25
41	Jackshaft Housing Assembly	24384
42	Hex Bolt 5/16"-18X1"	1X84
43	Blade Adapter	20617
44	Washer	24614Z
45	Blade - 30"	24524
46	Washer	21673Z
47	Blade Washer	20663Z
48	Spring Lockwasher	18X27
49	Hex Nut - Blade Mount	15X72
	Complete Blade Housing	403198

*NOTE: These key numbers are included with key no. 23.

FRICTION DRIVE TRANSMISSION ILLUSTRATION

MODEL MOM 7104A48

7107A48

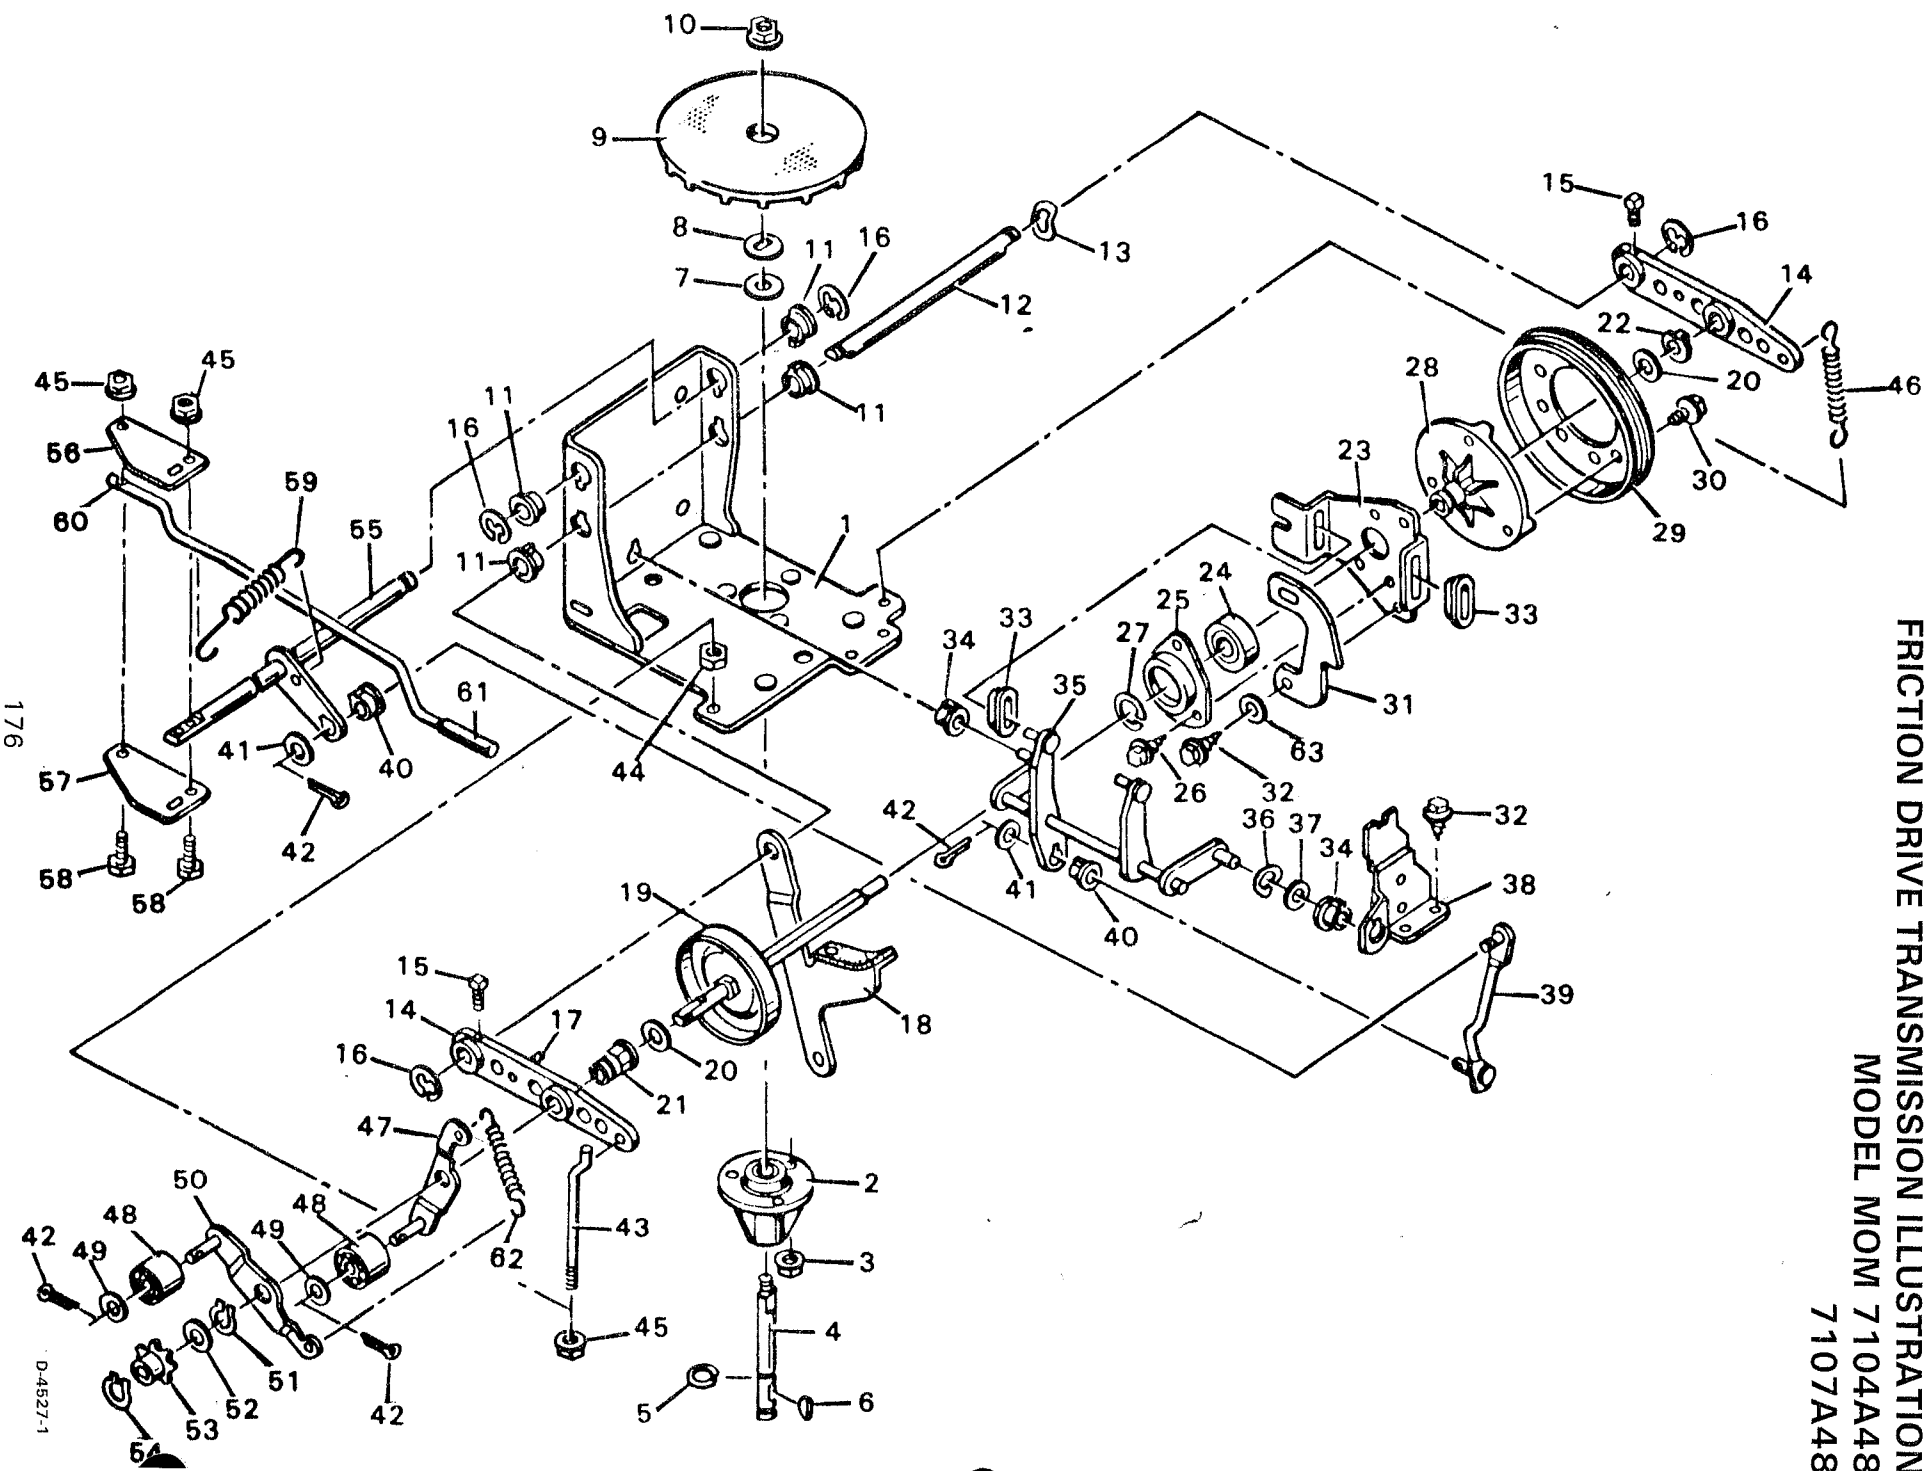


FRICTION DRIVE TRANSMISSION PARTS LIST

MODEL MOM 7104A48

7107A48

KEY NO.	DESCRIPTION	PART NO.	KEY NO.	DESCRIPTION	PART NO.
1	Carriage Support Ass'y	55562	33	Bushing-Nylon Oval	55546
2	Housing Ass'y-Bearing	55596	34	Nylon Bearing 3/8" ID	55547
3	Locknut-Hex Flange 5/16"X18	15X88	35	Pivot Rod Assembly	55569
4	Jackshaft	55551	36	Spring Washer	20X2
5	Snap Ring-Heavy Duty 5/8"	11X13	37	Washer	17X53
6	Woodruff Key-#505	20062	38	Neutral Bracket	55607
7	Washer, Thrust	17X149	39	Linkage Assembly	55526
8	Washer, Trust-Special ID	17X147	40	Nylon Bearing 1/4" ID	55549
9	Disc-Drive	55500	41	Washer	17X36
10	Locknut-Hex Flange 3/8"-16	15X98	42	Cotter Pin	30X20
11	Nylon Bearing 5/8" ID	55548	43	Carriage Arm Stop	55511
12	Carriage Rod	55559	44	Hex Locknut 1/4"-20	15X67
13	Spring Washer	20X1	45	Flange Hex Locknut 1/4"-20	15X89
14	Carriage Arm	55502	46	Extension Spring	165X55
15	SQ Head Set Screw 1/4"X20X1/2"	22X57	47	R.H. Idler Assembly	55513
16	E Ring	11X8	48	Roller	55570
17	Rool Pin	32X64	49	Washer	17X52
18	Brake Lever Assembly	55582	50	L.H. Idler Assembly	55514
19	Hex Shaft Assembly	55584	51	Snap Ring	11X7
20	Washer, Thrust-Hardened	17X150	52	Washer	17X57
21	Bearing-Bronze, Flanged Hexagon	55545	53	Sprocket, 9 Tooth #35	55543
22	Bearing-Bronze, Flanged Hexagon	55544	54	Snap Ring	11X11
23	Carrier Arm	55608	55	Shift Rod Assembly	55609
24	Bearing	55541	56	L.H. Yoke Half	55578
25	Retainer-Bearing	55509	57	R.H. Yoke Half	55588
26	Self Tapping Screw 5/16"X3/8"	26X174	58	Hex Bolt 1/4"-20X1-1/4"	1X94
27	Snap Ring	11X12	59	Extension Spring	165X54
28	Hub-Friction Disc	55501	60	Shift Lever	55613
29	Disc-Friction	55550	61	Grip	55624
30	Self Tapping Screw 5/16"X5/8"	26X207	62	Spring	165X27
31	Neutral Arm	55606	63	Washer	17X47
32	Self Tapping Screw 5/16"X1/2"	26X49			

DIFFERENTIAL MODEL 100-029

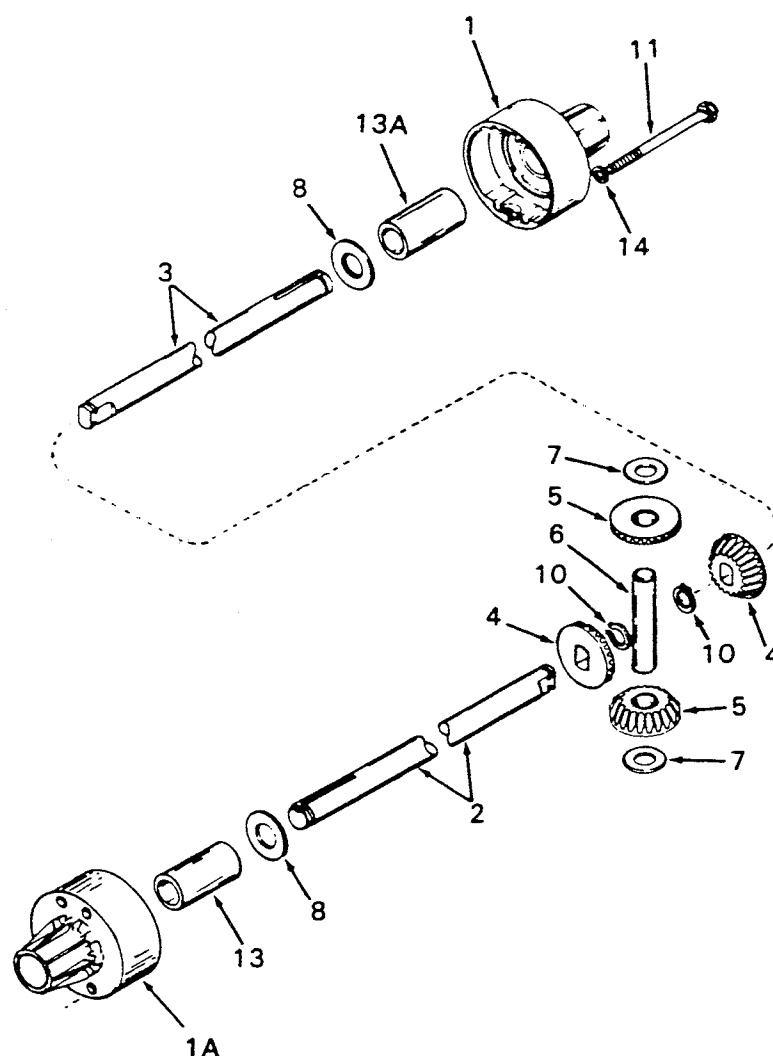


PARTS LIST

D-4093-1

KEY NO.	PART NO.	DESCRIPTION
1	774463	Housing, Differential carrier (Incl. No. 13A)
1A	774344	Housing, Differential carrier (Incl. No. 13)
2	774532	Axle (8-11/64" long)
3	774531	Axle (19-3/32" long)
4	778067	Gear, Bevel
5	778068	Gear, Pinion
6	786040	Pin, Drive
7	780096	Washer, Thrust
8	780001	Washer
10	792018	Ring, Snap
11	792041	Screw, Hex hd., 5/16-18X3-7/8
12	792042	Nut, Lock, 5/16-18
13	780077	Bushing
13A	780124	Bushing
14	792061	Washer

**WIRING DIAGRAM
AND PARTS LIST
MODEL MOM 7104A48***

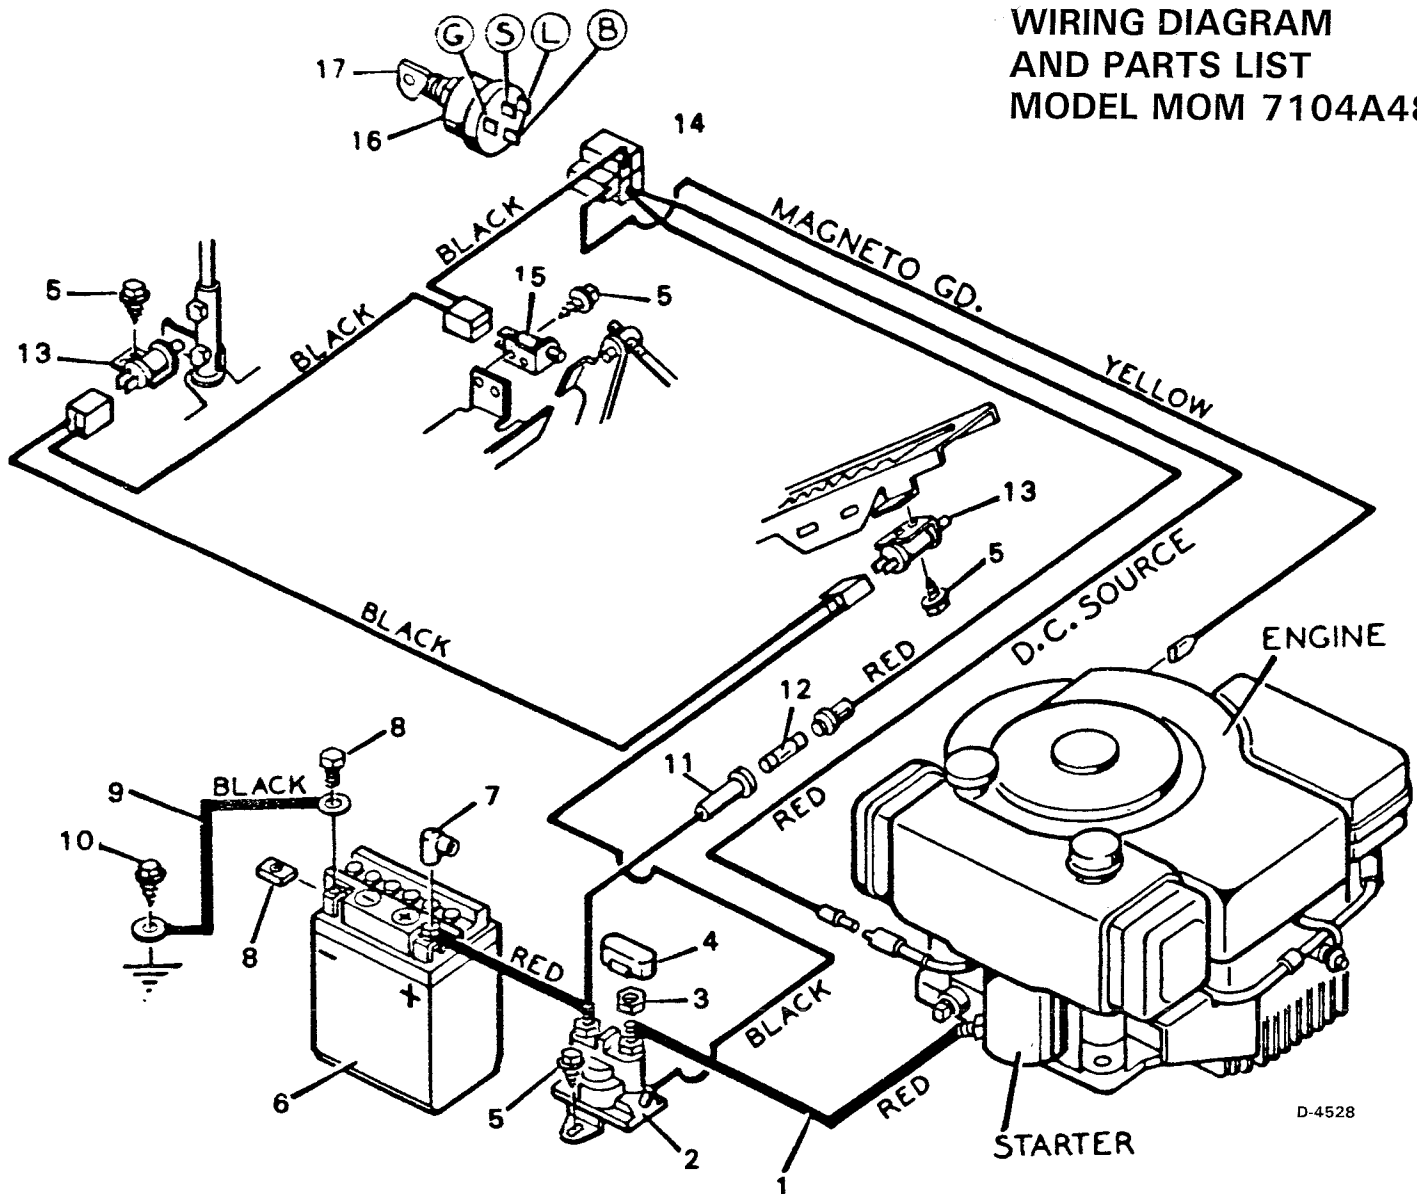


D-4528

KEY NO.	DESCRIPTION	PART NO.
1	Battery Cable	24X12
2	Solenoid	24285
3	Hex Nut 1/4"-20	15X66
4	Solenoid Cover	90565
5	Screw	26X185
6	Battery	55308
	Electrolyte-(Battery Acid)	55320
7	Cable Boot	24196
8	Battery Hardware	402012
9	Battery Cable-Ground	24X9
10	Screw	26X49
11	Fuse Holder	407058
12	Fuse-15 amp	23572
13	Limit Switch	24273
14	Wiring Harness	55626
15	Limit Switch	21549
16	Key & Switch Assembly	21064PA
17	Key Only	20729

*Refer to page 180 for Model 7107A48 Diagram.

**WIRING DIAGRAM
AND PARTS LIST
MODEL MOM 7107A48**

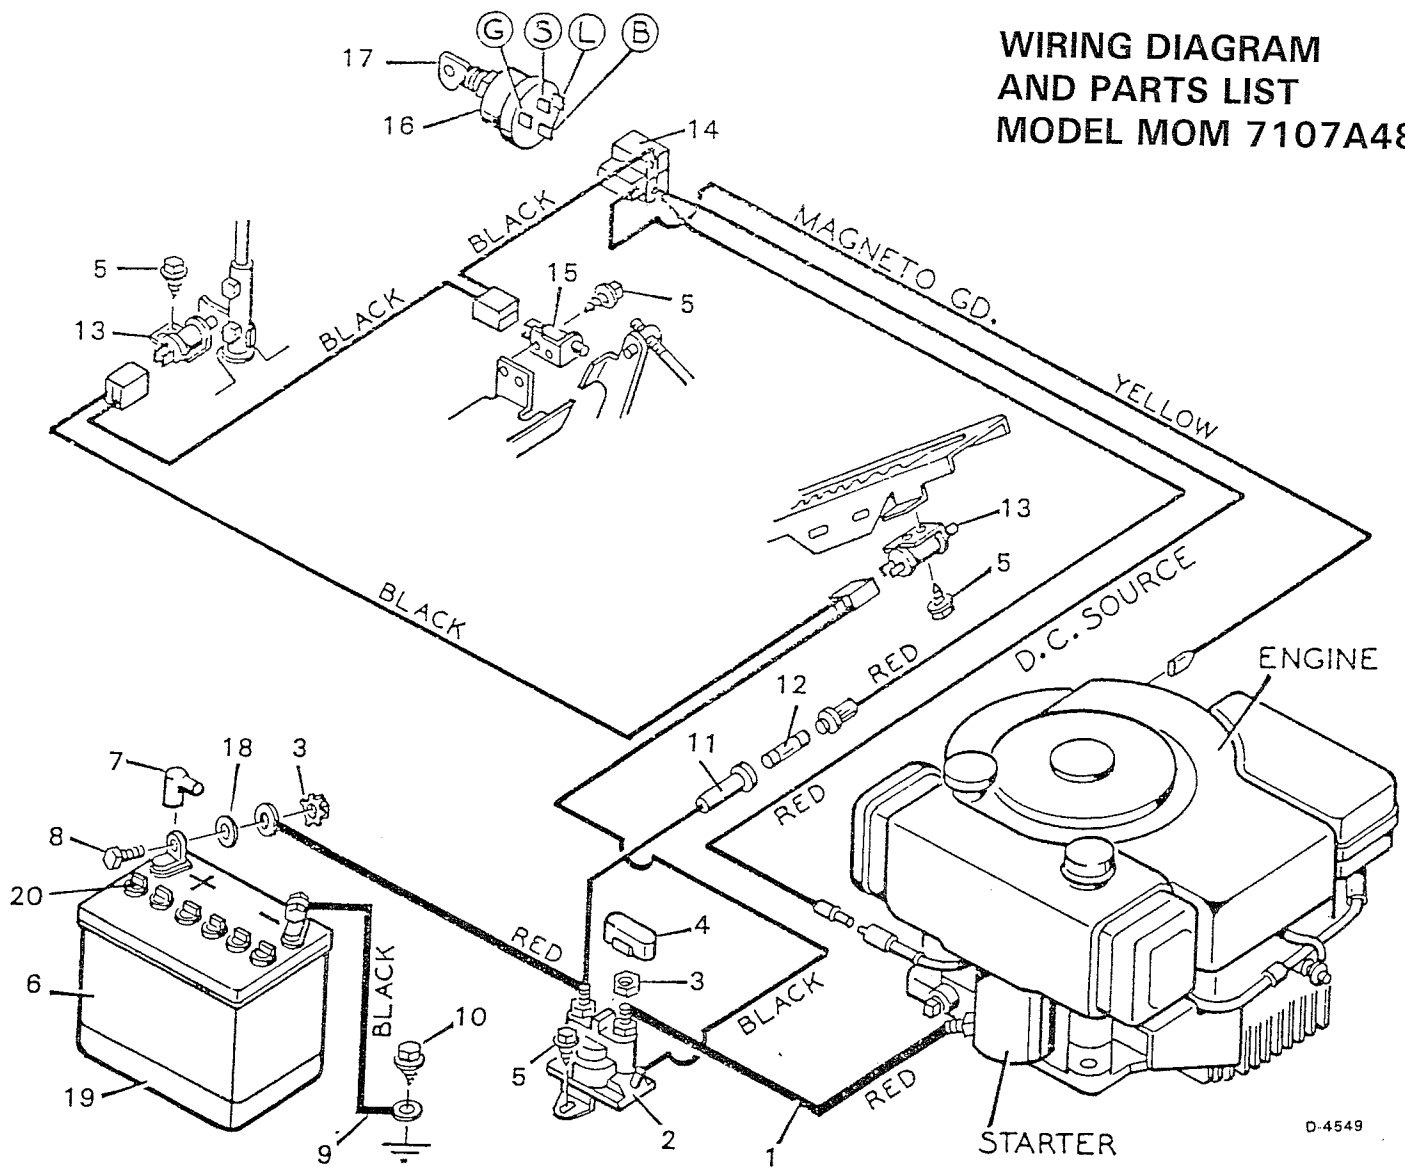

D-4549

KEY NO.	DESCRIPTION	PART NO.
1	Battery Cable	24X1
2	Solenoid	24285
3	Hex Nut 1/4"-20	15X66
4	Solenoid Cover	90565
5	Screw	26X185
6	Battery	54141
	Electrolyte-(Battery Acid)	90665
7	Cable Boot	24196
8	Bolt	1X38
9	Battery Cable-Ground	24X3
10	Screw	26X49
11	Fuse Holder	407058
12	Fuse-15 amp	23572
13	Limit Switch	24273
14	Wiring Harness	55627
15	Limit Switch	21549
16	Key & Switch Assembly	21064PA
17	Key Only	20729
18	Washer	17X143
19	Battery Tray	24157
20	Battery Caps	54150