



WARNING:

Read and follow all Safety Rules and Operating Instructions before using this product. Failure to do so can result in serious injury.

ADVERTENCIA:

Lea el manual del operador y siga todas las advertencias e instrucciones de seguridad. El no hacerlo puede resultar en lesiones graves.

AVERTISSEMENT:

Lire le manuel de l'utilisateur et bien respecter tous les avertissements et toutes les instructions de sécurité. Tout défaut de le faire pourrait entraîner des blessures graves.

Electrolux Home Products, Augusta, GA 30907 WCI Outdoor Products, Inc.

530088696 8/14/00

FRANÇAIS

SAFETY RULES

A WARNING: When using gardening appliances, basic safety precautions should always be followed to reduce the risk of fire and serious injury. Read and follow all instructions.

This power unit can be dangerous! Operator is responsible for following unit and manual instructions and warnings. Read entire Operator's Manual before using unit! Be thoroughly familiar with the controls and the proper use of the unit. Restrict the use of this unit to persons who read, understand, and follow unit and manual instructions and warnings. Never allow children to operate this unit.





OPERATOR'S MANUAL SAFETY INFORMATION ON THE UNIT

DANGER: Never use blades, wire or flailing devices. Unit is designed for line trimmer use only. Use of any other accessories or attachments will increase the risk of injury.



WARNING: Trimmer line throws objects violently. You and others can be blinded/ injured. Wear safety glasses and leg protection. Keep body parts clear of rotating line.



Keep children, bystanders, and animals 50 feet (15 meters) away. If approached stop unit immediately.

If situations occur which are not covered in this manual, use care and good judgement. If you need assistance, contact your Authorized Service Dealer or call 1-800-554-6723.

OPERATOR SAFETY

 Always wear safety eye protection.
 Always wear heavy long pants, long sleeves, boots, and gloves. Wearing safety leg guards is recommended. Always wear face or dust mask if operation is dusty. Do not go barefoot or wear sandals. Stay clear of spinning line.

- Secure hair above shoulder length. Secure or remove loose clothing or clothing with loosely hanging ties, straps, tassels, etc. They can be caught in moving parts.
- Stay Alert. Do not operate this unit when you are tired, ill, or under the influence of alcohol, drugs, or medication.
- Wear hearing protection if you use this unit for more than 1-1/2 hours per day.
- Never start or run inside a closed room or building. Breathing exhaust fumes can kill.
- Keep handles free of oil and fuel.

UNIT / MAINTENANCE SAFETY

DANGER: Never start the engine with the clutch shroud removed. The clutch will fly apart and cause serious injury.

- Turn engine off and disconnect spark plug before performing maintenance except carburetor adjustments.
- Inspect unit before use. Look for and replace damaged or loose parts before each use. Make sure all handles, guards, and fasteners are in place and securely fastened. Look for and repair fuel leaks before use. Keep in good working condition.
- Replace trimmer head that is chipped, cracked, broken, or damaged in any other way before using the unit.
- Use only 0.115" diameter Poulan/Weed Eater® brand cut length line (see RE-PLACING THE LINE). Never use wire, rope, string, etc.
- Make sure unit is assembled correctly as shown in this manual.
- Make carburetor adjustments with lower end supported to prevent line from contacting any object.
- Keep others away when making carburetor adjustments.
- Use only recommended Weed Eater® accessories and replacement parts.

FUEL SAFETY

- Mix and pour fuel outdoors.
- Keep away from sparks or flames.
- Use a container approved for fuel.
- Do not smoke or allow smoking near fuel or the unit.
- Wipe up all fuel spills.
- Move at least 10 feet (3 meters) away from
- fueling site before starting engine.
- Stop engine and allow to cool before removing fuel cap.

CUTTING SAFETY

- Use unit properly. Use only for trimming, mowing, and sweeping. Do not use for edging, pruning, or hedge trimming. Do not force unit. It will do the job better, and with less risk of injury, at the rate for which it was designed.
- Inspect the area before each use. Remove objects (rocks, broken glass, nails, wire, etc.) which can be thrown by or become entangled in line. Hard objects can damage



trimmer head and be thrown causing serious injury.

- Keep firm footing and balance. Do not overreach.
- Keep all parts of your body away from spinning line and muffler. Keep engine and cutting head below waist level. A hot muffler can cause serious burns.
- Cutting with the line on right side of the shield will throw debris away from the operator.
- Use only in daylight or in good artificial light. TRANSPORTING AND STORAGE

Stop the unit when not in use

- Carry or transport the unit with engine stopped.
- Allow the engine to cool; secure unit before storing or transporting in vehicle.
- Empty the fuel tank before storing or transporting the unit. Use up fuel left in the car-buretor by starting the engine and letting it run until it stops.
- Store unit and fuel in an area where fuel vapors cannot reach sparks or open flames from water heaters, electric motors or switches, furnaces, etc. • Store the unit out of the reach of children

SPECIAL NOTICE: This unit is not equipped with a temperature limiting muffler equipped with a temperature limiting muffler and spark arresting screen which meets the requirements of California Codes 4442 and 4443. All U.S. forest land and the states of California, Idaho, Maine, Minnesota, New Jersey, Oregon, and Washington require by law that many internal combustion engines to be equipped with a spark arrestor screen. If you operate in a locale where such regula-tions exist, you are legally responsible for installing and maintaining the operating con-dition of these parts. Failure to do so is a violadition of these parts. Failure to do so is a violation of the law. If a spark arrestor is required in your area, contact your Authorized Service Dealer for the proper kit.

SPECIAL NOTICE: Exposure to vibrations through prolonged use of gasoline powered hand tools could cause blood vessel or nerve damage in the fingers, hands, and joints of people prone to circulation disorders or abnormal swellings. Prolonged use in cold weather has been linked to blood vessel damage in otherwise healthy people. If symptoms occur such as numbness, pain, loss of strength, change in skin color or texture, or loss of feeling in the fingers, hands, or joints, discontinue the use of this tool and seek medical attention. An anti-vibration system does not guarantee the avoidance of these problems. Users who operate power tools on a continual and regular basis must monitor closely their physical condition and the condi-tion of this tool.

ASSEMBLY

WARNING: Make sure your unit is properly assembled and all fasteners are secure.

ATTACH THE HANDLE

- Remove upper wing nut and curved head tube bolt from upper handle.
- Loosen lower wing nut on lower handle.
- Insert upper handle over lower handle.

NOTE: Ensure upper handle grips are in position as shown in the following illustrations (throttle handle grip on left side).
Align holes and insert curved head tube bolt

- through upper and lower handles.
- Re-install and securely tighten upper wing nut onto bolt.
- Retighten lower wing nut securely. -Upper handle







3

• Align one cable clamp above the tube bolts and the other below the starter rope handle. Install the cable clamps one at a time around the tube and throttle cable.

NOTE: Ensure throttle cable is in groove of clamps and lies flat against the upper handle tube after installation (see illustration above).

FUEL YOUR UNIT

This engine is certified to operate on unleaded gasoline. Gasoline must be mixed with a good quality 2-cycle air-cooled engine oil designed to be mixed at a ratio of 40:1. Poulan/Weed Eater® brand oil is recom-mended. (A 40:1 ratio is obtained by mixing 3.2 ounces of oil with 1 gallon of unleaded gasoline). When mixing fuel follow the instructions printed on the container. Always read and follow the safety rules under FUÉL SAFETY.





HOW TO STOP YOUR UNIT

Move the stop switch to the STOP or OFF position until the unit has fully stopped.

WARNING: The trimmer head will turn while starting the engine. A hot muffler can cause serious burns.

HOW TO START YOUR UNIT STARTING A COLD ENGINE OR A WARM ENGINE AFTER RUNNING OUT OF FUEL

- Move the switch to the ON position.
- Slowly press the primer bulb 6 times.
 Move choke lever to FULL CHOKE position.
- · Squeeze and hold throttle trigger through all remaining steps..
- Pull starter rope handle sharply 6 times.
- Move the choke lever to HALF CHOKE position.
- Pull the starter rope handle no more than 6 pulls, until engine runs.
- Allow the engine to run 10 seconds, then move choke lever to OFF CHOKE position.

RESTARTING A WARM ENGINE

- · Move choke lever to HALF CHOKE position.
- Pull starter rope handle until engine runs.
- If engine does not start in 5 pulls, follow in-structions in STARTING A COLD ENGINE.





Cut on right side only.

NOTE: Keep left and right hands on grips during operation of unit as shown above to avoid covering air intake holes located on underside of upper handle.

CLEAN THE AIR INTAKE SCREEN

The air intake screen allows air to circulate to keep the engine functioning properly and prevents debris from entering the engine.



WARNING: Stop your unit before attempting to clean the intake screen. DO NOT USE GARDEN HOSE OR PRESSURE WASHER TO CLEAN THIS UNIT!

· Clean the intake screen periodically with a nylon brush.

CLEAN THE AIR FILTER

A dirty air filter decreases engine performance and increases fuel consumption and harmful emissions. Always clean with engine stopped. Clean filter after every 5 hours of operation.

- · Clean the air filter cover and the area around the cover to prevent dirt from falling into the carburetor chamber when the cover is removed.
- · Remove parts as illustrated. It is not necessary to remove the air filter hose from the air filter cover.

NOTE: If the air filter hose becomes unattached from the cover or lower handle during cleaning, reattach before attempting to restart the engine or operate the unit.





NOTE: Do not clean filter in gasoline or other flammable solvent to avoid creating a fire hazard or producing harmful evaporative emissions.

- Wash the filter in soap and water.
- Allow filter to dry.
 Add 10 15 drops of oil to the filter; squeeze the filter to distribute oil.

NOTE: FILTER MUST BE OILED! Replace parts.

REPLACING THE LINE For unit to operate properly, the cutting line

should be replaced when line becomes worn to less than 3 inches in length from the edge of the line exit tunnels on each side of the cutting head.

WARNING: Only replace cutting line with engine switch in the OFF position.

- · Remove and discard worn line before installing new line.
- Use only .115" diameter Poulan/Weed Eat-er® brand cut length line.
- Insert one end of the line through the positioning tunnel.
- Continue to feed line through tunnel until line is centered (leaving equal amounts on each side). See illustration below.



- Insert ends of line one at a time through the line exit tunnels.
- Pull the line and make sure the line is extended fully through the tunnels.



Correctly installed line will be the same length on both ends.

SERVICE

We recommend all service and adjustments not listed in this manual be performed by an Authorized Service Dealer.

CARBURETOR ADJUSTMENTS

Your carburetor is equipped with limiter caps. Carburetor adjustments is a complicated task. We recommend that you take your unit to an Authorized Service Dealer. Damage will occur if you turn the needles beyond the limiter stops.

IGNITION TIMING

The ignition timing is fixed, non-adjustable.

SPARK PLUG

Replace the spark plug yearly using a Cham-pion RCJ-8Y plug. Spark plug gap is 0.025".

TROUBLESHOOTING

- Engine will not start.
- · Switch in OFF position.
- Fuel tank empty.
- ٠ Engine flooded
- Spark plug not firing.
- Fuel not reaching carburetor. •
- Carburetor requires adjustment.
- Engine will not idle properly.
- Carburetor requires adjustment.
- Throttle trigger screw too tight.
- · Air filter dirty.
- Engine will not accelerate, lacks power, or dies under a load.
- Air filter dirty.Spark plug fouled.
- Carburetor requires adjustment.
- Engine smokes excessively.
- Air filter dirty.
- Too much oil mixed with gasoline.
- Carburetor requires adjustment. Wrong type of oil being used.
- Line breaks while cutting.
- Line improperly routed in head.
- Line size incorrect.
- · Cutting line old.

NEED ASSISTANCE?

Need Assistance? Call 1-800-554-6723. Need Service Part? Contact your dealer.



LIMITED WARRANTY

ELECTROLUX HOME PRODUCTS warrants to the original purchaser that each new **Weed Eater** brand gasoline tool or attachment is free from defects in material and workmanship and agrees to repair or replace under this warranty any defective gasoline product or attachment as follows from the original date of purchase.

2 YEARS - Parts and Labor, when used for household purposes.

60 DAYS - Parts and Labor, when used for commercial, professional, or income producing purposes.

30 DAYS - Parts and Labor, if used for rental purposes.

This warranty is not transferable and does not cover damage or liability caused by improper handling, improper maintenance, or the use of accessories and/or attachments not specifically recommended by **ELECTROLUX HOME PRODUCTS** for this tool. Additionally, this warranty does not cover tune-ups, spark plugs, filters, starter ropes, starter springs, cutting line, or rotating head parts that will wear and require replacement with reasonable use during the warranty period. This warranty does not cover predelivery setup or normal adjustments explained in the operator's manual.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

NO CLAIMS FOR CONSEQUENTIAL OR OTHER DAMAGES WILL BE ALLOWED, AND THERE ARE NO OTHER EXPRESS WARRANTIES EXCEPT THOSE EX-PRESSLY STIPULATED HEREIN.

SOME STATES DO NOT ALLOW LIMITA-TIONS ON HOW LONG AN IMPLIED WAR-RANTY LASTS OR THE EXCLUSION OR LIMITATIONS OF INCIDENTAL OR CON-SEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSION MAY NOT APPLY TO YOU.

ELECTROLUX HOME PRODUCTS policy is to continuously improve its products. Therefore, **ELECTROLUX HOME PRODUCTS** reserves the right to change, modify, or discontinue models, designs, specifications, and accessories of all products at any time without notice or obligation to any purchaser.

U.S. EPA / ENVIRONMENT CANADA EMISSION CONTROL WARRANTY STATEMENT

YOUR WARRANTY RIGHTS AND OB-LIGATIONS: The U. S. Environmental Protection Agency/Environment Canada and POULAN/WEED EATER, DIVISION OF WCI OUTDOOR PRODUCTS are pleased to explain the emissions control system warranty on your lawn and garden equipment engine. All new utility and lawn and garden equipment engines must be designed, built, and equipped to meet the stringent anti-smog standards. POULAN/WEED EATER must warrant the emission control system on your lawn and garden equipment engine for the periods of time listed below provided there has been no abuse, neglect, or improper maintenance of your lawn and garden equipment engine. Your emission control system includes parts such as the carburetor and the ignition system. Where a warrantable condition exits, POULAN/WEED EATER will repair your lawn and garden equipment engine at no cost to you. Expenses covered under warranty in-clude diagnosis, parts and labor. MANUFAC-TURER'S WARRANTY COVERAGE: If any emissions related part on your engine (as listed under Emissions Control Warranty Parts List) is defective or a defect in the materials or workmanship of the engine causes the failure of such an emission related part, the part will be repaired or replaced by POULAN, WEED EATER. OWNER'S WARRANT **RESPONSIBILITIES:** As the lawn and garden equipment engine owner, you are re-

sponsible for the performance of the required maintenance listed in your Owner's Manual. POULAN/WEED EATER recommends that you retain all receipts covering maintenance on your lawn and garden equipment engine, but POULAN/WEED EATER cannot deny warranty solely for the lack of receipts or for your failure to ensure the performance of all scheduled maintenance. As the lawn and garden equipment engine owner, you should be aware that POULAN/WEED EATER may deny you warranty coverage if your lawn and garden equipment engine or a part of it has failed due to abuse, neglect, improper mainte-nance, unapproved modifications, or the use of parts not made or approved by the original equipment manufacturer. You are responsi-ble for presenting your lawn and garden equipment engine to a POULAN/WEED EAT-ER authorized repair center as soon as a problem exists. Warranty repairs should be completed in a reasonable amount of time, not to exceed 30 days. If you have any questions regarding your warranty rights and responsibilities, you should contact your near-est authorized service center or call EATER POULAN/WEED WARRANTY COM-**MENCEMENT DATE:** The warranty period begins on the date the lawn and garden equip ment engine is purchased. LENGTH OF COVERAGE: This warranty shall be for a period of two years from the initial date of pur-

6

chase. WHAT IS COVERED: REPAIR OR REPLACEMENT OF PARTS. Repair or replacement of any warranted part will be performed at no charge to the owner at an approved POULAN/WEED EATER servicing center. If you have any questions regarding your warranty rights and responsibilities, you should contact your nearest authorized ser-vice center or call POULAN/WEED EATER at -800-554-6723 WARRANTY PERIOD: Any warranted part which is not scheduled for replacement as required maintenance, or which is scheduled only for regular inspection to the effect of "repair or replace as necessary" shall be warranted for 2 years. Any warranted part which is scheduled for replacement as required maintenance shall be warranted for the period of time up to the first Scheduled replacement point for that part. **DIAGNOSIS:** The owner shall not be charged for diagnostic labor which leads to the determination that a warranted part is de-fective if the diagnostic work is performed at an approved POULAN/ TER serv-AGES: POULAN/WEED EATER may be li-able for damages to other engine components caused by the failure of a war-ranted part still under warranty. WHAT IS NOT COVERED: All failures caused by

abuse, neglect, or improper maintenance are not covered. ADD-ON OR MODIFIED PARTS: The use of add-on or modified parts can be grounds for disallowing a warranty claim. POULAN/WEED EATER is not liable to cover failures of warranted parts caused by the use of add-on or modified parts. HOW TO FILE A CLAIM: If you have any questions regarding your warranty rights and responsibilities, you should contact your nearest authorized ser-vice center or call POULAN/WEED EATER at 1-800-554-6723 . WHERE TO GET WAR-RANTY SERVICE: Warranty services or repairs shall be provided at all POULAN/WEED EATER service centers. call: 1-800-554-6723 MAINTENANCE, REPLACEMENT AND RE-PAIR OF EMISSION RELATED PARTS: Any POULAN/WEED EATER approved replacement part used in the performance of any warranty maintenance or repair on emission related parts will be provided without charge to The owner if the part is under warranty. EMIS-SION CONTROL WARRANTY PARTS LIST: Carburetor, Ignition System: Spark Plug (covered up to maintenance schedule), Ignition Module. MAINTENANCE STATE-MENT: The owner is responsible for the per-formance of all required maintenance and formance of all required maintenance as defined in the owner's manual.

The information on the product label indicates which standard your engine is certified. Example: (Year) EPA Phase 1 or Phase 2 and/or CALIFORNIA.



7