


**ROTARY LAWN MOWER -- MODEL NUMBER PR4N22SHB (386181)**

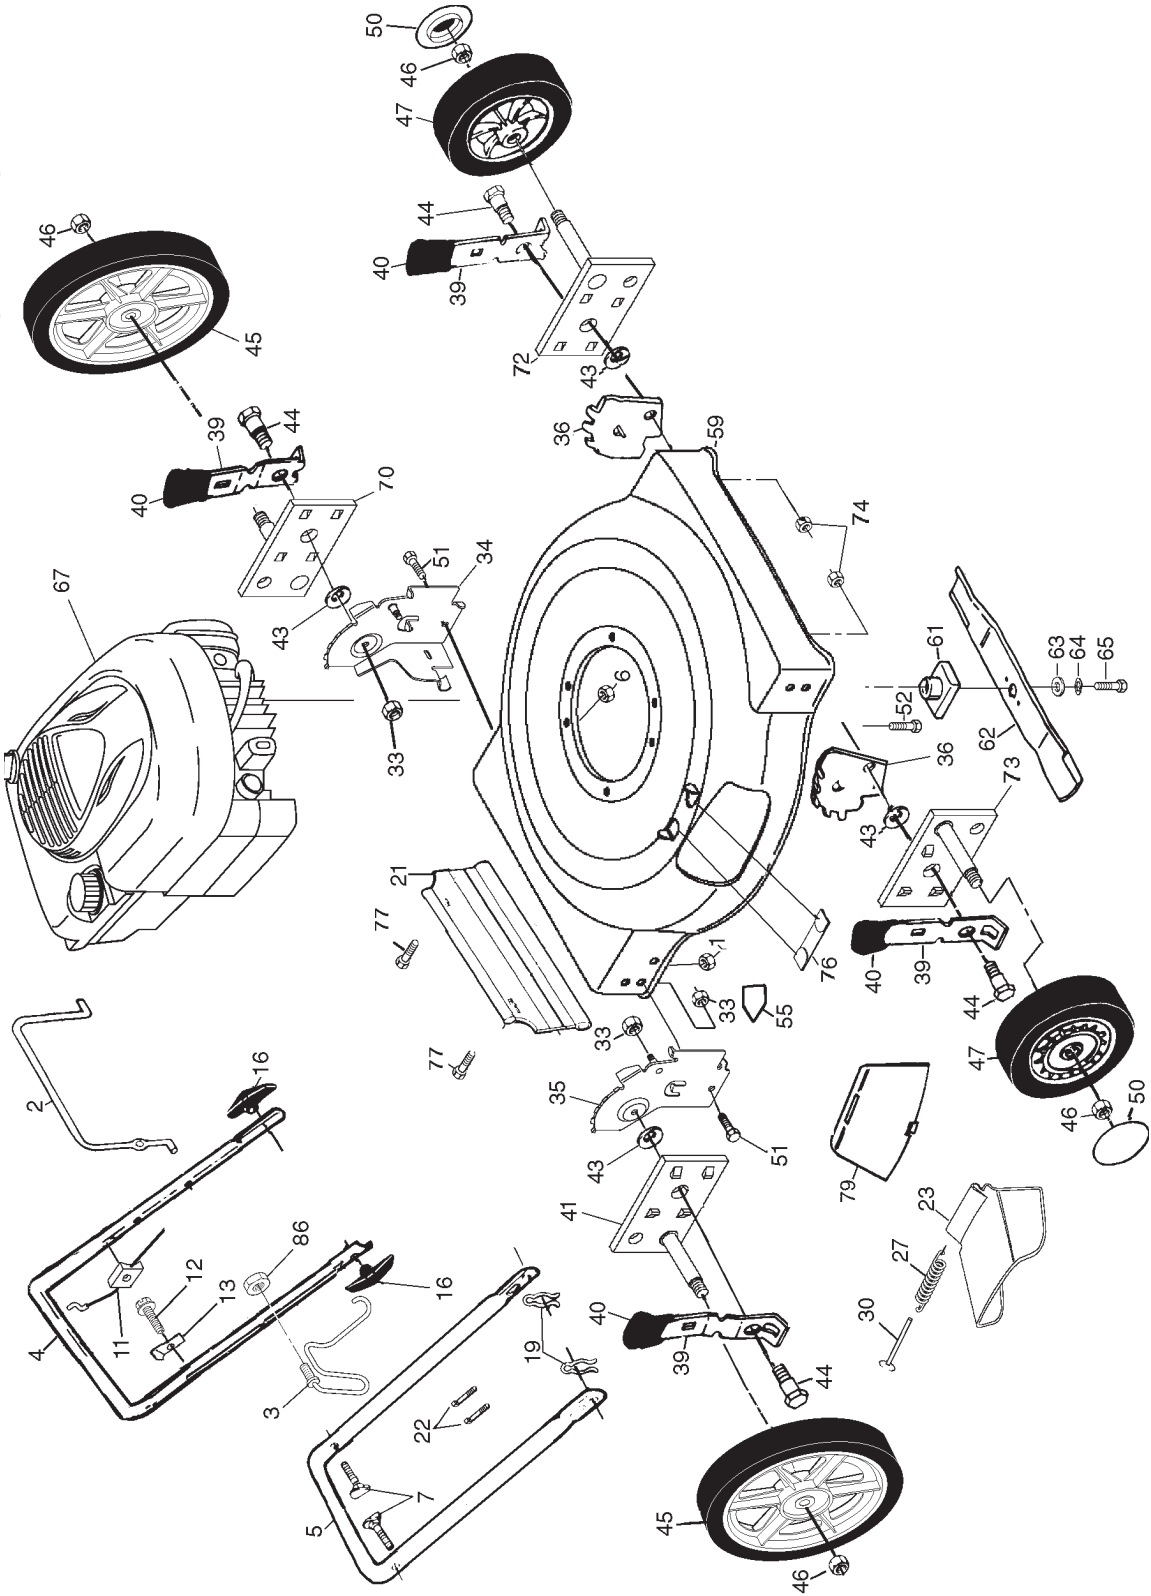

**ROTARY LAWN MOWER - - MODEL NUMBER PR4N22SHB (386181)**

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	73800400	Locknut 1/4-20	47	157178	Wheel Assembly (Front)
2	181456	Control Bar	50	180660	Hubcap
3	186079	Rope Guide / Anti-Fold Bracket	51	74760514	Hex Head Bolt 5/16-18
4	169709X479	Upper Handle	52	150406	Hex Head Thread Rolling Screw 3/8-16 x 1
5	169708X479	Lower Handle	55	107339X	Danger Decal
7	131959	Handle Bolt 5/16-18	59	165187	Lawn Mower Housing (Incl. Key No. 55)
11	176556	Engine Zone Control Cable	61	851514	Blade Adapter
12	750634	Hex Washer Head Screw #10-24 x 1/2	62	141114	22" Blade
13	86899X004	Up-Stop Bracket	63	851074	Hardened Washer
16	170146	Handle Knob	64	850263	Helical Lockwasher 3/8
19	51793	Hairpin Cotter	65	851084	Screw Hex Head 3/8-24 x 1-3/8 (Grd. 8)
21	165858	Rear Deflector	67	---	Engine, Briggs & Stratton Model 127802 (Order parts from engine manufacturer)
22	66426	Wire Tie	70	180409X004	Axle Arm Assembly (LR)
23	160831	Discharge Guard	72	167132X004	Axle Arm Assembly (LF)
27	160832	Torsion Spring	73	167133X004	Axle Arm Assembly (RF)
30	160833	Hinge Rod	74	166785	Nut
33	73800500	Locknut 5/16-18	76	161622	Clip, Closeout
34	170373X479	Wheel Bracket Support (Left)	77	74760412	Screw
35	170374X479	Wheel Bracket Support (Right)	79	160830	Mulch Plate
36	160835X007	Wheel Bracket Adjuster	86	132004	Nut, Hex
39	168360X004	Selector Spring	--	162300	Warning Decal (Not Shown)
40	170143	Selector Knob	--	172782	Operator's Manual (English)
41	180410X004	Axle Arm Assembly (RR)	--	172783	Operator's Manual (French)
43	183901	Washer	--	185315	Replacement Parts Manual
44	160828	Shoulder Bolt			
45	181383	Wheel Assembly (Rear)			
46	83923	Locknut 1/16-18			

**NOTE:** All component dimensions given in U.S. inches.  
1 inch = 25.4 mm