



VIEW 1 OF 3

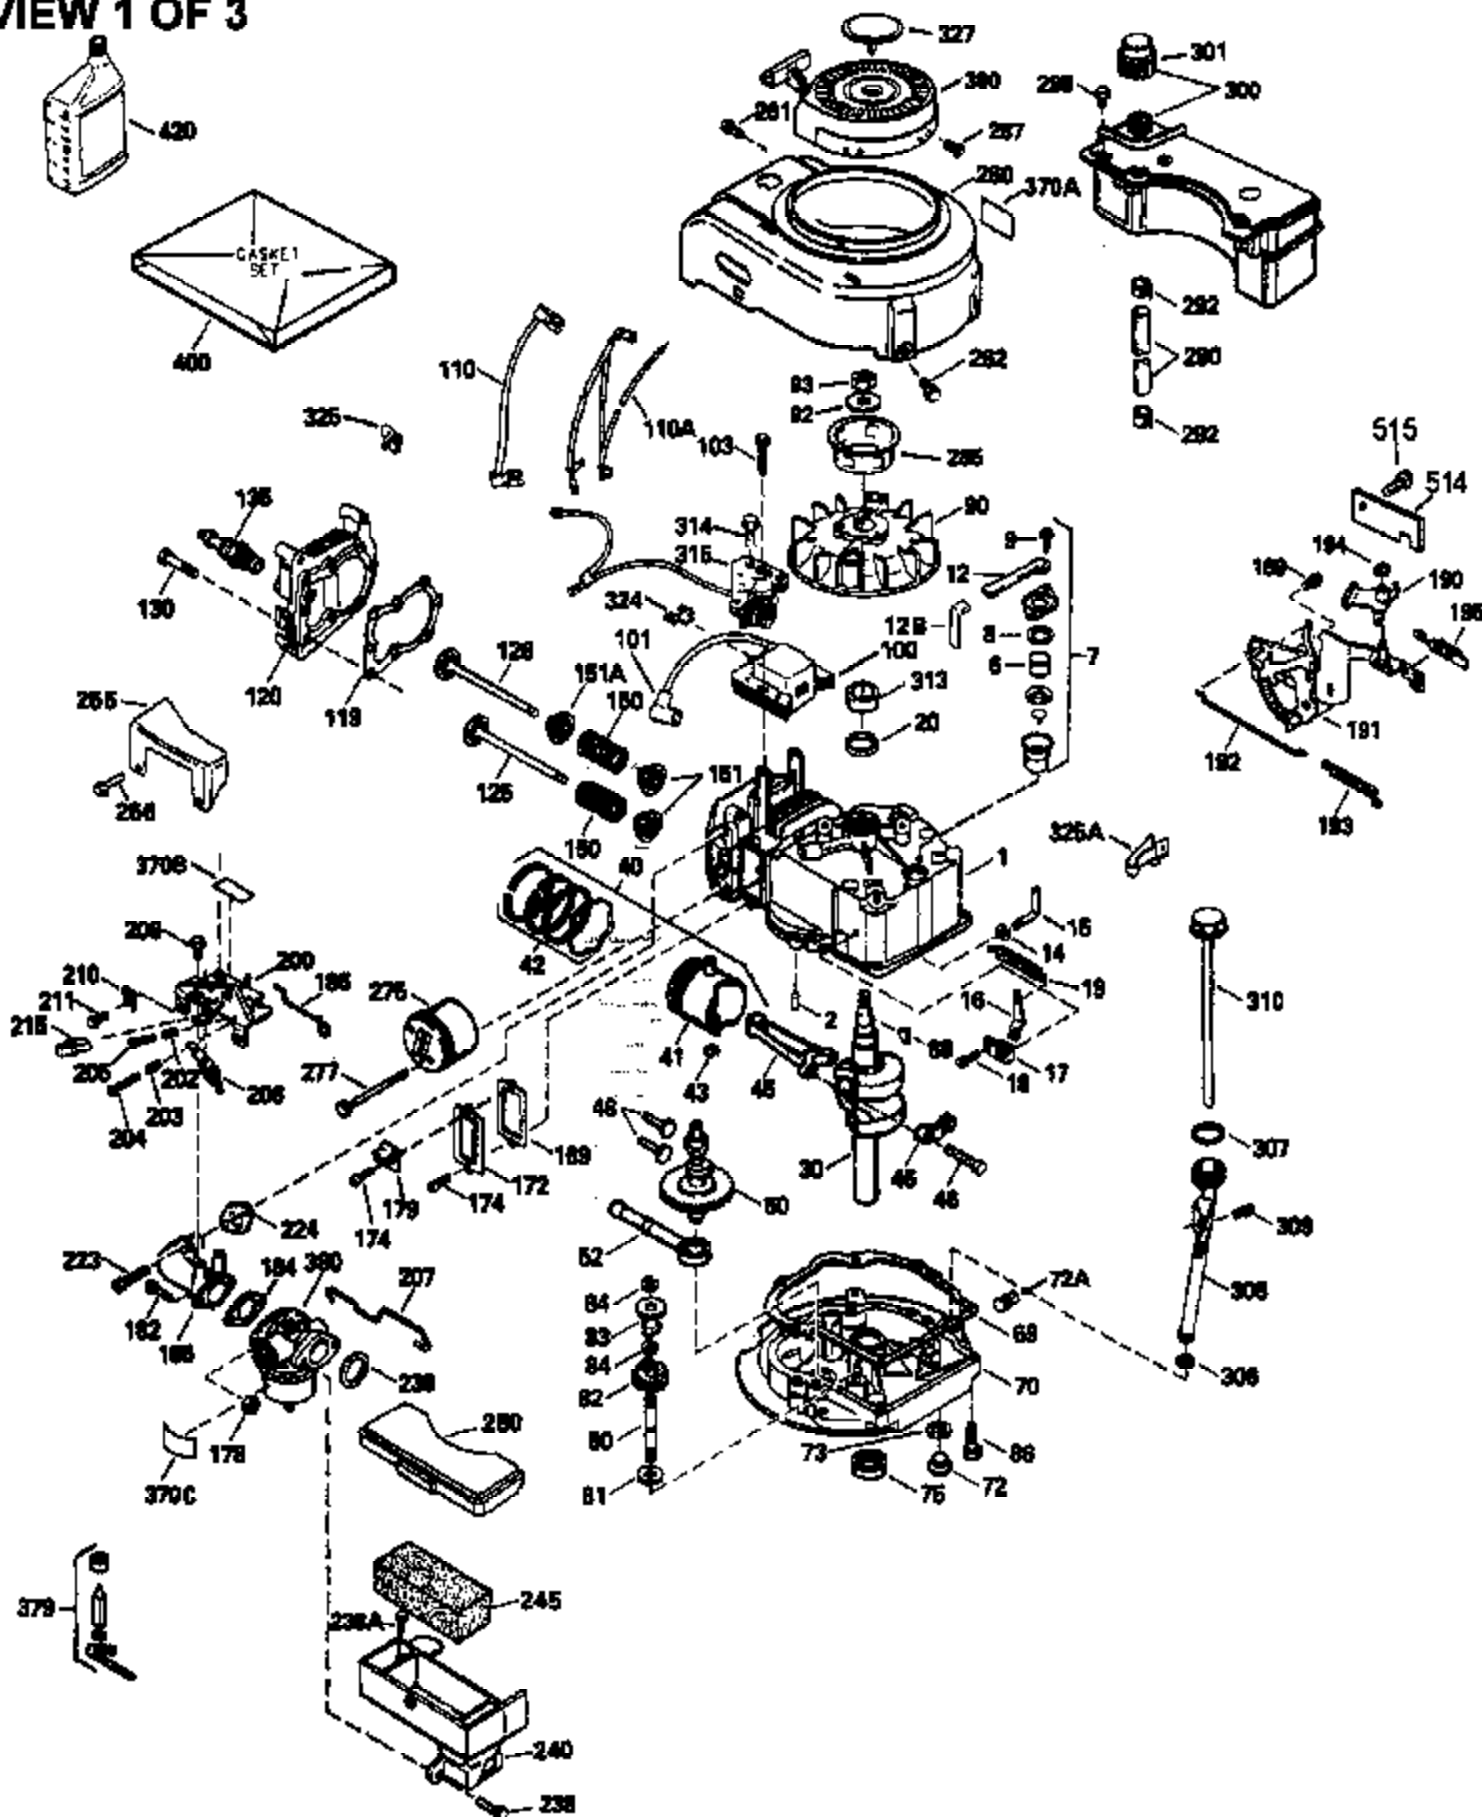

Ref #	Part Number	Qty	Description
1	35513		Cylinder Ass'y. (Incl. 2, & 20)
2	26727		Dowel Pin
6	33734		Breather Element
7	34214A		Breather Ass'y. (Incl. 6, 8 & 9)
8	32760A		* Breather Gasket
9	30200		Screw, 10-24 x 9/16"
12	35496		Breather Tube
14	28277		Washer
15	30589		Governor Rod (Incl. 14)
16	31383A		Governor Lever
17	31335		Governor Lever Clamp
18	650548		Screw, 8-32 x 5/16"
19	31361		Extension Spring
20	32600		Oil Seal
30	35173		Crankshaft
40	35544		Piston, Pin & Ring Set (Std.)
40	35545		Piston, Pin & Ring Set (.010 OS)
40	35546		Piston, Pin & Ring Set (.020 OS)
41	35541		Piston & Pin Ass'y. (Std.) (Incl. 43)
41	35542		Piston & Pin Ass'y. (.010 OS) (Incl. 43)
41	35543		Piston & Pin Ass'y. (.020 OS) (Incl. 43)
42	35547		Ring Set (Std.)
42	35548		Ring Set (.010 OS)
42	35549		Ring Set (.020 OS)
43	20381		Piston Pin Retaining Ring
45	30963B		Connecting Rod (Incl. 46)
46	32610A		Connecting Rod Bolt
48	27241		Valve Lifter
50	33553		Camshaft (Mech. Compression Release)
52	29914		Oil Pump Ass'y.
69	35261		* Mounting Flange Gasket
70	35179A		Mounting Flange (Incl. 72 thru 80)
72	30572		Oil Drain Plug (Incl. 73)
73	28833		* Oil Plug Gasket
75	27897		Oil Seal
80	30574		Governor Shaft
81	30590A		Washer
82	30591		Governor Gear Ass'y. (Incl. 81)
83	30588A		Governor Spool
84	29193		Retaining Ring
86	650488		Screw, 1/4-20 x 1-1/4"
89	610961		Flywheel Key
90	611123		Flywheel
92	650815		Belleville Washer
93	650816		Flywheel Nut
100	34443A		Solid State Ignition
101	610118		Spark Plug Cover
103	650814		Screw, Torx T-15, 10-24 x 1"
110	35518		Ground Wire
119	33015A		* Cylinder Head Gasket
120	34342		Cylinder Head
125	29314B		Intake Valve (Std.) (Incl. 151)
125	29315C		Intake Valve (1/32" OS) (Incl. 151)
126	29313C		Exhaust Valve (Std.) (Incl. 151)
126	29315C		Exhaust Valve (1/32" OS) (Incl. 151)
130	6021A		Screw, 5/16-18 x 1-1/2"
135	35395		Resistor Spark Plug (RJ19LM)
150	31672		Valve Spring


Ref #	Part Number	Qty	Description
151	31673		Lower Valve Spring Cap
169	27234A		* Valve Spring Cover Gasket
172	32755		Valve Spring Box Cover
174	650128		Screw, 10-24 x 1/2"
178	29752		Nut, 1/4-28
182	6201		Screw, 1/4-28 x 7/8"
184	26756		* Carburetor Gasket
186	34337		Governor Link
200	33205A		Control Bracket (Incl. 202 thru 206)
202	33802		Compression Spring
203	31342		Compression Spring
204	650549		Screw, 5-40 x 7/16"
205	650777		Screw, 6-32 x 21/32"
206	610973		Terminal
207	34336		Throttle Link
209	30200		Screw, 10-24 x 9/16"
215	35511		Control Knob
223	650451		Screw, 1/4-20 x 1"
224	34690A		* Intake Pipe Gasket
245F	35500		Air Cleaner Filter (Paper)
246F	35705		Air Cleaner Filter (Poly)
247C	35505		Air Cleaner Tube Clamp
250E	35531		Air Cleaner Cover
260B	35497		Blower Housing
261	30200		Screw, 10-24 x 9/16"
262	650831		Screw, 1/4-20 x 15/32"
277	650795		Screw, 1/4-20 x 2-1/4"
285	35000		Starter Cup
287B	650884		Screw, 8-32 x 1/2"
290	30705		Fuel Line
292	26460		Fuel Line Clamp
300C	35631		Fuel Tank (Incl. 299 & 301A)
305	35498		Oil Fill Tube
306	34265		Fill Tube Gasket
307	35499		"O" Ring
309	650562		Screw, 10-32 x 1/2"
310	35611		Dipstick
313	34080		Flywheel Key Spacer
380	632468		Carburetor (Incl. 184)
390B	590637		Rewind Starter
400	33238D		Gasket Set (Incl. items marked *)

VIEW 2 OF 3

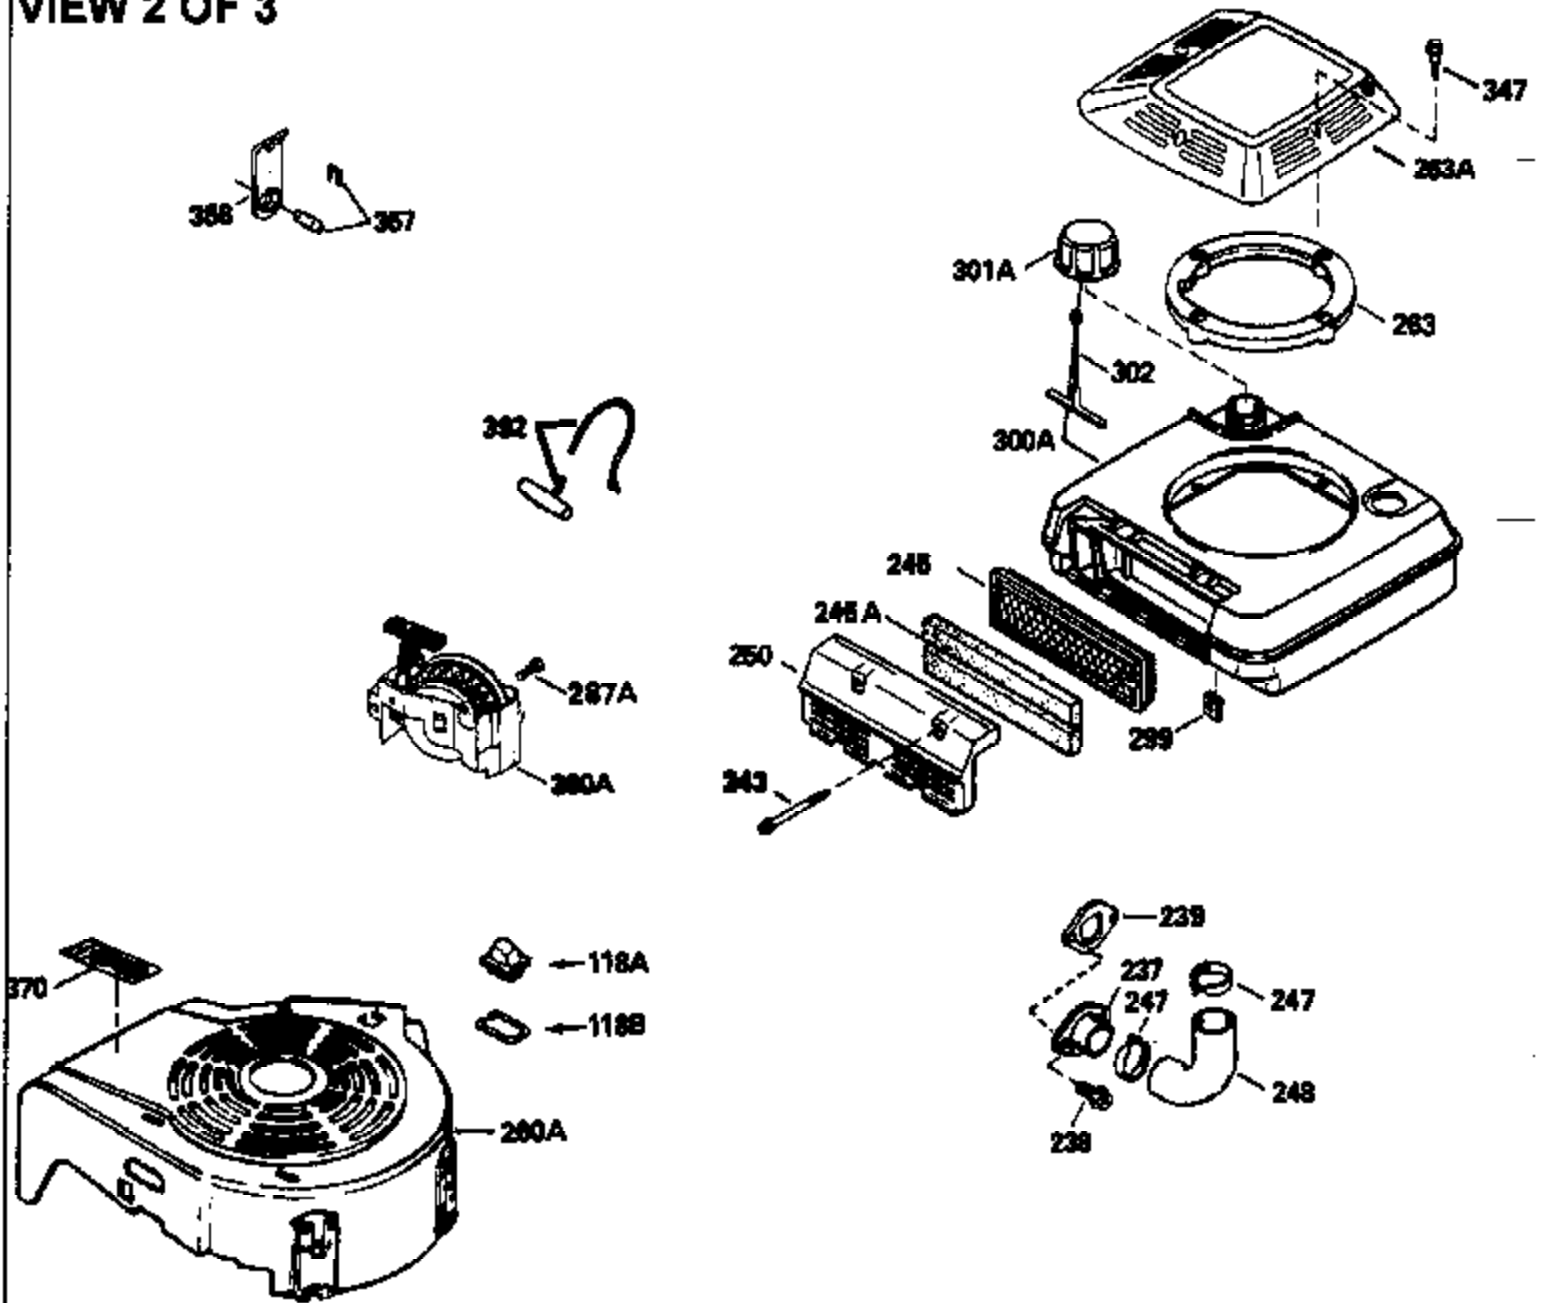

Engine Parts List #2

Ref #	Part Number	Qty	Description
245F	35500		Air Cleaner Filter (Paper)
246F	35705		Air Cleaner Filter (Poly)
247C	35505		Air Cleaner Tube Clamp
248	35504		Air Cleaner Tube
250E	35531		Air Cleaner Cover
260B	35497		Blower Housing
263A	35510		Shroud Grill
287B	650884		Screw, 8-32 x 1/2"
299	650900		"U" Type Nut Clip
300C	35631		Fuel Tank (Incl. 299 & 301A)
301A	35355		Fuel Cap
302	35480		Fuel Cap Retainer
347	650898		Screw, 10-32 x 27/32"
357	34985		Starter Rope Retainer
358	35168		Rope Guide Bracket
390B	590637		Rewind Starter

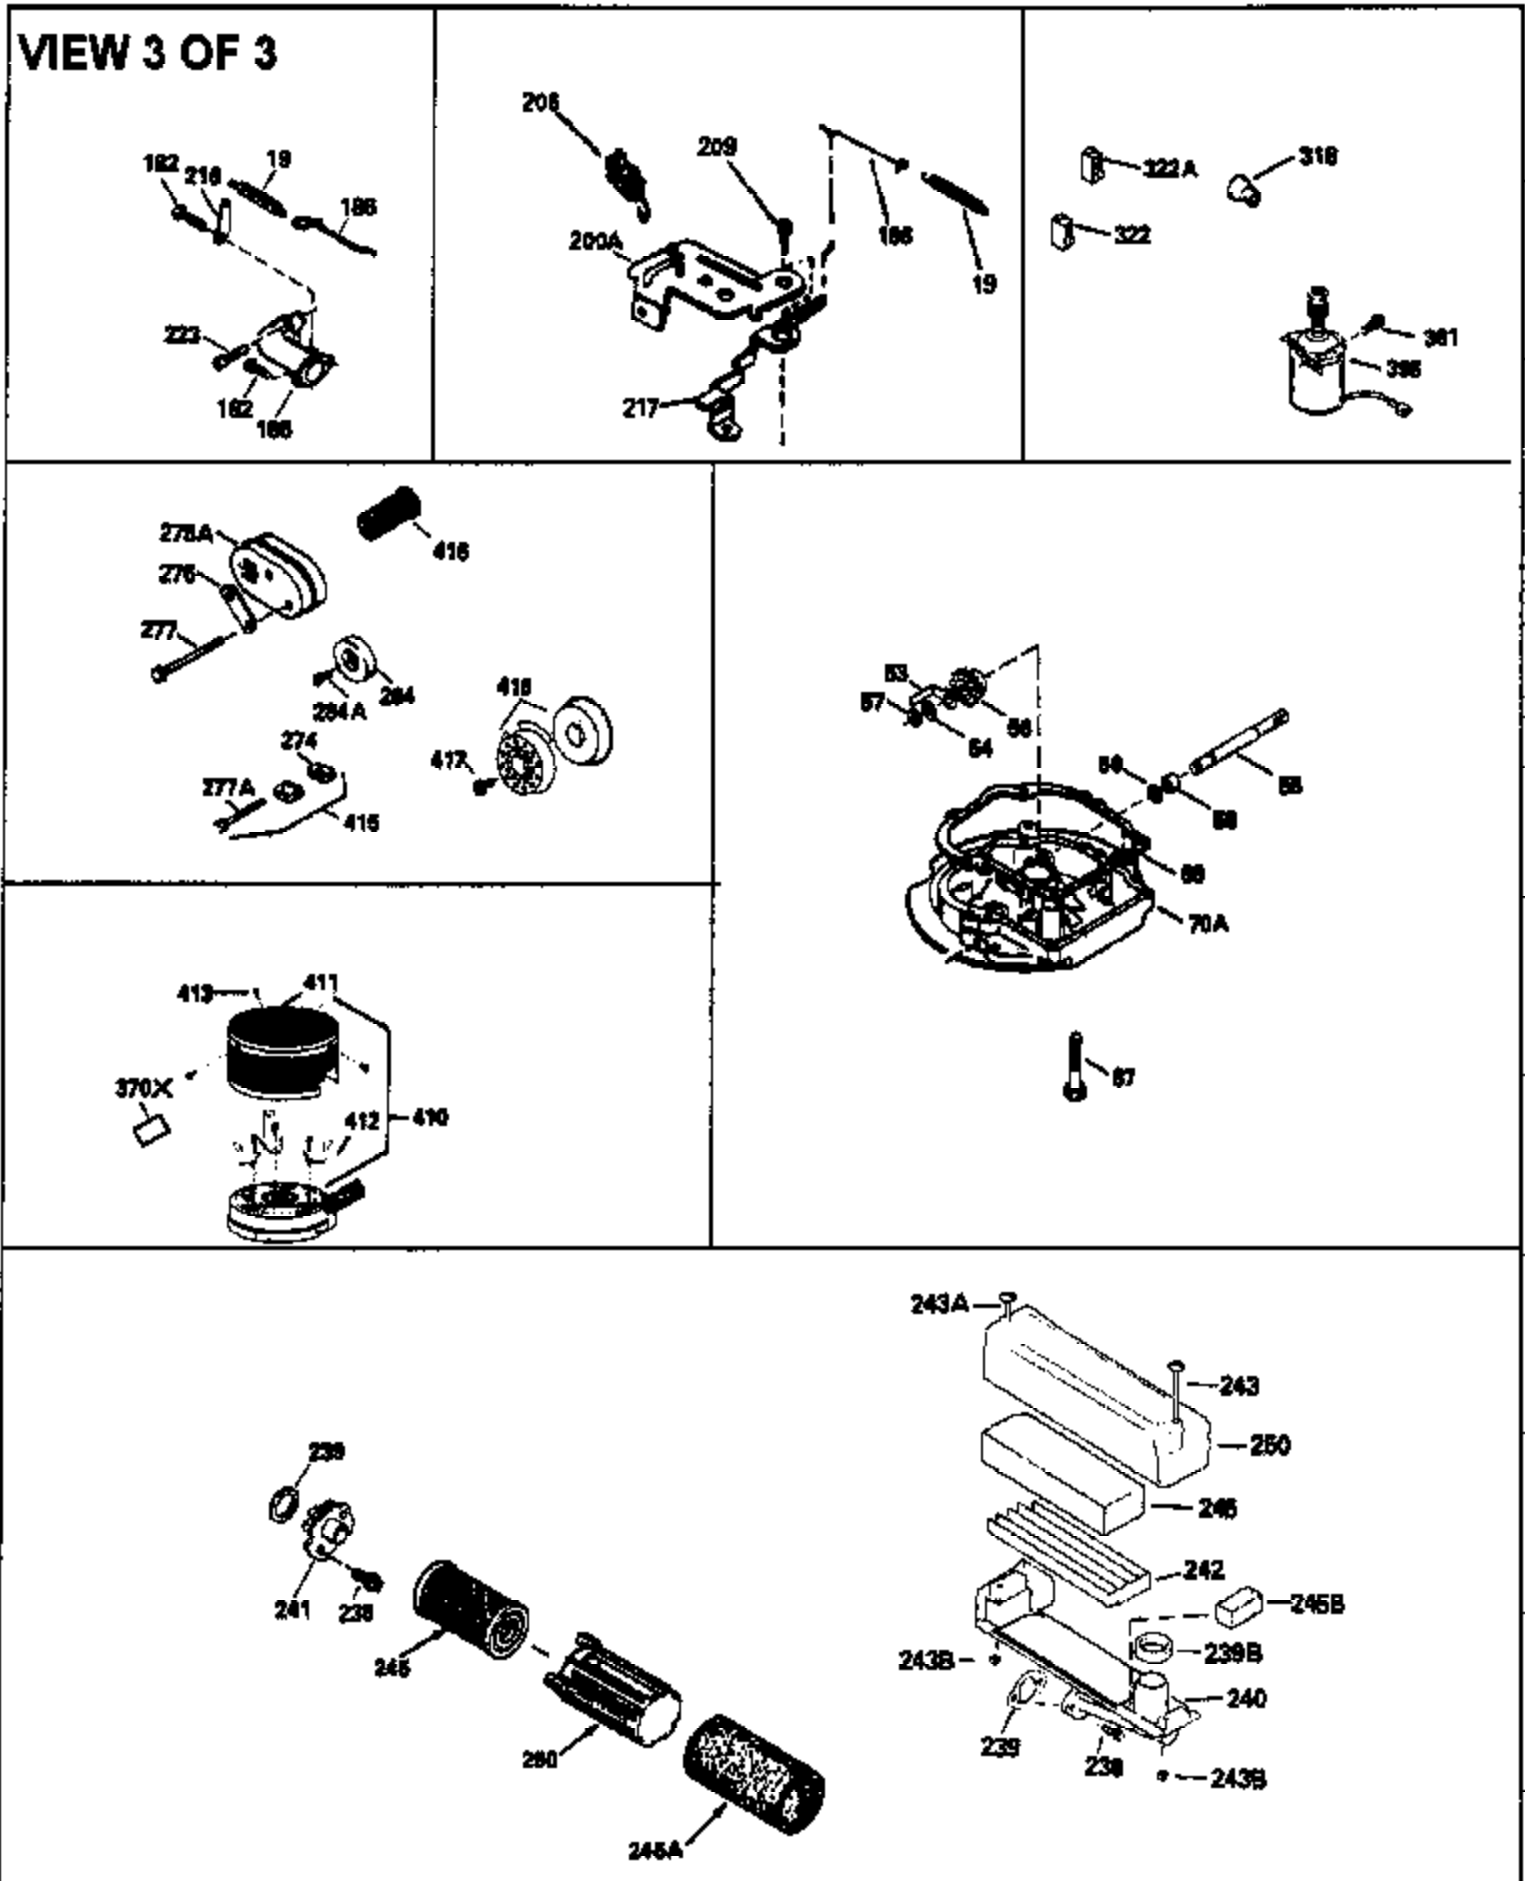

Ref #	Part Number	Qty	Description
19	31361		Extension Spring
69	35261		* Mounting Flange Gasket
182	6201		Screw, 1/4-28 x 7/8"
185	31384A		Intake Pipe (Incl. 224)
186	34337		Governor Link
206	610973		Terminal
209	30200		Screw, 10-24 x 9/16"
223	650451		Screw, 1/4-20 x 1"
243A	650899		Screw, 10-32 x 2-3/32"
245F	35500		Air Cleaner Filter (Paper)
246F	35705		Air Cleaner Filter (Poly)
247C	35505		Air Cleaner Tube Clamp
250E	35531		Air Cleaner Cover
260B	35497		Blower Housing
275A	34613		Muffler
276	33753		Locking Plate
277	650795		Screw, 1/4-20 x 2-1/4"
287B	650884		Screw, 8-32 x 1/2"
300C	35631		Fuel Tank (Incl. 299 & 301A)
322	611119		Connector Body
390B	590637		Rewind Starter