
For Discount Tecumseh Engine Parts Call 606-678-9623 or 606-561-4983 H60-75433P Page 1 of 5 Engine Parts List

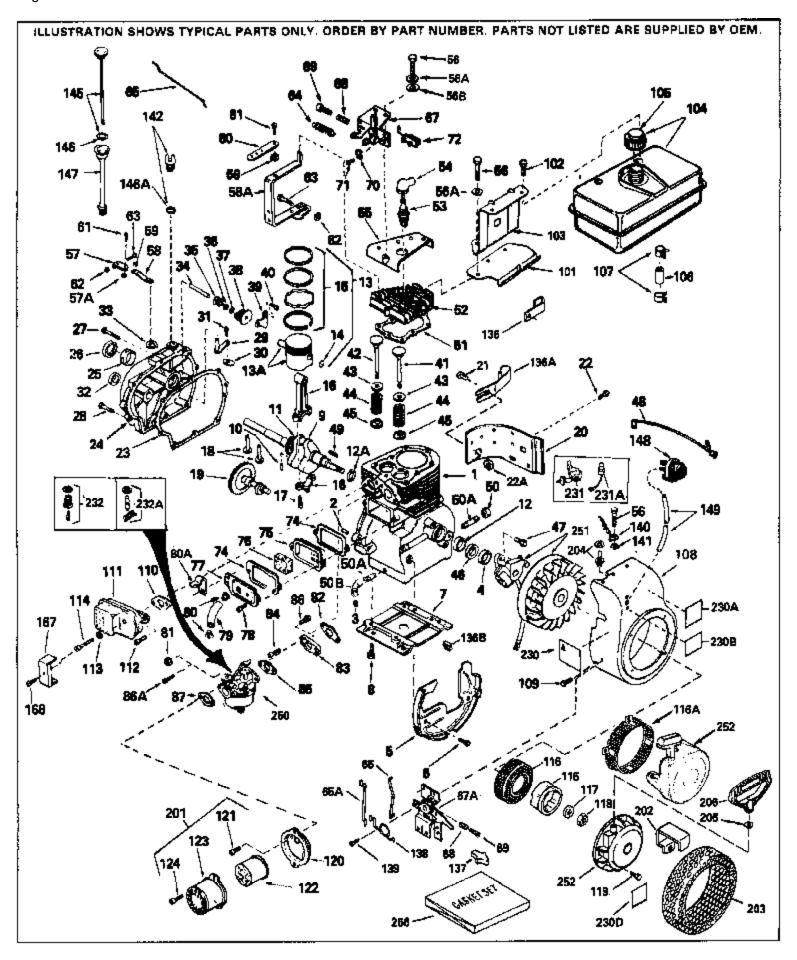

Ref #	Part Number (	Qty	Description
1	33311B		Cylinder (Incl. 2, 3, 4 & 41)(2-5/8" Bore)
	27652		Pin, Dowel
	27642		Pipe plug, 1/4-18
	27876B		Seal, Oil
	29536		Blower Housing Baffle (Without electric starter knock out)
0	20000		(Use as required)
5	35256A		Blower Housing Baffle (With electric starter knockout) (As req.)(point ign.)
6	650561		Screw, 1/4-20 x 5/8"
	29538		Base, Engine mounting
	650542		Screw, 5/16-18 x 3/4"
	30799		Crankshaft
	29783		Pin, Crankshaft gear (Used on early p rod.)
	27884		Gear, Crankshaft (Used on early production) This gear is
	21004		serviceable ONLY when it is pinned to the crankshaft.
	34531		Piston, Pin & Ring Set (Std.) (2-5/8" Bore)
	34532		Piston, Pin & Ring Set (.010" OS)
	34533		Piston, Pin & Ring Set (.020" OS)
	33312B		Piston & Pin Ass'y. (Std.)(2-5/8")(In cl.14)
	33313B		Piston & Pin Ass'y. (.010" OS) (Incl. 14)
	33314B		Piston & Pin Ass'y. (.020" OS) (Incl. 14)
	27888		Ring, Piston pin retaining
	34854		Ring Set (Std.) (2-5/8" Bore)
15	34855		Ring Set (.010" OS)
15	34856		Ring Set (.020" OS)
16	31380C		Rod Assy., Connecting (Incl. 17)
17	650662C		Bolt, Connecting rod (Incl. 2 pieces)
18	34034		Lifter, Valve
19	33156		Camshaft
20	30622A		Extension, Blower housing
21	650128		Screw, 10-24 x 1/2"
22	650561		Screw, 1/4-20 x 5/8" (Use as required )
22	30063		Screw, 1/4-20 x 1/2" (Use as required )
	30684		Gasket Cylinder Cover
	31303B		Cover, Cylinder (Incl. 26 & 34)
	31546		Bushing, Crankshaft
	28427		Seal, Oil
	650488		Screw, 1/4-20 x 1-1/4"
	650493		Screw, 1/4-20 x 1-3/4"
	30699C		Rod Assy., Governor (Incl. 30 & 31)
	30700		Yoke, Governor
	650494		Screw, 6-40 x 5/16"
	29642		Ring, Retaining
	31845		Shaft, Mechanical governor
	30588A		Spool, Governor
	35479		Washer, Flat
	29193		Ring, Retaining
	30591		Gear Assy., Governor
	31843A		Bracket, Governor gear
	650836		Screw, 10-24 x 1/2"
	32783		Intake Valve (Std.)
	32784		Intake Valve (1/32" OS)
	27878A		Exhaust Valve (Std.)
	27880A		Exhaust Valve (1/32" OS)
	27882		Cap, Upper valve spring
44	27881		Spring, valve

Ref #	Part Number	Qty	Description
45	32581		Cap, Lower valve spring
46	33876		Gasket, Stator
47	650489		Screw, 1/4-20 x 5/8"
48	34240		Ground Wire
49	30884		Key, Flywheel
	28938C		Gasket, Cylinder head
	30938A		Head, Cylinder
	33636		Resistor Spark Plug (RJ-8C)
	610118		Cover, Spark plug (Use as required)
	30939A		Cover Assy., Cylinder head
	650697A		Screw, 5/16-18 x 2-1/2" (Use as required)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	650695A		· · · ·
			Screw, 5/16-18 x 2-1/4" (Use as required)
	650690		Washer, Belleville (Use as required)
	650691		Washer, Flat (Use as required)
	29916		Clamp, Governor lever (Use as require d)
	30322		Locknut, 8-32
	33454		Lever Assy., Governor
	29918		Washer, Lock, No. 8 E.T.
	650548		Screw, 8-32 x 5/16"
	29216		Locknut, 10-32
	29826		Screw, 10-32 x 3/4"
	34662		Link, Throttle
	34661		Link, Governor
	34664		Control Bracket (Incl. 68, 69, 72 & 1 38)
68	31342		Spring, Compression
	650549		Screw, 5-40 x 7/16"
70	27793		Clip, Conduit
71	28942		Screw, 10-32 x 3/8"
72	610973		Terminal Assy. (Use as required)
74	27896A		Gasket, Valve chamber cover
75	28423		Breather Assy., Valve
76	28424		Element, Breather
77	28425		Cover, Valve spring box
78	650128		Screw, 10-24 x 1/2"
79	35350		Tube Breather
82	27915A		* Gasket, Intake pipe to cylinder
83	34712		Flange, Carburetor (Incl. 86A)
84	30196		Screw, 5/16-18 x 3/4"
85	31688A		* Gasket, Carburetor
86A	650517		Screw, 1/4-20 x 13/16"
87	27272A		* Air Cleaner Gasket (Use as required)
87	30767		Spacer, Cleaner (Use as required)
	34819		Elbow Assy., Air cleaner (Incl. 90,91,92,93,94,96) (Use in
			730561 assembly only)
101	24450		
	34158		Bracket, Fuel tank
	650665		Screw, 1/4-14 x 7/8"
	34159		Plate, Fuel tank mounting
104	34186A		Fuel Tank (Incl. 105 & 107) NOTE: These tanks were built
			with different size fuel inlet openings. Tanks with the 1-3/16"
			I.D. opening use fuel cap 33032 or 34210. Tanks with the
			1-1/2" I.D. opening use fuel cap 35355.
105	410144B		Fuel Cap (White Plastic)(Std.)(As req uired)
	33032		Fuel Cap (Red Plastic) (Spurt resistant, Low profile) (Use as
100			required)
			·

Ref #	Part Number Qty	Description
	34210	Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as required)
105	35355	Fuel Cap (Red plastic) (Use as requir ed)
	29774	Fuel Line (Braided, 8 1/4") (Use as r equired)
	30962	Fuel Line (Braided, 32") (Use as required)
	26460	Clamp, Fuel line (Use as required)
	32158E	Blower Housing (For electric starter)
	29747B	Screw, 5/16-24 x 21/32"
	27930A	* Gasket, Exhaust flange
	391026	Opt.Spark Arrest Muf.(Incl.143,143A,1 43B)
	33714	Opt.Spark Arrest Muf.(Incl.112,143,14 4,144A)
	34390	Deflector, Exhaust (Optional)
	32401	Muffler
	30196	Screw, 5/16-18 x 3/4"
	26073	Washer, Flat
	650694A	Screw, 5/16 - 18 x 2"
	32125	Cup, Starter
	590417	Screen, Starter cup
117	650815	Washer, Belleville
118	8116	Nut, Hex
119	29716	Screw, 1/4-28 x 7/16"
137	35438	Knob, Speed control
138	34663	Spring, Speed control
139	650821	Screw, 10-32 x 1/2"
143B	33185	Cover & tube, Muffler (Use as require d)
143A	33171	Screen, Muffler (Use as required)
143	650578	Screw, 8-18 x 3/8" (Use as required)
144	33700	Cover & Tube, Muffler (Use as require d)
144A	33323	Screen, Muffler (Use as required)
145	34011A	Dipstick (Incl. 146)
146	33590	"O" Ring
147	33893A	Oil Fill Tube
	570629A	Primer Assy.
	32180C	Line, Primer
	34672	Cover, Carburetor
	650764	Nut, "U" Clip
	650760	Screw, 8-32 x 3/8"
	34126	Bracket, Grommet mounting
	650257	Screw, 8-32 x 5/16"
	650765	Screw, 10-32 x 1/2"
	28820	Screw, 10-32 x 1/2"
	32398	Bracket, Choke
	650760 285 45	Screw, 8-32 x 3/8"
	28545	Grommet, Plastic
	34127 32576	Guard, Starter
		Seal, Snow Guard
	730130 730561	Muffler Adapter Kit (Incl.110,112)(As req.) Air Cleaner Kit
2016	10001	
		(Incl.74,79,80,87,88,89,90,91,92,94,95,96,97,99,100 & 230C)
		(Used only on engine with an externally vented fully adjustable carburetor)
201	730164	Air Cleaner Ass'y. (Red Poly)(Incl.87,120,121,122,123,124 & 230)(As req.)
201	730164	Air Cleaner Kit, Mini bike (Incl.87,120,121,122,123 & 124) (Use as required)
230F	34414	Decal, Warning
www.mymowerparts.com		

	Part Number	Qty	Description
	34346		Decal, Instruction
	34416		Decal, Instruction
	550223		Decal, Name
	34144		Decal, Primer
	30547A		Breaker Assy (Used on Std. Point igni tion)
	30548B		Condenser
	631021		Inlet, Needle Seat & Clip Assy.
	611077		Alternator (Optional)
	650868		Screw, 8-18 x 1-1/8" (3 required)(Opt .)
	611078		Connector, A.C. Lighting (Optional)
	611079		Connector, D.C. Charging (Optional)
	590610		Tube, Centering (Optional)
	590613		Alternator Shaft (Optional)
200	631927		Carburetor (Incl. 85) (Refer to Division 5, Section A, Page 140 for breakdown)
			,
251	610689A		Magneto NOTE: The complete magneto is not available as
			an assembly. The magneto number is shown for reference
			purposes only. Order component parts individually, as
			shown in parts list. (Refer to Division 5, Section B, page 24 for breakdown)
			IOI DIEdikuowii)
252	590473		Rewind Starter (Refer to Division 5, Section C, page 29 for
			breakdown)
254	33328D		Starter Motor Kit (110-120 volt) This 110-120 volt starter
			motor kit may have been added to this engine. It can be
			added only if cylinder hasdrilled and tapped starter mounting
			bosses and a ring gear flywheel (see#255). Refer to service
			number stamped on end cap of motor or on decal for
			identificat
955	30811A		Flywheel (Ring gear flywheel requiredon engines using
200	30011A		110-120 volt starter motor kits listed above) (Used on Std.
			point ignition before 1982)
255	611042		Flywheel (Ring gear flywheel requiredon engines using
			110-120 volt starter motor kits listed above) (Used on Std.
			point ignition 1982 or later)
255	611085		Flywheel (Minimum ring gear flywheel required on engines
	-		using 110-120 volt starter motor kits listed above) (Used on
			solid state external ignition)
056	22225 4		•
200	33235A		Gasket Set (Incl. items marked*)