
For Discount Tecumseh Engine Parts Call 606-678-9623 or 606-561-4983 HH50-95054H Page 1 of 5 Engine Parts List

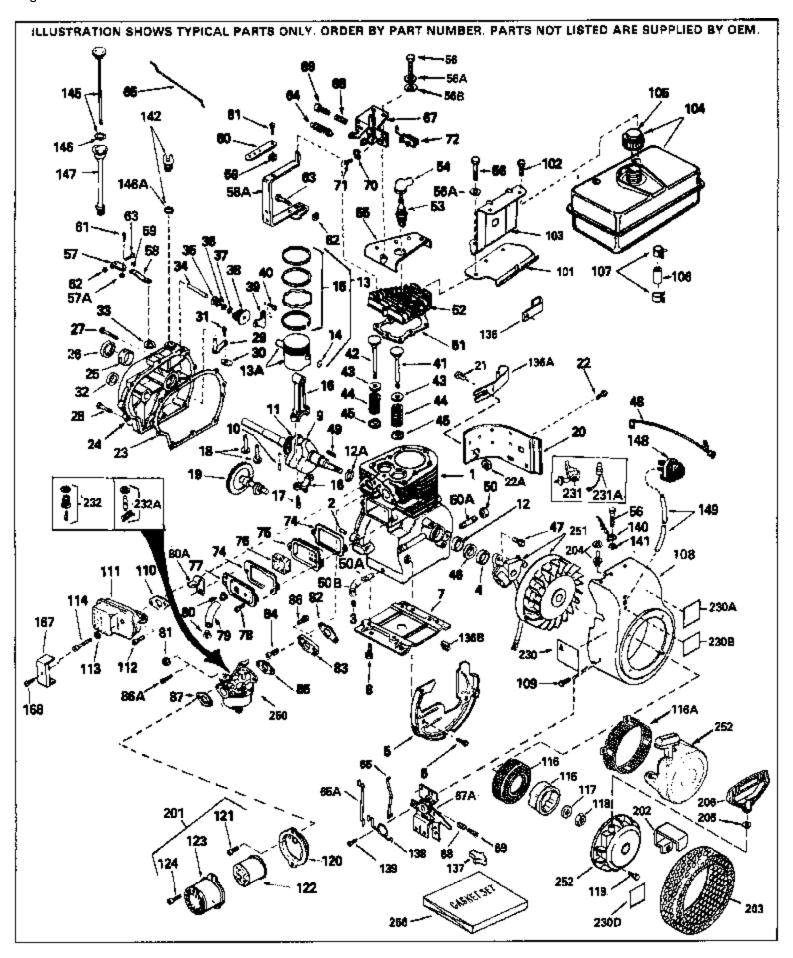

Ref #	Part Number Qt	y Description
1	34915A	Cylinder (Incl. 2, 3 & 4) (2-5/8" Bor e)
	27652	Pin, Dowel
	27642	Pipe plug, 1/4-18
	32630	Seal, Oil
5	29536	Blower Housing Baffle (Without electric starter knock out)
		(Use as required)
5	35256A	Blower Housing Baffle (With electric starter knockout) (As
		req.)(point ign.)
_		
	650561	Screw, 1/4-20 x 5/8"
	29538	Base, Engine mounting
8	650542	Screw, 5/16-18 x 3/4"
9	35093	Crankshaft
10	29783	Pin, Crankshaft gear (Used on early p rod.)
11	27884	Gear, Crankshaft (Used on early produ ction) This gear is
		serviceable ONLY when it is pinned to the crankshaft.
	650625	Washer Thrust
	31461	Bushing, Crankshaft
13A	31797B	Piston & Pin Ass'y. (Std.)(2-5/8')(In cl.14)
13A	31798B	Piston & Pin Ass'y. (.010" OS) (Incl. 14)
13A	31799B	Piston & Pin Ass'y. (.020" OS) (Incl. 14)
13	34503	Piston, Pin & Ring Set (Std.) (2-5/8" Bore)
	34504	Piston, Pin & Ring Set (.010" OS)
	34505	Piston, Pin & Ring Set (.020" OS)
	27888	Ring, Piston pin retaining
	34854	Ring Set (Std.) (2-5/8" Bore)
	34855	Ring Set (.010" OS)
	34856	Ring Set (.020" OS)
	31295C	Rod Assy., Connecting (Incl. 17)
	650662C	Bolt, Connecting rod (Incl. 2 pieces)
	34034	Lifter, Valve
	33156	Camshaft
	30622A	Extension, Blower housing
21	650128	Screw, 10-24 x 1/2"
22A	650764	Nut, "U" type
22	650561	Screw, 1/4-20 x 5/8" (Use as required)
	30063	Screw, 1/4-20 x 1/2" (Use as required)
	650760	Screw, 8-32 x 3/8"
	30684	Gasket Cylinder Cover
	31451A	Cylinder Cover (Incl.26, 34, 127A, 12 9 & 130)
	28460	Seal, Oil
	650451	Screw, 1/4-20 x 1"
	650599	Screw, 1/4-20 x 1- Screw, 1/4-20 x 1-1/2"
		•
	30699C	Rod Assy., Governor (Incl. 30 & 31)
	30700	Yoke, Governor
	650494	Screw, 6-40 x 5/16"
	29642	Ring, Retaining
	31845	Shaft, Mechanical governor
	30588A	Spool, Governor
36	35479	Washer, Flat
37	29193	Ring, Retaining
	30591	Gear Assy., Governor
	31843A	Bracket, Governor gear
	650836	Screw, 10-24 x 1/2"
	32783	Intake Valve (Std.)
	32784	Intake Valve (0.1.) Intake Valve (1/32" OS)
	27878A	Exhaust Valve (Std.)
42		

		Qty	Description
	27880A		Exhaust Valve (1/32" OS)
	27882		Cap, Upper valve spring
	27881		Spring, valve
	32581		Cap, Lower valve spring
46	33876		Gasket, Stator
47	650489		Screw, 1/4-20 x 5/8"
48	35182		Ground Wire
49	32589		Key, Flywheel
51	28938C		Gasket, Cylinder head
	30938A		Head, Cylinder
	33636		Resistor Spark Plug (RJ-8C)
	610118		Cover, Spark plug (Use as required)
	30939A		Cover Assy., Cylinder head
	650691		Washer, Flat (Use as required)
	650690		Washer, Belleville (Use as required)
	650697A		Screw, $5/16-18 \times 2-1/2"$ (Use as required)
	650694A		Screw, $5/16-18 \times 2"$ (Use as required)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as required)
	29916		Clamp, Governor lever (Use as required)
	30322		Locknut, 8-32
	33454		
			Lever Assy., Governor
	29918		Washer, Lock, No. 8 E.T.
	650548		Screw, 8-32 x 5/16"
	29216		Locknut, 10-32
	29826		Screw, 10-32 x 3/4"
	34661		Link, Governor
	34664		Control Bracket (Incl. 68, 69, 72 & 1 38)
	31342		Spring, Compression
	650549		Screw, 5-40 x 7/16"
	27793		Clip, Conduit
	28942		Screw, 10-32 x 3/8"
	610973		Terminal Assy. (Use as required)
	27896A		Gasket, Valve chamber cover
	28423		Breather Assy., Valve
	28424		Element, Breather
77	28425		Cover, Valve spring box
78	650128		Screw, 10-24 x 1/2"
79	35350		Tube, Breather
80	32446		Grommet, Breather tube
82	27915A		* Gasket, Intake pipe to cylinder
83	34712		Flange, Carburetor (Incl. 86A)
	30196		Screw, 5/16-18 x 3/4"
85	31688A		* Gasket, Carburetor
86A	650517		Screw, 1/4-20 x 13/16"
87	27272A		* Air Cleaner Gasket (Use as required)
87	30767		Spacer, Cleaner (Use as required)
	34783		Filter, Pre-air
	34782		Filter, Air cleaner (Incl. 97)
	34782		Pop Rivet (1/8" dia.) (Purchase local ly)
	34699		Bracket, Air cleaner
	34698A		Gasket, Air cleaner
	30675		Fitting, Breather
	34819		Elbow Assy., Air cleaner (Incl. 90,91,92,93,94,96) (Use in
54 A	UTU I U		730561 assembly only)
.94	34780		Elbow, Air cleaner
	650163		Screw, 10-32 x 7/8"
	650826		Stud, 1/4-20 x 6.20, threaded both en ds
50			

Ref #	Part Number	Qtv	Description
	650825	Qty	Nut & Lockwasher, 1/4-20
	34781		Cover, Air cleaner
	650513		Nut, Wing, 1/4-20
	34158		Bracket, Fuel tank
	650665		Screw, 1/4-14 x 7/8"
103	34159		Plate, Fuel tank mounting
104	34186A		Fuel Tank (Incl. 105 & 107) NOTE: These tanks were built
			with different size fuel inlet openings. Tanks with the 1-3/16"
			I.D. opening use fuel cap 33032 or 34210. Tanks with the
			1-1/2" I.D. opening use fuel cap 35355.
105	410144B		Fuel Cap (White Plastic)(Std.)(As req uired)
	33032		Fuel Cap (Red Plastic) (Spurt resistant, Low profile) (Use as
100	00002		required)
405	0.404.0		
105	34210		Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as
			required)
105	35355		Fuel Cap (Red plastic) (Use as requir ed)
	29774		Fuel Line (Braided, 8 1/4") (Use as r equired)
106	30962		Fuel Line (Braided, 32") (Use as required)
107	26460		Clamp, Fuel line (Use as required)
108	32158E		Blower Housing (For electric starter)
	29747B		Screw, 5/16-24 x 21/32"
	34390		Deflector, Exhaust (Optional)
	33714		Opt.Spark Arrest Muf.(Incl.112,143,14 4,144A)
	391026		Opt.Spark Arrest Muf.(Incl.143,143A,1 43B)
	32125		Cup, Starter
	35009		Screen, Starter cup
	650815		Washer, Belleville
	8116		Nut, Hex
	29716		Screw, 1/4-28 x 7/16"
	31855		Retainer, Bearing
	31793		Bearing, Ball
	31792		Washer, Thrust
	650778		Washer, Lock
	650580		Nut, Lock
	33997		Clip, Oil fill tube
	34663		Spring, Speed control
	650821 22195		Screw, 10-32 x 1/2"
	33185 33171		Cover & tube, Muffler (Use as require d) Screen, Muffler (Use as required)
	650578		Screw, 8-18 x 3/8" (Use as required)
	33700		Cover & Tube, Muffler (Use as required)
	33323		Screen, Muffler (Use as required)
	34011A		Dipstick (Incl. 146)
	33590		"O" Ring
	33893A		Oil Fill Tube
	730561		Air Cleaner Kit
			(Incl.74,79,80,87,88,89,90,91,92,94,95,96,97,99,100 & 230C)
			(Used only on engine with an externally vented fully
			adjustable carburetor)
004	730164		• •
201	730164		Air Cleaner Ass'y. (Red Poly)(Incl.87,120,121,122,123,124 & 230)(As reg.)
			230)(As req.)
201	730164		Air Cleaner Kit, Mini bike (Incl.87,120,121,122,123 & 124)
			(Use as required)
2∩1∆	730130		Muffler Adapter Kit (Incl.110,112)(As req.)
	34768		Decal, Name
200/()\\/	
www.mymowerparts.com			

	Part Number	Qty	Description
	34346		Decal, Instruction
	34704		Decal, Instruction
	30548B		Condenser
	30547A		Breaker Assy (Used on Std. Point igni tion)
	631021		Inlet, Needle Seat & Clip Assy.
	611077		Alternator (Optional)
	650868		Screw, 8-18 x 1-1/8" (3 required)(Opt .)
	611078		Connector, A.C. Lighting (Optional)
	611079		Connector, D.C. Charging (Optional)
	590610		Tube, Centering (Optional)
	590613		Alternator Shaft (Optional)
250	632213		Carburetor (Incl. 85) (Refer to DiviSion 5, Section A, page 176 for breakdown)
251	611038		Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 39 for breakdown)
252	590420A		Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
254	33328D		Starter Motor Kit (110-120 volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#255). Refer to service number stamped on end cap of motor or on decal for identificat
255	30811A		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition before 1982)
255	611042		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition 1982 or later)
255	611085		Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter motor kits listed above) (Used on solid state external ignition)
256	33235A		Gasket Set (Incl. items marked*)