

ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

400
GASKET SET

420

286A
286
290
370A
281
370E
287A
287
390
93
92
1102
301
300
341
342A
290
342
290A
292
292
290B
66
60
65
9
12
8
6
7
370
46
46A
46
311
312
72A
73
88
72
75
76
70
62
69
50
48
48A
16
17
18
207
40
41
43
45
2
69
30
15
14
379
248
248B
240B
238
370K
174
179
170
169
171
239
380
42
43
178
260A
204
203
206
202
205
215
211
210
209
370C
127
130
101
277
84
64A
276
274
131
127
339
120
119
128
149
150
161
325
325A
103
375
290
292
290B
66
60
65
342
341
300
301
1102
287A
287
390
286A
286
290
370A
281
370E
287
287A
390
93
92
1102
301
300
341
342A
290
342
290A
292
292
290B
66
60
65
9
12
8
6
7
370
46
46A
46
311
312
72A
73
88
72
75
76
70
62
69
50
48
48A
16
17
18
207
40
41
43
45
2
69
30
15
14
379
248
248B
240B
238
370K
174
179
170
169
171
239
380
42
43
178
260A
204
203
206
202
205
215
211
210
209
370C
127
130
101
277
84
64A
276
274
131
127
339
120
119
128
149
150
161
325
325A
103
375
290
292
290B
66
60
65
342
341
300
301
1102
287A
287
390
286A
286
290
370A
281
370E
287
287A
390
93
92
1102
301
300
341
342A
290
342
290A
292
292
290B
66
60
65
9
12
8
6
7
370
46
46A
46
311
312
72A
73
88
72
75
76
70
62
69
50
48
48A
16
17
18
207
40
41
43
45
2
69
30
15
14
379
248
248B
240B
238
370K
174
179
170
169
171
239
380
42
43
178
260A
204
203
206
202
205
215
211
210
209
370C
127
130
101
277
84
64A
276
274
131
127
339
120
119
128
149
150
161
325
325A
103
375
290
292
290B
66
60
65
342
341
300
301
1102
287A
287
390
286A
286
290
370A
281
370E
287
287A
390
93
92
1102
301
300
341
342A
290
342
290A
292
292
290B
66
60
65
9
12
8
6
7
370
46
46A
46
311
312
72A
73
88
72
75
76
70
62
69
50
48
48A
16
17
18
207
40
41
43
45
2
69
30
15
14
379
248
248B
240B
238
370K
174
179
170
169
171
239
380
42
43
178
260A
204
203
206
202
205
215
211
210
209
370C
127
130
101
277
84
64A
276
274
131
127
339
120
119
128
149
150
161
325
325A
103
375
290
292
290B
66
60
65
342
341
300
301
1102
287A
287
390
286A
286
290
370A
281
370E
287
287A
390
93
92
1102
301
300
341
342A
290
342
290A
292
292
290B
66
60
65
9
12
8
6
7
370
46
46A
46
311
312
72A
73
88
72
75
76
70
62
69
50
48
48A
16
17
18
207
40
41
43
45
2
69
30
15
14
379
248
248B
240B
238
370K
174
179
170
169
171
239
380
42
43
178
260A
204
203
206
202
205
215
211
210
209
370C
127
130
101
277
84
64A
276
274
131
127
339
120
119
128
149
150
161
325
325A
103
375
290
292
290B
66
60
65
342
341
300
301
1102
287A
287
390
286A
286
290
370A
281
370E
287
287A
390
93
92
1102
301
300
341
342A
290
342
290A
292
292
290B
66
60
65
9
12
8
6
7
370
46
46A
46
311
312
72A
73
88
72
75
76
70
62
69
50
48
48A
16
17
18
207
40
41
43
45
2
69
30
15
14
379
248
248B
240B
238
370K
174
179
170
169
171
239
380
42
43
178
260A
204
203
206
202
205
215
211
210
209
370C
127
130
101
277
84
64A
276
274
131
127
339
120
119
128
149
150
161
325
325A
103
375
290
292
290B
66
60
65
342
341
300
301
1102
287A
287
390
286A
286
290
370A
281
370E
287
287A
390
93
92
1102
301
300
341
342A
290
342
290A
292
292
290B
66
60
65
9
12
8
6
7
370
46
46A
46
311
312
72A
73
88
72
75
76
70
62
69
50
48
48A
16
17
18
207
40
41
43
45
2
69
30
15
14
379
248
248B
240B
238
370K
174
179
170
169
171
239
380
42
43
178
260A
204
203
206
202
205
215
211
210
209
370C
127


Engine Parts List #1

Ref #	Part Number	Qty	Description
1	35010		Cylinder (Incl. 2 & 20) (2-5/8" Bore)
2	26727		Pin, Dowel
14	28277		Washer, Flat
15	31513		Rod, Governor
16	32651		Lever, Governor
17	31335		Clamp, Governor lever (Clamp is positioned towardspark plug end on 1977-78 and latermodels. It is positioned opposite spark plugend on earlier models.)
18	650548		Screw, 8-32 x 5/16"
19	31386		Spring, Governor
20	32600		Seal, Oil
30	33532		Crankshaft
40	34851		Piston, Pin & Ring Set (Std.) (2-5/8" Bore)
40	34852		Piston, Pin & Ring Set (.010" OS)
40	34853		Piston, Pin & Ring Set (.020" OS)
41	32603B		Piston & Pin Ass'y.(Std.)(Incl. 43)(2 -5/8")
41	32604B		Piston & Pin Ass'y. (.010" OS) (Incl. 43)
41	32605B		Piston & Pin Ass'y. (.020" OS) (Incl. 43)
42	34854		Ring Set (Std.) (2-5/8" Bore)
42	34855		Ring Set (.010" OS)
42	34856		Ring Set (.020" OS)
43	20381		Ring, Piston pin retaining
45	32875		Rod Assy., Connecting (Incl. 18)
46A	32609		Plate, Lock (Do not use with 32610A locking type screw)
46	32610		Connecting Rod Bolt (Early Production)
46	32610A		Bolt, Connecting rod
48A	27241		Lifter, Intake valve
48	27241		Lifter, Exhaust valve
50	33533		Camshaft (MCR)
52	29914		Pump Assy., Oil
60	29745		Extension, Blower housing
66	30063		Screw, Torx T-30, 1/4-20 x 1/2"
69	35261		* Gasket, Mounting flange
70	33535B		Flange Ass'y. (Incl. 72, 72A, 75, 80 & 306)
72A	9556		Oil Drain Plug (Use as required)
72	30572		Plug, Oil drain (Incl. 73)
73	28833		* Drain Plug Gasket (Do not use w/plast ic plug)
75	26208		Seal, Oil
80	30574		Shaft, Mechanical governor
81	30590A		Washer, Flat
82	30591		Gear Assy., Governor (Incl. 81)
83	30588A		Spool, Governor
84	29193		Ring, Retaining
86	650488		Screw, 1/4-20 x 1-1/4"
89	610951		Key, Flywheel
92	650815		Washer, Belleville
93	650607		Nut, Flywheel
103	650489		Screw, 1/4-20 x 5/8"
110	35349		Ground Wire
119	33015A		* Gasket, Cylinder head
120	33016A		Head, Cylinder (Incl. 131)
125	29313C		Exhaust Valve (STD)(Incl. 151) (Conventional Ports)
125	29315C		Exhaust Valve (1/32" OS)(Incl. 151) (Conventional Ports)
126	29314B		Intake Valve (STD)(Incl. 151) (Conventional Ports)
126	29315C		Intake Valve (1/32" OS)(Incl. 151) (Conventional Ports)
127	26073		Washer (Not used in late production)
127	650691		Washer (Used on late production)

Ref #	Part Number	Qty	Description
130	6021A		Screw, 5/16-18 x 1-1/2" (Use as required)
130	650818		Screw, 5/16-18 x 1-1/2" (Use as required)
131	650694A		Screw, 5/16-18 x 2" (Use as required)
131	650697A		Screw, 5/16-18 x 2-1/2" (Use as required)
135	33636		Spark Plug (J-8C)
149	31671		Valve Spring Cap) (Used in early production)
150	31672		Spring, Valve
151	31673		Cap, Lower valve spring
169	31619A		* Gasket, Valve spring cover
170	31337A		Body Assy., Breather (Incl. 169 & 171)
171	31410		Element, Breather
174	650128		Screw, 10-24 x 1/2"
178	29752		Nut & Lockwasher, 1/4-28
181	6201		Screw, 1/4-28 x 7/8"
182	6201		Screw, 1/4-28 x 7/8"
184	26756		* Gasket, Carburetor
185	33004A		Pipe, Intake (Incl. 224)
186	32653		Link, Governor spring
200	33131A		Control Bracket (Incl. 203 thru 206)
201	33150		Bracket, Control
202	33802		Spring, Compression
203	31342		Spring, Compression
204	650549		Screw, 5-40 x 7/16"
205	650777		Screw, 6-32 x 21/32"
206	610973		Terminal Assy.
207	33133		Link, Governor-to-throttle
209	30200		Screw, 10-24 x 9/16"
210	27793		Clip, Conduit
211	28942		Screw, 10-32 x 3/8"
223	650451		Screw, 1/4-20 x 1"
224	32649A		* Gasket, Intake
238	650707		Screw, 10-32 x 5/8"
239	33051		* Gasket, Air cleaner
240B	33005		Body, Air cleaner
246B	33006		Element, Air cleaner
248	33008		Tube, Air cleaner
250A	33007		Cover, Air cleaner
260	33594A		Blower Housing NOTE: Replacement hardware may differ when servicing starter Assy. or blower housing. Refer to Service Bulletin 508.
261	650561		Screw, 1/4 20 x 5/8"
274	26754A		* Gasket, Exhaust
277	30063		Screw, Torx T-30, 1/4-20 x 1/2" (Use as req.)
287A	29752		Nut & Lockwasher, 1/4-28 (Use as required)
287	29716		Screw, 1/4-28 x 7/16" (Use as required)
287	30513		Screw & Lockwasher, 1/4-28 x 1/2"
287			Pop Rivet (Purchase locally) (3/16" dia.)
290	29774		Fuel Line(Braided 8-1/4")(21 cm)(Use as req.)
290	34357		Fuel Line (Epichlorohydrin 6-3/4") (1 7 cm)
290	30705		Fuel Line (Braided 16")(40 cm)(Use as req.)
292	26460		Fuel Line Clamp (Use as required)
300	32170A		Fuel Tank (Incl. 292 & 301)
301	410144B		Fuel Cap (Std.) (Use as required)
301	33032		Fuel Cap (Use as required)
301	34210		Fuel Cap (use as required)
305	33595		Oil Fill Tube
325A	27275		Clip, Hi-tension wire (Use as required)

Ref #	Part Number	Qty	Description
370	34346		Decal, Instruction
375	610857		Magneto (W/Ring Gear) NOTE: This magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts breakdown. Refer to Division 5, Section B, page 30 or Fiche 6, Grid F-12 for breakdown)
377	30547A		Contact Assy., Breaker
378	30548B		Condenser
379	631021		Inlet Needle, Seat & Clip Assy.
380	631699		Carburetor (Incl. 184) (Refer to Division 5, Section A, page 112 or Fiche 6, Grid E-5 for breakdown)
400	33238D		* Gasket Set (Incl. items marked *)
420	730225		SAE 30 4-Cycle Engine Oil (Quart)

ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.







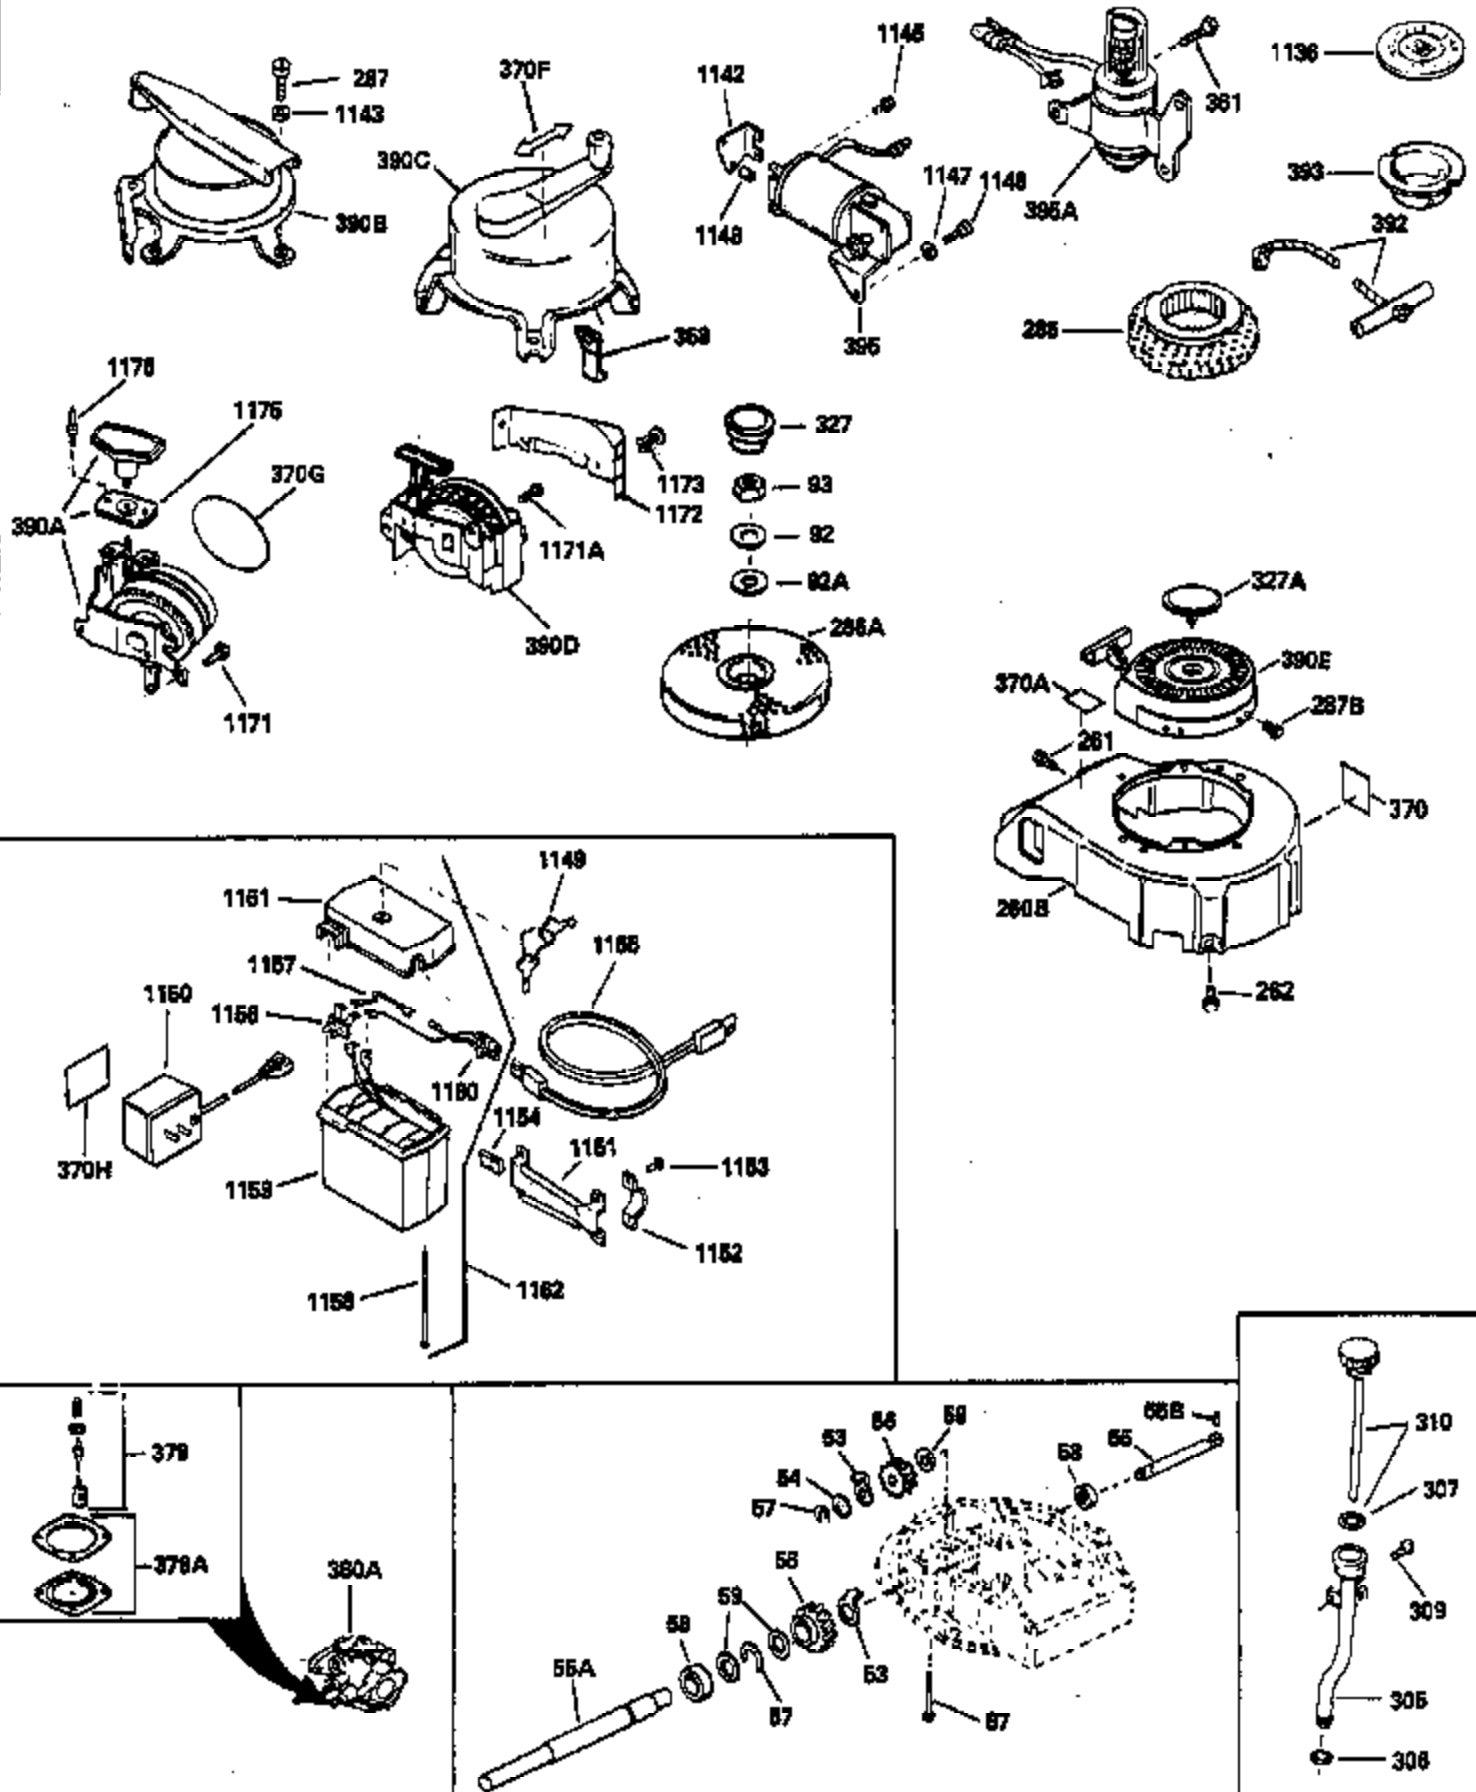


Ref #	Part Number	Qty	Description
19	31386		Spring, Governor
53	31745		Washer, Tang
55A	33536		PTO Shaft
56	33401		Gear, Worm
57	33537		Ring, Retaining
58	31744		Seal, Oil
59	31747		Washer, Flat
87	650492		Screw, 1/4-20 x 2-1/4"
92	650815		Washer, Belleville
93	650607		Nut, Flywheel
182	6201		Screw, 1/4-28 x 7/8"
201	33150		Bracket, Control
261	650561		Screw, 1/4 20 x 5/8"
262	650561		Screw, 1/4-20 x 5/8"
286A	32237		Screen, Flywheel
287	29716		Screw, 1/4-28 x 7/16" (Use as require d)
287	30513		Screw & Lockwasher, 1/4-28 x 1/2"
287			Pop Rivet (Purchase locally) (3/16" d ia.)
305	33595		Oil Fill Tube
306	34282		"O" Ring (This "O" ring is required with metal fill tube only when replacement mounting flange with .777 dia. oil fill hole has been used.)
306	30139		"O" Ring
307	29985		"O" Ring
309	650562		Screw, 10-32 x 1/2"
310	30140		Dipstick (Incl. 307)
327	32236		Plug, Screen
370	34346		Decal, Instruction
379	631021		Inlet Needle, Seat & Clip Assy.
390A	590450A		Side Mount Rewind Starter NOTE: Replacement hardware may differ when servicing starter assy. or blower housing. Refer to Service Bulletin 508. (Refer to Division 5, Section C, page 27 or Fiche 6, Grid G-4 for breakdown)
1171	650737		Screw, 1/4-20 x 1/2"
1175	590441		Bracket Ass'y. (Use as required)
1176	650639		Open End Rivet (Use as required)

Page 7 of 8

This exploded view diagram illustrates the assembly of a mechanical component, likely a valve or actuator. The components are labeled with reference numerals:

- 366**: A small circular cap or plug at the top left.
- 387**: A vertical assembly consisting of a central body with two flange-like sections.
- 275A**: A cylindrical component with a flange at the bottom, positioned below 387.
- 275D**: A large, complex component with a curved, lever-like shape, located in the upper right.
- 277B**: A small circular component positioned between 275D and 277.
- 277**: A long, thin rod or pin passing through 277B.
- 274**: A small circular component located below 275D.
- 415**: A bracket or support structure located below 274.
- 277A**: A long, thin rod or pin located to the left of 415.
- 275C**: A large, complex component with a curved, lever-like shape, located in the lower left.
- 414**: A small circular component positioned between 275C and 277.
- 277**: A long, thin rod or pin passing through 414.
- 284A**: A small circular component positioned between 275C and 284.
- 284**: A small circular component positioned between 284A and 278.
- 278**: A small circular component positioned between 284 and 275B.
- 275B**: A cylindrical component with a flange at the bottom, located in the lower right.

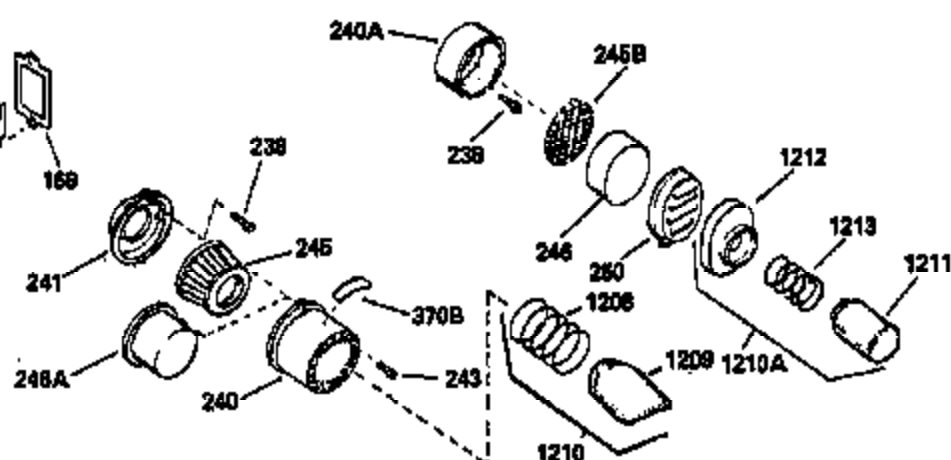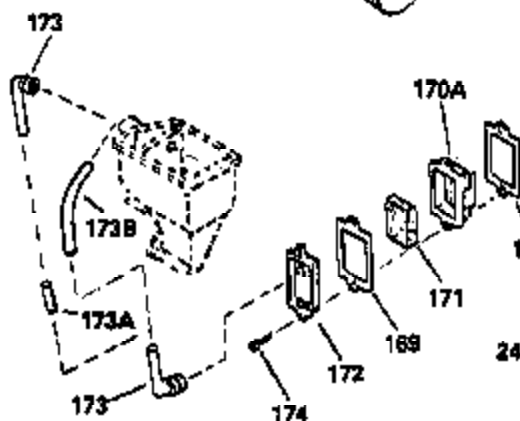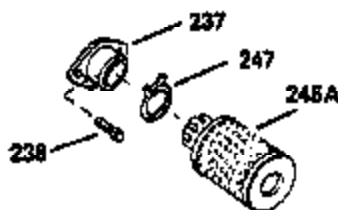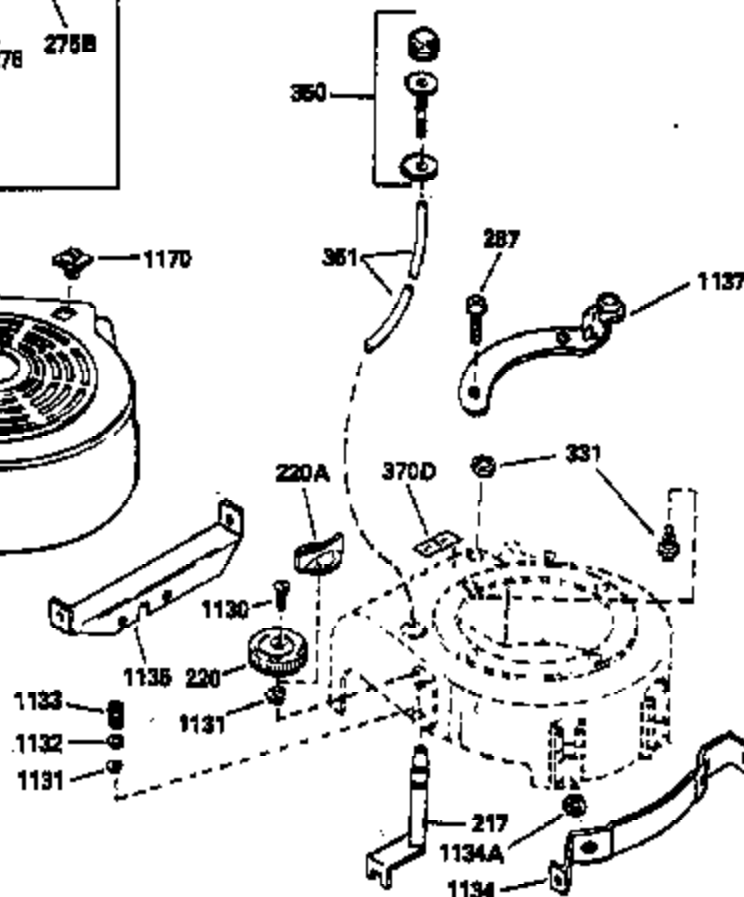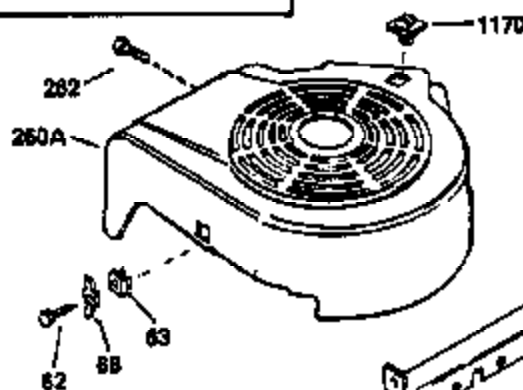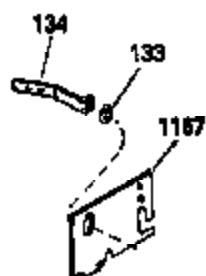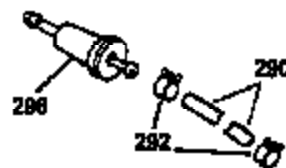

Ref #	Part Number	Qty	Description
19	31386		Spring, Governor
169	31619A		* Gasket, Valve spring cover
171	31410		Element, Breather
174	650128		Screw, 10-24 x 1/2"
182	6201		Screw, 1/4-28 x 7/8"
201	33150		Bracket, Control
238	650707		Screw, 10-32 x 5/8"
262	650561		Screw, 1/4-20 x 5/8"
274	26754A		* Gasket, Exhaust
275B	27181B		Muffler (Incl. 274 & 277)
277	30063		Screw, Torx T-30, 1/4-20 x 1/2" (Use as req.)
277A	650774		Screw, 1/4-20 x 2-3/8"
287	29716		Screw, 1/4-28 x 7/16" (Use as require d)
287	30513		Screw & Lockwasher, 1/4-28 x 1/2"
287			Pop Rivet (Purchase locally) (3/16" d ia.)
290	29774		Fuel Line(Braided 8-1/4")(21 cm)(Use as req.)
290	34357		Fuel Line (Epichlorohydrin 6-3/4") (1 7 cm)
290	30705		Fuel Line (Braided 16")(40 cm)(Use as req.)
292	26460		Fuel Line Clamp (Use as required)
305	33595		Oil Fill Tube
415	730162		Muffler Adapter Kit (Incl. 274 & 277A) (Inverted Ports)