


TB515EC 25C-515-966
Engine Assembly

Page 1 of 4

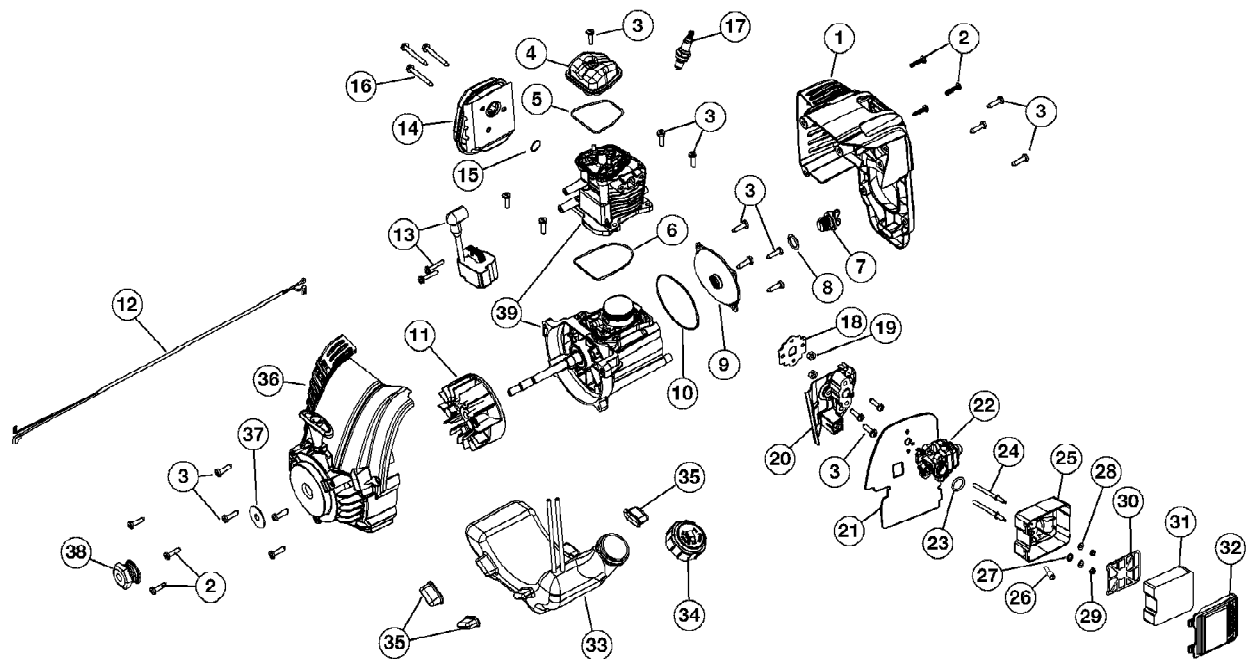


TB515EC 25C-515-966
Engine Assembly

Page 2 of 4

Ref #	Part Number	Qty	S/P/F	Description
1	753-06134	1		Engine Cover Assembly (includes 2 & 3)
2	710-04194	1	/P	Cover Screw
3	710-04604	1	/P	Housing Screw
4	753-05209	1		Rocker Cover
5	721-04132	1	/P	Rocker Cover O-Ring
6	753-05232	1		Cylinder O-Ring
7	753-05408	1	/P	Oil Plug (includes 8)
8	791-182290	1		Oil Plug O-Ring
9	753-06111	1		Crankcase Cover
10	753-05238	1		Crankcase Cover O-ring
11	753-05240	1	/P	Flywheel Assembly
12	753-05785	1		Lead Wires
13	753-05447	1		Module Assembly
14	753-05245	1		Muffler Assembly (includes 15 & 16)
15	753-05244	1		Muffler Gasket
16	710-04487	1	/P	Muffler Screw
17	753-05255	1		Spark Plug
18	753-05247	1		Insulator Gasket
19	712-04099	1	/P	Nut
20	753-05249	1		Insulator (includes 21)
21	753-05366	1	/P	Carburetor Gasket
22	753-05440	1	/P	Carburetor Assembly
23	753-04030	1		Carburetor O-Ring
24	710-04645	1	/P	Air Filter Mounting Screw
25	753-06284	1		Air Cleaner Box Assembly (includes 26, 27 & 30-32)
26	791-182097	1		Breather Tube
27	791-181000	1		Grommet Washer
28	791-182409	1		Washer
29	712-04099	1	/P	Nut
30	791-182657	1		Air Filter Plate
31	753-05506	1		Air Filter
32	791-182659	1		Air Filter Cover
33	753-06240	1		Fuel Tank Assembly (includes 34)
34	753-1229	1		Fuel Cap
35	753-05259	1		Fuel Tank Pads
36	753-05510	1		Starter Housing Assembly (includes 3)
37	9162-1	1	/P	Washer
38	756-04269	1	/P	Drive Shaft Pulley
39	753-06290	1		Shortblock Assembly (includes 3-11, 13, & 17)
	753-05297	1	/P	Spark Arrestor Not shown

TB515EC 25C-515-966
General Assembly

Page 3 of 4

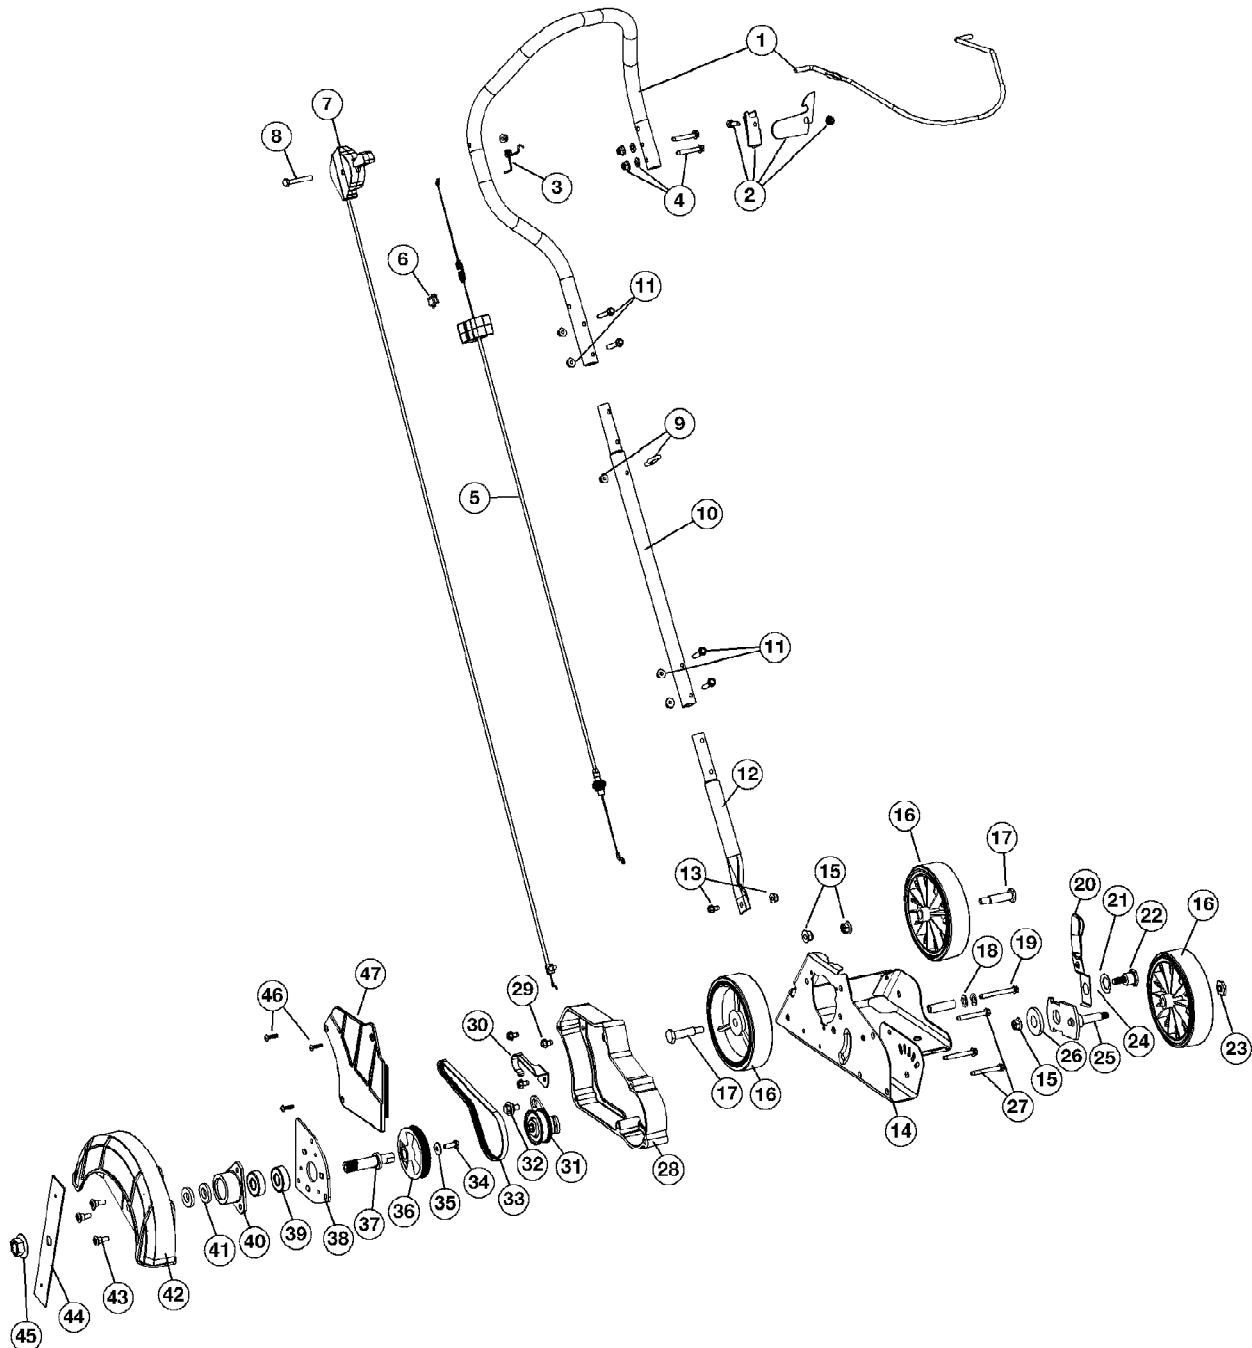

TB515EC 25C-515-966
General Assembly

Page 4 of 4

Ref #	Part Number	Qty	S/P/F	Description
1	753-05791	1		Handle Assembly (includes 2-4)
2	753-05797	1		Lockout Lever Assembly
3	753-04043	1	/P	Bale Spring
4	753-05793	1		Lockout Hardware Assembly
5	753-05795	1		Tensioner Cable Assembly
6	791-182405	1	/P	Switch
7	753-05789	1		Throttle Assembly
8	753-05794	1		Throttle Hardware Assembly
9	753-05524	1		Starter Rope Guide Assembly
10	753-05787	1		Middle Handle Assembly (includes 11)
11	753-05526	1		Handle Hardware Assembly
12	749-04361	1	/P	Lower Handle
13	710-0599	1	/P	Lower Handle Screw & Nut Assembly
14	753-05539	1		Edger Frame
15	712-04065	1	/P	Lock Nut
16	734-04261	1	/P	Wheel
17	938-0373	1	/P	Wheel Bolt
18	750-04783	1	/P	Spacer
19	710-1206	1	/P	Spacer Screw
20	987-02051	1	/P	Height Adjustment Lever Assembly
21	736-0741	1	/P	Washer
22	738-1172	1	/P	Shoulder Screw
23	712-04135	1	/P	Nut
24	750-04929	1	/P	Spacer
25	987-02094	1	/P	Pivot Arm
26	753-06287	1		Height Adjustment Spacer
27	753-04202	1		Spindle Plate Screw
28	731-05809	1	/P	Spindle Spacer
29	710-0599	1	/P	Screw
30	787-01502	1	/P	Belt Retainer
31	753-05540	1		Idler Pulley Assembly
32	738-0930	1	/P	Shoulder Screw
33	754-04149	1	/P	Belt
34	710-3015	1	/P	Screw
35	736-0270	1	/P	Washer
36	756-04087	1	/P	Pulley
37	753-05543	1		Blade Spindle
38	753-05544	1		Spindle Plate
39	941-0524	1	/P	Bearing
40	718-04012	1	/P	Bearing Cup
41	936-04088	1	/P	Washer
42	731-05064	1	/P	Blade Guard
43	738-0706C	1	/P	Screw
44	787-01503	1	/P	Edger Blade
45	712-0417A	1	/P	Nut
46	710-04194	1	/P	Screw
47	731-05822	1	/P	Belt Cover