


TB514CS 41ADT51G966
Engine Assembly

Page 1 of 5

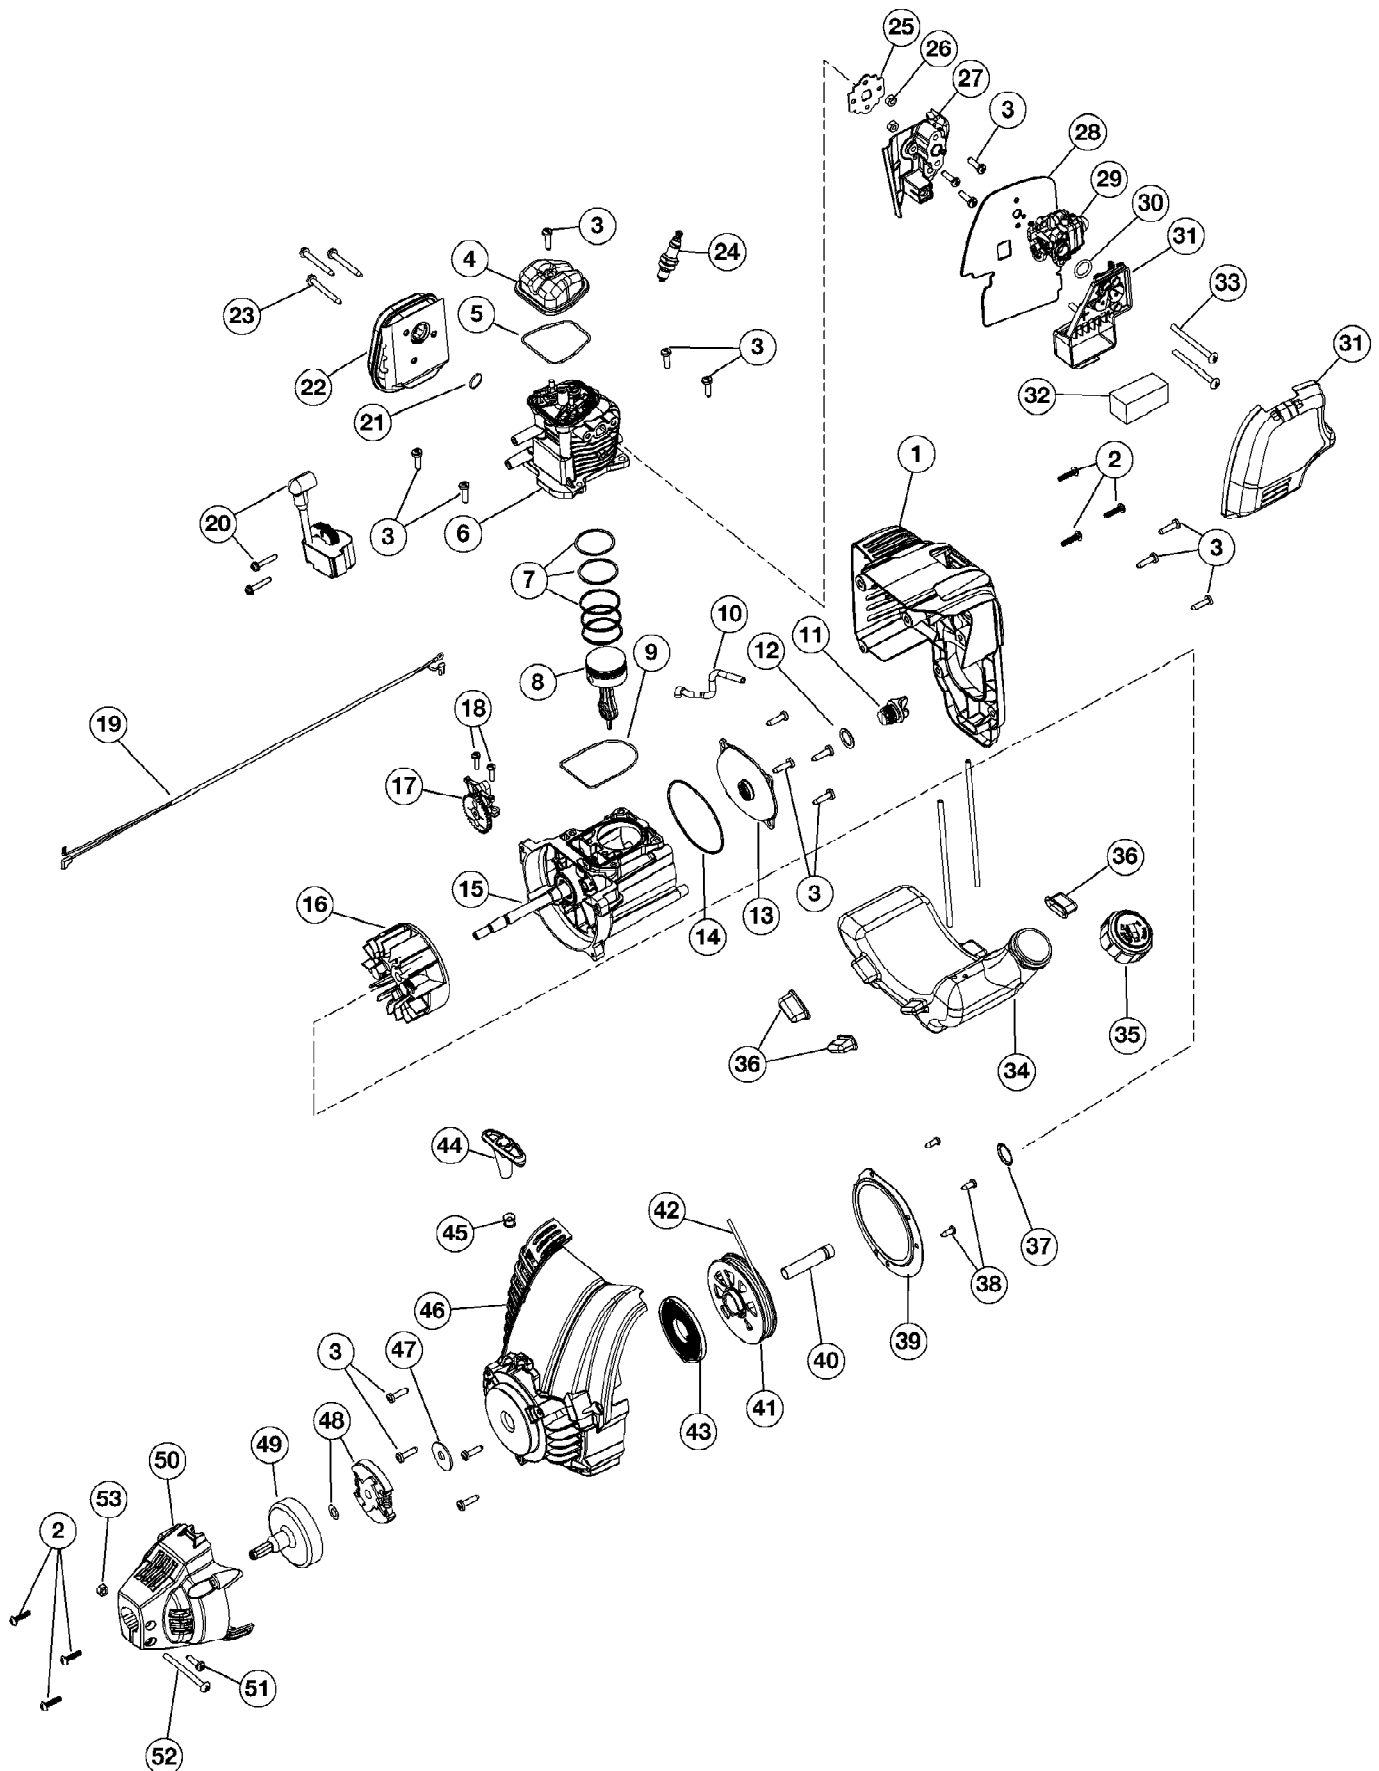

TB514CS 41ADT51G966
Engine Assembly

Page 2 of 5

Ref #	Part Number	Qty	S/P/F	Description
1	753-05206	1		Engine Cover Assembly (Incl. Ref No. 2 & 3)
2	710-04194	1	/P	Cover Screw
3	791-181003	1	/P	Screw
4	753-05209	1		Rocker Cover
5	753-05210	1	S	Rocker Cover O-Ring
6	753-05228	1		Cylinder Assembly (Incl. Ref No. 3, 5 & 9)
7	753-05229	1		Piston Ring Assembly
8	753-05230	1		Piston Assembly (Incl. Ref No. 7)
9	753-05232	1		Cylinder O-Ring
10	791-182379	1	/P	Breather Hose
11	753-05265	1	/P	Oil Plug (Incl. Ref No. 12)
12	791-182290	1		Oil Plug O-Ring
13	753-05237	1		Crankcase Cover
14	753-05238	1		Crankcase Cover O-ring
15	753-05239	1		Crankcase Assembly (Incl. Ref No. 9, 10 & 14)
16	753-05240	1	/P	Flywheel Assembly
16	914-04016	1	/P	Woodruff Key.125 x .375 Not shown
17	753-05241	1		Cam Bracket Assembly (Incl. Ref No. 18)
18	753-05242	1	S	Cam Bracket Screw
19	753-05264	1		Lead Wires
20	753-05243	1	S	Module Assembly
21	753-05244	1		Muffler Gasket
22	753-05245	1		Muffler Assembly (Incl. Ref No. 21 & 23)
23	753-05246	1	S	Muffler Screw
24	753-05255	1		Spark Plug
25	753-05247	1		Insulator Gasket
26	753-05248	1	S	Nut
27	753-05249	1		Insulator
28	753-05366	1	/P	Carburetor Gasket
29	753-05251	1		Carburetor w/Primer
30	791-181751	1		O-Ring
31	753-05252	1		Air Cleaner Cover Assembly (Incl. Ref No. 32)
32	753-05254	1		Air Filter
33	710-04517	1	/P	Screw
34	753-05256	1	/P	Fuel Tank Assembly w/Fuel Lines (Incl. Ref No. 35)
35	753-1229	1		Fuel Cap
36	753-05259	1		Fuel Tank Pads
37	712-04096	1	/P	Push Nut
38	753-1202	1		Pressure Plate Screw
39	753-05074	1		Pressure Plate (Incl. Ref No. 38)
40	750-04434	1	/P	Spacer
41	753-05435	1	/P	Starter Assembly (Incl. Ref No. 42)
42	791-613103	1		Rope
43	753-04286	1		Recoil Spring
44	631-04164	1	S	Handle
45	791-611061	1		Rope Guide
46	753-05262	1		Starter Housing Assembly (Incl. Ref No. 3 & 37-45)


TB514CS 41ADT51G966
Engine Assembly

Page 3 of 5

Ref #	Part Number	Qty	S/P/F	Description
47	9162-1	1	/P	Washer
48	753-1238	1		Clutch & Clutch Washer
49	791-153592	1	/P	Clutch Drum
50	753-05263	1		Clutch Cover
51	753-04466	1		Anti-Rotation Screw
52	753-04003	1		Clamp Screw
53	791-180217	1	S	Nut
	753-05297	1	/P	Spark Arrestor Assembly Not Shown
	753-05265	1	/P	Shortblock Assembly Not Shown (includes 3-12, 14, 15, 17 & 24)

TB514CS 41ADT51G966
General Assembly

Page 4 of 5

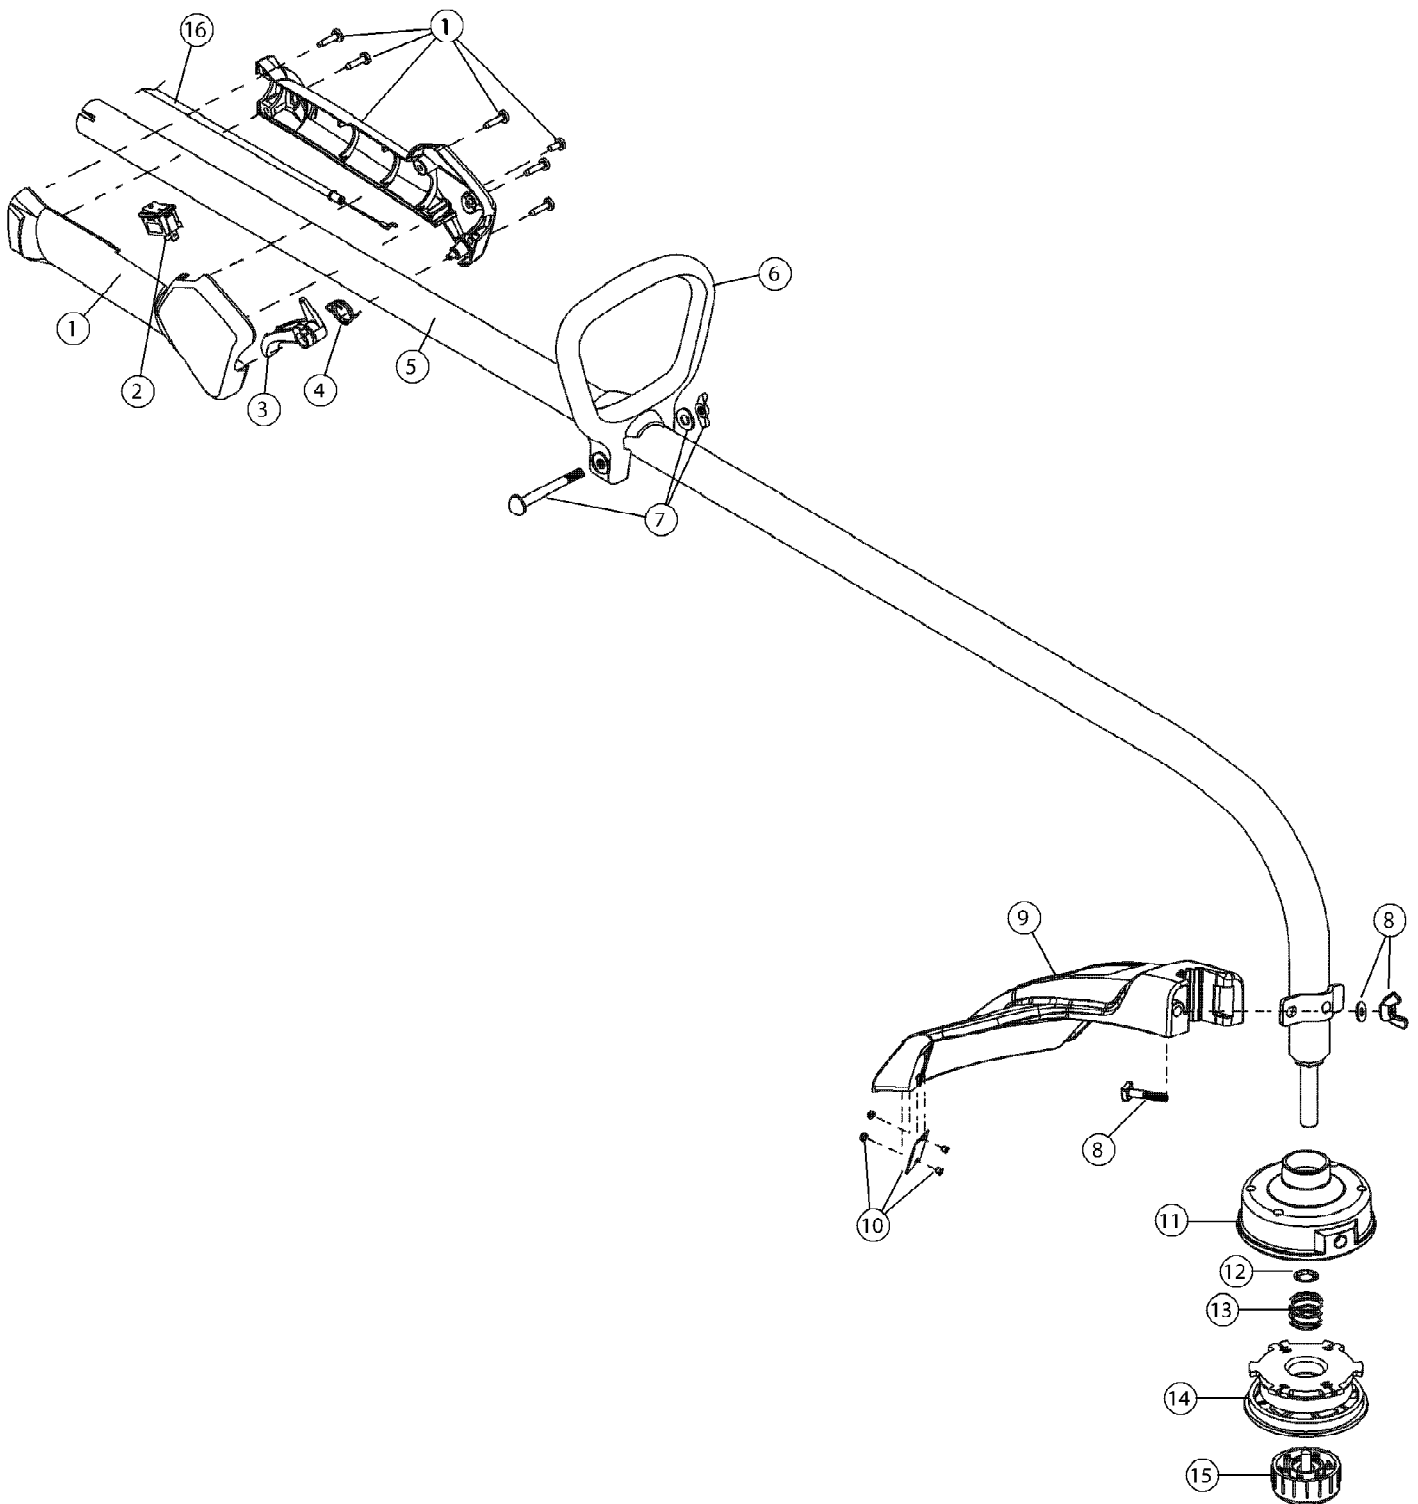

TB514CS 41ADT51G966
General Assembly

Page 5 of 5

Ref #	Part Number	Qty	S/P/F	Description
1	753-04234	1		Throttle Housing Assembly (Incl. Ref No. 2-4)
2	791-182405	1	/P	Switch
3	753-04119	1	/P	Throttle Trigger
4	791-182690	1		Throttle Trigger Spring
5	753-05748	1		Drive Shaft Housing Assembly
6	753-05461	1		D-Handle (Incl. Ref No. 7)
7	791-181587	1	/P	Handle Hardware
8	753-04282	1		Guard Mounting Hardware
9	753-04283	1		Guard (Incl. Ref No. 10)
10	791-682061	1		Blade Assembly
11	753-04284	1		Outer Spool Assembly (Incl. Ref No. 12)
12	791-610660	1		Retainer
13	791-610317B	1	/P	Spring
14	753-1155	1	/P	Inner Reel
15	791-153066B	1	/P	Bump Head Knob Assembly
16	753-05266	1		Throttle Cable
	953-1156	1	/P	Reel and Line Assembly Not Shown