


TB525CS HORSE 41ADT52C966
Boom & Trimmer Assembly TB525CS

Page 1 of 5

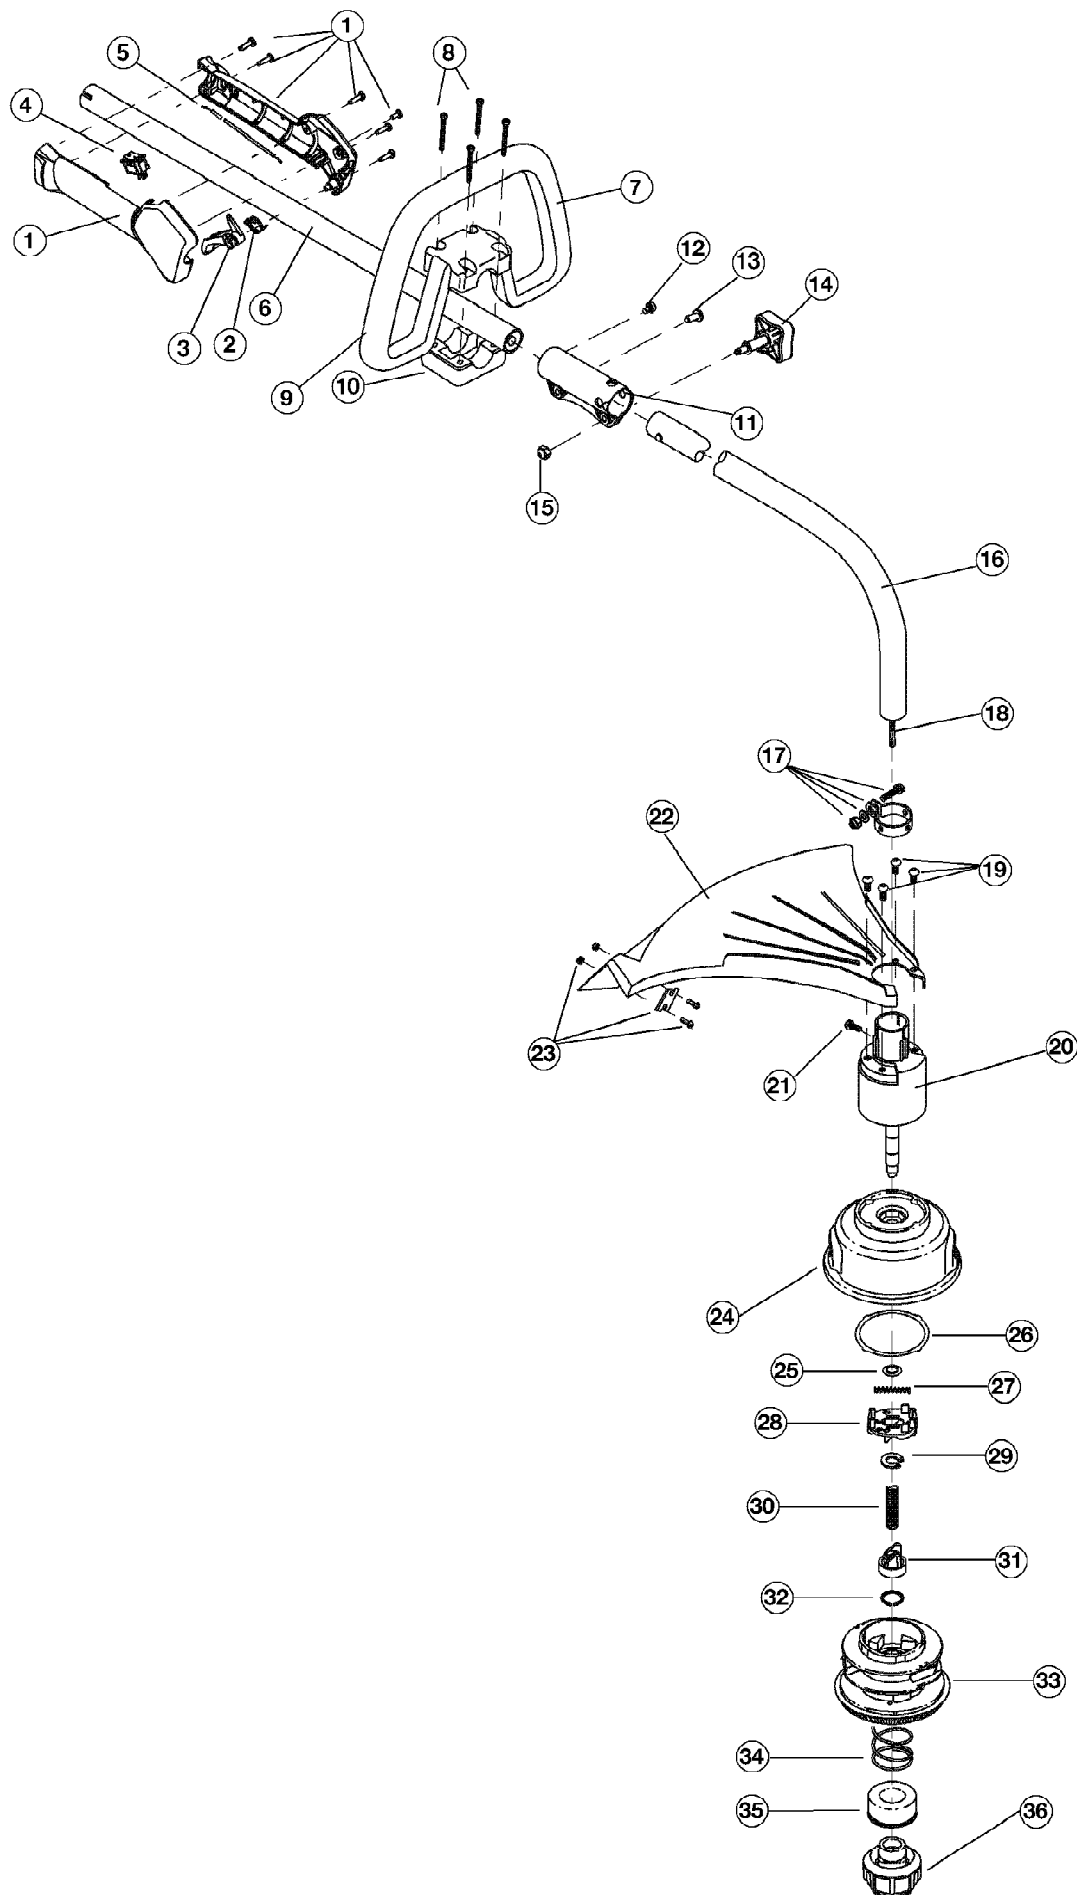


TB525CS HORSE 41ADT52C966
Boom & Trimmer Assembly TB525CS

Page 2 of 5

Ref #	Part Number	Qty	S/P/F	Description
1	753-04234	1		Throttle Housing Assembly (includes 2-4)
2	791-182690	1		Throttle Trigger Spring
3	753-04119	1	/P	Throttle Trigger
4	791-182405	1	/P	Switch
5	753-05266	1		Throttle Cable Assembly
6	753-04236	1	/P	Upper Drive Shaft Housing Assembly
7	791-180869	1		Deluxe D-Handle Assembly (includes 8-10)
8	791-181070	1		Screw
9	791-182167	1		Deluxe D-Handle
10	791-182168	1		Bottom Clamp
11	753-1190	1	/P	Split boom Coupler (includes 12-15)
12	791-182057	1		Screw
13	791-181617	1		Bolt
14	791-181981	1		Adjustment Knob (includes 15)
15	753-04386	1	S	Knob Retaining Nut
16	791-182387	1		Lower Drive Shaft Housing Assembly
17	791-153597	1		Lower Clamp Assembly (includes 21)
18	791-181852	1	/P	Lower Flexible Drive Shaft
19	791-180531	1	S	Shield Mounting Screw
20	791-181857	1		Bushing Housing Assembly
21	791-145569	1	/P	Anti-Rotation Screw
22	791-181659	1	/P	Shield Assembly (includes 23)
23	753-05212	1	S	Blade Assembly
24	791-181457	1		Outer Spool Assembly (includes 25)
25	791-181458	1		Retainer
26	791-181561	1		Thrust Washer
27	791-181459	1		Small Spring
28	753-04257	1	/P	Slider
29	791-181532	1		E-Clip
30	791-181531	1		Spring
31	791-181462	1		Plunger
32	791-181463	1		C-Clip
33	791-181464	1	S	Inner Reel
34	791-181465B	1		Large Spring
35	791-181467	1		Foam Seal
36	791-181468B	1	/P	Bump Head Knob Assembly (includes 34 & 35)
	753-04929	1		Complete Cutting Head Assembly (Includes 17, 20, 21, 24-36) Not shown

TB525CS HORSE 41ADT52C966
Engine Assembly

Page 3 of 5

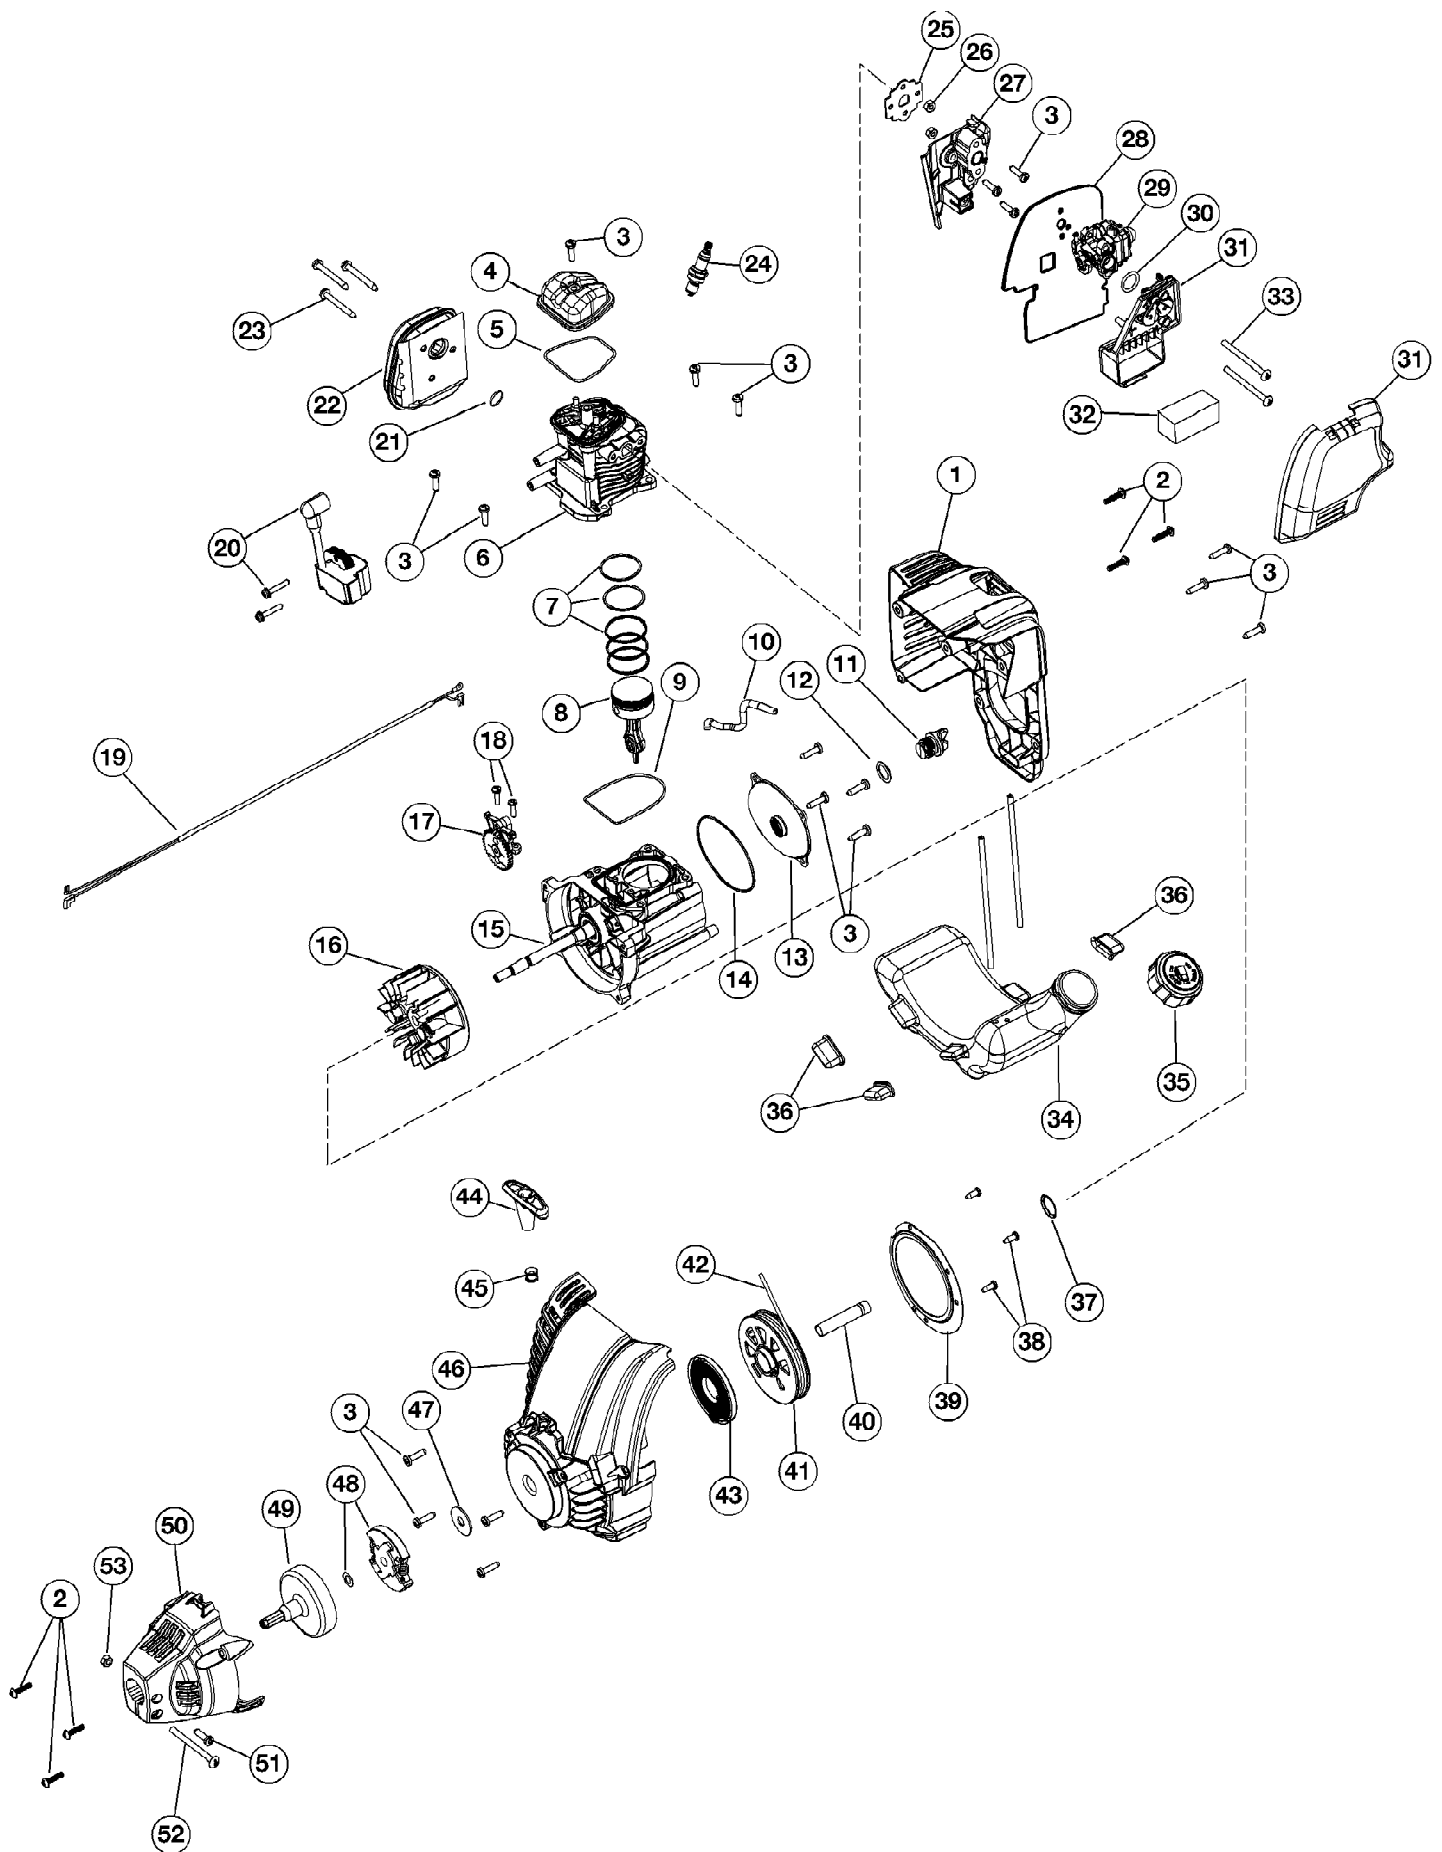

TB525CS HORSE 41ADT52C966
Engine Assembly

Page 4 of 5

Ref #	Part Number	Qty	S/P/F	Description
1	753-05206	1		Engine Cover Assembly (includes 2 & 3)
2	753-04595	1	S	Cover Screw
3	791-181003	1	/P	Screw
4	753-05209	1		Rocker Cover
5	753-05210	1	S	Rocker Cover O-Ring
6	753-05228	1		Cylinder Assembly (includes 3, 5 & 9)
7	753-05229	1		Piston Ring Assembly
8	753-05230	1		Piston Assembly (includes 7)
9	753-05232	1		Cylinder O-Ring
10	791-182379	1	/P	Breather Hose
11	753-05236	1	S	Oil Plug (includes 12)
12	791-182290	1		Oil Plug O-Ring
13	753-05237	1		Crankcase Cover
14	753-05238	1		Crankcase Cover O-ring
15	753-05239	1		Crankcase Assembly (includes 9, 10, 14 & 16)
16	753-05240	1	/P	Flywheel Assembly
16	914-04016	1	/P	Woodruff Key.125 x .375 not shown
17	753-05241	1		Cam Bracket Assembly (includes 18)
18	753-05242	1	S	Cam Bracket Screw
19	753-05264	1		Lead Wires
20	753-05243	1	S	Module Assembly
21	753-05244	1		Muffler Gasket
22	753-05245	1		Muffler Assembly (includes 21 & 23)
23	753-05246	1	S	Muffler Screw
24	753-05255	1		Spark Plug
25	753-05247	1		Insulator Gasket
26	753-05248	1	S	Nut
27	753-05249	1		Insulator
28	753-05250	1	S	Carburetor Gasket
29	753-05251	1		Carburetor w/Primer
30	791-181751	1		O-Ring
31	753-05252	1		Air Cleaner Cover Assembly (includes 32)
32	753-05254	1		Air Filter
33	753-05253	1	S	Screw
34	753-05256	1	/P	Fuel Tank Assembly w/Fuel Lines (includes 35)
35	753-1229	1		Fuel Cap
36	753-05259	1		Fuel Tank Pads
37	753-05260	1	S	Push Nut
38	753-1202	1		Pressure Plate Screw
39	753-05074	1		Pressure Plate (includes 38)
40	753-05078	1	S	Spacer
41	753-05435	1	/P	Starter Assembly (includes 42)
42	791-613103	1		Rope
43	753-04286	1		Recoil Spring
44	791-181079	1	S	Handle
45	791-611061	1		Rope Guide
46	753-05262	1		Starter Housing Assembly (includes 3 & 37-45)
47	791-182396	1	S	Washer
48	753-1238	1		Clutch & Clutch Washer

TB525CS HORSE 41ADT52C966
Engine Assembly

Page 5 of 5

Ref #	Part Number	Qty	S/P/F	Description
49	791-153592	1	/P	Clutch Drum
50	753-05263	1		Clutch Cover
51	791-182519	1		Anti-Rotation Screw
52	753-04003	1		Clamp Screw
53	791-180217	1	S	Nut
	753-05297	1	/P	Spark Arrestor Assembly Not shown
	753-05265	1	/P	Shortblock Assembly (Includes 3-12, 14, 15, 17 & 24) Not shown