


TB575SS 41BDT57C966
Engine Assembly

Page 1 of 5

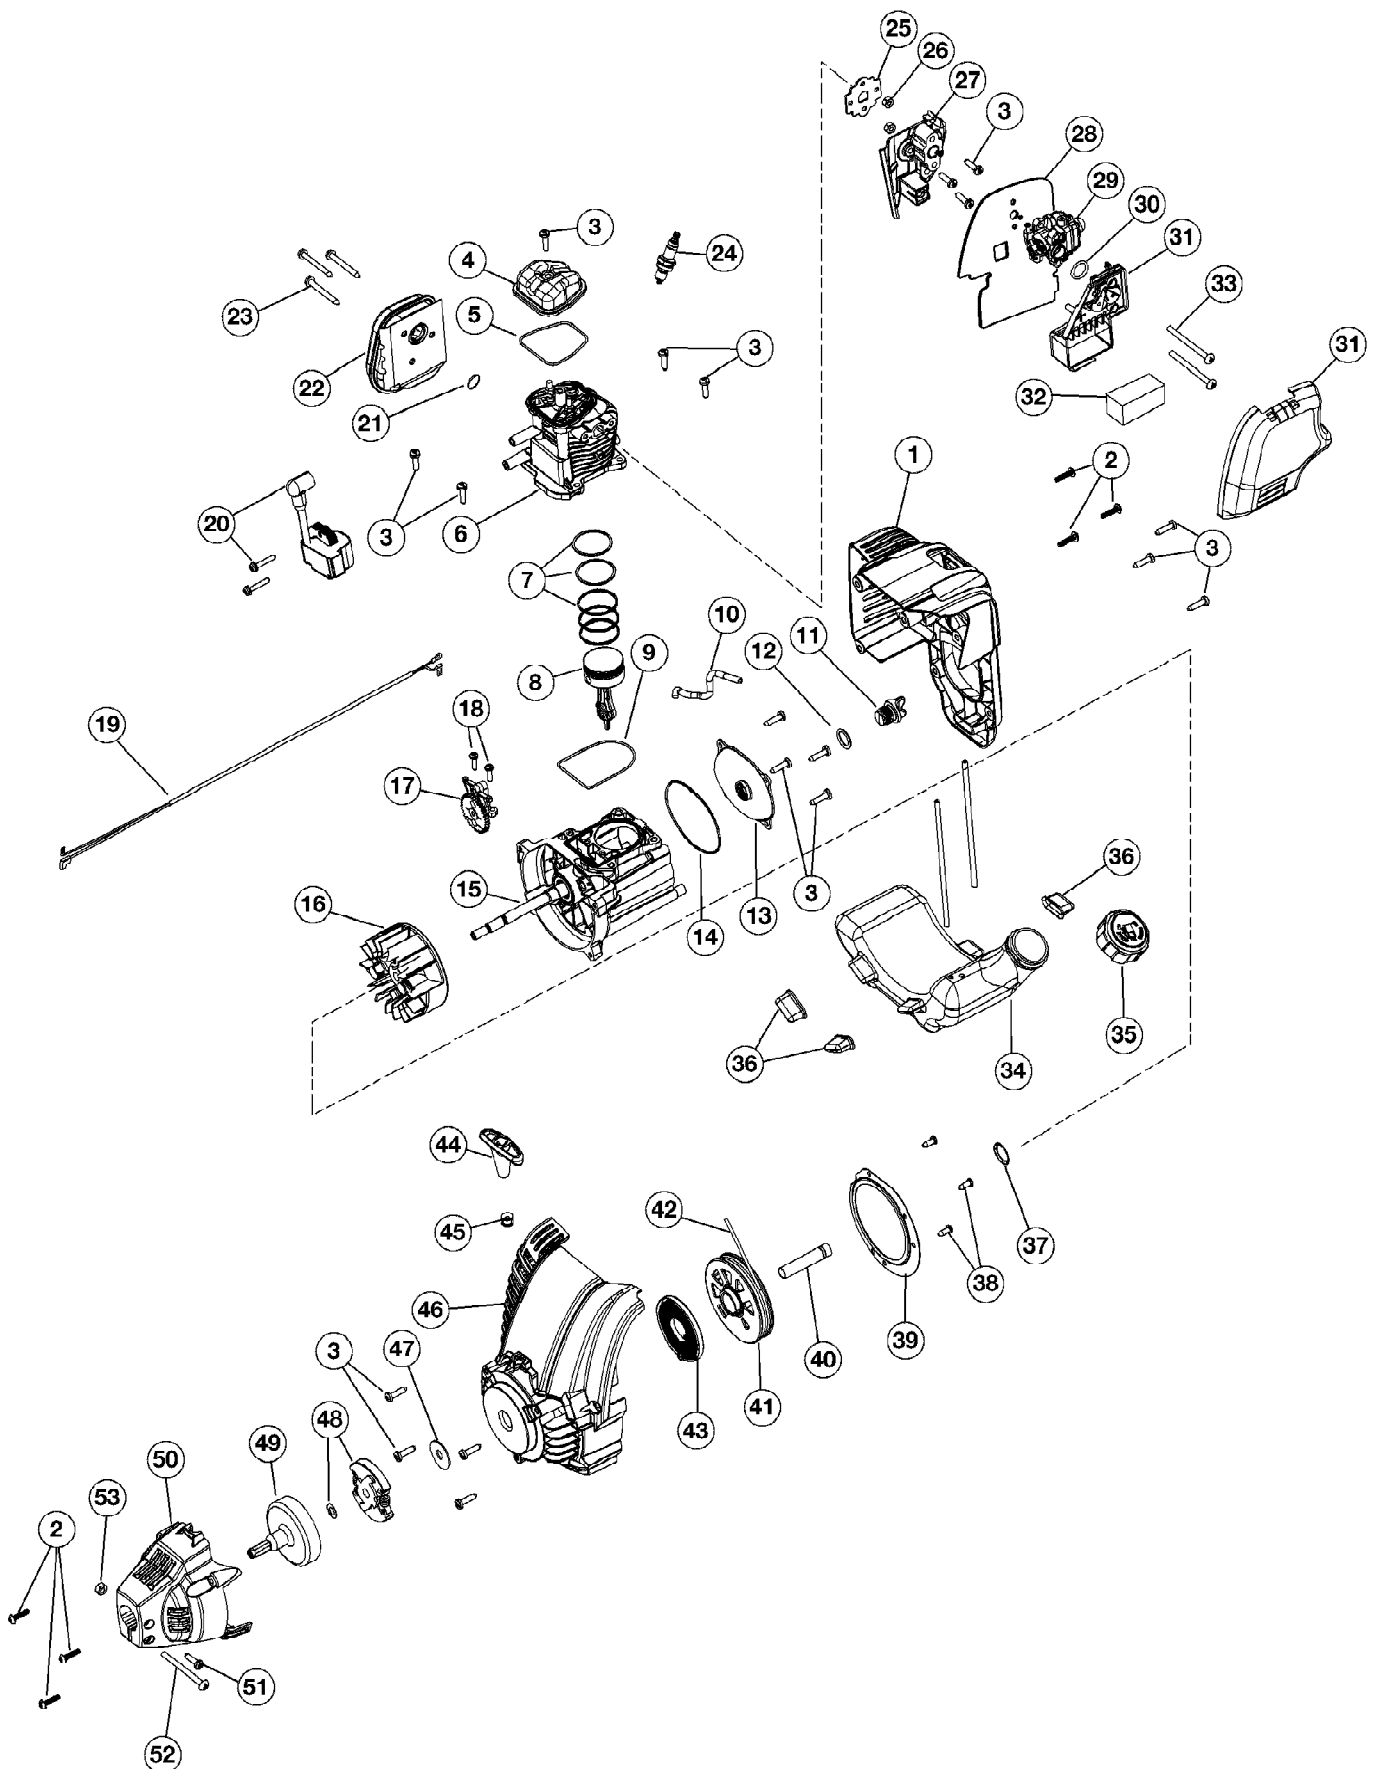

TB575SS 41BDT57C966
Engine Assembly

Page 2 of 5

Ref #	Part Number	Qty	S/P/F	Description
1	753-05206	1		Engine Cover Assembly (includes 2 & 3)
2	710-04194	1	/P	Cover Screw
3	791-181003	1	/P	Screw
4	753-05209	1		Rocker Cover
5	721-04132	1	/P	Rocker Cover O-Ring
6	753-05228	1		Cylinder Assembly (includes 3, 5 & 9)
7	753-05229	1		Piston Ring Assembly
8	753-05230	1		Piston Assembly (includes 7)
9	753-05232	1		Cylinder O-Ring
10	791-182379	1	/P	Breather Hose
11	753-05400	1		Oil Plug (includes 12)
12	791-182290	1		Oil Plug O-Ring
13	753-05237	1		Crankcase Cover
14	753-05238	1		Crankcase Cover O-ring
15	753-05239	1		Crankcase Assembly (includes 9, 10, 14 & 16)
16	753-05240	1	/P	Flywheel Assembly
16	914-04016	1	/P	Woodruff Key.125 x .375 Not shown
17	753-05241	1		Cam Bracket Assembly (includes 18)
18	710-04584	1	/P	Cam Bracket Screw
19	753-05264	1		Lead Wires
20	753-05243	1	S	Module Assembly
21	753-05244	1		Muffler Gasket
22	753-05245	1		Muffler Assembly (includes 21 & 23)
23	710-04487	1	/P	Muffler Screw
24	753-05255	1		Spark Plug
25	753-05247	1		Insulator Gasket
26	712-04099	1	/P	Nut
27	753-05249	1		Insulator
28	753-05366	1	/P	Carburetor Gasket
29	753-05251	1		Carburetor w/Primer
30	791-181751	1		O-Ring
31	753-05252	1		Air Cleaner Cover Assembly (includes 32)
32	753-05254	1		Air Filter
33	710-04517	1	/P	Screw
34	753-05256	1	/P	Fuel Tank Assembly w/Fuel Lines (includes 35)
35	753-1229	1		Fuel Cap
36	753-05259	1		Fuel Tank Pads
37	712-04096	1	/P	Push Nut
38	753-1202	1		Pressure Plate Screw
39	753-05074	1		Pressure Plate (includes 38)
40	750-04434	1	/P	Spacer
41	753-05435	1	/P	Starter Assembly (includes 42)
42	791-613103	1		Rope
43	753-04286	1		Recoil Spring
44	631-04164	1	S	Handle
45	791-611061	1		Rope Guide
46	753-05262	1		Starter Housing Assembly (includes 3 & 37-45)
47	9162-1	1	/P	Washer
48	753-1238	1		Clutch & Clutch Washer


TB575SS 41BDT57C966
Engine Assembly

Page 3 of 5

Ref #	Part Number	Qty	S/P/F	Description
49	753-05860	1	/P	Clutch Drum
50	753-05263	1		Clutch Cover
51	791-182519	1		Anti-Rotation Screw
52	753-04003	1		Clamp Screw
53	791-180217	1	S	Nut
	753-05297	1	/P	Spark Arrestor Assembly Not Shown
	753-05265	1	/P	Shortblock Assembly Not Shown (includes 3-12, 14, 15, 17 & 24)

TB575SS 41BDT57C966
General Assembly

Page 4 of 5

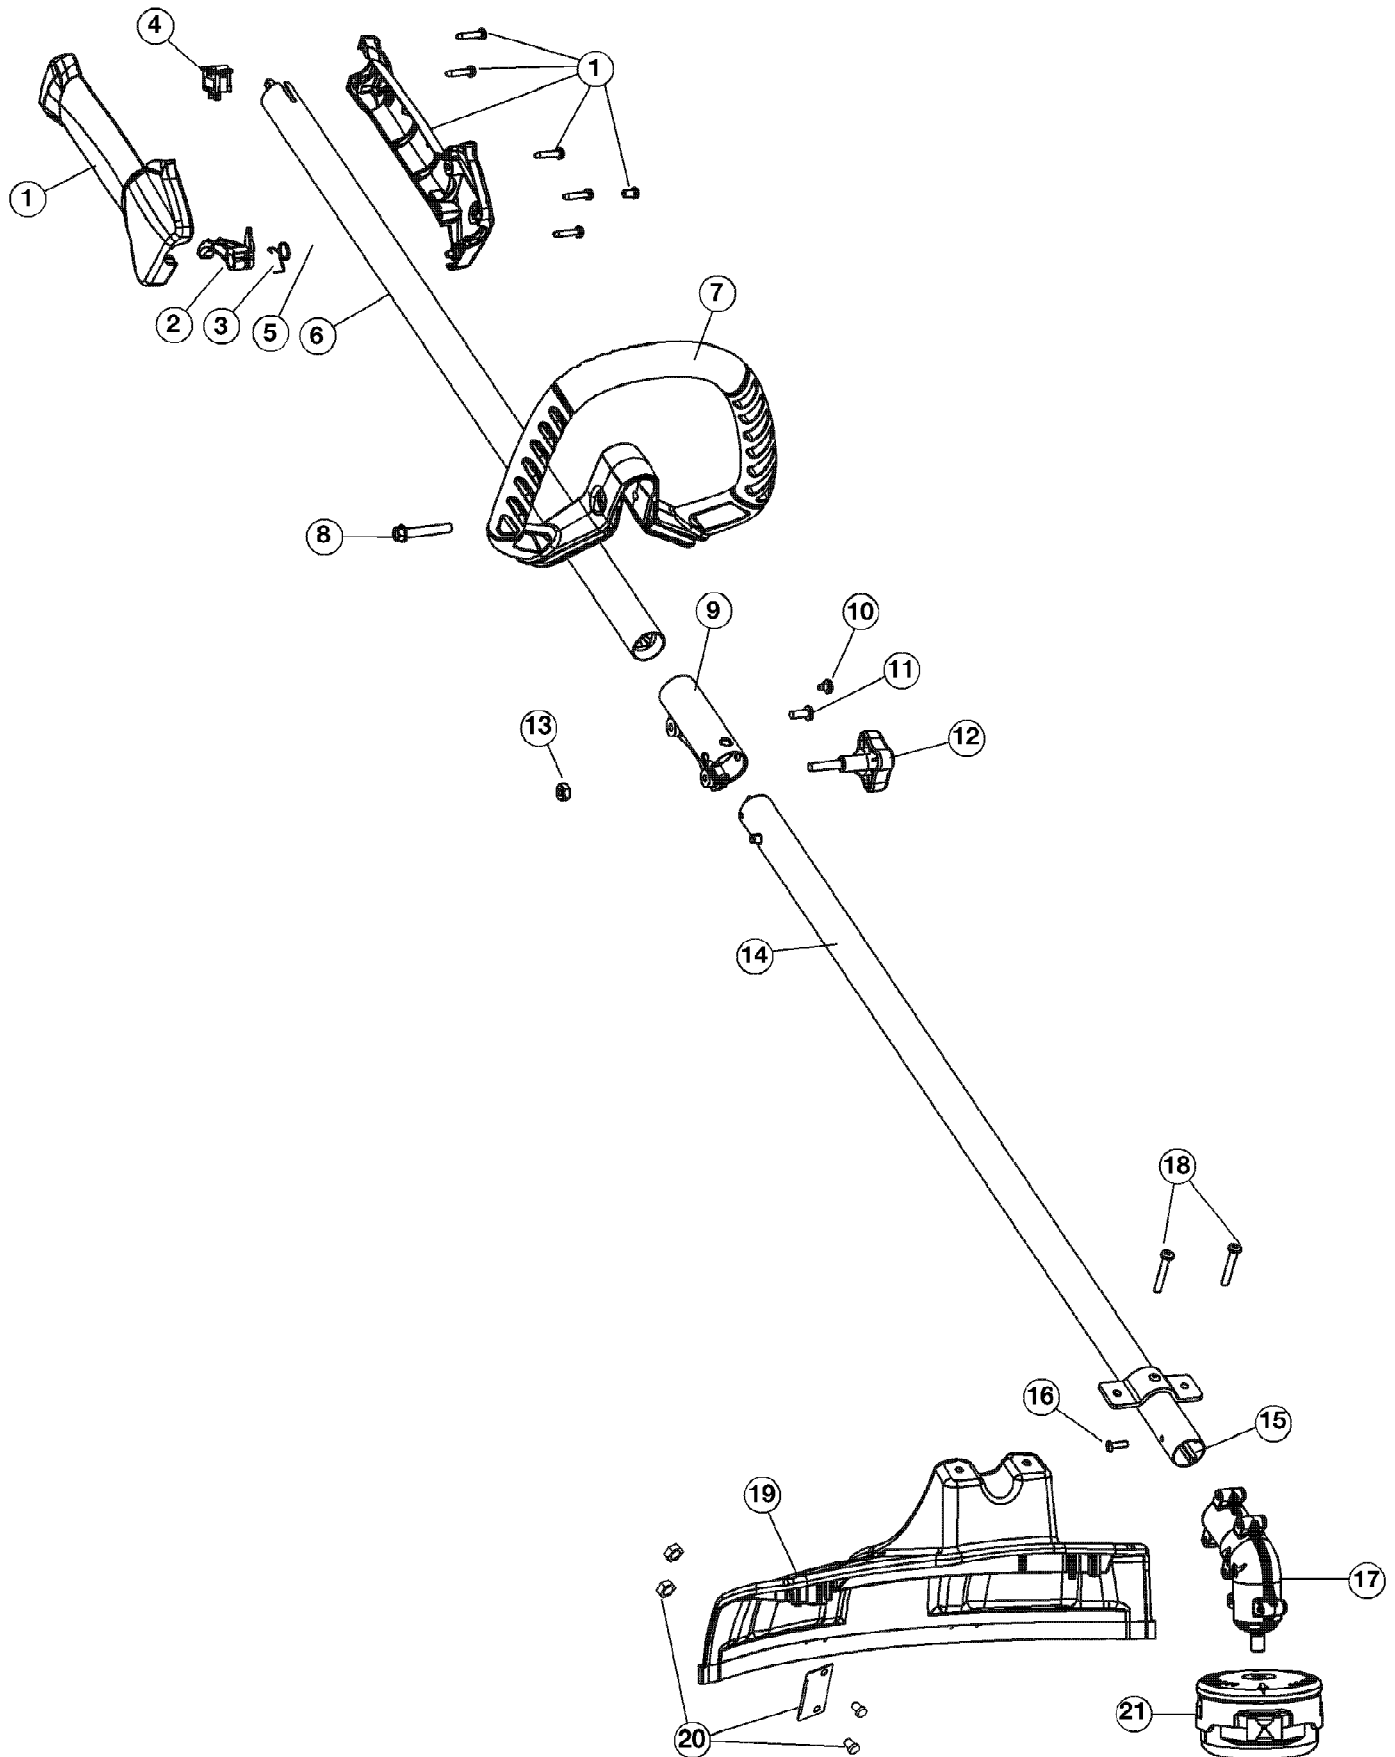

TB575SS 41BDT57C966
General Assembly

Page 5 of 5

Ref #	Part Number	Qty	S/P/F	Description
1	753-04234	1		Throttle Housing Assembly (includes 2-4)
2	753-04119	1	/P	Throttle Trigger
3	791-182690	1		Throttle Trigger Spring
4	791-182405	1	/P	Switch
5	753-05266	1		Throttle Cable Assembly
6	753-04236	1	/P	Upper Drive Shaft Housing Assembly
7	753-06039	1		Deluxe D-Handle Assembly (includes 8)
8	753-06040	1		Bolt
9	753-1190	1	/P	Split Boom Coupler (includes 10-13)
10	791-182057	1		Screw
11	791-181617	1		Bolt
12	791-181981	1		Adjustment Knob (includes 13)
13	712-04018A	1	/P	Knob Retaining Nut
14	753-04504	1	/P	Lower Drive Shaft Housing Assembly
15	753-05267	1		Lower Flexible Drive Shaft
16	7039	1	/P	Anti-Rotation Screw
17	753-06124	1		Gear Box Assembly (includes 16)
18	753-06125	1		Shield Mounting Screws
19	753-06123	1		Shield Assembly (includes 20)
20	753-06126	1		Blade Assembly
21	753-06129	1		Cutting Head Assembly
	753-06149	1		Kit, Speed Spool Not shown, Kit contains head cover, spring and 4 eyelets for 753-06129 assembly.