


TB590EC 41BDT59C966
Engine Assembly

Page 1 of 4

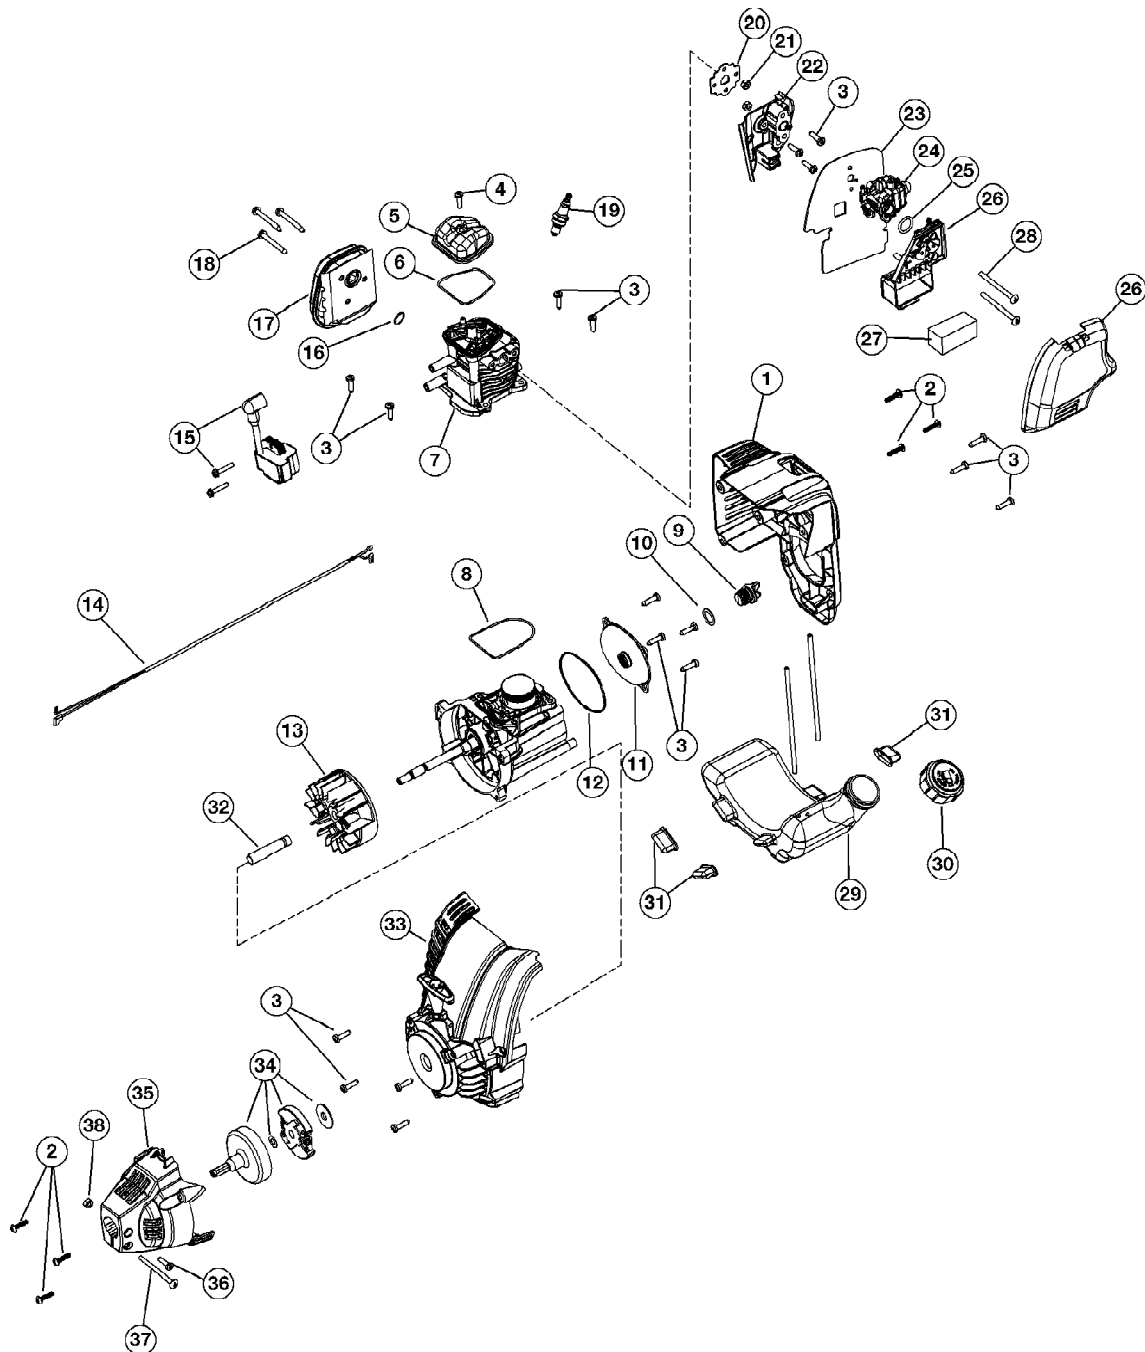


TB590EC 41BDT59C966
Engine Assembly

Page 2 of 4

Ref #	Part Number	Qty	S/P/F	Description
1	753-06134	1		Engine Cover Assembly (includes 2 & 3)
2	710-04194	1	/P	Cover Screw
3	710-04604	1	/P	Housing Screw
4	791-181025	1		Rocker Cover Screw
5	753-05209	1		Rocker Cover
6	721-04132	1	/P	Rocker Cover O-Ring
7	753-06223	1		Cylinder Assembly (includes 3-6 & 8)
8	753-05232	1		Cylinder O-Ring
9	753-05408	1	/P	Oil Plug (includes 10)
10	791-182290	1		Oil Plug O-Ring
11	753-06111	1		Crankcase Cover
12	753-05238	1		Crankcase Cover O-ring
13	753-06221	1		Flywheel Assembly
14	753-05264	1		Lead Wires
15	753-05243	1	S	Module Assembly
16	753-05244	1		Muffler Gasket
17	753-05245	1		Muffler Assembly (includes 16 & 18)
18	710-04487	1	/P	Muffler Screw
19	794-00043	1	/P	Spark Plug
20	753-05247	1		Insulator Gasket
21	712-04099	1	/P	Nut
22	753-05249	1		Insulator
23	753-05366	1	/P	Carburetor Gasket
24	753-06220	1		Carburetor
25	791-181751	1		O-Ring
26	753-05252	1		Air Cleaner Cover Assembly (includes 27)
27	753-05254	1		Air Filter
28	710-04517	1	/P	Screw
29	753-06240	1		Fuel Tank Assembly w/Fuel Lines (includes 30)
30	753-1229	1		Fuel Cap
31	753-05259	1		Fuel Tank Pads
32	750-04434	1	/P	Spacer
33	753-06226	1		Starter Housing Assembly (includes 3)
34	753-06281	1		Clutch Drum Assembly
35	753-05263	1		Clutch Cover (includes 2)
36	791-182519	1		Anti-Rotation Screw
37	753-04003	1		Clamp Screw
38	712-0161	1	/P	Nut
	753-05297	1	/P	Spark Arrestor Assembly Not shown
	753-06225	1		Shortblock Assembly Not shown (includes 3-8, 13, 15 & 19)

TB590EC 41BDT59C966
General Assembly

Page 3 of 4

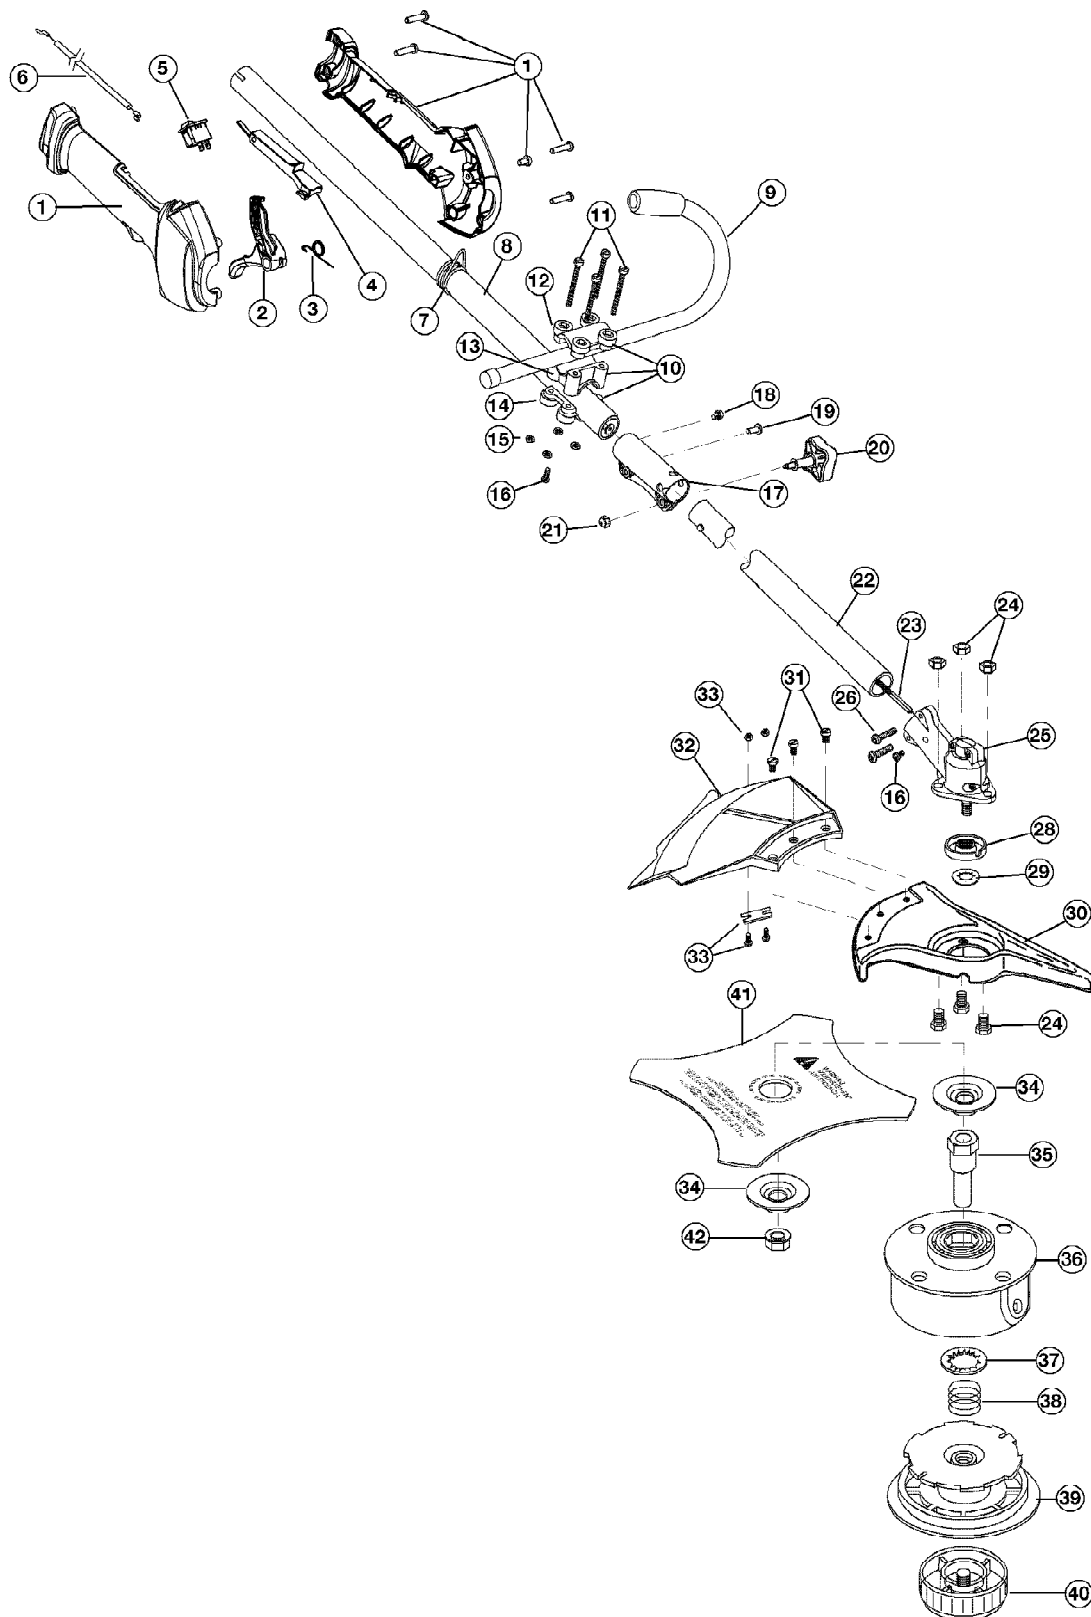

TB590EC 41BDT59C966
General Assembly

Page 4 of 4

Ref #	Part Number	Qty	S/P/F	Description
1	753-05192	1		Throttle Housing Assembly (includes 2-5)
2	731-04970A-2	1	/P	Throttle Trigger
3	753-05007	1	/P	Throttle Trigger Spring
4	731-04971-2	1	S	Throttle Trigger Lock-Out
5	791-182405	1	/P	Switch Assembly
6	753-05270	1		Throttle Cable Assembly
7	791-610327	1		Harness Clip
8	753-04236	1	/P	Upper Drive Shaft Housing Assembly
9	791-181099	1		J-Handle Assembly
10	791-683295	1		Handle Bracket Assembly (includes 11-16)
11	791-181811	1		Screw
12	791-181812	1		Upper Handle Clamp
13	791-181813	1		Middle Handle Clamp
14	791-181814	1		Lower Handle Clamp
15	791-181815	1		Nut
16	791-182519	1		Anti-Rotation Screw
17	753-1190	1	/P	Split Boom Coupler (includes 18-21)
18	791-182057	1		Screw
19	791-181617	1		Bolt
20	791-181618B	1	/P	Adjustment Knob
21	712-04018A	1	/P	Knob Retaining Nut
22	753-04504	1	/P	Lower Drive Shaft Housing Assembly
23	753-05267	1		Lower Flexible Drive Shaft
24	791-182200	1		Shield Mount Screw Assembly
25	791-182193	1	/P	Gearbox Assembly (includes 16 & 26-28)
26	791-182195	1		Gearbox Mounting Hardware
28	791-182196	1		Spacer, Gearbox
29	753-04348	1	/P	Palnut
30	791-147492	1		Blade Shield/Shield Mount
31	791-683304	1		Shield Mounting Screw
32	753-1191	1		Shield Assembly (includes 33)
33	791-682061	1		Blade Assembly
34	791-147490	1		Retaining Washer
35	791-612483	1		Spool Shaft
36	791-683301	1		Outer Spool Assembly
37	791-612026	1		Retainer
38	791-610636B	1	/P	Spring
39	791-147495	1		Inner Reel
40	791-180814B	1	/P	Bump Head Knob Assembly
41	791-145873B	1	/P	4-Tooth Blade
42	712-04105	1	/P	Nut
	791-180014B	1		Blade Retaining Kit Not Shown
	791-613226	1		Locking Rod Tool Not Shown
	791-682075B	1	/P	Shoulder Harness Not Shown
	753-04216	1		Replacement Line, 0.105 Diameter Not Shown, Accessories
	753-1224	1	/P	Reel and Line Assembly Not Shown, Accessories
	753-1161	1	/P	Bump Head Assembly (includes 36-40) (includes 36-40) Not Shown, Accessories