


TB6040XP 41CD604C966
Engine Assembly

Page 1 of 4

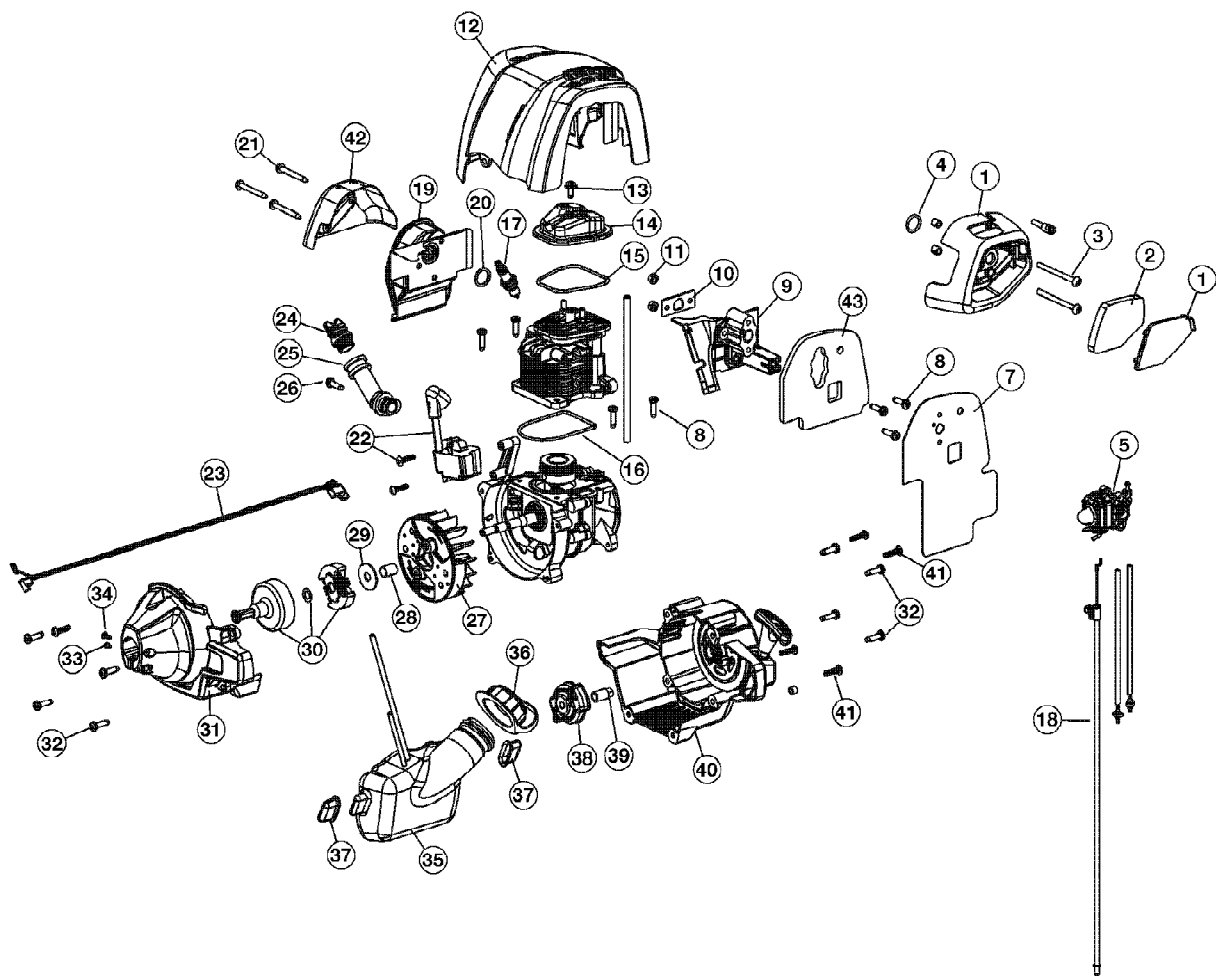


TB6040XP 41CD604C966
Engine Assembly

Page 2 of 4

Ref #	Part Number	Qty	S/P/F	Description
1	753-06084	1		Aircleaner Assembly (includes 2 & 3)
2	753-06085	1		Air Filter
3	710-04517	1	/P	Screw
4	791-181751	1		Carburetor O-Ring
5	753-06083	1		Carburetor Assembly w/ Fuel Lines
7	753-06082	1		Carburetor Baffle
8	791-181003	1	/P	Screw
9	753-05904	1		Insulator
10	753-05673	1		Insulator Gasket
11	712-04099	1	/P	Nut
12	753-06107	1		Engine Cover
13	791-181025	1		Screw
14	753-05901	1		Valve Cover
15	753-05902	1		Valve O-Ring
16	753-05910	1		Cylinder O-Ring
17	794-00043	1	/P	Spark Plug
18	753-06166	1		Throttle Cable
19	753-06080	1		Muffler Assembly
20	753-05244	1		Muffler Gasket
21	710-04487	1	/P	Muffler Bolt
22	753-05907	1		Module Assembly
23	753-06167	1		Lead Wires
24	753-05400	1		Oil Plug Assembly
25	753-06087	1		Oil Fill Tube Assembly (includes 25)
26	710-04604	1	/P	Screw
27	753-05815	1		Flywheel
28	753-05814	1		Spacer
29	9162-1	1	/P	Clutch Washer
30	753-05860	1	/P	Clutch Assembly
31	753-06094	1		Clutch Cover Assembly
32	710-04604	1	/P	Screw
33	791-182519	1		Anti-rotation Screw
34	753-04291	1		Clamp Screw & Nut
35	753-06093	1		Fuel Tank (includes 35)
36	753-05289	1		Fuel Cap
37	753-05259	1		Fuel Tank Pad
38	753-06091	1		Pawl Assembly
39	753-06104	1		Electric Start Adapter
40	753-06108	1		Starter Cover Assembly
41	710-04194	1	/P	Screw
42	753-06101	1		Muffler Shield
43	753-06122	1		Carburetor Heat Shield
	753-06088	1		Short Block Assembly Not shown

TB6040XP 41CD604C966
General Assembly

Page 3 of 4

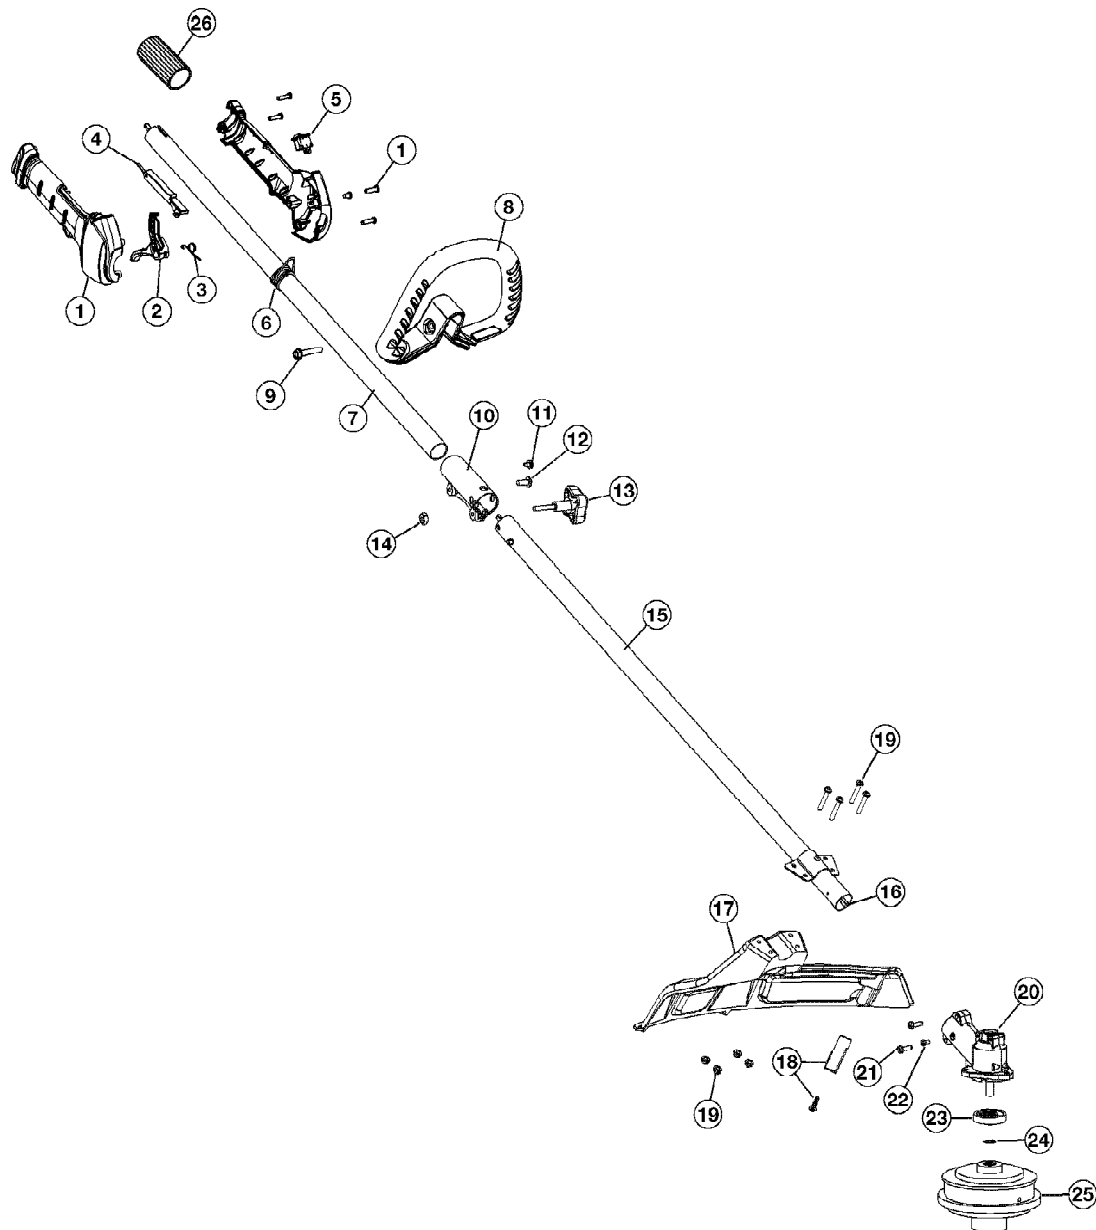

TB6040XP 41CD604C966
General Assembly

Page 4 of 4

Ref #	Part Number	Qty	S/P/F	Description
1	753-05192	1		Throttle Housing Assembly (includes 2-5)
2	731-04970A-2	1	/P	Throttle Trigger
3	753-05007	1	/P	Spring
4	731-04971-2	1	S	Throttle Lock-out
5	791-182405	1	/P	Switch
6	791-610327	1		Shoulder Strap Clip
7	753-04236	1	/P	Upper Drive Shaft Housing Assembly
8	753-06039	1		D-Handle Assembly (includes 9)
9	753-06040	1		Bolt
10	753-1190	1	/P	Split Boom Coupler (includes 11-14)
11	791-182057	1		Coupler Anti-Rotation Screw
12	791-181617	1		Screw
13	791-181618B	1	/P	Adjustment Knob
14	712-04018A	1	/P	Knob Retaining Nut
15	753-06139	1		Lower Drive Shaft Housing Assembly (includes 16)
16	753-05267	1		Lower Flexible Drive Shaft
17	753-05820	1		Shield Assembly (includes 18)
18	753-05821	1		Blade Assembly
19	753-05822	1		Shield Mounting Screw & Nut
20	791-182193	1	/P	Gearbox
21	791-182195	1		Gearbox Mounting Hardware
22	791-145569	1	/P	Anti-Rotation Screw
23	791-182196	1		Blade Driver
24	753-04348	1	/P	Palnut
25	796-00072	1		Cutting Head Assembly
26	753-06168	1		Grip Spacer