



PTO RELAY		
CAV:	CIR:	COLOR:
1	55C	YEL/BLK
2	90D	RED
3	10A	GRN
4	121	WHT
5	130	WHT/BLK


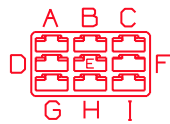


PTO SWITCH		
CAV:	CIR:	COLOR:
A	90F	RED
B	55A	YEL/BLK
C	60B	ORG/WHT
D	140	BLU/WHT
E	130	WHT/BLK
F	N/C	N/C
G	N/C	N/C
H	N/C	N/C
I	70C	ORG/BLK

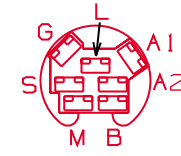

KEY SWITCH		
CAV:	CIR:	COLOR:
A1	90E	RED
G	10B	GRN
L	10F	GRN
A2	190	PUR
S	80C	ORG
B	97C	RED/WHT
M	30C	YEL


KEY SWITCH FUNCTION		
POSITION	CONNECTED	CONNECTED
OFF	G + M + A1	
RUN 1	B + A1	L + A2
RUN 2	B + A1	
START	B + S + A1	

 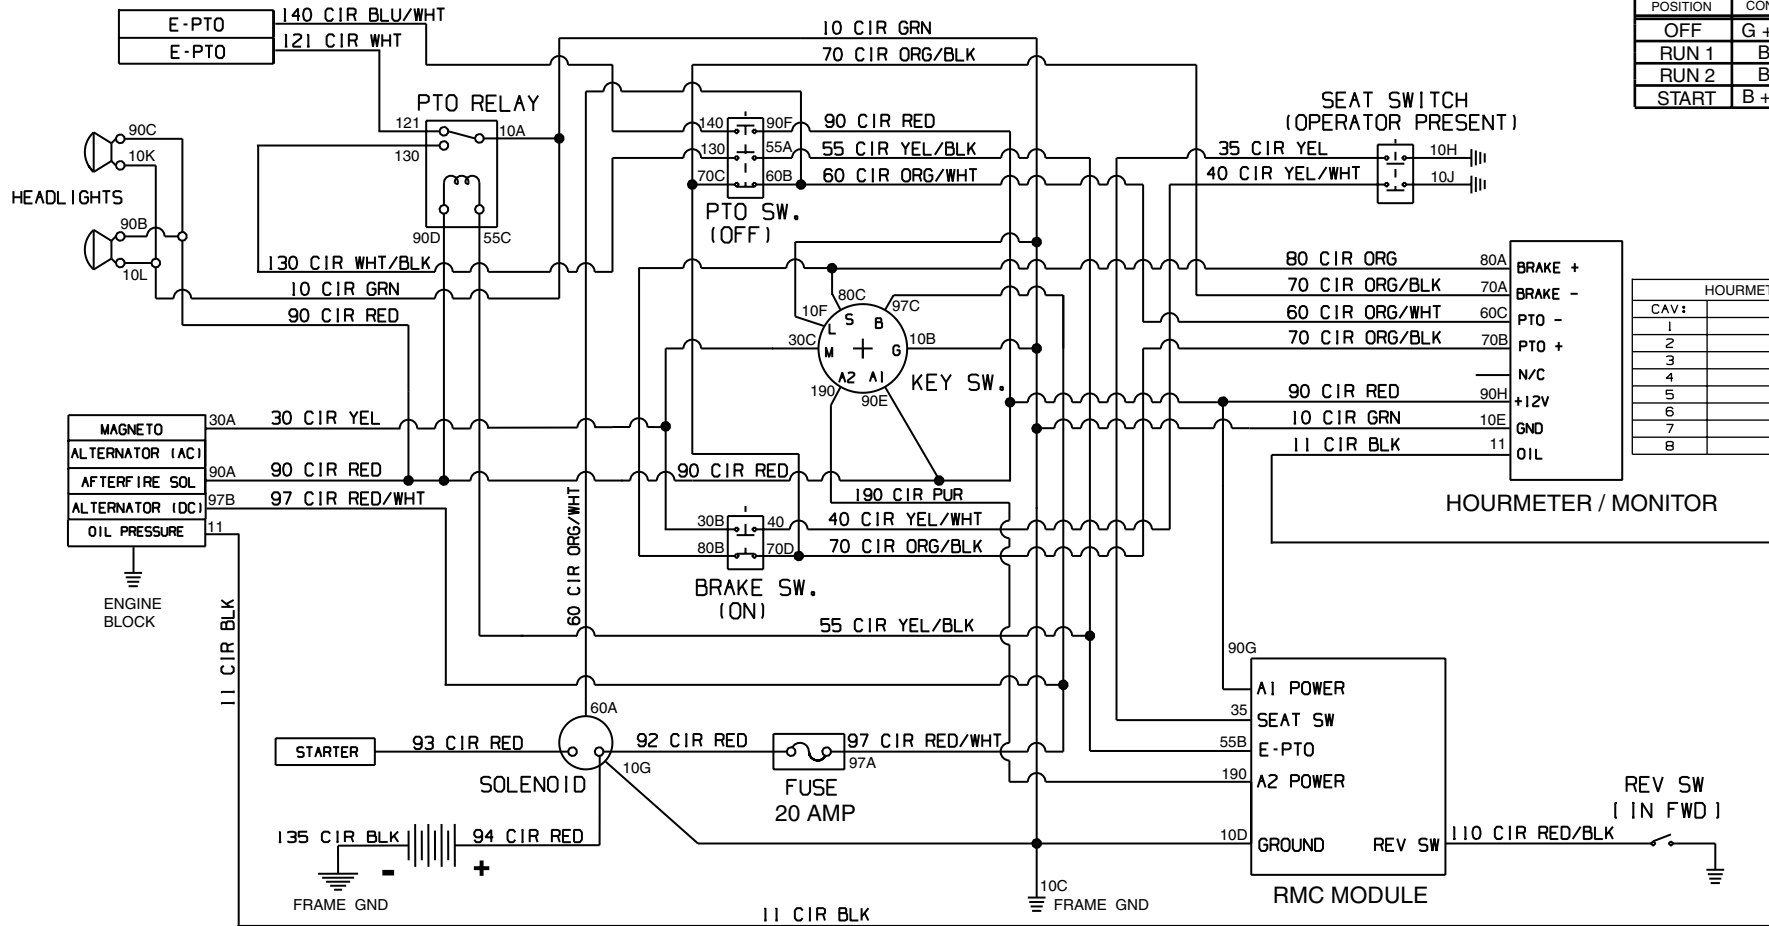

ENG. CONN.		
CAV:	CIR:	COLOR:
1	97B	RED/WHT
2	30A	YEL
3	90A	RED
4	N/C	N/C
5	11	BLK
6	N/C	N/C



BRAKE SW.		
CAV:	CIR:	COLOR:
A	N/A	N/A
B	40	YEL/WHT
C	70D	ORG/BLK
D	30B	YEL
E	80B	ORG

 

RMC MODULE		
CAV:	CIR:	COLOR:
1	90G	RED
2	35	YEL
3	190	PUR
4	N/C	N/C
5	N/C	N/C
6	55B	YEL/BLK
7	110	RED/BLK
8	10D	GRN

1. Connectors are viewed from the wire entry side unless otherwise noted.
2. Refer to the unit's correct model year Operator's Manual IPL for the electrical component part numbers.

725-04734B
725-04734