


13AP616P790 LT-950H (2006)
Deck Assembly

Page 1 of 19

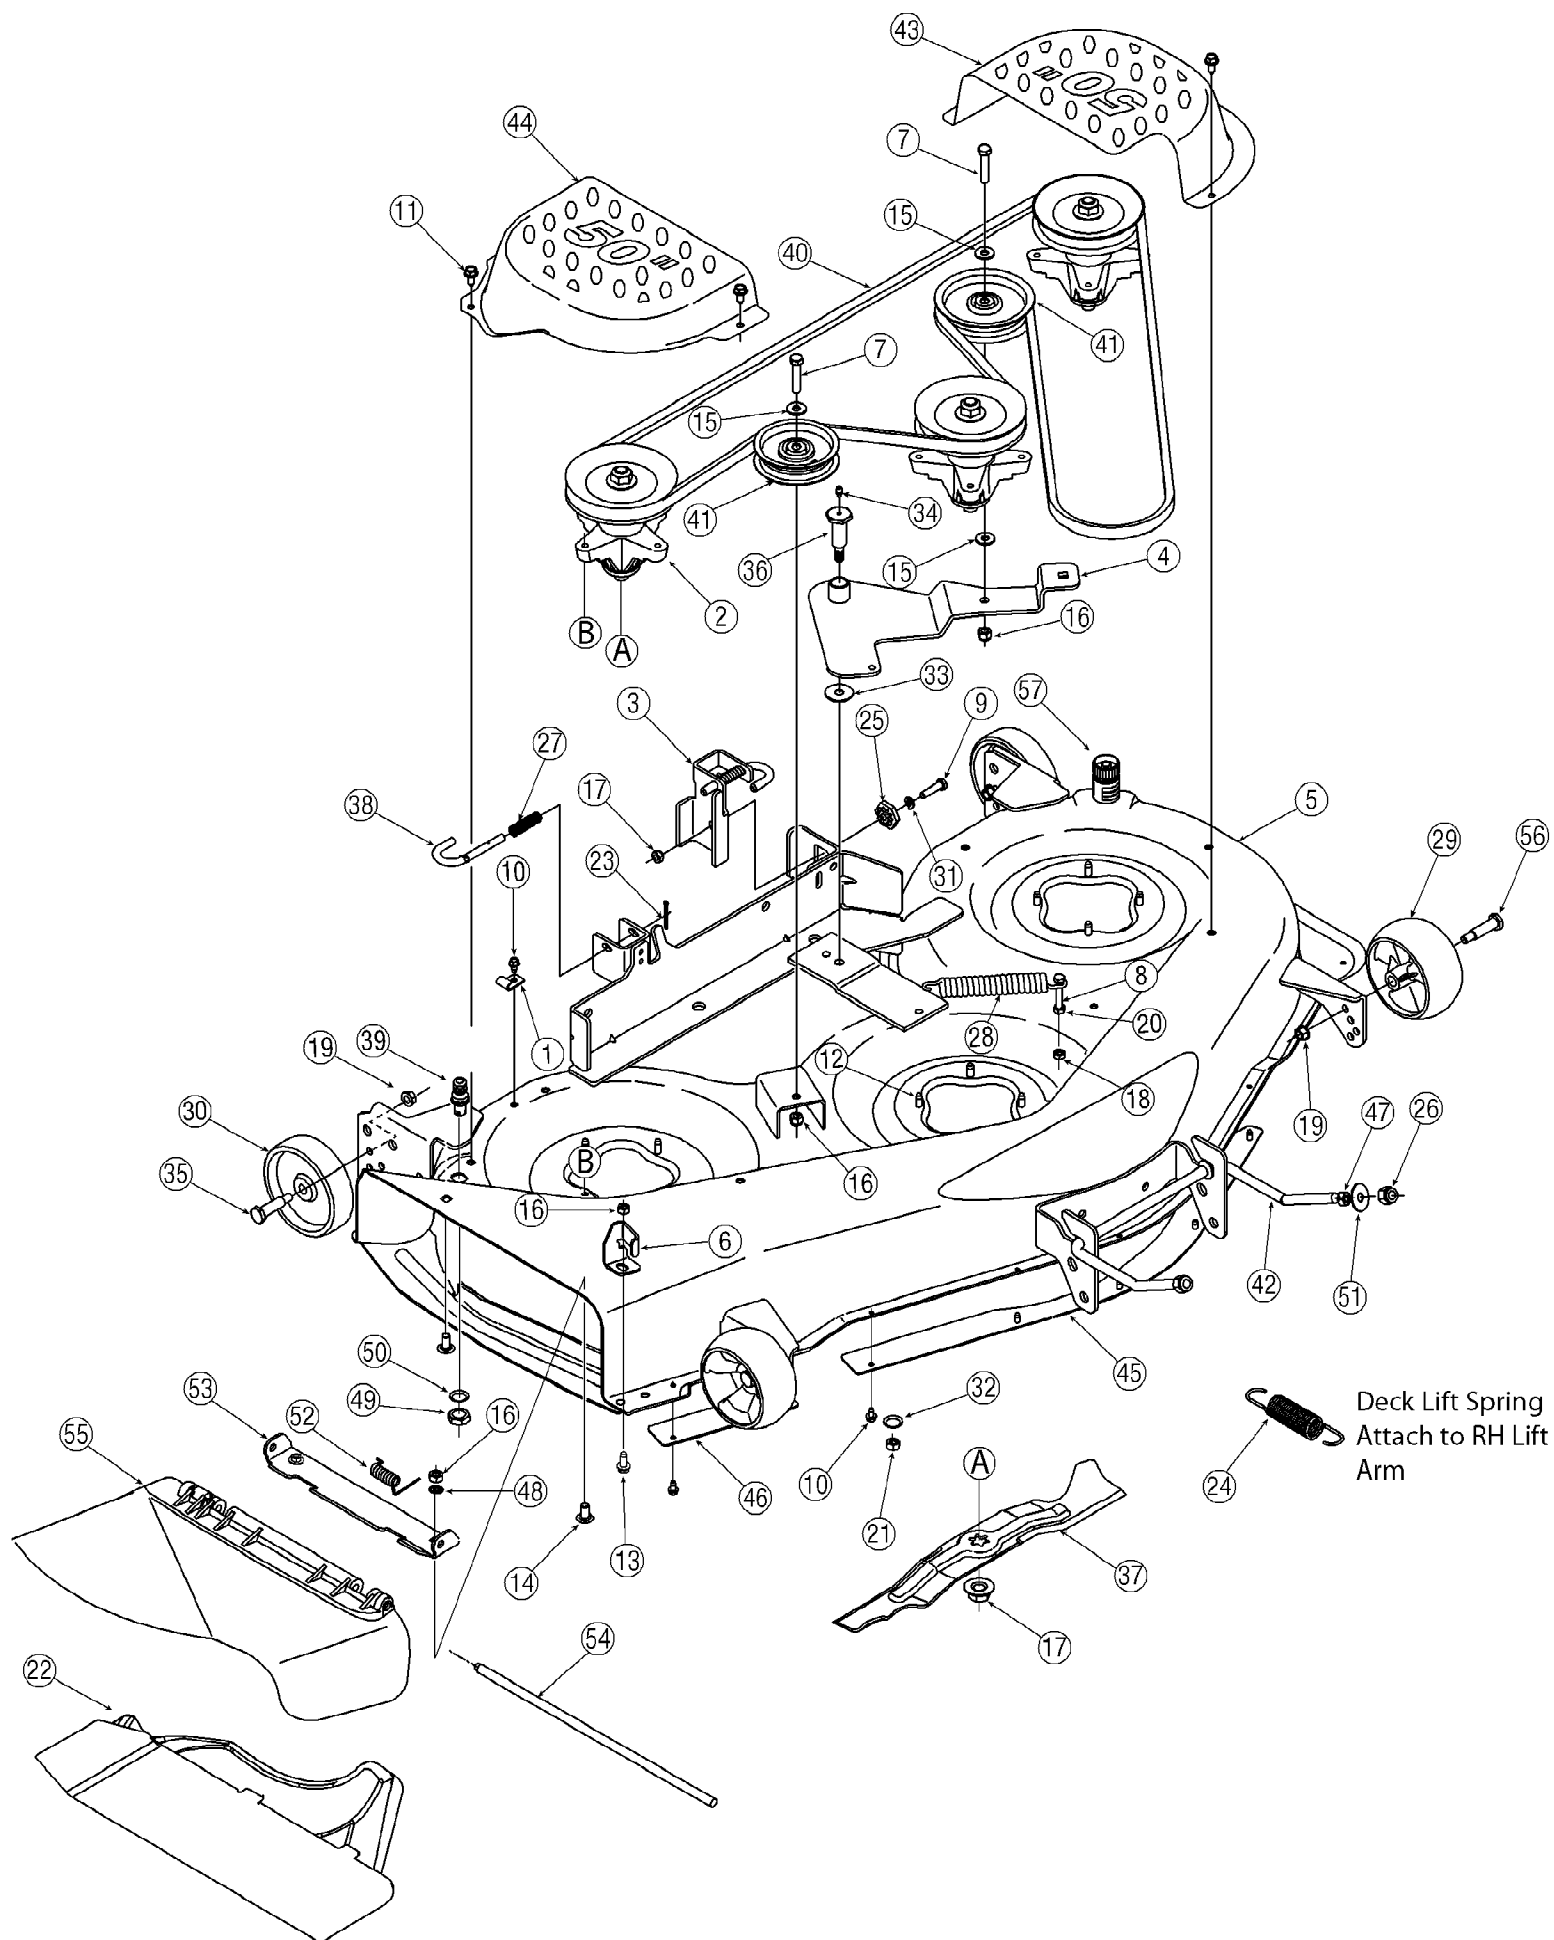

13AP616P790 LT-950H (2006)
Deck Assembly

Page 2 of 19

Ref #	Part Number	Qty	S/P/F	Description
1	16606	1	S	Hook, Retainer
2	618-04125	1	S	Spindle Assembly
2	756-1171	1		Pulley, 5.39" Not shown
2	741-0919	1	S	Ball Bearing, .787 x 1.85 x .551 Not shown
2	738-1010A	1	/P	Shaft, Spindle, 5.75 Not shown
2	750-1349A	1	/P	Spacer, 79 x 1.84 x .55 lower Not shown
2	736-0315	1	/P	Washer, Flat, .760 x 1.5 x .120 Not shown
2	712-0417A	1	/P	Nut, Hex, Flange, 5/8-18 Not shown
2	750-1000	1		Spacer:.80 x 1.10 x 1.322 Not shown
3	683-0254B	1	/P	Hanger Bracket Assembly
4	683-04098	1		Idler Bracket
5	683-04075	1	S	Weldment, 50-inch Deck
6	703-3279	1		Chute Stop
7	710-0347	1	/P	Screw, 3/8-16, 1.75
8	710-3103	1	/P	Screw, 5/16-18 x 2.00
9	710-0528	1	/P	Screw, 5/16-18, 1.25, Gr5
10	710-0599	1	/P	Screw, 1/4-20 x 0.5
11	710-0607	1	/P	Screw, 5/16-18 x.500
12	710-1260A	1	/P	Screw, 5/16-18 x.75
13	710-04095	1		Hex Head Screw, 3/8-16 x 1.0
14	710-3178	1	/P	Screw, Carriage, 3/8-16 x.75
15	736-0300	1	S	Washer, Flat,.406 x.875 x. .059
16	712-04065	1	/P	Nut, Nylon Lock, 3/8-16
17	712-0417A	1	/P	Nut, Hex, Flange, 5/8-18
18	712-04063	1	/P	Nut, Nylon Lock, 5/16-18
19	712-0431	1	S	Nut, Flange Lock, 3/8-16
20	712-3010	1	S	Nut, Hex, 5/16-18, Gr5
21	712-3019	1	S	Nut, 7/16-14
22	731-04651	1		Mulch Plug
23	714-0470	1	S	Pin, Cotter, 1/8 x 1.25
24	732-0934	1		Extension Spring, 1.15 Dia.
25	717-04074	1	S	Deck Adjustment Gear
26	712-3083	1	/P	Lock Nut, Hex, 1/2-13,
27	732-0306A	1	S	Spring, Compression,.531 x 1.75
28	732-0459B	1	S	Spring, Extension,.94 x 6.74
29	734-04155	1		Deck Wheel, 5.0
30	734-0973	1	/P	Deck Wheel, 5.0
31	736-0119	1	S	Washer, Lock, 5/16, Regular
32	736-0407	1		Washer, Bell,.45 x 1.0 x. .062
33	736-0406	1	S	Washer, Flat,.442 x 1.38 x .060
34	737-3000	1	S	Fitting, Lube, 3/16
35	738-0373	1	S	Shoulder Screw 3/8-16
36	738-3005A	1	S	Screw, Shoulder,.68 x 1.59
37	742-04053A	1	S	Blade
38	747-1116	1	/P	Rod, Handle, Deck Release
39	737-04003C	1	S	Deck Water Nozzle
40	754-04077	1	S	Belt, V-Type, Aramid
41	756-04129	1	S	Pulley, Idler, 3.5"
42	747-1324	1		Rod, Deck Adjustment
43	783-04399	1		LH Belt Cover
44	783-04400	1		RH Belt Cover
45	783-04414	1	S	Deck Skirt, Center
46	783-04415	1		Deck Skirt, Right


13AP616P790 LT-950H (2006)
Deck Assembly

Page 3 of 19

Ref #	Part Number	Qty	S/P/F	Description
47	712-0206	1	S	Hex Nut, 1/2-13
48	712-0229	1		Push Nut, 3/8
49	712-0641	1	S	Hex Nut, M16-1.5
50	736-0760	1	S	Lock Washer
51	736-3084	1	/P	Flat Washer, .51 x 1.12 x .06
52	732-3070	1	S	Torsion Spring, .44ID x 2.10
53	783-04470	1	/P	Chute Bracket
54	711-1762	1		Hinge Pin
55	731-3131A	1	S	Chute Deflector
55	631-04070	1	S	Chute Assembly (Incl. Ref.# 52-55)
56	738-3056	1	S	Shoulder Screw 1/2 x 2.5
57	721-04041	1	S	Water Nozzle Adapter

13AP616P790 LT-950H (2006)
Drive and Rear Wheels

Page 4 of 19

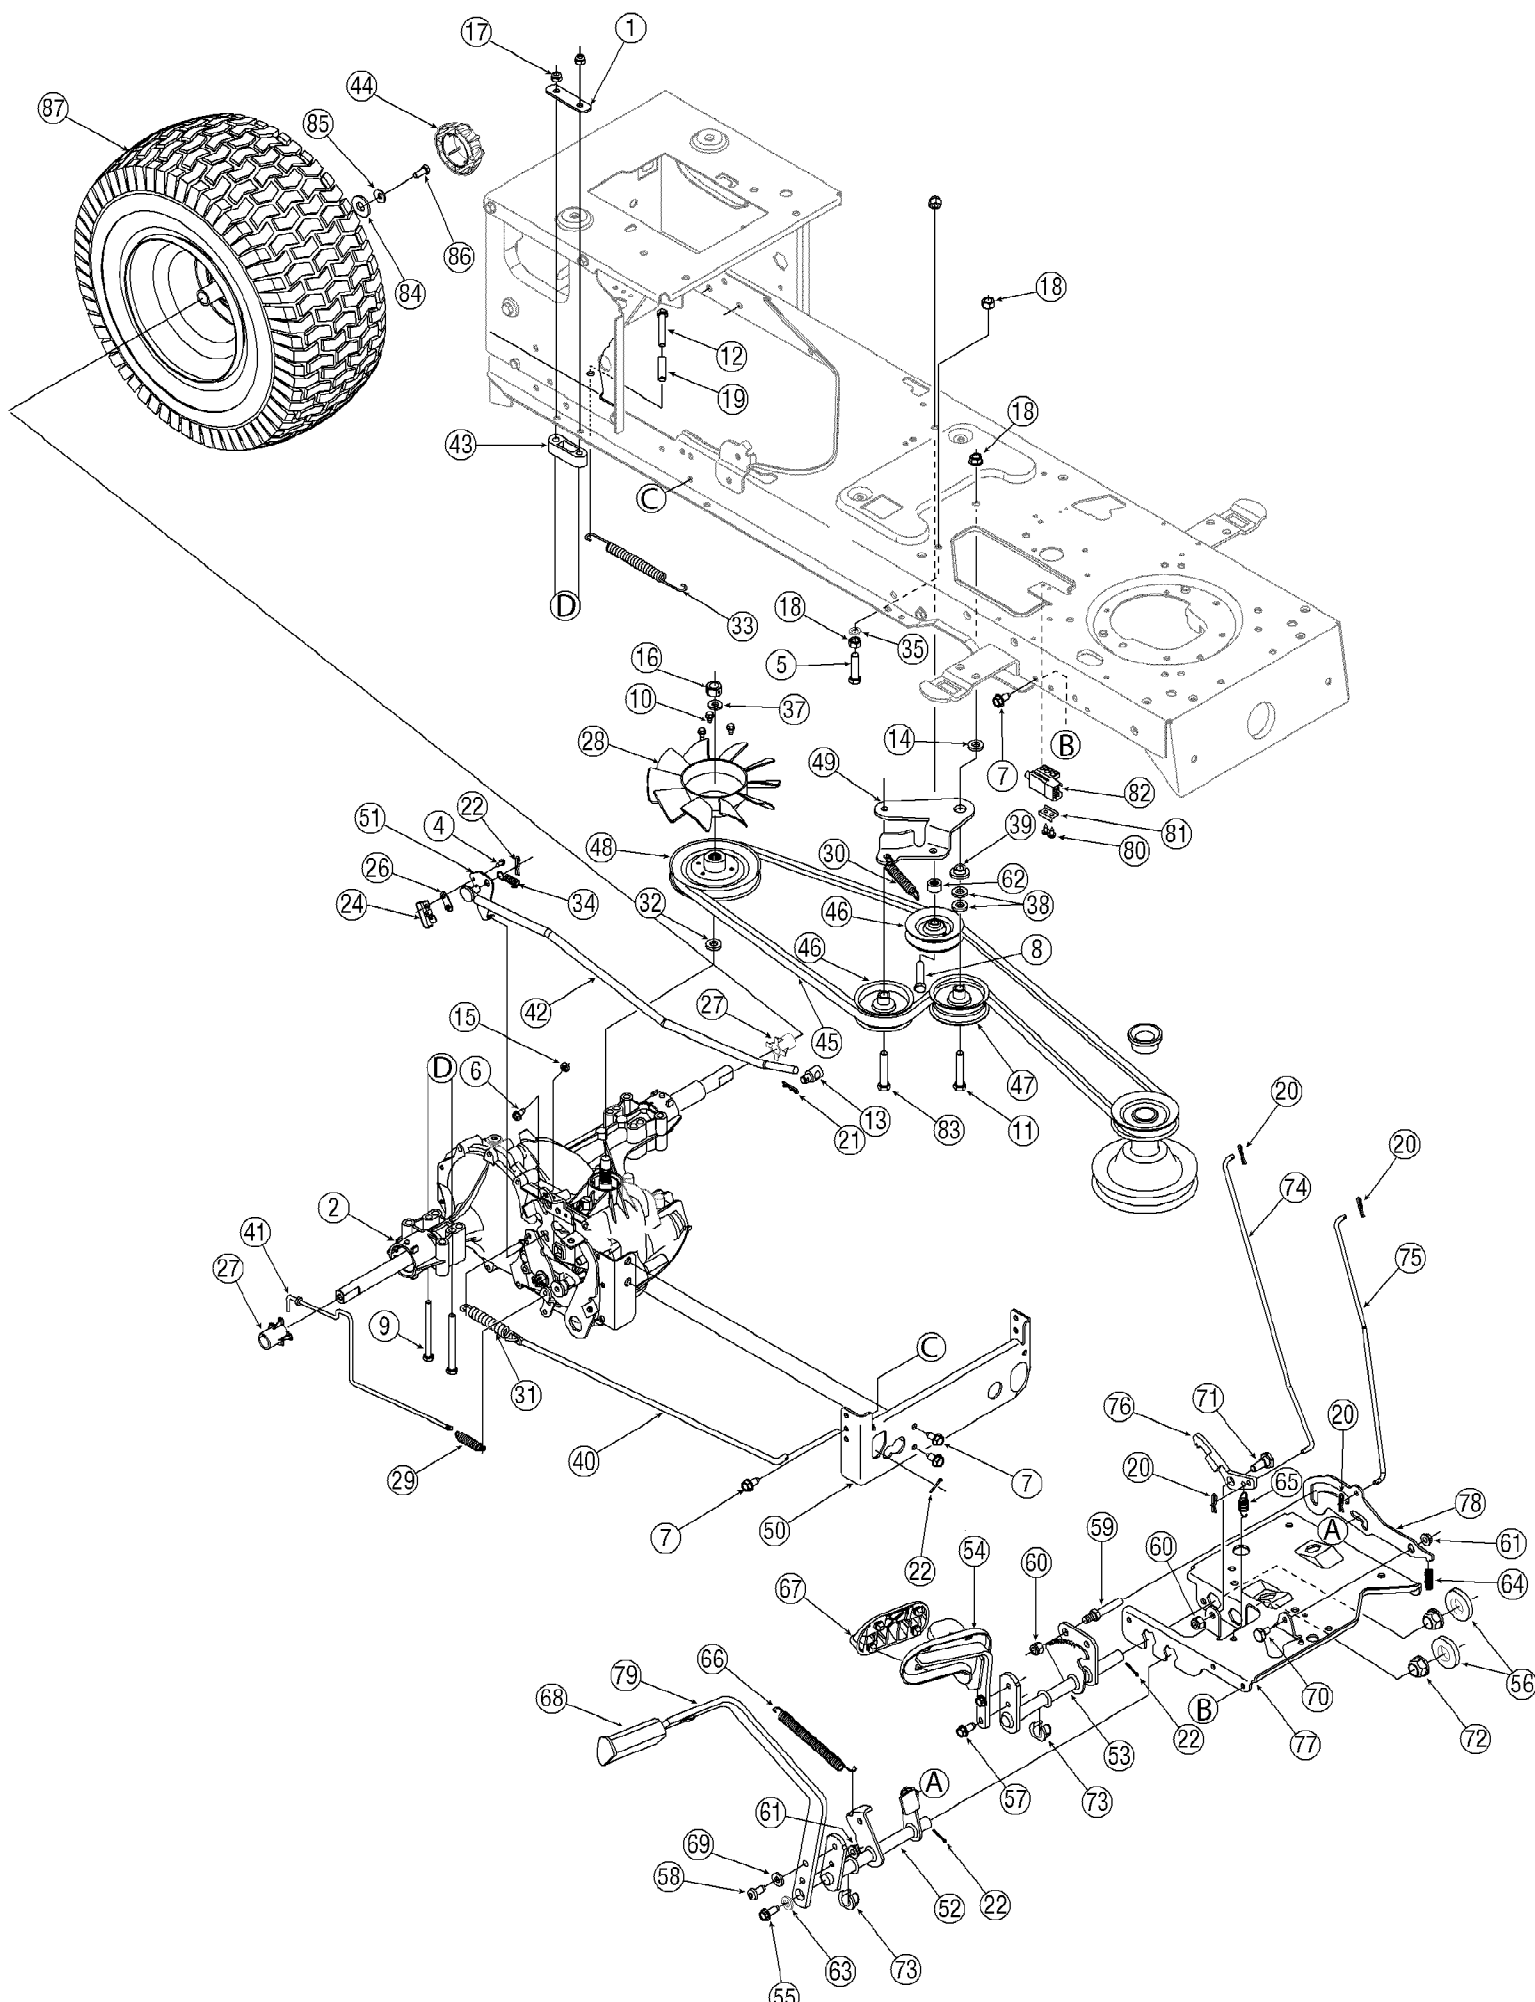

13AP616P790 LT-950H (2006)
Drive and Rear Wheels

Page 5 of 19

Ref #	Part Number	Qty	S/P/F	Description
1	17840	1	S	Transmission Mounting Bracket
2	618-0319	1	S	Hydrostatic Transmission
3	629-0949A	1		Harness Assembly
4	710-0227	1	/P	AB Screw #8-18 x 0.5
5	710-0520	1	/P	Hex Bolt 3/8-16 x 1.5
6	710-0599	1	/P	TT Screw 1/4-20 x 0.5
7	710-0726	1	/P	AB Screw 5/16-12 x 0.75
8	710-0502A	1	/P	TT Sems Screw 3/8-16 x 1.250
9	710-1266	1	/P	Hex Bolt 5/16-18 x 3.5
10	710-3007	1	/P	Carriage Screw
11	710-3011	1	/P	Hex Bolt 3/8-16 x 2.25
12	710-0778	1	/P	Screw, 1/4-20 x 1.50
13	711-0832	1	S	Ferrule
14	736-0258	1	/P	Flat Washer,.385 x 1.0 x .135
15	712-0291	1	S	Hex Lock Nut 1/4-20
16	712-3066	1	S	Hex Nut, 1/2-20
17	712-04063	1	/P	Flange Lock Nut, 5/16-18
18	712-3017	1	S	Flanged Lock Nut 3/8-16
19	750-0566A	1	/P	Spacer,.260 x.372 x 1.030 Lg
20	714-0104	1	S	Cotter Pin
21	714-0507	1	S	Cotter Pin
22	714-0111	1	S	Cotter Pin
23	725-0157	1	/P	Cable Tie (not shown)
24	725-1644	1		Switch
25	726-0154	1	S	Cable Tie (not shown)
26	726-0320	1	S	Insulator Nut Plate
27	731-05299	1		Sleeve, 0.765 x 1.5
28	731-1449A	1	S	Blade Fan
29	732-0209	1	S	Extension Spring
30	732-04323A	1	S	Extension Spring
31	732-0716	1	S	Extension Spring
32	732-0729	1	/P	Wire Ring
33	732-0994	1		Extension Spring
34	732-3118	1		Extension Spring
35	736-0169	1	S	Lock Washer
36	736-0866	1		Flat Washer
37	736-0921	1	S	Lock Washer
38	736-3010	1		Flat Washer
39	738-0372B	1	/P	Shoulder Spacer
40	747-04139	1		Brake Rod
41	747-1149	1		Bypass Rod
42	747-1151	1		Control Rod
43	748-0334	1	S	Transaxle Spacer
44	731-2290A	1	/P	Hub Cap
45	754-0461	1	S	V Belt, A x 78" Lg
46	756-04209	1	/P	Idler Pulley
47	756-04224	1	/P	Flat Idler Pulley
48	756-04111	1		Input Pulley
49	783-04442	1		Idler Bracket
50	783-0810B	1	S	Torq Bracket
51	783-1019A	1	S	Actuator Bracket
52	647-0031B	1	S	Brake Control Assembly
53	647-0049A	1	S	Brake Control Assembly


13AP616P790 LT-950H (2006)
Drive and Rear Wheels

Page 6 of 19

Ref #	Part Number	Qty	S/P/F	Description
54	683-0267C	1	/P	Pedal Assembly
55	710-0650	1	/P	TT Screw 5/16-18 x 0.875
56	736-0187	1	/P	Flat Washer, .64 x 1.24 x .06
57	710-1260A	1	/P	LD Screw 5/16-18 x 0.75
58	710-1611B	1	/P	TT Screw 5/16-18 x 0.75
59	711-04159B	1		Pin
60	712-04065	1	/P	Flange Lock Nut, 3/8-16
61	712-3004A	1	/P	Flange Lock Nut, 5/16-18
62	712-0240	1	S	Jam Nut 7/16-20
63	736-0119	1	S	Lock Washer 5/16
64	732-0335	1		Compression Spring
65	732-0955	1		Extension Spring
66	732-0963	1		Extension Spring
67	735-0662	1		Control Pedal
68	735-3049	1	S	Brake Control Pedal
69	736-3008	1	S	Flat Washer
70	738-0155	1	S	Shoulder Screw
71	738-0380	1	S	Shoulder Screw
72	741-0225	1	S	Hex Flange Bearing
73	741-3065B	1	/P	Hex Flange Bearing
74	747-04093	1		Brake Lock Control Rod
75	747-04096	1		Cruise Control Rod
76	748-04039B	1	/P	Cruise Latch
77	783-04612	1	S	Steering Support Bracket
78	683-04185	1		Hydro Lockout Bracket
79	783-0773A	1		Brake Pedal
80	710-0224	1	S	Screw, #10-16 x .500
81	17962	1		Switch Plate
82	725-04039	1	S	Interlock Switch
83	710-1007	1	/P	Screw, 3/8-16 x 1.50
84	736-0430	1	/P	Flat Washer .350 x 1.59 x .062
85	736-0242	1	/P	Bell Washer, .340 x .872 x .060
86	710-0627	1	/P	Screw, 5/16-24 x .750
87	634-0177	1	/P	Wheel Complete, 20 x 10
87	734-1873	1		Tire Only, 20 x 10 x 8
87	634-0070	1	/P	Rim Only

13AP616P790 LT-950H (2006)
Engine Accessories

Page 7 of 19

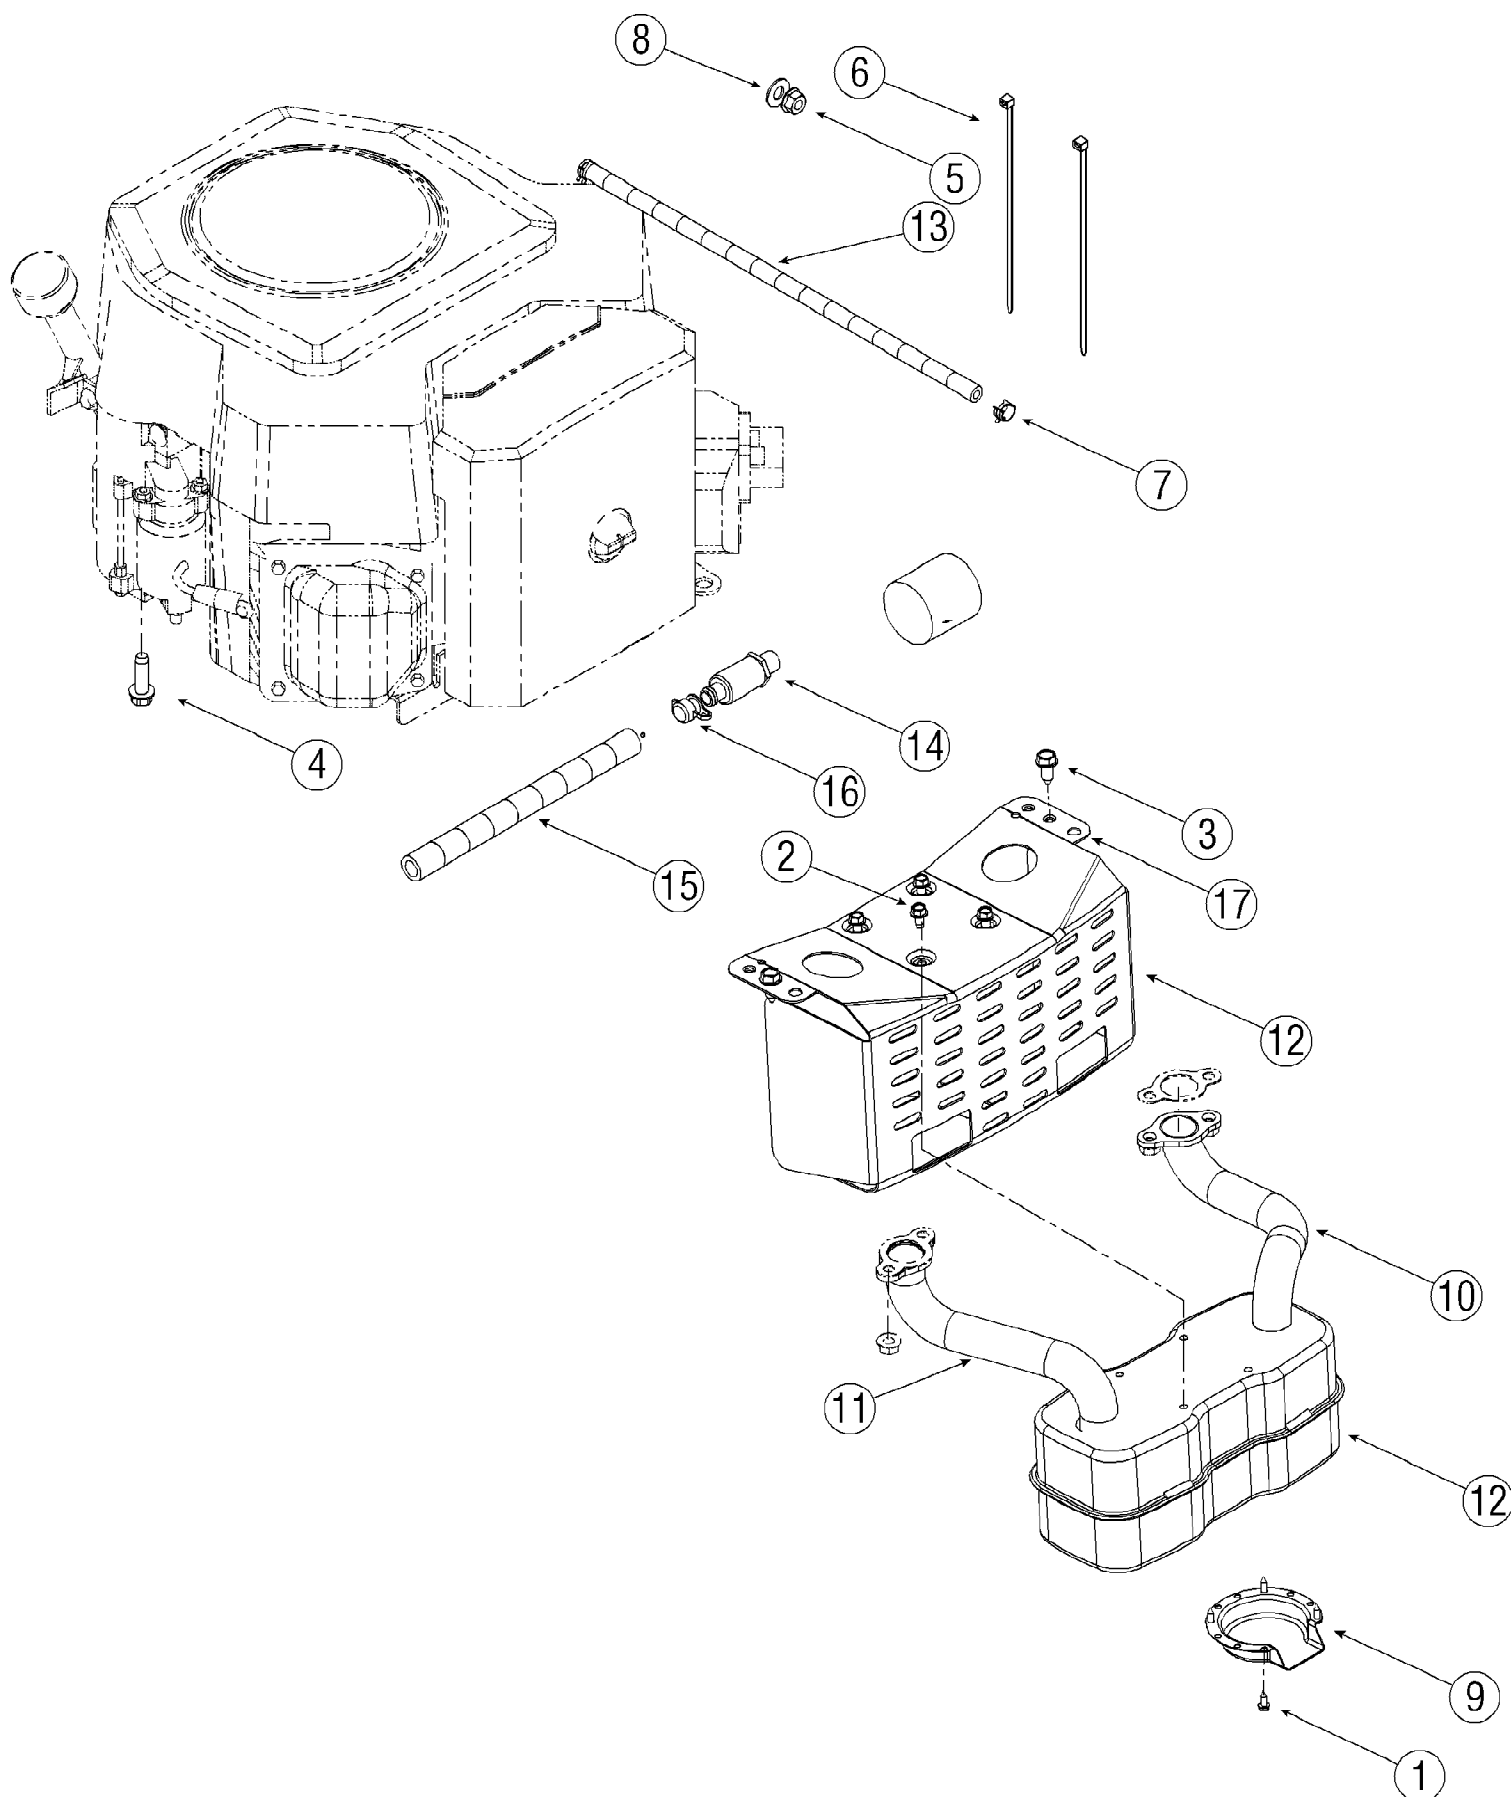


13AP616P790 LT-950H (2006)
Engine Accessories

Page 8 of 19

Ref #	Part Number	Qty	S/P/F	Description
1	710-0227	1	/P	Self-tapping Screw, #8-18 x.50
2	710-0599	1	/P	Self-tapping Screw, 1/4-20 x.50
3	710-0726	1	/P	Self-tapping Screw, 5/16-18 x.625
4	710-1315	1	/P	Self-tapping Screw, 3/8-16 x 1.25
5	712-3005	1	S	Flange Lock Nut, 3/8-16
6	725-0157	1	/P	Cable Tie
7	726-0205	1	/P	Hose Clamp
8	736-0300	1	S	Lock Washer,.406 x.875 x.059
9	751-0564A	1	S	Muffler Deflector
10	751-0644B	1	/P	LH Exhaust Pipe (Kohler V-Twin)
11	751-0645A	1	/P	RH Exhaust Pipe (Kohler V-Twin)
12	751-0805A	1	/P	Muffler, Twin Inlet (Kohler V-Twin)
13	751-10349	1		Fuel Line Hose
14	751-3140	1	S	Oil Drain Valve
15	751-3141	1	S	Oil Drain Hose
16	751-3142	1		Oil Drain Cap
17	783-0615D	1	S	Muffler Bracket

13AP616P790 LT-950H (2006)
Fender and Seat

Page 9 of 19

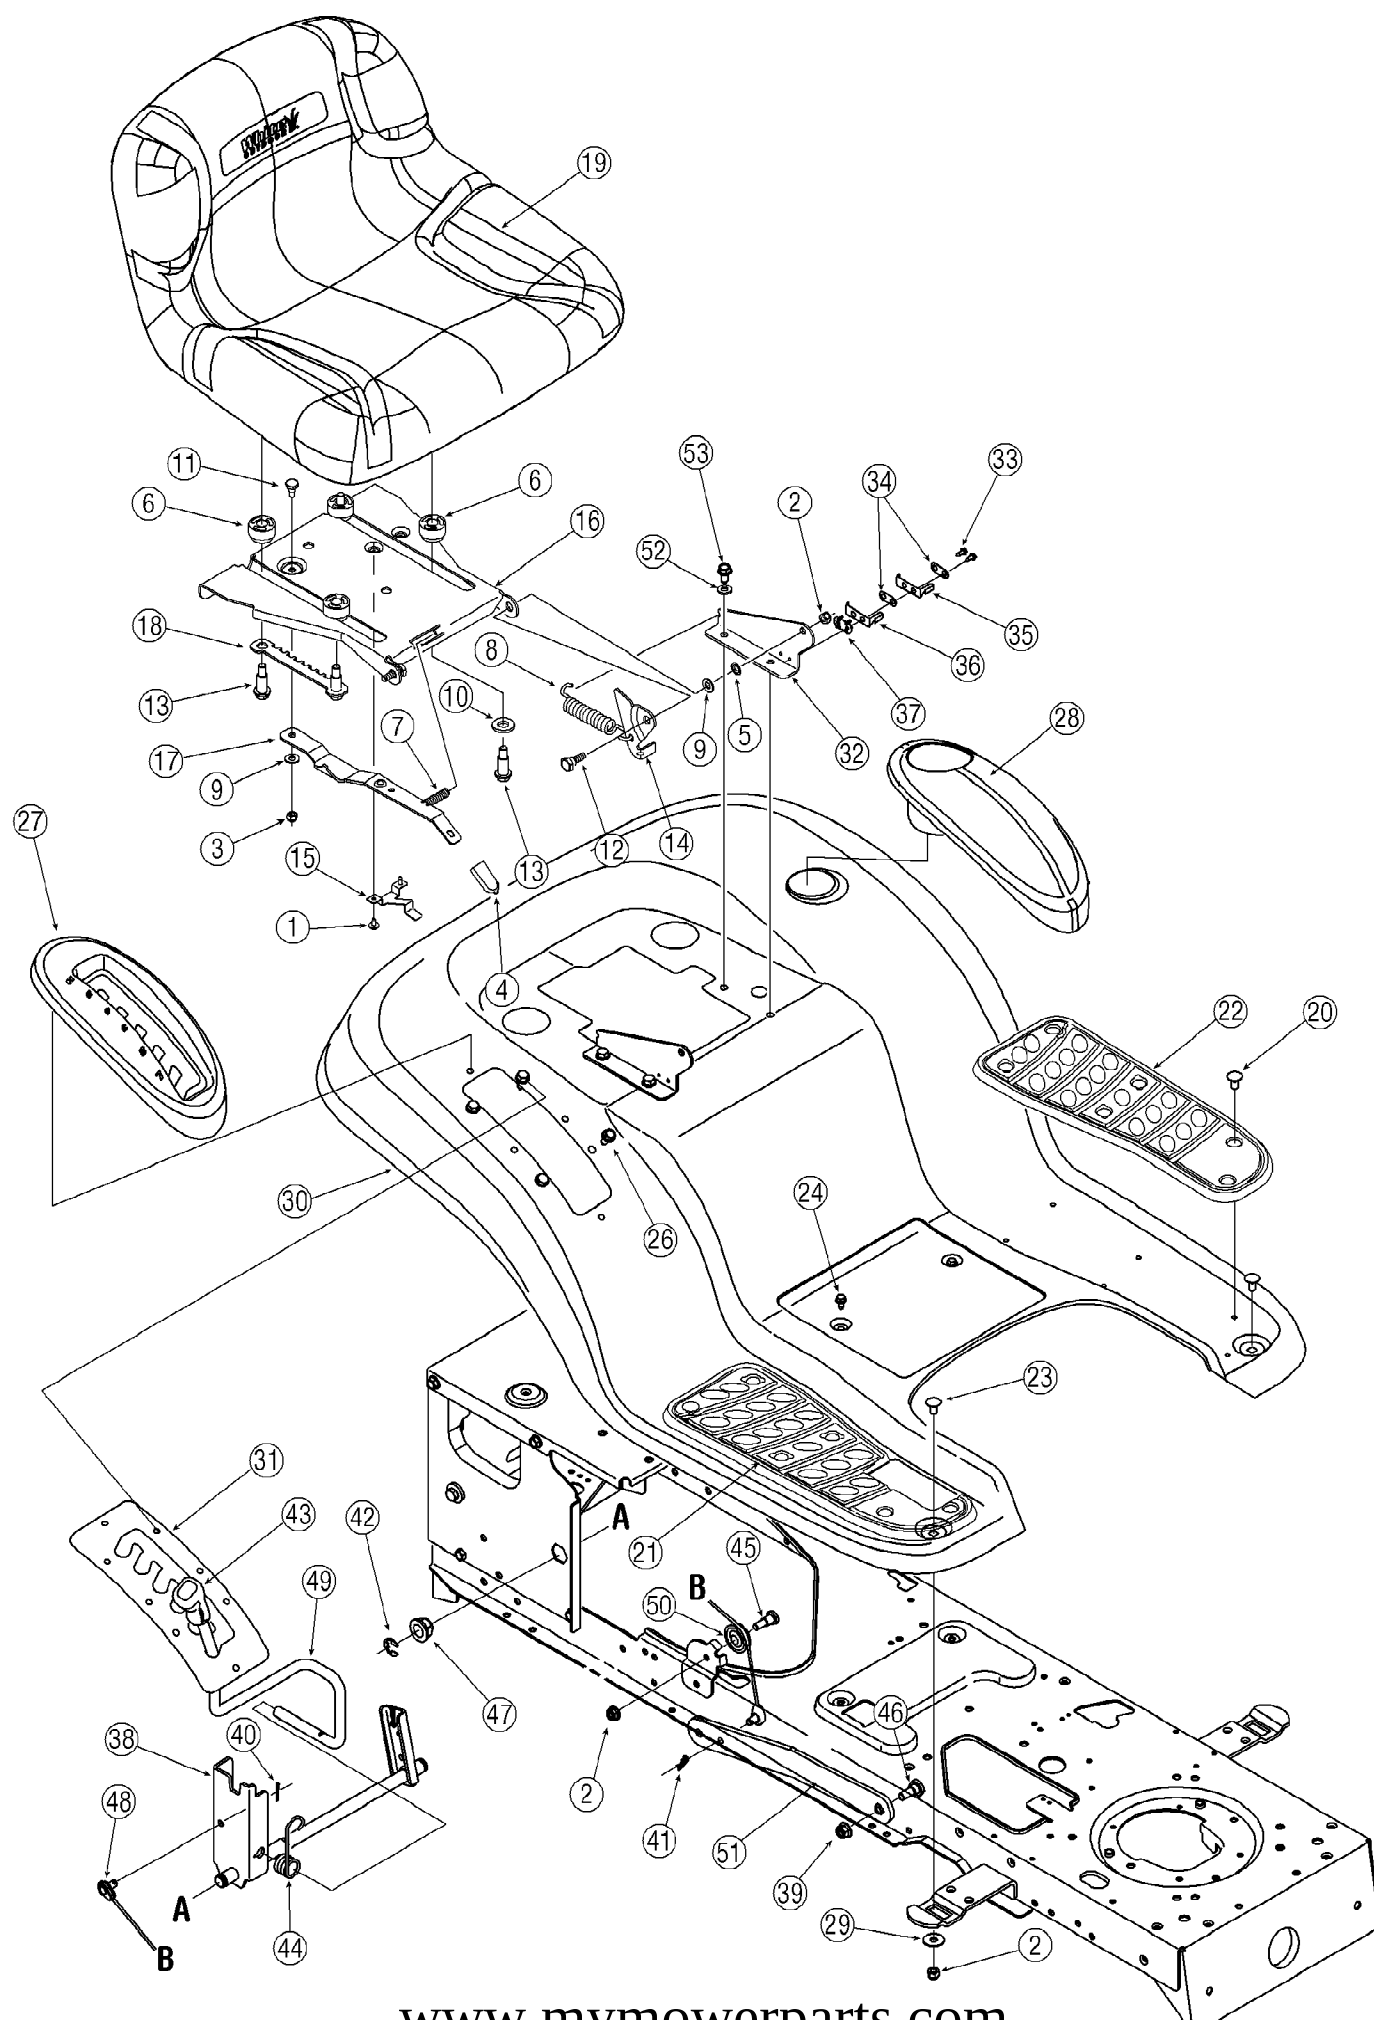

13AP616P790 LT-950H (2006)
Fender and Seat

Page 10 of 19

Ref #	Part Number	Qty	S/P/F	Description
1	710-1268	1	/P	Screw, #10-16 x.375
2	712-04063	1	/P	Nut, Flange Lock, 5/16-18
3	712-3027	1	S	Nut, Flange Lock, 1/4-20
4	720-0309A	1	/P	Seat Adjuster Grip
5	726-0201	1		Nut, Speed,.3125 ID
6	731-04074	1		Spacer
7	732-0499	1		Compression Spring,.41 x 1.5
8	732-1184	1	/P	Spring, Extension,.84 Dia. X 4.6
9	736-0275	1	S	Wash, Flat,.344 x.688 x.065
10	736-3019	1		Wash, Flat,.531x 1.062 x.134
11	738-0137A	1	S	Screw, Shoulder,.340 x.285,1/4-20
12	738-0296	1	S	Screw, Shoulder, .437x.268 5/16-18
13	738-0966A	1	/P	Screw, Shoulder,.50 x.925, 3/8-16
14	783-0209D	1	/P	Seat Bracket, Lift
15	783-0611	1		Seat Stop
16	783-0738C	1	S	Seat Pivot Bracket
17	783-0739A	1	S	Seat Adjustment Lever
18	783-0753	1		Seat Adjustment Selector
19	757-04014A	1	S	High Back Seat, Yellow
20	726-3046	1	/P	Ratchet Clip
21	735-0656	1		RH Foot Pad, Rubber
22	735-0657	1		LH Foot Pad, Rubber
23	710-0260A	1	/P	Bolt, Carriage, 5/16-18,.62, Gr1
24	710-0599	1	/P	Screw, 1/4-20, 0.500
25	710-0726	1	/P	Screw, 5/16-12, 0.750
26	710-0895	1		Screw, 1/4-15, 0.750
27	731-1990	1		Cover, Lift Lever
28	731-1993A	1		Cover, w/ Cup Holder
29	736-3078	1	/P	Washer, Flat,.344 x 1.0 x .063
30	783-04333A	1		Fender
31	783-0677B	1		Adjustment Bracket, Lift
32	783-1489A	1	/P	Mounting Bracket, Seat
33	710-0227	1	/P	Screw, #8-18 x.50
34	726-0279	1		Plate, Insulator
35	725-1303	1	S	Spring Switch, Outer
36	725-1439	1		Spring Switch, Inner
37	726-0278	1		Plate, Insulator Boss
38	753-06260	1	/P	Shaft Assembly, Lift Service Kit Replaces 683-04079
39	712-04065	1	/P	Nut, Flange Lock, 3/8-16
40	714-0104	1	S	Pin, Cotter,.072 Dia. x 1.13
41	714-0111	1	S	Pin, Cotter, 3/32, 1.0
42	716-0106A	1		Ring, E Type,.625 Dia.
43	720-0311	1		Grip, Handle, 1/2
44	732-0874	1	/P	Spring, Torsion
45	738-0138A	1	/P	Screw, 5/16-18 x.620 Gr2
46	738-0380	1	S	Screw, Shld,.50 x.27, 3/8-16
47	741-0225	1	S	Bearing, Hex Flange
48	746-0968	1		Cable, Lift, 16.16
49	747-04155	1		Handle, Lift
50	756-1154	1		Pulley, Roller
51	783-0678A	1	S	Arm, Lift


13AP616P790 LT-950H (2006)
Fender and Seat

Page 11 of 19

Ref #	Part Number	Qty	S/P/F	Description
52	736-0607	1	/P	Lock Washer, 5/16
53	710-0604A	1	/P	Screw 5/16-18

13AP616P790 LT-950H (2006)
Hood Assembly and Fuel Tank

Page 12 of 19

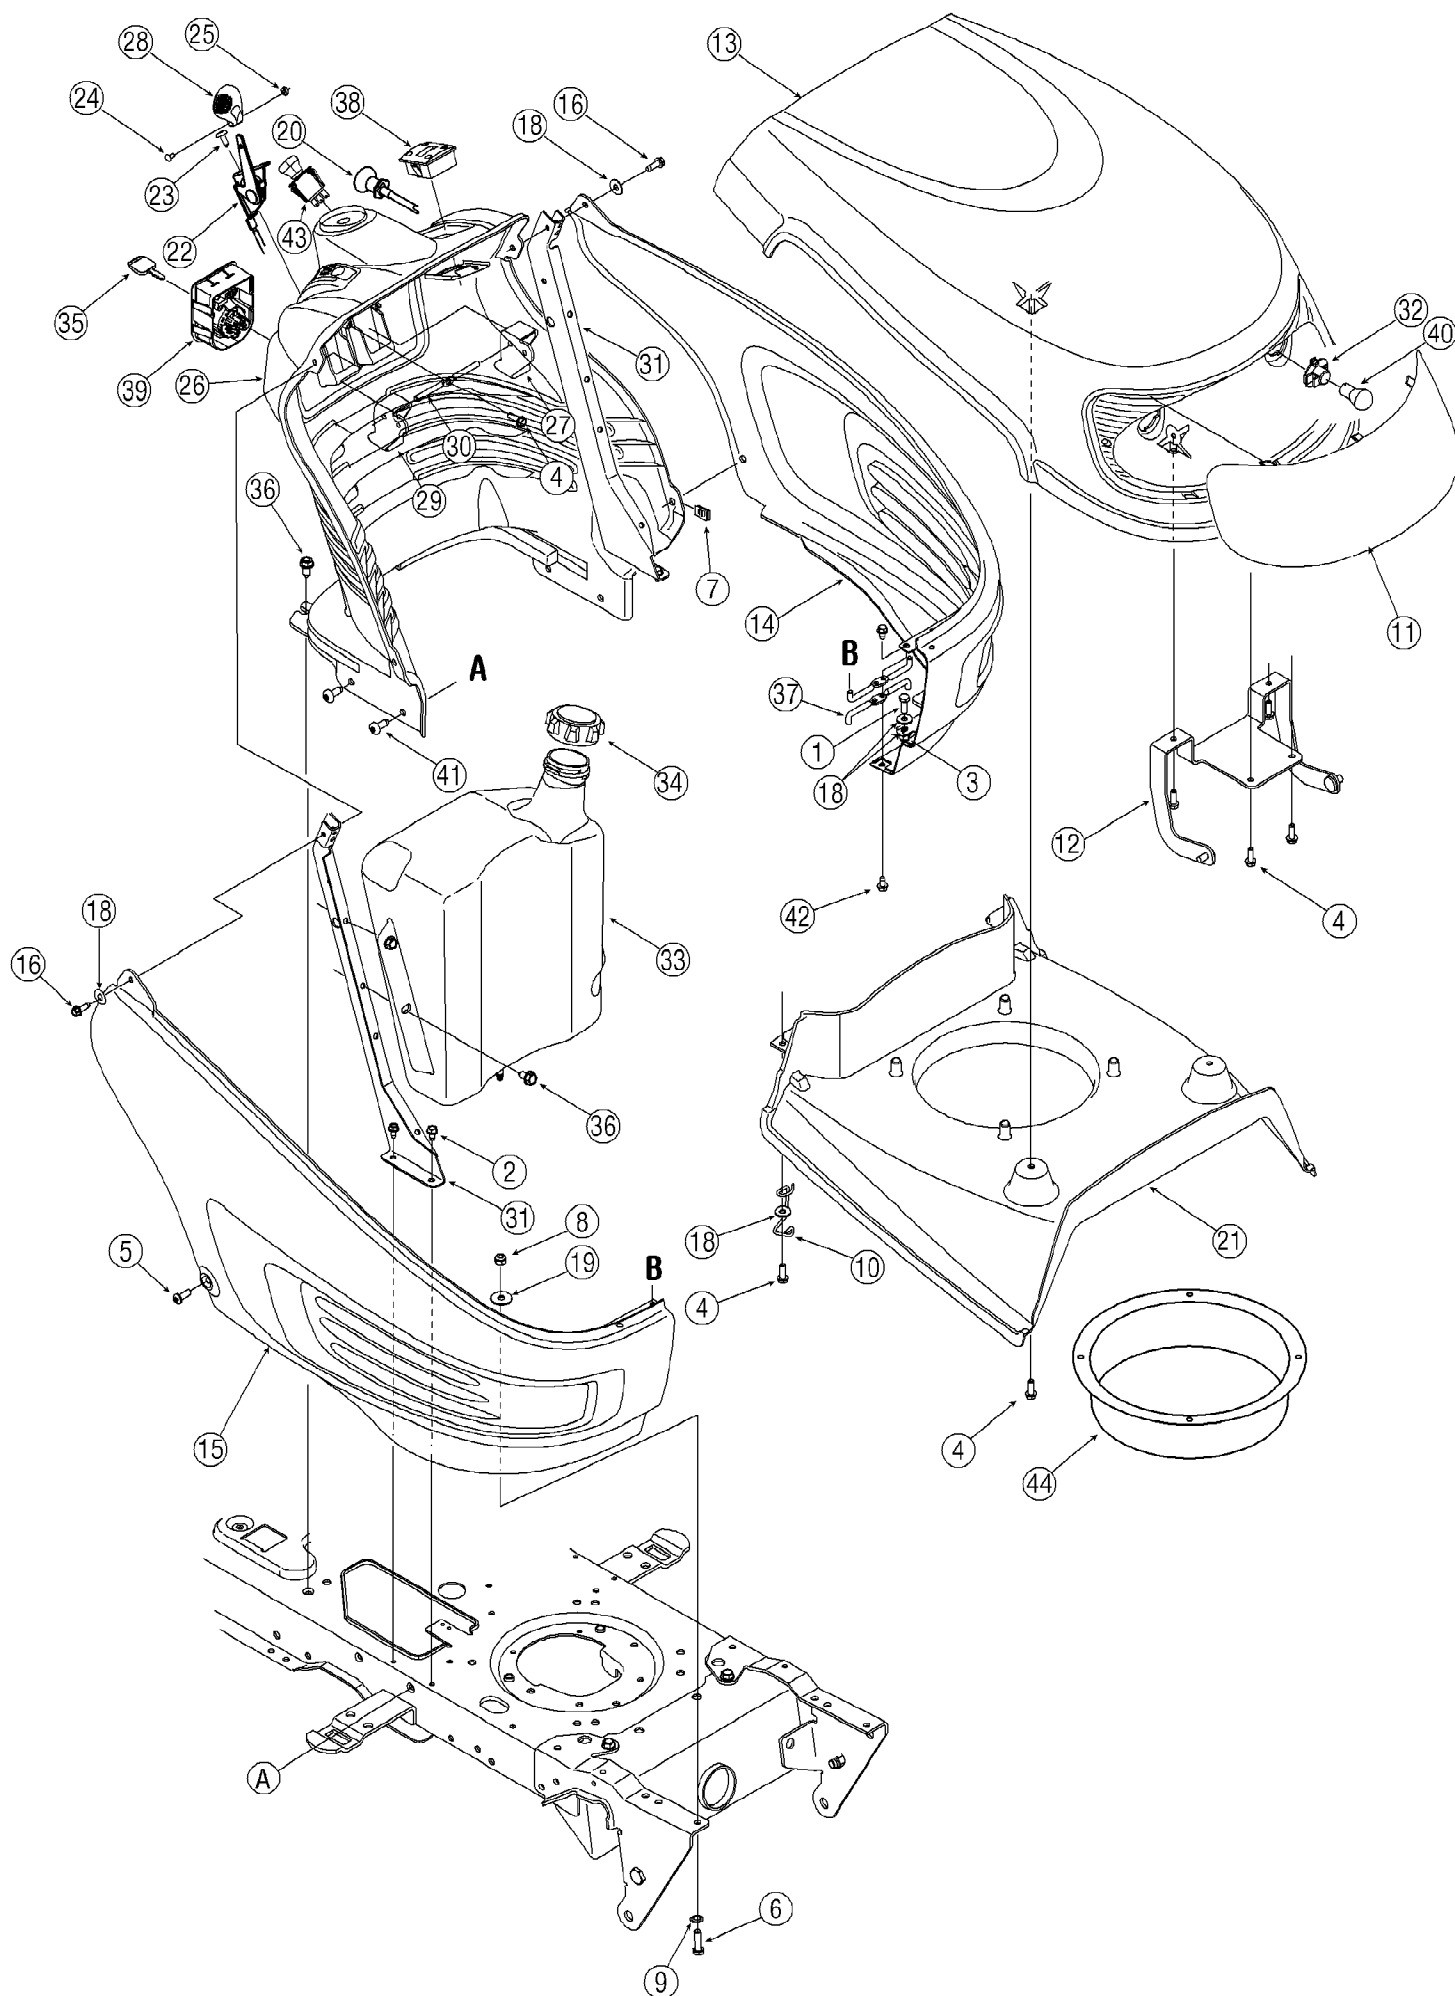


13AP616P790 LT-950H (2006)
Hood Assembly and Fuel Tank

Page 13 of 19

Ref #	Part Number	Qty	S/P/F	Description
1	710-3015	1	/P	Hex Cap Screw, 1/4-20 x .75
2	710-0599	1	/P	Self-tapping Screw, 1/4-20 x .5
3	712-04064	1	/P	Flange Lock Nut, 1/4-20
4	710-0895	1		Self-tapping Screw, 1/4-15 x .75
5	710-0924	1	/P	Pan Phillips Screw, 1/4-20 x .75
6	710-0376	1	/P	Hex Cap Screw, 5/16-18 x 1.0
7	712-0292	1	/P	U-type Speed Nut, 1/4-20
8	712-04063	1	/P	Flange Lock Nut, 5/16-18
9	726-0201	1		Speed Nut
10	747-2127	1		Hood Latch Rod
11	731-2286A	1	S	Head Light Lens
12	683-0305	1	S	Hood Bracket Assembly
13	731-2283A	1	S	Hood
14	731-2307B	1	S	LH Side Panel
15	731-2308B	1	S	RH Side Panel
16	710-0642	1	/P	Screw, 1/4-20 x .750
17	736-0342	1		Flat Washer, .283 x .75 x .030
18	736-0173	1	/P	Flat Washer, .28 x .74 x .063
19	736-3078	1	/P	Flat Washer, .349 x 1.0 x .063
20	746-1085A	1	S	Choke Control
21	731-2284	1		Hood Plenum w/o Intake
22	746-1100	1	S	Throttle Control/Cable
23	710-1017	1	/P	Torx Self-Tapping Screw
24	710-3217	1	/P	Torx Screw, #8-32 x .375
25	712-0142	1	/P	Hex Nut, 8-32
26	631-04152	1		Dash Panel, 4/6-style w/Cargo Net
27	731-04213	1		Parking Brake Button
28	731-1857	1		Throttle Control Knob
29	731-04214	1		Cruise Control Button
30	747-1155	1		Brake/Cruise Pivot Rod
31	783-04285B	1	S	Dash Support Plate RH
31	783-04323B	1	S	Dash Support Plate LH
32	725-1649	1	S	Lamp Socket
33	751-0658E	1	/P	Fuel Tank, 3-gallon
34	751-0603	1	S	Fuel Cap
35	725-1745	1	S	Ignition Key w/ plastic cover
35	725-1744	1	S	Ignition Key w/o plastic cover
36	710-0726	1	/P	Self-tapping Screw, 5/16-18 x .75
37	747-04301	1		Side Panel Support
38	725-04036B	1	S	Systems Indicator Monitor
39	725-04227	1	S	Ignition Switch
40	725-0963	1	S	Miniature Lamp, 12V
41	710-1611B	1	/P	Self-tapping Screw, 5/16-18 x .75
42	710-1652	1	/P	Screw 1/4-20
43	725-1752	1	S	Electric PTO Switch
44	731-2234A	1	/P	Intake Bellow
	629-04083	1	S	Headlight Wire Harness (not shown)
	725-04336	1	S	Hour Meter Wire Harness (not shown)

13AP616P790 LT-950H (2006)
PTO Drive, Battery and Frame

Page 14 of 19

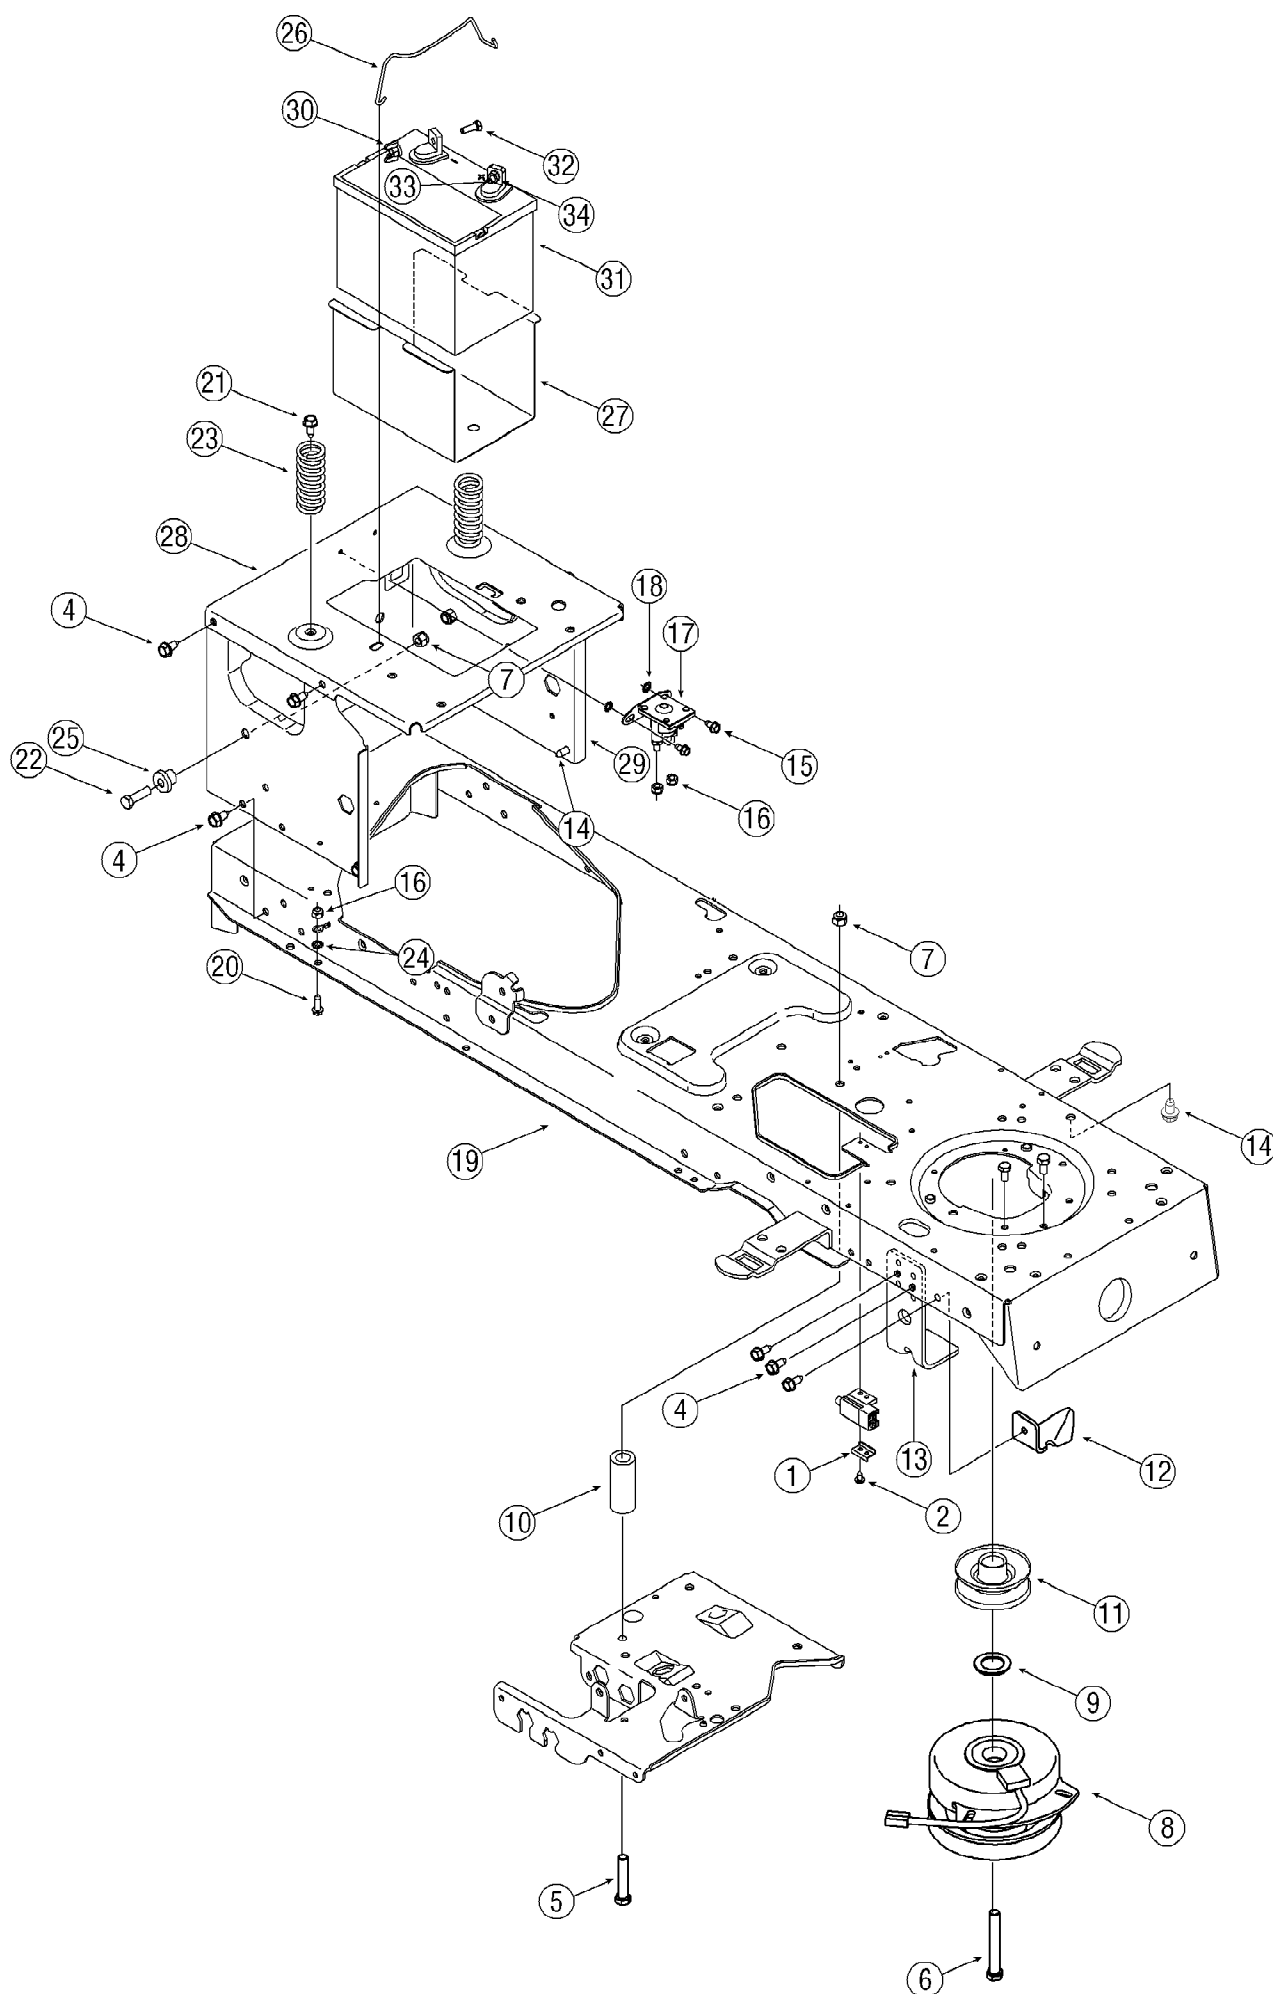


13AP616P790 LT-950H (2006)
PTO Drive, Battery and Frame

Page 15 of 19

Ref #	Part Number	Qty	S/P/F	Description
1	17962	1		Switch Plate
2	710-0224	1	S	Screw, #10-16 x.500
3	725-04039	1	S	Interlock Switch
4	710-0726	1	/P	AB Screw 5/16-12 x 0.75
5	710-0859	1	/P	Hex Head Screw 3/8-16 x 2.50
6	710-3157	1	S	Screw, 7/16-20, 3.25, Gr5
7	712-04065	1	/P	Nut, Flange Lock, 3/8-16, GrF
8	717-04174	1	S	Electric PTO Clutch
9	736-0277	1		Flat Washer
10	748-0415B	1	/P	Spacer,.385 ID x.635 OD x 1.54
11	756-0978A	1	S	Engine PTO Pulley
12	783-04419B	1	S	Clutch Bracket
13	783-04467	1		Deck Stop Bracket
14	710-0607	1	/P	Screw 5/16-18 x .50
15	710-0599	1	/P	Screw, 1/4-20, 0.50
16	712-04064	1	/P	Nut, Flange Lock, 1/4-20, GrF
17	725-1426A	1	S	Solenoid, 12V, 100 Amp
18	736-0222	1	S	Washer, Lock, 1/4, External
19	683-04173	1	S	Lower Frame Assembly
20	710-0642	1	/P	Screw, 1/4-20, 0.750
21	710-1260A	1	/P	LD Screw 5/16-18 x 0.75
22	710-3005	1	/P	Screw, 3/8-16, 1.25, Gr5
23	732-04035	1		Spring, Compression
24	736-0222	1	S	Lock Washer 1/4
25	738-04058	1		Spacer, Shoulder,.38 x 1.0 x .70
26	747-04121A	1		Hold Rod, Battery
27	783-0349	1		Battery Tray
28	783-04329A	1		Seat Bracket, Frame
29	783-04809	1	/P	Upper Frame
30	712-3087	1	/P	Nut, Wing, 1/4-20
31	725-1750A	1	S	Battery, 235 CCA
32	738-1132	1		Screw, Shoulder
33	710-0703	1	/P	Carriage Screw 1/4-20 x .75
34	712-0271	1	/P	Sems Nut

13AP616P790 LT-950H (2006)
Quick Reference

Page 16 of 19

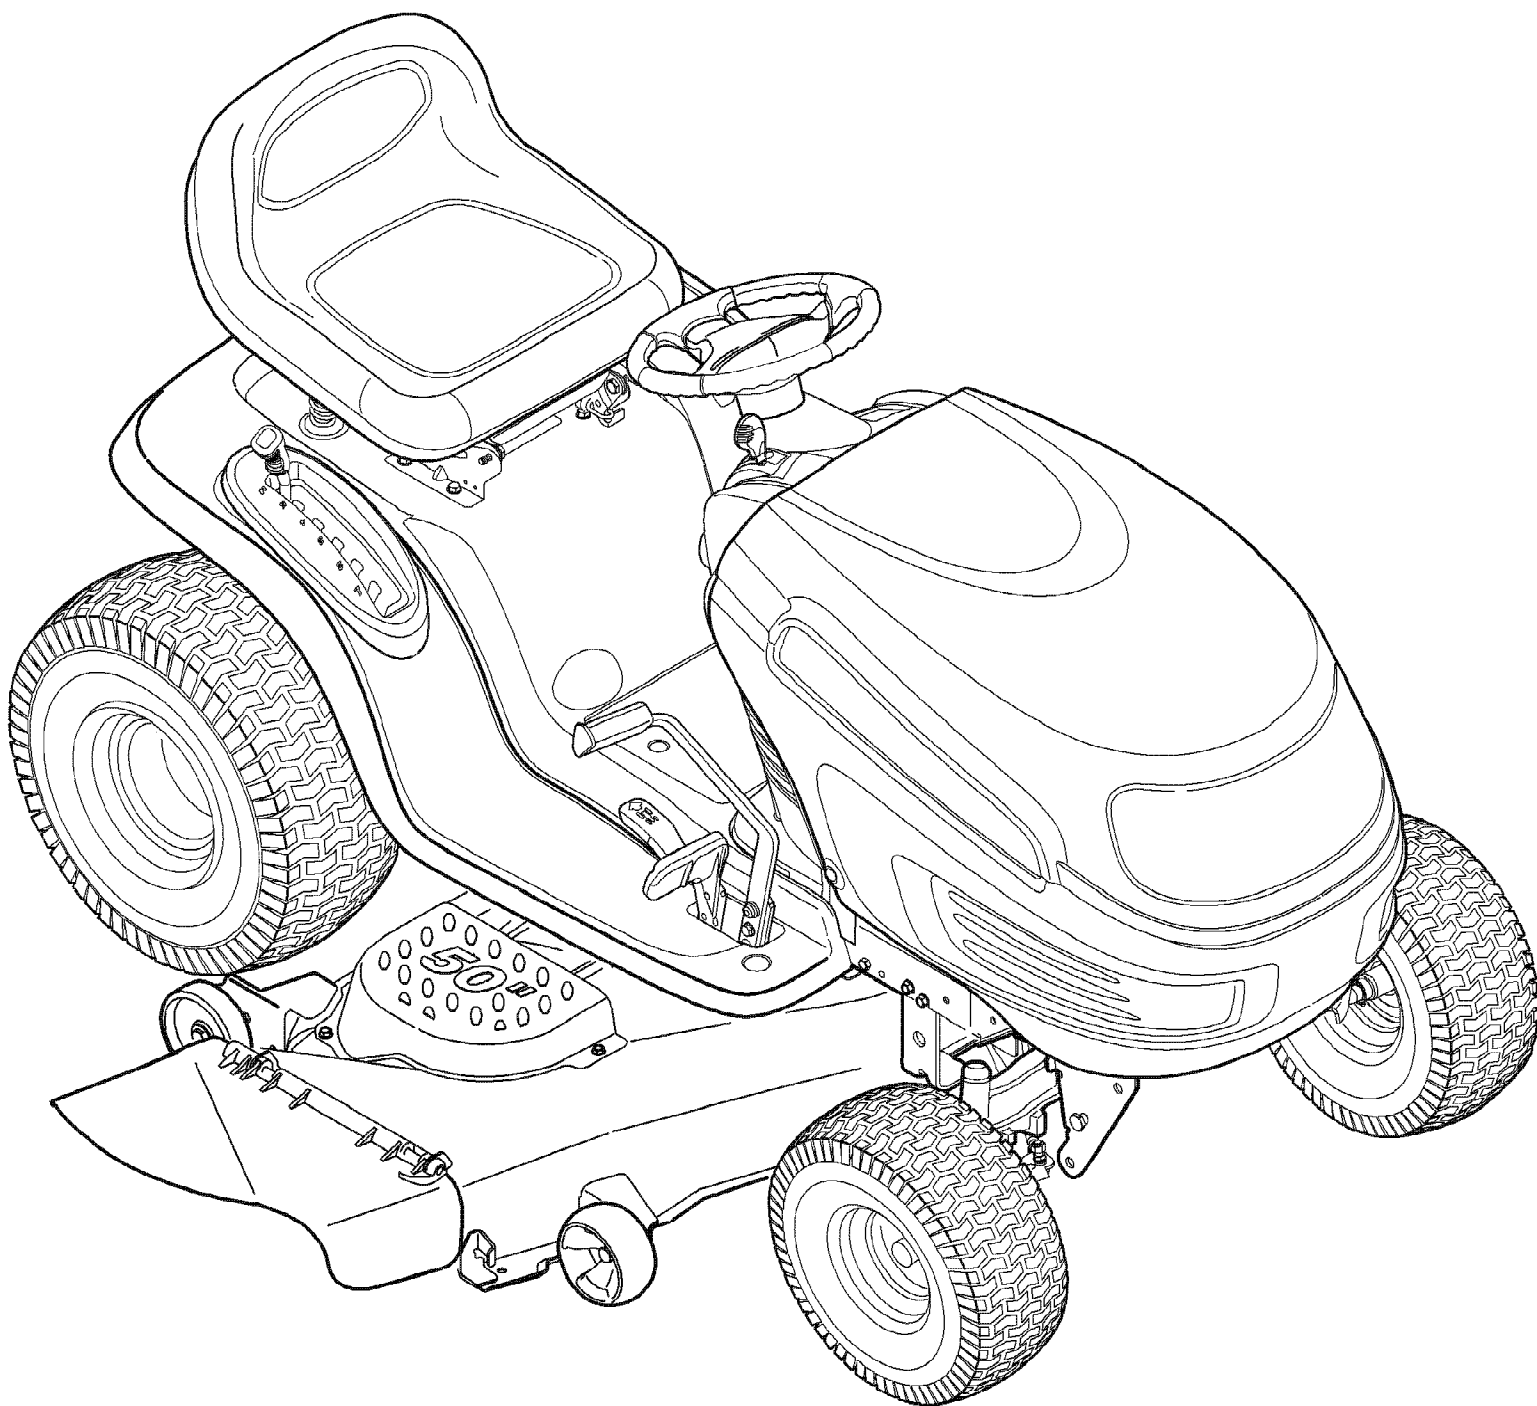


13AP616P790 LT-950H (2006)
Quick Reference

Page 17 of 19

Ref #	Part Number	Qty	S/P/F	Description
	759-3336	1	/P	Spark Plug
	KH-12-050-01-S	1	/P	Oil Filter
	N/A	1		Pre Filter
	KH-32-883-03-S1	1	/P	Air Filter
	KH-25-050-22-S1	1	/P	Fuel Filter
	751-0603	1	S	Fuel Cap
	N/A	1		Fuel Solenoid
	618-04125	1	S	Deck Spindles
	742-04053A	2	S	Blades (Outer)
	712-0417A	1	/P	Blade Nut
	734-04155	1		Deck Wheels (Front)
	734-0973	1	/P	Deck Wheels (Rear)
	717-1554	1		Steering Pinion Gear
	717-1550E	1	S	Steering Gear 11/90 Ratio
	725-1744	1	S	Ignition Key
	N/A	1		Upper Drive Belt
	754-0461	1	S	Lower Drive Belt
	754-04077	1	S	PTO/Deck Spindle Belt
	N/A	1		PTO Belt (Engine To Deck)
	631-04070	1	S	Discharge Chute
	731-04651	1		Mulch Plug
	190-679-101	1		Front Bumper Attachment
	190-823-101	1		42" Two Stage Snow Thrower Attachment
	190-833-000	1	S	46" Dozer Blade Attachment
	190-192-190	1	S	Triple Bagger Attachment
	190-032-101	1		42" Two Stage Snow Thrower Attachment
	725-04862	1		Wire Harness Not shown
	925-1648	1	/P	PTO Relay Not shown
	925-1381	1	/P	Fuse Not shown
	925-1657A	1	/P	Brake Switch Not shown
	725-1643	1		Reverse Switch Not shown

13AP616P790 LT-950H (2006)
Steering, Front Wheel and Axle

Page 18 of 19

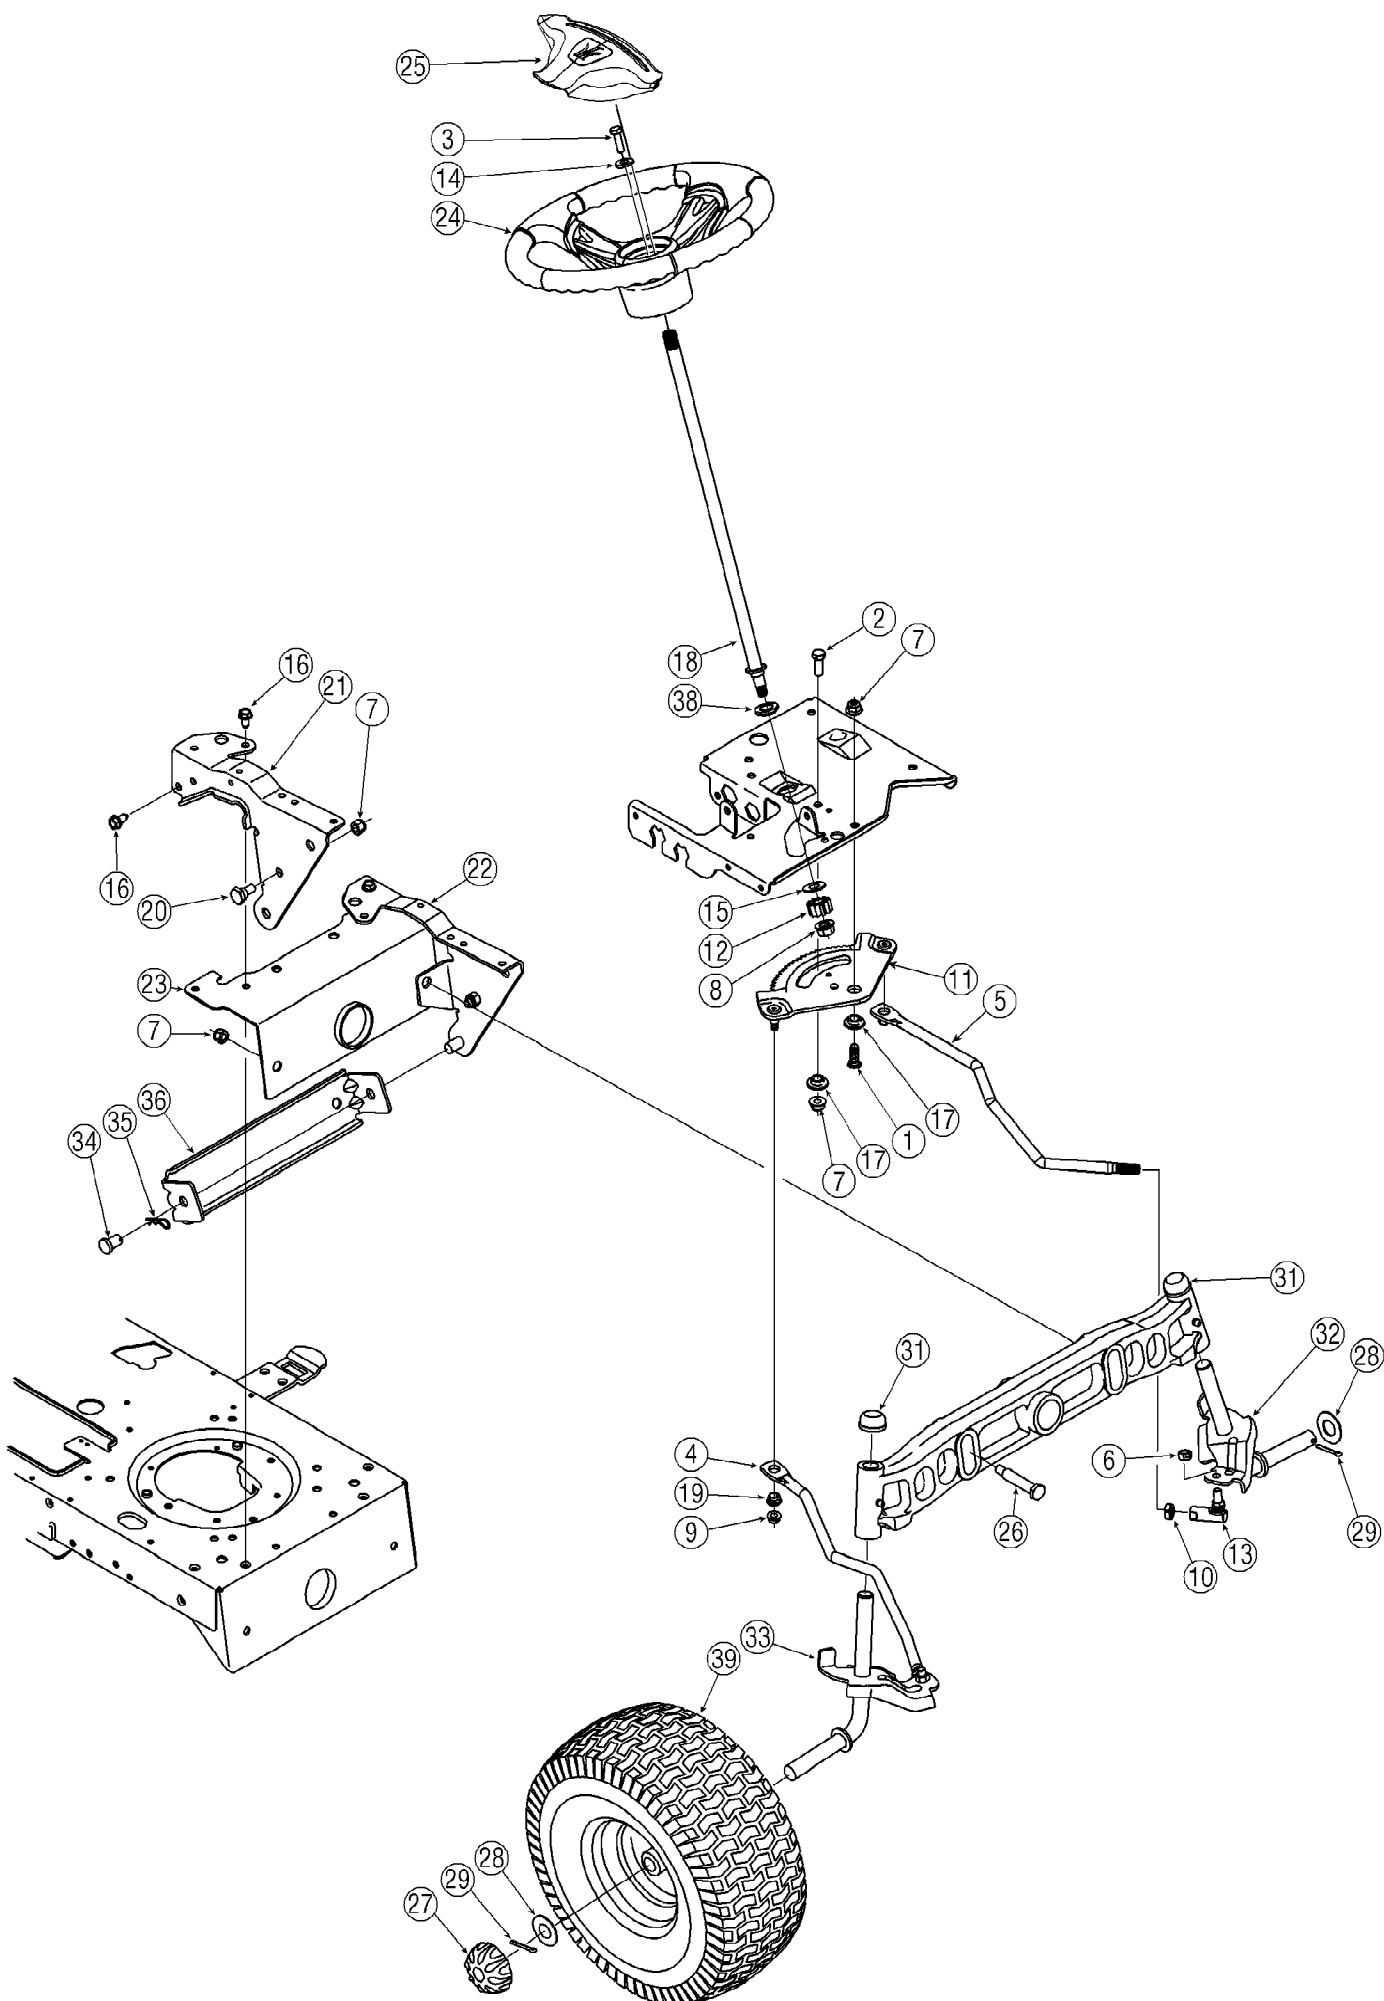

13AP616P790 LT-950H (2006)
Steering, Front Wheel and Axle

Page 19 of 19

Ref #	Part Number	Qty	S/P/F	Description
1	710-04095	1		Hex Screw, 3/8-16, 1.00, Gr5
2	710-0514	1	/P	Hex Screw, 3/8-16, 1.00, Gr5
3	710-0643	1	/P	Hex Screw, 5/16-18, 1.00, Gr5
4	711-1408	1		Link, Drag, RH
5	711-1409A	1	/P	Link, Drag, LH
6	712-0214	1	S	Nut, Hex Lock, 3/8-24
7	712-04065	1	/P	Nut, Flange Lock, 3/8-16, Grf, Nylon
8	712-0459	1	/P	Nut, Flange Lock, 7/16-20
9	712-3004A	1	/P	Nut, Flange Lock, 5/16-18, Gr5
10	712-0240	1	S	Nut, Jam, 7/16-20, Gr2
11	717-1550E	1	S	Gear, Steering, 11/90 Ratio
12	717-1554	1		Gear, Pinion, Steering
13	723-0448A	1	S	Ball Joint, 7/16-20, Lock
14	736-3004	1	S	Washer, Flat,.406 x.875 x.105
15	736-3084	1	/P	Washer, Flat,.51 x 1.12 x.06
16	710-1260A	1	/P	Screw, 5/16-12, 0.750
17	738-04154	1		Spacer, Shoulder,.38 x 1.00 x.31
18	738-1001A	1	/P	Shaft, Steering,.625 OD x 24.25 LG
19	741-0475	1	S	Plastic Bushing.380 ID
20	738-0143	1	/P	Screw, Shoulder,.498 x.340, 3/8-16
21	783-0726E	1	/P	Pivot Bracket, Support RH
22	783-0727D	1		Pivot Bracket, Support LH
23	783-0728	1		Pivot Bracket, Bar
24	631-04008	1	S	Steering Wheel, 3 Spoke, Soft Grip
25	731-04065	1		Steering Wheel Cover
26	738-1011A	1	/P	Shlder Screw,.5 x 2.2, 3/8-16
27	731-2290A	1	/P	Deluxe Hub Cap
28	736-0316	1	S	Flat Washer,.78 x 1.589 x.06
29	714-04039	1		Cotter Pin, 5/32 x 1.25
31	719-04105	1	/P	Cast Iron Pivot Bar
31	726-0341	1	/P	Push Cap
32	638-04003	1	S	LH Axle Assembly,.750
33	638-04004	1	S	RH Axle Assembly,.750
34	711-0332	1	S	Pin, Clevis,.50 x.78
35	714-04023	1	S	Cotter Pin, Inter,.080 x 1.5625
36	783-0720A	1	S	Front Adjustment Bracket
38	741-0656A	1	S	Hex Flange Bearing
39	634-04087	1	S	Wheel Assembly Complete, 15 x 6
39	734-04040	1	S	Tire Only 15 x 6 x 6
39	634-04081	1	S	Rim Only w/ Valve Stem