 


21AA414E290 (2008)
Drive System 410

Page 1 of 40

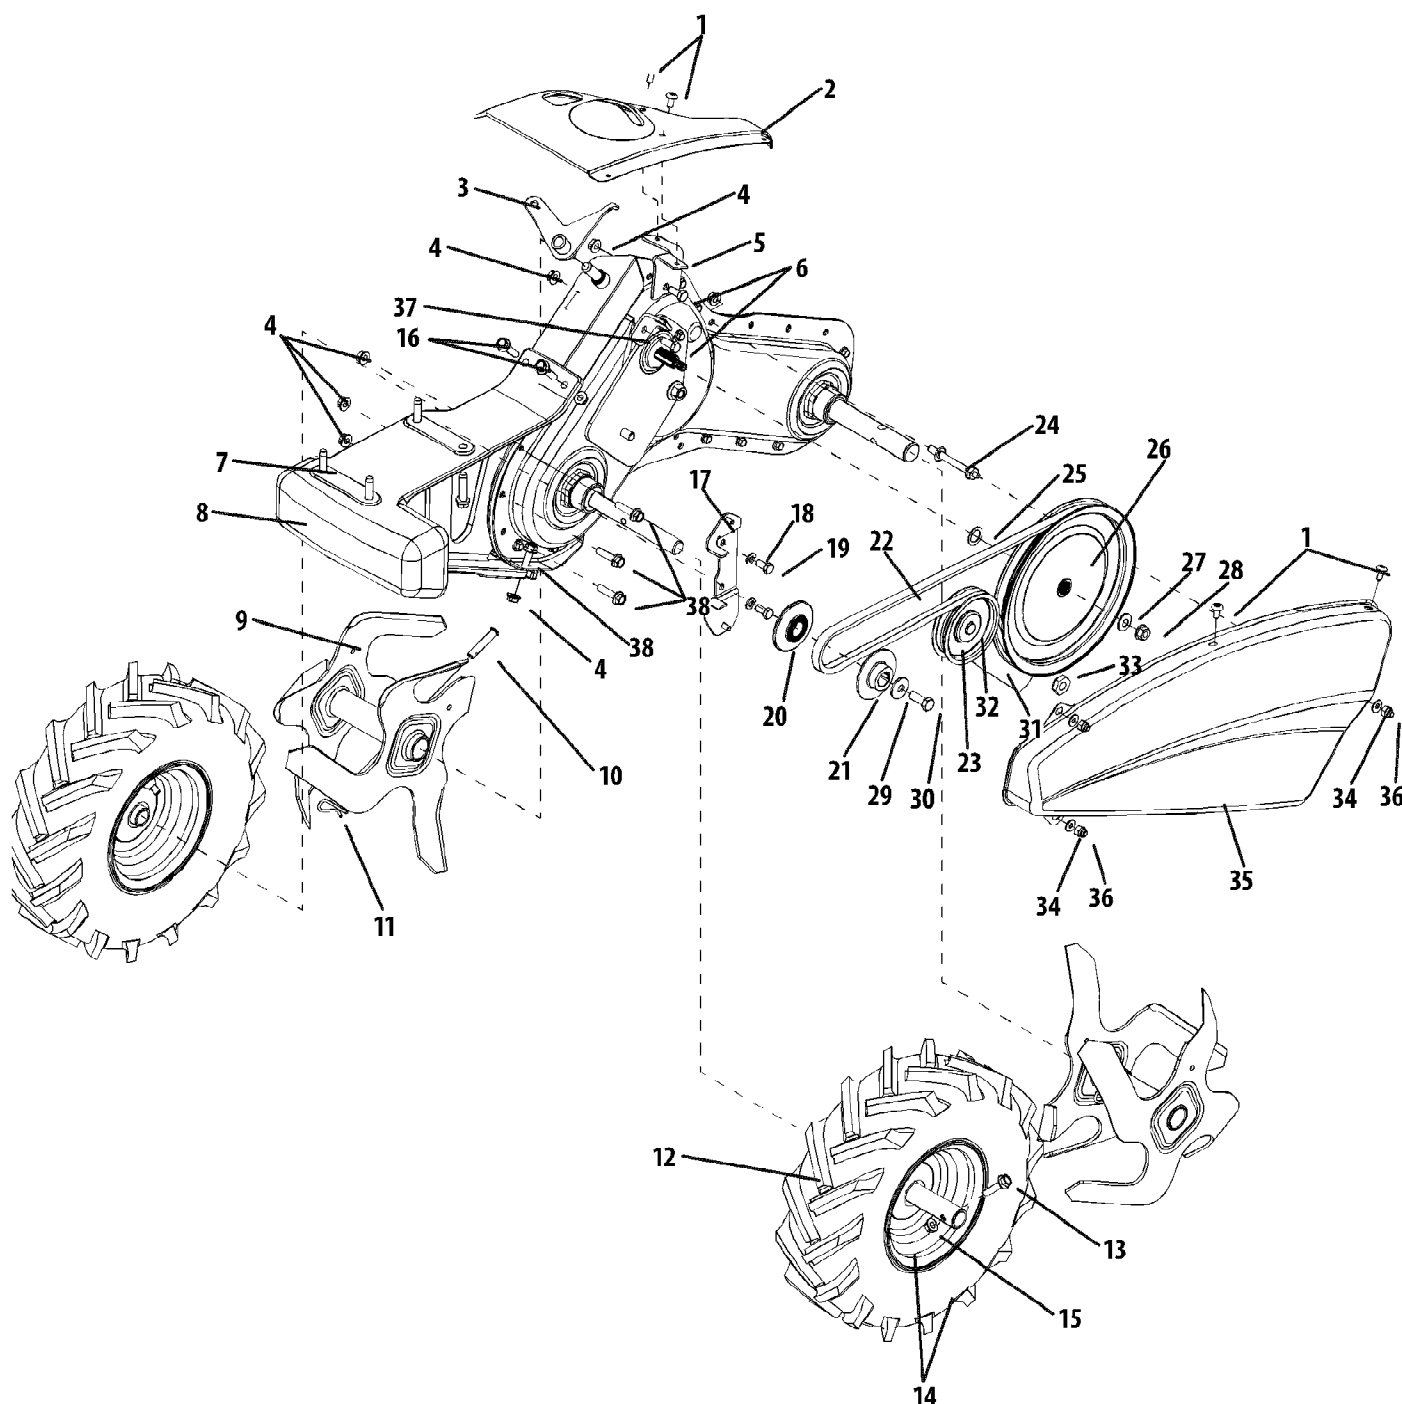




21AA414E290 (2008)
Drive System 410

Page 2 of 40

Ref #	Part Number	Qty	S/P/F	Description
1	710-1017	1	/P	Hex Screw, 1/4-20 x.625
2	786-0168	1		Shift Cover
3	686-0095	1	S	Crank Shift Assembly
4	712-04063	1	/P	Hex Lock Nut, 5/16-18
5	786-0117	1	S	Shift Cover Mounting Bracket
6	710-3008	1	/P	Hex Cap Screw, 5/16-18 x.75
7	710-1007	1	/P	Hex Washer Screw, 3/8 -16 x 1.5
8	619-0009A	1	S	Frame Counterweight
9	642-0015	1	S	Tine Assembly, Left
9	642-0016	1	S	Tine Assembly, Right
10	711-0415	1	S	Clevis Pin
11	714-0149B	1	S	Cotter Pin
12	634-04233	1	S	Complete Wheel Assembly
13	710-0606	1	/P	Hex Head Screw, 1/4-20
14	734-1796	1	S	Tire Only, 14"
14	634-04218	1		Rim Only, 6.0 x 3.25
15	712-04064	1	/P	Flange Lock Nut, 1/4-20
16	710-1090	1	/P	Flange Screw, 5/16-18 x 1.25
17	686-0031A	1	S	Belt Keeper Bracket Assembly
18	736-0119	1	S	Lock Washer, 5/16
19	710-0237	1	/P	Hex Cap Screw, 5/16-24 x.625
20	756-0971	1		Inner Pulley Half
21	756-0972	1		Outer Pulley Half
22	754-0438	1	S	V-Belt
23	756-0405	1	/P	Flat Idler
24	738-0899	1		Bolt, 5/16-18 x1/4-28 x 2.35
25	736-0256	1	S	Flat Washer, .635 ID x.930 OD
26	756-0634	1		Flat Pulley
27	736-0105	1	/P	Spring Washer, .401 ID x.870 OD
28	712-0379	1	/P	Flange Lock Nut, 3/8 -24
29	736-0452	1	S	Bell Washer, .396 ID x 1.140 OD
30	710-0152	1	S	Hex Cap Screw, 3/8 -24 x 1.0
31	786-0080	1	S	Idler Bracket
32	710-0723	1	/P	Hex Cap Screw, 3/8 -16 x 1.25
33	738-0876	1	S	Shoulder Nut, 7/16-20
34	736-3020	1	S	Flat Washer, .271 ID x.630 OD
35	786-0100	1		Belt Cover
36	712-0392	1	/P	Hex Lock Nut, 1/4
37	786-0107	1		Cable Bracket
38	737-0298	1	/P	Oil Drain Extension
39	737-0132	1		End Cap

21AA414E290 (2008)
Engine Assembly 1 E290

   Page 3 of 40

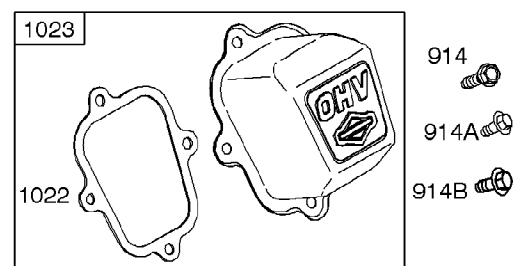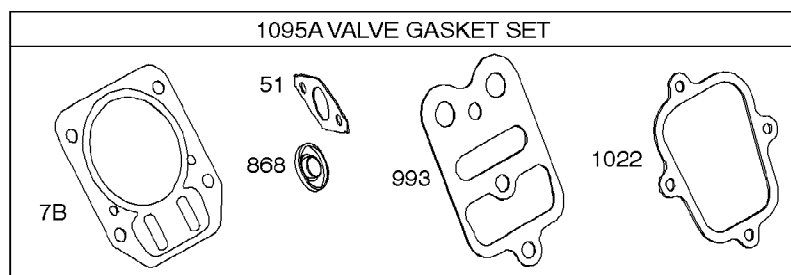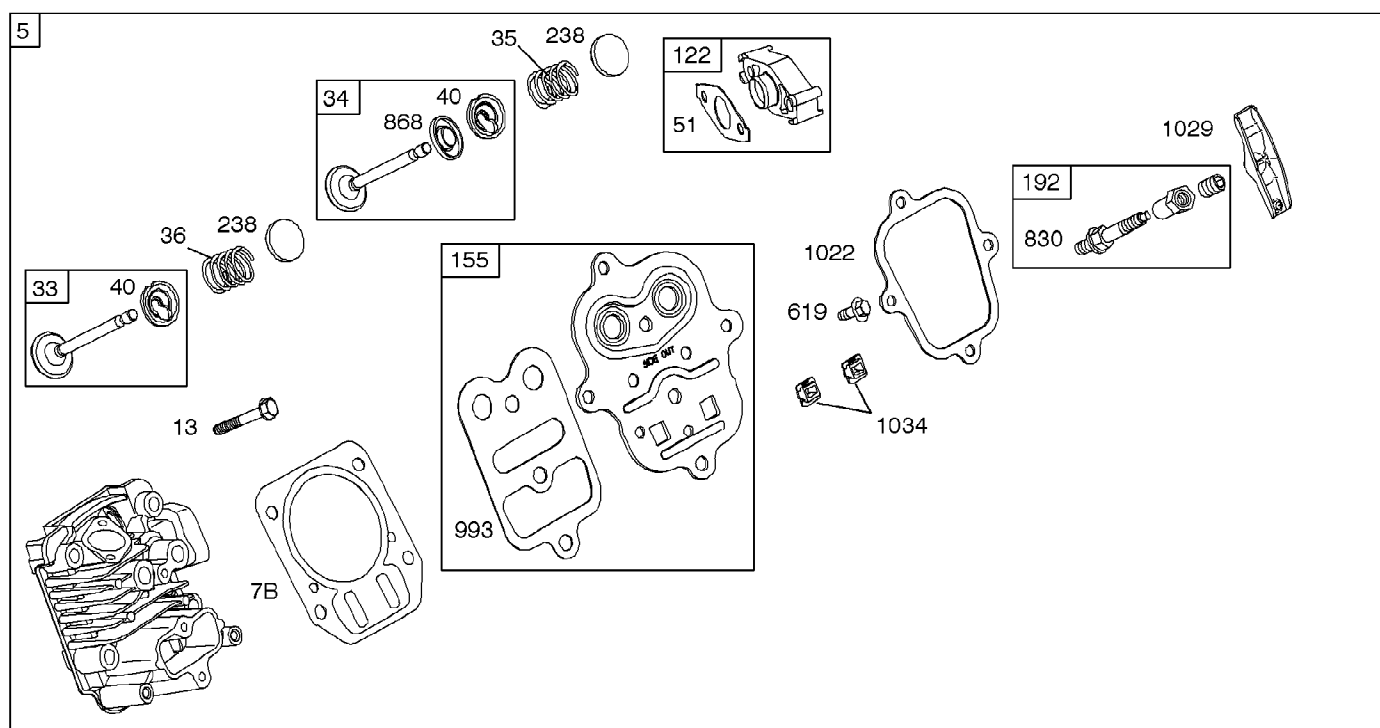

Ref #	Part Number	Qty	S/P/F	Description
1	BS-791762	1	S	Cylinder Assembly
2	BS-399269	1	/P	Kit-Bushing/Seal (Magneto Side)
3	BS-299819	1		Seal-Oil (Magneto Side)
5	BS-791720	1		Head-Cylinder
7B	BS-791716	1		Gasket-Cylinder Head
11B	BS-790632	1		Tube-Breather (Ultra Low Air Cleaner)
12	BS-699485	1		Gasket-Crankcase
13	BS-699482	1		Screw (Cylinder Head)
15	BS-691686	1	/P	Plug-Oil Drain (Square Head)
15A	BS-691682	1	/P	Plug-Oil Drain (Flush)
16	BS-699449	1		Crankshaft Used on Type No(s). 0590, 0591.
16	BS-699445	1		Crankshaft Used on Type No(s). 1013, 1015.
18	BS-699804	1		Cover-Crankcase Used on Type No(s). 0590, 0591.
18	BS-699696	1		Cover-Crankcase Used on Type No(s). 1013, 1015.
20	BS-692550	1		Seal-Oil (PTO Side)
21	BS-281658S	1	/P	Cap-Oil Fill
22	BS-699478	1		Screw (Crankcase Cover/ Sump)
23	BS-699488	1		Flywheel Used on Type No(s). 0590, 1013, 1015.
23	BS-699514	1		Flywheel Used on Type No(s). 0591.
24	BS-222698S	1	/P	Key-Flywheel
25	BS-791786	1		Piston Assembly (Standard)
25	BS-791791	1		Piston Assembly (.020" Oversize)
26	BS-791787	1		Ring Set (Standard)
26	BS-791792	1		Ring Set (.020" Oversize)
27	BS-690975	1		Lock-Piston Pin
28	BS-690229	1		Pin-Piston
29B	BS-791783	1		Rod-Connecting
32	BS-791784	1		Screw (Connecting Rod)
33	BS-499642	1		Valve-Exhaust
34	BS-499641	1	S	Valve-Intake
35	BS-691304	1		Spring-Valve (Intake)
36	BS-691304	1		Spring-Valve (Exhaust)
37	BS-699661	1		Guard-Flywheel
40	BS-692194	1		Retainer-Valve
45	BS-690977	1	/P	Tappet-Valve
46	BS-693404	1		Camshaft
51	BS-791718	1		Gasket-Intake
55	BS-691422	1		Housing-Rewind Starter (Rewind Starter Parts Used With 3MM Diameter Starter Rope)
55	BS-791848	1		Housing-Rewind Starter (Rewind Starter Parts Used With 5MM Diameter Starter Rope)
58	BS-693389	1		Rope-Starter (Rewind Starter Parts Used With 3MM Diameter Starter Rope)
58	BS-66574	1		Rope-Starter (Rewind Starter Parts Used With 5MM Diameter Starter Rope)
60	BS-490652	1		Grip-Starter Rope

21AA414E290 (2008)
Engine Assembly 1 E290

Page 5 of 40

Ref #	Part Number	Qty	S/P/F	Description
78	BS-699205	1		Screw (Flywheel Guard)
95	BS-691636	1	/P	Screw (Throttle Valve)
97	BS-690024	1		Shaft-Throttle
98	BS-398185	1		Kit-Idle Speed (Carburetor)
104	BS-691242	1	/P	Pin-Float Hinge
108A	BS-695807	1		Valve-Choke
109C	BS-790624	1		Shaft-Choke
117	BS-697355	1		Jet-Main(Standard)
118	BS-494870	1		Jet-Main (High Altitude)
121	BS-792006	1		Kit-Carburetor Overhaul
122	BS-791717	1		Spacer-Carburetor
125	BS-697354	1		Carburetor
127	BS-691739	1		Plug-Welch
130	BS-691181	1		Valve-Throttle
133	BS-398187	1		Float-Carburetor
134	BS-398188	1	/P	Kit-Needle/Seat
137	BS-693981	1	/P	Gasket-Float Bowl
146	BS-690979	1	/P	Key-Timing
155	BS-698214	1		Plate-Cylinder Head
161A	BS-790631	1		Base-Air Cleaner(Ultra Low Air Cleaner)
163	BS-696024	1		Gasket-Air Cleaner (Flat Panel Air Cleaner)
186	BS-692317	1	/P	Connector-Hose
187	BS-791766	1	S	Line-Fuel (Cut to Required Length)
187A	BS-791867	1		Line-Fuel (Molded)
187B	BS-791874	1		Line-Fuel (Molded)
188	BS-699479	1		Screw Control Bracket)
190	BS-699220	1		Screw (Fuel Tank)
192	BS-694543	1	/P	Adjustor-Rocker Arm
209	BS-692571	1		Spring-Governor
209A	BS-691278	1		Spring-Governor
219	BS-693578	1		Gear-Governor
220	BS-691724	1		Washer (Governor Gear)
222D	BS-793107	1		Bracket-Control
227	BS-692573	1		Lever-Governor Control
238	BS-691300	1	/P	Valve-Cap
265	BS-691024	1	/P	Clamp-Casing
267	BS-699492	1		Screw (Casing Clamp)
268	BS-691025	1		Casing-Control Wire (Cut to Required Length)
269	BS-691026	1		Wire-Control (Cut to Required Length)
270	BS-691027	1		Nut (Control Wire Casing)
271	BS-691028	1		Lever-Control
271A	BS-694256	1		Lever-Control
276	BS-271716	1		Washer-Sealing
281	BS-793122	1		Panel-Control
286	BS-794185	1		Module-Oil Sensor
287	BS-699629	1		Screw (Dipstick Tube)
300	BS-693593	1		Muffler
304	BS-699598	1		Housing-Blower
305	BS-699480	1	S	Screw (Blower Housing)
306	BS-693610	1		Shield-Cylinder
307	BS-699234	1		Screw (Cylinder Shield)

21AA414E290 (2008)
Engine Assembly 1 E290

Page 6 of 40

Ref #	Part Number	Qty	S/P/F	Description
309	BS-694504	1		Motor-Starter
310	BS-690323	1		Screw (Starter Motor)
311	BS-497608	1		Brush Set
332A	BS-792723	1		Nut (Flywheel)
333	BS-695711	1	S	Armature-Magneto
334	BS-699477	1		Screw (Magneto Armature)
337	759-3336	1	/P	Plug-Spark(Resistor)
337	BS-691043	1	/P	Plug-Spark(EMS)
356A	BS-692390	1	/P	Wire-Stop
358B	BS-791797	1		Gasket Set-Engine
363	BS-19203	1		Puller-Flywheel
364	BS-695693	1		Terminal-Oil Plug
365	BS-699484	1		Screw (Carburetor)
383	BS-19374S	1		Wrench-Spark Plug
415	BS-693463	1		Plug
425A	BS-699492	1		Screw (Air Cleaner Cover)
427	BS-694255	1		Nut (Control Bracket)
445	BS-491588S	1	/P	Filter-Air Cleaner Cartridge
455	BS-692591	1		Cup-Flywheel
456	BS-692299	1		Plate-Pawl Friction
459	BS-281505S	1	/P	Pawl-Ratchet
474	BS-694457	1		Alternator
504	BS-694254	1		Washer Set-Friction
505	BS-691251	1		Nut (Governor Control Lever)
510	BS-499308	1		Drive-Starter
513	BS-692024	1		Drive-Clutch
523	BS-790546	1		Dipstick
524	BS-281370S	1	/P	Seal-Dipstick Tube
544	BS-692966	1		Armature-Starter
552	BS-692346	1		Bushing-Governor Crank
562	BS-691119	1		Bolt (Governor Control Lever)
564	BS-699491	1		Screw (Control Cover)
564A	BS-699206	1		Screw (Control Cover)
597	BS-691696	1	/P	Screw (Pawl Friction Plate)
601	BS-791850	1	/P	Clamp-Hose
604	BS-697326	1		Cover-Control
608	BS-693394	1		Starter-Rewind
608	BS-791670	1		Starter-Rewind
613	BS-699209	1	S	Screw (Muffler)
615	BS-692576	1		Retainer-Governor Shaft
616	BS-692547	1		Crank-Governor
619	BS-699480	1	S	Screw (Cylinder Head Plate)
621	BS-692310	1	/P	Switch-Stop
632	BS-693408	1		Spring/Link- Mechanical Governor
633	BS-693867	1		Seal-Choke/Throttle Shaft
633A	BS-691321	1		Seal-Choke/Throttle Shaft
635	BS-692076	1	/P	Boot-Spark Plug
635A	BS-692927	1		Boot-Spark Plug
663	BS-699206	1		Screw (Control Panel)
668	BS-694257	1		Spacer
675	BS-691261	1		Washer (Brush Retainer)
676	BS-393757	1	S	Deflector-Muffler
677	BS-690661	1	/P	Seal-Deflector

21AA414E290 (2008)
Engine Assembly 1 E290

Page 7 of 40

Ref #	Part Number	Qty	S/P/F	Description
689	BS-691855	1	/P	Spring-Friction
692	BS-690572	1	/P	Spring-Detent
697	BS-790537	1	/P	Screw (Starter Motor)
718	BS-690959	1	/P	Pin-Locating
725	BS-792874	1		Shield-Heat
728	BS-699632	1		Screw (Heat Shield)
741	BS-695087	1		Gear-Timing
742	BS-692564	1		Retainer-E Ring
746	BS-790278	1		Gear-Idler
773	BS-694258	1		Retainer
783	BS-692353	1		Gear-Pinion
797	BS-691029	1		Nut (Brush Retainer)
799	BS-699202	1		Screw (Oil Sensor)
801	BS-694482	1		Cap-Drive
802	BS-691286	1		Cap-End
803	BS-693757	1		Housing-Starter
830	BS-694544	1		Stud-Rocker Arm
832	BS-693583	1		Guard-Muffler
836	BS-699203	1		Screw (Muffler Guard)
836A	BS-699632	1		Screw (Muffler Guard)
842	BS-691031	1	/P	Seal-O Ring (Dipstick Tube)
847	BS-790545	1		Dipstick/Tube Assembly
851	BS-493880S	1	/P	Terminal-Spark Plug
868	BS-692044	1	/P	Seal-Valve
883	BS-691893	1	/P	Gasket-Exhaust
914	BS-699480	1	S	Screw (Rocker Cover)(Bottom)
914A	BS-692557	1		Screw (Rocker Cover) (Top)
914B	BS-697551	1		Screw (Rocker Cover) (Center)
951	BS-790630	1		Lever-Choke
957	BS-795027	1	/P	Cap-Fuel Tank
958	BS-698180	1		Valve-Fuel Shut Off
967	BS-493537S	1	/P	Filter-Pre Cleaner (Flat Panel)
968B	BS-791082	1		Cover-Air Cleaner (Ultra Low Air Cleaner)
971	BS-690370	1		Screw (Air Cleaner Base)
972	BS-694260	1	/P	Tank-Fuel
975	BS-493640	1	S	Bowl-Float
977	BS-792007	1		Gasket Set-Carburetor
993	BS-694088	1	/P	Gasket-Cylinder Head Plate
1005A	BS-794273	1		Fan-Flywheel
1022	BS-691890	1	/P	Gasket-Rocker Cover
1023	BS-499924	1		Cover-Rocker Arm
1026	BS-790287	1		Rod-Push
1029	BS-691230	1	/P	Arm-Rocker
1034	BS-691343	1	/P	Guide-Push Rod
1036		1		Label-Emissions (Available From An Authorized Briggs & Stratton Service Dealer)
1051	BS-691265	1		Ring-Retaining
1052	BS-790141	1		Sensor-Oil
1090	BS-691293	1		Retainer-Brush
1095A	BS-791798	1		Gasket Set-Valve
1119	BS-699772	1		Screw (Alternator)










21AA414E290 (2008)
Engine Assembly 1 E290

Page 8 of 40

Ref #	Part Number	Qty	S/P/F	Description
1210	BS-498144	1	/P	Pulley/Spring Assembly (Pulley) (Rewind Starter Parts Used With 3MM Diameter Starter Rope)
1210	BS-791849	1		Pulley/Spring Assembly (Pulley) (Rewind Starter Parts Used With 5MM Diameter Starter Rope)
1211	BS-498144	1	/P	Pulley/Spring Assembly(Spring) (Rewind Starter Parts Used With 3MM Diameter Starter Rope)
1211	BS-791849	1		Pulley/Spring Assembly(Spring) (Rewind Starter Parts Used With 5MM Diameter Starter Rope)
1305	BS-699691	1		Screw (Oil Sensor Module)
1319	BS-794467	1		Label-Warning

21AA414E290 (2008)
Engine Assembly 2 E290

         Page 9 of 40

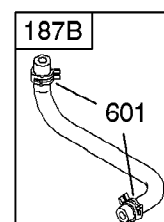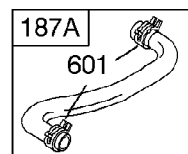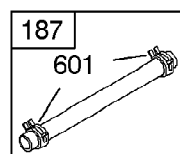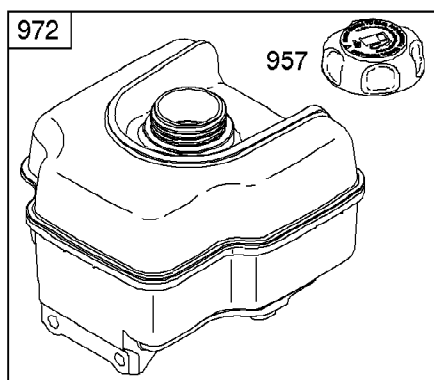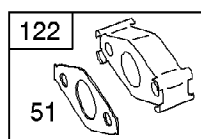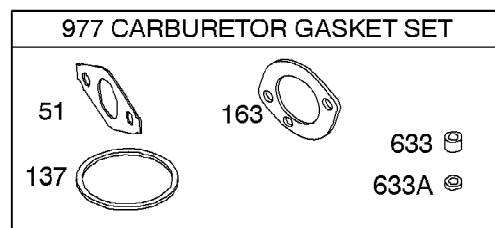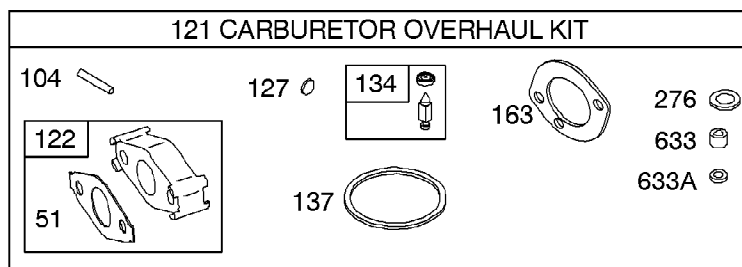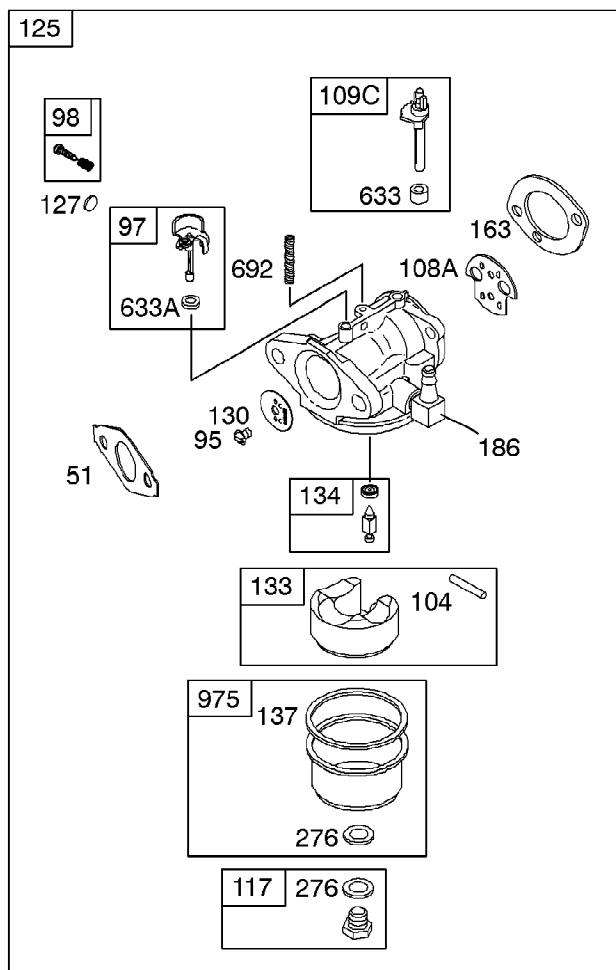

Ref #	Part Number	Qty	S/P/F	Description
1	BS-791762	1	S	Cylinder Assembly
2	BS-399269	1	/P	Kit-Bushing/Seal (Magneto Side)
3	BS-299819	1		Seal-Oil (Magneto Side)
5	BS-791720	1		Head-Cylinder
7B	BS-791716	1		Gasket-Cylinder Head
11B	BS-790632	1		Tube-Breather (Ultra Low Air Cleaner)
12	BS-699485	1		Gasket-Crankcase
13	BS-699482	1		Screw (Cylinder Head)
15	BS-691686	1	/P	Plug-Oil Drain (Square Head)
15A	BS-691682	1	/P	Plug-Oil Drain (Flush)
16	BS-699449	1		Crankshaft Used on Type No(s). 0590, 0591.
16	BS-699445	1		Crankshaft Used on Type No(s). 1013, 1015.
18	BS-699804	1		Cover-Crankcase Used on Type No(s). 0590, 0591.
18	BS-699696	1		Cover-Crankcase Used on Type No(s). 1013, 1015.
20	BS-692550	1		Seal-Oil (PTO Side)
21	BS-281658S	1	/P	Cap-Oil Fill
22	BS-699478	1		Screw (Crankcase Cover/ Sump)
23	BS-699488	1		Flywheel Used on Type No(s). 0590, 1013, 1015.
23	BS-699514	1		Flywheel Used on Type No(s). 0591.
24	BS-222698S	1	/P	Key-Flywheel
25	BS-791786	1		Piston Assembly (Standard)
25	BS-791791	1		Piston Assembly (.020" Oversize)
26	BS-791787	1		Ring Set (Standard)
26	BS-791792	1		Ring Set (.020" Oversize)
27	BS-690975	1		Lock-Piston Pin
28	BS-690229	1		Pin-Piston
29B	BS-791783	1		Rod-Connecting
32	BS-791784	1		Screw (Connecting Rod)
33	BS-499642	1		Valve-Exhaust
34	BS-499641	1	S	Valve-Intake
35	BS-691304	1		Spring-Valve (Intake)
36	BS-691304	1		Spring-Valve (Exhaust)
37	BS-699661	1		Guard-Flywheel
40	BS-692194	1		Retainer-Valve
45	BS-690977	1	/P	Tappet-Valve
46	BS-693404	1		Camshaft
51	BS-791718	1		Gasket-Intake
55	BS-691422	1		Housing-Rewind Starter (Rewind Starter Parts Used With 3MM Diameter Starter Rope)
55	BS-791848	1		Housing-Rewind Starter (Rewind Starter Parts Used With 5MM Diameter Starter Rope)
58	BS-693389	1		Rope-Starter (Rewind Starter Parts Used With 3MM Diameter Starter Rope)
58	BS-66574	1		Rope-Starter (Rewind Starter Parts Used With 5MM Diameter Starter Rope)
60	BS-490652	1		Grip-Starter Rope

21AA414E290 (2008)
Engine Assembly 2 E290

Page 11 of 40

Ref #	Part Number	Qty	S/P/F	Description
78	BS-699205	1		Screw (Flywheel Guard)
95	BS-691636	1	/P	Screw (Throttle Valve)
97	BS-690024	1		Shaft-Throttle
98	BS-398185	1		Kit-Idle Speed (Carburetor)
104	BS-691242	1	/P	Pin-Float Hinge
108A	BS-695807	1		Valve-Choke
109C	BS-790624	1		Shaft-Choke
117	BS-697355	1		Jet-Main(Standard)
118	BS-494870	1		Jet-Main (High Altitude)
121	BS-792006	1		Kit-Carburetor Overhaul
122	BS-791717	1		Spacer-Carburetor
125	BS-697354	1		Carburetor
127	BS-691739	1		Plug-Welch
130	BS-691181	1		Valve-Throttle
133	BS-398187	1		Float-Carburetor
134	BS-398188	1	/P	Kit-Needle/Seat
137	BS-693981	1	/P	Gasket-Float Bowl
146	BS-690979	1	/P	Key-Timing
155	BS-698214	1		Plate-Cylinder Head
161A	BS-790631	1		Base-Air Cleaner(Ultra Low Air Cleaner)
163	BS-696024	1		Gasket-Air Cleaner (Flat Panel Air Cleaner)
186	BS-692317	1	/P	Connector-Hose
187	BS-791766	1	S	Line-Fuel (Cut to Required Length)
187A	BS-791867	1		Line-Fuel (Molded)
187B	BS-791874	1		Line-Fuel (Molded)
188	BS-699479	1		Screw Control Bracket)
190	BS-699220	1		Screw (Fuel Tank)
192	BS-694543	1	/P	Adjustor-Rocker Arm
209	BS-692571	1		Spring-Governor
209A	BS-691278	1		Spring-Governor
219	BS-693578	1		Gear-Governor
220	BS-691724	1		Washer (Governor Gear)
222D	BS-793107	1		Bracket-Control
227	BS-692573	1		Lever-Governor Control
238	BS-691300	1	/P	Valve-Cap
265	BS-691024	1	/P	Clamp-Casing
267	BS-699492	1		Screw (Casing Clamp)
268	BS-691025	1		Casing-Control Wire (Cut to Required Length)
269	BS-691026	1		Wire-Control (Cut to Required Length)
270	BS-691027	1		Nut (Control Wire Casing)
271	BS-691028	1		Lever-Control
271A	BS-694256	1		Lever-Control
276	BS-271716	1		Washer-Sealing
281	BS-793122	1		Panel-Control
286	BS-794185	1		Module-Oil Sensor
287	BS-699629	1		Screw (Dipstick Tube)
300	BS-693593	1		Muffler
304	BS-699598	1		Housing-Blower
305	BS-699480	1	S	Screw (Blower Housing)
306	BS-693610	1		Shield-Cylinder
307	BS-699234	1		Screw (Cylinder Shield)

21AA414E290 (2008)
Engine Assembly 2 E290

Page 12 of 40

Ref #	Part Number	Qty	S/P/F	Description
309	BS-694504	1		Motor-Starter
310	BS-690323	1		Screw (Starter Motor)
311	BS-497608	1		Brush Set
332A	BS-792723	1		Nut (Flywheel)
333	BS-695711	1	S	Armature-Magneto
334	BS-699477	1		Screw (Magneto Armature)
337	759-3336	1	/P	Plug-Spark(Resistor)
337	BS-691043	1	/P	Plug-Spark(EMS)
356A	BS-692390	1	/P	Wire-Stop
358B	BS-791797	1		Gasket Set-Engine
363	BS-19203	1		Puller-Flywheel
364	BS-695693	1		Terminal-Oil Plug
365	BS-699484	1		Screw (Carburetor)
383	BS-19374S	1		Wrench-Spark Plug
415	BS-693463	1		Plug
425A	BS-699492	1		Screw (Air Cleaner Cover)
427	BS-694255	1		Nut (Control Bracket)
445	BS-491588S	1	/P	Filter-Air Cleaner Cartridge
455	BS-692591	1		Cup-Flywheel
456	BS-692299	1		Plate-Pawl Friction
459	BS-281505S	1	/P	Pawl-Ratchet
474	BS-694457	1		Alternator
504	BS-694254	1		Washer Set-Friction
505	BS-691251	1		Nut (Governor Control Lever)
510	BS-499308	1		Drive-Starter
513	BS-692024	1		Drive-Clutch
523	BS-790546	1		Dipstick
524	BS-281370S	1	/P	Seal-Dipstick Tube
544	BS-692966	1		Armature-Starter
552	BS-692346	1		Bushing-Governor Crank
562	BS-691119	1		Bolt (Governor Control Lever)
564	BS-699491	1		Screw (Control Cover)
564A	BS-699206	1		Screw (Control Cover)
597	BS-691696	1	/P	Screw (Pawl Friction Plate)
601	BS-791850	1	/P	Clamp-Hose
604	BS-697326	1		Cover-Control
608	BS-693394	1		Starter-Rewind
608	BS-791670	1		Starter-Rewind
613	BS-699209	1	S	Screw (Muffler)
615	BS-692576	1		Retainer-Governor Shaft
616	BS-692547	1		Crank-Governor
619	BS-699480	1	S	Screw (Cylinder Head Plate)
621	BS-692310	1	/P	Switch-Stop
632	BS-693408	1		Spring/Link- Mechanical Governor
633	BS-693867	1		Seal-Choke/Throttle Shaft
633A	BS-691321	1		Seal-Choke/Throttle Shaft
635	BS-692076	1	/P	Boot-Spark Plug
635A	BS-692927	1		Boot-Spark Plug
663	BS-699206	1		Screw (Control Panel)
668	BS-694257	1		Spacer
675	BS-691261	1		Washer (Brush Retainer)
676	BS-393757	1	S	Deflector-Muffler
677	BS-690661	1	/P	Seal-Deflector

21AA414E290 (2008)
Engine Assembly 2 E290

Page 13 of 40

Ref #	Part Number	Qty	S/P/F	Description
689	BS-691855	1	/P	Spring-Friction
692	BS-690572	1	/P	Spring-Detent
697	BS-790537	1	/P	Screw (Starter Motor)
718	BS-690959	1	/P	Pin-Locating
725	BS-792874	1		Shield-Heat
728	BS-699632	1		Screw (Heat Shield)
741	BS-695087	1		Gear-Timing
742	BS-692564	1		Retainer-E Ring
746	BS-790278	1		Gear-Idler
773	BS-694258	1		Retainer
783	BS-692353	1		Gear-Pinion
797	BS-691029	1		Nut (Brush Retainer)
799	BS-699202	1		Screw (Oil Sensor)
801	BS-694482	1		Cap-Drive
802	BS-691286	1		Cap-End
803	BS-693757	1		Housing-Starter
830	BS-694544	1		Stud-Rocker Arm
832	BS-693583	1		Guard-Muffler
836	BS-699203	1		Screw (Muffler Guard)
836A	BS-699632	1		Screw (Muffler Guard)
842	BS-691031	1	/P	Seal-O Ring (Dipstick Tube)
847	BS-790545	1		Dipstick/Tube Assembly
851	BS-493880S	1	/P	Terminal-Spark Plug
868	BS-692044	1	/P	Seal-Valve
883	BS-691893	1	/P	Gasket-Exhaust
914	BS-699480	1	S	Screw (Rocker Cover)(Bottom)
914A	BS-692557	1		Screw (Rocker Cover) (Top)
914B	BS-697551	1		Screw (Rocker Cover) (Center)
951	BS-790630	1		Lever-Choke
957	BS-795027	1	/P	Cap-Fuel Tank
958	BS-698180	1		Valve-Fuel Shut Off
967	BS-493537S	1	/P	Filter-Pre Cleaner (Flat Panel)
968B	BS-791082	1		Cover-Air Cleaner (Ultra Low Air Cleaner)
971	BS-690370	1		Screw (Air Cleaner Base)
972	BS-694260	1	/P	Tank-Fuel
975	BS-493640	1	S	Bowl-Float
977	BS-792007	1		Gasket Set-Carburetor
993	BS-694088	1	/P	Gasket-Cylinder Head Plate
1005A	BS-794273	1		Fan-Flywheel
1022	BS-691890	1	/P	Gasket-Rocker Cover
1023	BS-499924	1		Cover-Rocker Arm
1026	BS-790287	1		Rod-Push
1029	BS-691230	1	/P	Arm-Rocker
1034	BS-691343	1	/P	Guide-Push Rod
1036		1		Label-Emissions (Available From An Authorized Briggs & Stratton Service Dealer)
1051	BS-691265	1		Ring-Retaining
1052	BS-790141	1		Sensor-Oil
1090	BS-691293	1		Retainer-Brush
1095A	BS-791798	1		Gasket Set-Valve
1119	BS-699772	1		Screw (Alternator)












21AA414E290 (2008)
Engine Assembly 2 E290

Page 14 of 40

Ref #	Part Number	Qty	S/P/F	Description
1210	BS-498144	1	/P	Pulley/Spring Assembly (Pulley) (Rewind Starter Parts Used With 3MM Diameter Starter Rope)
1210	BS-791849	1		Pulley/Spring Assembly (Pulley) (Rewind Starter Parts Used With 5MM Diameter Starter Rope)
1211	BS-498144	1	/P	Pulley/Spring Assembly(Spring) (Rewind Starter Parts Used With 3MM Diameter Starter Rope)
1211	BS-791849	1		Pulley/Spring Assembly(Spring) (Rewind Starter Parts Used With 5MM Diameter Starter Rope)
1305	BS-699691	1		Screw (Oil Sensor Module)
1319	BS-794467	1		Label-Warning

21AA414E290 (2008)
Engine Assembly 3 E290

           Page 15 of 40

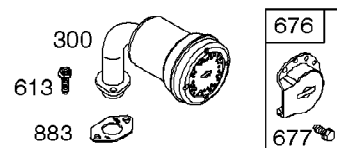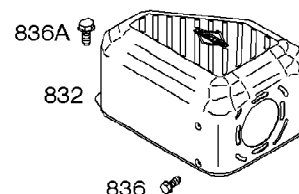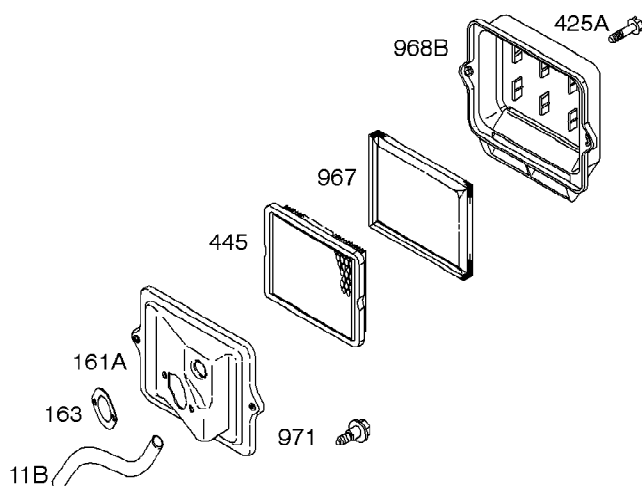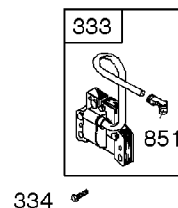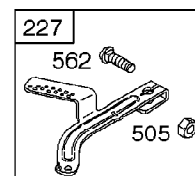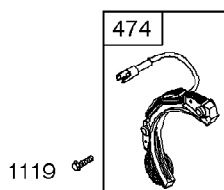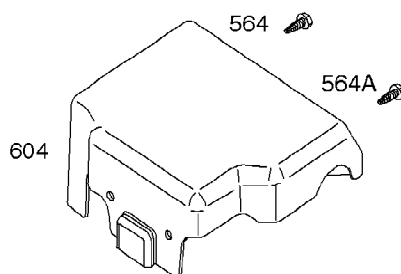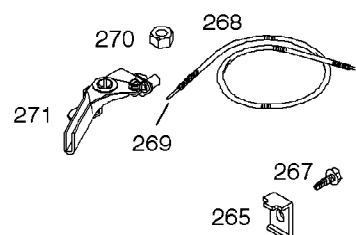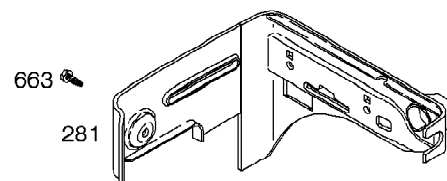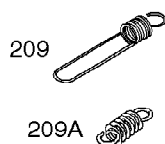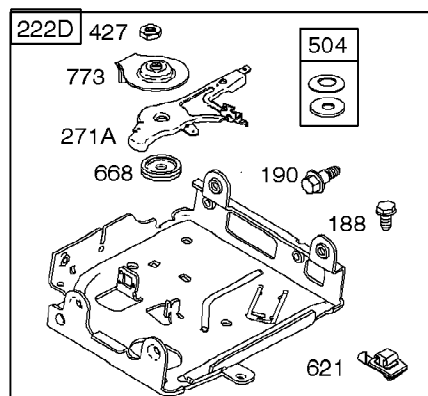

21AA414E290 (2008)
Engine Assembly 3 E290

Page 16 of 40

Ref #	Part Number	Qty	S/P/F	Description
1	BS-791762	1	S	Cylinder Assembly
2	BS-399269	1	/P	Kit-Bushing/Seal (Magneto Side)
3	BS-299819	1		Seal-Oil (Magneto Side)
5	BS-791720	1		Head-Cylinder
7B	BS-791716	1		Gasket-Cylinder Head
11B	BS-790632	1		Tube-Breather (Ultra Low Air Cleaner)
12	BS-699485	1		Gasket-Crankcase
13	BS-699482	1		Screw (Cylinder Head)
15	BS-691686	1	/P	Plug-Oil Drain (Square Head)
15A	BS-691682	1	/P	Plug-Oil Drain (Flush)
16	BS-699449	1		Crankshaft Used on Type No(s). 0590, 0591.
16	BS-699445	1		Crankshaft Used on Type No(s). 1013, 1015.
18	BS-699804	1		Cover-Crankcase Used on Type No(s). 0590, 0591.
18	BS-699696	1		Cover-Crankcase Used on Type No(s). 1013, 1015.
20	BS-692550	1		Seal-Oil (PTO Side)
21	BS-281658S	1	/P	Cap-Oil Fill
22	BS-699478	1		Screw (Crankcase Cover/ Sump)
23	BS-699488	1		Flywheel Used on Type No(s). 0590, 1013, 1015.
23	BS-699514	1		Flywheel Used on Type No(s). 0591.
24	BS-222698S	1	/P	Key-Flywheel
25	BS-791786	1		Piston Assembly (Standard)
25	BS-791791	1		Piston Assembly (.020" Oversize)
26	BS-791787	1		Ring Set (Standard)
26	BS-791792	1		Ring Set (.020" Oversize)
27	BS-690975	1		Lock-Piston Pin
28	BS-690229	1		Pin-Piston
29B	BS-791783	1		Rod-Connecting
32	BS-791784	1		Screw (Connecting Rod)
33	BS-499642	1		Valve-Exhaust
34	BS-499641	1	S	Valve-Intake
35	BS-691304	1		Spring-Valve (Intake)
36	BS-691304	1		Spring-Valve (Exhaust)
37	BS-699661	1		Guard-Flywheel
40	BS-692194	1		Retainer-Valve
45	BS-690977	1	/P	Tappet-Valve
46	BS-693404	1		Camshaft
51	BS-791718	1		Gasket-Intake
55	BS-691422	1		Housing-Rewind Starter (Rewind Starter Parts Used With 3MM Diameter Starter Rope)
55	BS-791848	1		Housing-Rewind Starter (Rewind Starter Parts Used With 5MM Diameter Starter Rope)
58	BS-693389	1		Rope-Starter (Rewind Starter Parts Used With 3MM Diameter Starter Rope)
58	BS-66574	1		Rope-Starter (Rewind Starter Parts Used With 5MM Diameter Starter Rope)
60	BS-490652	1		Grip-Starter Rope

21AA414E290 (2008)
Engine Assembly 3 E290

Page 17 of 40

Ref #	Part Number	Qty	S/P/F	Description
78	BS-699205	1		Screw (Flywheel Guard)
95	BS-691636	1	/P	Screw (Throttle Valve)
97	BS-690024	1		Shaft-Throttle
98	BS-398185	1		Kit-Idle Speed (Carburetor)
104	BS-691242	1	/P	Pin-Float Hinge
108A	BS-695807	1		Valve-Choke
109C	BS-790624	1		Shaft-Choke
117	BS-697355	1		Jet-Main(Standard)
118	BS-494870	1		Jet-Main (High Altitude)
121	BS-792006	1		Kit-Carburetor Overhaul
122	BS-791717	1		Spacer-Carburetor
125	BS-697354	1		Carburetor
127	BS-691739	1		Plug-Welch
130	BS-691181	1		Valve-Throttle
133	BS-398187	1		Float-Carburetor
134	BS-398188	1	/P	Kit-Needle/Seat
137	BS-693981	1	/P	Gasket-Float Bowl
146	BS-690979	1	/P	Key-Timing
155	BS-698214	1		Plate-Cylinder Head
161A	BS-790631	1		Base-Air Cleaner(Ultra Low Air Cleaner)
163	BS-696024	1		Gasket-Air Cleaner (Flat Panel Air Cleaner)
186	BS-692317	1	/P	Connector-Hose
187	BS-791766	1	S	Line-Fuel (Cut to Required Length)
187A	BS-791867	1		Line-Fuel (Molded)
187B	BS-791874	1		Line-Fuel (Molded)
188	BS-699479	1		Screw Control Bracket)
190	BS-699220	1		Screw (Fuel Tank)
192	BS-694543	1	/P	Adjustor-Rocker Arm
209	BS-692571	1		Spring-Governor
209A	BS-691278	1		Spring-Governor
219	BS-693578	1		Gear-Governor
220	BS-691724	1		Washer (Governor Gear)
222D	BS-793107	1		Bracket-Control
227	BS-692573	1		Lever-Governor Control
238	BS-691300	1	/P	Valve-Cap
265	BS-691024	1	/P	Clamp-Casing
267	BS-699492	1		Screw (Casing Clamp)
268	BS-691025	1		Casing-Control Wire (Cut to Required Length)
269	BS-691026	1		Wire-Control (Cut to Required Length)
270	BS-691027	1		Nut (Control Wire Casing)
271	BS-691028	1		Lever-Control
271A	BS-694256	1		Lever-Control
276	BS-271716	1		Washer-Sealing
281	BS-793122	1		Panel-Control
286	BS-794185	1		Module-Oil Sensor
287	BS-699629	1		Screw (Dipstick Tube)
300	BS-693593	1		Muffler
304	BS-699598	1		Housing-Blower
305	BS-699480	1	S	Screw (Blower Housing)
306	BS-693610	1		Shield-Cylinder
307	BS-699234	1		Screw (Cylinder Shield)

21AA414E290 (2008)
Engine Assembly 3 E290

Page 18 of 40

Ref #	Part Number	Qty	S/P/F	Description
309	BS-694504	1		Motor-Starter
310	BS-690323	1		Screw (Starter Motor)
311	BS-497608	1		Brush Set
332A	BS-792723	1		Nut (Flywheel)
333	BS-695711	1	S	Armature-Magneto
334	BS-699477	1		Screw (Magneto Armature)
337	759-3336	1	/P	Plug-Spark(Resistor)
337	BS-691043	1	/P	Plug-Spark(EMS)
356A	BS-692390	1	/P	Wire-Stop
358B	BS-791797	1		Gasket Set-Engine
363	BS-19203	1		Puller-Flywheel
364	BS-695693	1		Terminal-Oil Plug
365	BS-699484	1		Screw (Carburetor)
383	BS-19374S	1		Wrench-Spark Plug
415	BS-693463	1		Plug
425A	BS-699492	1		Screw (Air Cleaner Cover)
427	BS-694255	1		Nut (Control Bracket)
445	BS-491588S	1	/P	Filter-Air Cleaner Cartridge
455	BS-692591	1		Cup-Flywheel
456	BS-692299	1		Plate-Pawl Friction
459	BS-281505S	1	/P	Pawl-Ratchet
474	BS-694457	1		Alternator
504	BS-694254	1		Washer Set-Friction
505	BS-691251	1		Nut (Governor Control Lever)
510	BS-499308	1		Drive-Starter
513	BS-692024	1		Drive-Clutch
523	BS-790546	1		Dipstick
524	BS-281370S	1	/P	Seal-Dipstick Tube
544	BS-692966	1		Armature-Starter
552	BS-692346	1		Bushing-Governor Crank
562	BS-691119	1		Bolt (Governor Control Lever)
564	BS-699491	1		Screw (Control Cover)
564A	BS-699206	1		Screw (Control Cover)
597	BS-691696	1	/P	Screw (Pawl Friction Plate)
601	BS-791850	1	/P	Clamp-Hose
604	BS-697326	1		Cover-Control
608	BS-693394	1		Starter-Rewind
608	BS-791670	1		Starter-Rewind
613	BS-699209	1	S	Screw (Muffler)
615	BS-692576	1		Retainer-Governor Shaft
616	BS-692547	1		Crank-Governor
619	BS-699480	1	S	Screw (Cylinder Head Plate)
621	BS-692310	1	/P	Switch-Stop
632	BS-693408	1		Spring/Link- Mechanical Governor
633	BS-693867	1		Seal-Choke/Throttle Shaft
633A	BS-691321	1		Seal-Choke/Throttle Shaft
635	BS-692076	1	/P	Boot-Spark Plug
635A	BS-692927	1		Boot-Spark Plug
663	BS-699206	1		Screw (Control Panel)
668	BS-694257	1		Spacer
675	BS-691261	1		Washer (Brush Retainer)
676	BS-393757	1	S	Deflector-Muffler
677	BS-690661	1	/P	Seal-Deflector

21AA414E290 (2008)
Engine Assembly 3 E290

Page 19 of 40

Ref #	Part Number	Qty	S/P/F	Description
689	BS-691855	1	/P	Spring-Friction
692	BS-690572	1	/P	Spring-Detent
697	BS-790537	1	/P	Screw (Starter Motor)
718	BS-690959	1	/P	Pin-Locating
725	BS-792874	1		Shield-Heat
728	BS-699632	1		Screw (Heat Shield)
741	BS-695087	1		Gear-Timing
742	BS-692564	1		Retainer-E Ring
746	BS-790278	1		Gear-Idler
773	BS-694258	1		Retainer
783	BS-692353	1		Gear-Pinion
797	BS-691029	1		Nut (Brush Retainer)
799	BS-699202	1		Screw (Oil Sensor)
801	BS-694482	1		Cap-Drive
802	BS-691286	1		Cap-End
803	BS-693757	1		Housing-Starter
830	BS-694544	1		Stud-Rocker Arm
832	BS-693583	1		Guard-Muffler
836	BS-699203	1		Screw (Muffler Guard)
836A	BS-699632	1		Screw (Muffler Guard)
842	BS-691031	1	/P	Seal-O Ring (Dipstick Tube)
847	BS-790545	1		Dipstick/Tube Assembly
851	BS-493880S	1	/P	Terminal-Spark Plug
868	BS-692044	1	/P	Seal-Valve
883	BS-691893	1	/P	Gasket-Exhaust
914	BS-699480	1	S	Screw (Rocker Cover)(Bottom)
914A	BS-692557	1		Screw (Rocker Cover) (Top)
914B	BS-697551	1		Screw (Rocker Cover) (Center)
951	BS-790630	1		Lever-Choke
957	BS-795027	1	/P	Cap-Fuel Tank
958	BS-698180	1		Valve-Fuel Shut Off
967	BS-493537S	1	/P	Filter-Pre Cleaner (Flat Panel)
968B	BS-791082	1		Cover-Air Cleaner (Ultra Low Air Cleaner)
971	BS-690370	1		Screw (Air Cleaner Base)
972	BS-694260	1	/P	Tank-Fuel
975	BS-493640	1	S	Bowl-Float
977	BS-792007	1		Gasket Set-Carburetor
993	BS-694088	1	/P	Gasket-Cylinder Head Plate
1005A	BS-794273	1		Fan-Flywheel
1022	BS-691890	1	/P	Gasket-Rocker Cover
1023	BS-499924	1		Cover-Rocker Arm
1026	BS-790287	1		Rod-Push
1029	BS-691230	1	/P	Arm-Rocker
1034	BS-691343	1	/P	Guide-Push Rod
1036		1		Label-Emissions (Available From An Authorized Briggs & Stratton Service Dealer)
1051	BS-691265	1		Ring-Retaining
1052	BS-790141	1		Sensor-Oil
1090	BS-691293	1		Retainer-Brush
1095A	BS-791798	1		Gasket Set-Valve
1119	BS-699772	1		Screw (Alternator)





21AA414E290 (2008)
Engine Assembly 3 E290

Page 20 of 40


Ref #	Part Number	Qty	S/P/F	Description
1210	BS-498144	1	/P	Pulley/Spring Assembly (Pulley) (Rewind Starter Parts Used With 3MM Diameter Starter Rope)
1210	BS-791849	1		Pulley/Spring Assembly (Pulley) (Rewind Starter Parts Used With 5MM Diameter Starter Rope)
1211	BS-498144	1	/P	Pulley/Spring Assembly(Spring) (Rewind Starter Parts Used With 3MM Diameter Starter Rope)
1211	BS-791849	1		Pulley/Spring Assembly(Spring) (Rewind Starter Parts Used With 5MM Diameter Starter Rope)
1305	BS-699691	1		Screw (Oil Sensor Module)
1319	BS-794467	1		Label-Warning

21AA414E290 (2008)
Engine Assembly 4 E290

    Page 21 of 40

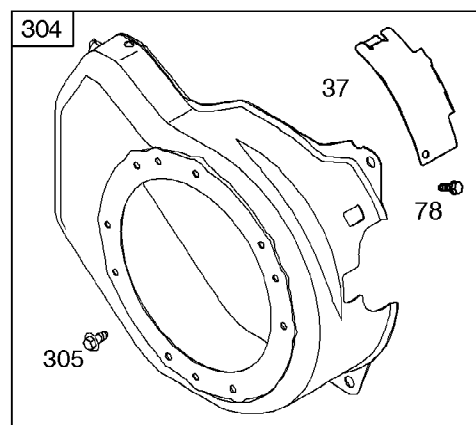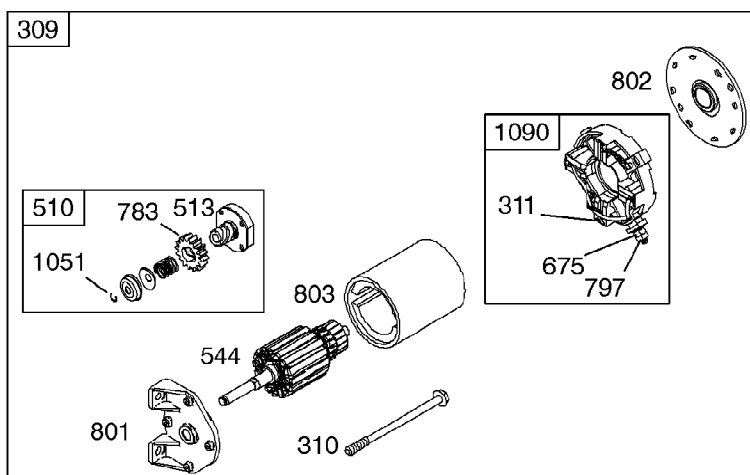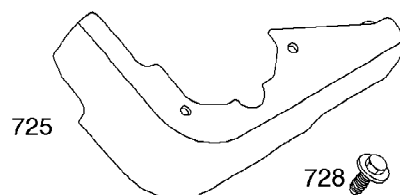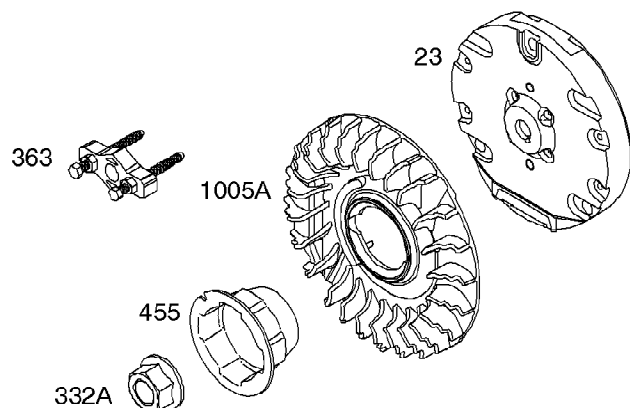

1036 EMISSIONS LABEL

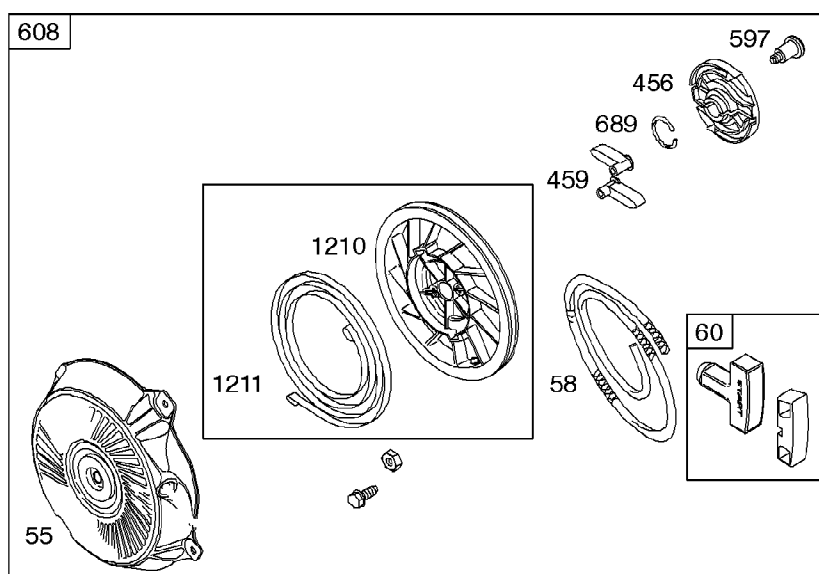 

Ref #	Part Number	Qty	S/P/F	Description
1	BS-791762	1	S	Cylinder Assembly
2	BS-399269	1	/P	Kit-Bushing/Seal (Magneto Side)
3	BS-299819	1		Seal-Oil (Magneto Side)
5	BS-791720	1		Head-Cylinder
7B	BS-791716	1		Gasket-Cylinder Head
11B	BS-790632	1		Tube-Breather (Ultra Low Air Cleaner)
12	BS-699485	1		Gasket-Crankcase
13	BS-699482	1		Screw (Cylinder Head)
15	BS-691686	1	/P	Plug-Oil Drain (Square Head)
15A	BS-691682	1	/P	Plug-Oil Drain (Flush)
16	BS-699449	1		Crankshaft Used on Type No(s). 0590, 0591.
16	BS-699445	1		Crankshaft Used on Type No(s). 1013, 1015.
18	BS-699804	1		Cover-Crankcase Used on Type No(s). 0590, 0591.
18	BS-699696	1		Cover-Crankcase Used on Type No(s). 1013, 1015.
20	BS-692550	1		Seal-Oil (PTO Side)
21	BS-281658S	1	/P	Cap-Oil Fill
22	BS-699478	1		Screw (Crankcase Cover/ Sump)
23	BS-699488	1		Flywheel Used on Type No(s). 0590, 1013, 1015.
23	BS-699514	1		Flywheel Used on Type No(s). 0591.
24	BS-222698S	1	/P	Key-Flywheel
25	BS-791786	1		Piston Assembly (Standard)
25	BS-791791	1		Piston Assembly (.020" Oversize)
26	BS-791787	1		Ring Set (Standard)
26	BS-791792	1		Ring Set (.020" Oversize)
27	BS-690975	1		Lock-Piston Pin
28	BS-690229	1		Pin-Piston
29B	BS-791783	1		Rod-Connecting
32	BS-791784	1		Screw (Connecting Rod)
33	BS-499642	1		Valve-Exhaust
34	BS-499641	1	S	Valve-Intake
35	BS-691304	1		Spring-Valve (Intake)
36	BS-691304	1		Spring-Valve (Exhaust)
37	BS-699661	1		Guard-Flywheel
40	BS-692194	1		Retainer-Valve
45	BS-690977	1	/P	Tappet-Valve
46	BS-693404	1		Camshaft
51	BS-791718	1		Gasket-Intake
55	BS-691422	1		Housing-Rewind Starter (Rewind Starter Parts Used With 3MM Diameter Starter Rope)
55	BS-791848	1		Housing-Rewind Starter (Rewind Starter Parts Used With 5MM Diameter Starter Rope)
58	BS-693389	1		Rope-Starter (Rewind Starter Parts Used With 3MM Diameter Starter Rope)
58	BS-66574	1		Rope-Starter (Rewind Starter Parts Used With 5MM Diameter Starter Rope)
60	BS-490652	1		Grip-Starter Rope

21AA414E290 (2008)
Engine Assembly 4 E290

Page 23 of 40

Ref #	Part Number	Qty	S/P/F	Description
78	BS-699205	1		Screw (Flywheel Guard)
95	BS-691636	1	/P	Screw (Throttle Valve)
97	BS-690024	1		Shaft-Throttle
98	BS-398185	1		Kit-Idle Speed (Carburetor)
104	BS-691242	1	/P	Pin-Float Hinge
108A	BS-695807	1		Valve-Choke
109C	BS-790624	1		Shaft-Choke
117	BS-697355	1		Jet-Main(Standard)
118	BS-494870	1		Jet-Main (High Altitude)
121	BS-792006	1		Kit-Carburetor Overhaul
122	BS-791717	1		Spacer-Carburetor
125	BS-697354	1		Carburetor
127	BS-691739	1		Plug-Welch
130	BS-691181	1		Valve-Throttle
133	BS-398187	1		Float-Carburetor
134	BS-398188	1	/P	Kit-Needle/Seat
137	BS-693981	1	/P	Gasket-Float Bowl
146	BS-690979	1	/P	Key-Timing
155	BS-698214	1		Plate-Cylinder Head
161A	BS-790631	1		Base-Air Cleaner(Ultra Low Air Cleaner)
163	BS-696024	1		Gasket-Air Cleaner (Flat Panel Air Cleaner)
186	BS-692317	1	/P	Connector-Hose
187	BS-791766	1	S	Line-Fuel (Cut to Required Length)
187A	BS-791867	1		Line-Fuel (Molded)
187B	BS-791874	1		Line-Fuel (Molded)
188	BS-699479	1		Screw Control Bracket)
190	BS-699220	1		Screw (Fuel Tank)
192	BS-694543	1	/P	Adjustor-Rocker Arm
209	BS-692571	1		Spring-Governor
209A	BS-691278	1		Spring-Governor
219	BS-693578	1		Gear-Governor
220	BS-691724	1		Washer (Governor Gear)
222D	BS-793107	1		Bracket-Control
227	BS-692573	1		Lever-Governor Control
238	BS-691300	1	/P	Valve-Cap
265	BS-691024	1	/P	Clamp-Casing
267	BS-699492	1		Screw (Casing Clamp)
268	BS-691025	1		Casing-Control Wire (Cut to Required Length)
269	BS-691026	1		Wire-Control (Cut to Required Length)
270	BS-691027	1		Nut (Control Wire Casing)
271	BS-691028	1		Lever-Control
271A	BS-694256	1		Lever-Control
276	BS-271716	1		Washer-Sealing
281	BS-793122	1		Panel-Control
286	BS-794185	1		Module-Oil Sensor
287	BS-699629	1		Screw (Dipstick Tube)
300	BS-693593	1		Muffler
304	BS-699598	1		Housing-Blower
305	BS-699480	1	S	Screw (Blower Housing)
306	BS-693610	1		Shield-Cylinder
307	BS-699234	1		Screw (Cylinder Shield)

21AA414E290 (2008)
Engine Assembly 4 E290

Page 24 of 40

Ref #	Part Number	Qty	S/P/F	Description
309	BS-694504	1		Motor-Starter
310	BS-690323	1		Screw (Starter Motor)
311	BS-497608	1		Brush Set
332A	BS-792723	1		Nut (Flywheel)
333	BS-695711	1	S	Armature-Magneto
334	BS-699477	1		Screw (Magneto Armature)
337	759-3336	1	/P	Plug-Spark(Resistor)
337	BS-691043	1	/P	Plug-Spark(EMS)
356A	BS-692390	1	/P	Wire-Stop
358B	BS-791797	1		Gasket Set-Engine
363	BS-19203	1		Puller-Flywheel
364	BS-695693	1		Terminal-Oil Plug
365	BS-699484	1		Screw (Carburetor)
383	BS-19374S	1		Wrench-Spark Plug
415	BS-693463	1		Plug
425A	BS-699492	1		Screw (Air Cleaner Cover)
427	BS-694255	1		Nut (Control Bracket)
445	BS-491588S	1	/P	Filter-Air Cleaner Cartridge
455	BS-692591	1		Cup-Flywheel
456	BS-692299	1		Plate-Pawl Friction
459	BS-281505S	1	/P	Pawl-Ratchet
474	BS-694457	1		Alternator
504	BS-694254	1		Washer Set-Friction
505	BS-691251	1		Nut (Governor Control Lever)
510	BS-499308	1		Drive-Starter
513	BS-692024	1		Drive-Clutch
523	BS-790546	1		Dipstick
524	BS-281370S	1	/P	Seal-Dipstick Tube
544	BS-692966	1		Armature-Starter
552	BS-692346	1		Bushing-Governor Crank
562	BS-691119	1		Bolt (Governor Control Lever)
564	BS-699491	1		Screw (Control Cover)
564A	BS-699206	1		Screw (Control Cover)
597	BS-691696	1	/P	Screw (Pawl Friction Plate)
601	BS-791850	1	/P	Clamp-Hose
604	BS-697326	1		Cover-Control
608	BS-693394	1		Starter-Rewind
608	BS-791670	1		Starter-Rewind
613	BS-699209	1	S	Screw (Muffler)
615	BS-692576	1		Retainer-Governor Shaft
616	BS-692547	1		Crank-Governor
619	BS-699480	1	S	Screw (Cylinder Head Plate)
621	BS-692310	1	/P	Switch-Stop
632	BS-693408	1		Spring/Link- Mechanical Governor
633	BS-693867	1		Seal-Choke/Throttle Shaft
633A	BS-691321	1		Seal-Choke/Throttle Shaft
635	BS-692076	1	/P	Boot-Spark Plug
635A	BS-692927	1		Boot-Spark Plug
663	BS-699206	1		Screw (Control Panel)
668	BS-694257	1		Spacer
675	BS-691261	1		Washer (Brush Retainer)
676	BS-393757	1	S	Deflector-Muffler
677	BS-690661	1	/P	Seal-Deflector

21AA414E290 (2008)
Engine Assembly 4 E290

Page 25 of 40

Ref #	Part Number	Qty	S/P/F	Description
689	BS-691855	1	/P	Spring-Friction
692	BS-690572	1	/P	Spring-Detent
697	BS-790537	1	/P	Screw (Starter Motor)
718	BS-690959	1	/P	Pin-Locating
725	BS-792874	1		Shield-Heat
728	BS-699632	1		Screw (Heat Shield)
741	BS-695087	1		Gear-Timing
742	BS-692564	1		Retainer-E Ring
746	BS-790278	1		Gear-Idler
773	BS-694258	1		Retainer
783	BS-692353	1		Gear-Pinion
797	BS-691029	1		Nut (Brush Retainer)
799	BS-699202	1		Screw (Oil Sensor)
801	BS-694482	1		Cap-Drive
802	BS-691286	1		Cap-End
803	BS-693757	1		Housing-Starter
830	BS-694544	1		Stud-Rocker Arm
832	BS-693583	1		Guard-Muffler
836	BS-699203	1		Screw (Muffler Guard)
836A	BS-699632	1		Screw (Muffler Guard)
842	BS-691031	1	/P	Seal-O Ring (Dipstick Tube)
847	BS-790545	1		Dipstick/Tube Assembly
851	BS-493880S	1	/P	Terminal-Spark Plug
868	BS-692044	1	/P	Seal-Valve
883	BS-691893	1	/P	Gasket-Exhaust
914	BS-699480	1	S	Screw (Rocker Cover)(Bottom)
914A	BS-692557	1		Screw (Rocker Cover) (Top)
914B	BS-697551	1		Screw (Rocker Cover) (Center)
951	BS-790630	1		Lever-Choke
957	BS-795027	1	/P	Cap-Fuel Tank
958	BS-698180	1		Valve-Fuel Shut Off
967	BS-493537S	1	/P	Filter-Pre Cleaner (Flat Panel)
968B	BS-791082	1		Cover-Air Cleaner (Ultra Low Air Cleaner)
971	BS-690370	1		Screw (Air Cleaner Base)
972	BS-694260	1	/P	Tank-Fuel
975	BS-493640	1	S	Bowl-Float
977	BS-792007	1		Gasket Set-Carburetor
993	BS-694088	1	/P	Gasket-Cylinder Head Plate
1005A	BS-794273	1		Fan-Flywheel
1022	BS-691890	1	/P	Gasket-Rocker Cover
1023	BS-499924	1		Cover-Rocker Arm
1026	BS-790287	1		Rod-Push
1029	BS-691230	1	/P	Arm-Rocker
1034	BS-691343	1	/P	Guide-Push Rod
1036		1		Label-Emissions (Available From An Authorized Briggs & Stratton Service Dealer)
1051	BS-691265	1		Ring-Retaining
1052	BS-790141	1		Sensor-Oil
1090	BS-691293	1		Retainer-Brush
1095A	BS-791798	1		Gasket Set-Valve
1119	BS-699772	1		Screw (Alternator)

21AA414E290 (2008)
Engine Assembly 4 E290

Page 26 of 40

Ref #	Part Number	Qty	S/P/F	Description
1210	BS-498144	1	/P	Pulley/Spring Assembly (Pulley) (Rewind Starter Parts Used With 3MM Diameter Starter Rope)
1210	BS-791849	1		Pulley/Spring Assembly (Pulley) (Rewind Starter Parts Used With 5MM Diameter Starter Rope)
1211	BS-498144	1	/P	Pulley/Spring Assembly(Spring) (Rewind Starter Parts Used With 3MM Diameter Starter Rope)
1211	BS-791849	1		Pulley/Spring Assembly(Spring) (Rewind Starter Parts Used With 5MM Diameter Starter Rope)
1305	BS-699691	1		Screw (Oil Sensor Module)
1319	BS-794467	1		Label-Warning

Ref #	Part Number	Qty	S/P/F	Description
1	BS-791762	1	S	Cylinder Assembly
2	BS-399269	1	/P	Kit-Bushing/Seal (Magneto Side)
3	BS-299819	1		Seal-Oil (Magneto Side)
5	BS-791720	1		Head-Cylinder
7B	BS-791716	1		Gasket-Cylinder Head
11B	BS-790632	1		Tube-Breather (Ultra Low Air Cleaner)
12	BS-699485	1		Gasket-Crankcase
13	BS-699482	1		Screw (Cylinder Head)
15	BS-691686	1	/P	Plug-Oil Drain (Square Head)
15A	BS-691682	1	/P	Plug-Oil Drain (Flush)
16	BS-699449	1		Crankshaft Used on Type No(s). 0590, 0591.
16	BS-699445	1		Crankshaft Used on Type No(s). 1013, 1015.
18	BS-699804	1		Cover-Crankcase Used on Type No(s). 0590, 0591.
18	BS-699696	1		Cover-Crankcase Used on Type No(s). 1013, 1015.
20	BS-692550	1		Seal-Oil (PTO Side)
21	BS-281658S	1	/P	Cap-Oil Fill
22	BS-699478	1		Screw (Crankcase Cover/ Sump)
23	BS-699488	1		Flywheel Used on Type No(s). 0590, 1013, 1015.
23	BS-699514	1		Flywheel Used on Type No(s). 0591.
24	BS-222698S	1	/P	Key-Flywheel
25	BS-791786	1		Piston Assembly (Standard)
25	BS-791791	1		Piston Assembly (.020" Oversize)
26	BS-791787	1		Ring Set (Standard)
26	BS-791792	1		Ring Set (.020" Oversize)
27	BS-690975	1		Lock-Piston Pin
28	BS-690229	1		Pin-Piston
29B	BS-791783	1		Rod-Connecting
32	BS-791784	1		Screw (Connecting Rod)
33	BS-499642	1		Valve-Exhaust
34	BS-499641	1	S	Valve-Intake
35	BS-691304	1		Spring-Valve (Intake)
36	BS-691304	1		Spring-Valve (Exhaust)
37	BS-699661	1		Guard-Flywheel
40	BS-692194	1		Retainer-Valve
45	BS-690977	1	/P	Tappet-Valve
46	BS-693404	1		Camshaft
51	BS-791718	1		Gasket-Intake
55	BS-691422	1		Housing-Rewind Starter (Rewind Starter Parts Used With 3MM Diameter Starter Rope)
55	BS-791848	1		Housing-Rewind Starter (Rewind Starter Parts Used With 5MM Diameter Starter Rope)
58	BS-693389	1		Rope-Starter (Rewind Starter Parts Used With 3MM Diameter Starter Rope)
58	BS-66574	1		Rope-Starter (Rewind Starter Parts Used With 5MM Diameter Starter Rope)
60	BS-490652	1		Grip-Starter Rope

21AA414E290 (2008)
Engine Assembly 5 E290

Page 29 of 40

Ref #	Part Number	Qty	S/P/F	Description
78	BS-699205	1		Screw (Flywheel Guard)
95	BS-691636	1	/P	Screw (Throttle Valve)
97	BS-690024	1		Shaft-Throttle
98	BS-398185	1		Kit-Idle Speed (Carburetor)
104	BS-691242	1	/P	Pin-Float Hinge
108A	BS-695807	1		Valve-Choke
109C	BS-790624	1		Shaft-Choke
117	BS-697355	1		Jet-Main(Standard)
118	BS-494870	1		Jet-Main (High Altitude)
121	BS-792006	1		Kit-Carburetor Overhaul
122	BS-791717	1		Spacer-Carburetor
125	BS-697354	1		Carburetor
127	BS-691739	1		Plug-Welch
130	BS-691181	1		Valve-Throttle
133	BS-398187	1		Float-Carburetor
134	BS-398188	1	/P	Kit-Needle/Seat
137	BS-693981	1	/P	Gasket-Float Bowl
146	BS-690979	1	/P	Key-Timing
155	BS-698214	1		Plate-Cylinder Head
161A	BS-790631	1		Base-Air Cleaner(Ultra Low Air Cleaner)
163	BS-696024	1		Gasket-Air Cleaner (Flat Panel Air Cleaner)
186	BS-692317	1	/P	Connector-Hose
187	BS-791766	1	S	Line-Fuel (Cut to Required Length)
187A	BS-791867	1		Line-Fuel (Molded)
187B	BS-791874	1		Line-Fuel (Molded)
188	BS-699479	1		Screw Control Bracket)
190	BS-699220	1		Screw (Fuel Tank)
192	BS-694543	1	/P	Adjustor-Rocker Arm
209	BS-692571	1		Spring-Governor
209A	BS-691278	1		Spring-Governor
219	BS-693578	1		Gear-Governor
220	BS-691724	1		Washer (Governor Gear)
222D	BS-793107	1		Bracket-Control
227	BS-692573	1		Lever-Governor Control
238	BS-691300	1	/P	Valve-Cap
265	BS-691024	1	/P	Clamp-Casing
267	BS-699492	1		Screw (Casing Clamp)
268	BS-691025	1		Casing-Control Wire (Cut to Required Length)
269	BS-691026	1		Wire-Control (Cut to Required Length)
270	BS-691027	1		Nut (Control Wire Casing)
271	BS-691028	1		Lever-Control
271A	BS-694256	1		Lever-Control
276	BS-271716	1		Washer-Sealing
281	BS-793122	1		Panel-Control
286	BS-794185	1		Module-Oil Sensor
287	BS-699629	1		Screw (Dipstick Tube)
300	BS-693593	1		Muffler
304	BS-699598	1		Housing-Blower
305	BS-699480	1	S	Screw (Blower Housing)
306	BS-693610	1		Shield-Cylinder
307	BS-699234	1		Screw (Cylinder Shield)

21AA414E290 (2008)
Engine Assembly 5 E290

Page 30 of 40

Ref #	Part Number	Qty	S/P/F	Description
309	BS-694504	1		Motor-Starter
310	BS-690323	1		Screw (Starter Motor)
311	BS-497608	1		Brush Set
332A	BS-792723	1		Nut (Flywheel)
333	BS-695711	1	S	Armature-Magneto
334	BS-699477	1		Screw (Magneto Armature)
337	759-3336	1	/P	Plug-Spark(Resistor)
337	BS-691043	1	/P	Plug-Spark(EMS)
356A	BS-692390	1	/P	Wire-Stop
358B	BS-791797	1		Gasket Set-Engine
363	BS-19203	1		Puller-Flywheel
364	BS-695693	1		Terminal-Oil Plug
365	BS-699484	1		Screw (Carburetor)
383	BS-19374S	1		Wrench-Spark Plug
415	BS-693463	1		Plug
425A	BS-699492	1		Screw (Air Cleaner Cover)
427	BS-694255	1		Nut (Control Bracket)
445	BS-491588S	1	/P	Filter-Air Cleaner Cartridge
455	BS-692591	1		Cup-Flywheel
456	BS-692299	1		Plate-Pawl Friction
459	BS-281505S	1	/P	Pawl-Ratchet
474	BS-694457	1		Alternator
504	BS-694254	1		Washer Set-Friction
505	BS-691251	1		Nut (Governor Control Lever)
510	BS-499308	1		Drive-Starter
513	BS-692024	1		Drive-Clutch
523	BS-790546	1		Dipstick
524	BS-281370S	1	/P	Seal-Dipstick Tube
544	BS-692966	1		Armature-Starter
552	BS-692346	1		Bushing-Governor Crank
562	BS-691119	1		Bolt (Governor Control Lever)
564	BS-699491	1		Screw (Control Cover)
564A	BS-699206	1		Screw (Control Cover)
597	BS-691696	1	/P	Screw (Pawl Friction Plate)
601	BS-791850	1	/P	Clamp-Hose
604	BS-697326	1		Cover-Control
608	BS-693394	1		Starter-Rewind
608	BS-791670	1		Starter-Rewind
613	BS-699209	1	S	Screw (Muffler)
615	BS-692576	1		Retainer-Governor Shaft
616	BS-692547	1		Crank-Governor
619	BS-699480	1	S	Screw (Cylinder Head Plate)
621	BS-692310	1	/P	Switch-Stop
632	BS-693408	1		Spring/Link- Mechanical Governor
633	BS-693867	1		Seal-Choke/Throttle Shaft
633A	BS-691321	1		Seal-Choke/Throttle Shaft
635	BS-692076	1	/P	Boot-Spark Plug
635A	BS-692927	1		Boot-Spark Plug
663	BS-699206	1		Screw (Control Panel)
668	BS-694257	1		Spacer
675	BS-691261	1		Washer (Brush Retainer)
676	BS-393757	1	S	Deflector-Muffler
677	BS-690661	1	/P	Seal-Deflector

21AA414E290 (2008)
Engine Assembly 5 E290


Page 31 of 40

Ref #	Part Number	Qty	S/P/F	Description
689	BS-691855	1	/P	Spring-Friction
692	BS-690572	1	/P	Spring-Detent
697	BS-790537	1	/P	Screw (Starter Motor)
718	BS-690959	1	/P	Pin-Locating
725	BS-792874	1		Shield-Heat
728	BS-699632	1		Screw (Heat Shield)
741	BS-695087	1		Gear-Timing
742	BS-692564	1		Retainer-E Ring
746	BS-790278	1		Gear-Idler
773	BS-694258	1		Retainer
783	BS-692353	1		Gear-Pinion
797	BS-691029	1		Nut (Brush Retainer)
799	BS-699202	1		Screw (Oil Sensor)
801	BS-694482	1		Cap-Drive
802	BS-691286	1		Cap-End
803	BS-693757	1		Housing-Starter
830	BS-694544	1		Stud-Rocker Arm
832	BS-693583	1		Guard-Muffler
836	BS-699203	1		Screw (Muffler Guard)
836A	BS-699632	1		Screw (Muffler Guard)
842	BS-691031	1	/P	Seal-O Ring (Dipstick Tube)
847	BS-790545	1		Dipstick/Tube Assembly
851	BS-493880S	1	/P	Terminal-Spark Plug
868	BS-692044	1	/P	Seal-Valve
883	BS-691893	1	/P	Gasket-Exhaust
914	BS-699480	1	S	Screw (Rocker Cover)(Bottom)
914A	BS-692557	1		Screw (Rocker Cover) (Top)
914B	BS-697551	1		Screw (Rocker Cover) (Center)
951	BS-790630	1		Lever-Choke
957	BS-795027	1	/P	Cap-Fuel Tank
958	BS-698180	1		Valve-Fuel Shut Off
967	BS-493537S	1	/P	Filter-Pre Cleaner (Flat Panel)
968B	BS-791082	1		Cover-Air Cleaner (Ultra Low Air Cleaner)
971	BS-690370	1		Screw (Air Cleaner Base)
972	BS-694260	1	/P	Tank-Fuel
975	BS-493640	1	S	Bowl-Float
977	BS-792007	1		Gasket Set-Carburetor
993	BS-694088	1	/P	Gasket-Cylinder Head Plate
1005A	BS-794273	1		Fan-Flywheel
1022	BS-691890	1	/P	Gasket-Rocker Cover
1023	BS-499924	1		Cover-Rocker Arm
1026	BS-790287	1		Rod-Push
1029	BS-691230	1	/P	Arm-Rocker
1034	BS-691343	1	/P	Guide-Push Rod
1036		1		Label-Emissions (Available From An Authorized Briggs & Stratton Service Dealer)
1051	BS-691265	1		Ring-Retaining
1052	BS-790141	1		Sensor-Oil
1090	BS-691293	1		Retainer-Brush
1095A	BS-791798	1		Gasket Set-Valve
1119	BS-699772	1		Screw (Alternator)

21AA414E290 (2008)
Engine Assembly 5 E290

Page 32 of 40

Ref #	Part Number	Qty	S/P/F	Description
1210	BS-498144	1	/P	Pulley/Spring Assembly (Pulley) (Rewind Starter Parts Used With 3MM Diameter Starter Rope)
1210	BS-791849	1		Pulley/Spring Assembly (Pulley) (Rewind Starter Parts Used With 5MM Diameter Starter Rope)
1211	BS-498144	1	/P	Pulley/Spring Assembly(Spring) (Rewind Starter Parts Used With 3MM Diameter Starter Rope)
1211	BS-791849	1		Pulley/Spring Assembly(Spring) (Rewind Starter Parts Used With 5MM Diameter Starter Rope)
1305	BS-699691	1		Screw (Oil Sensor Module)
1319	BS-794467	1		Label-Warning

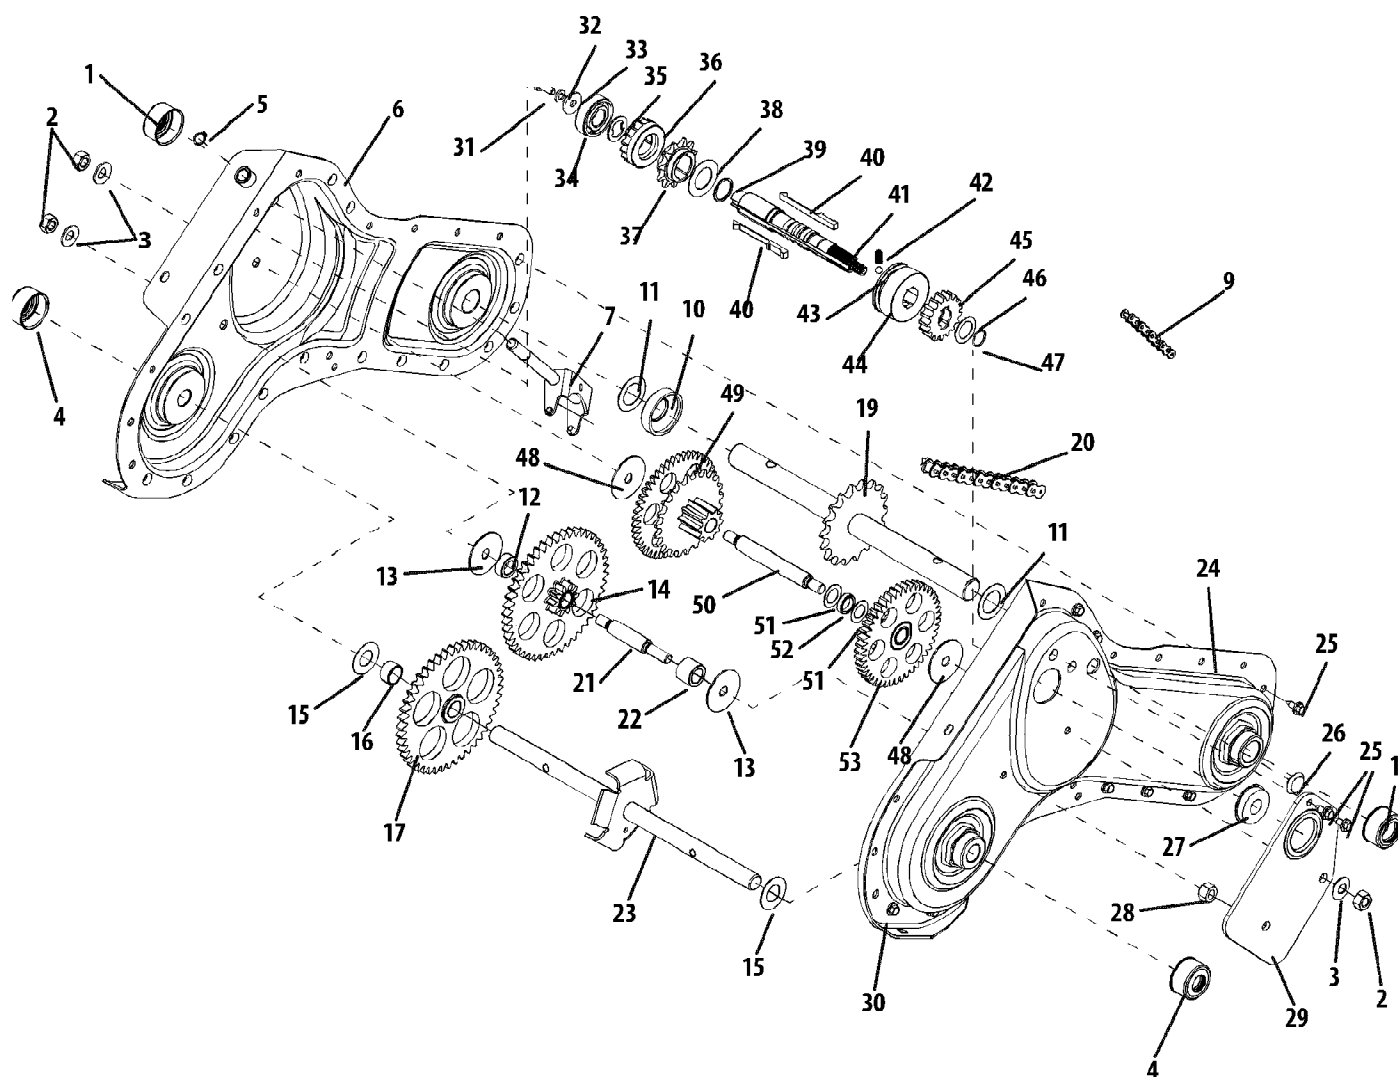 


21AA414E290 (2008)
Gear Case 410

Page 34 of 40

Ref #	Part Number	Qty	S/P/F	Description
1	721-0378	1	S	Shaft Seal, 1.0 Dia
2	712-0378	1	/P	Hex Nut, 7/16-20
3	736-0407	1		Bell Washer, .45 ID x 1.0 OD
4	721-0379	1	/P	Shaft Seal, .75 Dia
5	716-0865	1	/P	Snap Ring, .50 Dia
6	686-0038	1		Gear Case Assembly, Right Half
7	618-0245B	1	/P	Shift Assembly
9	713-0233	1	/P	Chain, #41 1/2" Pitch x 30 Links
10	750-0570	1	S	Space, 1.0 ID x 2.0 OD
11	736-0163	1	S	Thrust Washer, 1.03 ID x 1.62 OD
12	750-0936	1	S	Spacer, .635 ID x 1.0 OD
13	736-0518	1		Thrust Washer, .445 ID x 1.92 OD
14	617-0004	1	S	Idler Gear Assembly
15	736-0351	1	S	Flat Washer, .760 ID x 1.50 OD
16	750-0938	1	S	Spacer, .735 ID x.886 OD
17	717-1458	1		Spur Gear, 46T
19	611-0021	1	/P	Tine Shaft Assembly, 18T
20	713-0226	1	S	Chain, #50 5/8" Pitch x 52 Links
21	738-0885	1		Jack Shaft, 5/8 Dia. X. 2.06 Lg
22	750-0935	1		Spacer, .635 ID x 1.0 OD
23	611-04073	1		Wheel Shaft Assembly
24	686-0039	1	S	Gear Case Assembly, Left Half
25	710-0896	1	/P	Hex Washer Screw, 1/4-14 x.625
26	726-0331	1		Plug
27	741-0563	1	S	Ball Bearing w/Snap Ring
28	712-3067	1	/P	Hex Patch Lock Nut, 7/16-20
29	786-0086	1	S	Reinforcement Bracket
30	721-0295	1		Chain Case Gasket
31	710-0258	1	S	Hex Cap Screw, 1/4-20 x.625
32	736-0329	1	S	Lock Washer, 1/4
33	736-0512	1		Flat Washer, .281 ID x.875 OD
34	741-0124	1	S	Ball Bearing
35	736-0541	1	S	Flat Washer
36	717-1451A	1	/P	Spur Gear, 16T
37	713-0435	1		Sprocket, 11T #41 Chain
38	736-0265	1	/P	Flat Washer, .88 ID x 1.50 OD
39	716-0235	1	S	Retainer Ring
40	718-0237	1	S	Clutch Key
41	711-1087	1		Drive Shaft
42	732-0863	1	S	Compression Spring
43	741-0862	1	/P	Detent Ball
44	718-0234	1		Clutch Collar
45	717-1409	1		Spur Gear, 17T
46	736-0442	1		Flat Washer, .69 ID x 1.06 OD
47	732-0614	1		Wire Ring
48	736-0518	1		Thrust Washer, .445 ID x 1.9 OD
49	611-0016	1	S	Intermediate Gear Assembly
50	738-0884	1		Jack Shaft
51	736-0336	1	S	Flat Washer, .625 ID x 1.0 OD
52	750-0931	1		Spacer, .635 ID x.86 OD
53	617-0003	1	S	Tine Drive Assembly
	686-04073	1	S	Complete Gear Case Assembly Not shown

21AA414E290 (2008)
Handle & Tine Shield 410

 Page 35 of 40

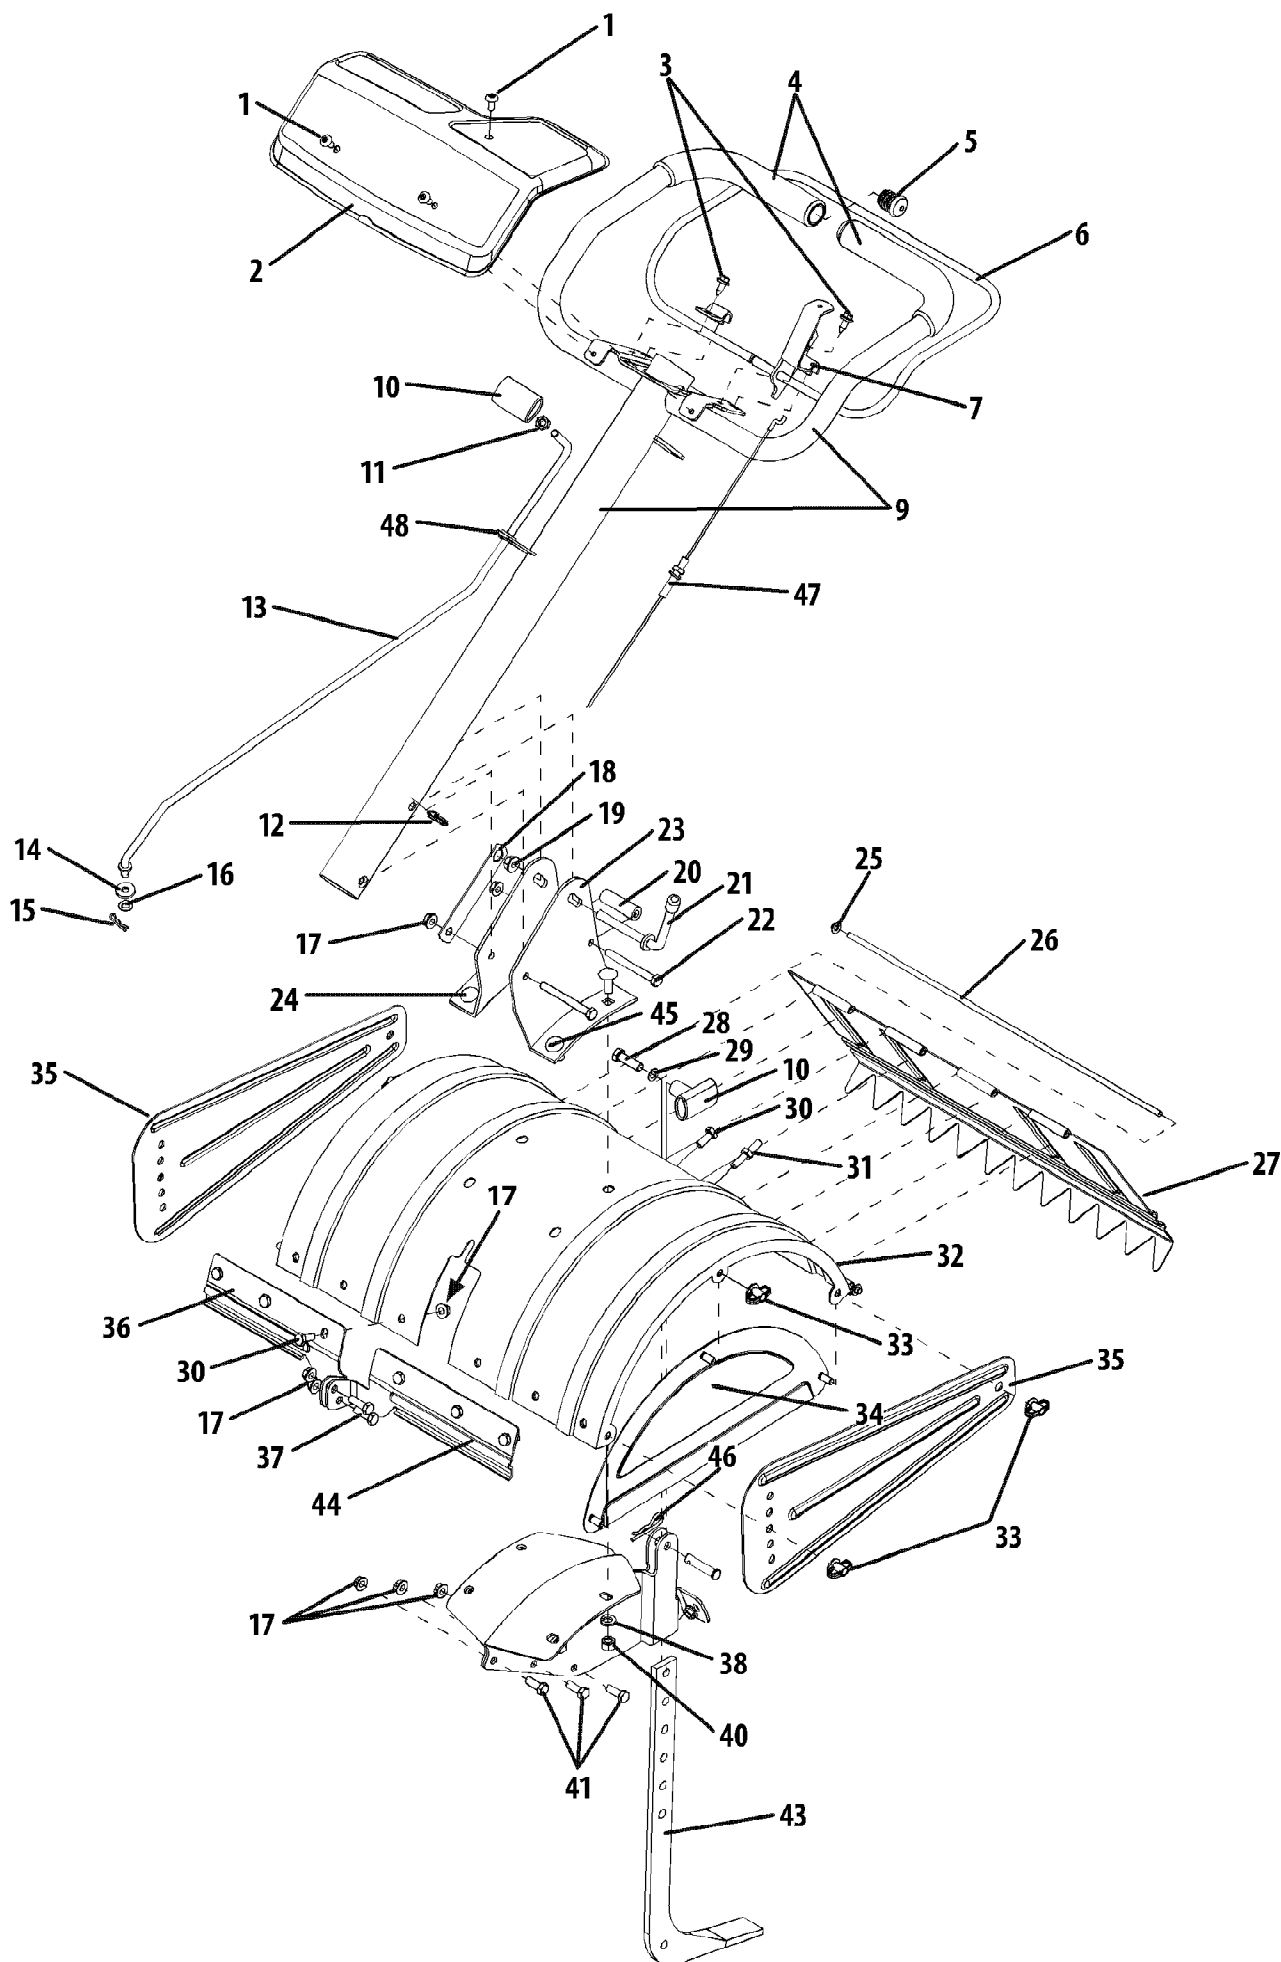


21AA414E290 (2008)
Handle & Tine Shield 410

Page 36 of 40

Ref #	Part Number	Qty	S/P/F	Description
1	710-1017	1	/P	Tap Screw, 1/4-14 x.625
2	786-0131	1		Handle Cover w/o Throttle
3	710-0896	1	/P	Hex Washer Screw, 1/4-14 x.625
4	720-0278A	1	/P	Foam Grip
5	735-0246A	1		End Plug
6	647-0014	1		Clutch Control Assembly
7	786-0118	1	S	Return Bracket, Left
8	786-0098	1	S	Return Bracket, Right
9	649-0017	1	/P	Handle Assembly
10	720-0210A	1	/P	Knob
11	712-3008	1	S	Jam Nut, 3/8-16
12	726-0330	1		Cable Clip
13	747-0902	1		Shift Control
14	735-0127	1	/P	Rubber Washer, .33 ID x.87 OD
15	714-0104	1	S	Cotter Pin
16	736-0204	1	/P	Flat Washer, .344 ID x.62 OD
17	712-04063	1	/P	Hex Flange Lock Nut, 5/16-18
18	784-0191	1		Retainer Bracket
19	712-0379	1	/P	Flange Lock Nut, 3/8-24
20	750-0885A	1	/P	Spacer, .322 ID x.625 OD
21	784-0190	1		Handle Adjustment Crank
22	710-0189	1	/P	Hex Screw, 5/16-18 x 3.0
23	786-0109	1		Handle Mounting Bracket, Left
24	786-0108	1		Handle Mounting Bracket, Right
25	726-0106	1	S	Cap Nut
26	747-0432	1		Rod
27	786-0113A	1	/P	Rear Tine Shield Flap
28	710-3005	1	/P	Hex Cap Screw, 3/8-16 x 1.25
29	736-0117	1	S	Flat Washer, .375 ID x.620 OD
30	710-3008	1	/P	Hex Cap Screw, 5/16-18 x.75
31	738-0849	1	S	Hex Screw, 5/16-18 x.75
2	786-0085	1		Tine Shield
33	712-0421	1		Wing Nut
34	686-0044B	1	/P	End Cover Assembly
35	786-0090	1		Side Shield
36	786-0076	1	S	Shield Bracket, Right
37	710-0376	1	/P	Hex Cap Screw, 5/16-18 x 1.0
38	736-0169	1	S	Lock Washer, 3/8
39	711-0415	1	S	Clevis Pin
40	712-3017	1	S	Hex Nut, 3/8 -16
41	710-3038	1	/P	Hex Cap Screw, 5/16-18 x.875
42	686-0043A	1	/P	Tine Shield Bracket Assembly
43	786-0120	1	S	Depth Stake
44	786-0077	1	S	Shield Bracket, Left
45	710-3097	1		Carriage Bolt 3/8-16 x 1.0
46	714-0147	1		Cotter Pin
47	746-0916	1	S	Clutch Cable
48	731-1706	1		Rod Control Bushing

21AA414E290 (2008)
Label Map 410

 
Page 37 of 40

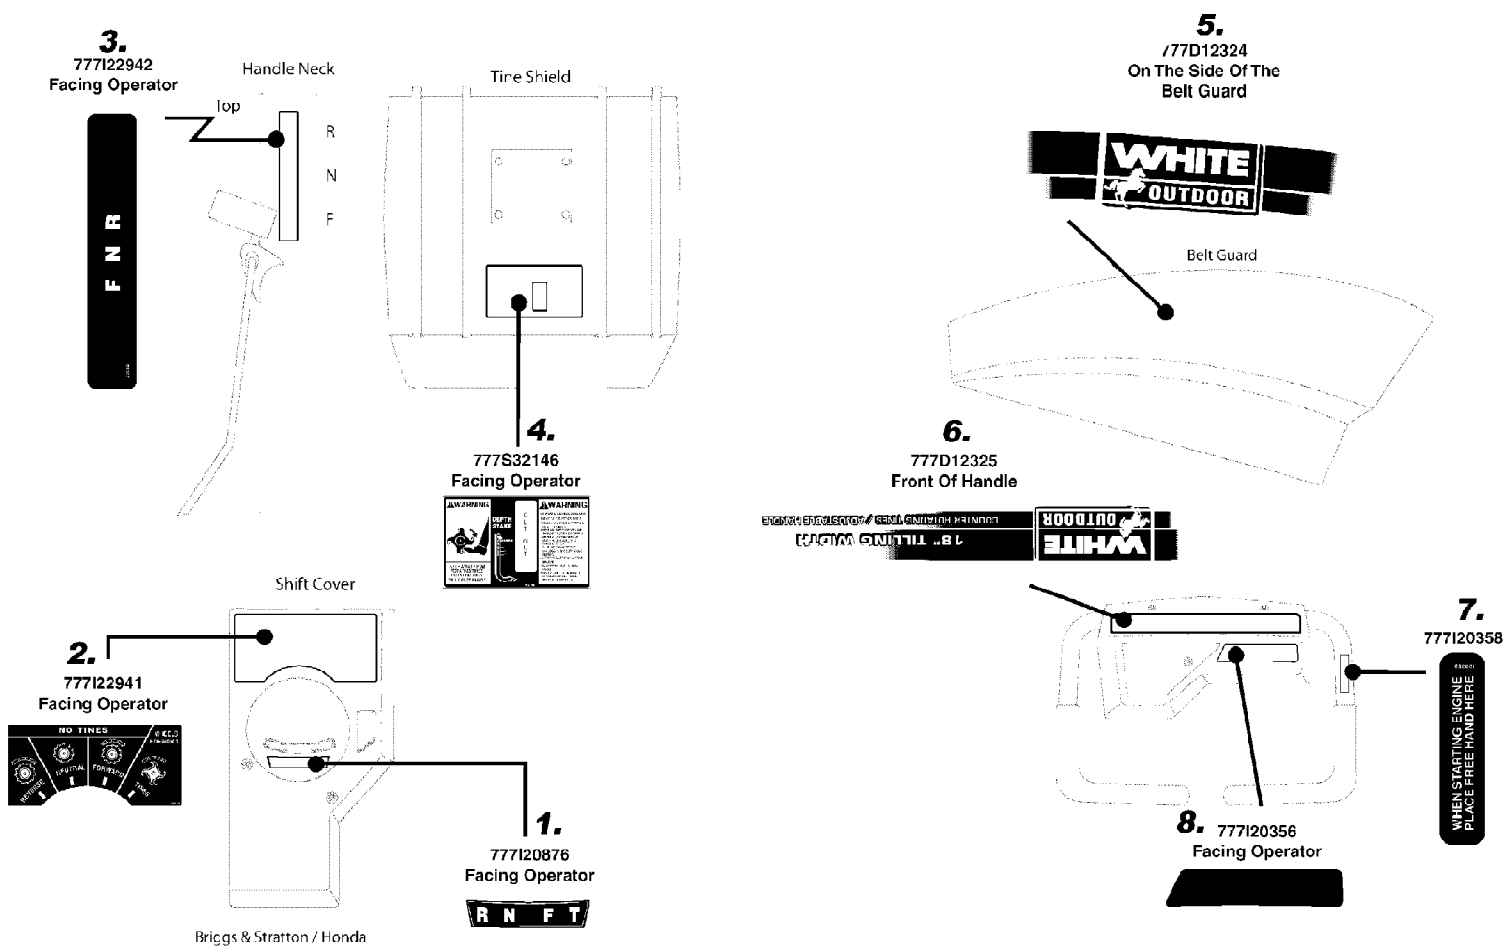

21AA414E290 (2008)
Label Map 410

Page 38 of 40

Ref #	Part Number	Qty	S/P/F	Description
1	777I20876	1		LABEL-INDICATOR TI
2	777I22941	1		LABEL-TILLER SHAFT COVER
3	777I22942	1		LABEL-TILLER 410 HANDLE F-N-R
4	777S32146	1		LABEL-TINE SHIELD
5	777D12324	1		LABEL-TILLER 410 BELT GUARD WHITE
6	777D12325	1		LABEL-TILLER 410 HANDLE PANEL
7	777I20358	1		LABEL-PLACE HAND HERE
8	777I20356	1		LABEL

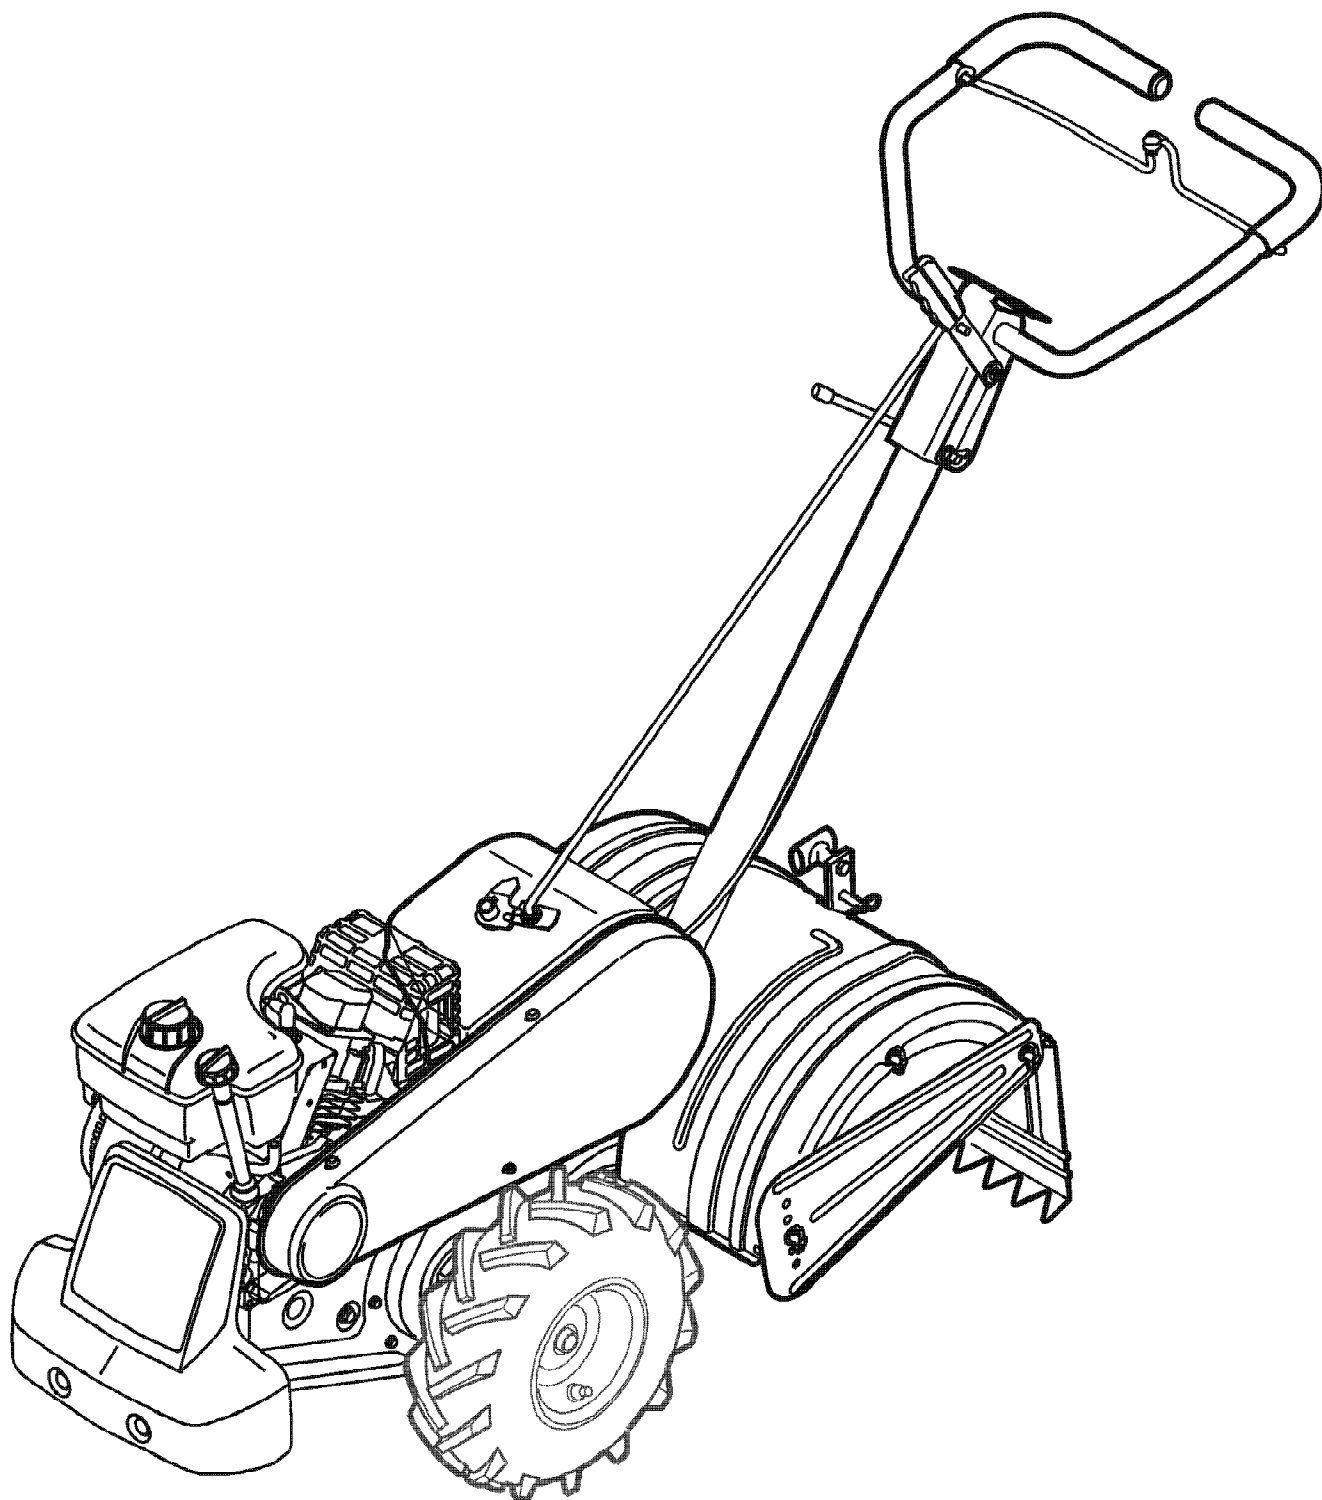 

21AA414E290 (2008)
Quick Reference 410

Page 40 of 40

Ref #	Part Number	Qty	S/P/F	Description
	759-3336	1	/P	Spark Plug
	BS-493537S	1	/P	Pre Filter
	BS-697029	1	/P	Air Filter
	694261	1		Fuel Cap
	954-0438	1	/P	Drive Belt (FWD)
	NA	1		Drive Belt (REV)
	746-0916	1	S	Clutch Cable (FWD)
	NA	1		Clutch Cable (REV)
	642-0015-0637	1	/P	Tines-Outer (LH)
	642-0016-0637	1	/P	Tines-Outer (RH)
	NA	1		Tines-Inner (LH)
	NA	1		Tines-Inner (RH)
	NA	1		Rim
	734-1796-0901	1	/P	Tire
	934-04233	1	/P	Wheel Assembly
	720-0278A	1	/P	Foam Grip
	720-0210A	1	/P	Handle Knob