For Parts Call 606-678-9623 or 606-561-4983

SECTION 12: MODELS 607, 608 & 609 PARTS LIST

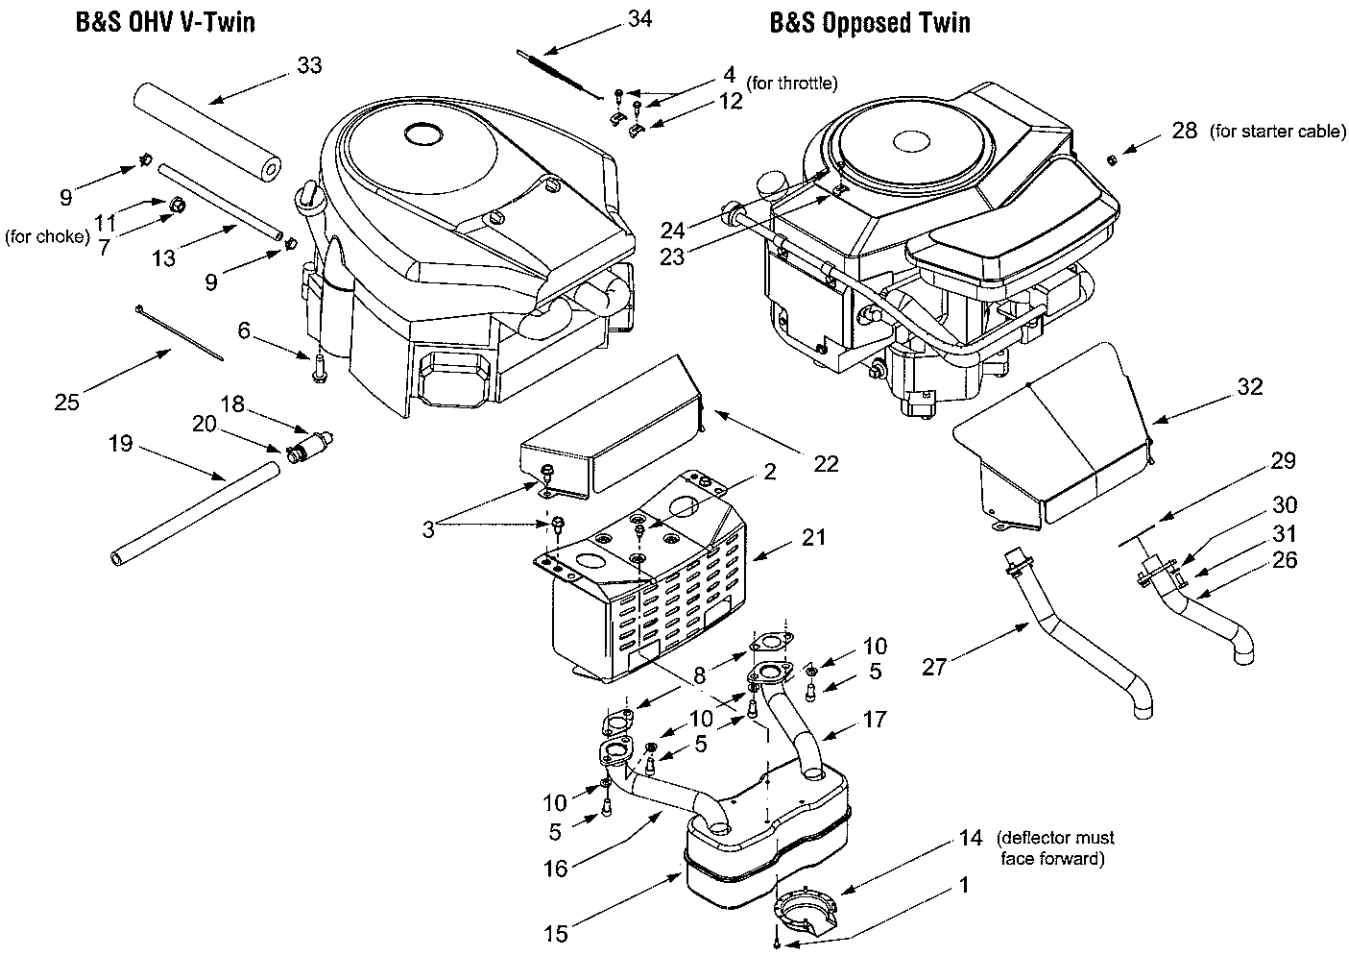

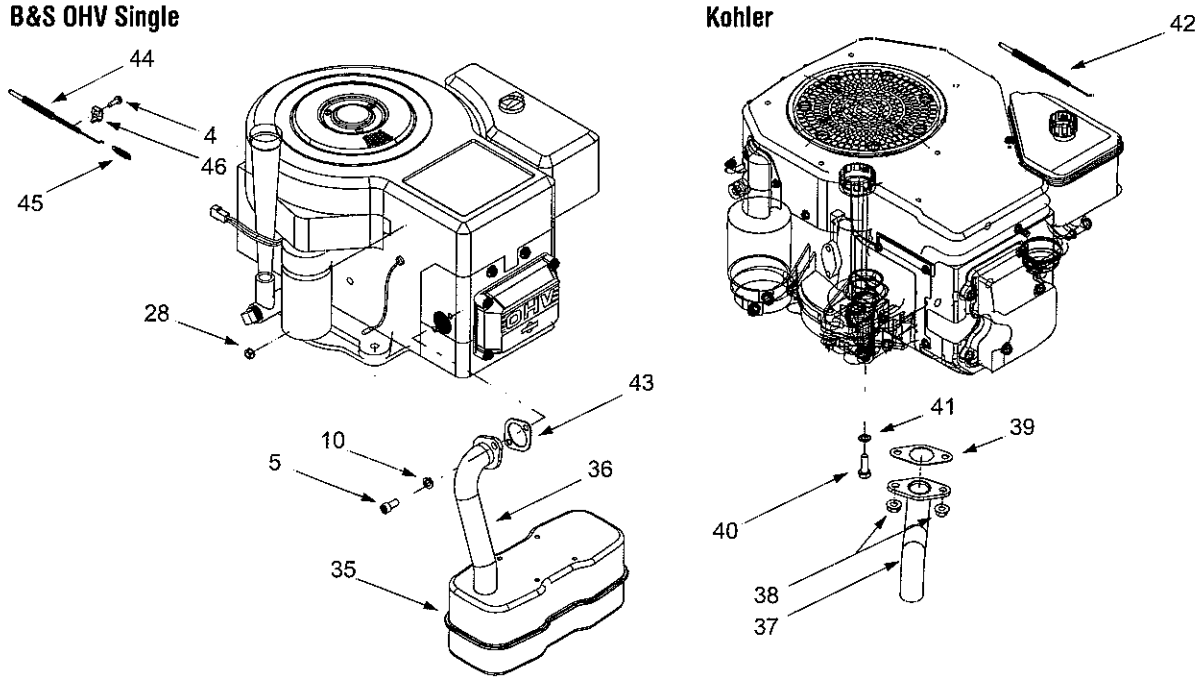

www.mymowerparts.com

For Parts Call 606-678-9623 or 606-561-4983

REF. NO.	PART NO.	DESCRIPTION
1	710-0227	Self-tapping Screw, #8-18 x .50
2	710-0599	Self-tapping Screw, 1/4-20 x .50
3	710-0604A	Self-tapping Screw, 5/16-18 x .625
4	710-1237	Screw, #10-32 x .625 (B&S OHV V-Twin)
5	710-1314A	Socket Cap Screw, 5/16-18 x .625
6	710-1315	Self-tapping Screw, 3/8-16 x 1 25
7	712-3017	Hex Nut, 3/8-16
8	721-0460	Exhaust Gasket (B&S OHV V-Twin)
9	726-0205	Hose Clamp
10	736-0119	Lock Washer, 5/16
11	736-0300	Lock Washer, .406 x .875 x .059
12	751B221535	Casing Clamp (B&S OHV V-Twin)
13	751-0535	Fuel Line Hose
14	751-0564	Muffler Deflector
15	751-0616	Muffler, Twin Inlet (B&S Opposed Twin & OHV V-Twin)
16	751-0650	RH Exhaust Pipe (B&S OHV V-Twin)
17	751-0651	LH Exhaust Pipe (B&S OHV V-Twin)
18	751-3140	Oil Drain Valve
19	751-3141	Oil Drain Hose
20	751-3142	Oil Drain Cap
21	783-0615B	Muffler Heat Shield
22	783-0625C	Engine Heat Shield (B&S OHV V-Twin)
23	726-0272	Clamp, 9/16 (B&S Opposed Twin)
24	712-0779A	Screw, #10-16 x .5 (B&S Opposed Twin)
25	725-0157	Cable Tie
26	751-0623	LH Exhaust Pipe (B&S Opposed Twin)
27	751-0624	RH Exhaust Pipe (B&S Opposed Twin)
28	712-0271	Hex Sems Nut, 1/4-20 (B&S Opposed Twin & OHV Single)
29	721-0346	Exhaust Gasket (B&S Opposed Twin)
30	736-0329	Lock Washer, 1/4 (B&S Opposed Twin)
31	710-3015	Hex Screw, 1/4-20 x .750 (B&S Opposed Twin)
32	783-0357B	Heat Shield (B&S Opposed Twin)
33	722-0263	Foam, .625 x 1.5 x 10 (fits over fuel line)
34	746-1086	Throttle Cable (B&S Opposed Twin & OHV V-Twin)
35	751-0617	Muffler, Single Inlet (B&S OHV Single & Kohler)
36	751-0619	Exhaust Pipe (B&S OHV Single)
37	751-0621	Exhaust Pipe (Kohler)
38	712-3086	Flange Nut, 8mm (Kohler)
39	721-0375	Exhaust Gasket (Kohler)
40	710-3206A	Hex Cap Screw, 8mm (Kohler)
41	736-0607	External Lock Washer (Kohler)
42	746-1087	Throttle Cable (Kohler)
43	721-0208	Exhaust Gasket (B&S OHV Single)
44	746-1084	Throttle Cable (B&S OHV Single)
45	732-0966	Extension Spring, .275 x 1.25 (B&S OHV Single)
46	751B213146	Casing Clamp (B&S OHV Single)

NOTE: *Engine accessory parts are applicable to all 607, 608 & 609 model tractors except where otherwise noted.*

www.mymowerparts.com

For Parts Call 606-678-9623 or 606-561-4983

Models 607 & 608

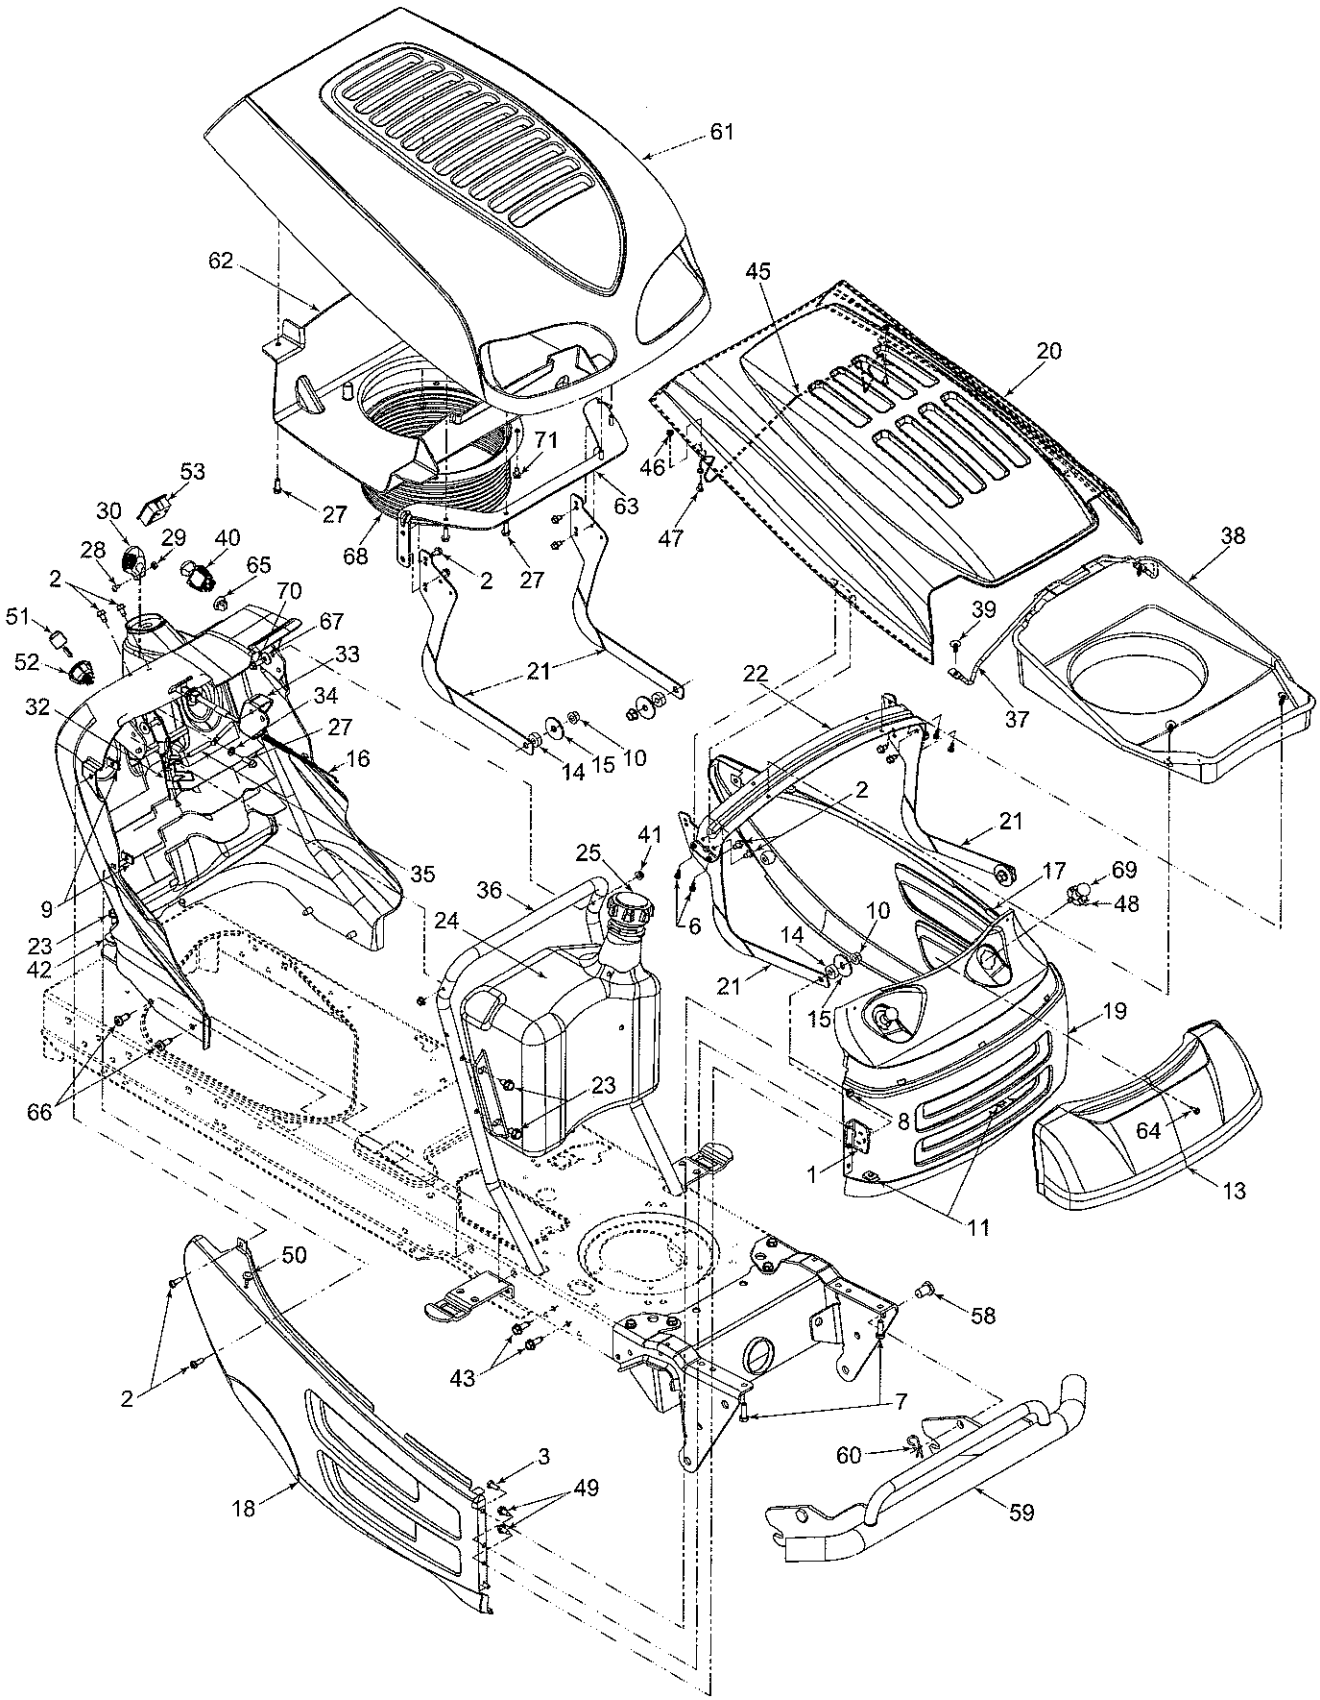

www.mymowerparts.com

For Parts Call 606-678-9623 or 606-561-4983

REF. NO.	PART NO.	DESCRIPTION
1	683-0195	Bracket Assembly (8-style)
2	710-0599	Self-tapping Screw, 1/4-20 x .5
3	710-0751	Hex Cap Screw, 1/4-20 x .62
4	710-0924	Phillips Pan Screw, 1/4-20 x .75
6	710-0351	Screw, #10-16 x .5
7	710-0376	Hex Cap Screw, 5/16-18 x 1 0
8	712-0271	Hex Sems Nut, 1/4-20
9	712-0292	U-type Speed Nut, 1/4-20
10	712-0431	Flange Lock Nut, 3/8-16
11	726-0211	U-nut, 5/16-18
13	731-1854A	Headlight Lens (8-style)
14	735-0126	Rubber Washer, .87 x .33
15	736-3039	Flat Washer, .406 x 1.5 x 11GA
16	746-1085	Choke Knob/Cable
		(Models with any B&S Twin)
	746-1088	Choke Knob/Cable
		(Models with Kohler)
17	783-0475B	LH Side Panel (8-style)
18	783-0476C	RH Side Panel (8-style)
19	783-0477A	Grill (8-style)
20	783-0478A	Hood (8-style)
21	783-1495	Hood Hinge Bracket
22	783-0553A	Hood Support Bracket
23	710-0604A	Self-tapping Screw, 5/16-18 x .625
24	751-0658D	Fuel Tank, Three Gallon
	751-0659C	Fuel Tank, Two Gallon (Shown)
25	751-0603	Fuel Cap (Fits Either Tank)
26	710-0809	Self-tapping Screw, 1/4-20 x 1.25
27	710-0895	Self-tapping Screw, 1/4-15 x .75
28	710-3217	Truss Phillips Screw, #8-32 x .375
29	712-0142	Hex Nut, #8-32
30	731-1857	Throttle Control Knob
31	731-2225C	Dash Panel (Models w/ Electric PTO)
	731-2122C	Dash Panel (Models w/ Manual PTO)
32	731-2226	Cruise Control Button
	731-2228	Cruise Cover (Models w/o Cruise Control)
33	731-2227	Parking Brake Button
34	736-0142	Flat Washer, 9/32 x 1/2 x 1/16
35	747-1196	Brake/Cruise Pivot Rod
36	749-1087B	Dash Support Tube
37	747-1184	Hood Plenum Support Rod
38	731-2247A	Hood Plenum
		(Models with B&S OHV V-Twin)
	731-2248A	Hood Plenum
		(Models with B&S Opposed Twin)

REF. NO.	PART NO.	DESCRIPTION
	N/A	Hood Plenum
		(Models with B&S OHV Single or Kohler)
39	726-3046	Ratchet Clip
40	725-1752	Electric PTO Switch
41	712-3027	Hex Flange Lock Nut, 1/4-20
42	736-3078	Flat Washer, .349 x 1.0 x .063
43	710-0650	Screw, 5/16-18 x .875 (Grade 5)
45	747-1215A	Hood Latch
46	712-0272	Hex Sems Nut, #10-32
47	710-0473	Machine Screw, #10-24
48	725-1649	Headlight Socket
49	710-0896	Hex Index Washer Screw, 1/4-14 x .0625
50	735-0199A	Rubber Bumper
51	725-1745	Ignition Key w/ plastic cover
	725-1744	Ignition Key w/o plastic cover
52	725-1741	Ignition Switch
53	725-1976	Systems Indicator Monitor w/ Hour Meter
	725-1758	Systems Indicator Monitor w/ Ammeter
58	711-0332	Clevis Pin, .50 x .78
59	768-0010A	Bumper Assembly
60	714-0145	Internal Cotter Pin
61	731-2300	Hood, Red (7-Style)
	731-2301	Hood, Green (7-Style)
	731-2302	Hood, Black (7-Style)
	731-2303	Hood, Charcoal Grey (7-Style)
62	731-2306	Hood Plenum
63	783-1034	Hood Bracket (7-Style)
64	710-0456	Hex Screw, #10 x .50
—	629-0309	Headlight Wire Harness
—	629-1067	Tractor Wire Harness
		(Models with Hour Meter & Electric PTO)
—	629-1068	Tractor Wire Harness (Kohler)
		(Models with Hour Meter & Electric PTO)
—	629-1071	Tractor Wire Harness
		(Models with Hour Meter & Manual PTO)
—	629-1072	Tractor Wire Harness
		(Models with Ammeter & Manual PTO)
65	731-1999	Choke Plug
66	710-1611B	Screw, 5/16-18 x .75
67	736-0270	Bell Washer, .265 x .75 x .062
68	731-2232	Intake Bellow (Intek Single & kohler)
69	725-0963	Lamp
70	710-0642	Self-tapping Screw, 1/4-20 x .75
71	710-0599	Self-tapping Screw, 1/4-20 x .50

NOTE: *Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.*

www.mymowerparts.com

For Parts Call 606-678-9623 or 606-561-4983

Model 609

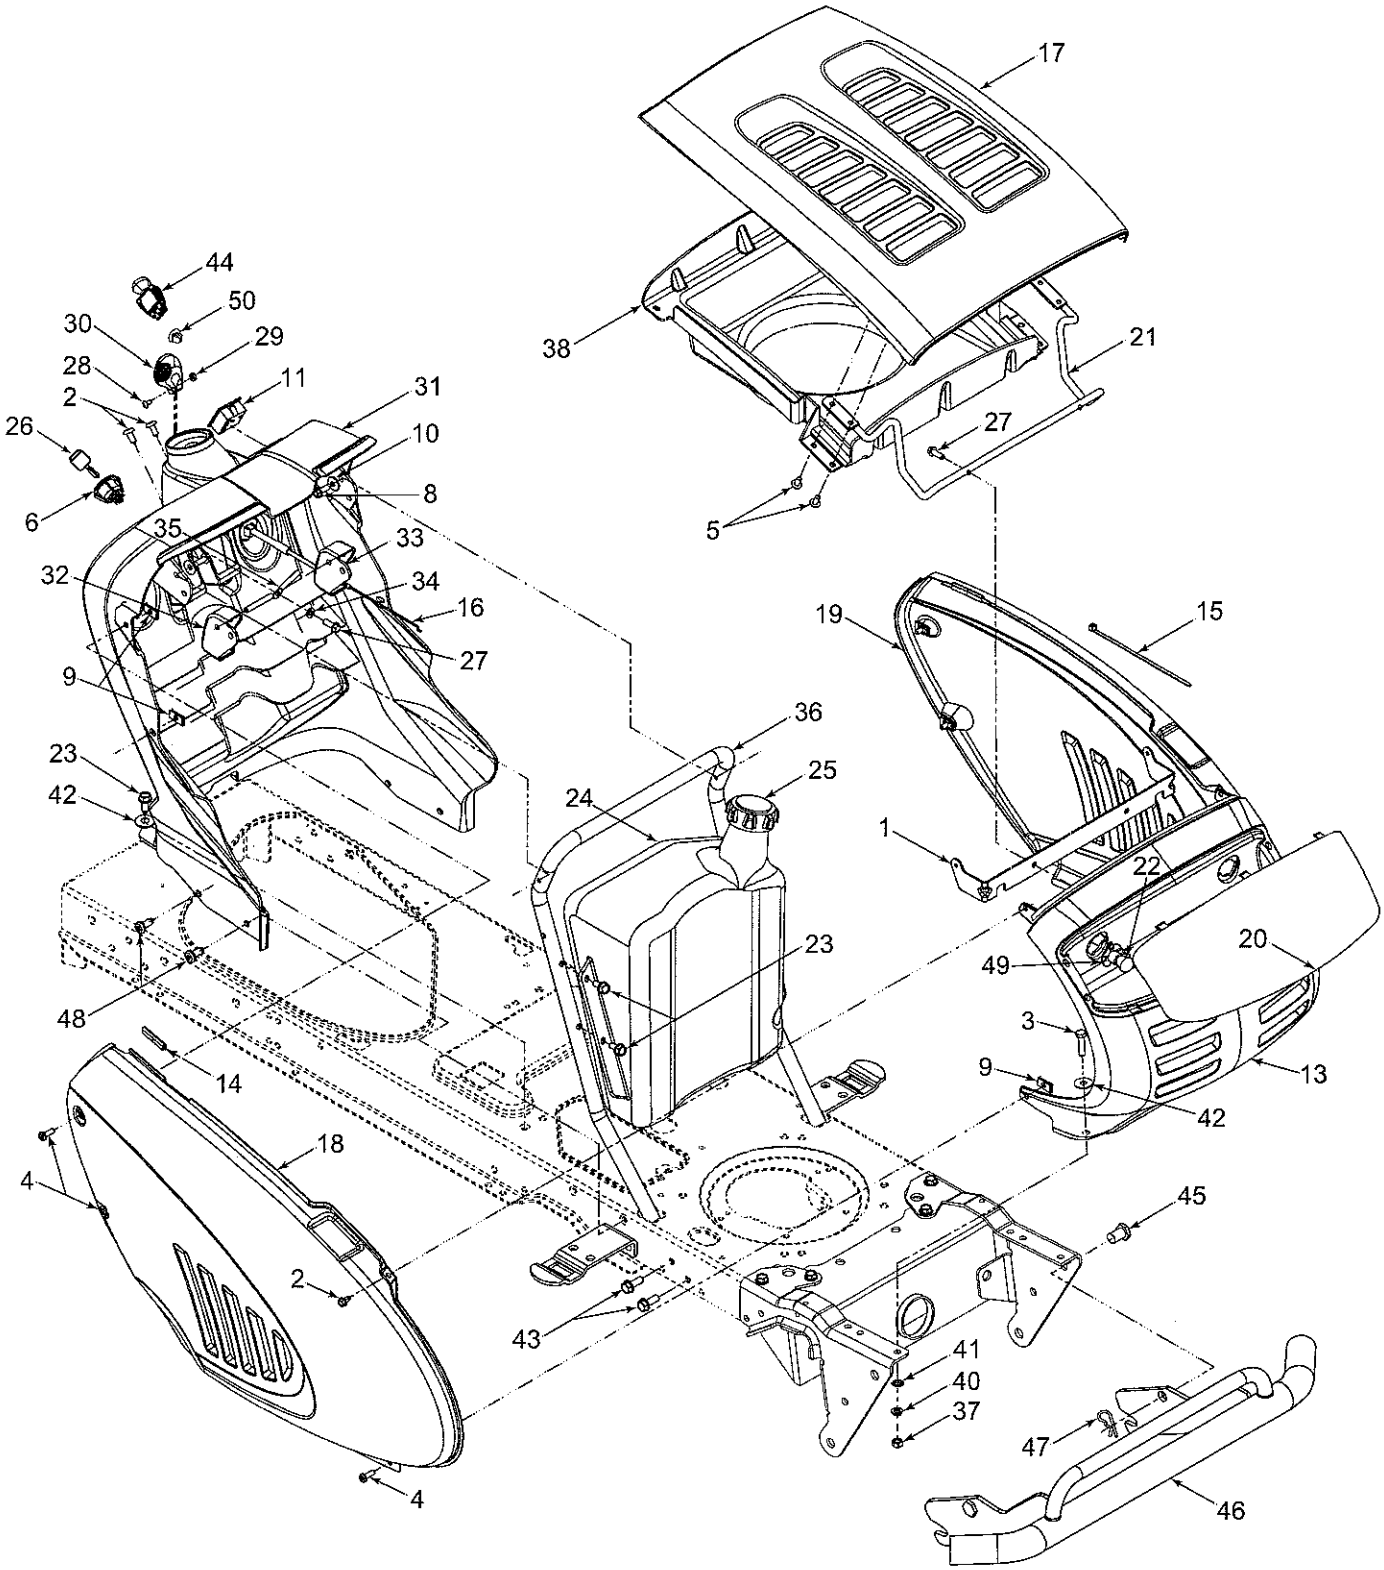

www.mymowerparts.com

For Parts Call 606-678-9623 or 606-561-4983

Model 609

REF. NO.	PART NO.	DESCRIPTION
1	783-1346	Grill Support Bracket (9-style)
2	710-0599	Self-tapping Screw, 1/4-20 x .5
3	710-0528	Hex Cap Screw, 5/16-18 x 1 25
4	710-0924	Phillips Pan Screw, 1/4-20 x .75
5	710-1017	Truss Phillips Screw, 1/4-20 x .625
6	725-1741	Ignition Switch
8	710-0642	Self-tapping Screw, 1/4-20 x .75
9	712-0292	U-type Speed Nut, 1/4-20
10	736-0270	Bell Washer, .265 x .75 x .062
11	725-04036	Systems Indicator Monitor w/ Hour Meter
	725-1758	Systems Indicator Monitor w/ Ammeter
13	731-2119A	Grille (9-style)
14	731-0511	Trim Strip, 4
15	725-0157	Cable Tie, 3/16 x .05 x 7.4
16	746-1085	Choke Knob/Cable
		(Models with any B&S Twin)
	746-1088	Choke Knob/Cable (Models with Kohler)
17	783-0783	Hood (9-style)
18	783-0784	RH Side Panel (9-style)
19	783-0785	LH Side Panel (9-style)
20	731-2118A	Headlight Lens (9-style)
21	747-2138	Hood Hinge Rod
22	725-0963	Lamp
23	710-0604A	Self-tapping Screw, 5/16-18 x .625
24	751-0658D	Fuel Tank, Three Gallon (Shown)
	751-0659C	Fuel Tank, Two Gallon
25	751-0603	Fuel Cap
26	725-1745	Ignition Key w/ plastic cover
	725-1744	Ignition Key w/o plastic cover
27	710-0895	Self-tapping Screw, 1/4-15 x .75
28	710-3217	Truss Phillips Screw, #8-32 x .375
29	712-0142	Hex Nut, #8-32
30	731-1857	Throttle Control Knob
31	731-2225C	Dash Panel (Models w/ Electric PTO)
	731-2122C	Dash Panel (Models w/ Manual PTO)

REF. NO.	PART NO.	DESCRIPTION
32	731-2226	Cruise Control Button
33	731-2227	Parking Brake Button
34	736-0142	Flat Washer, 9/32 x 1/2 x 1/16
35	747-1196	Brake/Cruise Pivot Rod
36	749-1087B	Dash Support Tube
37	712-3010	Hex Nut, 5/16-18
38	731-2269A	Hood Plenum (Models with Kohler)
	731-2270A	Hood Plenum
		(Models with B&S OHV V-Twin)
	731-2271	Hood Plenum
		(Models with B&S Opposed Twin)
	N/A	Hood Plenum
		(Models with B&S OHV Single)
39	726-3046	Ratchet Clip
40	736-0119	Lock Washer, 5/16
41	726-0201	Speed Nut, .3125
42	736-3078	Flat Washer, .349 x 1.0 x .063
43	710-0650	Screw, 5/16-18 x .88 (Grade 5)
44	725-1752	Electric PTO Switch
45	711-0332	Clevis Pin, .50 x .78
46	768-0010A	Bumper Assembly
47	714-0145	Internal Cotter Pin
48	710-1611B	Screw, 5/16-18 x .75
49	725-1649	Socket
50	731-1999	Choke Plug
—	629-0309	Headlight Wire Harness
—	629-1067	Tractor Wire Harness
		(Models with Hour Meter & Electric PTO)
—	629-1068	Tractor Wire Harness (Kohler)
		(Models with Hour Meter & Electric PTO)
—	629-1071	Tractor Wire Harness
		(Models with Hour Meter & Manual PTO)
—	629-1072	Tractor Wire Harness
		(Models with Ammeter & Manual PTO)

NOTE: *Tractor features vary by model NOT all parts listed above and pictured on the previous page are standard equipment.*

www.mymowerparts.com

For Parts Call 606-678-9623 or 606-561-4983

Models 607, 608 & 609

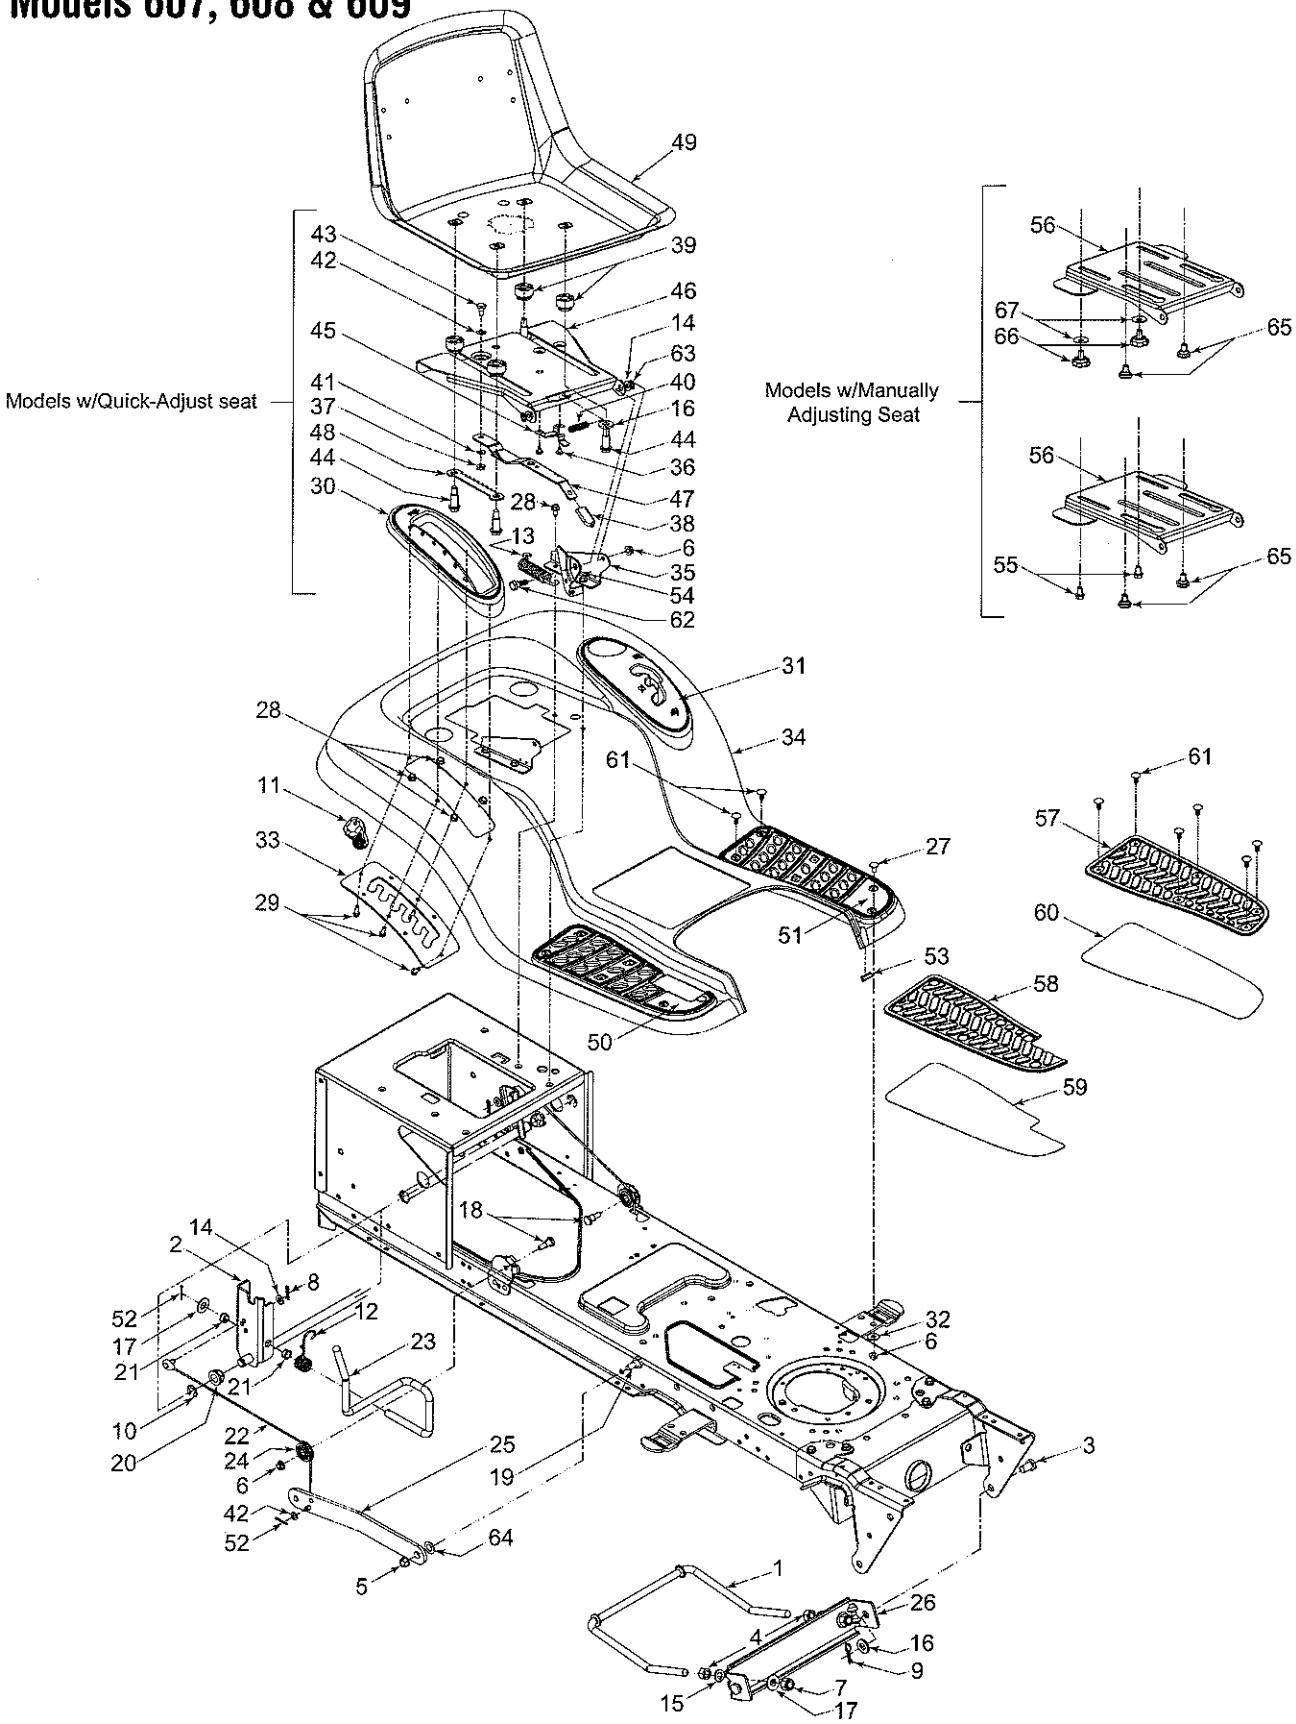

www.mymowerparts.com

For Parts Call 606-678-9623 or 606-561-4983

Models 607, 608 & 609

REF. NO.	PART NO.	DESCRIPTION
1	747-1130B	Deck Stabilizer Rod
2	683-0197B	Lift Shaft Assembly
3	711-0332	Clevis Pin, .5 x .78
4	712-0206	Hex Nut, 1/2-13
5	712-0431	Flange Lock Nut, 3/8-16
6	712-3004A	Flange Lock Nut, 5/16-18
7	712-3083	Hex Nut, 1/2-13
8	714-0104	Internal Cotter Pin
9	714-0145	Internal Cotter Pin
10	716-0106	E-ring
11	720-0311	Handle Grip
12	732-0874	Torsion Spring
13	732-1184	Extension Spring, .84 x 4.6
14	736-0275	Flat Washer, 5/16
15	736-0921	Lock Washer, 1/2
16	736-3019	Flat Washer, .31 x 1.062 x .134
17	736-3084	Flat Washer, .51 x 1.12 x .06
18	738-0138A	Hex Cap Screw, 5/16-18 x .62
19	738-0143	Shoulder Screw, 3/8-16
20	741-0225	Hex Flange Bearing
21	741-0715	Snap Flange Bearing
22	746-0968	Lift Cable, 16.16 (42-inch decks)
	746-1144	Lift Cable, 15.62 (46-inch decks)
23	747-1111A	Lift Handle
24	756-1154	Roller Pulley
25	783-0678A	Arm Lift
26	783-0720A	Deck Stabilizer Bracket
27	710-0260A	Carriage Bolt, 5/16 x .62
28	710-0726	Self-tapping Screw, 5/16-18 x .75
29	710-0895	Self-tapping Screw, 1/4-15 x .75
30	731-1990	Lift Lever Cover
31	731-2104B	Shift Lever Cover w/ Cup Holder
32	736-3078	Flat Washer, .349 x 1.0 x .063
33	783-0677	Lift Adjustment Bracket
34	783-1279	Fender, 4-Style† (Shown)
	783-0839B	Fender, 7-Style‡

REF. NO.	PART NO.	DESCRIPTION
35	783-1489	Seat Mounting Bracket
36	710-1268	Screw, #10-16 x .375
37	712-3027	Hex Flange Lock Nut, 1/4-20
38	720-0309A	Seat Adjuster Grip
39	731-04074	Spacer
40	732-0499	Compression Spring, .41 x 1.5
41	736-0175	Spring Washer, .265 x .562 x .025
42	736-0204	Flat Washer, .344 x .62 x .03
43	738-0137A	Shoulder Screw, .340 x .285,1/4-20
44	738-0966	Shoulder Screw, .50 x .925, 3/8-16
45	783-0611	Seat Stop
46	783-0738	Seat Pivot Bracket
47	783-0739	Seat Adjustment Lever
48	783-0753	Seat Adjustment Selector
49	757-04003	High Back Seat, Black
	757-04002	Medium Back Seat, Black
	757-04001	Low Back Seat, Black
50	735-0656	RH Foot Pad, Rubber (4-Style Fender)
51	735-0657	LH Foot Pad, Rubber (4-Style Fender)
52	714-0111	Cotter Pin
53	731-0511	Trim Strip
54	783-0209A	Seat Lift Bracket
55	710-0870	Hex Head Washer Screw, 3/8-16 x .625
56	783-04081	Seat Pivot Bracket, Manually Adjusted
57	735-0672	RH Foot Pad, Rubber (7-Style Fender)
58	735-0673	LH Foot Pad, Rubber (7-Style Fender)
59	723-0484	RH Foot Pad, Grit (7-Style Fender)
60	735-0483	LH Foot Pad, Grit (7-Style Fender)
61	726-3046	Ratchet Clip
62	738-0296	Shoulder Screw, .437 x .286
63	726-0201	Speed Nut, .3125
64	736-0160	Flat Washer, .531 x .93
65	738-04012	Shoulder Spacer
66	720-04009	Knob, 3/8-16
67	736-0331	Cupped Washer, .39 x 1.12

†Models equipped with a 4-style fender can accept the shift lever cover w/ cup holder.
‡Models equipped with a 7-style fender cannot accept the shift lever cover w/ cup holder.

NOTE: *Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.*

www.mymowerparts.com

For Parts Call 606-678-9623 or 606-561-4983

Models 607, 608 & 609

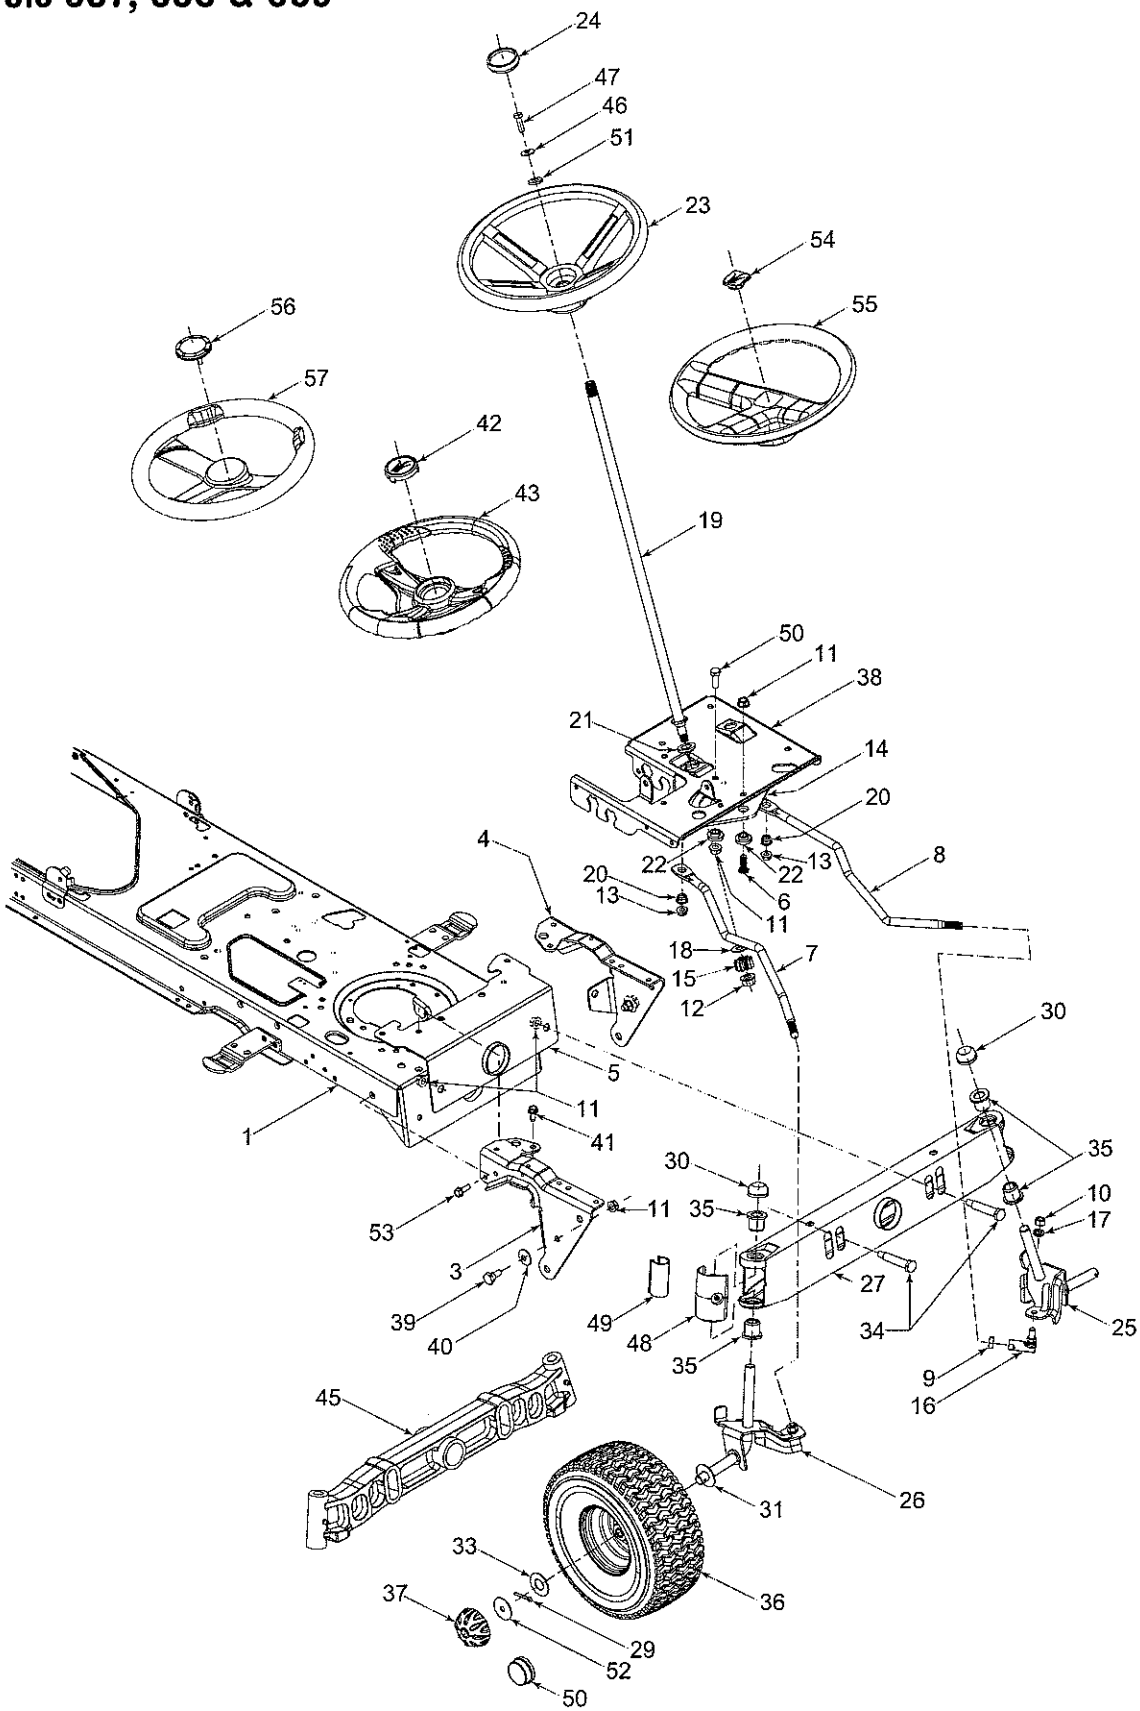

www.mymowerparts.com

For Parts Call 606-678-9623 or 606-561-4983

REF. NO.	PART NO.	DESCRIPTION
2	710-0604A	Self-tapping Screw, 16-18 x .625
3	783-0726B	RH Pivot Support Bracket
4	783-0727A	LH Pivot Support Bracket
5	783-0728	Pivot Bar Bracket
6	710-04095	Hex Cap Screw, 3/8-16 x 1.0 (Grade 5)
7	711-1408	RH Drag Link
8	711-1409A	LH Drag Link
9	712-0240	Jam Nut, 7/16-20 (Grade 2)
10	712-0241	Hex Nut, 3/8-24 (Grade 2)
11	712-0431	Flange Lock Nut, 3/8-16
12	712-0459	Flange Lock Nut, 7/16-20
13	712-3004A	Flange Lock Nut, 5/16-18
14	717-1550D	Steering Gear, 11/90 Ratio
15	717-1554	Steering Pinion Gear
16	723-0448A	Ball Joint, 7/16-20
17	736-0169	Lock Washer, 3/8
18	736-3084	Flat Washer, .51 x 1.12 x .06
19	738-1001A	Steering Shaft, .625 OD x 24.4
20	741-0475	Plastic Bushing, .38 ID
21	741-0656	Hex Flange Bearing, 5/8
22	738-0372B	Shoulder Spacer, .38 ID
23	631-0027	Standard Steering Wheel, 13.25
24	731-0220	Steering Wheel Cap, Round
25	638-0019A	LH Axle Assembly, .625 Diameter†
	638-0021	LH Axle Assembly, .625/.750 Diameter‡
26	638-0020A	RH Axle Assembly, .625 Diameter†
	638-0022	RH Axle Assembly, .625/.750 Diameter‡
27	683-0128A	Steel Pivot Bar
29	714-0470	Cotter Pin
30	726-0214	Push Cap, .625†
	726-0341	Push Cap, .75‡
33	736-0285	Flat Washer, .635 x 1.589 x .06
34	738-1011	Shoulder Screw, .5 x 2.2, 3/8-16
35	741-0659	Flange Bearing, .632 ID x .937 OD†
	741-0660	Flange Bearing, .76 ID x .937 OD‡
36	634-0105A	Wheel Assembly, 15 x 6 x 6 Square Shoulder
	634-0056A	Wheel Assembly,15 x 6 x 6 Round Shoulder
	634-0172	Rim Assembly Only
	734-0255	Air Valve (Not Shown)
	734-1731	Tire Only, Square Shoulder
	734-0864	Tire Only, Round Shoulder
37	734-2290A	Deluxe Hub Cap (Ref. 33 Required)
38	783-0653F	Steering Support Bracket
39	738-0143	Shoulder Screw, 3/8-16
40	736-0331	Bell Washer, .39 x 1.13 x .062
41	710-1260A	Self-tapping Screw, 5/16-18 x .75
42	731-04040	Deluxe Steering Wheel
43	634-04008	Steering Wheel, Soft Grip
44	731-0484A	Standard Hub Cap (Ref. 33 Not Necessary)
45	719-0399B	Cast Iron Pivot Bar†
	719-0525B	Cast Iron Pivot Bar‡
46	736-0242	Bell Washer, .34 x .872
47	710-0643	Hex Bolt, 5/16-18 x 1.0
48	731-1291A	Pivot Bar End Cap w/ Fitting
49	731-1649	Pivot Bar End Cap w/o Fitting
50	710-0514	Hex Screw, 3/8-16 x 1.0
51	736-3004	Flat Washer, .406 x .875 x .105
52	736-0430	Flat Washer, .35 x 1.59 x .062
53	710-1238	Screw, Hex Washer, 5/16-18 x .87
54	731-1459A	Steering Wheel Cap
55	731-1687	Steering Wheel
56	731-2625	Steering Wheel Cap
57	731-2624	Steering Wheel, Soft Grip

†Models equipped with a 42-inch deck.
‡Models equipped with a 46-inch deck.

NOTE: *Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment*

www.mymowerparts.com

For Parts Call 606-678-9623 or 606-561-4983

Models 607, 608 & 609

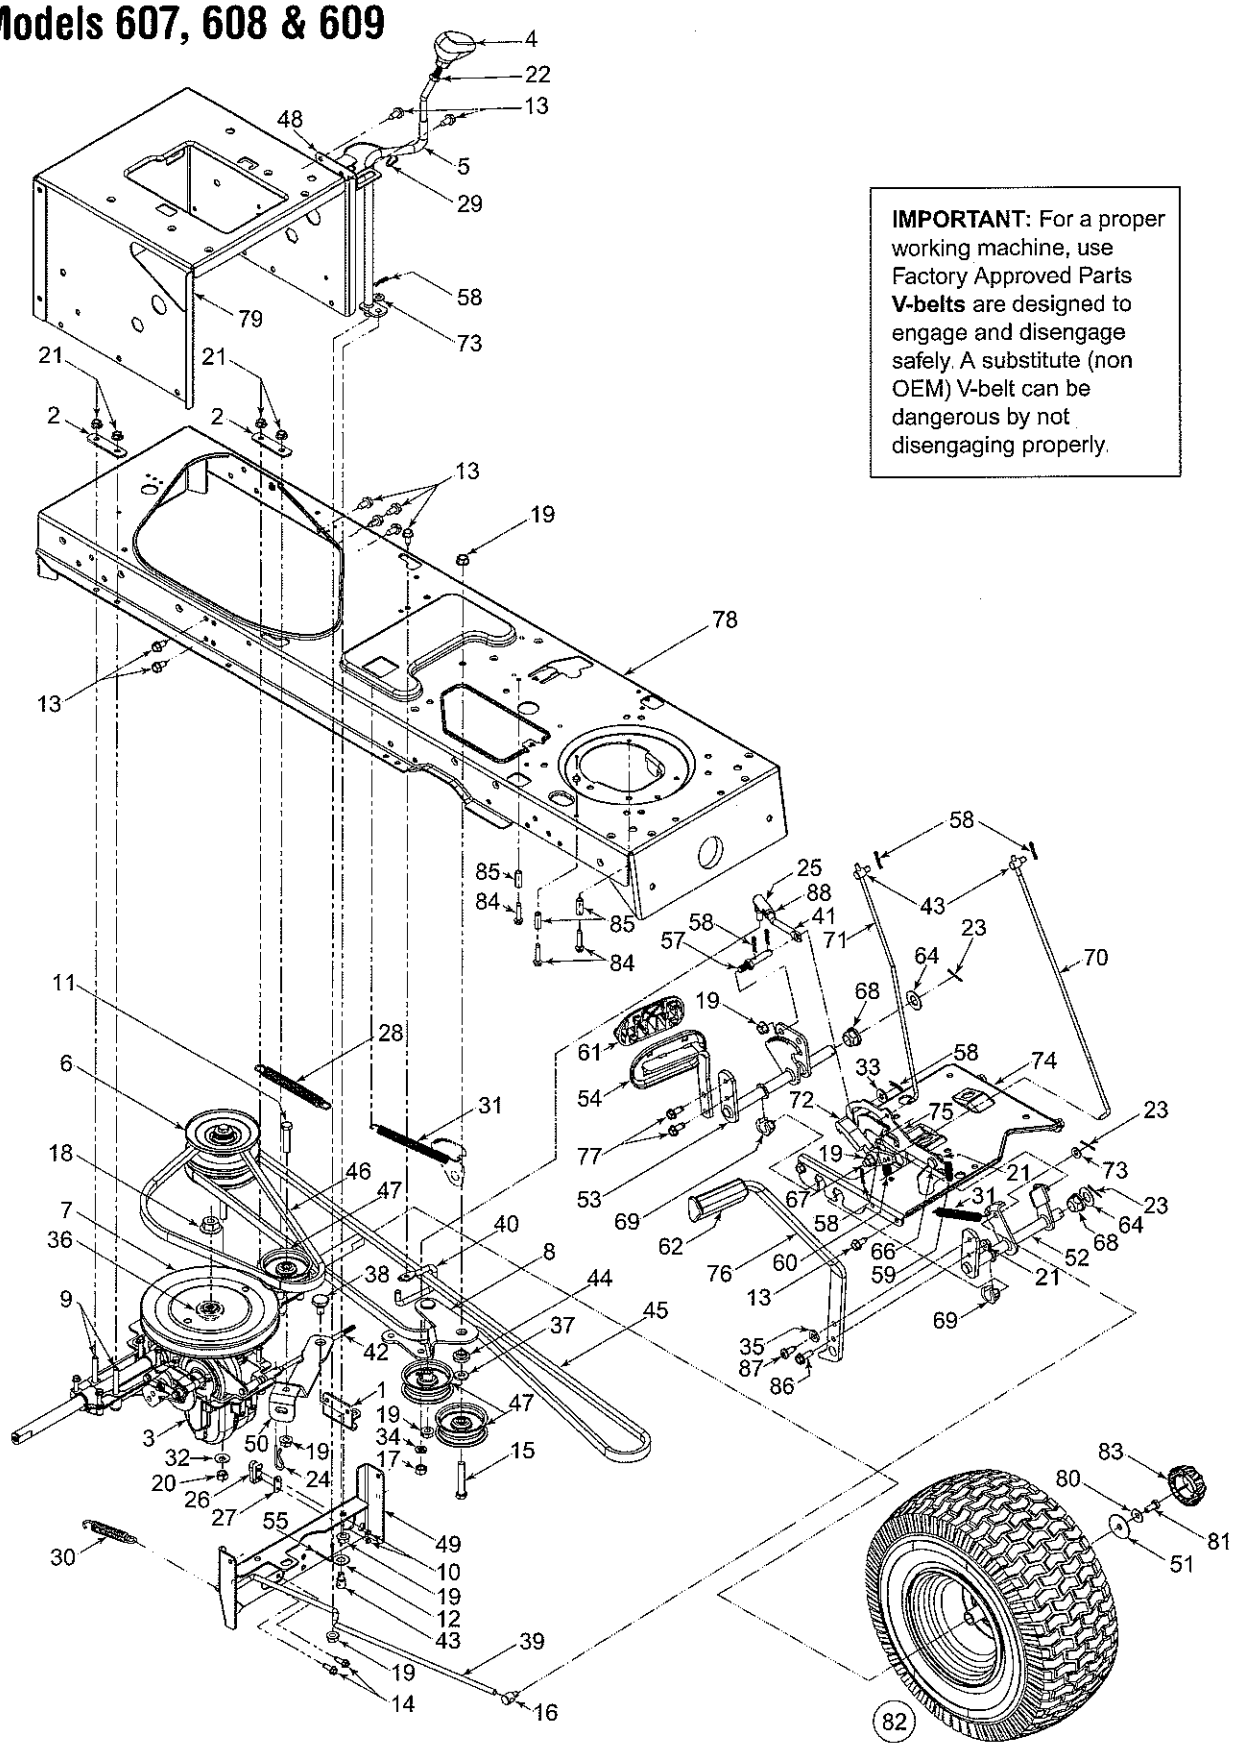

www.mymowerparts.com

For Parts Call 606-678-9623 or 606-561-4983

Model 607, 608 & 609

REF. NO.	PART NO.	DESCRIPTION
1	783-1015	Shift Lever Support
2	17840	Transaxle Mounting Bracket
3	618-0551A	Single-speed Transmission Assembly
4	631-0009A	Shifter Knob
5	647-0045	Shift Lever
6	656-0048	Variable-speed Pulley Assembly
7	656-0051A	Transmission Pulley, 8.5 x .5-36
8	683-0251	Double-idler Bracket
9	710-0176	Hex Cap Screw, 5/16-18 x 2.75
10	710-0227	Self-tapping Screw, #8-18 x .5
11	710-0347	Hex Cap Screw, 3/8-16 x 1.75
12	736-0272	Flat Washer, .51 x 1.0 x .060
13	710-0726	Self-tapping Screw, 5/16-18 x .75
14	710-0642	Self-tapping Screw, 1/4-20 x .75
15	710-3011	Hex Cap Screw, 3/8-16 x 2.25
16	711-0677	Ferrule, 5/16-18
17	712-0241	Hex Nut, 3/8-24
18	712-0702	Hex Nut, 7/16-20
19	712-0431	Flange Lock Nut, 3/8-16
20	712-3017	Hex Nut, 3/8-16
21	712-3004A	Flange Lock Nut, 5/16-18
22	712-3008	Jam Nut, 3/8-16
23	714-0111	Cotter Pin
24	714-0209	Cotter Pin
25	723-3018	Ball Joint
26	725-1644	Short Spring Switch
27	726-0320	Insulator Nut Plate
28	732-0384	Extension Spring, .62 Dia. x 6.12
29	732-0525	Compression Spring Clip
30	732-0716	Extension Spring, .59 OD x 4
31	732-0963	Extension Spring, .50 Dia. x 6.37 (hooks to flange, 783-0650, in frame)
32	736-0105	Bell Washer, .401 x .87 x .063
33	736-0262	Flat Washer, .385 x .87 x .09
34	736-0169	Lock Washer, 3/8
35	736-3008	Flat Washer, .344 x .750 x .120
36	718-0771	Pulley Hub
37	736-3010	Flat Washer, .407 x .812 x .135
38	738-0322	Shoulder Screw, .625 x .217
39	747-1122	Brake Rod
40	747-1123A	Belt Guard
41	747-1127	Idler Adjustment Rod, 3/8
42	747-1285	Shift Rod
43	711-0736	Adjustment Ferrule, 1/4-20 x 1.0
44	738-0372B	Shoulder Spacer, .38 ID
45	754-0467	Lower Drive Belt
46	754-0468	Upper Drive Belt
47	756-0981A	Flat Idler, 2.75 OD
48	783-1016B	Speed Control Rod Bracket
49	783-0667B	Transmission Torque Bracket
50	783-0669	Idler Bracket
51	736-0430	Flat Washer, .350 x 1.59 x .062
52	647-0031B	Brake Control Assembly
53	647-0032	Speed Control Assembly
54	683-0266	Drive Pedal Assembly
55	714-0470	Cotter Pin, 1/8 x 1.25
57	711-1363	Pin, 3/8-16 x 2.43
58	714-0104	Cotter Pin
59	732-0335	Compression Spring, .34 OD x 1.0
60	732-0955	Extension Spring, .50 OD x 1.41
61	735-0662	Drive Pedal Pad
62	735-3049	Brake Pedal Pad
64	736-0187	Flat Washer, .64 x 1.24 x .06
66	738-0155	Shoulder Screw, .437 x 1.62
67	738-0507B	Shoulder Screw, .5 x .434
68	741-0225	Hex Flange Bearing
69	741-3065B	Split Hex Flange Bearing
70	747-1137	Cruise Control Rod
71	747-1138	Brake Lock Control Rod
72	748-0413	Cruise Latch
73	736-0275	Flat Washer, .344 x .688 x .065
74	783-0653F	Steering Support Bracket
75	783-0732	Drive Lockout Bracket
76	783-0773	Brake Pedal
77	710-1260A	Self-tapping Screw, 5/16-18 x .75
78	683-0304C	Lower Frame Assembly
79	783-1031A	Hitch Plate
80	736-0242	Bell Washer, .34 x .872
81	710-0627	Hex Cap Screw, 5/16-24 x .75
82	634-0177	Wheel Assembly Complete 20 x 10 x 8 Square Shoulder
	634-0104	Wheel Assembly Complete 20 x 8 x 8 Square Shoulder
	734-1675	Wheel Assembly Complete 20 x 8 x 8 Round Shoulder
	634-0070	Rim Assembly Only
	734-0255	Air Valve (Not Shown)
	734-1873	Tire Only, 20 x 10 x 8, Square Shoulder
	734-1730	Tire Only, 20 x 8 x 8, Square Shoulder
	734-1596	Tire Only, 20 x 8 x 8, Round Shoulder
83	734-2290A	Deluxe Hub Cap (Ref. 51 Required)
84	710-0809	Self-tapping Screw, 1/4-20 x 1.25
85	750-0566A	Spacer
86	710-0650	Self-tapping Screw, 5/16-18 x .875
87	710-1611B	Screw, 5/16-18 x .75
88	712-0711	Hex Nut, 3/8-24

NOTE: *Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.*

www.mymowerparts.com

For Parts Call 606-678-9623 or 606-561-4983

Model 607, 608 & 609

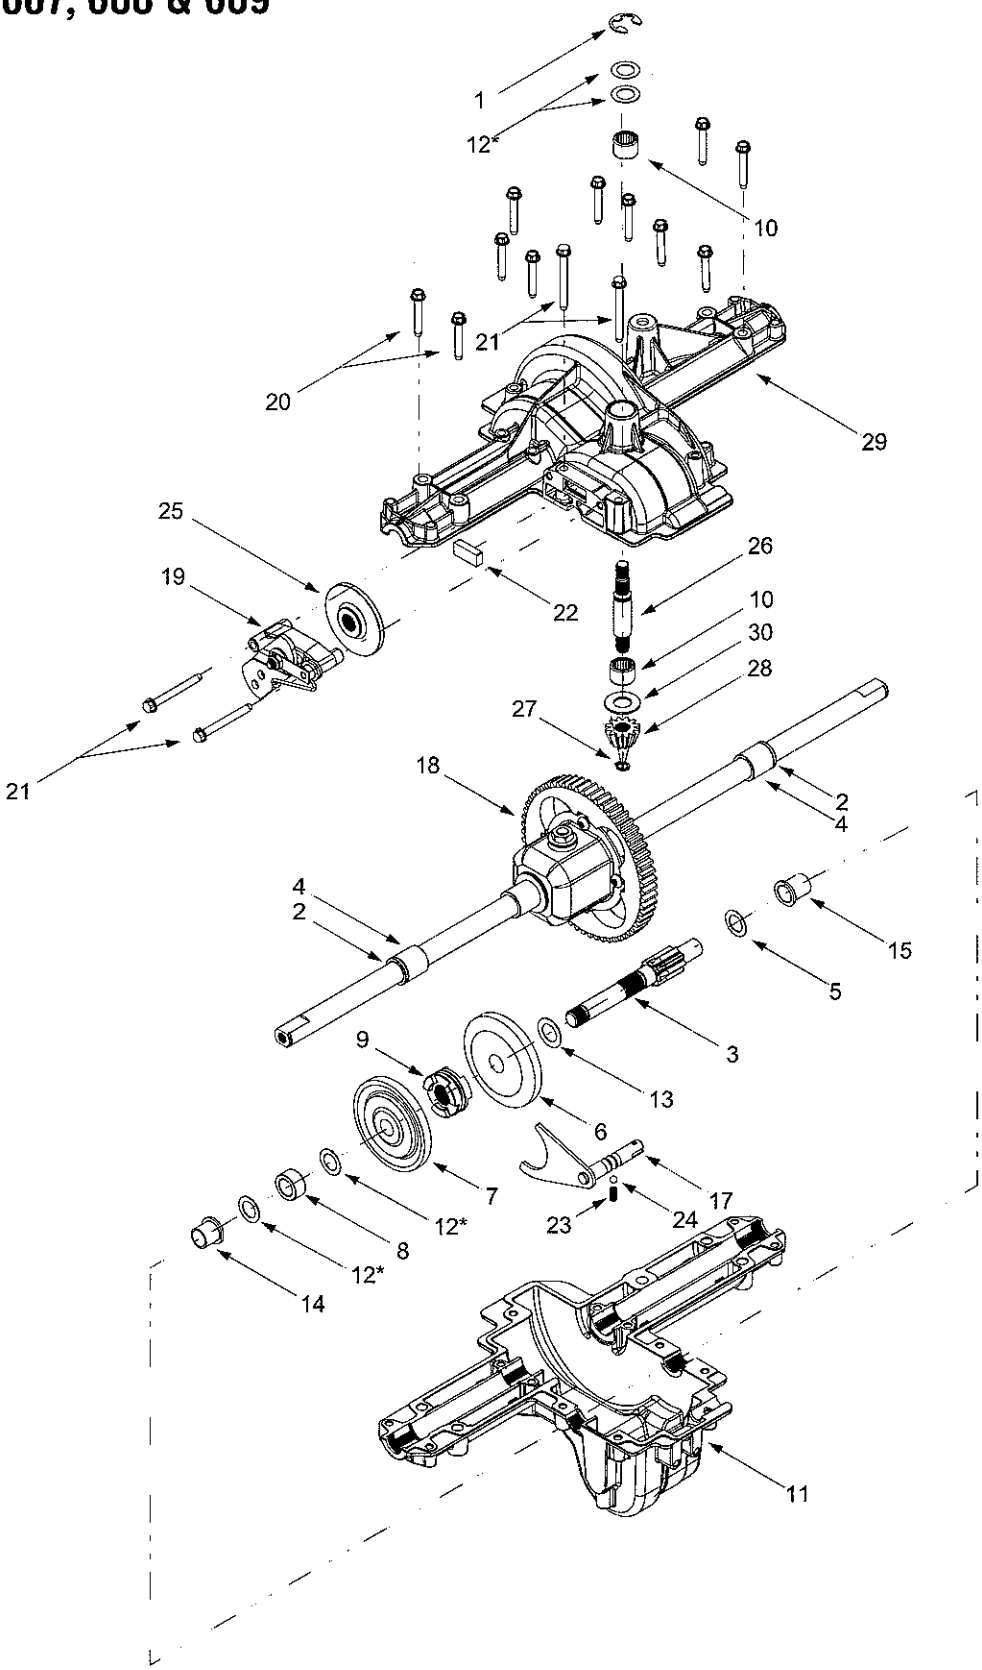

www.mymowerparts.com

For Parts Call 606-678-9623 or 606-561-4983

REF. NO.	PART NO.	DESCRIPTION
1	716-0231	E-ring, .75
2	721-0338	Seal, .75 x 1.0 x .125
3	711-1431	Drive Shaft
4	741-0340	Sleeve Bearing, .75 x .1.0 x 1.0
5	736-0495	Thrust Washer, 1.0 x .632 x .0
6	717-1362	42-tooth Bevel Gear
7	717-1363	42-tooth Bevel Gear
8	750-1234	Spacer, .633 x 1.0 x .513
9	718-0228	Clutch Collar
10	741-0335	Needle Bearing, .625 x .813 x 495
11	719-0394	Lower Housing
12a	736-0336	Flat Washer, 5/8 x 1.0 x .030*
12b	736-0337	Flat Washer, 5/8 x 1.0 x .040*
12c	736-0349	Flat Washer, 5/8 x 1.0 x .020*
13	736-0519	Flat Washer, .70 x 1.125 x .031
14	741-0336	Flange Bearing, 5/8 x 3/4 x 3/4
15	741-0337	Flange Bearing, 5/8 x 3/4 x 15/16
16	750-1238	Spacer, .635 x 1.0 x .27
17	611-0133	Detent Shaft Assembly
18	618-0424A	Differential Assembly
19	661-0006	Brake Assembly
20	710-1325	Self-tapping Screw, 1/4-20 x 1.625
21	710-1206	Self-tapping Screw, 1/4-20 x 2.375
22	717-0678	Brake Pad
23	732-0863	Compression Spring
24	741-0862	Detent Ball
25	761-0202	Brake Disc
26	711-1430	Input Shaft
27	716-0108	Retaining Ring, .437
28	717-1464	14-tooth Bevel Pinion
29	719-0580	Upper Housing
30	736-0335	Thrust Washer, .635 x 1.26 x .06

*Use applicable flat washer (12a, 12b or 12c) in this application allowing proper end-play as instructed in *MTD's* Service Manual.

www.mymowerparts.com

For Parts Call 606-678-9623 or 606-561-4983

Models 607, 608 & 609 (w/ Electric PTO)

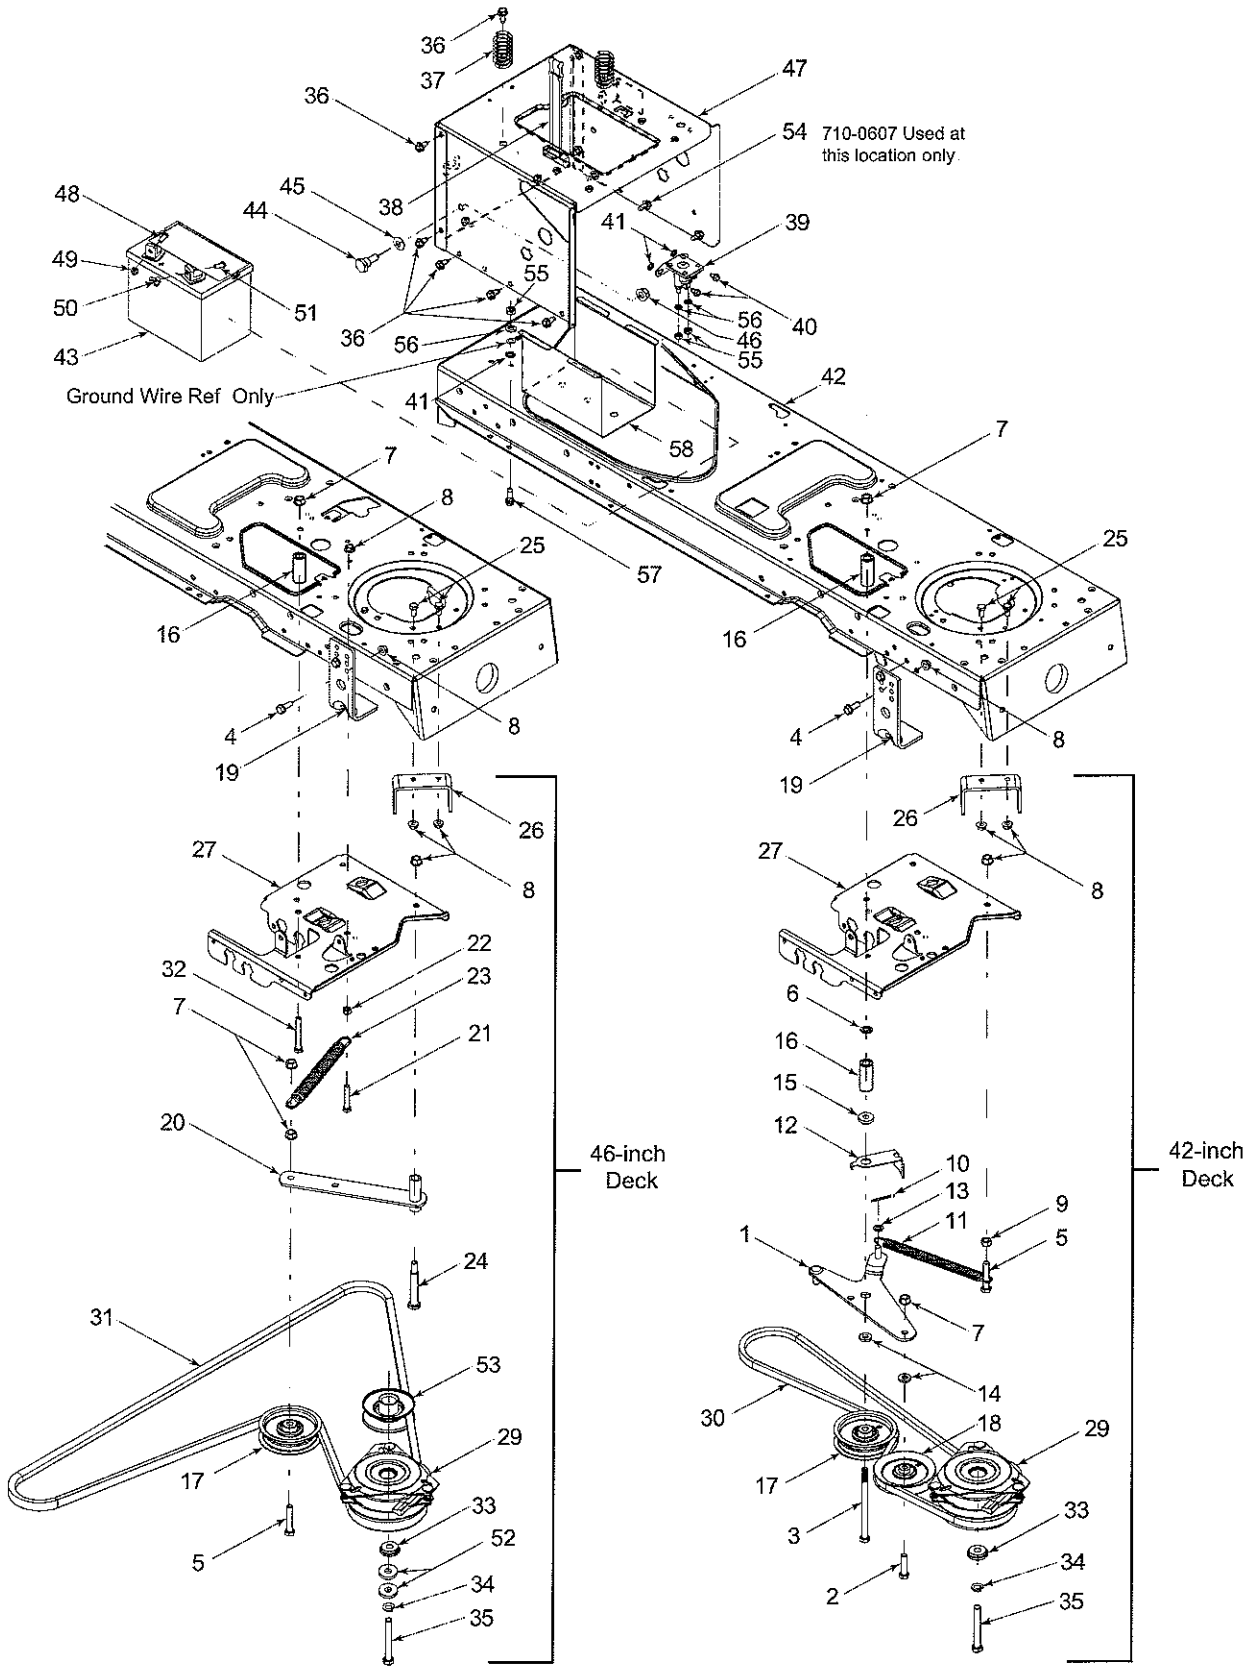

www.mymowerparts.com

For Parts Call 606-678-9623 or 606-561-4983

REF. NO.	PART NO.	DESCRIPTION
1	683-0450	Engagement Plate Assembly
2	710-0520	Hex Cap Screw, 3/8-16 x 1.5
3	710-0831	Hex Cap Screw, 3/8-16 x 5.5
4	710-1238	Hex Head Washer Screw, 5/16-18 x .875
5	710-3144	Hex Cap Screw, 3/8-16 x 2.0
6	712-0229	Push Nut, 3/8
7	712-0431	Flange Lock Nut, 3/8-16
8	712-3004A	Flange Lock Nut, 5/16-18
9	712-3017	Hex Nut, 3/8-16
10	714-0470	Cotter Pin, 1/8 x 1.25
11	732-0384	Extension Spring, .62 x 6.12
12	732-0991A	Belt Guard
13	736-0140	Flat Washer, .385 x .62 x .063
14	736-3010	Flat Washer, .407 x .812 x .135
15	738-0372A	Shoulder Spacer, .380
16	748-0415B	Spacer, 3/8 x 1.54
17	756-0627B	Idler Pulley, 3.5
18	756-1208	Idler Pulley, 4.0
19	783-0891B	Deck Stop
20	683-0297	Idler Bracket Assembly
21	710-3180	Hex Cap Screw, 5/16-18 x 1.75
22	712-3010	Hex Nut, 5/16-18
23	732-0978	Extension Spring, .62 x 5.62
24	738-3056	Shoulder Screw, 1/2 x 2.5
25	710-3025	Hex Cap Screw, 5/16-18 x .625
26	783-1003	Electric Clutch Anti-rotation Bracket
27	783-0653F	Steering Support Bracket
28	683-0314	Frame Assembly
29	717-1708	Electric PTO Clutch
30	754-0497	PTO Belt (Models w/ 42-inch deck)
31	754-0474	PTO Belt (Models w/ 46-inch deck)
32	710-0859	Hex Cap Screw, 3/8-16 x 2.5
33	738-0785	Shoulder Spacer, 1.38 x .445 x .36
34	736-0171	Lock Washer, 7/16
35	710-3157	Hex Cap Screw, 7/16-20 x 3.25 (Grade 5)
36	710-0604A	Self Tapping Screw, 5/16-18 x .625
37	732-04035	Compression Spring, 1.28 x 3.125
38	723-0444	Battery Strap
39	725-1426	Solenoid, 12-Volt, 100 Amp
40	710-0599	Self Tapping Screw, 1/4-20 x .5
41	736-0222	Lock Washer, 1/4
42	683-0304C	Lower Frame Assembly
43	725-1706	12-volt Battery, 270 CCA
44	738-1020	Shoulder Screw, .625 x .5, 7/16-20
45	736-0407	Bell Washer, .45 x 1.0 x .062
46	712-0459	Flange Lock Nut, 7/16-20
47	783-1031A	Hitch Plate
48	710-0703	Hex Cap Screw, 1/4-20 x .75
49	712-0271	Hex Sems Nut, 1/4-20
50	712-3087	Wing Nut, 1/4-20
51	738-1132	Shoulder Screw, 1/4-20, .25 x .15
52	736-0322	Flat Washer, .4375 x 1.25 x .180
53	756-0639A	Engine Pulley
54	710-0607	Self-tapping Screw, 5/16-18 x .5
55	712-3006	Hex Nut, 1/4-20
56	736-0329	Lock Washer, 1/4
57	710-0642	Self-tapping Screw, 1/4-20 x .75
58	783-0349	Battery Tray

IMPORTANT: For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

NOTE: *Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.*

www.mymowerparts.com

For Parts Call 606-678-9623 or 606-561-4983

Models 607, 608 & 609 (w/ Manual PTO)

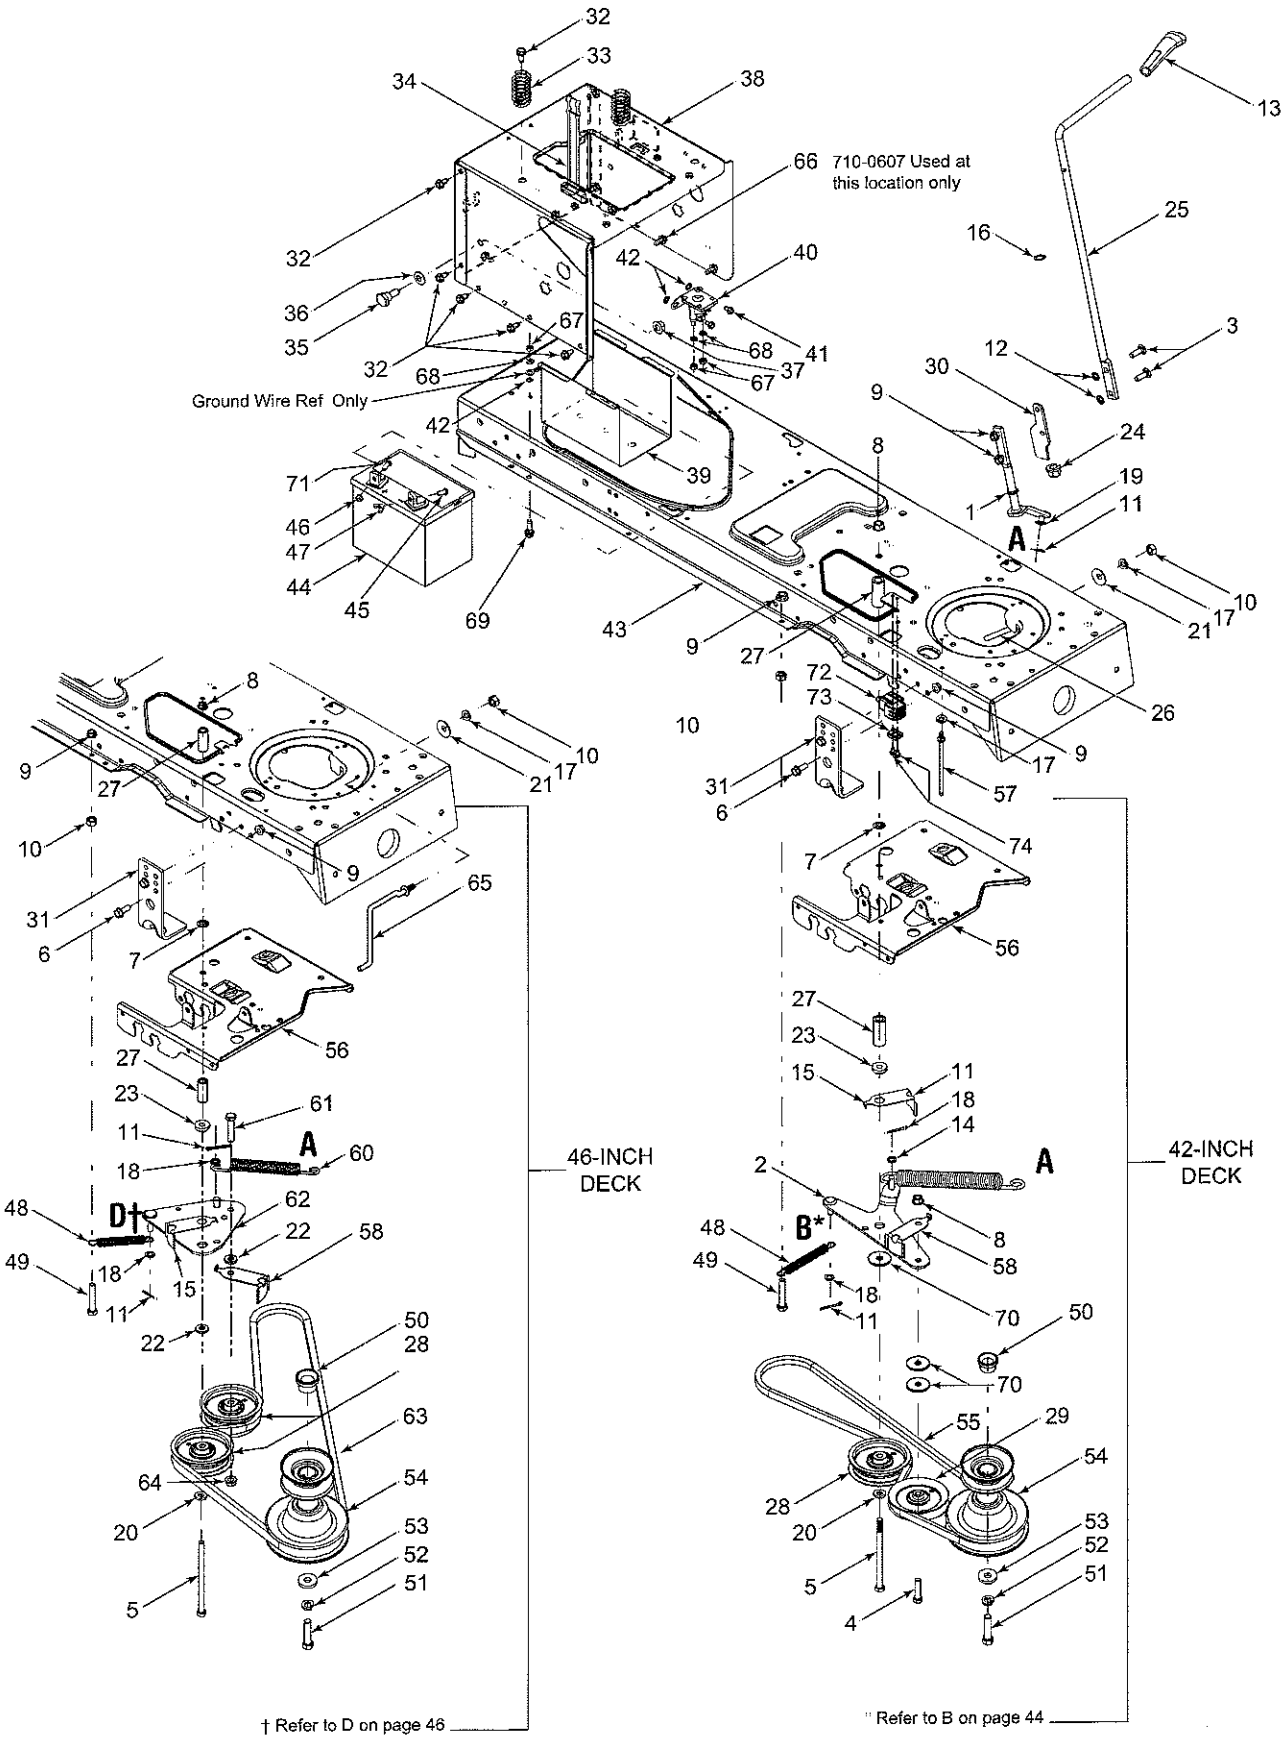

www.mymowerparts.com

For Parts Call 606-678-9623 or 606-561-4983

REF. NO.	PART NO.	DESCRIPTION
1	647-0064	PTO Engage Lever Assembly
2	683-0450	PTO Engage Plate Assembly
3	710-0276	Carriage Screw, 5/16-18 x 1.00
4	710-0520	Hex Cap Screw, 3/8-16 x 1 5
5	710-0831	Hex Cap Screw, 3/8-16 x 5.5
6	710-1238	Hex Head Washer Screw, 5/16-18 x .875
7	712-0229	Push Nut, 3/8
8	712-0431	Flange Lock Nut, 3/8-16
9	712-3004A	Flange Lock Nut, 5/16-18
10	712-3010	Hex Nut, 5/16-18
11	714-0470	Cotter Pin, 1/8 x 1.25
12	726-0201	Speed Nut, .3125
13	731-2111A	PTO Knob
14	732-1170	Extension Spring, .75 x 6 75
15	732-0991A	Belt Guard
16	736-0108	Flat Washer, .510 x .750 x .033
17	736-0119	Lock Washer, 5/16
18	736-0140	Flat Washer, .385 x .62 x .063
19	736-0275	Flat Washer, 5/16
20	736-0300	Flat Washer, .406 x .875 x .059
21	736-0242	Bell Washer, .345 x .88 x .060
22	736-3010	Flat Washer, .407 x .812 x .135
23	738-0372B	Shoulder Spacer, .380
24	741-0708	Hex Split Flange Bearing, .5
25	747-1112D	PTO Engagement Handle
26	747-1286A	Belt Keeper Rod
27	748-0415B	Spacer, 3/8 x 1 54
28	756-0627B	Idler Pulley, 3.5
29	756-1208	Idler Pulley, 4.0
30	783-0744A	Engagement Stop
31	783-0891B	Deck Stop
32	710-0604A	Self Tapping Screw, 5/16-18 x .625
33	732-04035	Compression Spring, 1 28 x 3.5
34	723-0444	Battery Strap
35	738-1020	Shoulder Screw, .625 x .5, 7/16-20
36	736-0407	Bell Washer, .45 x 1.0 x .062
37	712-0459	Flange Lock Nut, 7/16-20
38	783-1031A	Hitch Plate
39	783-0349	Battery Tray
40	725-1426	Solenoid, 12-Volt, 100 Amp
41	710-0599	Self Tapping Screw, 1/4-20 x .5
42	736-0222	Lock Washer, 1/4
43	683-0304C	Lower Frame Assembly
44	725-1706	12-volt Battery, 270 CCA
45	738-1132	Hex Cap Screw, 1/4-20
46	712-0271	Hex Sems Nut, 1/4-20
47	712-3087	Wing Nut, 1/4-20
48	732-1165	Extension Spring, .50 x 5.0
49	710-3180	Hex Cap Screw, 5/16-18 x 1.75
50	750-0596	Spacer Cup
51	710-3029	Hex Head Cap Screw, 7/16-20 x 1.25
52	736-0171	Lock Washer, 7/16
53	736-0322	Flat Washer, .450 x 1 25
54	756-0982B	Engine Pulley, 3.56 OD x 5 56
55	754-0497	PTO Belt (Models w/ 42-inch deck)
56	783-0653F	Steering Support Bracket
57	711-1044	Keeper Pin, 5/16 x 4 75
58	732-1013	Belt Guard
59	710-3025	Hex Cap Screw, 5/16-18 x .625
60	732-0944	Extension Spring, .75 x 6 75
61	710-0347	Hex Cap Screw, 3/8-16 x 1.75
62	683-0302	PTO Engagement Plate Assembly
63	754-0486A	PTO Belt (Models w/ 46-inch deck)
64	712-0431	Flange Lock Nut, 3/8-16
65	747-1243	Belt Keeper Rod
66	710-0607	Self-tapping Screw, 5/16-18 x .5
67	712-3006	Hex Nut, 1/4-20
68	736-0329	Lock Washer, 1/4
69	710-0642	Self-tapping Screw, 1/4-20 x .75
70	736-3039	Flat Washer, .406 x 1.5 x 11 guage
71	710-0703	Carriage Bolt, 1/4-20 x .75
72	725-1657A	Safety Interlock Switch
73	17962	Switch Plate
74	710-0224	Screw, #10 x .5

IMPORTANT: For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

NOTE: *Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment.*

www.mymowerparts.com

For Parts Call 606-678-9623 or 606-561-4983

Models 607, 608 & 609

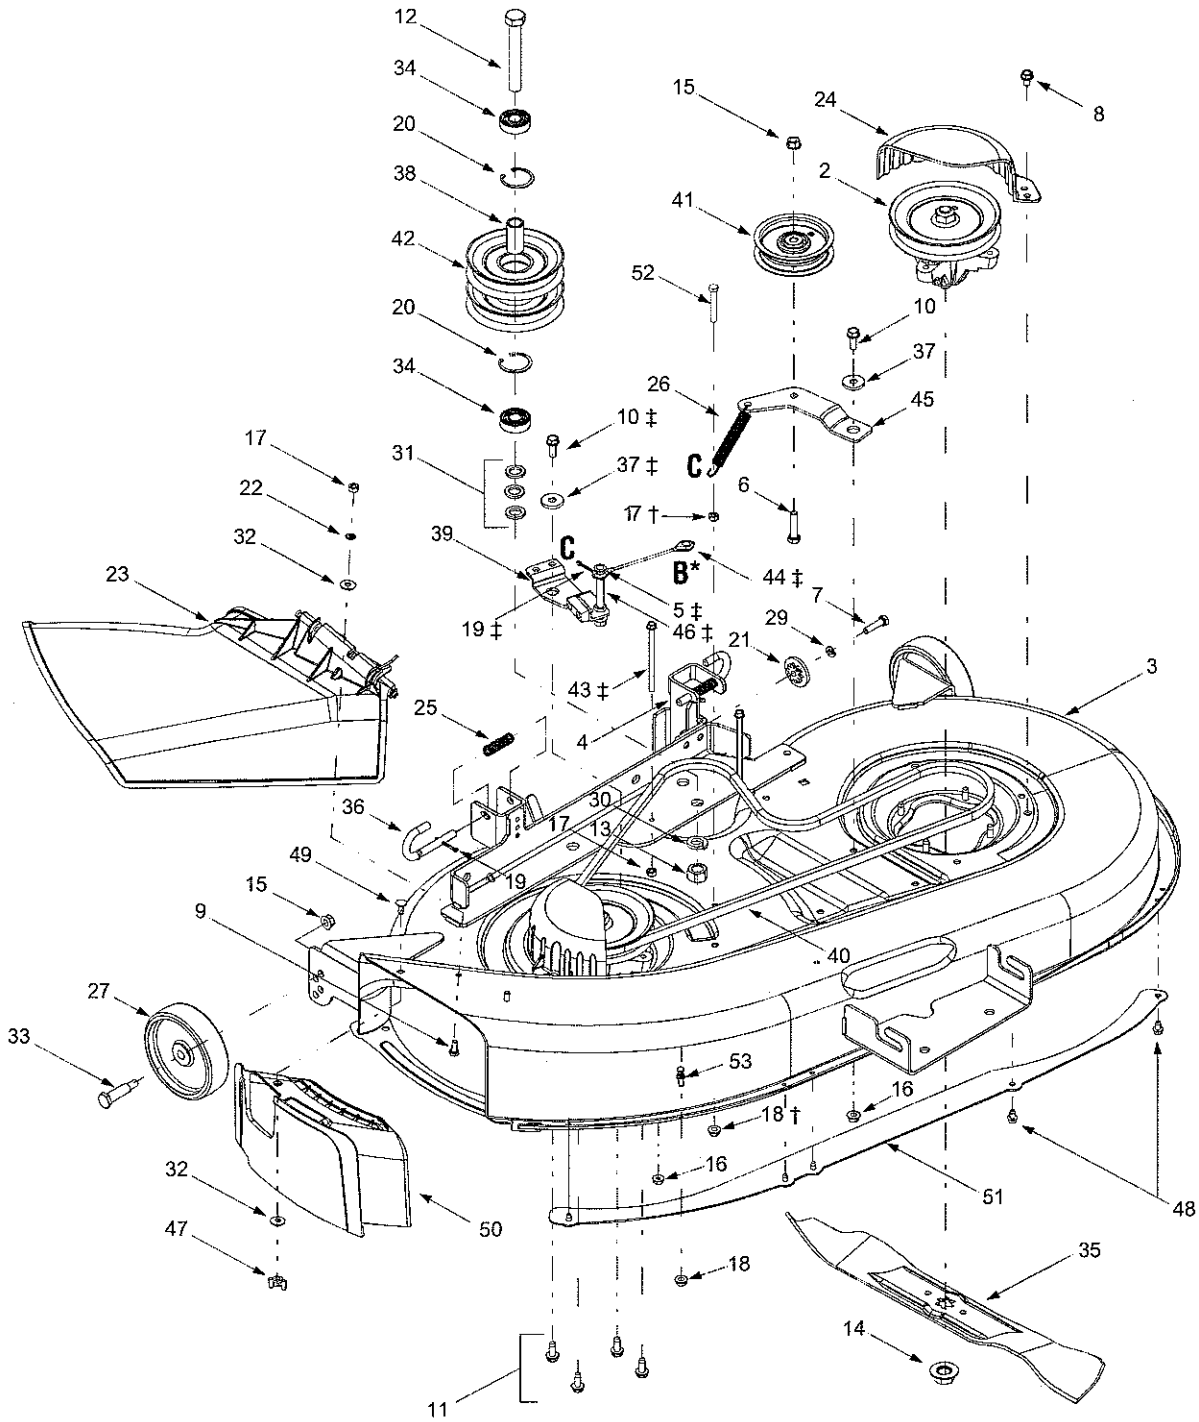

* Refer to **B** on page 42.
† Found on models equipped with an electric PTO only
‡ Found on models equipped with a manual PTO only.

www.mymowerparts.com

For Parts Call 606-678-9623 or 606-561-4983

REF. NO.	PART NO.	DESCRIPTION
2	618-0565	Spindle Assembly, 5.75 Dia.
—	618-0574	Spindle Assembly w/ Fitting, 5 75 Dia.
—	756-0980	Pulley Only
3	683-0198F	42-inch Deck Shell
4	683-0254	Deck Adjustment Bracket w/ Weld Nut
5	736-0140	Flat Washer, .385 x .62 x .063
6	710-0520	Hex Cap Screw, 1/4-20 x 1.5
7	710-0528	Hex Cap Screw, 5/16-18 x 1.25
8	710-0726	Self-tapping Screw, 5/16-18 x .75
9	710-0751	Hex Cap Screw, 1/4-20 x .62
10	710-1238	Hex Head Washer Screw, 5/16-18 x .875
11	710-0650	Self-tapping Screw, 5/16-18 x .88
12	710-3151	Hex Cap Screw, 5/8-18 x .875
13	712-0337	Hex Nut, 5/8-18
14	712-0417A	Hex Flange Nut, 5/8-18
15	712-0431	Flange Lock Nut, 3/8-16
16	712-3004A	Flange Lock Nut, 5/16-18
17	712-3006	Hex Nut, 1/4-20
18	712-3027	Hex Flange Lock Nut, 1/4-20
19	714-0470	Cotter Pin, 1/8 x 1.25
20	716-3020	Internal Snap Ring
21	717-1553B	Deck Adjustment Gear
22	726-0233	Push Nut. .25 x .5
23	731-1032B	Side Discharge Chute Assembly
24	731-2486A	Belt Cover
25	732-0306	Compression Spring, .406 x .531 x 1.75
26	732-0470A	Extension Spring, .50 x 4.74

REF. NO.	PART NO.	DESCRIPTION
27	734-0973	Deck Wheel, 5 x 1 38
29	736-0119	Lock Washer, 5/16
30	736-0158	Lock Washer, 5/8
31	736-0162	Flat Washer, .64 x 1 0 x .12
32	736-0270	Bell Washer, .265 x .75 x .062
33	738-0373	Shoulder Screw, .498 x 1.53
34	741-0524	Bearing, .625 x 1.574 x .470
35	742-0616A	Three-in-one Blade, Star Center, 21.23"
36	747-1116	Deck Release Pin
37	748-0331	Shoulder Spacer, .625 x .324
38	750-0932A	Spacer, .635 x .88 x 1.72
39	683-0440	Deck Brake Assembly
40	754-0498	Deck Belt
41	756-0627B	Idler Pulley, 3.5
42	756-1202	Double Pulley, 5 0
43	710-1830	Self-tapping Screw, 1/4-20 x 4.0
44	746-0970	Brake Cable, 5.05
45	783-1291	Idler Bracket
46	711-1534	Pin, 3/8-16, 3/8 x 3 27
47	712-3087	Wing Nut, 1/4-20
48	710-0599	Self-tapping Screw, 1/4-20 x .5
49	710-0134	Carriage Screw, , 1/4-20 x .62
50	731-2363	Mulch Plug
51	783-1146A	Deck Skirt
52	710-0136	Hex Cap Screw, 1/4-20 x 1.75
53	711-04069	Grass catcher Pin

IMPORTANT: For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

NOTE: *Tractor features vary by model. NOT all parts listed above and pictured on the previous page are standard equipment*

www.mymowerparts.com

For Parts Call 606-678-9623 or 606-561-4983

Models 607, 608 & 609

46-inch Deck Brake Assembly

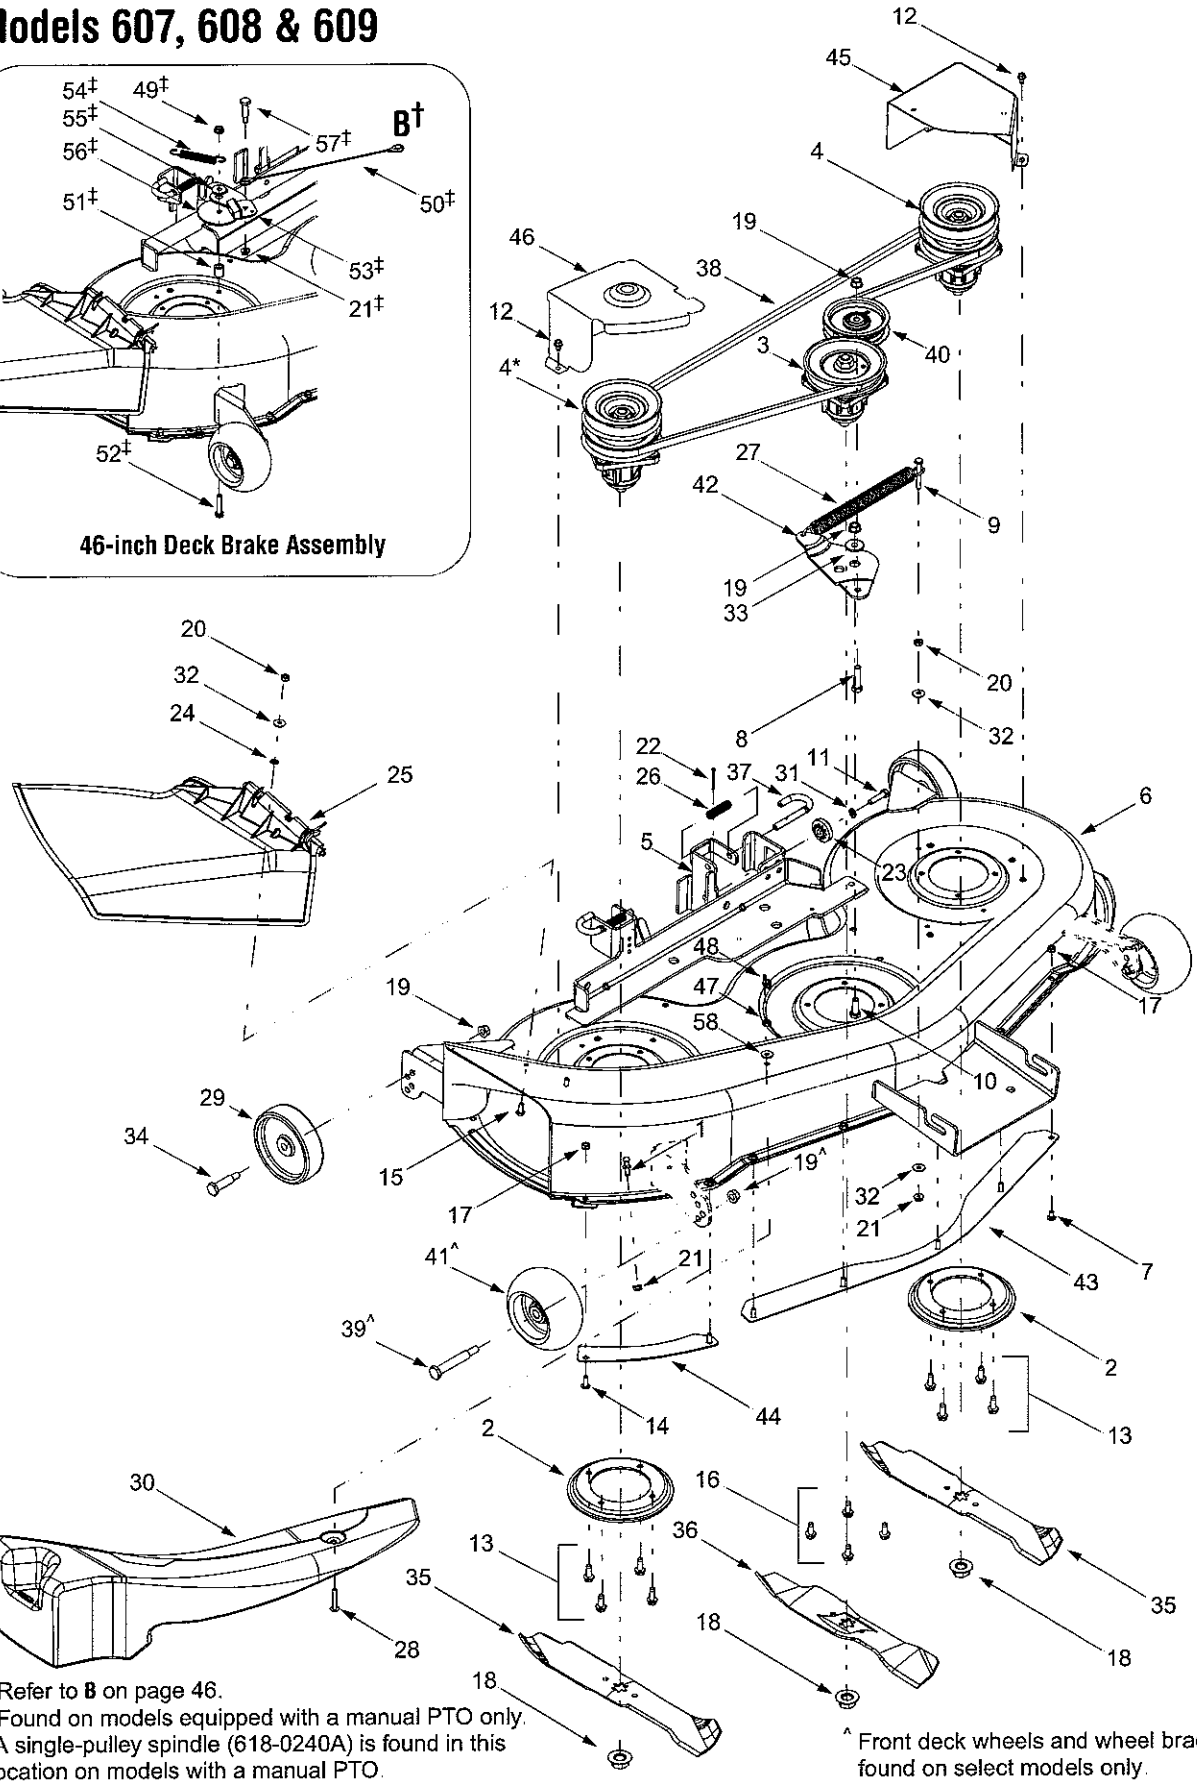

† Refer to **B** on page 46.
‡ Found on models equipped with a manual PTO only.
* A single-pulley spindle (618-0240A) is found in this location on models with a manual PTO.

^ Front deck wheels and wheel brackets found on select models only.

www.mymowerparts.com

For Parts Call 606-678-9623 or 606-561-4983

REF. NO.	PART NO.	DESCRIPTION
1	711-04069	Grass Catcher Pin, 1/4-20
2	17982	Spindle Reinforcement Plate
3	618-0240A	Spindle Assembly, 5 0 Dia.
	756-1187	Pulley Only
4	618-0241	Double Pulley Spindle Assembly
	756-0603	Double Pulley Only
5	683-0254	Deck Adjustment Bracket Assembly
6	683-0199C	46-inch Deck Shell
	683-04125	46-inch Deck Shell (with front guage wheel brackets)
7	710-0167	Carriage Screw, 1/4-20 x .50
8	710-0344	Hex Cap Screw, 3/8-16 x 1.5
9	710-0501	Hex Cap Screw, 1/4-20 x 2.0
10	710-0514	Hex Cap Screw, 3/8-16 x 1.0
11	710-0528	Hex Cap Screw, 5/8-18 x 1.25
12	710-0599	Self-tapping Screw,1/4-20 x .5
13	710-0650	Self-tapping Screw,15/16-18 x .875
14	710-0703	Hex Screw, 1/4-20 x .75
15	710-0751	Hex Cap Screw, 1/4-20 x .62
16	710-1260A	Self-tapping Screw, 5/16-18 x .75
17	712-0271	Hex Sems Nut, 1/4-20
18	712-0417A	Hex Flange Nut, 5/8-18
19	712-0431	Flange Lock Nut, 3/8-16
20	712-3006	Hex Nut, 1/4-20
21	712-3027	Hex Flange Lock Nut, 1/4-20
22	714-0470	Cotter Pin, 1/8 x 1.25
23	717-1553B	Deck Adjustment Gear
24	726-0233	Push Nut. .25 x .5
25	731-1032B	Side Discharge Chute Assembly
26	732-0306	Compression Spring, .406 x .531 x 1.75
27	732-0594A	Extension Spring, .91 x 7 3

REF. NO.	PART NO.	DESCRIPTION
28	710-0578	Screw, 1/4-20 x 1.5
29	734-0973	Deck Wheel, 5 x 1.38
30	731-1636	Mulch Plug
31	736-0119	Lock Washer, 5/16
32	736-0270	Bell Washer, .265 x .75 x .062
33	738-0347	Shoulder Spacer, .625 x 1 16
34	738-0373	Shoulder Screw
35	742-0611	Three-in-one Blade, Star Center, 16.28"
36	742-0612	Three-in-one Blade, Star Center, 14 88"
37	747-1116	Deck Release Pin
38	754-0349	Deck Belt, Poly
39	738-3056	Shoulder Screw, 1/2-2 5
40	756-0627B	Idler Pulley, 3.5
41	734-3058B	Deck Wheel, 5.0
42	783-0139A	Idler Bracket
43	783-0141	Center Deck Skirt
44	783-0142	RH Deck Skirt
45	783-0747	LH Belt Cover
46	783-0805C	RH Belt Cover
47	712-3006	Hex Nut, 1/4-20
48	712-3087	Wing Nut, 1/4-20
49	712-3004A	Hex Nut, 5/16-18
50	746-1107	Bracket Cable, 12"
51	750-0807	Spacer, .385 x .625 x .70
52	710-0805	Hex Cap Screw, 5/16-18 x 1 5
53	17116	Deck Brake Assembly
54	732-0429A	Extension Spring, 5 x 3 97
55	748-0324	Shoulder Spacer
56	736-0416	Flat Washer, .320 x 3.0 x .125
57	738-0572	Shoulder Screw, .374 x 1.16
58	736-0173	Flat Washer, .28 x .74 x .063

IMPORTANT: For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely

NOTE: *Tractor features vary by model NOT all parts listed above and pictured on the previous page are standard equipment.*

www.mymowerparts.com