



Service
Note

2000-08

N0001002

Page 1 (2)

Models All 2-cycle handheld equipment

Affected:

Subject: New and simplified way to perform pressure and vacuum tests on equipment.

Action Required:

Due to the introduction of the spark plug adapter and rubber test wedges, specially designed "block off plates" are no longer necessary. These tools can be used on Husqvarna products, and many other brands of equipment as well.

The following steps explain how these new tools allow for quick and easy pressure/vacuum testing.

- 1) Remove the spark plug and install the spark plug adapter (503 84 40-01) into the spark plug hole and tighten.
- 2) Loosen (instead of remove) the muffler and slide in the rubber wedge (502 54 11-01) as far as you can. The wedges are tapered so that they can cover various port sizes.
- 3) Retighten muffler just enough so that wedges are snug and will not slip. Do not over tighten as excessive tightening will prematurely wear out the wedges.

continued on next page




Service
Note


2000-08
N0001002

Page 2 (2)

- 4) Repeat the procedure on the carburetor side with a second rubber wedge.
- 5) Connect a pressure/vacuum tester to the spark plug adapter and check for leakage.

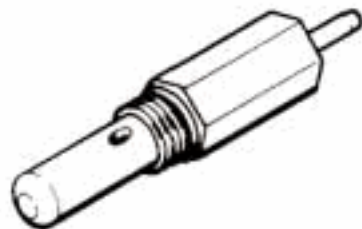

Spark Plug Adapter
503 84 40-01

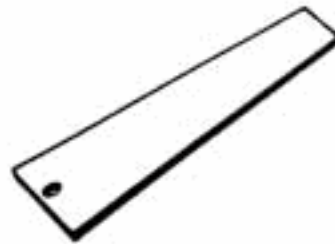

Test Wedge
502 54 11-01

