



Service Advisory

Date: October 15, 2002

Product Line: Snowmobile

Advisory No: SAS310

Subject: Programming Remote Start System

Affected Model:

EFI Models Equipped With Remote Start System


It has come to our attention that the programming instructions in Remote Start System Operator's Manual (p/n 2256-717) are not completely accurate and need to be clarified.

First of all, it should be clarified that the remote start system is pre-programmed and should be operational at the time of delivery. However, if the remote start system does not operate, make sure to review the manual information regarding operating range, interference, and operating procedures.

If the remote start system still does not operate or additional transmitters are being programmed, it will be necessary to program the system. See PROGRAMMING ADDITIONAL TRANSMITTERS in Remote Start System Operator's Manual (p/n 2256-717).

Complete step 1; then before proceeding to step 2, disconnect the hood switch connector (white/red wire). See Fig. 1 for location of hood switch.

Fig. 1

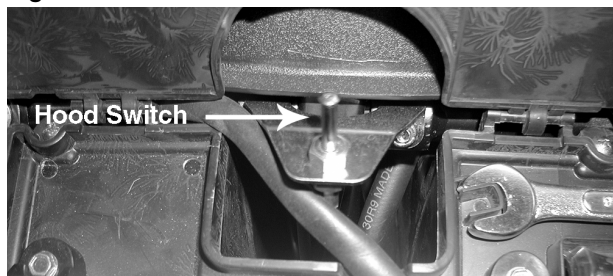

■ **NOTE:** This step (disconnecting the hood switch) was inadvertently left out of the original instructions and must be added in order to successfully program the remote start system.

Complete steps 2 through 4 to program the first transmitter. Proceed with steps 5 and 6 if programming additional transmitters.

■ **NOTE:** If after completing the above steps, the transmitter still does not operate, rotate the driven clutch approximately a half revolution; then program the transmitter as indicated above.

Connect the hood switch connector; then complete step 7.

We apologize for this inconvenience and want to assure you that Arctic Cat is doing everything possible to correct this issue.

Thank you for your cooperation in this matter.

Sincerely,

Product Service Department
Arctic Cat Inc.



©™ Trademarks of Arctic Cat Inc., Thief River Falls, MN 56701

