

111600 to 111699

Illustrated Parts List Model Series 111600 to 111699

TYPE NUMBERS

0100, 0101, 0135,
0136, 0139, 0141,
0142, 0143, 0144,
0145, 0146, 0148,
0151, 0152, 0155,
0156, 0157, 0158,
0159, 0162, 0163,
0164, 0165, 0166,
0168, 0169.

TO FIND

THE CORRECT NUMBER OF THE PART YOU NEED: FOLLOW THE INSTRUCTIONS BELOW


- A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 0123 01 are listed only as 0123 in most instances. The two digits (01 or 02, etc.) to the right of the space may be required for more accurate parts identification in some instances. Select the Illustrated Parts List covering the correct Model Series and Type Number.
- B. Refer to the Illustrations and compare the original part with Illustration. The number next to the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames having individual reference numbers can be purchased separately.
- C. After the Reference Number has been identified, refer to the Numerical text, where Reference and Primary Part Number are listed. **THE PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE."**
- D. If a "Note" appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types. If your Type number is listed under "Note," order the part referred to at the "Note."
- E. If your Engine Type Number does not appear after any part number listed under "Note," use the Primary Part Number.
- F. For Engine Type Numbers not covered by this book, check other Parts Lists having the same engine model or contact your source of supply.

PRINTED IN U.S.A.



COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.


111600 to 111699

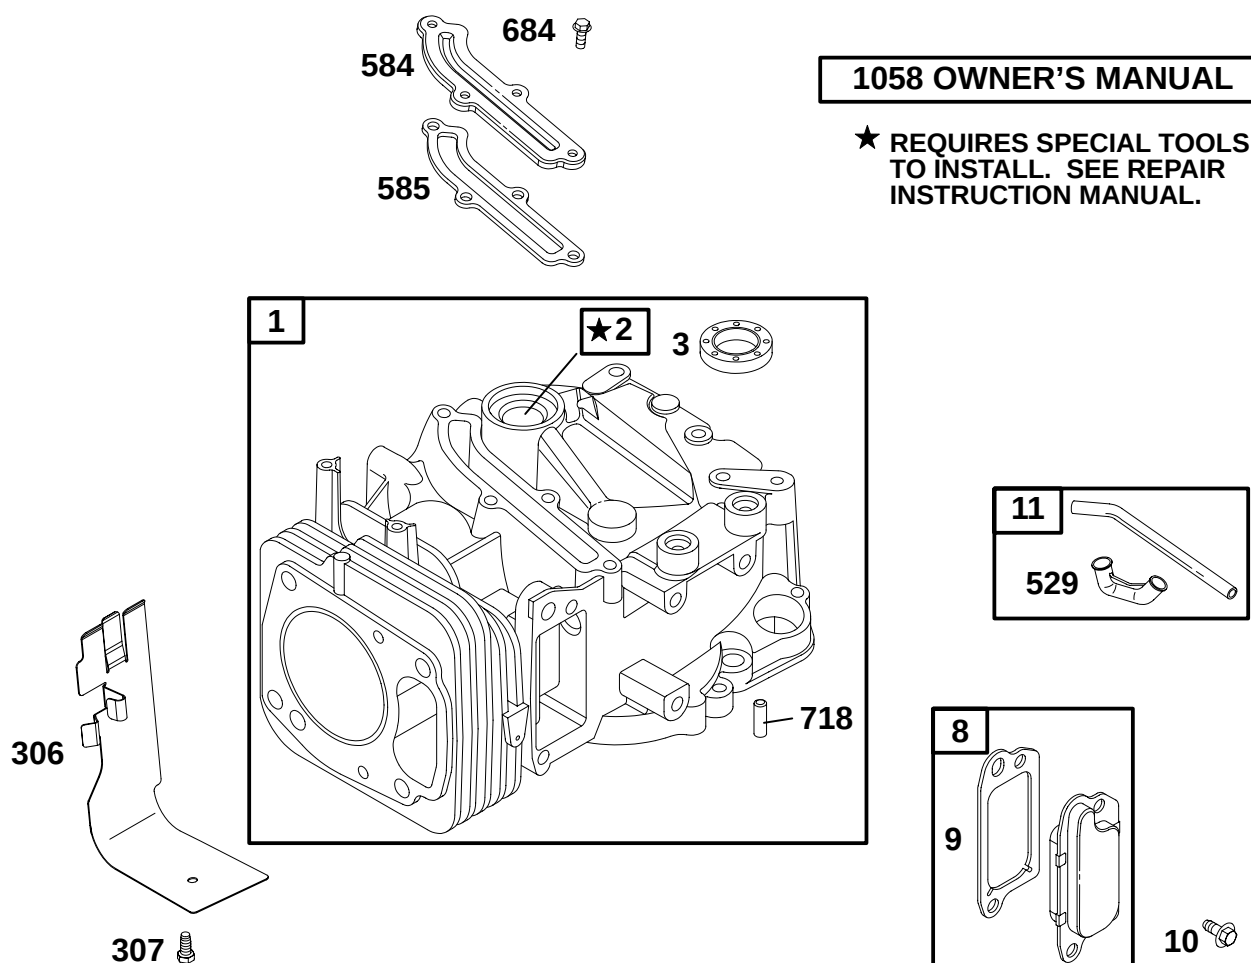

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	499678	Cylinder Assembly	11	499675	Tube-Breather	585	★272238	Gasket-Breather Passage
2	399269	Kit-Bushing	306	691232	Shield-Cylinder	684	690345	Screw (Breather Passage Cover)
3	★299819	Seal-Oil (Magneto Side)	307	690345	Screw (Cylinder Shield)	718	230192	Pin-Locating
8	495786	Breather Assembly	529	281736	Grommet	1058	274264	Owner's Manual
9	★272481	Gasket-Breather	584	692342	Cover-Breather Passage			
10	691125	Screw (Breather Assembly)						

★ Included in Engine Gasket Set-Ref. No. 358.
 Δ Included in Valve Gasket Set-Ref. No. 1095.

● Included in Carburetor Overhaul Kit-Ref. No. 121.
 ◆ Included in Carburetor Gasket Set-Ref. No. 977.

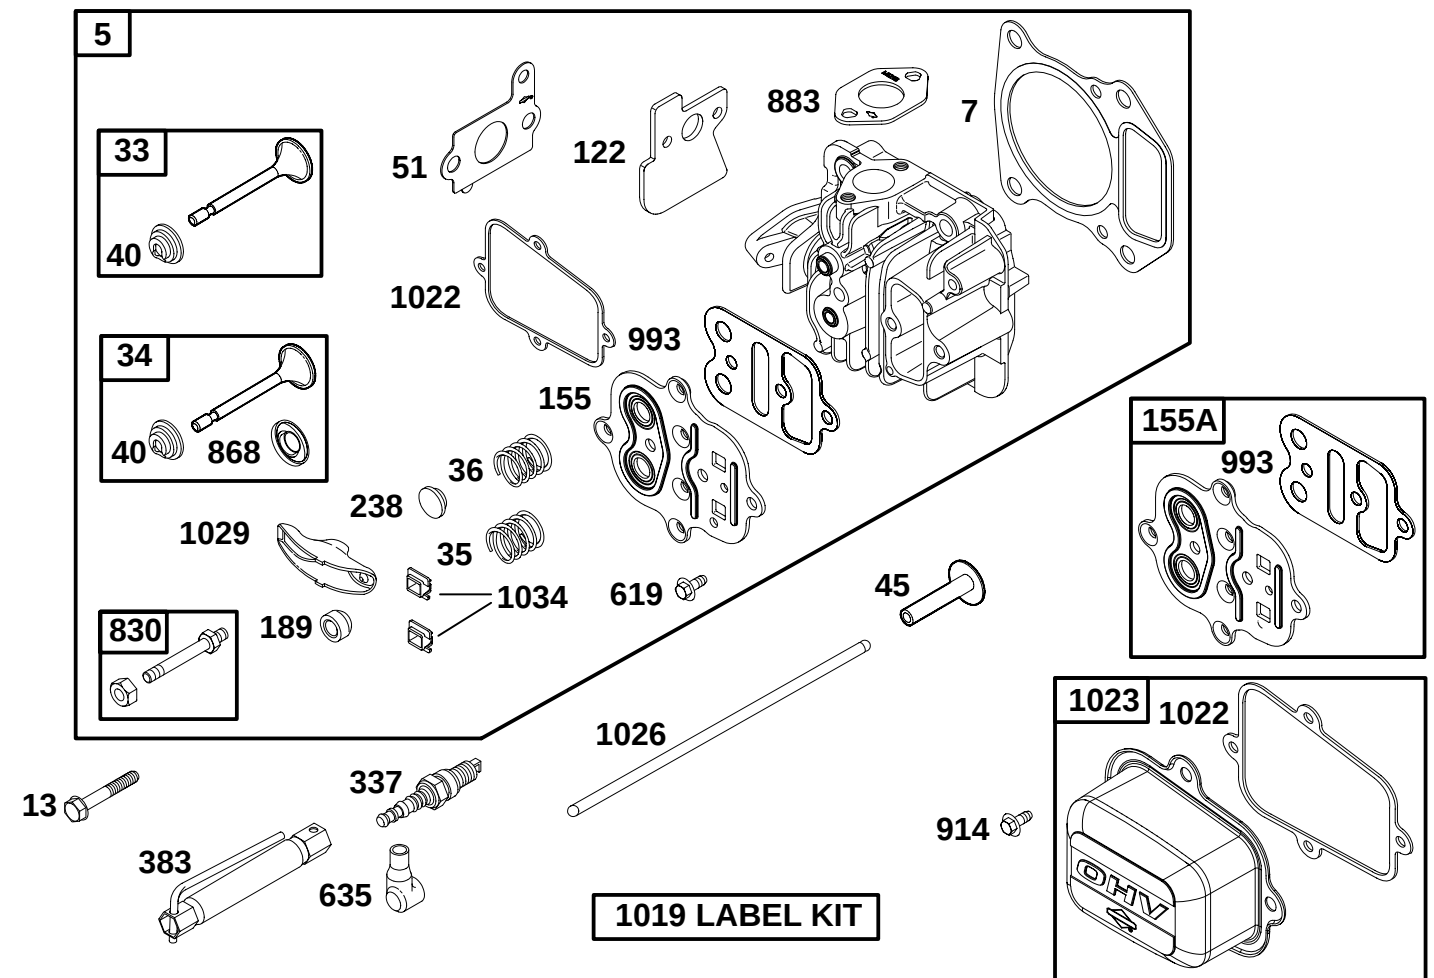

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
5	695276	Head-Cylinder (Used After Code Date 99113000). ----- Note ----- 692800 Head-Cylinder (Used Before Code Date 99120100).	34	499641	Valve-Intake	619	691108	Screw (Cylinder Head Plate)
7	★△695166	Gasket-Cylinder Head (Used After Code Date 99120100). ----- Note ----- ★△273240 Gasket-Cylinder Head (Used Before Code Date 99120200).	35	691304	Spring-Valve (Intake)	635	66538	Boot-Sparkplug
13	691137	Screw (Cylinder Head)	36	691304	Spring-Valve (Exhaust)	830	499756	Stud-Rocker Arm
33	499642	Valve-Exhaust	40	93312	Retainer-Valve	868	★△498592	Seal-Valve
			45	262679	Tappet-Valve	883	★△273348	Gasket-Exhaust
			51	◆◆△692668	Gasket-Intake	914	691108	Screw (Rocker Arm Cover)
			122	◆◆△692799	Spacer-Carburetor	993	★△273346	Gasket-Cylinder Head Plate
			155	695168	Plate-Cylinder Head (Used After Code Date 99120100).	1019	692701	Kit-Label
			155A	691231	Plate-Cylinder Head (Used Before Code Date 99120200).	1022	★△273241	Gasket-Rocker Cover
			189	691295	Ball-Rocker Arm	1023	499624	Cover-Rocker Arm
			238	691300	Cap-Valve	1026	498597	Rod-Push
			337	499608	Sparkplug	1029	691230	Arm-Rocker
			383	19374	Wrench-Sparkplug	1034	691343	Guide-Push Rod


★ Included in Engine Gasket Set-Ref. No. 358.

△ Included in Valve Gasket Set-Ref. No. 1095.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.


111600 to 111699

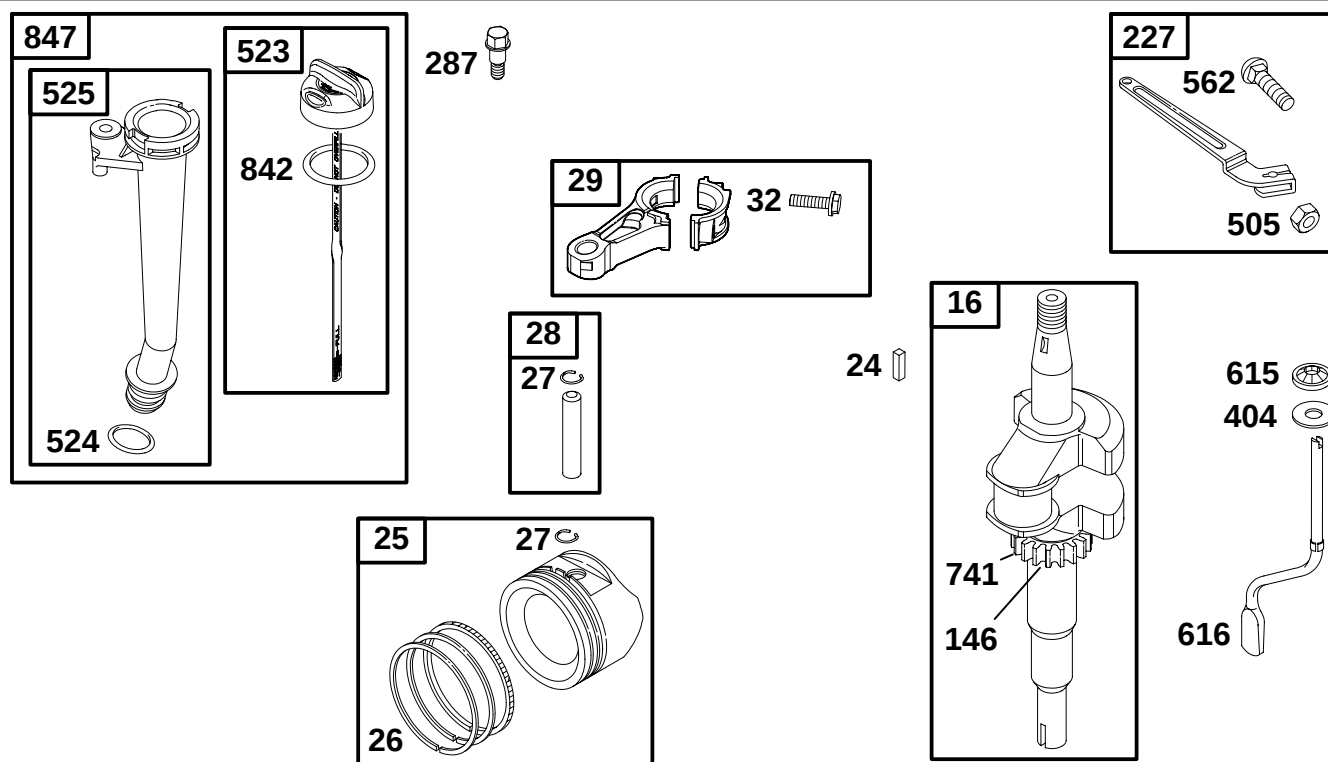

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
16	692676	Crankshaft ----- Note ----- 692795 Crankshaft Used on Type No(s). 0141, 0142, 0159. 692797 Crankshaft Used on Type No(s). 0136, 0148, 0162, 0163. 692798 Crankshaft Used on Type No(s). 0143, 0145. 695264 Crankshaft Used on Type No(s). 0168.	25	499433	Piston Assembly (Standard) ----- Note ----- 499434 Piston Assembly (.010 O.S.) 499435 Piston Assembly (.020 O.S.) 499436 Piston Assembly (.030 O.S.)	146	94388	Key-Timing
24	222698	Key-Flywheel	26	499425	Ring Set (Standard) ----- Note ----- 499426 Ring Set (.010 O.S.) 499427 Ring Set (.020 O.S.) 499428 Ring Set (.030 O.S.)	227	691467	Lever-Governor Control
			27	263190	Lock-Piston Pin	287	94511	Screw (Dipstick Tube)
			28	499423	Pin-Piston	404	690272	Washer (Governor Crank)
			29	692671	Rod-Connecting	505	231082	Nut (Governor Control Lever)
			32	94699	Screw (Connecting Rod)	523	499621	Dipstick
						524	★280966	Seal-Dipstick Tube
						525	495265	Tube-Dipstick
						562	94852	Bolt (Governor Control Lever)
						615	690340	Retainer-Governor Shaft
						616	691306	Crank-Governor
						741	262598	Gear-Timing
						842	★280393	Seal-O-Ring (Dipstick)
						847	498715	Dipstick/Tube Assembly

★ Included in Engine Gasket Set-Ref. No. 358.
 Δ Included in Valve Gasket Set-Ref. No. 1095.

● Included in Carburetor Overhaul Kit-Ref. No. 121.
 ◆ Included in Carburetor Gasket Set-Ref. No. 977.

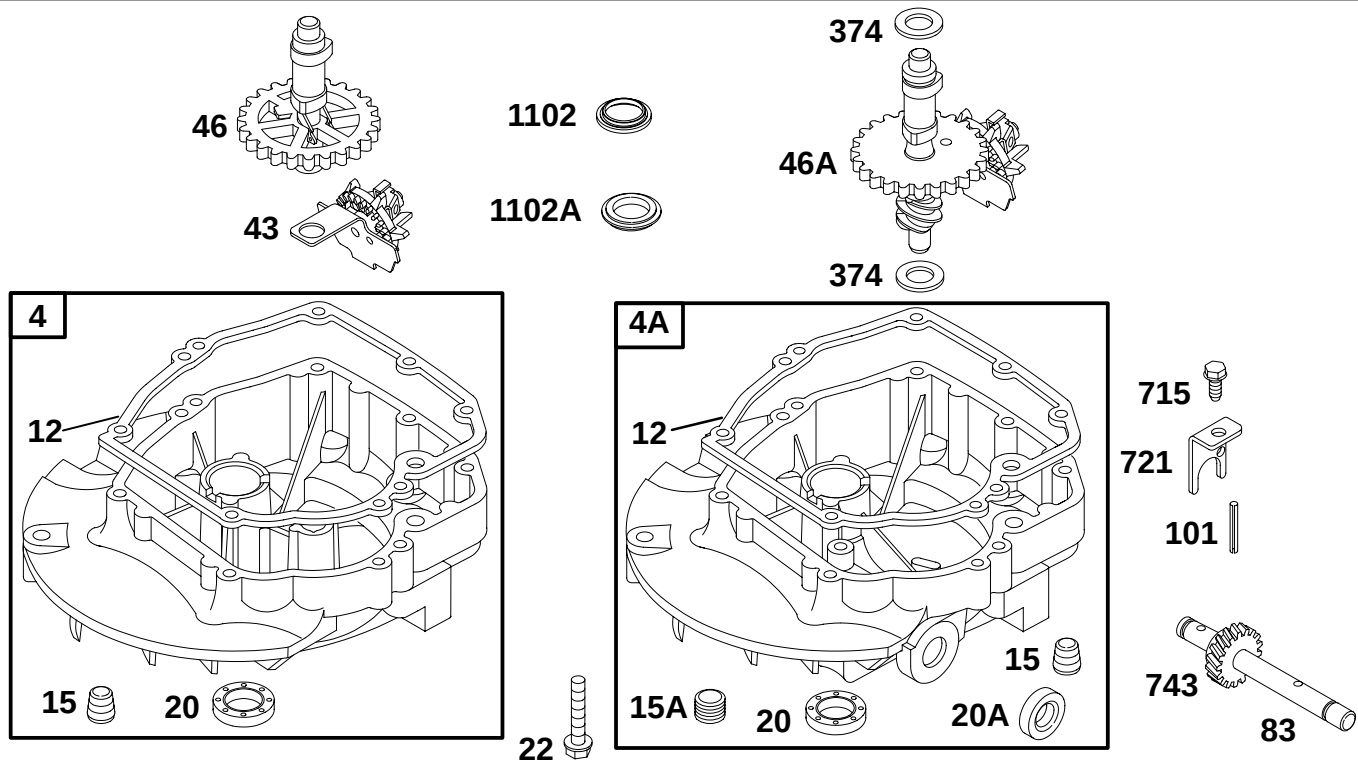


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
4	499619	Sump-Engine	46A	694038	Camshaft (Clockwise) (Used After Code Date 99030700). ----- Note ----- 692426 Camshaft (Clockwise) (Used Before Code Date 99030800).	83	231671	Shaft-Auxiliary Drive ----- Note ----- 690527 Shaft-Auxiliary Drive Used on Type No(s). 0143.
4A	493365	Sump-Engine				101	93474	Pin-Shaft
12	★272198	Gasket-Crankcase				374	691074	Washer (Camshaft)
15	94880	Plug-Oil Drain				715	94874	Screw (Shaft Stop)
15A	691093	Plug-Oil Drain				721	690449	Stop-Shaft
20	★399781	Seal-Oil (PTO Side)				743	690516	Gear-Drive (Clockwise) ----- Note ----- 231279 Gear-Drive (Counterclockwise) Used on Type No(s). 0135, 0143, 0144, 0148, 0152, 0163, 0164, 0165, 0166.
20A	391484	Seal-Oil (PTO Side)						
22	691092	Screw (Engine Sump)				1102	691255	Pilot-Guide
43	493737	Slinger-Governor/Oil				1102A	691266	Pilot-Guide
46	694039	Camshaft (Used After Code Date 99030700). ----- Note ----- 694035 Camshaft (Used Before Code Date 99030800).						

★ Included in Engine Gasket Set-Ref. No. 358.
 Δ Included in Valve Gasket Set-Ref. No. 1095.

● Included in Carburetor Overhaul Kit-Ref. No. 121.
 ◆ Included in Carburetor Gasket Set-Ref. No. 977.

111600 to 111699

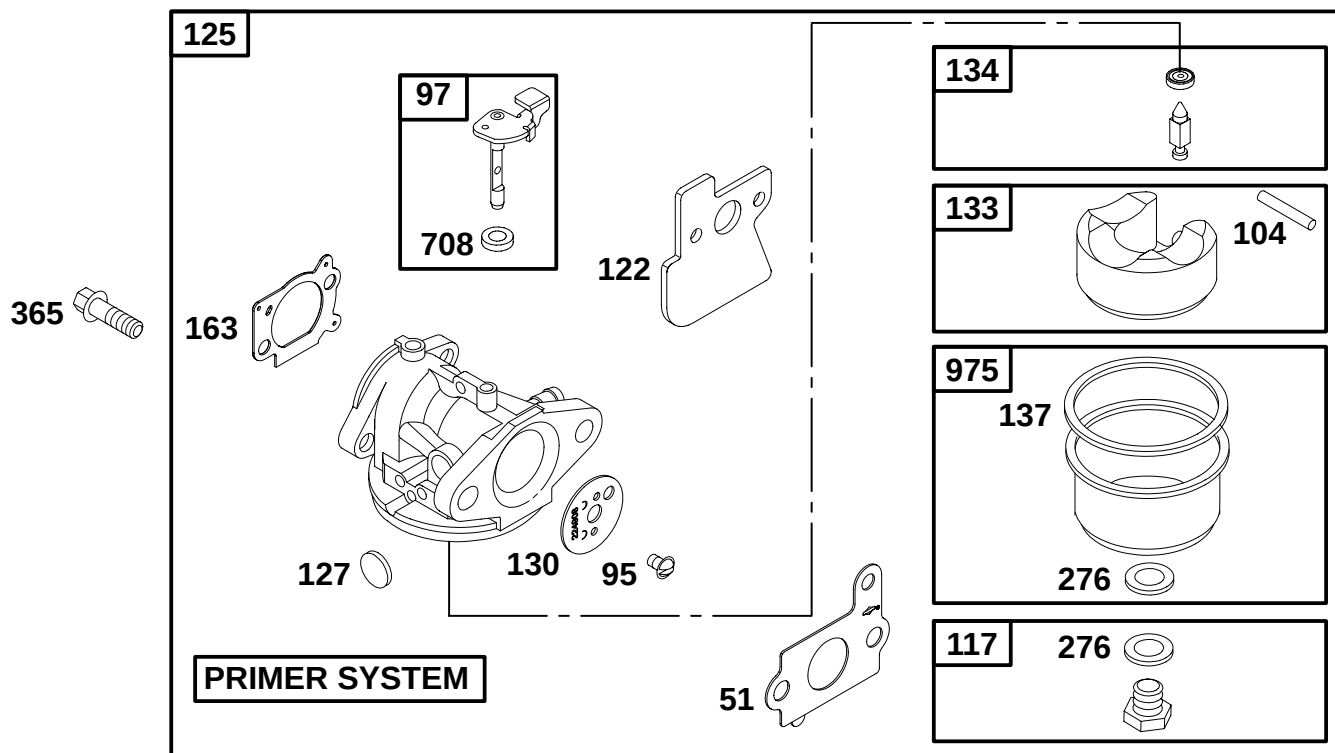


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
51★♦△	692668	Gasket—Intake	122★♦♦△	692799	Spacer—Carburetor	134	●398188	Kit—Needle/Seat
95	94098	Screw (Throttle Valve)	125	694432	Carburetor (Used After Code Date 99050200).	137	●♦693981	Gasket—Float Bowl
97	499682	Shaft—Throttle	----- Note -----			163★♦♦	273364	Gasket—Air Cleaner
104	●691242	Pin—Float Hinge		694202	Carburetor (Used Before Code Date 99050300).	276	●♦271716	Washer—Sealing
117	694250	Jet—Main (Standard) (Used After Code Date 99050200).				365	691136	Screw (Carburetor)
		----- Note -----	127	●694468	Plug—Welch	708	●♦691321	Seal—Dust (Throttle Shaft)
		494870 Jet—Main (Standard) (Used Before Code Date 99050300).	130	691203	Valve—Throttle	975	493640	Bowl—Float
			133	398187	Float—Carburetor			
		497466 Jet—Main (High Altitude) (Used After Code Date 99050200).						
		497315 Jet—Main (High Altitude) (Used Before Code Date 99050300).						

★ Included in Engine Gasket Set-Ref. No. 358.

△ Included in Valve Gasket Set-Ref. No. 1095.

♦ Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

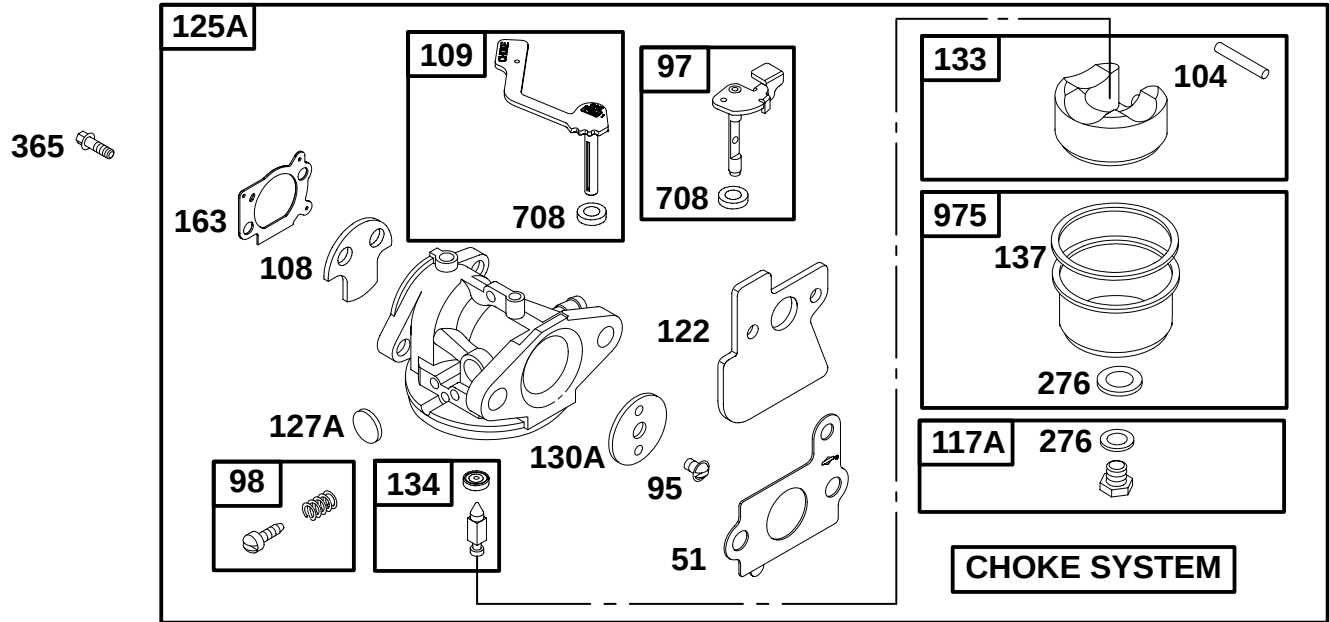


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
51★♦△	692668	Gasket-Intake	117A	498978	Jet-Main	134	♦398188	Kit-Needle/Seat
95	94098	Screw		-----	Note -----	137	♦♦693981	Gasket-Float Bowl
97	499682	Shaft-Throttle		497352	Jet-Main (High Altitude)	163★♦♦	273364	Gasket-Air Cleaner
98	398185	Kit-Idle Speed	122★♦♦	692799	Spacer-Carburetor	276	♦♦271716	Washer-Sealing
104	♦691242	Pin-Float Hinge	125A	694205	Carburetor	365	691136	Screw (Carburetor)
108	691182	Valve-Choke	127A	♦223472	Plug-Welch	708	♦♦691321	Seal-Dust
109	499779	Shaft-Choke	130A	691181	Valve-Throttle	975	493640	Bowl-Float
			133	398187	Float-Carburetor			

★ Included in Engine Gasket Set-Ref. No. 358.
 △ Included in Valve Gasket Set-Ref. No. 1095.

♦ Included in Carburetor Overhaul Kit-Ref. No. 121.
 ♦♦ Included in Carburetor Gasket Set-Ref. No. 977.

111600 to 111699

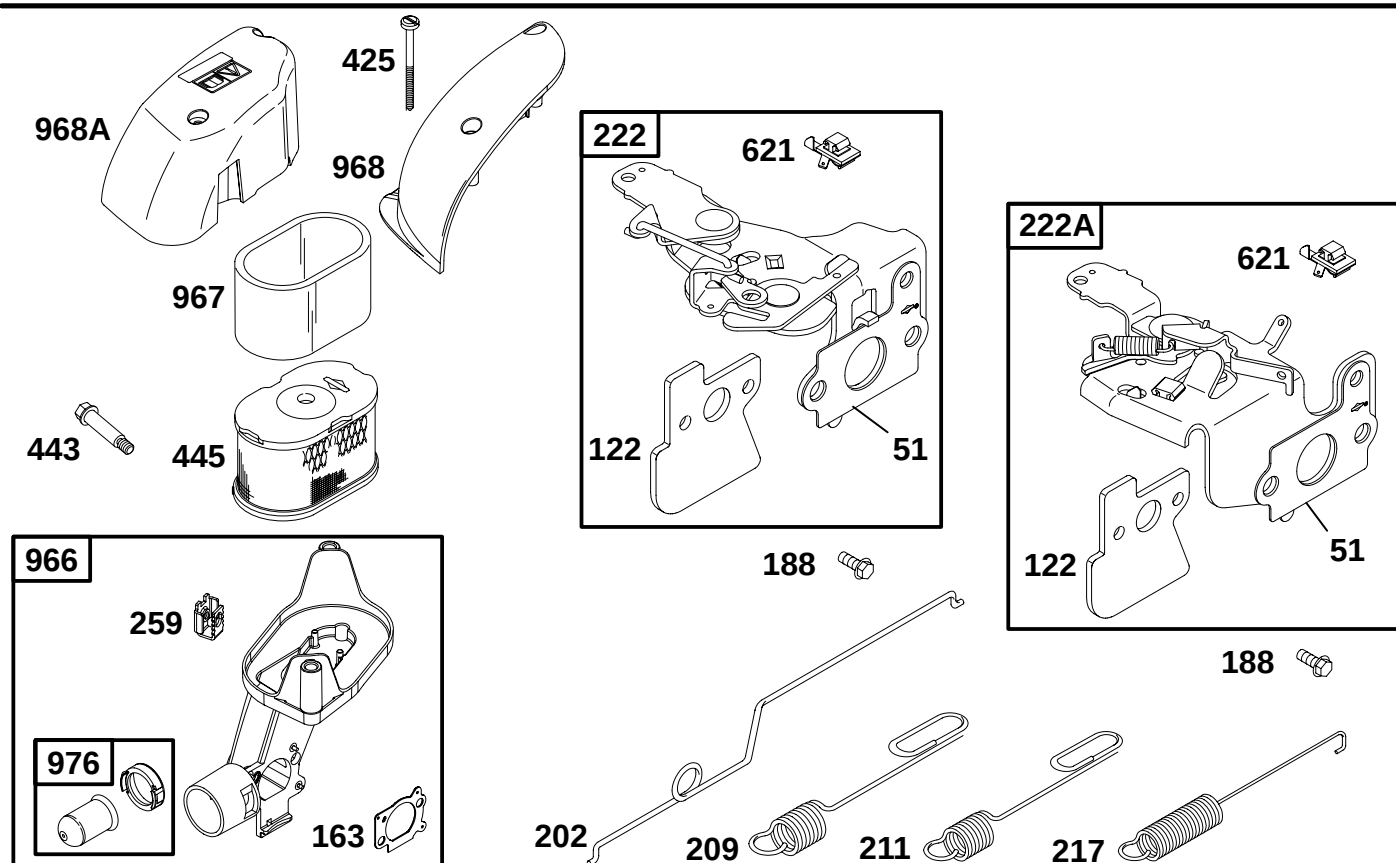

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
51 ♦♦Δ 692668		Gasket—Intake	211	692434	Spring—Governed Idle	445	498596	Filter—Air Cleaner
122 ♦♦Δ 692799		Spacer—Carburetor			Used on Type No(s).			Cartridge
163 ♦♦★ 273364		Gasket—Air Cleaner			0164, 0165, 0166.			----- Note -----
188	693168	Screw	217	692749	Spring—Choke Return			690610 Filter—Air
		(Control Bracket)	222	692618	Bracket—Control			Cleaner Cartridge
202	691303	Link—Mechanical			----- Note -----			Used on Type No(s).
		Governor			692617 Bracket—			0157, 0158, 0159.
209	263044	Spring—Governor			Control	621	396847	Switch—Stop
		----- Note -----			Used on Type No(s).	966	499684	Base—Air Cleaner
		691291 Spring—			0100, 0101, 0135,			Primer
		Governor			0136, 0139, 0143,	967	273356	Filter—Pre Cleaner
		Used on Type No(s).			0145, 0148, 0162,	968	691342	Cover—Air Cleaner
		0141, 0142, 0144,			0163, 0164, 0168,	968A	692435	Cover—Air Cleaner
		0146, 0151, 0157,			0169.	976	496115	Primer—Carburetor
		0158.	222A	692722	Bracket—Control			
		263042 Spring—			Used on Type No(s).			
		Governor			0165, 0166.			
		Used on Type No(s).	259	691189	Bracket—Casing Clamp			
		0139, 0143, 0145.	425	690244	Screw			
		692906 Spring—			(Air Cleaner Cover)			
		Governor	443	690255	Screw			
		Used on Type No(s).			(Air Cleaner Primer			
		0164, 0165.			Base)			

★ Included in Engine Gasket Set—Ref. No. 358.

Δ Included in Valve Gasket Set—Ref. No. 1095.


- Included in Carburetor Overhaul Kit—Ref. No. 121.

◆ Included in Carburetor Gasket Set—Ref. No. 977.

6237-8

Assemblies include all parts shown in frames.

2Q-6/2000

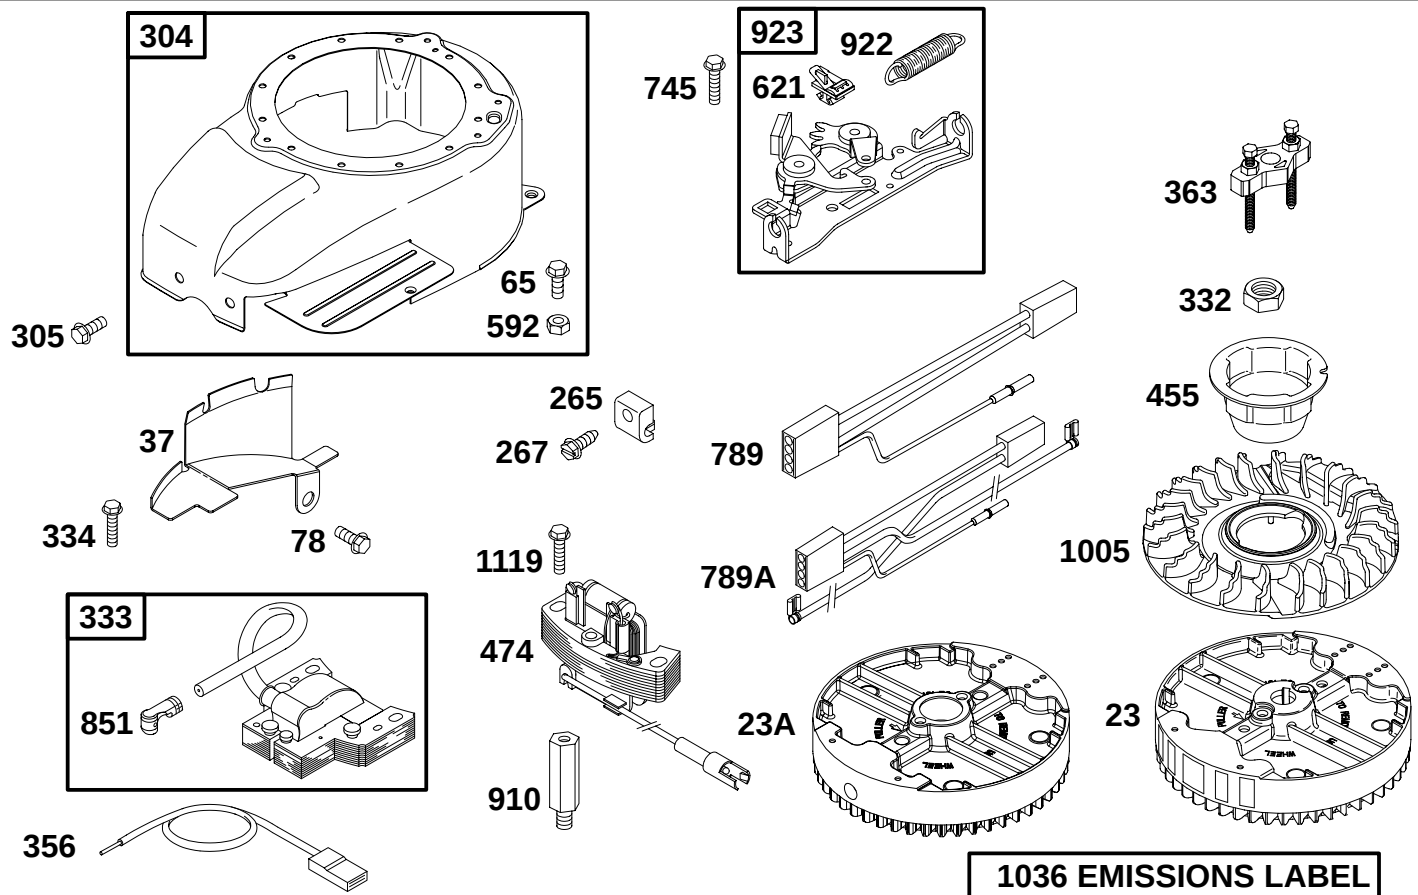

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
23	692452	Flywheel	305	690960	Screw (Blower Housing)	922	262640	Spring-Brake
23A	692693	Flywheel	332	94877	Nut (Flywheel)	923	493442	Brake
		Used on Type No(s). 0156, 0157, 0158, 0159, 0164.	333	802574	Armature-Magneto	1005	691346	Fan-Flywheel
37	694086	Guard-Flywheel	334	94731	Screw (Magneto Armature)	1119	692979	Screw (Alternator)
65	94904	Screw (Rewind Starter)	356	692390	Wire-Stop	1036	695109	Label-Emission (Used After Code Date 99093000).
78	691108	Screw (Flywheel Guard)	363	19069	Puller-Flywheel	----- Note -----		
265	213146	Casing Clamp	455	691219	Cup-Flywheel	694454 Label-Emission		
267	691044	Screw (Casing Clamp)	474	492841	Alternator	(Used Before Code Date 99100100 and After Code Date 98123100).		
304	499677	Blower Housing	592	94908	Nut (Rewind Starter)	692700 Label-Emission		
		----- Note -----	621	396847	Switch-Stop	(Used Before Code Date 99010100).		
		499676 Housing-Blower	745	94512	Screw (Brake)			
		Used on Type No(s). 0141, 0151, 0156, 0159, 0164.	789	690790	Harness-Wiring			
			789A	691372	Harness-Wiring			
			851	493880	Terminal-Sparkplug			
			910	691094	Stud (Alternator)			








★ Included in Engine Gasket Set-Ref. No. 358.

△ Included in Valve Gasket Set-Ref. No. 1095.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.







111600 to 111699

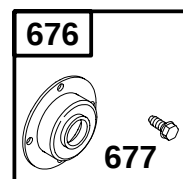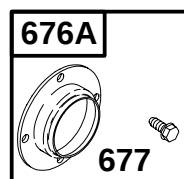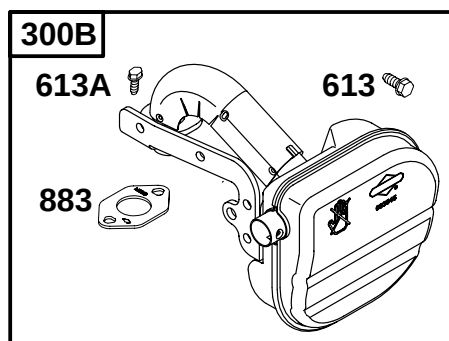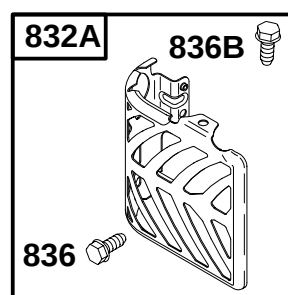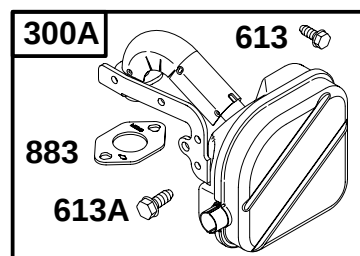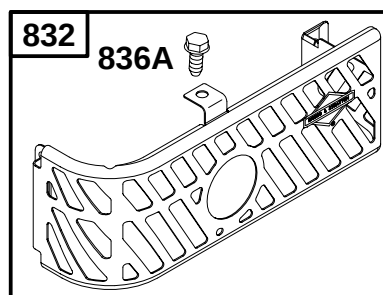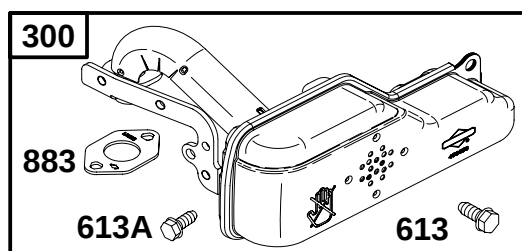

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
300	694248	Muffler (Used After Code Date 99030700). ----- Note ----- 692275 Muffler (Used Before Code Date 99030800).	613	691108	Screw (Muffler)	832A	695180	Guard-Muffler
300A	692654	Muffler	613A	691140	Screw (Muffler)	836	94874	Screw (Muffler Guard)
300B	693982	Muffler	676	397931	Deflector-Muffler	836A	94786	Screw (7/16" Length) (Muffler Guard)
			676A	497682	Deflector-Muffler	836B	692557	Screw (3/8" Length) (Muffler Guard)
			676B	690803	Deflector-Muffler	883	★△273348	Gasket-Exhaust
			677	94896	Screw (Muffler Deflector)			
			832	691466	Guard-Muffler			

★ Included in Engine Gasket Set-Ref. No. 358.
△ Included in Valve Gasket Set-Ref. No. 1095.


● Included in Carburetor Overhaul Kit-Ref. No. 121.
◆ Included in Carburetor Gasket Set-Ref. No. 977.

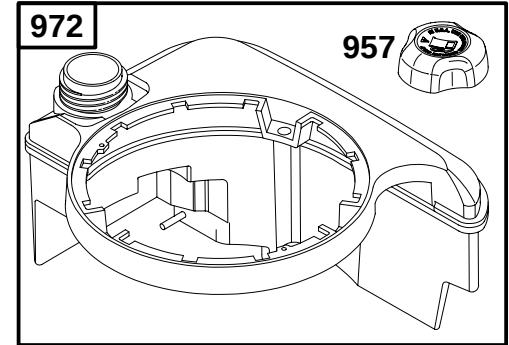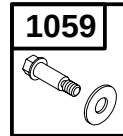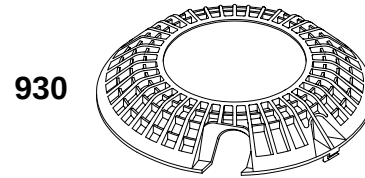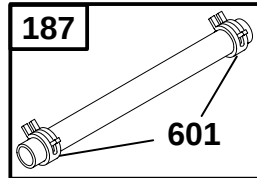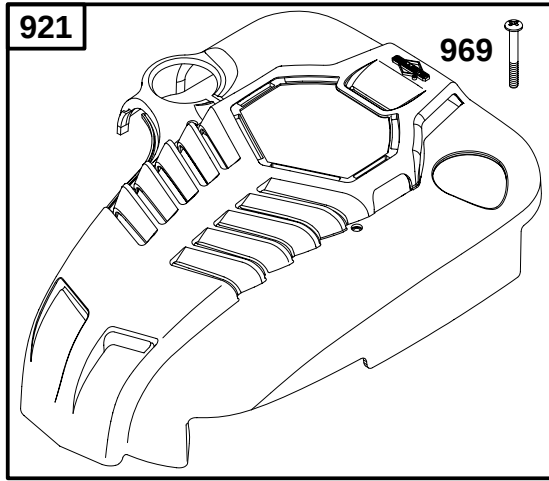


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
187	296004	Line-Fuel (Cut to Required Length)	670	280512	Spacer-Fuel Tank	969	691138	Screw (Blower Housing Cover)
190	94511	Screw (Fuel Tank)	921	691465	Cover-Blower Housing	972	499618	Tank-Fuel (Plastic)
601	93053	Clamp-Hose	930	691919	Guard-Rewind	1059	398540	Kit-Screw/Washer
			957	498697	Cap-Fuel Tank (Plastic)			
			958	494768	Valve-Fuel Shutoff			

★ Included in Engine Gasket Set-Ref. No. 358.
 △ Included in Valve Gasket Set-Ref. No. 1095.

● Included in Carburetor Overhaul Kit-Ref. No. 121.
 ◆ Included in Carburetor Gasket Set-Ref. No. 977.

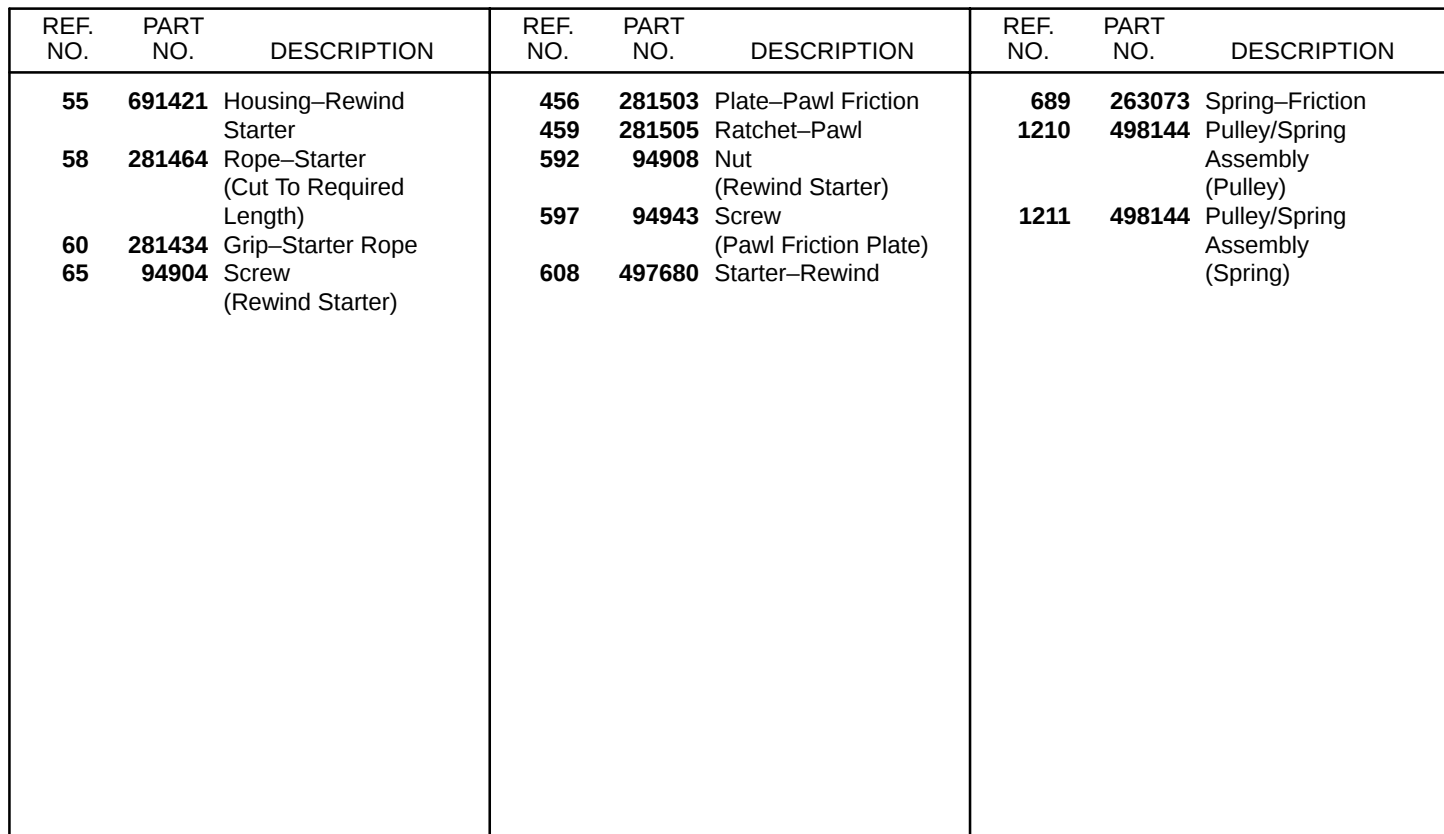

- ◆ Included in Carburetor Gasket Set—Ref. No. 977.




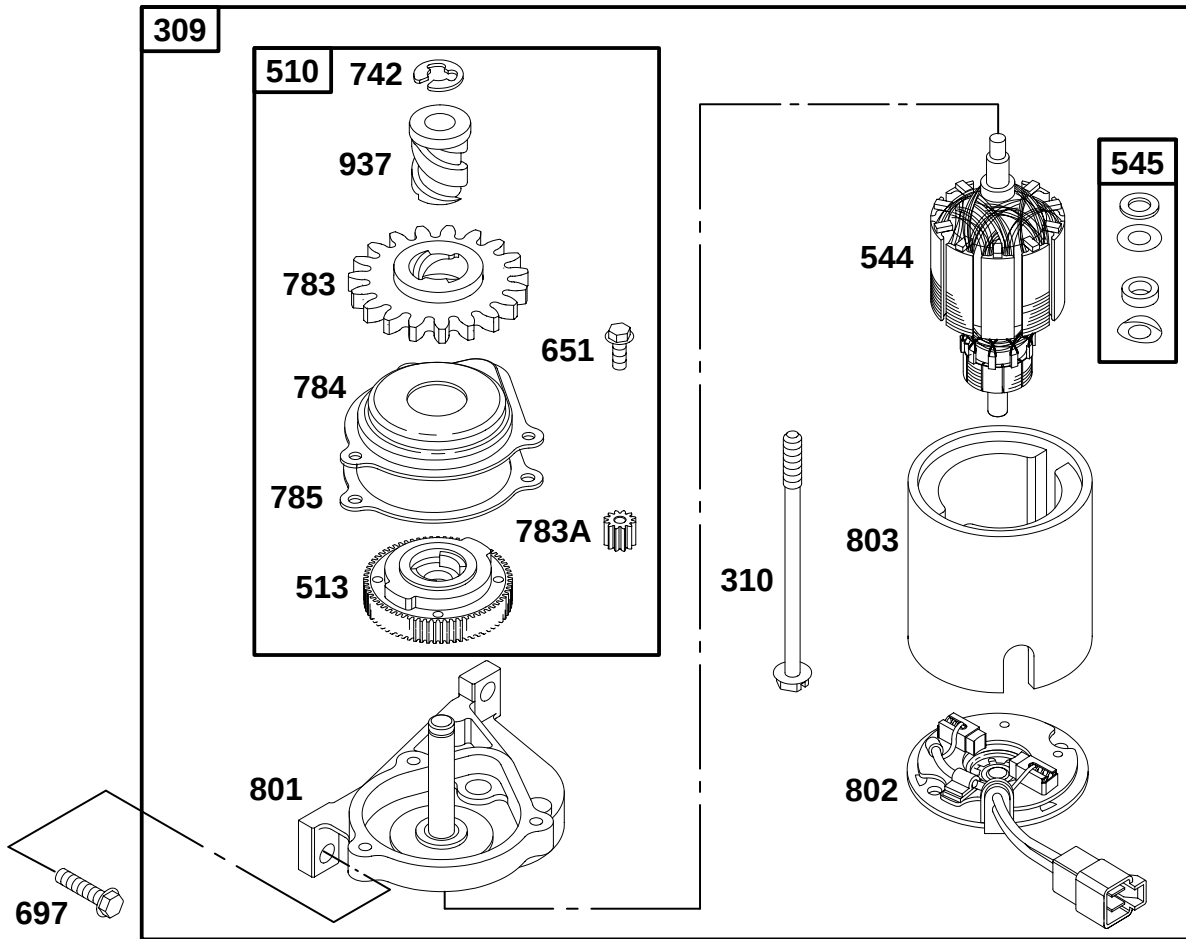


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
309	691376	Motor-Starter	651	93490	Screw (Starter Gear Cover)	784	692341	Cover-Starter Gear
310	692327	Bolt (Starter Motor)	697	691127	Screw (Drive Cap)	785	692352	Gasket-Starter Cover
510	494147	Drive-Starter	742	93941	Retainer-E-Ring	801	690782	Cap-Drive
513	692358	Clutch-Drive	783	281127	Gear-Pinion	802	690787	Cap-End
544	690786	Armature-Starter	783A	691269	Gear-Pinion	803	690785	Housing-Starter
545	492919	Washer Set (Starter Motor)				937	691325	Spline-Starter

★ Included in Engine Gasket Set-Ref. No. 358.
 △ Included in Valve Gasket Set-Ref. No. 1095.

● Included in Carburetor Overhaul Kit-Ref. No. 121.
 ◆ Included in Carburetor Gasket Set-Ref. No. 977.

111600 to 111699

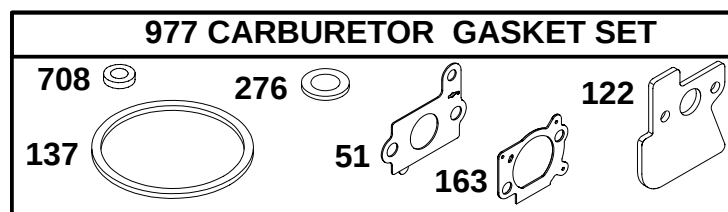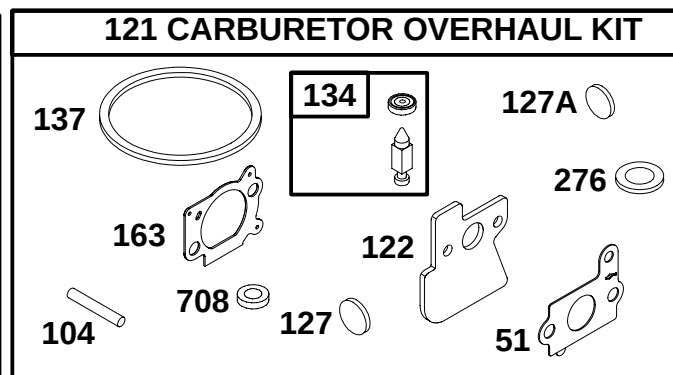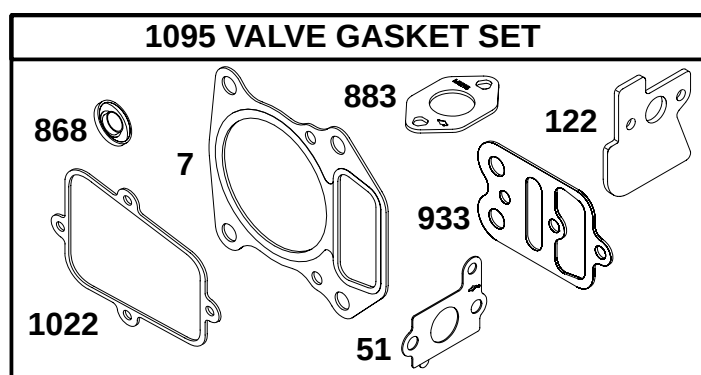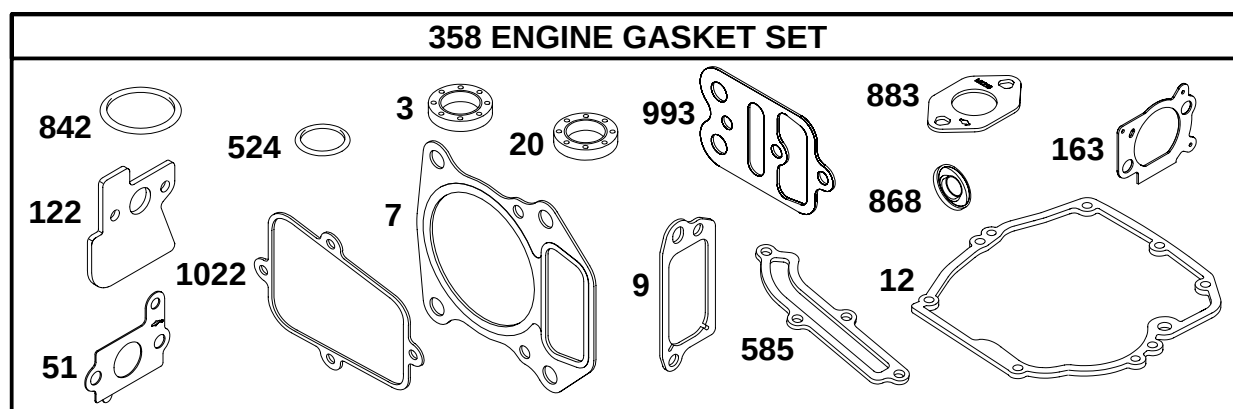

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
3	★299819	Seal–Oil (Magnetoside)	51	★692668	Gasket–Intake	585	★272238	Gasket–Breather Passage
7	★695166	Gasket–Cylinder Head (Used After Code Date 99120100). ----- Note ----- ★273240 Gasket–Cylinder Head (Used Before Code Date 99120200).	104	●691242	Pin–Float Hinge	842	★280393	Seal–Dipstick/Tube
9	★272481	Gasket–Breather	121	692703	Kit–Carburetor Overhaul	868	★498592	Seal–Valve
12	★272198	Gasket–Crankcase	122	★692799	Spacer–Carburetor	883	★273348	Gasket–Exhaust
20	★399781	Seal–Oil (PTO Side)	127	●694468	Plug–Welch	708	●691321	Seal–Dust (Throttle Shaft)
			127A	●223472	Plug–Welch	993	★273346	Gasket–Cylinder Head Plate
			134	●398188	Kit–Needle/Seat	977	692704	Gasket Set–Carburetor
			137	●693981	Gasket–Float Bowl	1022	★273241	Gasket–Rocker Cover
			163	●273364	Gasket–Air Cleaner	1095	692705	Gasket Set–Valve
			276	●271716	Washer–Sealing			
			358	692702	Gasket Set–Engine			
			524	★280966	Seal–Dipstick Tube			

★ Included in Engine Gasket Set–Ref. No. 358.

△ Included in Valve Gasket Set–Ref. No. 1095.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.