Illustrated Parts List Model Series 125600 to 125699

TYPE NUMBERS 0105, 0112, 0114, 0117, 0118, 0124, 0130.


TO FIND THE CORRECT NUMBER OF THE PART YOU NEED: FOLLOW THE INSTRUCTIONS BELOW

- A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 0123 01 are listed only as 0123 in most instances. The two digits (01 or 02, etc.) to the right of the space may be required for more accurate parts identification in some instances. Select the Illustrated Parts List covering the correct Model Series and Type Number.
- B. Refer to the Illustrations and compare the original part with Illustration. The number next to the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames having individual reference numbers can be purchased separately.
- C. After the Reference Number has been identified, refer to the Numerical text, where Reference and Primary Part Number are listed. THE PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE."
- D. If a "Note" appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types. If your Type number is listed under "Note," order the part referred to at the "Note."
- E. If your Engine Type Number does not appear after any part number listed under "Note," use the Primary Part Number.
- F. For Engine Type Numbers not covered by this book, check other Parts Lists having the same engine model or contact your source of supply.

BRIGGS & STRATTON

PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted,
in any form or by any means, electronic or mechanical, including photocopying,
recording or by any information storage and retrieval system, without permission
in writing from Briggs & Stratton Corporation.

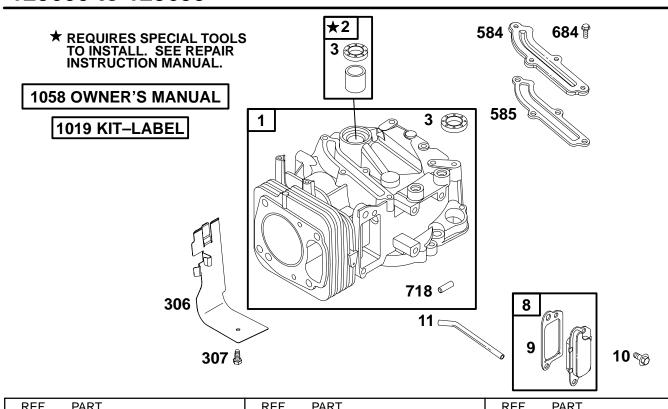


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1 2		Cylinder Assembly Kit–Bushing/Seal (Magneto Side)	11 306 307		Tube–Breather Shield–Cylinder Screw	684	690345	Screw (Breather Passage Cover)
3 8 9			584 585	692342	(Cylinder Shield) Cover–Breather Passage Gasket–Breather	718 1019 1058	694506	Pin–Locating Kit–Label Owner's Manual (Emission)
10	691125		330	×212200	Passage			(

^{*} Included in Engine Gasket Set-Ref. No. 358 Δ Included in Valve Gasket Set-Ref. No. 1095

◆ Included in Carburetor Gasket Set-Ref. No. 977

Included in Carburetor Overhaul Kit-Ref. No. 121

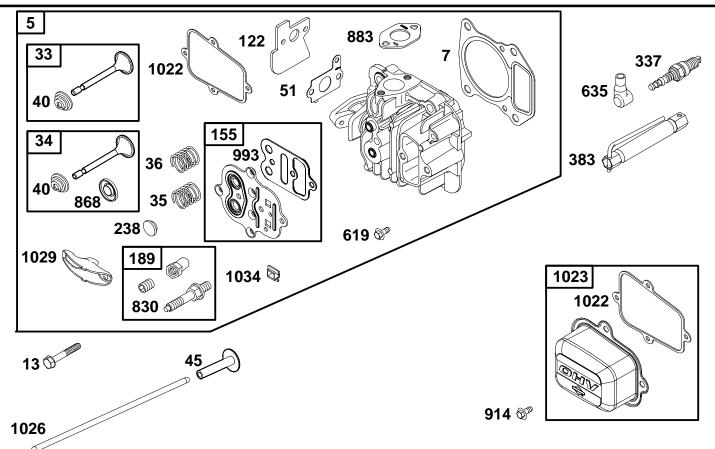


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
5 7 13 33 34 35 36 40 45	695276 ★△695166 691137 499642 499641 691304 691304 93312 262679	Head-Cylinder Gasket-Cylinder Head		•∆692799 695168 694543 691300 499608 19374 691108	Spacer–Carburetor Plate–Cylinder Head (Used After Code Date 99113000). Rocker Arm Ball Cap–Valve Sparkplug Wrench–Sparkplug Screw (Cylinder Head Plate) Boot–Sparkplug	868 883 914 993	*∆498592 *∆273348 691108 *∆694088 *∆691890 499624 498597 691230	Seal-Valve Gasket-Exhaust

[★] Included in Engine Gasket Set-Ref. No. 358

Δ Included in Valve Gasket Set-Ref. No. 1095

Included in Carburetor Overhaul Kit–Ref. No. 121 Included in Carburetor Gasket Set–Ref. No. 977

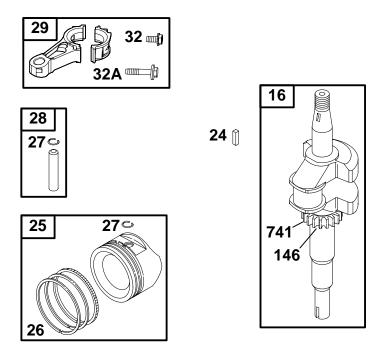


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
16 6		Crankshaft Note 691456 Crankshaft Used on Type No(s). 0105. 693291 Crankshaft Used on Type No(s). 0117.	25	499627	Piston Assembly (Standard) — Note —— 692788 Piston Assembly (.010" O.S.) 692789 Piston	26	499631	Ring Set (Standard) —— Note —— 692785 Ring Set (.010" O.S.) 692786 Ring Set (.020" O.S.)
24 2	22698	Key–Flywheel			Assembly (.020" O.S.) 692790 Piston Assembly (.030" O.S.)	27 28 29 32 32A 146 741	499423 499424 94699 695759 94388	692787 Ring Set (.030" O.S.) Lock—Piston Pin Pin—Piston Rod—Connecting Screw (Connecting Rod) Screw (Connecting Rod) Key—Timing Gear—Timing

[★] Included in Engine Gasket Set-Ref. No. 358

Δ Included in Valve Gasket Set-Ref. No. 1095


Included in Carburetor Overhaul Kit–Ref. No. 121
 Included in Carburetor Gasket Set–Ref. No. 977

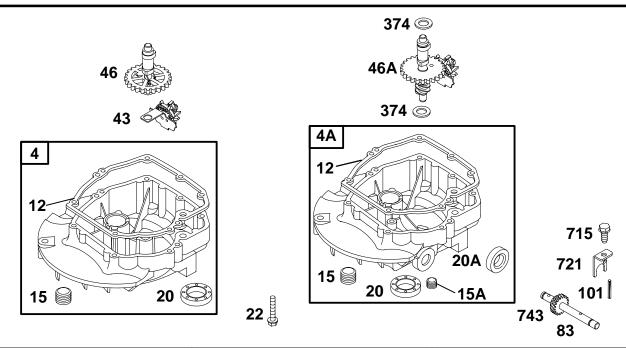

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
4 4A	493365	Sump-Engine Sump-Engine Used on Type No(s). 0118, 0130.	20A 22	691092	(Engine Sump)	83	231671	Shaft–Auxillary Drive Note 690524 Shaft–Auxillary Drive
12 15		Gasket–Crankcase Plug–Oil Drain (Recessed Square	43 46 46A	694039	Slinger–Governor/Oil Camshaft Camshaft (Counterclockwise)	101 374		Used on Type No(s). 0112. Pin–Shaft Washer
15A	691093	(Used On Auxillary			Used on Type No(s). 0118, 0130.	715		(Camshaft) Screw (Stop Shaft)
20	*399781	Drive Sumps Only Access Hole)				721 743		Shaft–Stop Gear–Drive (Counterclockwise) Used on Type No(s). 0118, 0130.

 $[\]star$ Included in Engine Gasket Set–Ref. No. 358 Δ Included in Valve Gasket Set–Ref. No. 1095


Included in Carburetor Overhaul Kit–Ref. No. 121
 Included in Carburetor Gasket Set–Ref. No. 977

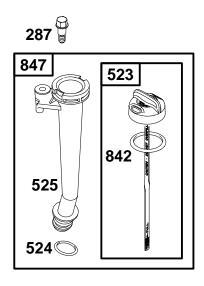

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
287 523 524 525	94511 499621 *280966	Screw (Dipstick Tube) Dipstick Seal-Dipstick Tube Tube-Dipstick	842	*280393	Seal-O Ring (For Top Of Tube & Dipstick/Cap Combo Only)	847	692047	Dipstick/Tube Assembly

 $[\]star$ Included in Engine Gasket Set–Ref. No. 358 Δ Included in Valve Gasket Set–Ref. No. 1095


Included in Carburetor Overhaul Kit–Ref. No. 121
 Included in Carburetor Gasket Set–Ref. No. 977

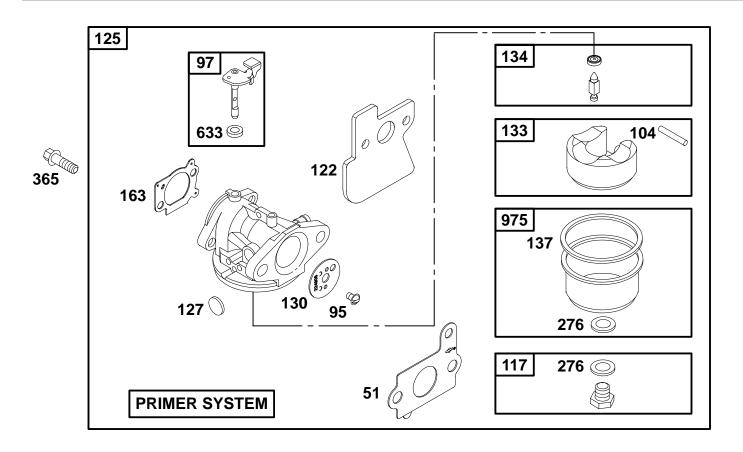

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
51, 95 97 104 117	94098 499682 •691242	Gasket-Intake Screw (Throttle Valve) Shaft-Throttle Pin-Float Hinge Jet-Main (Standard) 498975 Jet-Main (High Altitude)	125 127 130 133 134	694202 •694468 691203 398187 •398188	Spacer–Carburetor Carburetor Plug–Welch Valve–Throttle Float–Carburetor Kit–Needle/Seat Gasket–Float Bowl	276 365	••271716 691136 •• 691321	Gasket-Air Cleaner Washer-Sealing Screw (Carburetor) Seal-Choke/Throttle Shaft (Throttle Shaft) Bowl-Float

 $[\]star$ Included in Engine Gasket Set–Ref. No. 358 Δ Included in Valve Gasket Set–Ref. No. 1095

Included in Carburetor Overhaul Kit–Ref. No. 121
 Included in Carburetor Gasket Set–Ref. No. 977

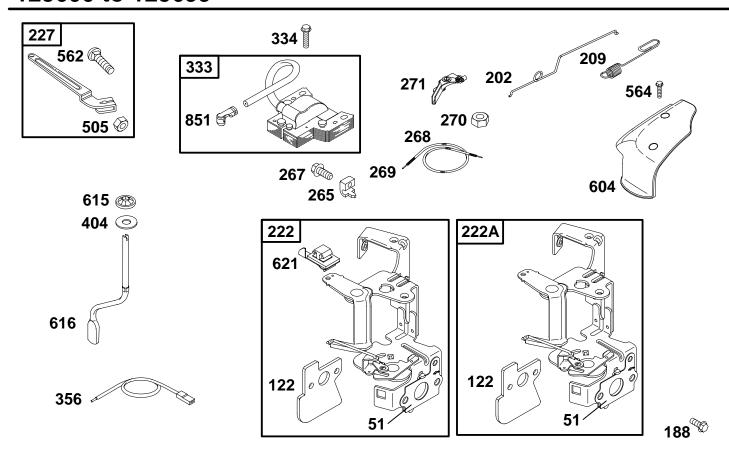


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		Gasket-Intake Spacer-Carburetor	227	691467	Lever–Governor Control	356	692390	Wire–Stop (1 Wire Insulated Flat
188	691147	Screw (Control Bracket)	265 267	221535 94882	Screw	404	690272	Terminal, Bare Wire) Washer
202	691303 691291	Link–Mechanical Governor Spring–Governor	268	65616	(Casing Clamp) Casing–Control Wire (72" Long; Cut to	505	231082	
		Note ——— 691851 Spring— Governor	269	26633	Required Length) Wire–Control (78" Long; Cut to	562	94852	(Governor Control Lever) Bolt (Governor Control
		Used on Type No(s). 0117. 690319 Spring– Governor	270 271	63426	Required Length) Nut (Control Wire Casing) Lever–Control	564	693808	Lever) Screw (Control Cover)
000	000070	Used on Type No(s). 0118.	333 334		Armature–Magneto Screw	604 615		Cover–Control Retainer–Governor Shaft
222 222A	693378 692672	Bracket–Control Bracket–Control Used on Type No(s). 0105, 0118.			(Magneto Armature)	616 621 851	396847	Crank-Governor Switch-Stop Terminal-Sparkplug


[★] Included in Engine Gasket Set-Ref. No. 358


[△] Included in Valve Gasket Set–Ref. No. 1095


Included in Carburetor Overhaul Kit–Ref. No. 121
 Included in Carburetor Gasket Set–Ref. No. 977

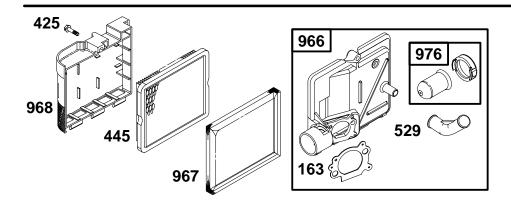

443 443A 🚳

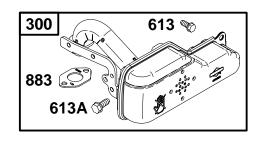

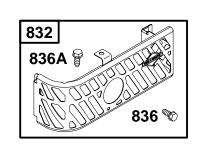






REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
163 * •	• ★692667 694248	Gasket–Air Cleaner Muffler	445	491588	Filter–Air Cleaner Cartridge	832 836		Guard-Muffler Screw
425	94872	Screw (Air Cleaner Cover)	529 613	281299 691108	Grommet	836A	690960	(Muffler Guard) Screw
443	94873	Screw			(Muffler)			(Muffler Guard)
		(Air Cleaner Primer Base)	613A	691140	(Muffler)	883 966		Gasket–Exhaust Base–Air Cleaner
443A	94118	Screw (Air Cleaner Primer	676 676A		Deflector–Muffler Deflector–Muffler	967	493537	Primer Filter–Pre Cleaner
		Base)	677	94896	Screw (Muffler Deflector)	968 976		Cover–Air Cleaner Primer–Carburetor
					(Mullier Deflector)	310	094393	Fillilei-Carburetoi

[★] Included in Engine Gasket Set-Ref. No. 358 Δ Included in Valve Gasket Set-Ref. No. 1095

Included in Carburetor Overhaul Kit–Ref. No. 121
 Included in Carburetor Gasket Set–Ref. No. 977

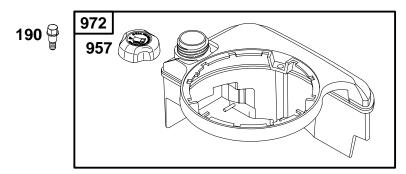






REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
187	296004	Line–Fuel (Cut To Required Length)	190 601		Screw (Fuel Tank) Clamp–Hose (Green, Spring Steel)	670 957 972 1059	692046 499618	Spacer–Fuel Tank Cap–Fuel Tank Tank–Fuel Kit–Screw/Washer

 $[\]star$ Included in Engine Gasket Set–Ref. No. 358 Δ Included in Valve Gasket Set–Ref. No. 1095

Included in Carburetor Overhaul Kit–Ref. No. 121
 Included in Carburetor Gasket Set–Ref. No. 977

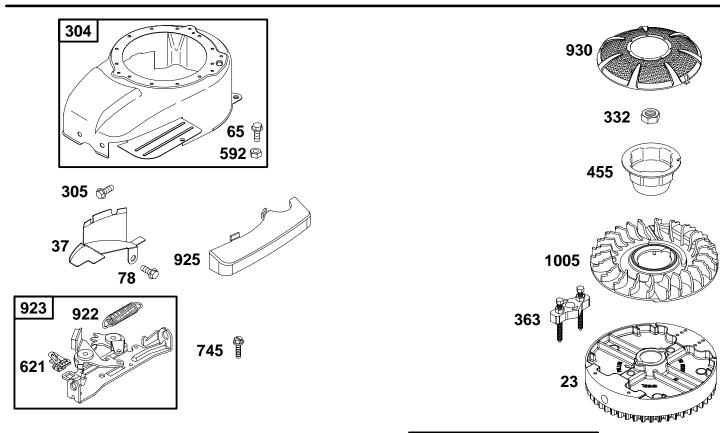


1036 EMISSION-LABEL

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
23	692452	Flywheel Note 692693 Flywheel Used on Type No(s). 0130.	304	499676	Housing–Blower Note 499677 Housing– Blower Used on Type No(s).	592 621 745		Nut (Rewind Starter) Switch–Stop Screw (Brake)
37	694086	Guard-Flywheel			0105.	922	262640	Spring-Brake
65	94904	Screw	305	690960	Screw	923	493442	Brake
		(Rewind Starter)			(Blower Housing)	925	690595	Cover-Linkage
78	691108		332	94877	Nut	930		Guard-Rewind
		(Flywheel Guard)			(Flywheel)	1005	691346	Fan-Flywheel
			363		Flywheel Puller	1036	694507	Label-Emission
			455	031213	Cup-Flywheel			

 $[\]star$ Included in Engine Gasket Set–Ref. No. 358 Δ Included in Valve Gasket Set–Ref. No. 1095


Included in Carburetor Overhaul Kit–Ref. No. 121
 Included in Carburetor Gasket Set–Ref. No. 977

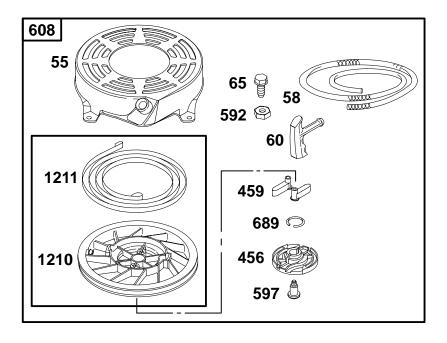



REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
55	691421	Housing–Rewind	456 450		Plate-Pawl Friction	689		Spring–Friction
58	281464	Starter Rope–Starter (Cut To Required	459 592	94908		1210	498144	Pulley/Spring Assembly
60	204.42.4	(Cut To Required Length)	597	94943		1211	498144	(Pulley) Pulley/Spring
60 65		Grip-Starter Rope Screw (Rewind Starter)	608	497680	(Pawl Friction Plate) Starter–Rewind			Assembly (Spring)
		(Newlind Statter)						


 $[\]star$ Included in Engine Gasket Set–Ref. No. 358 Δ Included in Valve Gasket Set–Ref. No. 1095

Included in Carburetor Overhaul Kit–Ref. No. 121
 Included in Carburetor Gasket Set–Ref. No. 977

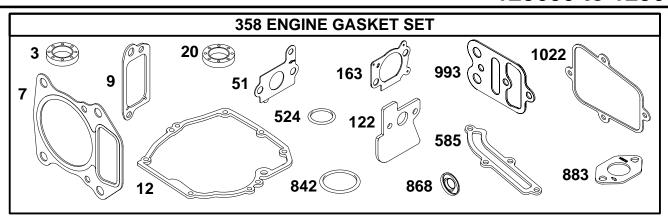

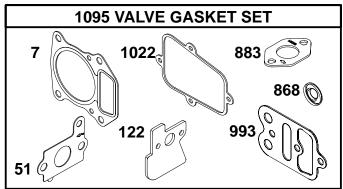

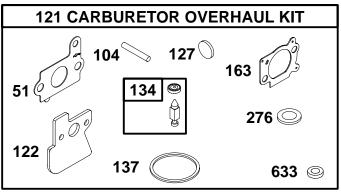



REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
3	★299819	Seal-Oil (Magneto Side)	127 134		Plug-Welch Kit-Needle/Seat	842	★280393	Seal-O Ring (For Top Of Tube &
9 12 20 51*	*272481 *272198 *399781 *••\(\delta\)692668	Gasket-Cylinder Head Gasket-Breather Gasket-Crankcase Seal-Oil (PTO Side) Gasket-Intake	163 *	◆●692667 ◆◆271716 694090 ★280966	Gasket–Float Bowl Gasket–Air Cleaner Washer–Sealing Gasket Set–Engine Seal–Dipstick Tube Gasket–Breather	883 977	⋆∆273348 692704	Dipstick/Cap Combo Only) Seal-Valve Gasket-Exhaust Gasket Set-Carburetor Gasket-Cylinder Head Plate
104 121		Pin–Float Hinge Kit–Carburetor	633●	• 691321	Passage Seal–Choke/Throttle		★ ∆691890	Gasket-Rocker Cover
122*	. ◆•∆692799	Overhaul Spacer–Carburetor			Shaft (Throttle Shaft)	1095	694091	Gasket Set-Valve

[★] Included in Engine Gasket Set-Ref. No. 358

△ Included in Valve Gasket Set-Ref. No. 1095

Included in Carburetor Gasket Set-Ref. No. 977

Included in Carburetor Overhaul Kit-Ref. No. 121