

235400 to 235499

Illustrated Parts List

Model Series

235400 to 235499

TYPE NUMBERS

0035, 0037, 0042,
0043, 0047, 0058,
0070, 0071, 0074,
0076, 0080, 0083,
0084, 0090, 0120,
0122, 0235, 0247,
0276, 0278, 0280,
0284, 0290, 0520,
0540, 0561, 0595.

TO FIND

THE CORRECT NUMBER OF THE PART YOU NEED: FOLLOW THE INSTRUCTIONS BELOW


- A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 0123 01 are listed only as 0123 in most instances. The two digits (01 or 02, etc.) to the right of the space may be required for more accurate parts identification in some instances. Select the Illustrated Parts List covering the correct Model Series and Type Number.
- B. Refer to the Illustrations and compare the original part with Illustration. The number next to the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames having individual reference numbers can be purchased separately.
- C. After the Reference Number has been identified, refer to the Numerical text, where Reference and Primary Part Number are listed. THE PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE."
- D. If a "Note" appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types. If your Type number is listed under "Note," order the part referred to at the "Note."
- E. If your Engine Type Number does not appear after any part number listed under "Note," use the Primary Part Number.
- F. For Engine Type Numbers not covered by this book, check other Parts Lists having the same engine model or contact your source of supply.

PRINTED IN U.S.A.



COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

235400 to 235499

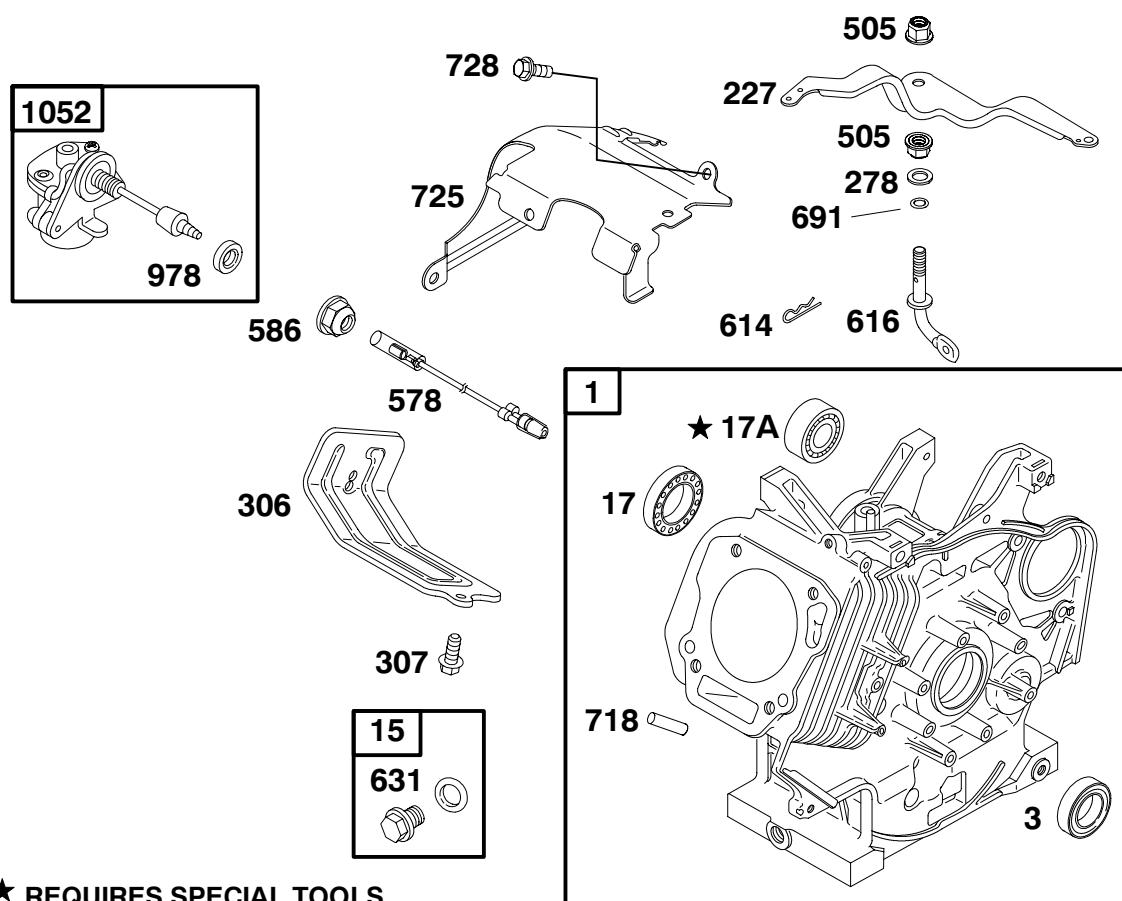

★ **REQUIRES SPECIAL TOOLS TO REPLACE. SEE REPAIR INSTRUCTION MANUAL.**

1019 LABEL KIT

1058 OWNER'S MANUAL


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	715355	Cylinder Assembly ----- Note ----- 715356 Cylinder Assembly Used on Type No(s). 0120, 0520. 715357 Cylinder Assembly Used on Type No(s). 0043, 0074, 0076, 0080, 0084, 0280, 0284.	17	710528	Bearing-Ball	614	710056	Pin-Cotter
			17A	710482	Bearing-Ball	616	710560	Crank-Governor
			227	710561	Lever-Governor Control	631	★710004	Washer (Oil Drain Plug)
			278	710058	Washer (Governor Control Lever)	691	★710055	Seal-Governor Shaft
			306	710242	Shield-Cylinder	718	710005	Pin-Locating
			307	710023	Screw (Cylinder Shield)	725	710568	Shield-Heat
			505	710059	Nut (Governor Control Lever)	728	710023	Screw (Heat Shield)
			578	710308	Wire Assembly	978	★710091	Gasket-Oil Gard®
			586	710090	Nut (Oil Sensor)	1019	715031	Kit-Label
3	★291675	Oil-Seal (Magneto Side)				1052	715353	Sensor-Oil
15	715000	Plug-Oil Drain				1058	273678	Owner's Manual

★ Included in Engine Gasket Set-Ref. No. 358.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

□ Included in Valve Gasket Set-Ref. No. 1096.

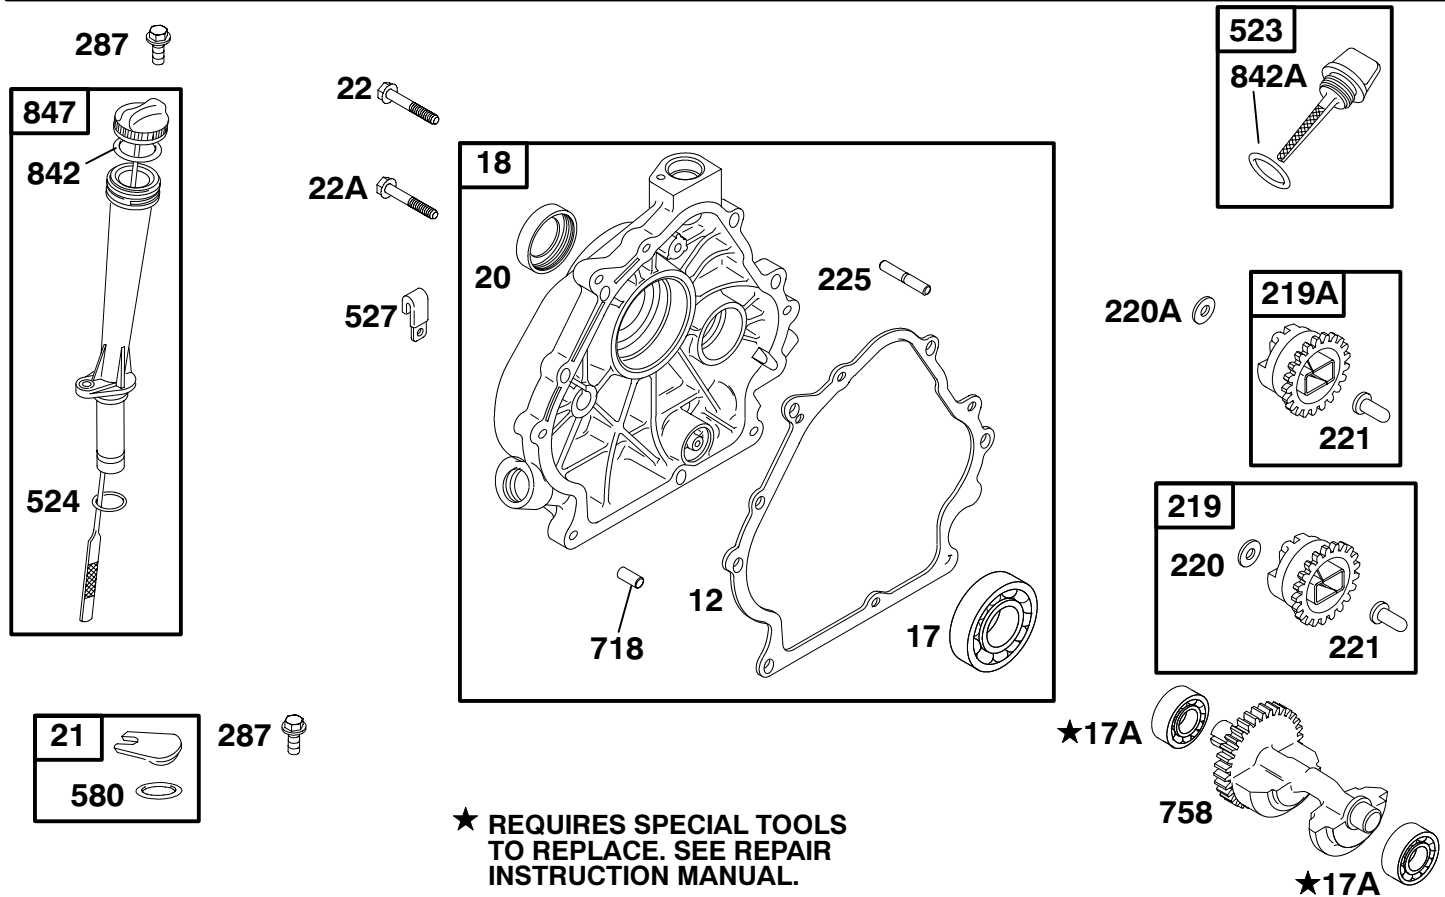

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
12	★710378	Gasket-Crankcase	21	493668	Cap-Oil Fill	221	710027	Cup-Governor
17	710528	Bearing-Ball	22	710032	Screw (Crankcase Cover)	225	710028	Shaft-Governor Gear
		----- Note -----	22A	710306	Screw (Crankcase Cover)	287	710234	Screw (Dipstick/Tube)
		710657 Bearing-Ball	219	715679	Gear-Governor (Used After Code Date 99073100)	523	710544	Dipstick
		Used on Type No(s). 0047, 0247, 0561.	219A	715341	Gear-Governor (Used Before Code Date 99080100)	524	280854	Seal-Dipstick Tube
17A	710482	Bearing-Ball	220	710545	Washer (Governor Gear) (Used After Code Date 99073100)	527	710100	Clamp-Tube
18	715359	Cover-Crankcase	220A	710035	Washer (Governor Gear) (Used Before Code Date 99080100)	580	280854	O-Ring Seal (Oil Fill Cap)
		----- Note -----				718	710005	Pin-Locating
		715358 Cover-Crankcase				758	710542	Counterweight
		Used on Type No(s). 0042, 0595.				842	270920	O-Ring Seal
		715526 Cover-Crankcase				842A	★710218	O-Ring Seal
		Used on Type No(s). 0058.				847	710543	Dipstick/Tube Assembly
20	★291675	Seal-Oil (PTO Side)						


★ Included in Engine Gasket Set-Ref. No. 358.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

□ Included in Valve Gasket Set-Ref. No. 1096.

235400 to 235499

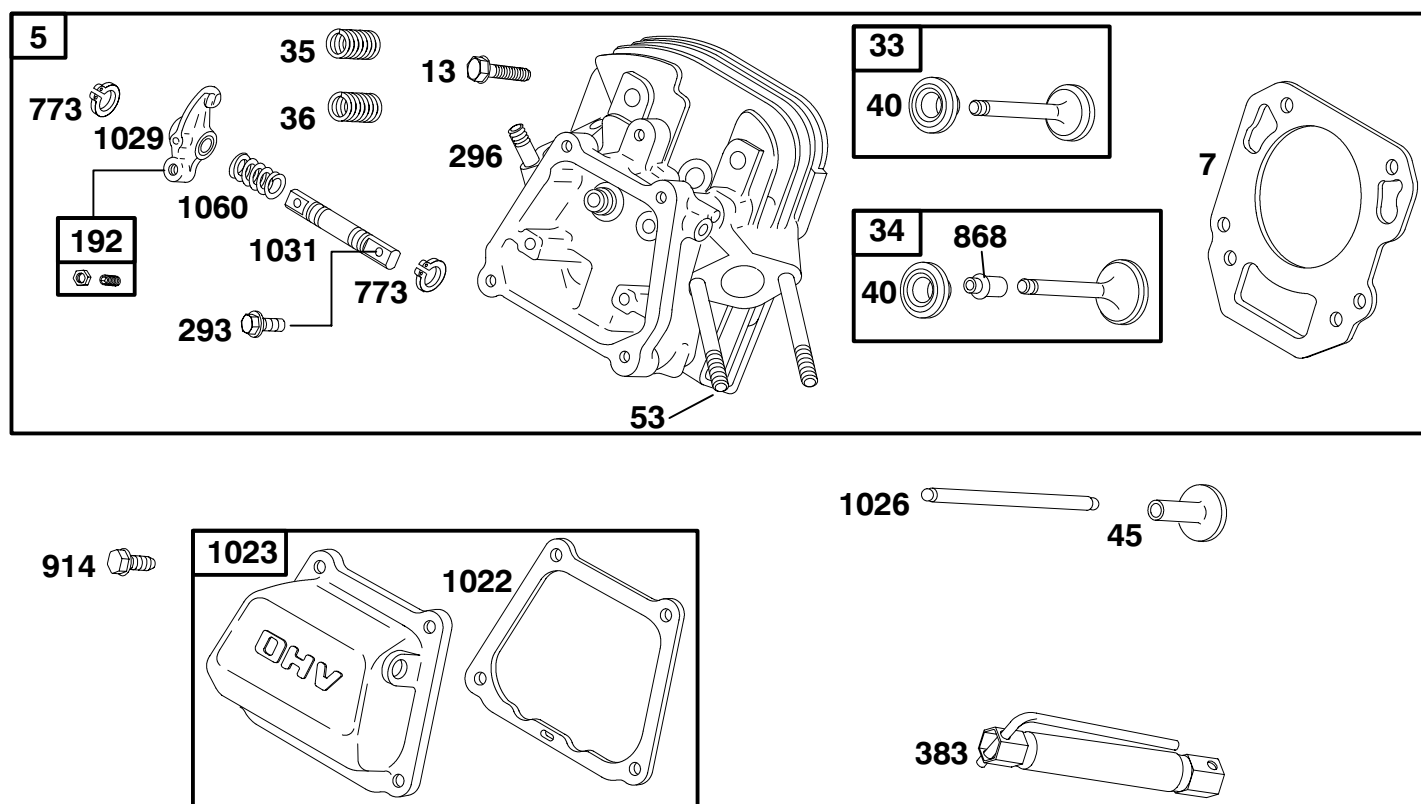





REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
5	715375	Head-Cylinder	40	224641	Retainer-Valve	773	710537	Retainer
7	★710539	Gasket-Cylinder Head	45	710530	Tappet-Valve	868	□710863	Seal-Valve
13	710204	Screw (Cylinder Head)	53	710556	Stud (Carburetor)	914	710023	Screw (Rocker Arm Cover)
33	715373	Valve-Exhaust	192	715372	Adjuster-Rocker Arm	1022	□★710377	Gasket-Rocker Cover
34	715374	Valve-Intake	293	710538	Screw (Rocker Arm Shaft)	1023	715376	Cover-Rocker Arm
35	691279	Spring-Valve (Exhaust)	296	710099	Stud (Muffler)	1026	710373	Rod-Push
36	691279	Spring-Valve (Intake)	383	19374	Wrench-Sparkplug	1029	710534	Arm-Rocker
						1031	710533	Shaft-Rocker Arm
						1060	710535	Spring-Rocker Shaft

★ Included in Engine Gasket Set-Ref. No. 358.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

□ Included in Valve Gasket Set-Ref. No. 1096.

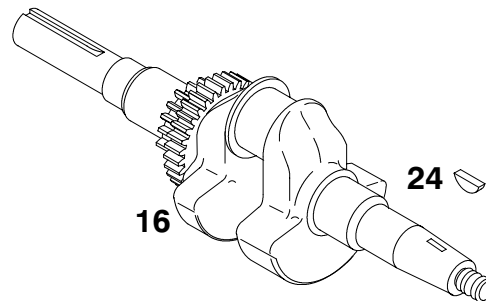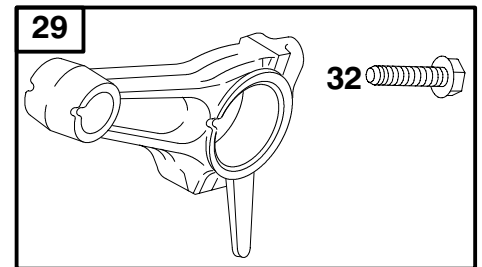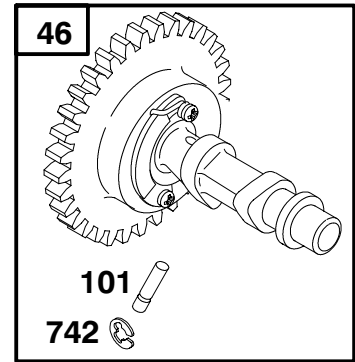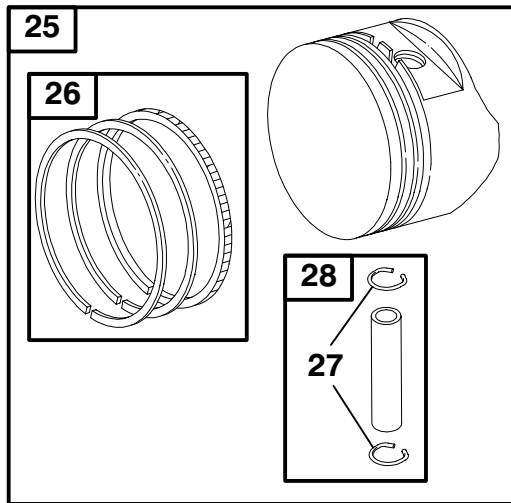


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
16	715342	Crankshaft (SAE 1" Keyway) Used on Type No(s). 0035, 0076, 0084, 0120, 0122, 0235, 0278, 0284, 0520, 0540. ----- Note ----- 715343 Crankshaft (SAE Taper) Used on Type No(s). 0042, 0070, 0071, 0074, 0080, 0083, 0090, 0280 0290, 0595. 715344 Crankshaft (SAE 1" Thread) Used on Type No(s). 0043, 0047, 0247, 0561. 715700 Crankshft (JIS Taper) Used on Type No(s). 0058, 0580.	24	710037	Key-Flywheel	27	260924	Lock-Piston Pin
			25	715364	Piston Assembly (Standard) ----- Note ----- 715384 Piston Assembly (.010" O.S.) 715385 Piston Assembly (.020" O.S.)	28	715407	Pin-Piston (Standard)
			26	715346	Ring Set (Standard) ----- Note ----- 715367 Ring Set (.010" O.S.) 715368 Ring Set (.020" O.S.)	29	715345	Rod-Connecting ----- Note ----- 715366 Rod- Connecting (.020" Undersize)
						32	710221	Screw (Connecting Rod)
						46	715369	Camshaft
						101	710547	Pin-Shaft
						742	710548	Retainer-E Ring

★ Included in Engine Gasket Set-Ref. No. 358.
◆ Included in Carburetor Gasket Set-Ref. No. 977.

● Included in Carburetor Overhaul Kit-Ref. No. 121.
□ Included in Valve Gasket Set-Ref. No. 1096.

235400 to 235499

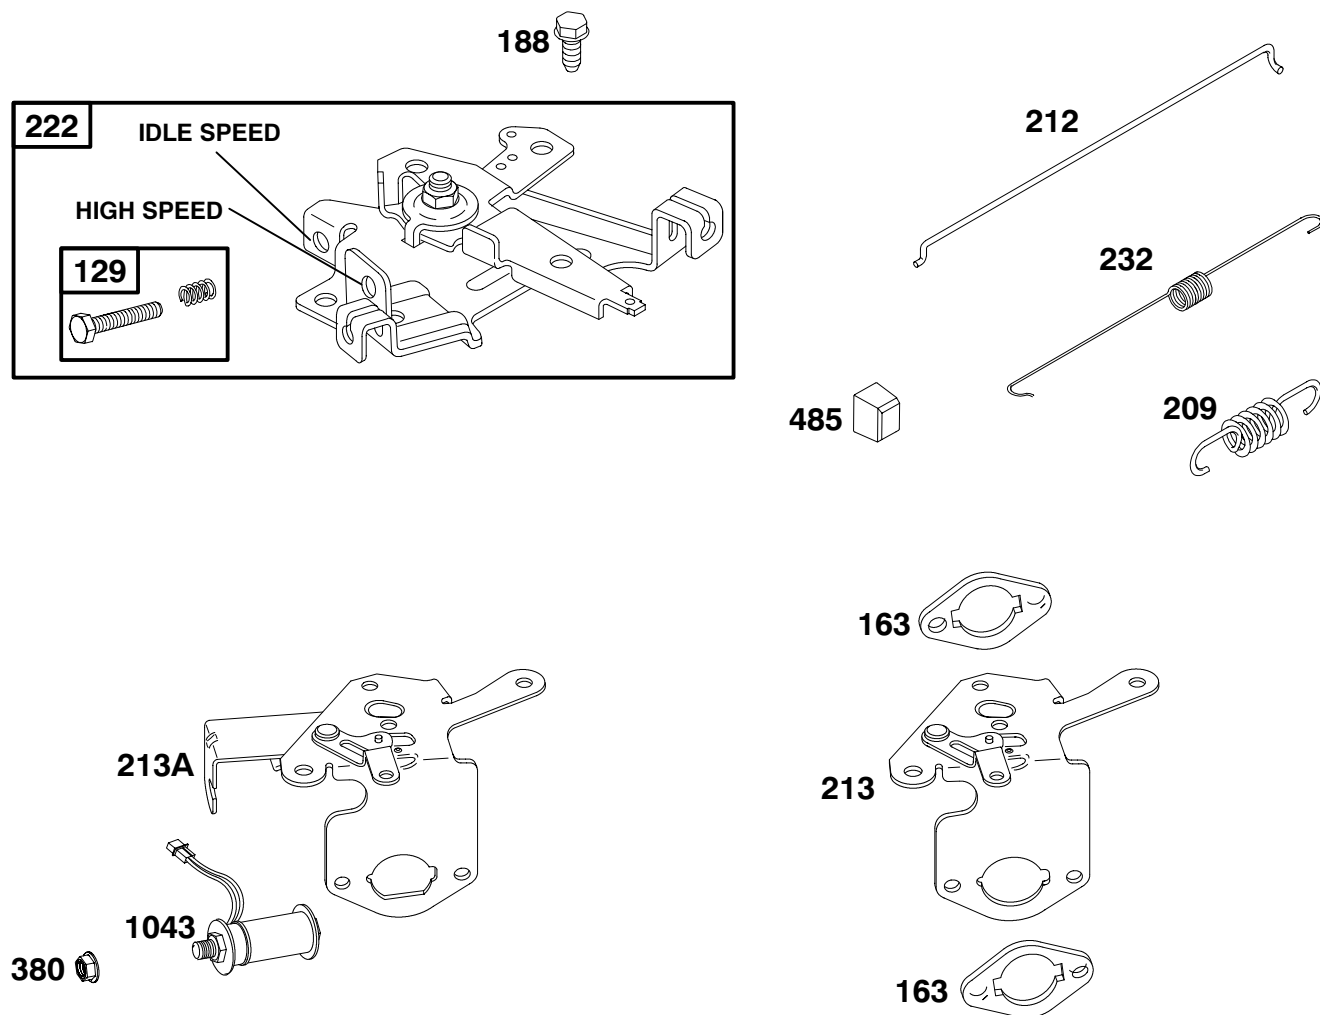


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
129	715024	Screw/Spring-Governor Speed (Idle & High Speed Adjust.) ----- Note ----- 715170 Screw/Spring-Governor Speed (Idle & High Speed Adjust.) Used on Type No(s). 0042, 0058, 0071, 0074, 0080, 0083, 0090.	209	710705	Spring-Governor ----- Note ----- 710564 Spring-Governor Used on Type No(s). 0042, 0070, 0071, 0074, 0595. 710580 Spring-Governor Used on Type No(s). 0058, 0080, 0083, 0090, 0280, 0290.	222	715025	Bracket-Control ----- Note ----- 715046 Bracket-Control Used on Type No(s). 0042, 0058, 0070, 0071, 0074, 0080, 0083, 0090, 0280, 0290, 0595.
163★♦	710557	Gasket-Air Cleaner	212	710562	Link-Throttle	232	710563	Spring-Governor Link
188	710057	Screw (Control Bracket)	213	715347	Bracket-Choke Control	380	710081	Nut (Electro Magnet)
			213A	715348	Bracket-Choke Control	485	280715	Knob-Control
						1043	692955	Magnet-Electro

★ Included in Engine Gasket Set-Ref. No. 358.

♦ Included in Carburetor Gasket Set-Ref. No. 977.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

□ Included in Valve Gasket Set-Ref. No. 1096.

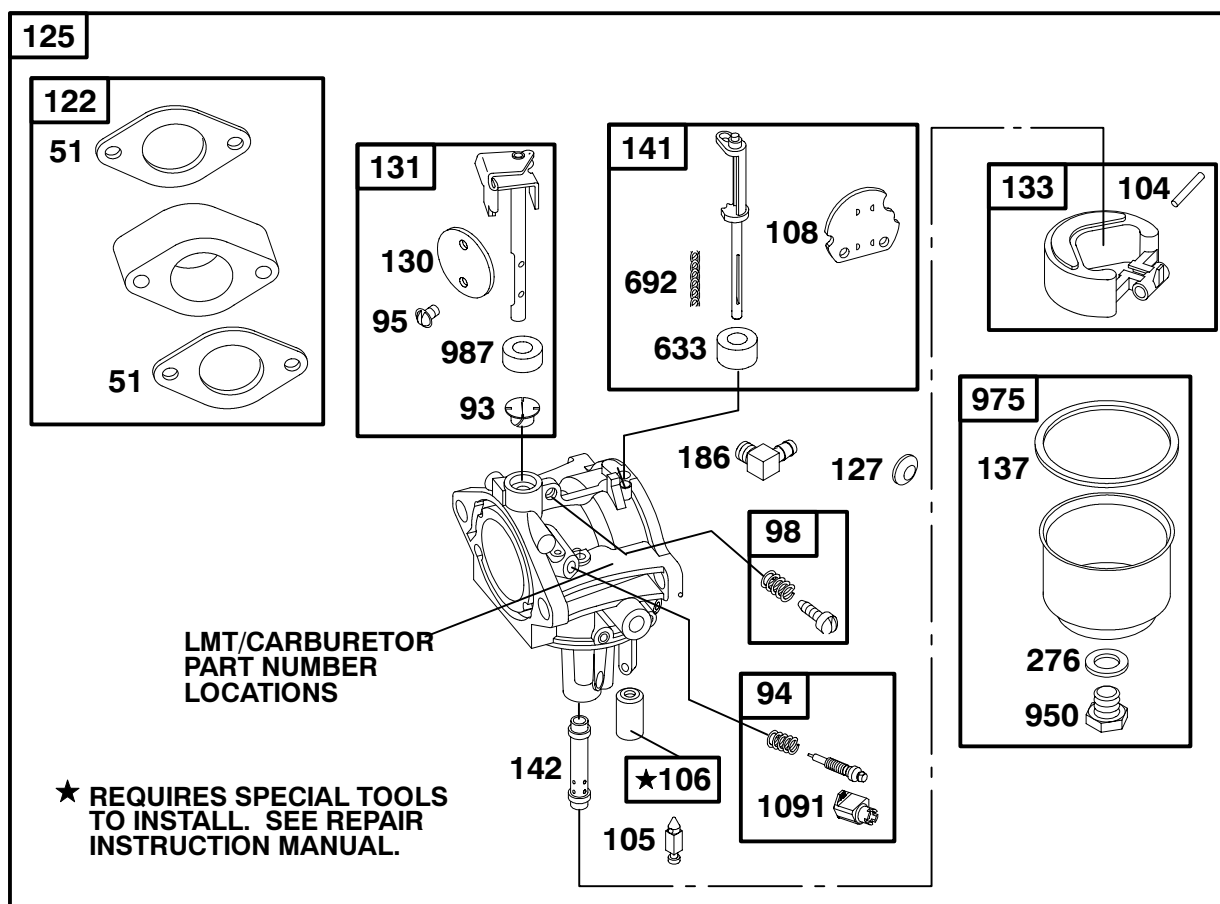


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
51	★♦ 710559	Gasket-Intake	131	715388	Kit-Throttle Shaft (LMT 118)	186	493496	Connector-Hose
93	♦ 690602	Bushing-Throttle Shaft			----- Note -----	276	♦ 281164	Washer-Sealing
94	498030	Kit-Idle Mixture (LMT 118)			715379 Kit-Throttle Shaft (LMT 144)	633	♦ 690597	Seal-Choke/Throttle Shaft
94A	496589	Kit-Idle Mixture (LMT 144)	133	494381	Float-Carburetor	692	691301	Spring-Detent
95	♦ 94098	Screw (Throttle Valve)	137	♦ 281165	Gasket-Float Bowl	950	94642	Screw-Float Bowl
98	715378	Kit-Idle Speed	141	715382	Shaft-Choke	975	495933	Bowl-Float
104	♦ 690525	Pin-Float Hinge	142	♦ 498547	Nozzle-Carburetor (LMT 118)	987	♦ 691326	Seal-Throttle Shaft
105	♦ 231855	Valve-Needle			----- Note -----	1091	691333	Cap-Limiter
106	♦ 231854	Seat-Inlet			♦ 690668 Nozzle-Carburetor (LMT 144)			
108	691227	Valve-Choke			498173 Nozzle-Carburetor (High Altitude LMT 144)			
122	715377	Spacer-Carburetor						
125	715524	Carburetor (LMT 118)						
127	♦ 695005	Plug-Welch						
130	690468	Valve-Throttle						

★ Included in Engine Gasket Set-Ref. No. 358.
♦ Included in Carburetor Gasket Set-Ref. No. 977.

• Included in Carburetor Overhaul Kit-Ref. No. 121.
□ Included in Valve Gasket Set-Ref. No. 1096.

235400 to 235499

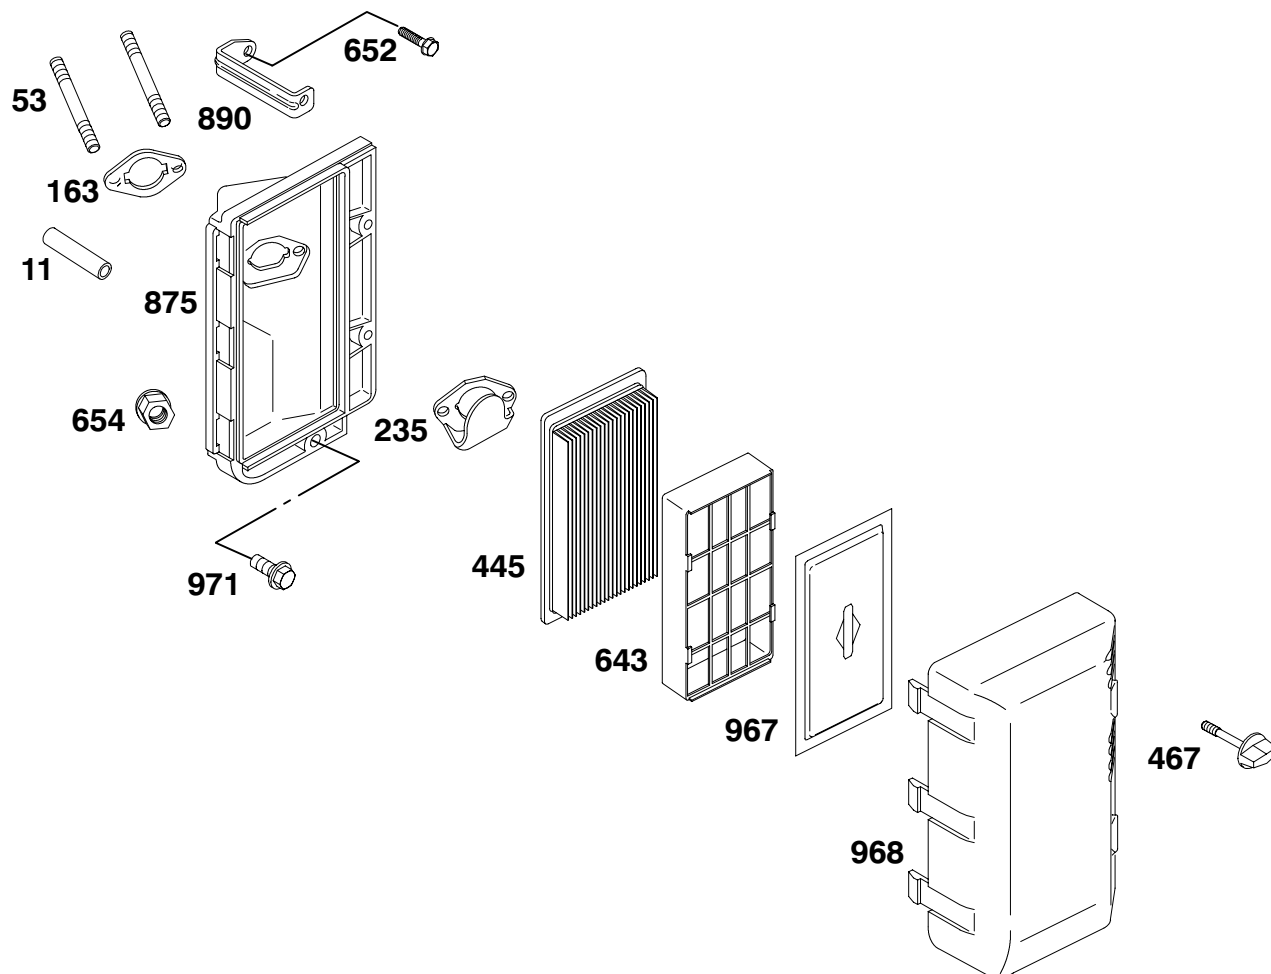









REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
11	710115	Tube-Breather	643	710228	Retainer-Air Filter	890	710554	Bracket-Support
53	710556	Stud (Carburetor)	652	710248	Screw (Support Bracket)	967	710268	Filter-Pre Cleaner
163★◆	710557	Gasket-Air Cleaner	654	710068	Nut (Carburetor)	968	710579	Cover-Air Cleaner
235	710553	Shield-Fuel Spray	875	710551	Base-Air Cleaner (Plastic)	971	710234	Screw (Air Cleaner Base)
445	710266	Filter-Air Cleaner Cartridge						
467	710113	Knob-Air Cleaner						

★ Included in Engine Gasket Set-Ref. No. 358.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

□ Included in Valve Gasket Set-Ref. No. 1096.

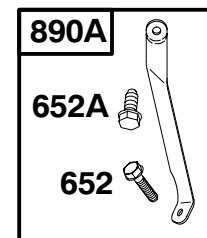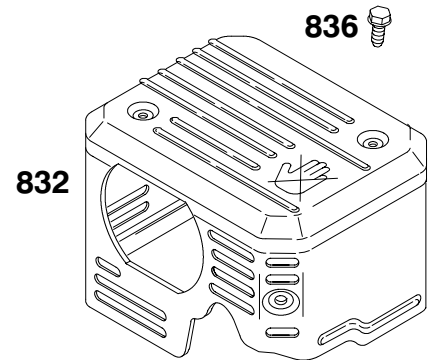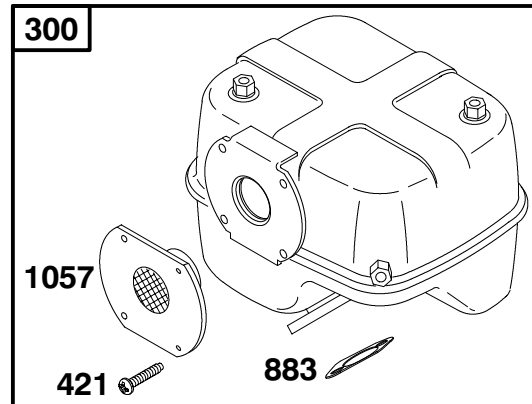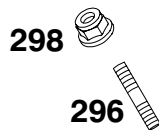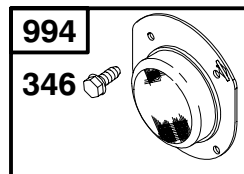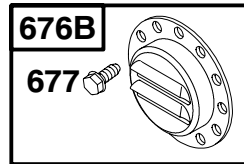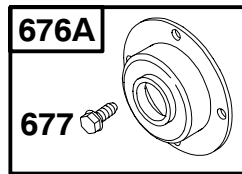
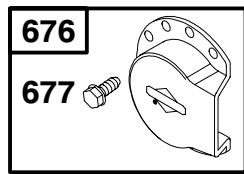


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
296	710099	Stud (Muffler)	652A	710057	Screw (Support Bracket)	883	710250	Gasket-Exhaust
298	710090	Locknut-Muffler/Elbow	676	393761	Deflector-Muffler	890A	715422	Bracket-Support
300	715424	Muffler	676A	396903	Deflector-Muffler	994	392390	Arrestor-Spark
346	690661	Screw (Spark Arrestor)	676B	397630	Deflector-Muffler	1057	710585	Screen-Outlet
421	710307	Screw (Outlet Screen)	677	690661	Screw (Muffler Deflector)			
652	710248	Screw (Support Bracket)	832	710586	Guard-Muffler			
			836	710074	Screw (Muffler Guard)			

★ Included in Engine Gasket Set-Ref. No. 358.
◆ Included in Carburetor Gasket Set-Ref. No. 977.

● Included in Carburetor Overhaul Kit-Ref. No. 121.
□ Included in Valve Gasket Set-Ref. No. 1096.

235400 to 235499

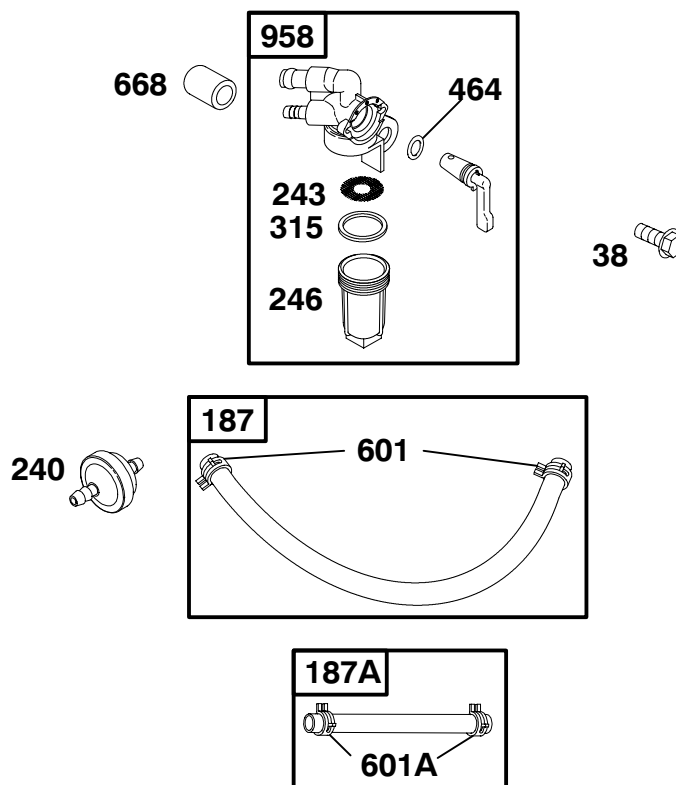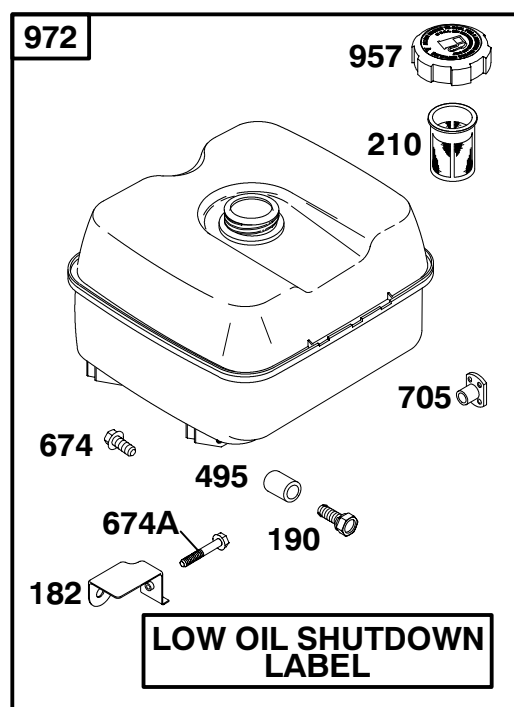

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
38	710160	Screw (Fuel Shut Off Valve)	190	710047	Screw (Fuel Tank)	601A	93053	Clamp-Hose
182	710491	Bracket-Fuel Tank	210	691370	Strainer-Fuel	668	710159	Spacer
187	715125	Line-Fuel (Fuel Tank To Fuel Shut Off Valve)	240	298090	Filter-Fuel	674	710023	Screw (Fuel Tank Bracket)
187A	298049	Line-Fuel (Fuel Shut Off Valve To Carburetor Cut To Required Length)	243	710071	Screen-Filter	674A	710095	Screw (Fuel Tank Bracket)
			246	710070	Bowl-Filter	705	710509	Nut (Fuel Tank)
			315	710072	O-Ring Seal (Filter Bowl)	957	491367	Cap-Fuel Tank
			464	★710069	Seal-O-Ring (Fuel Shut Off Valve)	958	715224	Valve-Fuel Shut Off
			495	710508	Bushing	972	715516	Tank-Fuel (Plastic)
			601	710067	Clamp-Hose			


★ Included in Engine Gasket Set-Ref. No. 358.
◆ Included in Carburetor Gasket Set-Ref. No. 977.

● Included in Carburetor Overhaul Kit-Ref. No. 121.
□ Included in Valve Gasket Set-Ref. No. 1096.



K&T Saw Shop 606-678-9623 or 606-561-4983

235400 to 235499

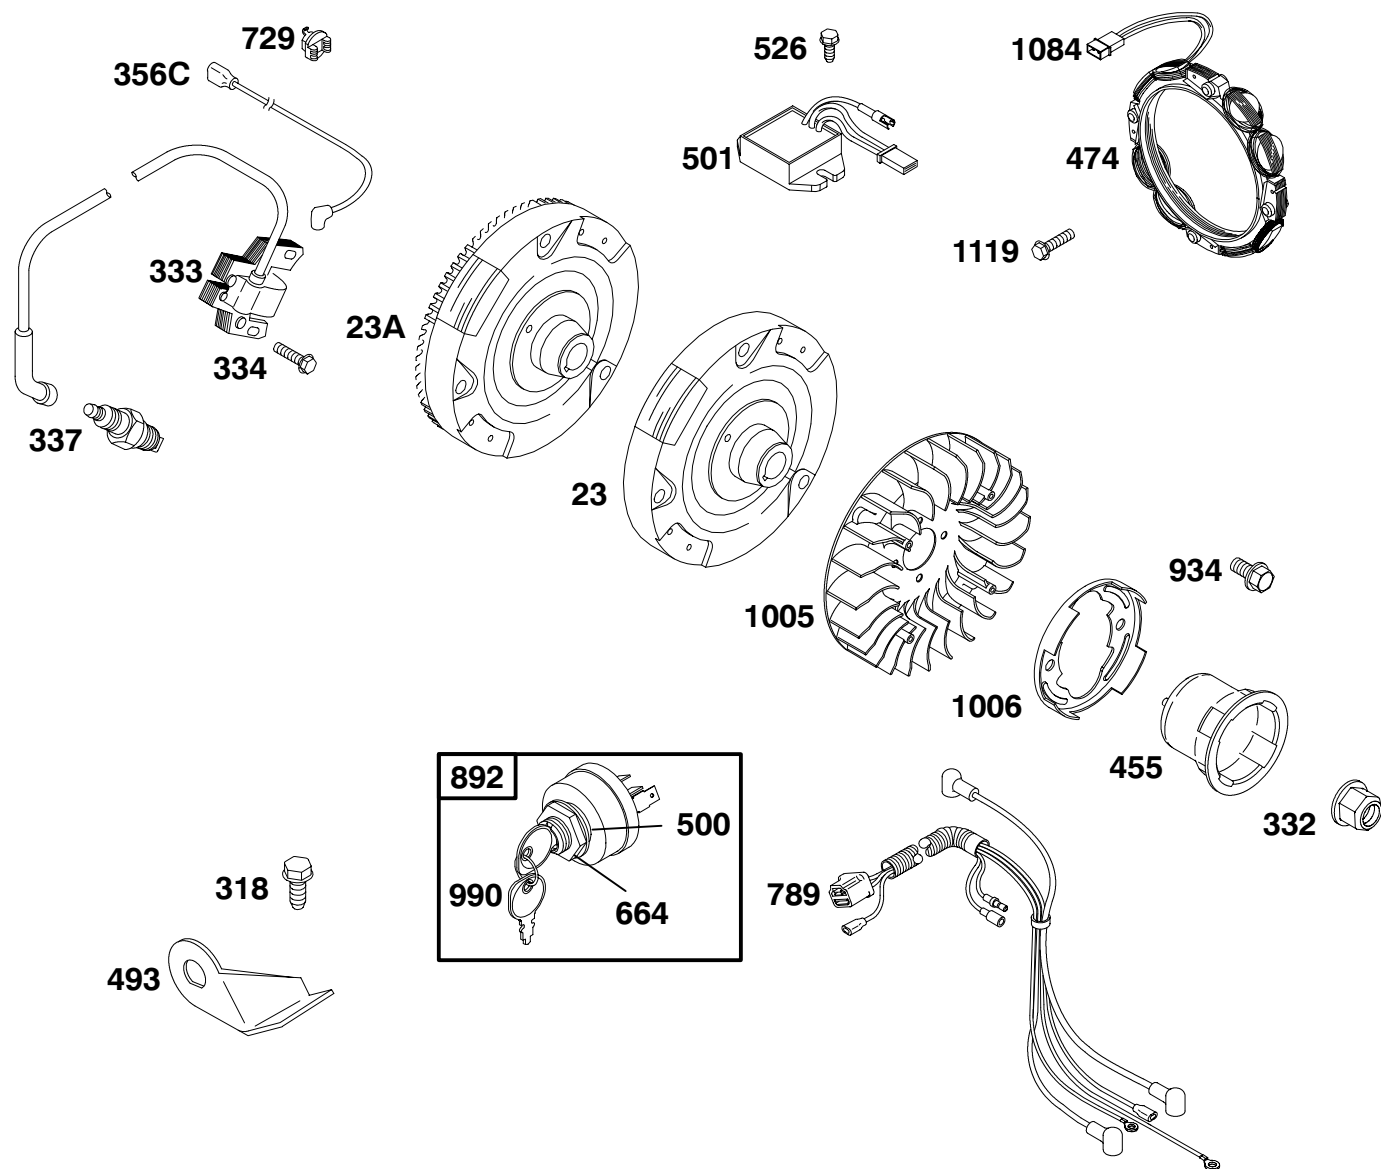


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
23	715265	Flywheel	337	491055	Sparkplug	729	710046	Clip-Wire
23A	715258	Flywheel	356C	710324	Wire-Stop	789	710576	Harness-Wiring
		----- Note -----	455	710588	Cup-Flywheel	892	493625	Switch-Key
		715260 Flywheel	474	715262	Alternator	934	710550	Screw
		Used on Type No(s).	493	710575	Bracket-Mounting			(Fan Retainer)
		0084, 0284.	500	691086	Washer	990	392832	Key Set
318	710057	Screw			(Key Switch)	1005	280687	Fan-Flywheel
		(Mounting Bracket)	501	394890	Regulator	1006	690452	Retainer-Fan
332	710345	Nut	526	710057	Screw	1084	710386	Terminal Connector
		(Flywheel)			(Regulator)	1119	690938	Screw
333	715231	Armature-Magneto	664	691087	Nut			(Alternator)
334	690938	Screw			(Key Switch)			
		(Magneto Armature)						

★ Included in Engine Gasket Set-Ref. No. 358.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

□ Included in Valve Gasket Set-Ref. No. 1096.

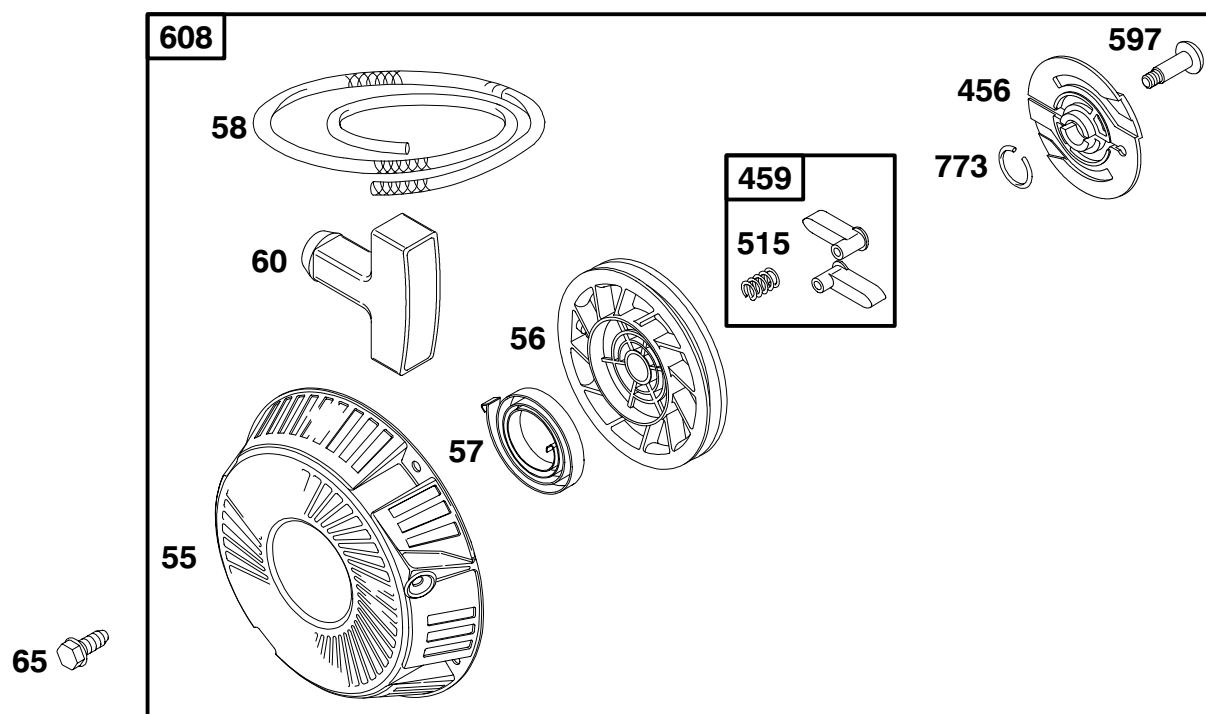

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
55	691568	Housing-Rewind Starter	60	490652	Grip-Starter Rope	597	690876	Screw (Pawl Friction Plate)
56	805949	Pulley-Starter	65	710074	Screw (Rewind Starter)	773	690875	Retainer
57	805951	Spring-Rewind Starter	456	691529	Plate-Pawl Friction	608	808087	Starter-Rewind
58	66574	Rope-Starter (Cut To Required Length)	459	808166	Pawl-Ratchet			
			515	691528	Spring-Pawl			


★ Included in Engine Gasket Set-Ref. No. 358.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

□ Included in Valve Gasket Set-Ref. No. 1096.

235400 to 235499

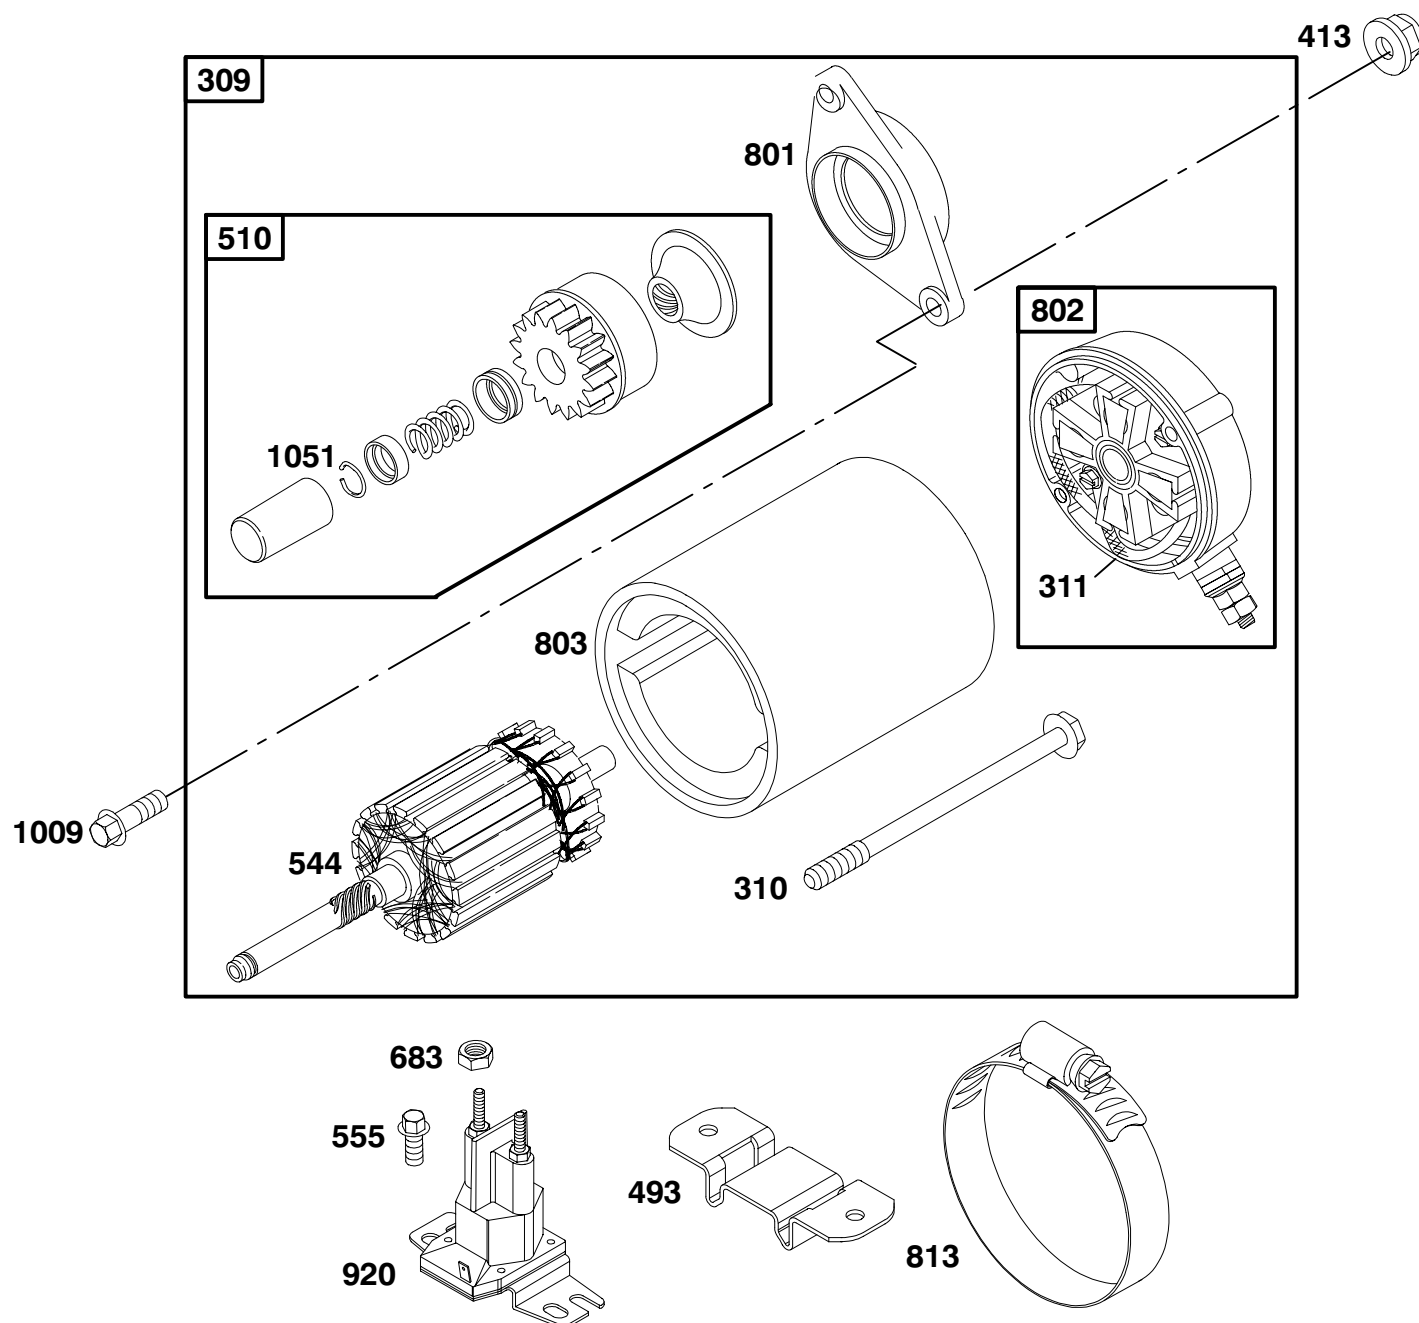



REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
309	715208	Motor-Starter (Steel Pinion)	510	496881	Drive-Starter	802	715393	Cap-End
310	710589	Bolt (Starter Motor)	544	690855	Armature-Starter	803	690854	Housing-Starter
311	496887	Brush Set	555	810059	Screw (Starter Solenoid)	813	690635	Clamp
413	710081	Nut (Starter Motor)	683	92278	Nut Starter Solenoid Terminal)	920	807829	Solenoid-Starter
493	691177	Bracket-Mounting	801	715394	Cap-Drive	1009	710348	Screw (Starter Motor)
						1051	691124	Ring-Retaining

★ Included in Engine Gasket Set-Ref. No. 358.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

● Included in Carburetor Overhaul Kit-Ref. No. 121.


□ Included in Valve Gasket Set-Ref. No. 1096.

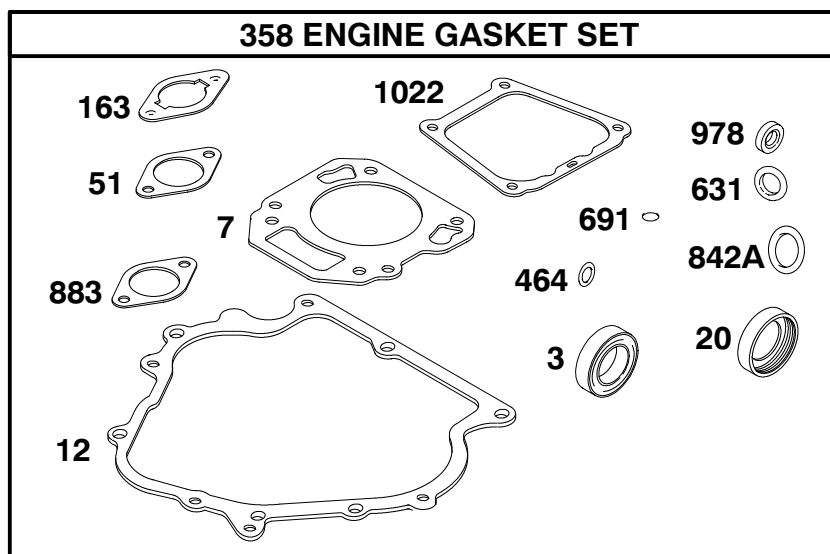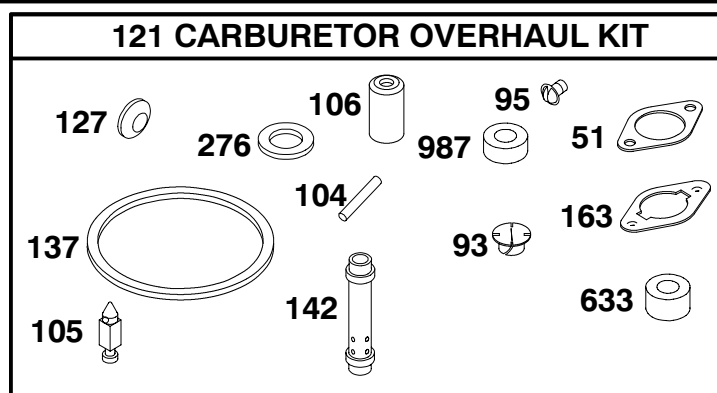

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
3	★291675	Seal-Oil (Magneto Side)	121	715718	Kit-Carburetor Overhaul (LMT 118)	276	●281164	Washer-Sealing
7	▣★710539	Gasket-Cylinder Head			----- Note -----	358	715383	Gasket Set-Engine
12	★710378	Gasket-Crankcase			715387 Kit-Carburetor Overhaul (LMT 144)	464	★710069	O-Ring Seal (Fuel Shut Off Valve)
20	★291675	Seal-Oil (PTO Side)	127	●695005	Plug-Welch	631	★710004	Washer (Oil Drain Plug)
51	★●710559	Gasket-Intake	137	●281165	Gasket-Float Bowl	633	●690597	Seal-Choke/Throttle Shaft
93	●690602	Bushing-Throttle Shaft	142	●498547	Nozzle-Carburetor (LMT 118)	691	★710055	Seal-Govenor Shaft
95	●94098	Screw (Throttle Valve)			----- Note -----	842A	★710218	O-Ring Seal (Dipstick)
104	●690525	Pin-Float Hinge			●690668 Nozzle- Carburetor (LMT 144)	883	▣★710250	Gasket-Exhaust
105	●231855	Valve-Needle				978	★710091	Gasket-Oil Gard®
106	●231854	Seat-Inlet	163	★●710557	Gasket-Air Cleaner	987	●691326	Seal-Throttle Shaft
						1022	▣★710377	Gasket-Rocker Cover

★ Included in Engine Gasket Set-Ref. No. 358.
 ◆ Included in Carburetor Gasket Set-Ref. No. 977.

● Included in Carburetor Overhaul Kit-Ref. No. 121.
 ▣ Included in Valve Gasket Set-Ref. No. 1096.

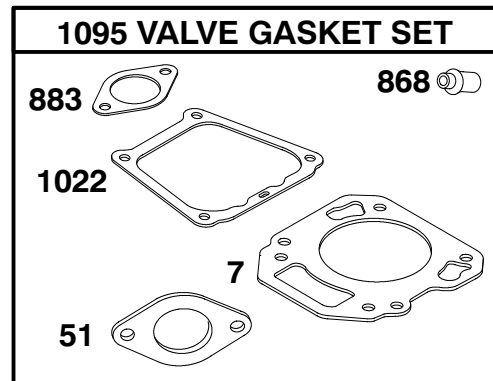

★ Included in Engine Gasket Set-Ref. No. 358.
◆ Included in Carburetor Gasket Set-Ref. No. 977.

K&T Saw Shop 606-678-9623 or 606-561-4983