

Illustrated Parts List

Model Series

243400 to 243499

TYPE NUMBERS

0131, 0137, 0150,
0152, 0165, 1111,
1116,
1130 through 1164,
1166 through 1170,
1172, 1173, 1174,
2520 through 2531,
2540, 2541, 2550,
2561, 2580, 2581.

TO FIND

THE CORRECT NUMBER OF THE PART YOU NEED: FOLLOW THE INSTRUCTIONS BELOW


- A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 0123 01 are listed only as 0123 in most instances. The two digits (01 or 02, etc.) to the right of the space may be required for more accurate parts identification in some instances. Select the Illustrated Parts List covering the correct Model Series and Type Number.
- B. Refer to the Illustrations and compare the original part with Illustration. The number next to the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames having individual reference numbers can be purchased separately.
- C. After the Reference Number has been identified, refer to the Numerical text, where Reference and Primary Part Number are listed. **THE PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE."**
- D. If a "Note" appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types. If your Type number is listed under "Note," order the part referred to at the "Note."
- E. If your Engine Type Number does not appear after any part number listed under "Note," use the Primary Part Number.
- F. For Engine Type Numbers not covered by this book, check other Parts Lists having the same engine model or contact your source of supply.

PRINTED IN U.S.A.



COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

243400 to 243499

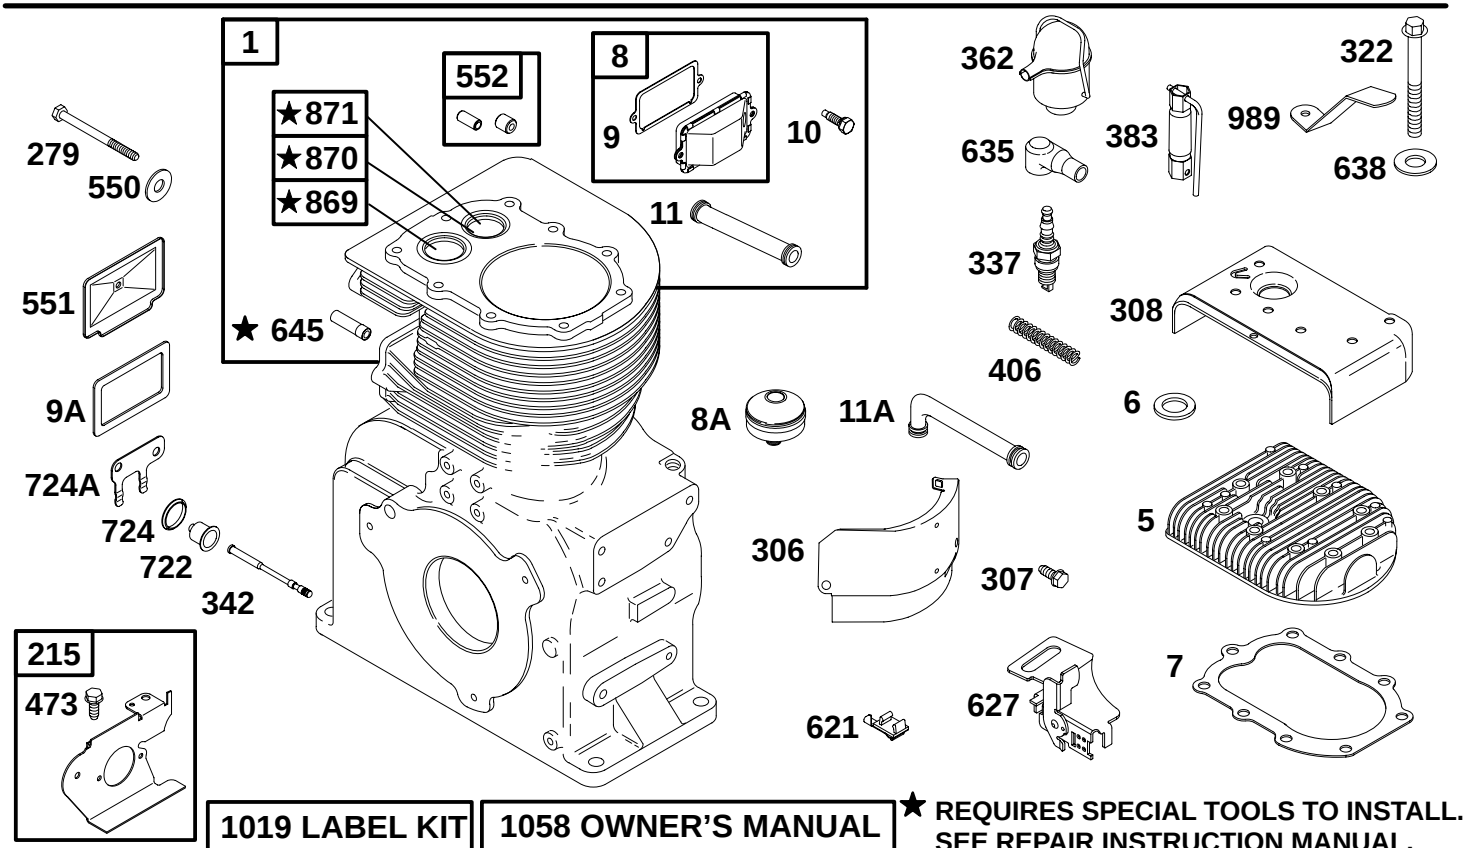


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	395663	Cylinder Assembly	322	92674	Screw (Cylinder Head Cover)	635	66538	Boot-Sparkplug
5	691150	Head-Cylinder	337	298809	Sparkplug	638	690264	Washer (Cylinder Cover)
6	691261	Washer (Cylinder Head)	----- Note -----			645	692880	Bushing-Plunger
7	★272165	Gasket-Cylinder Head		492167	Sparkplug	722	68768	Seal-Plunger
8	495738	Breather Assembly		802592	Sparkplug (Resistor Type)	724	93516	Retainer-Seal
8A	297704	Breather Assembly	342	298125	Plunger-Breaker	724A	221873	Retainer-Seal
9	★27803	Gasket-Breather	362	392273	Shield-Sparkplug	869	21880	Seat-Valve (Intake)
9A	★66214	Gasket-Breather	383	89838	Wrench-Sparkplug	870	21612	Seat-Valve (Exhaust)
10	690294	Screw (Breather Assembly)	406	690533	Spring-Breather Tube	871	231218	Bushing-Valve Guide (Exhaust)
11	68818	Tube-Breather	473	94786	Screw (Rod Guide)	989	690578	Stopswitch-Sparkplug
11A	67068	Tube-Breather	550	★22353	Washer (Valve Cover)	1019	491256	Kit-Label
215	291871	Guide-Air	551	22795	Cover-Valve	1058	270373	Owner's Manual (Non Emission Engines)
279	690294	Screw (Valve Cover)	552	393666	Bushing-Governor Crank			
306	690399	Shield-Cylinder	621	297472	Switch-Stop			
307	94786	Screw (Cylinder Shield)	627	392884	Bracket-Stop Switch			
308	690609	Cover-Cylinder Head						

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

243400 to 243499

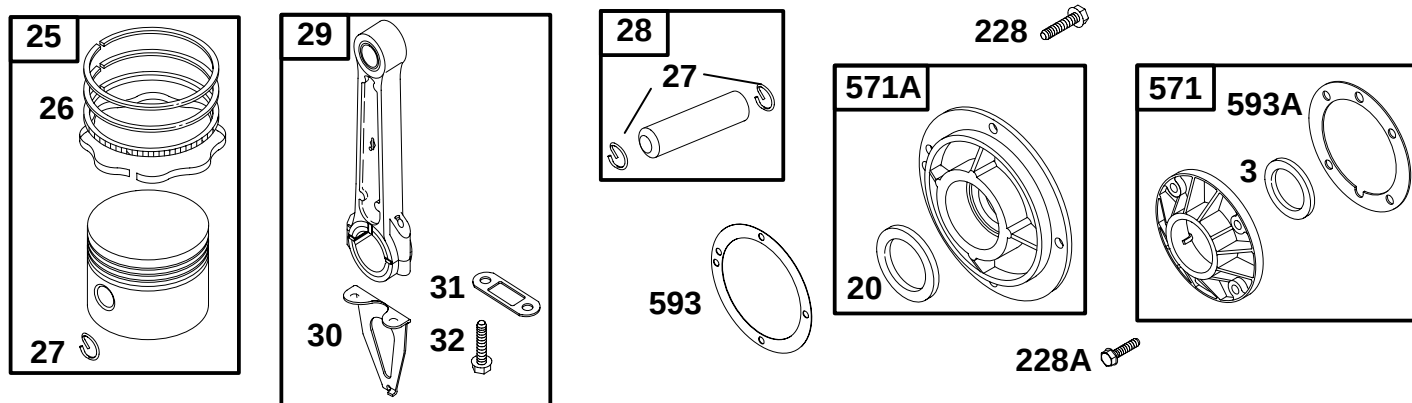


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
3	391086	Seal–Oil (Magnetor Side)	28	298401	Pin–Piston (Standard)			1158, 1159, 1161, 1162, 1163, 1164, 1169, 1170, 1172, 1173, 1174, 2520, 2524, 2528, 2529, 2531, 2561, 2581.
20	★291675	Seal–Oil (PTO Side)			----- Note -----			
		----- Note -----			294681 Pin–Piston (.005" O.S.)			
	299539	Seal–Oil (PTO Side)	29	299080	Rod–Connecting (Standard)			390054 Support–Bearing
		Used on Type No(s). 1131, 1132, 1142, 1145, 1146, 1149, 1154, 1155, 1160, 1166, 1167, 1168, 1172, 1173, 1174, 2522, 2530.			----- Note -----			(For Number 4Tppeder Crankshaft)
	299609	Seal–Oil (PTO Side)			390305 Rod–Connecting (.020" Undersize)			Used on Type No(s). 1131, 1132, 1142, 1145, 1146, 1149, 1154, 1155, 1160, 1166, 1167, 1168, 2522, 2530.
		Used on Type No(s). 2580.	30	221777	Dipper–Connecting Rod			390114 Support–Bearing
25	299085	Piston Assembly (Standard)	31	690396	Lock–Rod Screw			Used on Type No(s). 1131, 1132, 1142, 1145, 1146, 1149, 1154, 1155, 1160, 1166, 1167, 1168, 2522, 2530.
		----- Note -----	32	230557	Screw (Connecting Rod)			391062 Support–Bearing
	299086	Piston Assembly (.010" O.S.)	228	94627	Screw (Bearing Support)			Used on Type No(s). 1131, 1132, 1142, 1145, 1146, 1149, 1154, 1155, 1160, 1166, 1167, 1168, 2522, 2530.
	299087	Piston Assembly (.020" O.S.)	228A	93415	Screw (Bearing Support)			391062 Support–Bearing
	299088	Piston Assembly (.030" O.S.)	571	291672	Support–Bearing			Used on Type No(s). 1131, 1132, 1142, 1145, 1146, 1149, 1154, 1155, 1160, 1166, 1167, 1168, 2522, 2530.
26	299089	Ring Set (Standard)			----- Note -----			391062 Support–Bearing
		----- Note -----			394178 Support–Bearing			Used on Type No(s). 1131, 1132, 1142, 1145, 1146, 1149, 1154, 1155, 1160, 1166, 1167, 1168, 2522, 2530.
	299744	Ring Set (Chrome Standard)	571A	291665	Support–Bearing			391062 Support–Bearing
	299090	Ring Set (.010" O.S.)			----- Note -----			Used on Type No(s). 1131, 1132, 1142, 1145, 1146, 1149, 1154, 1155, 1160, 1166, 1167, 1168, 2522, 2530.
	299091	Ring Set (.020" O.S.)			291710 Support–Bearing			391062 Support–Bearing
	299092	Ring Set (.030" O.S.)			Used on Type No(s). 1111, 1130, 1133, 1134, 1135, 1136, 1137, 1138, 1139, 1140, 1141, 1143, 1144, 1147, 1148, 1150, 1151, 1152, 1153, 1156, 1157,			Used on Type No(s). 1131, 1132, 1142, 1145, 1146, 1149, 1154, 1155, 1160, 1166, 1167, 1168, 2522, 2530.
27	691073	Lock–Piston Pin						391062 Support–Bearing

★ Included in Engine Gasket Set–Ref. No. 358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.


243400 to 243499

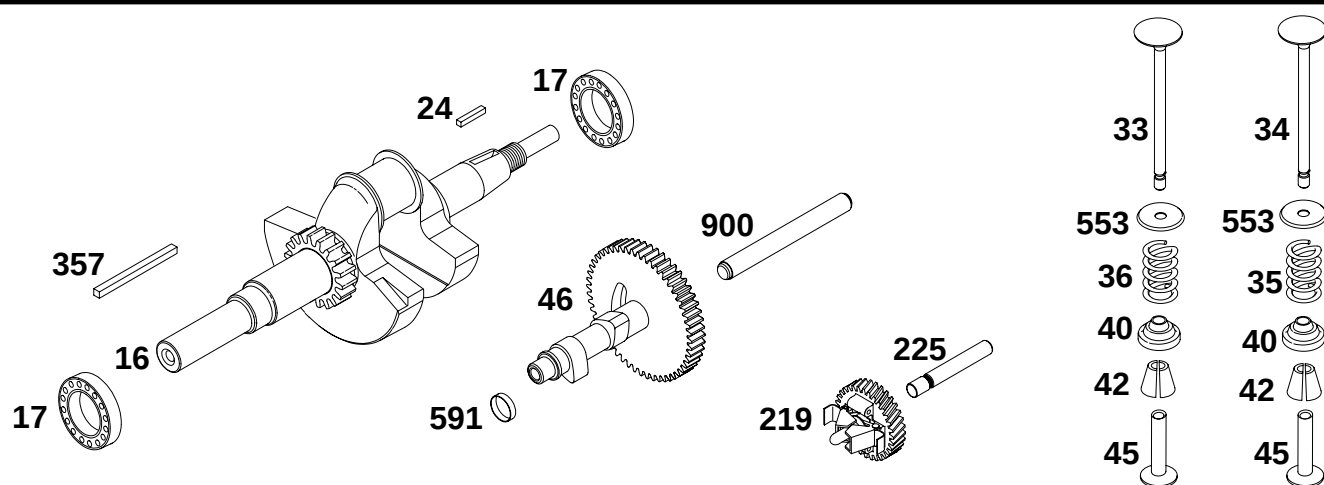

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
16	690530	Crankshaft ----- Note ----- 260887 Crankshaft Used on Type No(s). 1132, 1142, 1149, 1166, 1167, 1168, 2522, 2530. 690532 Crankshaft Used on Type No(s). 2580. 261240 Crankshaft Used on Type No(s). 1155. 690539 Crankshaft Used on Type No(s). 1136, 1139, 1141, 1151, 1156, 1159, 1164, 2561. 261421 Crankshaft Used on Type No(s). 1131, 1145, 1146, 1160. 261493 Crankshaft Used on Type No(s). 1154. 261549 Crankshaft Used on Type No(s). 1134, 1152, 1170, 1172, 2524, 2529. 261953 Crankshaft Used on Type No(s). 1116, 2540, 2550. 262021 Crankshaft Used on Type No(s). 2541.	17	291667	Bearing-Ball	42	494553	Keeper-Valve ----- Note ----- 690274 Retainer- Valve Used on Type No(s). 2550.
			24	222698	Key-Flywheel			
			33	394436	Valve-Exhaust			
			34	394434	Valve-Intake			
			35	26828	Spring-Valve (Intake)			
			36	26828	Spring-Valve (Exhaust)	45	26670	Tappet-Valve
			40	292260	Retainer-Valve	46	211335	Camshaft
						219	393720	Gear-Governor
						225	691357	Shaft-Governor Gear
						357	91540	Key-Drive Pulley
						553	690269	Retainer-Valve Spring
						591	691070	Plug-Camshaft
						900	691071	Shaft-Gear

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

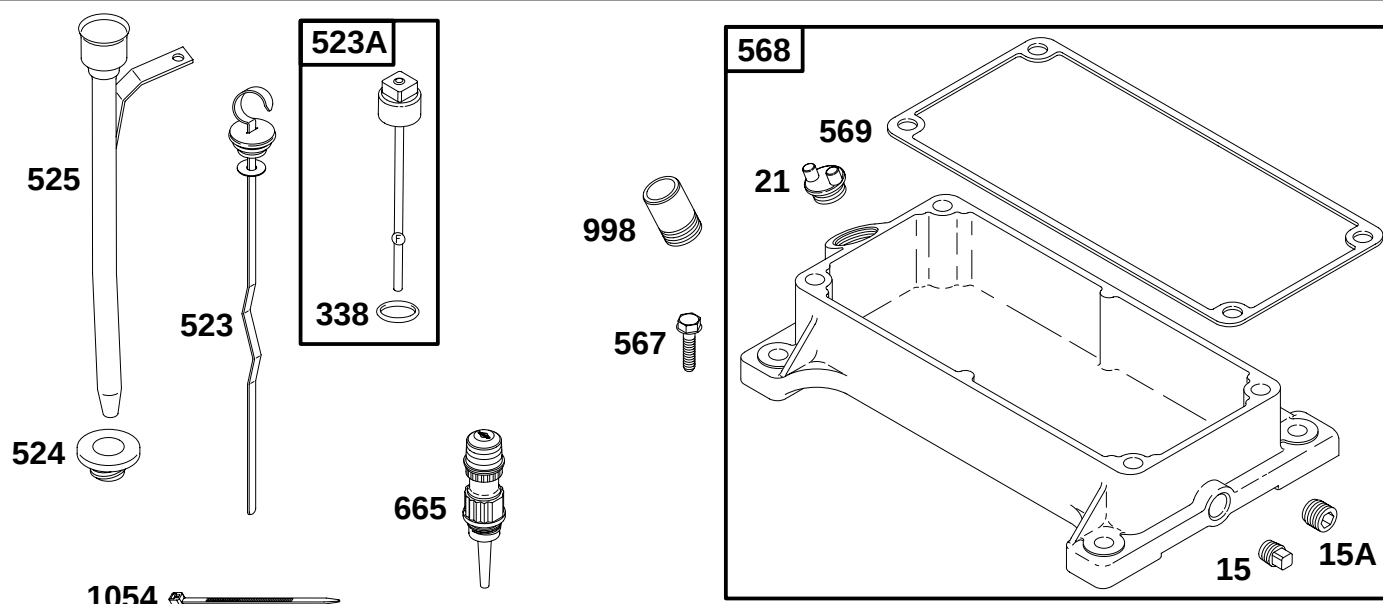


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
15	94239	Plug—Oil Drain (Square)	523A	690620	Dipstick Used on Type No(s). 2580.	568	291404	Base—Engine
15A	94880	Plug—Oil Drain (Hex. Socket)	524	★281370	Seal—Dipstick Tube			----- Note -----
21	291658	Cap—Oil Fill	525	690624	Tube—Dipstick (Used Before Code Date 88102600). ----- Note -----			294751 Base—Engine Used on Type No(s). 1174, 2524.
338	690270	Gasket—Dipstick Used on Type No(s). 2580.		491872	Tube—Dipstick (Impulse Fuel Pump) (Used After Code Date 8810250).	569	★27351	Gasket—Engine Base
523	691352	Dipstick	567	691104	Screw (Engine Base)	665	298860	Minder—Oil
						998	690502	Pipe—Oil
								----- Note -----
								690307 Pipe—Oil Used on Type No(s). 2580.
						1054	280275	Tie—Cable

★ Included in Engine Gasket Set—Ref. No. 358.

● Included in Carburetor Overhaul Kit—Ref. No. 121.


243400 to 243499

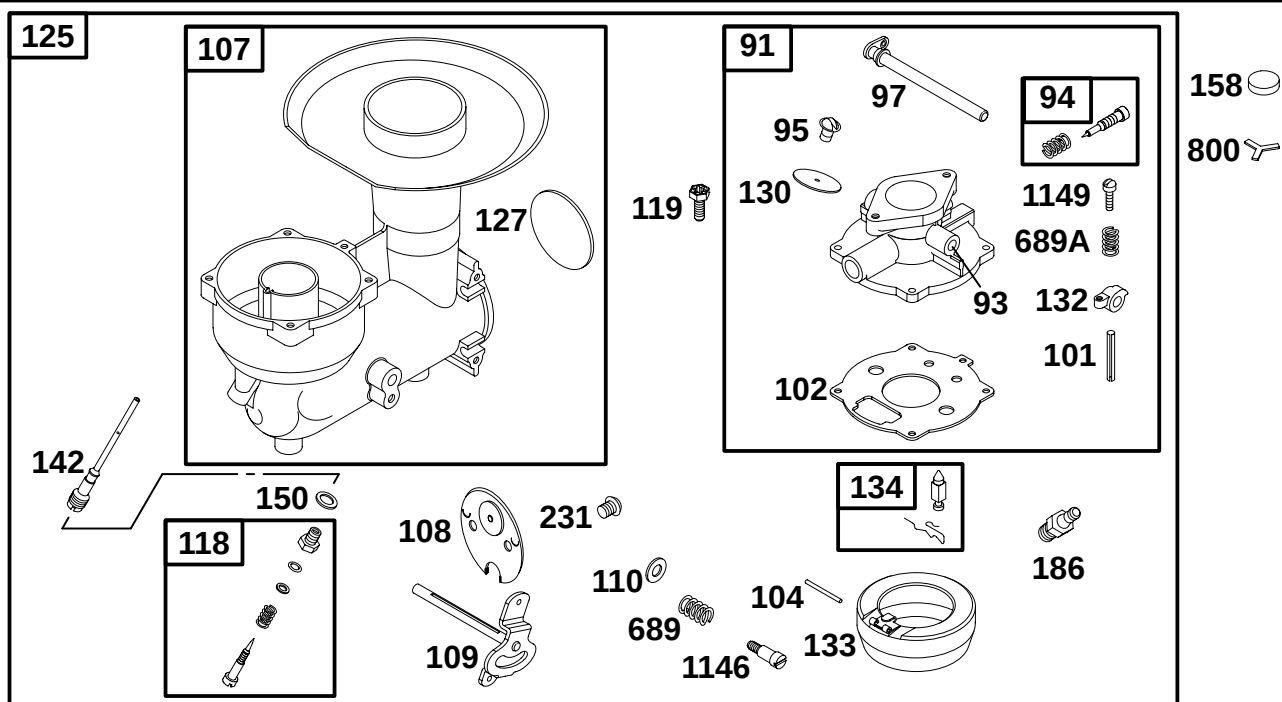

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
91	391034	Body–Upper Carburetor ----- Note ----- 299098 Body–Upper Carburetor Used on Type No(s). 0010 to 0201.	118	●99525	Valve–High Speed	142	●394730	Nozzle–Carburetor (Labeled B) (Used After Code Date 81101100). ----- Note ----- ●390950 Nozzle–Carburetor (Labeled 40) (Used Before Code Date 81101200).
93	23108	Bushing–Throttle Shaft	119	691090	Screw (Upper Body to Lower Body)	150	●68667	Gasket–Nozzle
94	●292681	Kit–Idle Mixture	125	391073	Carburetor ----- Note ----- 391074 Carburetor Used on Type No(s). 1111, 1116, 1132, 1133, 1136, 1137, 1164, 1166, 1167, 1170, 1172, 2520, 2524, 2528, 2529, 2540, 2561, 2580.	158	27590	Plug–Carburetor Filter/Drain
95	93499	Screw (Throttle Valve)	127	●221747	Plug–Welch	186	230318	Connector–Hose
97	298535	Shaft–Throttle	130	221939	Valve–Throttle	231	93499	Screw (Choke Valve)
101	93043	Pin–Shaft	132	212904	Stop–Throttle	689	26155	Spring–Friction
102	●270268	Gasket–Carburetor Body	133	298514	Float–Carburetor	689A	26157	Spring–Friction
104	●231435	Pin–Float Hinge	134	●394681	Kit–Needle/Seat ----- Note ----- 394682 Kit–Needle/Seat (Includes Brass Seat) 394683 Kit–Needle/Seat (Includes Brass Seat) (For Use With Impulse Pump)	800	220521	Retainer–Carburetor Drain
107	391069	Body–Lower Carburetor				1146	23123	Screw (Choke Shaft)
108	690621	Valve–Choke ----- Note ----- 298730 Valve–Choke Used on Type No(s). 0131, 0137, 0150, 0152, 0165.				1149	91920	Screw (Throttle Shaft)
109	691353	Shaft–Choke ----- Note ----- 690617 Shaft–Choke Used on Type No(s). 2580.						
110	691186	Washer (Choke Shaft)						

★ Included in Engine Gasket Set–Ref. No. 358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

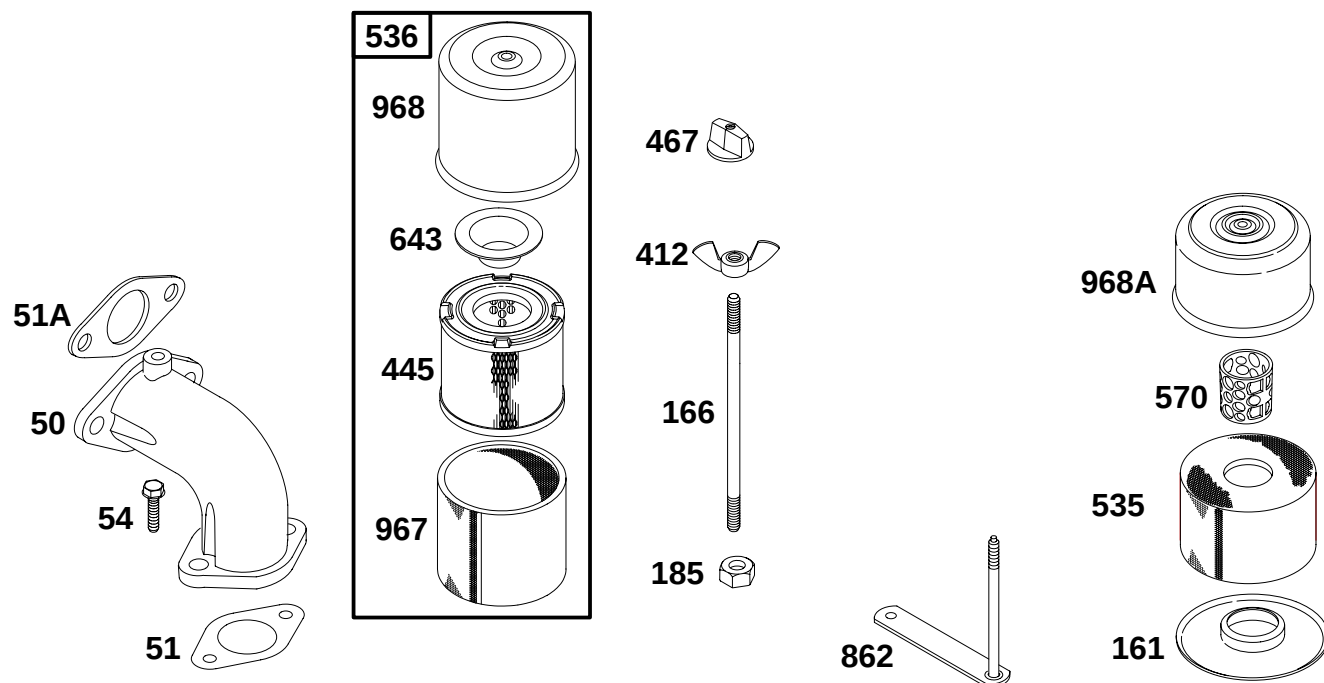


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
50	692525	Manifold-Intake	161	221755	Base-Air Cleaner	643	222272	Retainer-Air Filter
		----- Note -----	166	691241	Stud	862	297749	Strap/Stud-Air Cleaner Mounting
		691152 Manifold-Intake	185	690284	Nut	967	271794	Filter-Pre Cleaner
		Used on Type No(s). 2580.	412	94289	Nut	968	224885	Cover-Air Cleaner
51	★270267	Gasket-Intake	445	393957	Filter-Air Cleaner Cartridge	968A	221468	Cover-Air Cleaner
51A	★27381	Gasket-Intake	467	493903	Knob-Air Cleaner			
54	93415	Screw	535	270093	Filter-Air Cleaner Foam			
		(Intake Manifold)	536	391063	Cleaner-Air			
		----- Note -----	570	280001	Support-Foam Element			
		94913 Screw						
		(Intake Manifold)						
		Used on Type No(s). 2580.						

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.


243400 to 243499

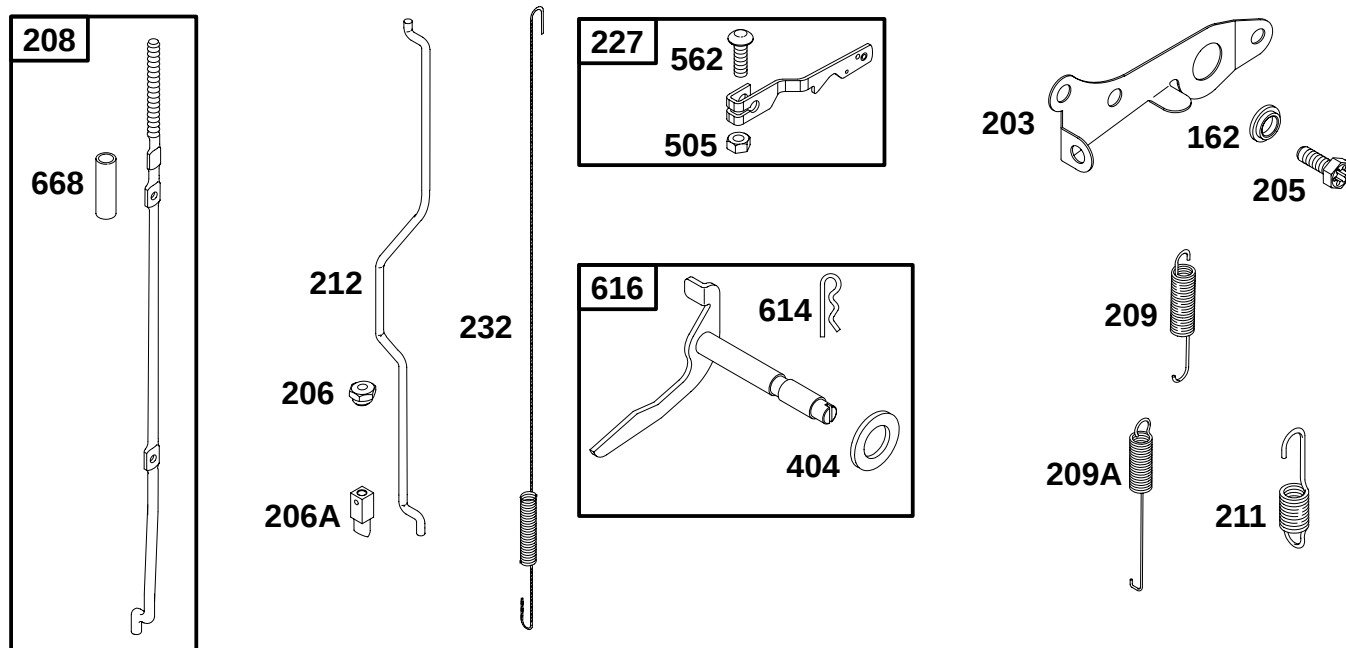

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
162	690267	Collar–Bell Crank	211	260816	Spring–Governed Idle Used on Type No(s). 1111, 1133, 1136, 1164, 1170, 2520, 2528, 2561, 2580.	232	260584	Spring–Governor Link ----- Note ----- 260478 Spring– Governor Link Used on Type No(s). 2580.
203	690263	Crank–Bell						
205	94905	Screw (Bell Crank)	212	26725	Link–Throttle ----- Note ----- 260923 Link–Throttle Used on Type No(s). 2580.	404	690264	Washer (Governor Crank)
206	691079	Nut (Governor Control Rod)				505	231082	Nut (Governor Control Lever)
206A	21772	Nut (Governor Control Rod)	227	690607	Lever–Governor Control ----- Note ----- 690616 Lever– Governor Control Used on Type No(s). 1111, 1133, 1136, 1164, 1170, 2520, 2528, 2561, 2580.	562	92613	Bolt (Governor Control Lever)
208	393613	Rod–Governor Control				614	93306	Pin–Cotter
209	26764	Spring–Governor				616	291364	Crank–Governor
209A	260815	Spring–Governor Used on Type No(s). 1111, 1133, 1136, 1164, 1170, 2520, 2528, 2561, 2580.				668	690313	Spacer

★ Included in Engine Gasket Set–Ref. No. 358.


● Included in Carburetor Overhaul Kit–Ref. No. 121.

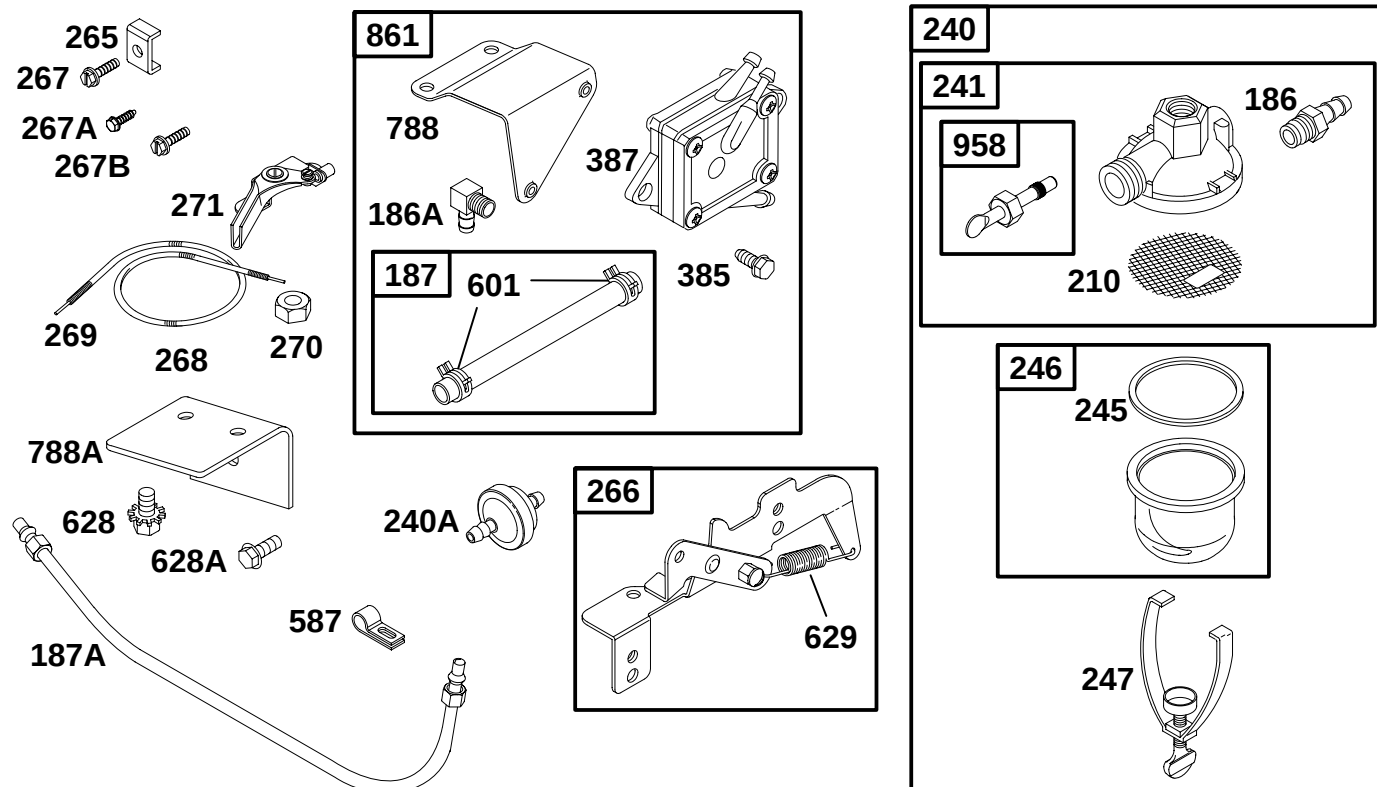


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
186A	67218	Connector-Hose (Fuel Pump)	241	295977	Cover-Fuel Filter (Used With Flexible Fuel Line)	268	65616	Casing-Control Wire (Cut to Required Length)
186	230318	Connector-Hose	----- Note -----	99909	Cover-Fuel Filter (Used With Metal Fuel Line)	269	26633	Wire-Control (Cut to Required Length)
187	499167	Line-Fuel (Rubber) (Cut to Length)				270	63426	Nut (Control Wire Casing)
187A	298861	Line-Fuel (Metal)				271	290568	Lever-Control
		----- Note -----				385	94786	Screw (Fuel Pump)
		299322 Line-Fuel (Metal, 20" Long)	245	*68477	Gasket-Fuel Bowl	387	491922	Pump-Fuel
		89248 Line-Fuel (Metal, 2 1/4" Long)	246	298683	Bowl-Fuel Filter	587	690389	Clamp-Cable
210	22547	Strainer-Fuel	247	99665	Yoke-Bowl	601	95162	Clamp-Hose
240	393169	Filter-Fuel	265	22372	Clamp-Casing	628	93380	Screw (Fuel Pump Bracket)
240A	298090	Filter-Fuel	266	494554	Control-Throttle	628A	94627	Screw (Fuel Pump Bracket)
		----- Note -----			----- Note -----	629	690538	Spring-Throttle Return
		394358 Filter-Fuel Used on Type No(s). 1160.			299361 Control-Throttle Used on Type No(s). 1144.	788	224123	Bracket-Fuel Pump
			267	93107	Screw (Casing Clamp)	788A	223610	Bracket-Fuel Pump
			267A	690305	Screw (Casing Clamp)	861	494280	Kit-Fuel Pump
			267B	691082	Screw (Casing Clamp) Used on Type No(s). 1143, 1147, 1153.	958	295913	Valve-Fuel Shut Off

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

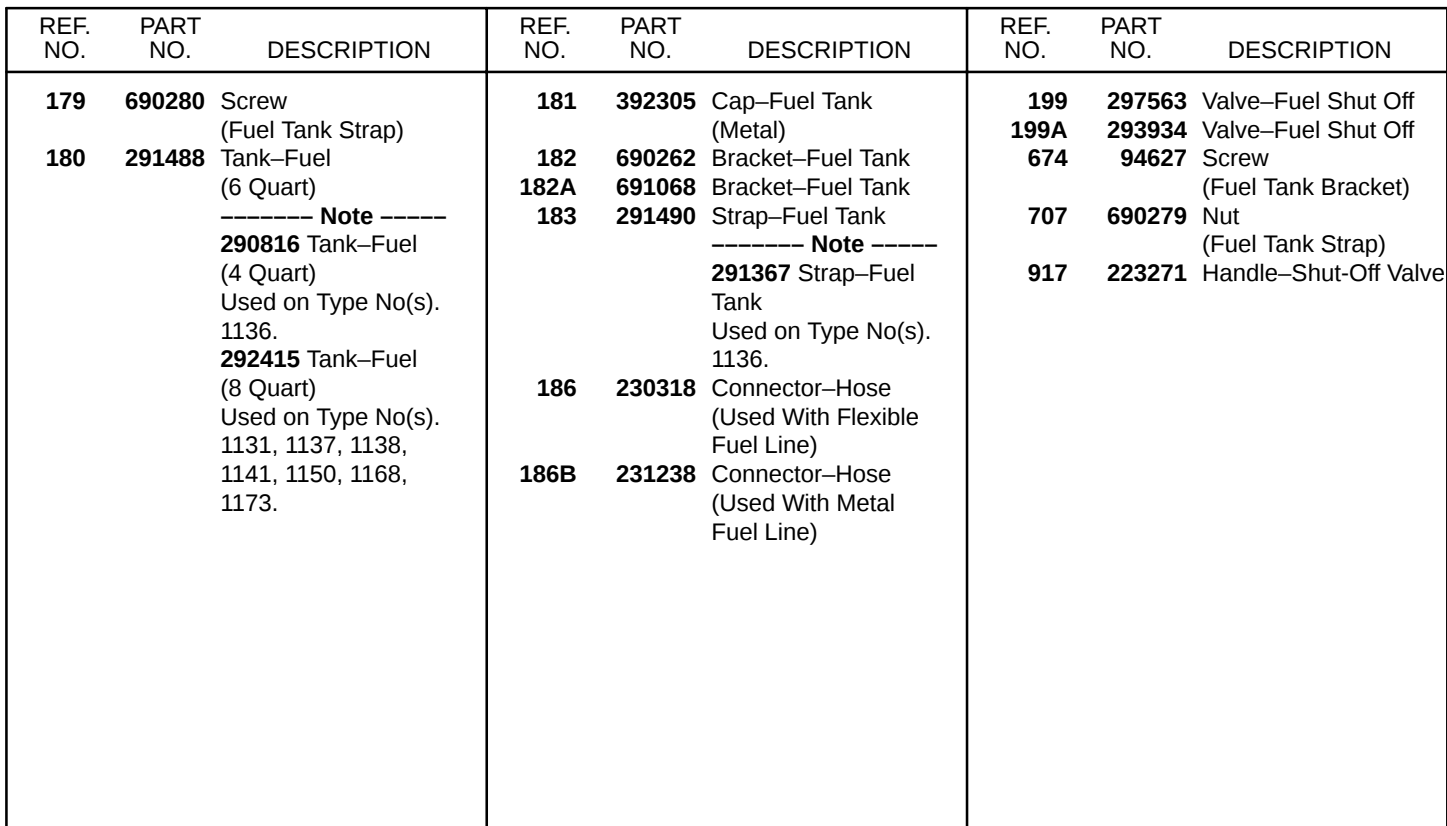

- Included in Carburetor Overhaul Kit—Ref. No. 121.

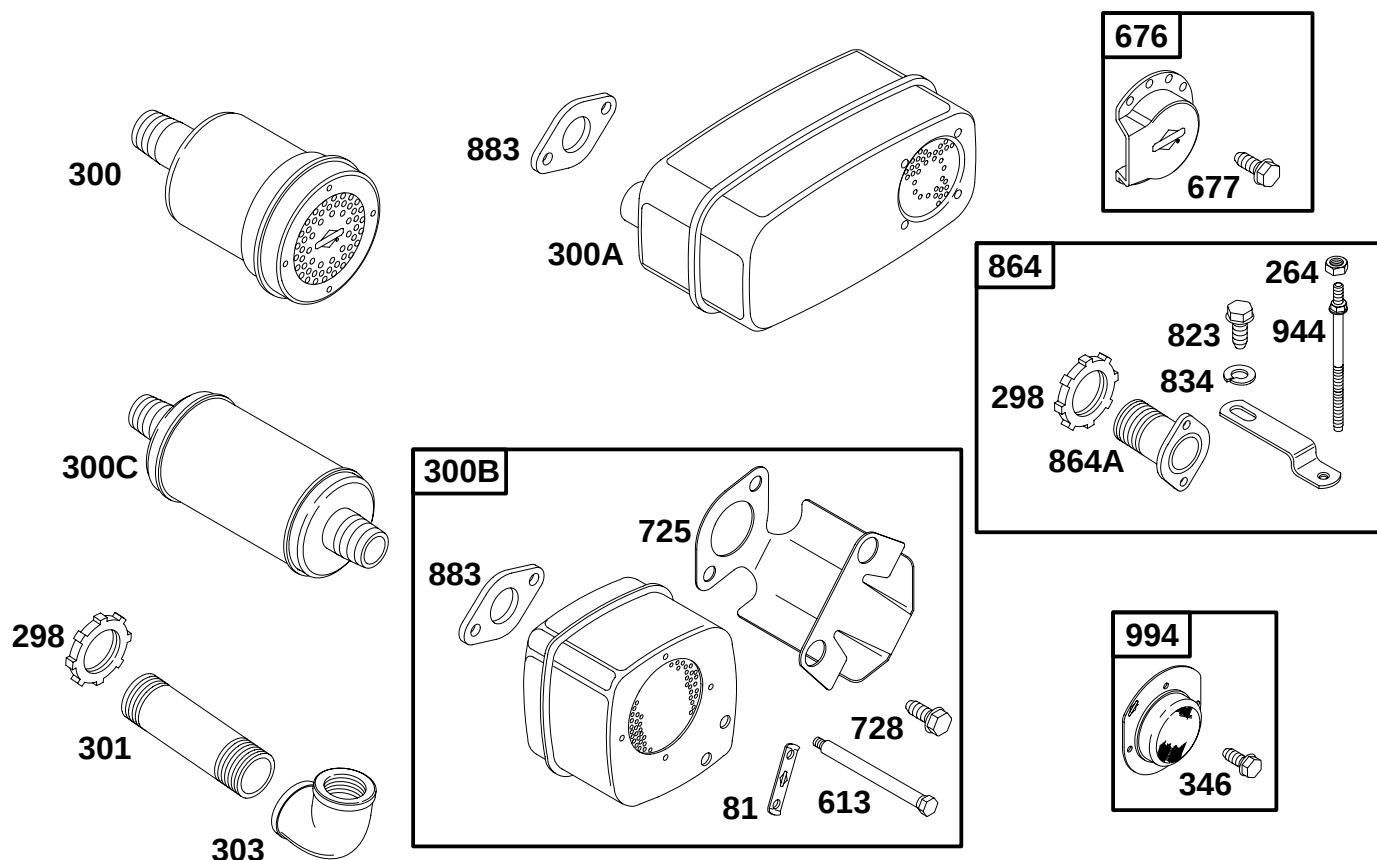


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
81	691178	Lock-Muffler Screw	303	91296	Elbow-Exhaust	677	94896	Screw
264	691105	Nut			----- Note -----			(Muffler Deflector)
298	261564	Locknut-Muffler Elbow		690281	Elbow-Exhaust	725	690420	Shield-Heat
300	299477	Muffler			Used on Type No(s).	728	94905	Screw
300A	498984	Muffler		1141, 1151, 2580.				(Heat Shield)
		(Super Lo-Tone)		91415	Elbow-Exhaust	823	94786	Screw
300B	399635	Muffler			Used on Type No(s).			(Muffler Adapter)
300C	291519	Muffler		1149.		834	691075	Washer
301	91416	Pipe-Exhaust	346	94896	Screw			(Muffler Adapter)
		(1 1/2" Long)			(Spark Arrester)	864	394584	Adapter-Muffler
			613	93927	Screw	864A	690637	Adapter-Muffler
					(Muffler)	883	★272293	Gasket-Exhaust
			676	393761	Deflector-Muffler	944	94926	Stud
								(Muffler Adapter)
						994	392390	Arrestor-Spark

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.


243400 to 243499

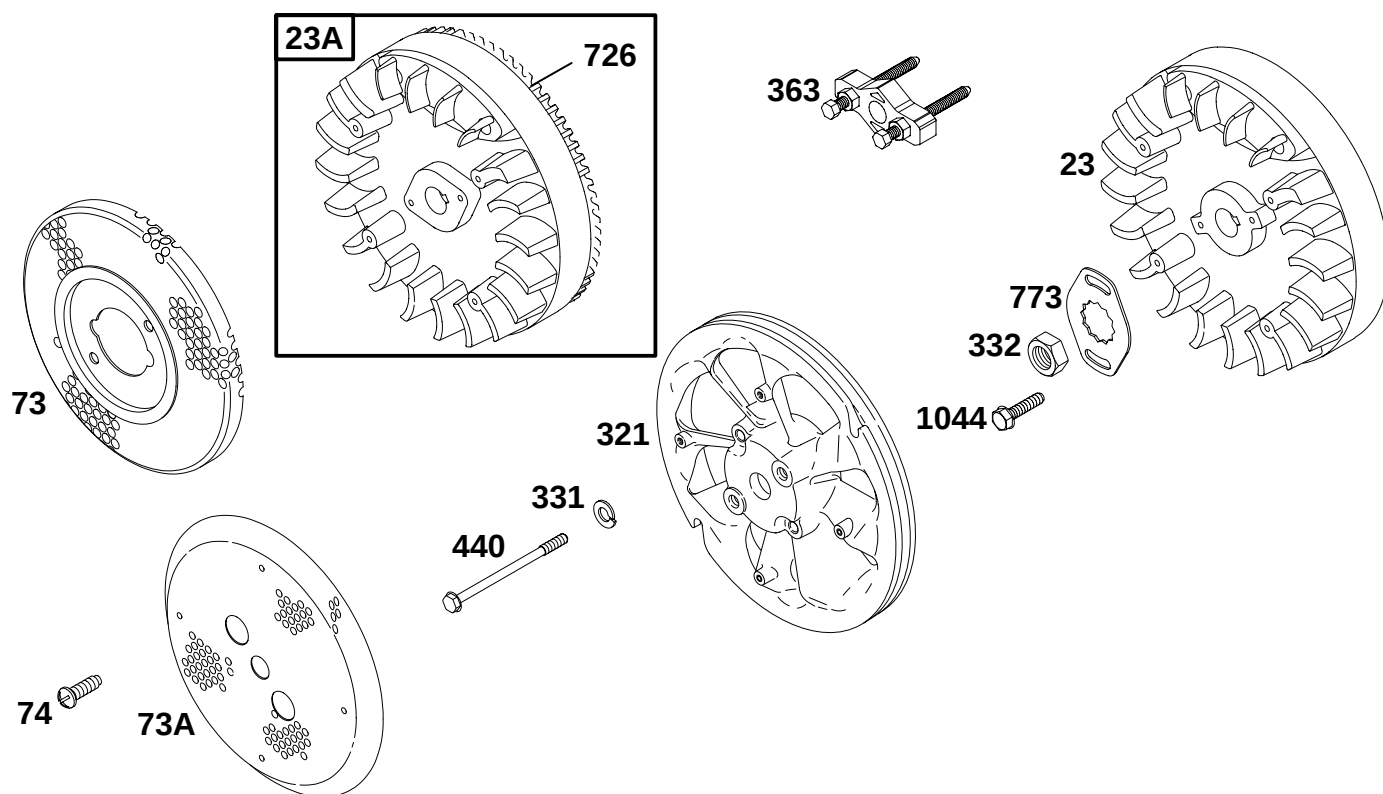

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
23	395250	Flywheel	74	94626	Screw (Rotating Screen)	440	691076	Screw (Booster Fan)
23A	395269	Flywheel	321	691151	Fan-Booster	726	391362	Gear-Ring (Includes Mtg. Parts)
73	690628	Screen-Rotating	331	691075	Washer (Booster Fan)	773	690265	Retainer
73A	691171	Screen-Rotating	332	230674	Nut (Flywheel)	1044	94627	Screw (Flywheel)
----- Note ----- 690404 Screen-Rotating Used on Type No(s). 2580.			363	19203	Flywheel Puller			

★ Included in Engine Gasket Set-Ref. No. 358.


● Included in Carburetor Overhaul Kit-Ref. No. 121.

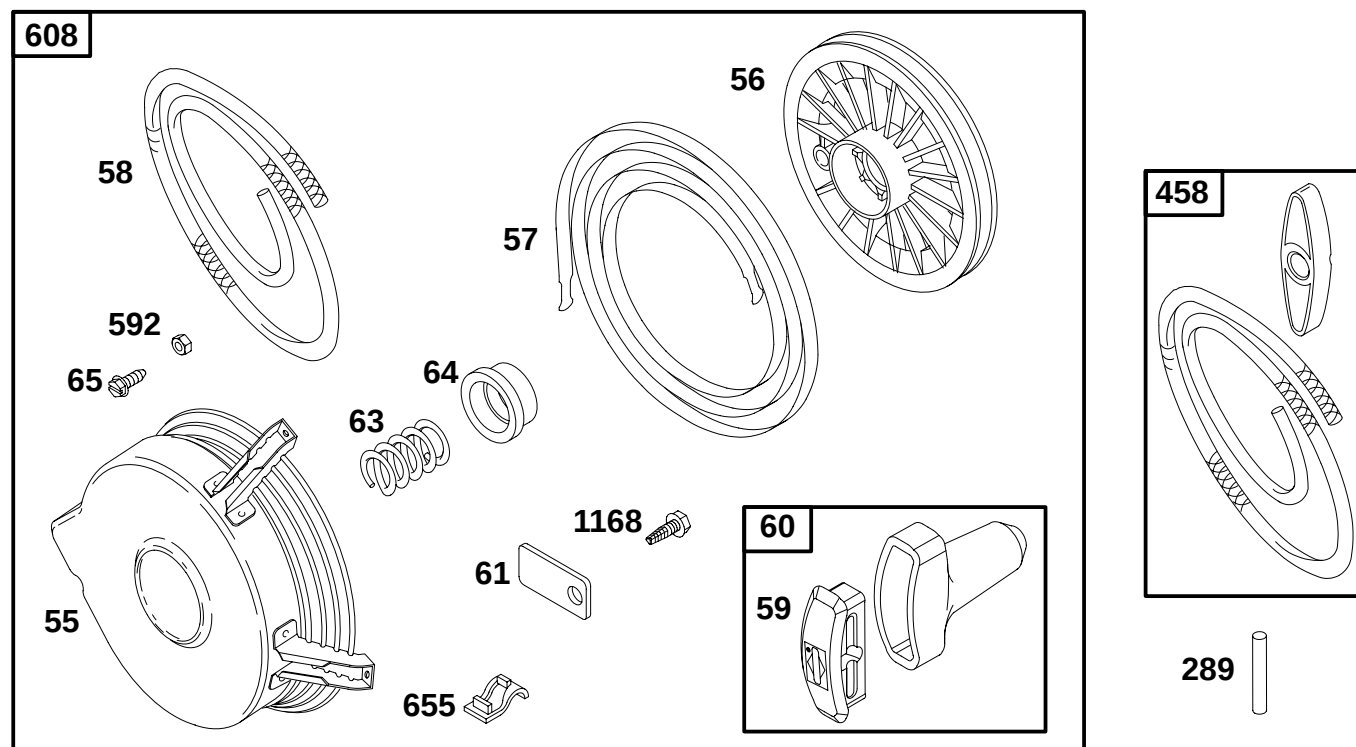


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
55	691355	Housing-Rewind Starter	59	490653	Insert-Grip	608	298340	Starter-Rewind
56	392630	Pulley-Starter (Includes 63" Rope)	60	490652	Grip-Starter Rope	----- Note -----		
57	490179	Spring-Rewind Starter	61	68848	Bumper-Starter Pulley	655	221014	Anchor-Rewind Spring
58	66884	Rope-Starter (63" Long) (For Use With Plastic Pulley) (If Longer Rope is Required, Order 66894 and Cut to Required Length)	63	260414	Spring-Ratchet	1168	93254	Screw (Starter Pulley Bumper)
----- Note -----			64	281204	Adapter-Ratchet Spring	Used on Type No(s). 1131, 1136, 1139, 1141, 1145, 1146, 1151, 1154, 1156, 1159, 1160, 1164, 2541, 2561.		
66564 Rope-Starter (63" Long) (For Use With Metal Pulley) (If Longer Rope is Required, Order 66574 and Cut to Required Length)			----- Note -----					
			690511 Adapter-Ratchet Spring Used on Type No(s). 1131, 1136, 1139, 1141, 1145, 1146, 1151, 1154, 1156, 1159, 1160, 1164, 2541, 2561.					
			65	94882	Screw (Rewind Starter)			
			289	230228	Pin-Starter Grip			
			458	69932	Kit-Handle/Rope			
			592	230796	Nut (Rewind Starter)			

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

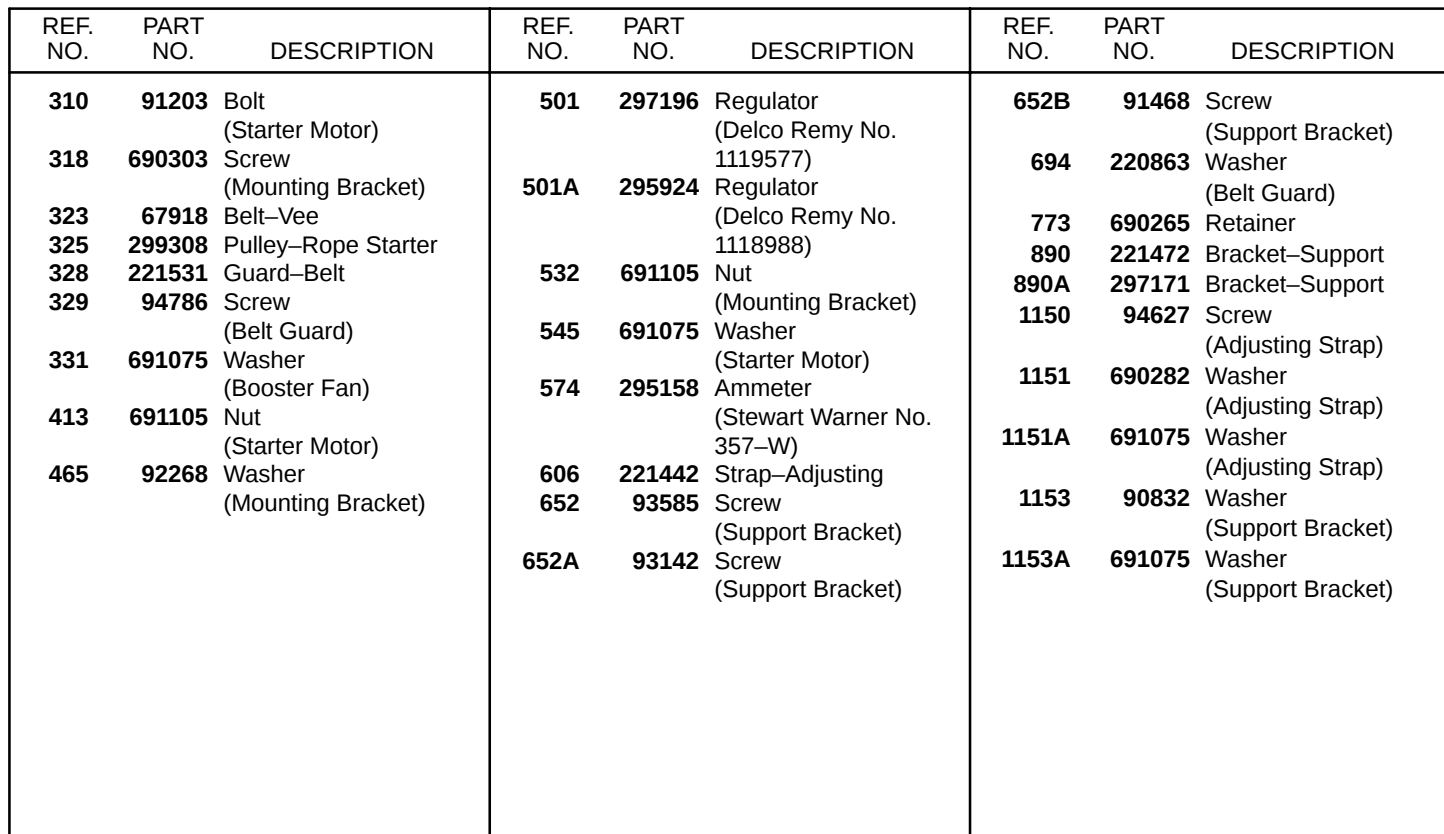

- Included in Carburetor Overhaul Kit—Ref. No. 121.

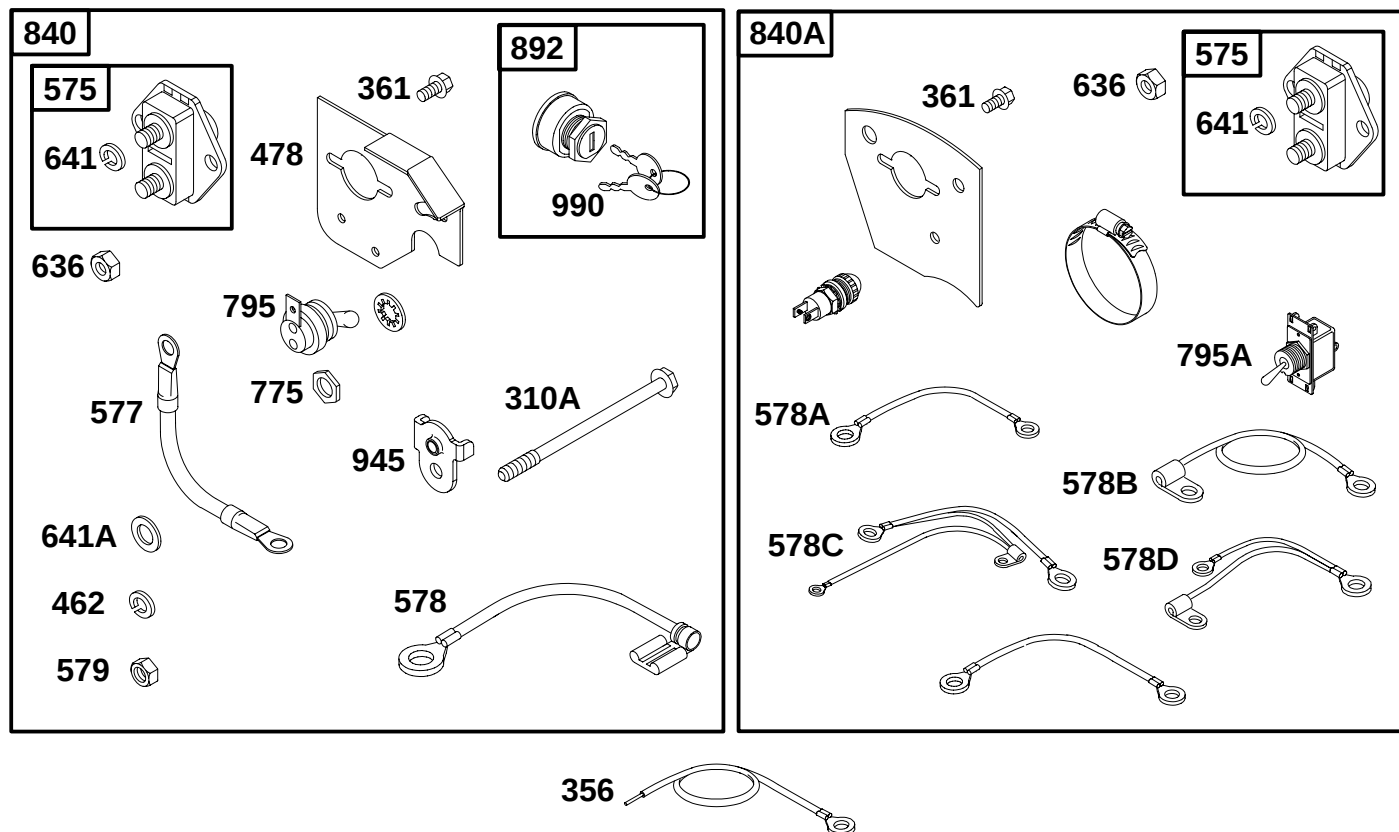


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
310A	692329	Bolt (Starter Motor; 5 3/8" Long)	577	690630	Cable-Starter	641A	690282	Washer (Starting Switch)
		----- Note -----	578	690647	Wire Assembly (Starting Switch to Ground Wire Terminal)	775	690315	Nut (Toggle Switch)
		690323 Screw (Starter Motor; 4 1/2" Long)	578A	298580	Wire Assembly	795	496590	Switch-Toggle
356	692390	Wire-Stop	578B	298578	Wire Assembly	795A	298590	Switch-Toggle
361	93415	Screw (Starting Switch)	578C	298583	Wire Assembly	840	395408	Kit-Panel (Toggle Switch)
462	691075	Washer (Starter Cable)	578D	298582	Wire Assembly	840A	298561	Kit-Panel
478	395410	Panel	579	92278	Nut (Starter Cable)	892	392833	Switch-Key
575	299139	Switch-Starting	636	92278	Nut (Starting Switch)	945	223159	Bracket-Starter Motor
			641	691075	Washer (Starting Switch)	990	392832	Key Set

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.


243400 to 243499

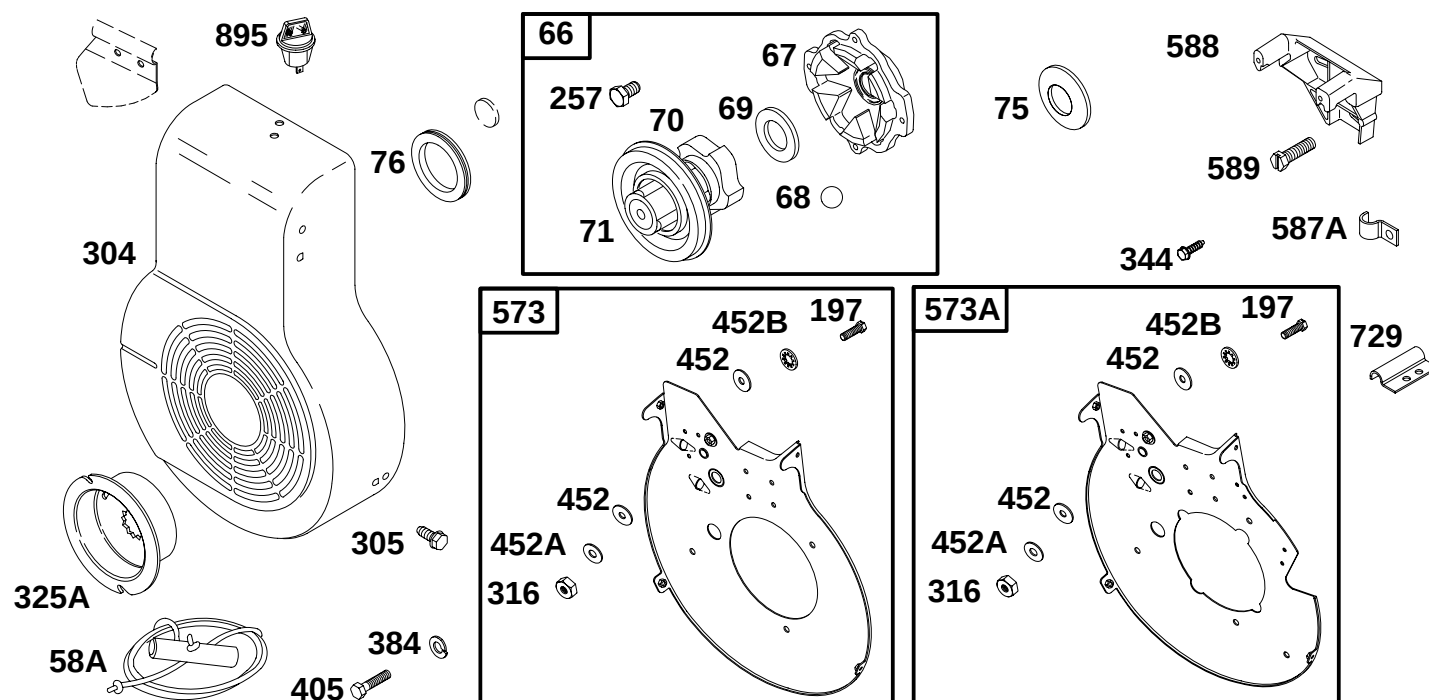

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
58A	69932	Rope-Starter	257	691078	Screw (Starter Clutch)	316	90576	Nut (Back Plate)
66	399671	Clutch-Starter	304	291407	Housing-Blower	325A	690261	Pulley-Rope Starter
		----- Note -----			----- Note -----	344	93410	Screw (Cable Clamp)
		393127 Clutch-Starter			294698 Housing-Blower	384	90832	Washer (Back Plate)
		Used on Type No(s).			Used on Type No(s).	405	690290	Screw (Back Plate)
		1131, 1136, 1139,			1150, 1162, 1163,	452	66154	Washer (Back Plate)
		1141, 1145, 1146,			2580.	452A	26404	Washer (Back Plate)
		1151, 1154, 1156,			297766 Housing-Blower	452B	92864	Washer (Back Plate)
		1159, 1160, 1164,			Used on Type No(s).	573	298159	Plate-Back
		2541, 2561.			2524.	573A	394168	Plate-Back (Used on Engines With Electric Starters)
67	394897	Housing-Clutch			391229 Housing-Blower			
		----- Note -----			(For Electric Starters)			
		690542 Housing-Clutch			Used on Type No(s).			
		Used on Type No(s).			1147, 1148, 1153,			
		1131, 1136, 1139,			1155, 1167, 2528,			
		1141, 1145, 1146,			2529, 2530, 2550.			
		1151, 1154, 1156,			392343 Housing-Blower			
		1159, 1160, 1164,			Used on Type No(s).			
		2541, 2561.			1131, 1136, 1139,			
68	63770	Ball-Clutch			1141, 1145, 1146,			
69	690271	Washer (Starter Clutch)			1151, 1154, 1156,			
70	298799	Ratchet-Clutch			1159, 1160, 1164,			
71	691359	Cover-Ratchet			2541, 2561.			
75	225307	Washer						
76	68238	Seal-Ratchet						
197	90072	Screw (Back Plate)	305	94786	Screw (Blower Housing)			

★ Included in Engine Gasket Set-Ref. No. 358.









● Included in Carburetor Overhaul Kit-Ref. No. 121.

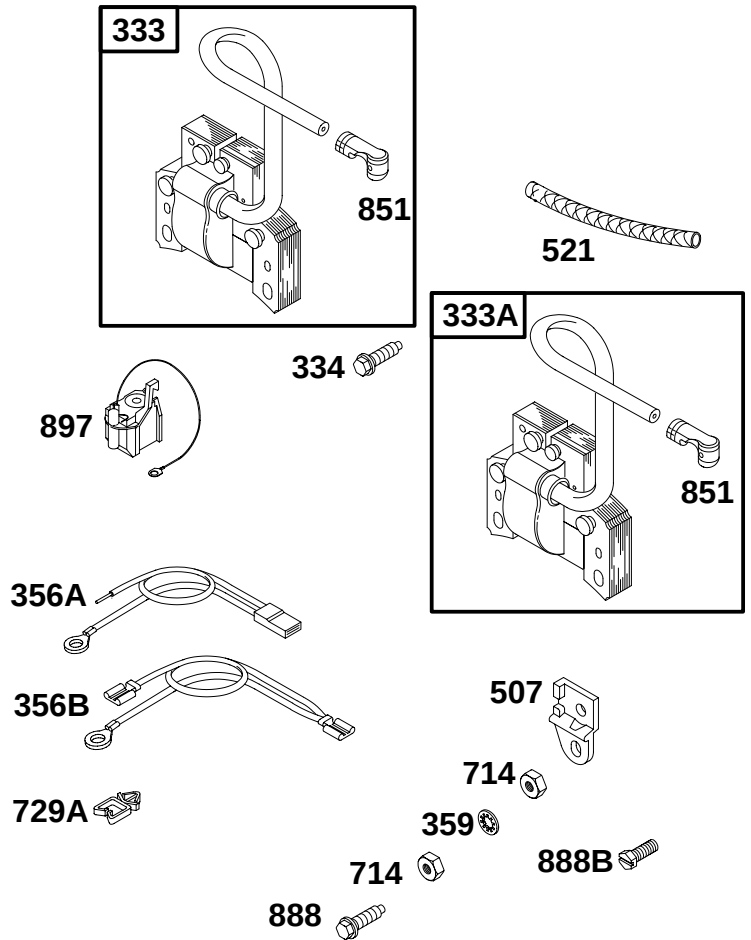

888 

- Included in Carburetor Overhaul Kit—Ref. No. 121.

243400 to 243499

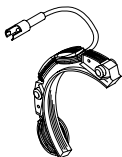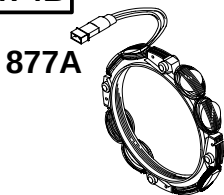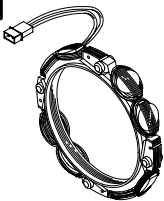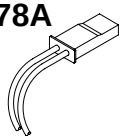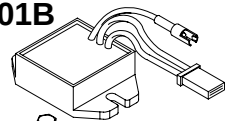
DC ONLY	AC ONLY	DUAL CIRCUIT	10 AMP
474  877	474A 	474B  877A	474C 
878 	878B 	878A 	878 
877B 			501B  526 

NOTE: ALL STATORS USE NO. 1119 MOUNTING SCREW. 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
474	391529	Alternator	877	393814	Wire/Connector–Alternator	878	393422	Harness–Alternator
474A	391595	Alternator				878A	393362	Harness–Alternator
474B	393474	Alternator	877A	393456	Wire/Connector–Alternator	878B	390867	Harness–Alternator
474C	393295	Alternator				1119	93621	Screw (Alternator)
501B	394890	Regulator	877B	399916	Wire/Connector–Alternator			
526	690297	Screw (Regulator)						

★ Included in Engine Gasket Set–Ref. No. 358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

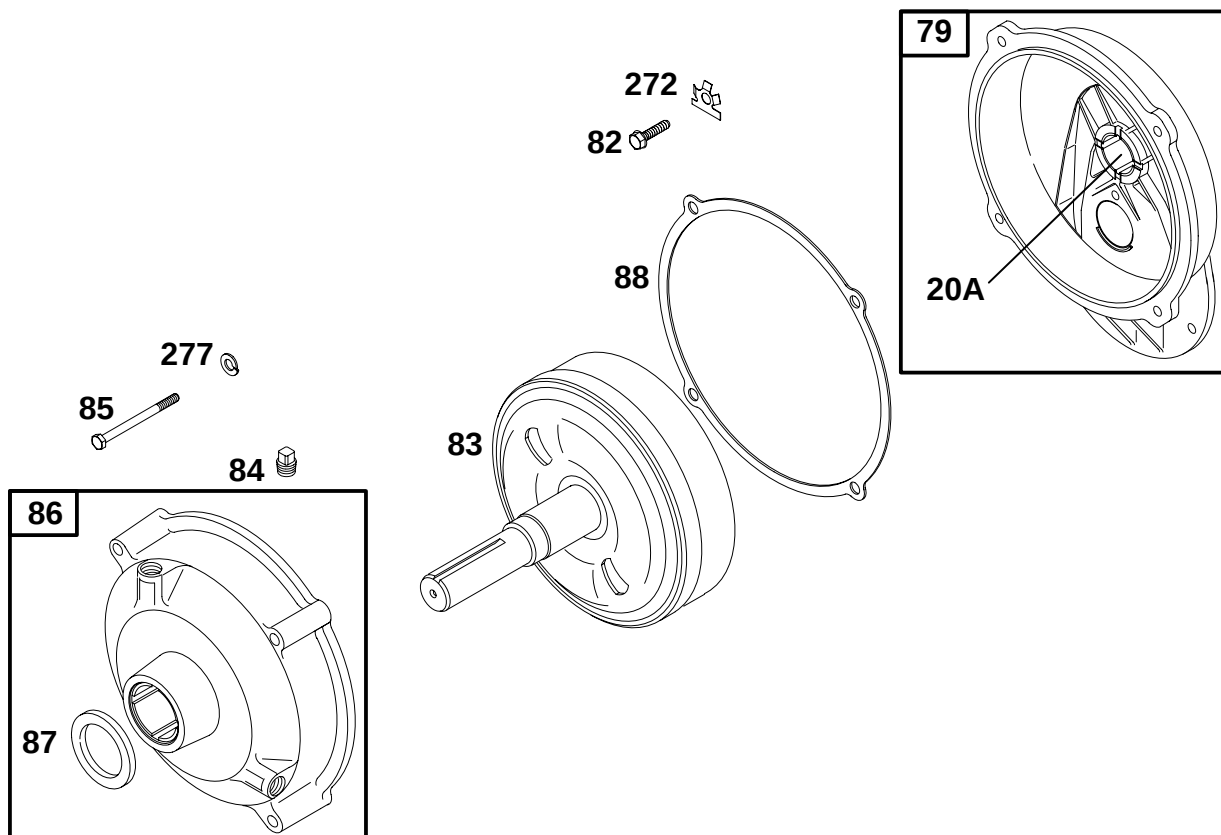


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
20A	★299819	Seal—Oil (PTO Side)	84	690283	Plug—Breather	88	27328	Gasket—Gear Reduction Cover
79	291357	Case—Gear Reduction	85	691076	Screw (Gear Reduction Case)	272	690391	Lock—Screw Head (Gear Reduction Case)
82	94627	Screw (Gear Reduction Case)	86	690606	Gear Cover	277	691075	Washer (Gear Reduction Case)
83	690387	Shaft—Auxiliary Drive	87	★391086	Seal—Gear Reduction			

★ Included in Engine Gasket Set—Ref. No. 358.

● Included in Carburetor Overhaul Kit—Ref. No. 121.



243400 to 243499

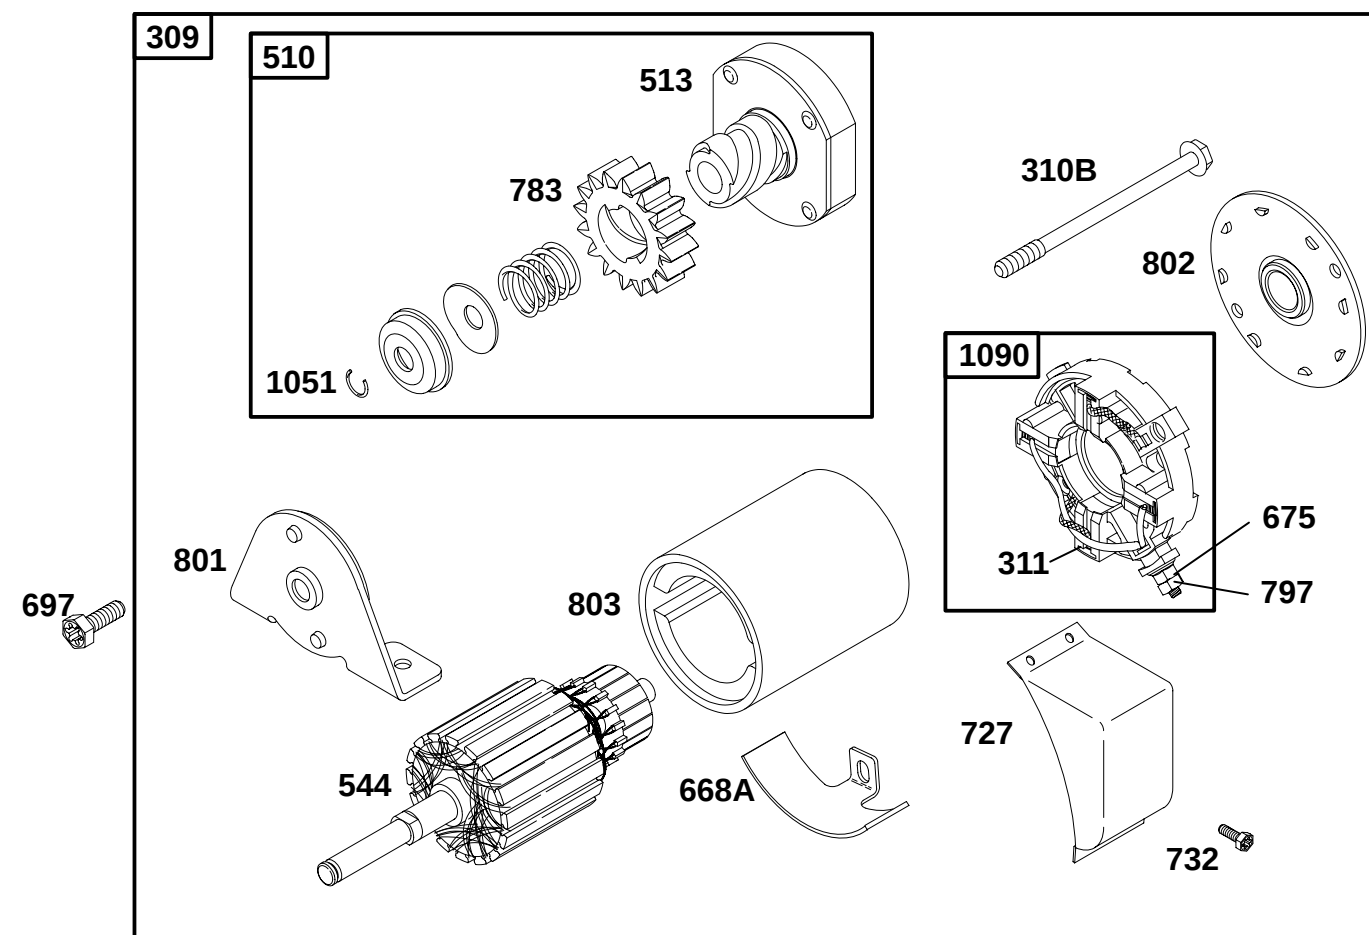

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
309	396306	Motor-Starter (4 3/8" Housing Length)	668A	396515	Spacer (Starter Motor)	797	92278	Nut (Brush Retainer)
310B	691263	Bolt (Starter Motor)	675	225137	Washer (Brush Retainer)	801	394802	Cap-Drive
311	497608	Brush Set	697	94627	Screw (Drive Cap)	802	497607	Cap-End
510	497606	Drive-Starter	727	692338	Cover-Starter Drive	803		Housing-Starter (Served By 396306 Starter Motor Only)
513	398003	Clutch-Drive	732	93410	Screw (Starter Drive Cover)	1051	263080	Ring-Retaining
544		Armature-Starter (Served By 396306 Starter Motor Only)	783	693059	Gear-Pinion	1090	497605	Retainer-Brush

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

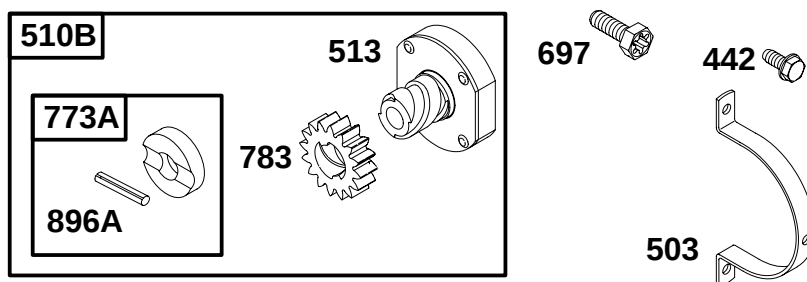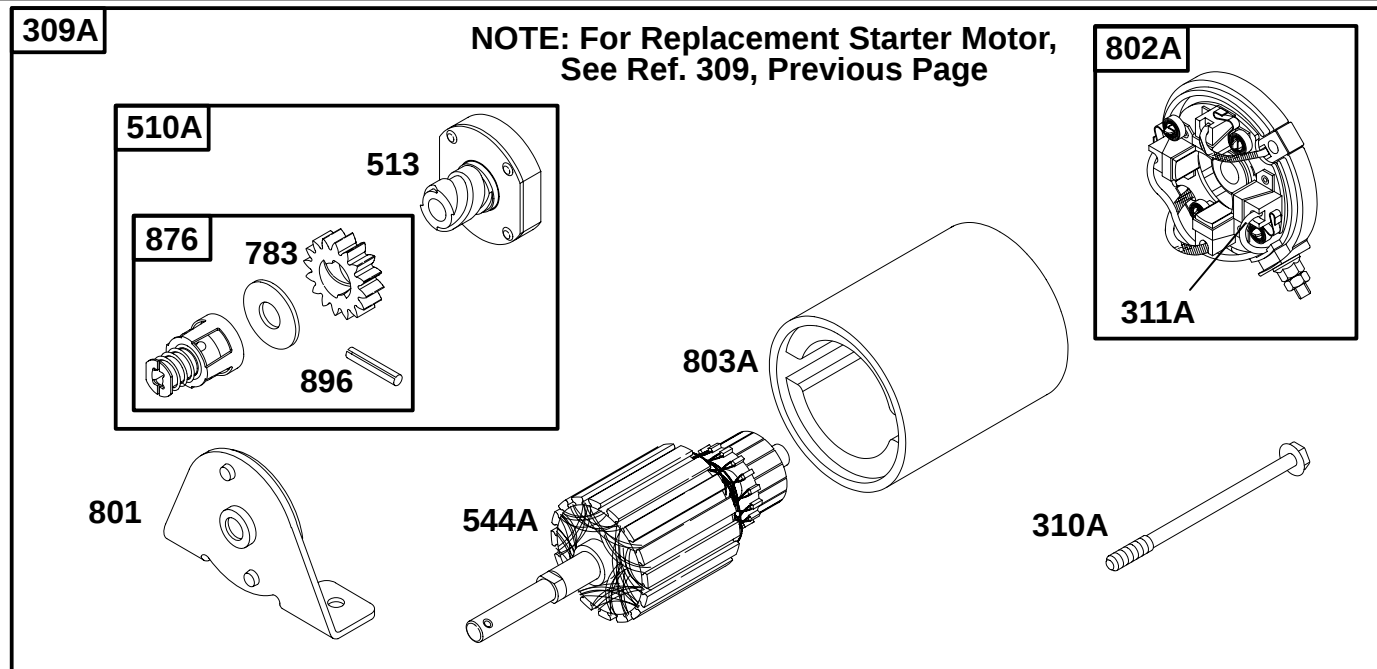


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
309A		Motor-Starter (For Replacement Starter Motor, See Ref 309, Previous Page)	503	690406	Strap-Starter	801	394802	Cap-Drive
			510A	495878	Drive-Starter	802A	395537	Cap-End
			510B	391461	Drive-Starter	803A	494205	Housing-Starter
			513	398003	Clutch-Drive	876	495877	Kit-Pinion Spring
310A	692329	Bolt (Starter Motor)	544A	490309	Armature-Starter	896	94288	Pin-Drive Retainer (Copper)
			697	94627	Screw (Drive Cap)	896A	94192	Pin-Drive Retainer (Black)
311A	395538	Brush Set	773A	391462	Retainer			
442	691693	Screw (Starter Strap)	783	693059	Gear-Pinion			

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

243400 to 243499

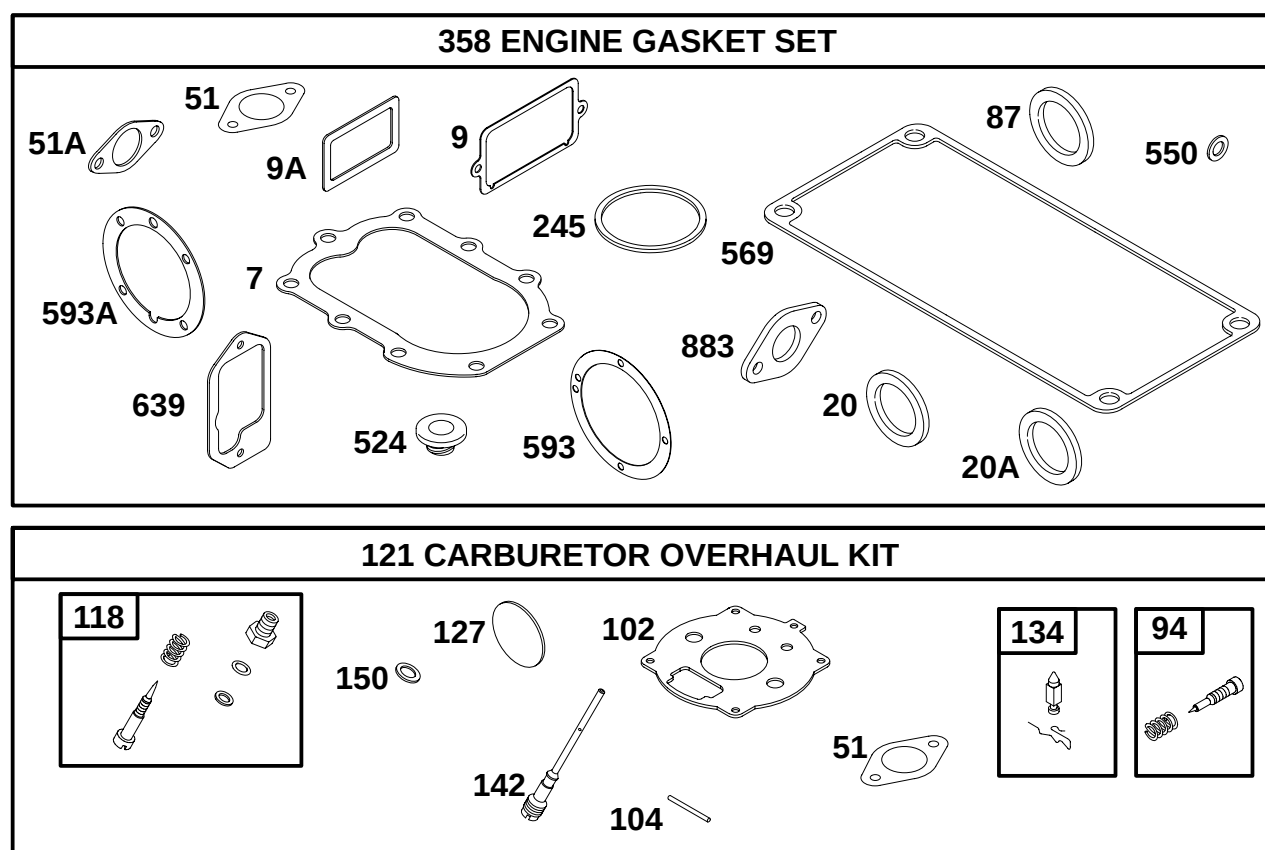

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
7	★272165	Gasket-Cylinder Head	121	394989	Kit-Carburetor Overhaul (Used After Code Date 81101100). ----- Note ----- 391071 Kit-Carburetor Overhaul (Used Before Code Date 81101200).	245	★68477	Gasket-Fuel Bowl
9	★27803	Gasket-Breather				358	299101	Gasket Set-Engine
9A	★66214	Gasket-Breather	127	●221747	Plug-Welch	524	★281370	Seal-Dipstick Tube
20	★291675	Seal-Oil (PTO Side)	134	●394681	Kit-Needle/Seat	550	★22353	Washer (Valve Cover)
20A	★299819	Seal-Oil (PTO Side)	142	●394730	Nozzle-Carburetor (Labeled B) (Used After Code Date 81101100). ----- Note ----- ●390950 Nozzle-Carburetor (Labeled 40) (Used Before Code Date 81101200).	569	★27351	Gasket-Engine Base
51	★●270267	Gasket-Intake	150	●68667	Gasket-Nozzle	593	★691311	Gasket-Bearing Support (.015" Thick)
51A	★27381	Gasket-Intake				593A	★690268	Gasket-Bearing Support (.020" Thick) ----- Note ----- ★27374 Gasket-Bearing Support (.005" Thick) ★27375 Gasket-Bearing Support (.009" Thick)
87	★391086	Seal-Gear Reduction				639	★270176	Gasket-Breaker Box
94	●292681	Kit-Idle Mixture				883	★272293	Gasket-Exhaust
102	●270268	Gasket-Carburetor Body						
104	●231435	Pin-Float Hinge						
118	●99525	Valve-High Speed						

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.