

294400 to 294499

Illustrated Parts List

Model Series

294400 to 294499

TYPE NUMBERS

0030, 0040,
0100, 0102,
0107 through 0111,
0313 through 0319,
0325 through 0327,
0340 through 0348,
0354 through 0365,
0370 through 0378,
0401 through 0418,
0422 through 0437,
0445 through 0449,
0457 through 0462,
0478 through 0481,

TYPE NUMBERS

1013 through 1015,
1018 through 1020,
1025 through 1029,
1042 through 1049,
1054 through 1065,
1070 through 1078,
1085, 1100, 1102,
1110 through 1151,
1155 through 1213,
1217, 1224,
1230 through 1238,
1241 through 1263.

TO FIND**THE CORRECT NUMBER OF THE PART YOU NEED:
FOLLOW THE INSTRUCTIONS BELOW**


- A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 0123 01 are listed only as 0123 in most instances. The two digits (01 or 02, etc.) to the right of the space may be required for more accurate parts identification in some instances. Select the Illustrated Parts List covering the correct Model Series and Type Number.
- B. Refer to the Illustrations and compare the original part with Illustration. The number next to the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames having individual reference numbers can be purchased separately.
- C. After the Reference Number has been identified, refer to the Numerical text, where Reference and Primary Part Number are listed. THE PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE."
- D. If a "Note" appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types. If your Type number is listed under "Note," order the part referred to at the "Note."
- E. If your Engine Type Number does not appear after any part number listed under "Note," use the Primary Part Number.
- F. For Engine Type Numbers not covered by this book, check other Parts Lists having the same engine model or contact your source of supply.

PRINTED IN U.S.A.

BRIGGS & STRATTON

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.


294400 to 294499

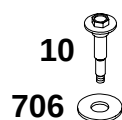

10
706



11A

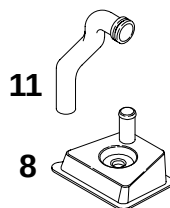


11

8




572

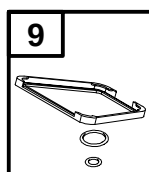

9

1019 LABEL KIT

1058 OWNER'S MANUAL

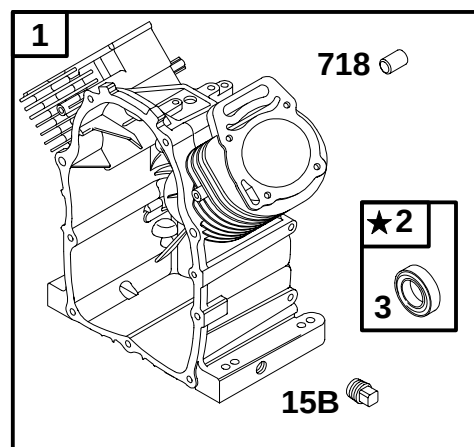

1

718

718A

★2

3

15B

15



15A

★ **REQUIRES SPECIAL TOOL TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.**

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	692178	Cylinder Assembly (Used After Code Date 97043000). ----- Note ----- 807521 Cylinder Assembly (Used Before Code Date 97050100).	3	★805101	Seal-Oil	15	690946	Plug-Oil Drain
			8	808984	Breather Assembly	15A	805059	Plug-Oil Drain
			9	★807688	Gasket-Breather	15B	94239	Plug-Oil Drain
			10	690751	Screw (Breather Assembly) (Used After Code Date 90111400). ----- Note -----	572	690686	Baffle-Breather
2	808534	Kit-Bushing/Seal (Magneto Side) (Used After Code Date 99043000). ----- Note ----- 807687 Kit-Bushing/Seal (Magneto Side) (Used Before Code Date 99050100).			805194 Screw (Breather Assembly) (Used Before Code Date 90111500).	706	805484	Washer (Breather Assembly) (Used Before Code Date 90111500).
			11	691556	Tube-Breather (Used After Code Date 96101000).	718	690684	Pin-Locating
			11A	806083	Tube-Breather (Used Before Code Date 96101100).	718A	805102	Pin-Locating (Used Before Code Date 90091100).
						1019	808035	Kit-Label
						1058	274790	Owner's Manual (Emission) ----- Note ----- 272105 Owner's Manual (Non Emission)

★ Included in Engine Gasket Set-See Ref. 358.
● Included in Carburetor Overhaul Kit-See Ref. 121.

△ Included in Valve Gasket Set-See Ref. 1095.

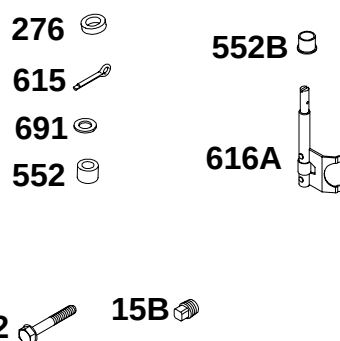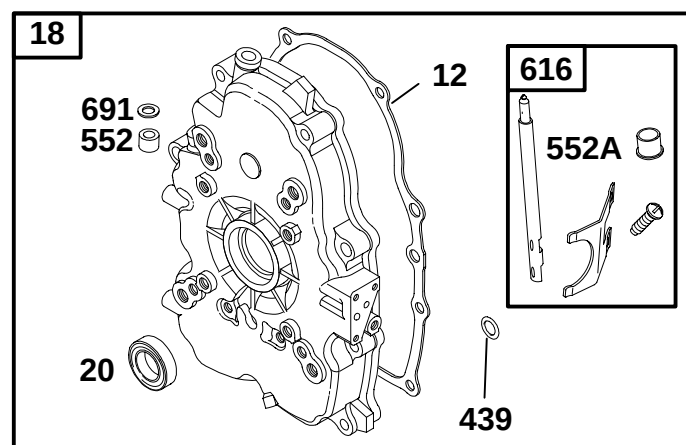


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
12	★806190	Gasket-Crankcase (Used After Code Date 97043000). ----- Note ----- ★691684 Gasket-Crankcase (Used Before Code Date 97050100).				552	690701	Bushing-Governor Crank (Output End)
15B	94239	Plug-Oil Drain	20	★805049	Seal-Oil	552A	806686	Bushing-Governor Crank (Flanged) (Used After Code Date 99072000).
18	808847	Cover-Crankcase (Used After Code Date 99072000). ----- Note ----- 808502 Cover-Crankcase (Used Before Code Date 99072100). 808850 Cover-Crankcase (Used After Code Date 99072000). Used on Type No(s). 1211. 808506 Cover-Crankcase (Used Before Code Date 99072100 and After Code Date 97043000). Used on Type No(s). 1211. 807884 Cover-Crankcase (Used Before Code Date 97050100). Used on Type No(s). 1211.	22	692540	Screw (Crankcase Cover/ Sump)	552B	690702	Bushing-Governor Crank (Flanged) (Used Before Code Date 99072100).
			276	690704	Washer-Sealing (Governor Crank)	615	805417	Retainer-Governor Shaft
			439	★692154	O-Ring Seal (Crankcase Cover/ Sump) (Used After Code Date 97043000). ----- Note ----- ★805198 O-Ring Seal (Crankcase Cover/ Sump) (Used Before Code Date 97050100).	616	806685	Crank-Governor (Used After Code Date 99072000).
						616A	690899	Crank-Governor (Used Before Code Date 99072100).
						691	★690680	Seal-Governor Shaft

★ Included in Engine Gasket Set-See Ref. 358.
● Included in Carburetor Overhaul Kit-See Ref. 121.

△ Included in Valve Gasket Set-See Ref. 1095.

294400 to 294499

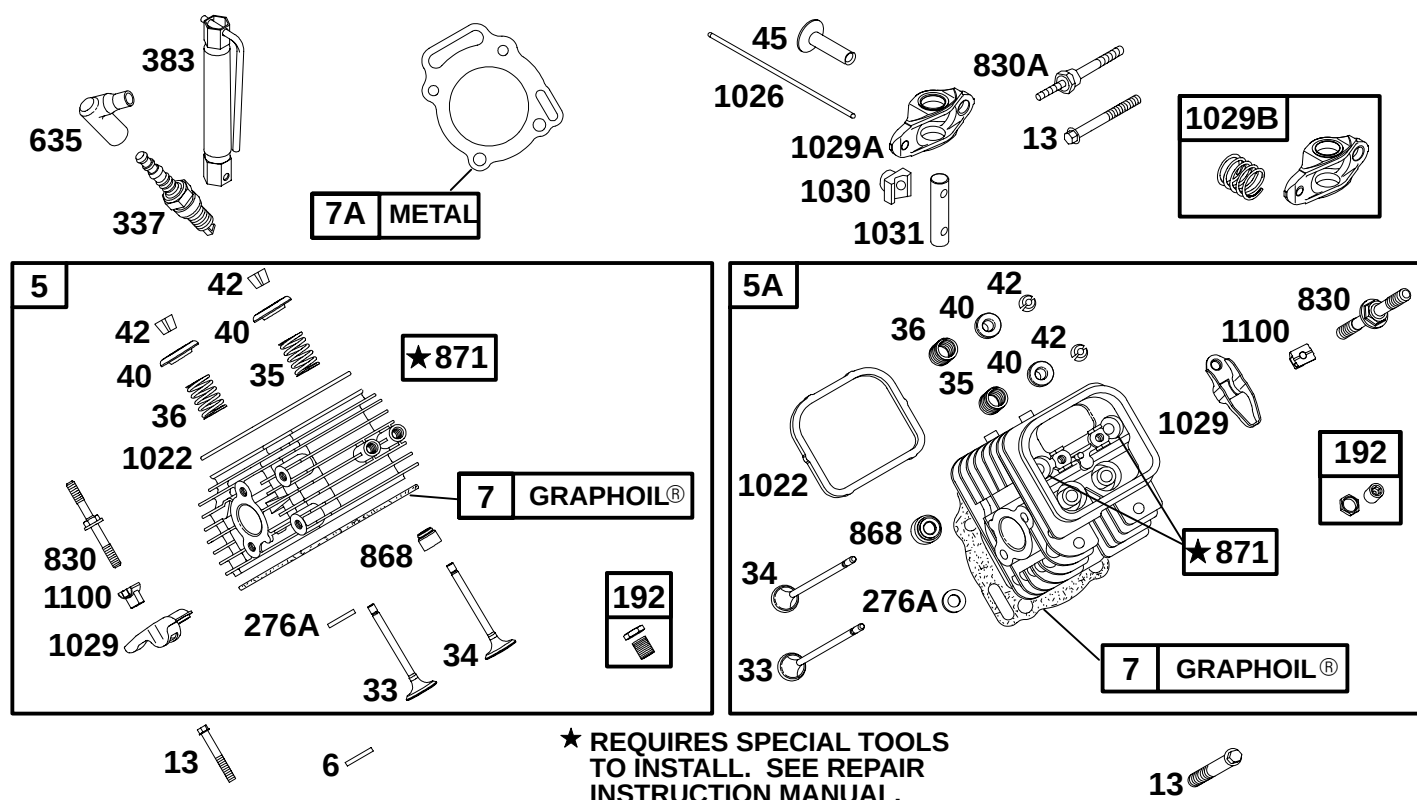


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
5	808381	Head-Cylinder (#1)	36	805937	Spring-Valve (Exhaust)	868	805094	Seal-Valve
5A	808382	Head-Cylinder (#2)			(Used After Code Date 94011700).	871	805084	Bushing-Valve Guide
6	805193	Washer (Cylinder Head)	40	805092	Retainer-Valve	1022	★806039	Gasket-Rocker Cover
		(Used Before Code Date 94050100).	42	807683	Keeper-Valve	1026	805352	Rod-Push (Steel)
7	★806085	Gasket-Cylinder Head (Used After Code Date 96033100).	45	262679	Tappet-Valve	----- Note -----		
7A	△807986	Gasket-Cylinder Head (Used Before Code Date 96040100).	192	807623	Adjuster-Rocker Arm	805617		Rod-Push (Aluminum)
13	805097	Screw (Cylinder Head)	276A	★805420	Washer-Sealing (Head)	(Exhaust)		
33	807681	Valve-Exhaust	337	491055	Sparkplug	1029	691543	Arm-Rocker (Used After Code Date 96033100).
34	807680	Valve-Intake	----- Note -----			1029A	808096	Arm-Rocker (Used After Code Date 94011700 and Before Code Date 96040100).
35	805937	Spring-Valve (Intake) (Used After Code Date 94011700).	496018		Sparkplug Used on Type No(s). 0414, 0478, 1114, 1155, 1178.	1029B	808159	Arm-Rocker (Used Before Code Date 94011800).
			383	19374	Wrench-Sparkplug	1030	691496	Support-Rocker Arm
			635	805529	Boot-Sparkplug	1031	690693	Shaft-Rocker Arm
			830	691544	Stud (Rocker Arm) (Used After Code Date 96033100).	1100	690973	Pivot-Rocker Arm
			830A	691497	Stud (Rocker Arm) (Used Before Code Date 96040100).			

★ Included in Engine Gasket Set-See Ref. 358.

● Included in Carburetor Overhaul Kit-See Ref. 121.

△ Included in Valve Gasket Set-See Ref. 1095.




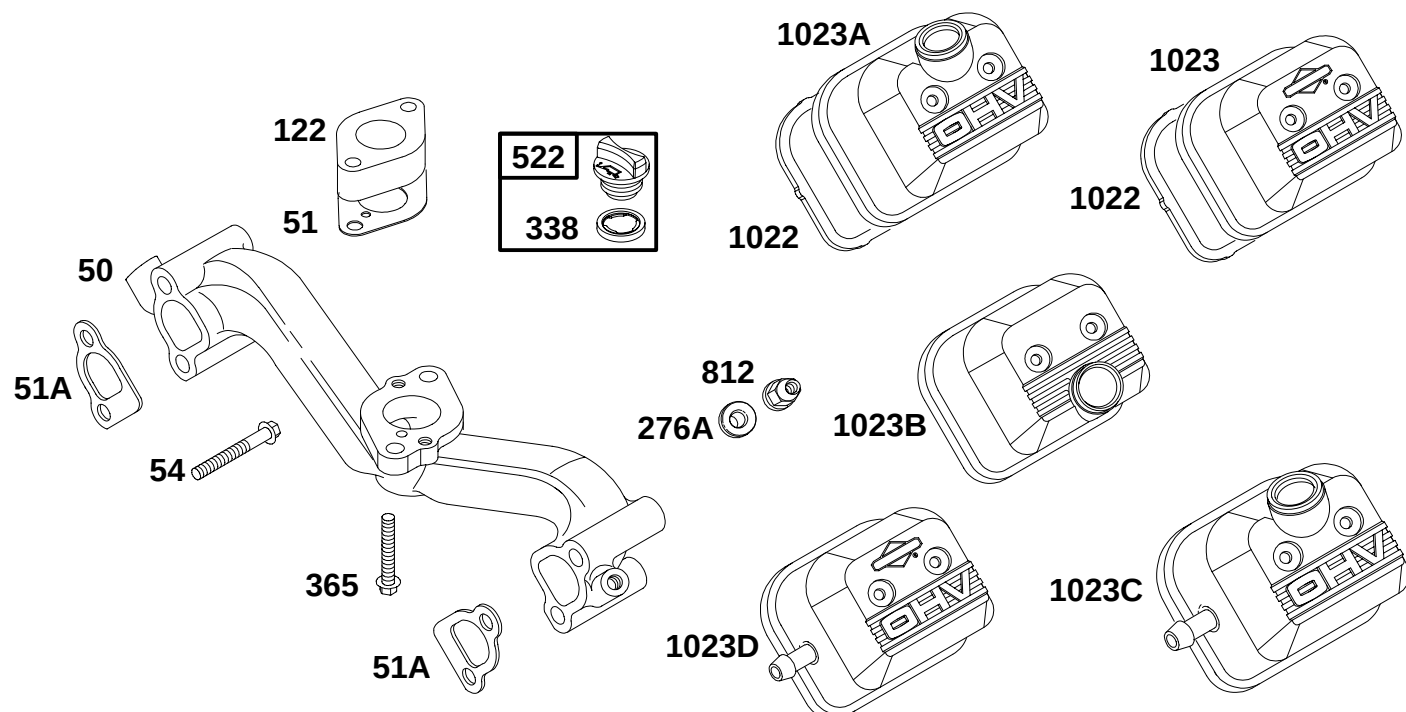


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
50	807802	Manifold-Intake (Used After Code Date 92043000). ----- Note ----- 805409 Manifold-Intake (Used Before Code Date 92050100).	338	★Δ691312	Gasket-Dipstick	1023C	690910	Cover-Rocker Arm (Cylinder #1 Fuel Pump Applications) (Used After Code Date 98053100).
51	★805700	Gasket-Intake (Manifold to Carburetor)	365	690711	Screw (Carburetor)	1023D	691558	Cover-Rocker Arm (Cylinder #1 Fuel Pump Applications) (Used Before Code Date 98060100).
51A	★Δ805023	Gasket-Intake (Manifold to Head)	522	491832	Plug-Dipstick/Fill			
54	690676	Screw (Intake Manifold)	812	Δ805019	Nut (Rocker Arm Cover)			
122	690691	Spacer-Carburetor	1022	★Δ806039	Gasket-Rocker Cover			
276A	★Δ805420	Washer-Sealing (Rocker Arm Cover)	1023	691494	Cover-Rocker Arm (Used Before Code Date 98060100).			
			1023A	690758	Cover-Rocker Arm (Used After Code Date 98053100).			
			1023B	691531	Cover-Rocker Arm (Used on engines equipped with 9 quart fuel tanks)			

★ Included in Engine Gasket Set-See Ref. 358.
● Included in Carburetor Overhaul Kit-See Ref. 121.

Δ Included in Valve Gasket Set-See Ref. 1095.

294400 to 294499

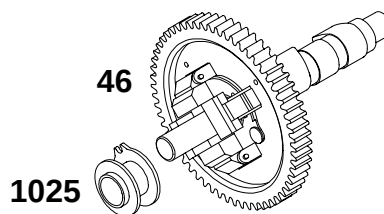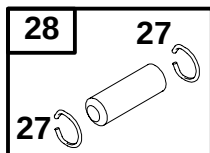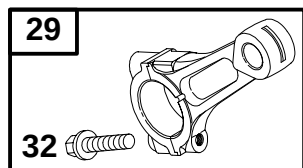
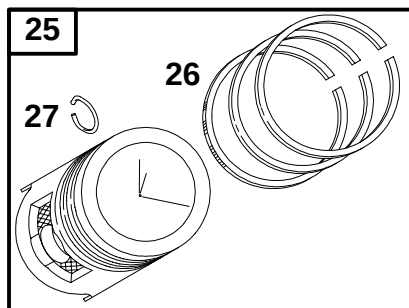


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
25	807619	Piston Assembly (Standard) ----- Note ----- 807807 Piston Assembly (.010 Oversize) 807809 Piston Assembly (.020 Oversize) 807811 Piston Assembly (.030 Oversize)	27	690683	Lock-Piston Pin	32	690698	Screw (Connecting Rod)
			28	807621	Pin-Piston	46	691557	Camshaft ----- Note ----- 692157 Camshaft Used on Type No(s). 0327, 1201, 1210, 1256.
26	807620	Ring Set (Standard) ----- Note ----- 807808 Ring Set (.010 Oversize) 807810 Ring Set (.020 Oversize) 807812 Ring Set (.030 Oversize)	29	807900	Rod-Connecting (Standard) ----- Note ----- 807803 Rod-Connecting (.020 Undersize)	1025	690689	Spool-Governor

★ Included in Engine Gasket Set-See Ref. 358.
● Included in Carburetor Overhaul Kit-See Ref. 121.

△ Included in Valve Gasket Set-See Ref. 1095.

377 

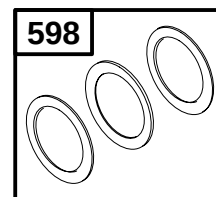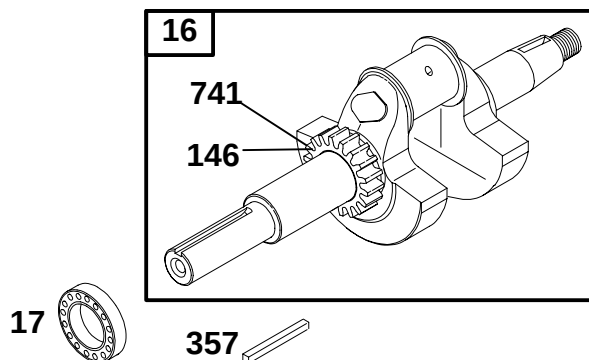


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
16	692161	Crankshaft (Used After Code Date 97043000). ----- Note ----- 807589 Crankshaft (Used Before Code Date 97050100). 692162 Crankshaft (Used After Code Date 97043000). Used on Type No(s). 1025, 1077. 807590 Crankshaft (Used Before Code Date 97050100). Used on Type No(s). 0325, 0377, 1025, 1077. 692163 Crankshaft (Used After Code Date 97043000). Used on Type No(s). 1018, 1019, 1029, 1042, 1059, 1074, 1078, 1115, 1123, 1124, 1126, 1127, 1129, 1133, 1134, 1135, 1138, 1148, 1161, 1165, 1170, 1171, 1172, 1183, 1185, 1187, 1195, 1199, 1204, 1210, 1212, 1236, 1238, 1256, 1257, 1258, 1259.			807745 Crankshaft (Used Before Code Date 97050100). Used on Type No(s). 0314, 0318, 0319, 0327, 0342, 0354, 0359, 0360, 0361, 0374, 0378, 0417, 0418, 0423, 0427, 0448, 0457, 0461, 1014, 1018, 1019, 1029, 1042, 1054, 1059, 1060, 1061, 1074, 1078, 1115, 1117, 1118, 1123, 1124, 1126, 1127, 1129, 1133, 1134, 1135, 1136, 1143, 1148, 1157, 1158, 1161, 1165, 1170, 1171, 1172, 1183, 1185, 1187, 1195, 1199, 1204, 1210, 1212, 1236, 1238. 692165 Crankshaft (Used After Code Date 97043000). Used on Type No(s). 1128, 1146, 1149, 1162, 1176, 1192, 1193, 1202, 1231.			807806 Crankshaft (Used Before Code Date 97050100). Used on Type No(s). 0428, 0449, 0462, 1128, 1146, 1149, 1162, 1176, 1192, 1193, 1202. 692166 Crankshaft (Used After Code Date 97043000). Used on Type No(s). 1211. 807849 Crankshaft (Used Before Code Date 97050100). Used on Type No(s). 1211.
						17	690752	Bearing-Ball
						146	94196	Key-Timing
						357	91540	Key-Drive Pulley
						377	806066	Key-Woodruff
						598	807625	Shim-End Play (Crankshaft)
						741	805675	Gear-Timing
								----- Note ----- 691530 Gear-Timing (Used After Code Date 97043000). Used on Type No(s). 1128, 1146, 1149, 1162, 1176, 1192, 1193, 1202, 1231, 1263.

★ Included in Engine Gasket Set-See Ref. 358.
● Included in Carburetor Overhaul Kit-See Ref. 121.

△ Included in Valve Gasket Set-See Ref. 1095.


294400 to 294499

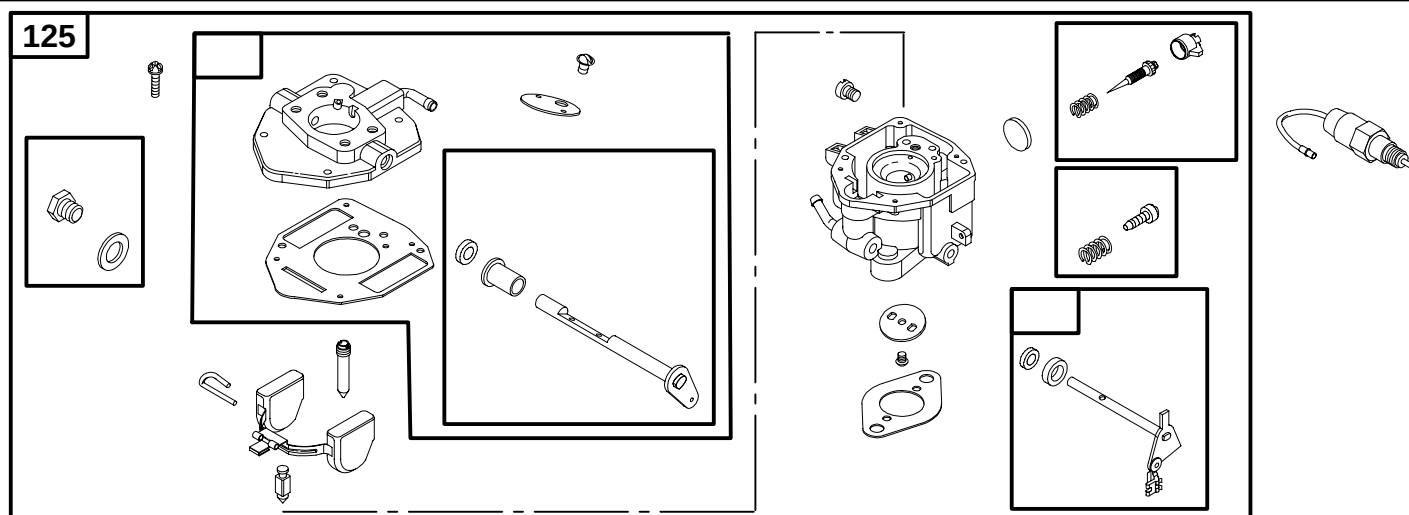

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
125	809008	Carburetor (Pump Feed) (Used After Code Date 00081400). ----- Note ----- 808249 Carburetor (Used After Code Date 90113000 and Before Code Date 00081500). 807832 Carburetor (Pump Feed) (Used Before Code Date 90120100). 809016 Carburetor (Pump Feed) (Used After Code Date 00081400). Used on Type No(s). 0478, 1155, 1178, 1261.			808290 Carburetor (Pump Feed) (Used Before Code Date 00081500). Used on Type No(s). 0478, 1155, 1178, 1261. 809009 Carburetor (Pump Feed) (Used After Code Date 00073100). Used on Type No(s). 0414, 1028, 1064, 1100, 1110, 1114, 1145, 1175, 1196, 1200, 1205, 1252. 808295 Carburetor (Pump Feed) (Used Before Code Date 00080100). Used on Type No(s). 0414, 1028, 1064, 1100, 1110, 1114, 1145, 1175, 1196, 1200, 1205.			809015 Carburetor (Gravity Feed) (Used After Code Date 00073100). Used on Type No(s). 0148, 0460, 0500, 0503. 809010 Carburetor (Gravity Feed) (Used After Code Date 00081400). Used on Type No(s). 1122 808250 Carburetor (Gravity Feed) (Used Before Code Date 00081500). Used on Type No(s). 1122.

★ Included in Engine Gasket Set—See Ref. 358.
● Included in Carburetor Overhaul Kit—See Ref. 121.

△ Included in Valve Gasket Set—See Ref. 1095.

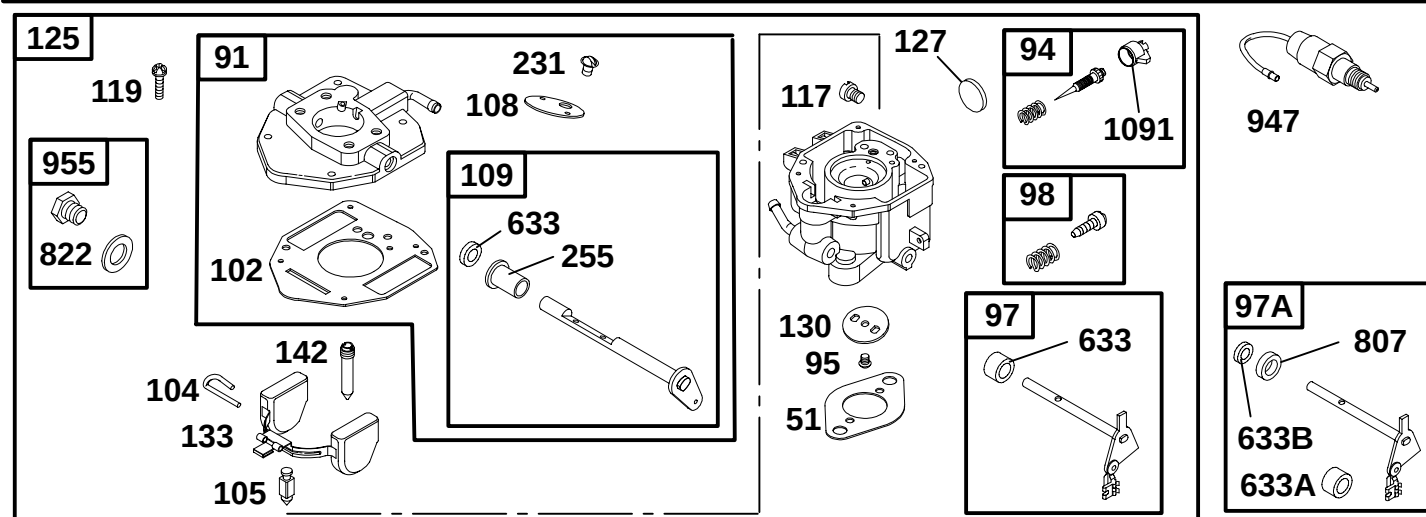


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
51	★805700	Gasket-Intake (Manifold to Carburetor)	105	●805547	Valve-Float Needle (Pump Feed)	119	690720	Screw (Upper to Lower Carburetor Body)
91	807919	Body-Upper Carburetor (Used After Code Date 90113000).			----- Note -----	125		Carburetor (See Previous Page)
		----- Note -----			●805620 Valve-Float Needle (Gravity Feed)	127	●690727	Plug-Welch
		807721 Body-Upper Carburetor (Used Before Code Date 90120100).	108	690719	Valve-Choke	130	690726	Valve-Throttle
94	●808257	Kit-Idle Mixture	109	807722	Shaft-Choke	133	691510	Float-Carburetor
95	690718	Screw (Throttle Valve)	117	806652	Jet-Main (Used After Code Date 99033000).	142	●690725	Nozzle-Carburetor
97	809007	Shaft-Throttle (Used After Code Date 00073100).			----- Note -----	231	805025	Screw (Choke Valve)
97A	807720	Shaft-Throttle (Used Before Code Date 00080100).			●690861 Jet-Main (Standard) (Used Before Code Date 99033100 and After Code Date 94123100).	255	●690721	Bushing-Choke Shaft
					805624 Jet-Main (Standard) (Used Before Code Date 95010100).	633	●806131	Seal-Choke/Throttle Shaft
98	808177	Kit-Idle Speed			690741 Jet-Main (Standard) (Used on Type No(s). 0478, 1155, 1178, 1261.	633A	●695414	Seal-Choke/Throttle Shaft
102	●805541	Gasket-Carburetor Body			690741 Jet-Main (High Altitude) (Used After Code Date 89111700).	633B	●690722	Seal-Choke/Throttle Shaft
104	●690723	Pin-Float Hinge			805537 Jet-Main (High Altitude) (Used Before Code Date 89111800).	807	●805557	Spacer-Throttle
						822	●690724	O-Ring Seal (Carburetor Plug)
						947	807664	Solenoid-Fuel
						955	807723	Plug-Carburetor (Jet)
						1091	●691516	Cap-Limiter

★ Included in Engine Gasket Set-See Ref. 358.

● Included in Carburetor Overhaul Kit-See Ref. 121.

△ Included in Valve Gasket Set-See Ref. 1095.



294400 to 294499

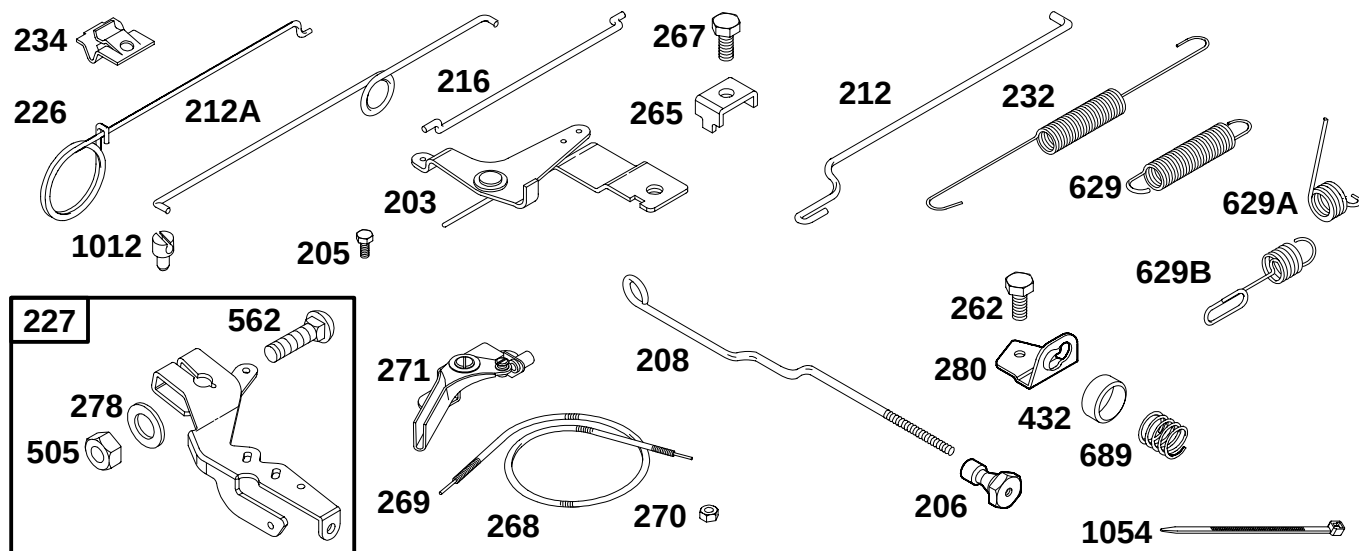

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
203	690923	Crank–Bell	212	690712	Link–Throttle	278	690237	Washer
205	805762	Screw	212A	691519	Link–Throttle			(Governor Control Lever)
206	691244	Nut–Governor Adjusting	216	690705	Link–Choke	280	691526	Bracket–Rod
		(Used After Code Date 96033100).	226	805509	Rod–Hand Choke	432	691509	Cap–Spring
208	691549	Rod–Governor Control	227	690236	Lever–Governor Control	505	690238	Nut
		(Used After Code Date 96033100).	232	805465	Spring–Governor Link			(Governor Control Lever)
		----- Note -----	234	221372	Clip–Control Rod	562	690239	Bolt
		808453 Rod–Governor Control	262	805762	Screw			(Governor Control Lever)
		(Used After Code Date 94120100 and Before Code Date 96040100).	265	221535	Clamp–Casing	629	806717	Spring–Throttle Return
		805471 Rod–Governor Control	267	805762	Screw	629A	806716	Spring–Throttle Return
		(Used Before Code Date 94120200).			(Casing Clamp)	629B	806060	Spring–Throttle Return
			268	65616	Casing–Control Wire	689	691272	Spring–Friction
					(Cut to Length)	1012	690592	Retainer–Link
			269	26633	Wire–Control	1054	280275	Tie–Cable
					(Cut to Length)			
			270	63426	Nut			
					(Control Wire Casing)			
			271	290568	Lever–Control			

★ Included in Engine Gasket Set–See Ref. 358.
● Included in Carburetor Overhaul Kit–See Ref. 121.

△ Included in Valve Gasket Set–See Ref. 1095.

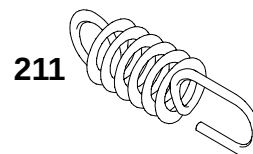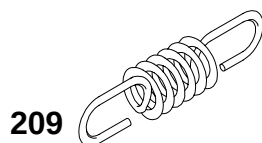



REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
209	805460	Spring-Governor ----- Note ----- 691506 Spring-Governor Used on Type No(s). 0342, 0378, 0448, 1042, 1078, 1148, 1257, 1258, 1259. 690709 Spring-Governor Used on Type No(s). 0314, 0318, 0319, 0354, 0359, 0360, 0361, 0374, 0417, 0418, 0423, 0427, 0457, 0461, 1014, 1018, 1019, 1029, 1054, 1059, 1060, 1061, 1074, 1115, 1117, 1118, 1123, 1124, 1126, 1127, 1129, 1133, 1134, 1135, 1136, 1138, 1143, 1157, 1158, 1161, 1165, 1170, 1171, 1172, 1183, 1185, 1187, 1195, 1199, 1204, 1211, 1212, 1236, 1238. 691507 Spring-Governor Used on Type No(s). 0326, 0414, 0478, 1026, 1114, 1155, 1178, 1200.			690710 Spring-Governor Used on Type No(s). 0460, 0480, 0481. 805462 Spring-Governor Used on Type No(s). 0364, 1028, 1064, 1261. 691508 Spring-Governor Used on Type No(s). 0040, 0340, 0432, 0449, 1132, 1146, 1149, 1167, 1176, 1203, 1241. 805464 Spring-Governor Used on Type No(s). 0422, 0462, 1162, 1163, 1175, 1181, 1192, 1202, 1203, 1231, 1252. 262656 Spring-Governor Used on Type No(s). 0327, 1210.	211	805453	Spring-Governor Idle ----- Note ----- 805450 Spring-Governor Idle Used on Type No(s). 0342, 0378, 0448, 1042, 1078, 1148, 1257, 1258, 1259. 690707 Spring-Governor Idle Used on Type No(s). 0314, 0318, 0319, 0354, 0359, 0360, 0361, 0374, 0417, 0418, 0423, 0427, 0457, 0461, 1014, 1018, 1019, 1029, 1054, 1059, 1060, 1061, 1074, 1115, 1117, 1118, 1123, 1124, 1126, 1127, 1129, 1133, 1134, 1135, 1136, 1138, 1143, 1157, 1158, 1161, 1165, 1170, 1171, 1172, 1183, 1185, 1187, 1195, 1199, 1204, 1211, 1212, 1236, 1238. 691505 Spring-Governor Idle Used on Type No(s). 0326, 0414, 1026, 1114, 1155, 1178. 691553 Spring-Governor Idle Used on Type No(s). 1261.

★ Included in Engine Gasket Set-See Ref. 358.

● Included in Carburetor Overhaul Kit-See Ref. 121.

△ Included in Valve Gasket Set-See Ref. 1095.





294400 to 294499

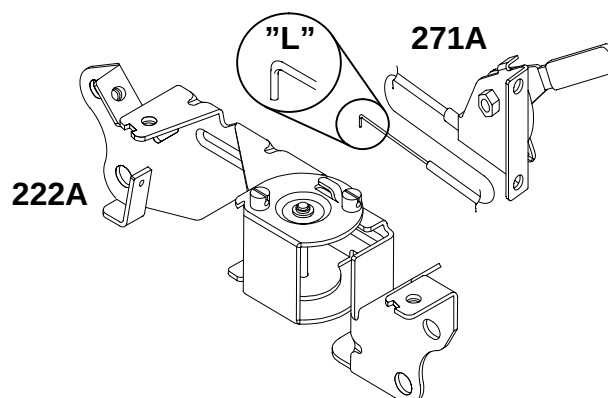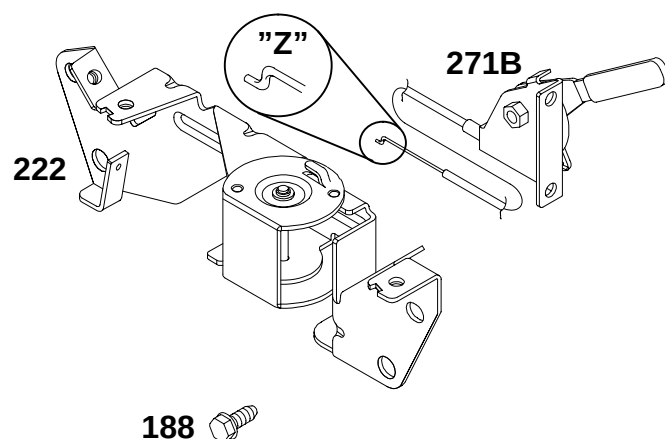

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
188	805025	Screw (Control Bracket)	222A	690918	Bracket–Control (Used With Control Lever and/or Wire With a "L" Formed End) ----- Note ----- 691570 Bracket– Control (Used With Control Lever and/or Wire With a "L" Formed End) (Used After Code Date 95043000). Used on Type No(s). 1114, 1155, 1178. 808014 Bracket– Control (Used With Control Lever and/or Wire With a "L" Formed End) (Used Before Code Date 95050100). Used on Type No(s). 0414, 0478, 1114, 1178.	271A	808118	Lever–Control (Cable Wire With a "L" Formed End)
222	808454	Bracket–Control (Used With Control Lever and/or Wire With a "Z" Formed End) (Used After Code Date 94113000). ----- Note ----- 807610 Bracket– Control (Used With Control Lever and/or Wire With a "Z" Formed End) (Used Before Code Date 94120100).				271B	692541	Lever–Control (Cable Wire With a "Z" Formed End)

★ Included in Engine Gasket Set–See Ref. 358.
● Included in Carburetor Overhaul Kit–See Ref. 121.

△ Included in Valve Gasket Set–See Ref. 1095.

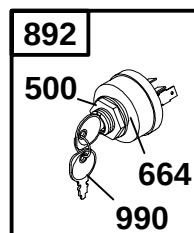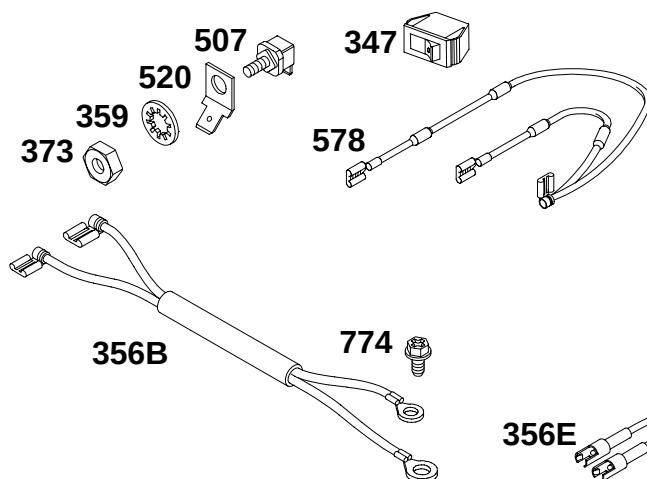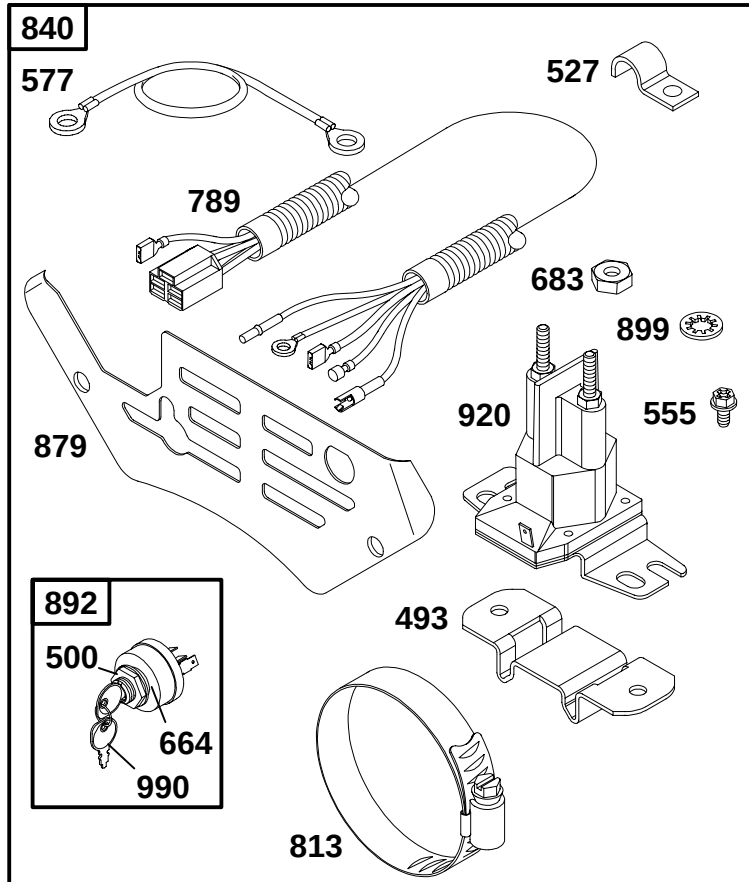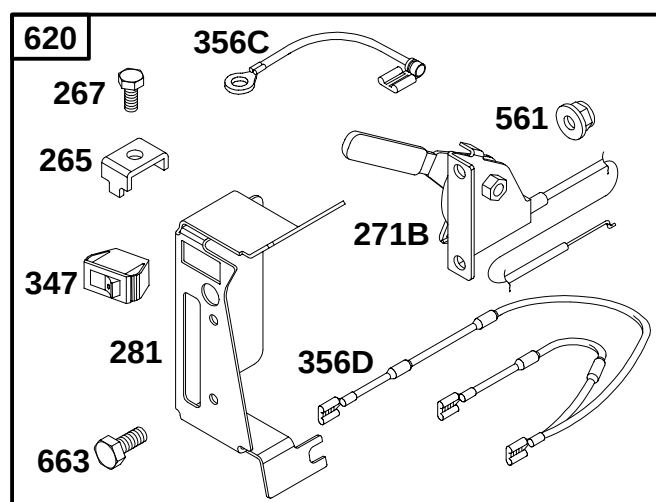


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
239	690233	Switch—Oil Pressure	373	90576	Nut (Ground Terminal)	663	805762	Screw (Control Panel)
265	221535	Clamp—Casing	493	691177	Bracket—Mounting (Solenoid)	664	691087	Nut (Key Switch)
267	805762	Screw (Casing Clamp)	500	691087	Washer (Key Switch)	683	92278	Nut (Starter Solenoid)
271B	692541	Lever—Control	507	398525	Insulator	774	805448	Screw (Stop Wire)
281	690742	Panel—Control	520	691084	Terminal—Ground	789	493624	Harness—Wiring
347	493521	Switch—Rocker	527	690423	Clamp—Tube	813	690635	Clamp
356B	690809	Wire—Stop	555	805448	Screw (Starter Solenoid)	840	807817	Kit—Panel
356C	690796	Wire—Stop	561	690713	Nut (Control Lever)	879	690757	Cover—Carburetor
356D	493864	Wire—Stop (Ignition Coil)	577	690795	Cable—Starter	892	493625	Switch—Key
356E	692961	Wire—Stop Used on Type No(s). 1256, 1259.	578	493792	Wire Assembly	899	691077	Washer (Starter Solenoid)
359	691077	Washer (Ground Terminal)	620	494052	Panel—Speed Control	920	807829	Solenoid—Starter
						990	392832	Key Set


★ Included in Engine Gasket Set—See Ref. 358.

● Included in Carburetor Overhaul Kit—See Ref. 121.

△ Included in Valve Gasket Set—See Ref. 1095.

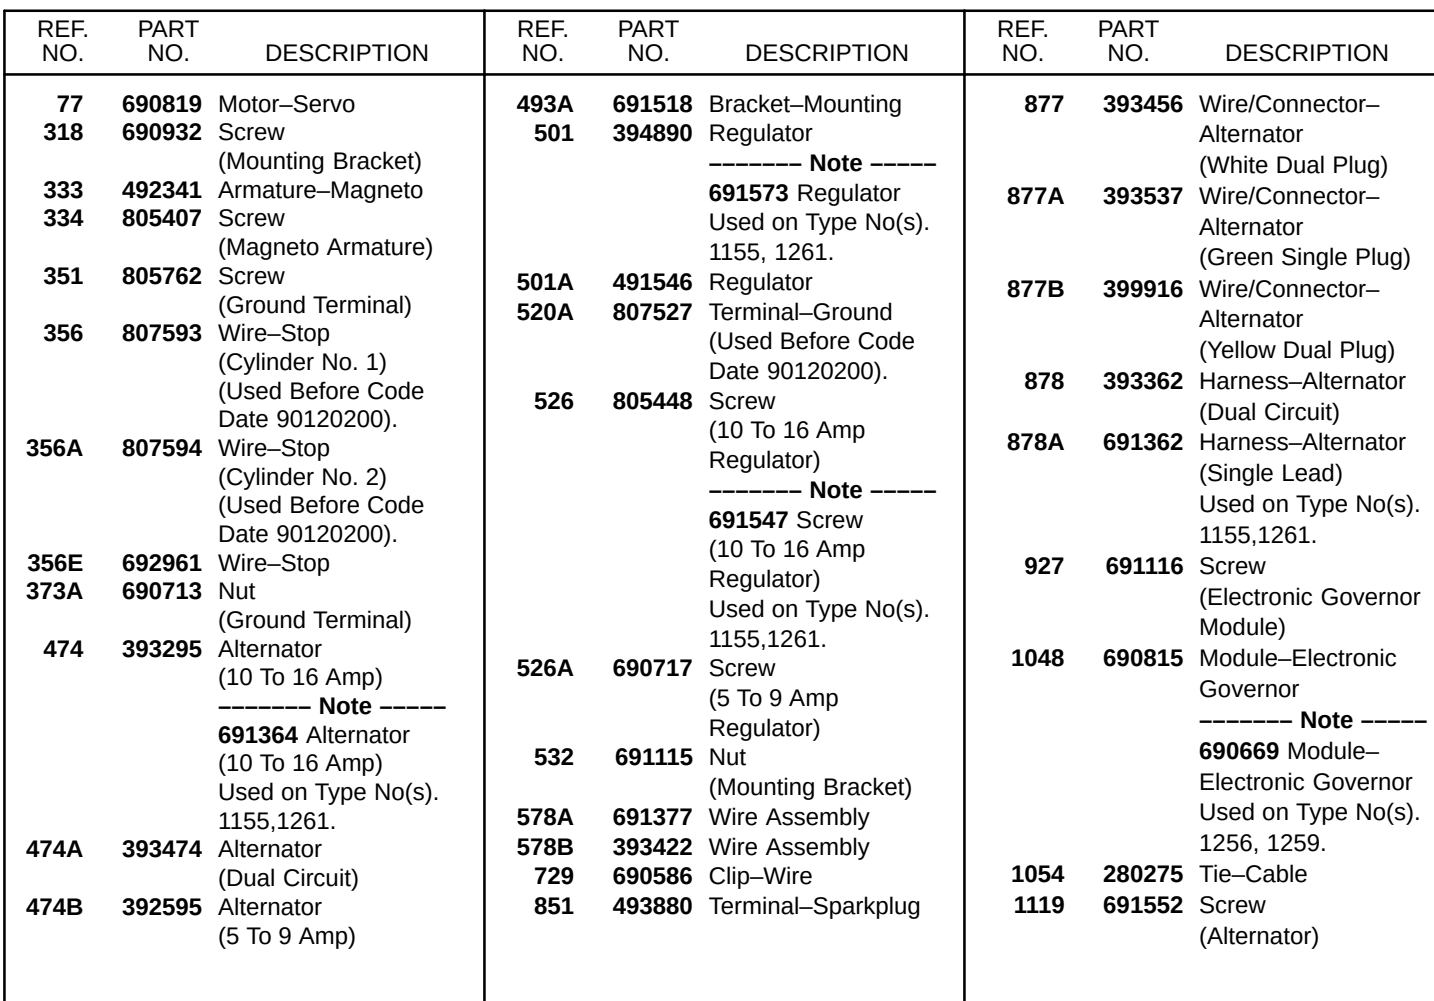

Δ Included in Valve Gasket Set—See Ref. 1095.

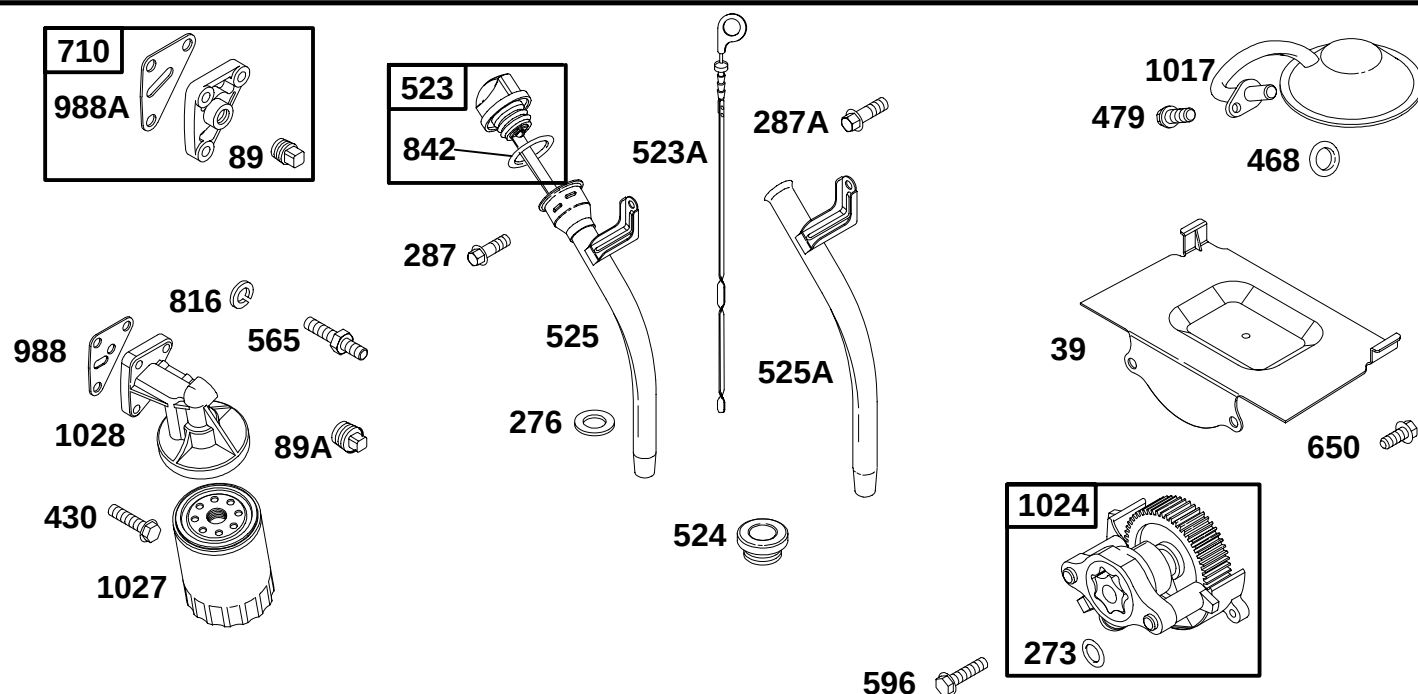


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
39	690745	Deflector—Oil	524	693172	Seal—Dipstick Tube (Used After Code Date 98053100). ----- Note ----- ★281370 Seal—Dipstick Tube (Used Before Code Date 98060100).	816	690706	Washer (Oil Filter Adapter)
89	805059	Plug—Oil				842	★805386	O—Ring Seal
89A	690283	Plug—Oil				988	★805250	Gasket—Oil Adapter
273	★690681	O—Ring Seal (Oil Pump)				988A	★690687	Gasket—Oil Adapter
276	690704	Washer—Sealing (Dipstick Tube)	525	690897	Tube—Dipstick (Standard) ----- Note ----- 690907 Tube—Dipstick (Standard) Used on Type No(s). 0445,1145.	1017	690900	Screen—Oil Pump
287	805177	Screw (Standard Dipstick Tube)				1024	693185	Pump—Oil
287A	806660	Screw (Special Dipstick Tube)	525A	693174	Tube—Dipstick (Special)	1027	492932	Filter—Oil (2 1/4" Long) (Used After Code Date 95020500). ----- Note ----- 491056 Filter—Oil (3 1/4" Long) (Used Before Code Date 95020600).
430	690679	Bolt (Oil Filter Adapter)	565	690682	Stud (Oil Filter Adapter)			
468	★690690	O—Ring Seal (Oil Pump Screen)	596	691492	Screw (Oil Pump)	1028	808235	Adapter—Oil Filter ----- Note ----- 808033 Adapter—Oil Filter (Horizontal Mounted Oil Filter)
479	692537	Screw (Oil Pump Screen)	650	692539	Screw (Oil Deflector)			
523	807977	Dipstick (Standard)	710	807689	Cover—Oil Filter			
523A	693175	Dipstick (Special)						

★ Included in Engine Gasket Set—See Ref. 358.

● Included in Carburetor Overhaul Kit—See Ref. 121.

△ Included in Valve Gasket Set—See Ref. 1095.


294400 to 294499

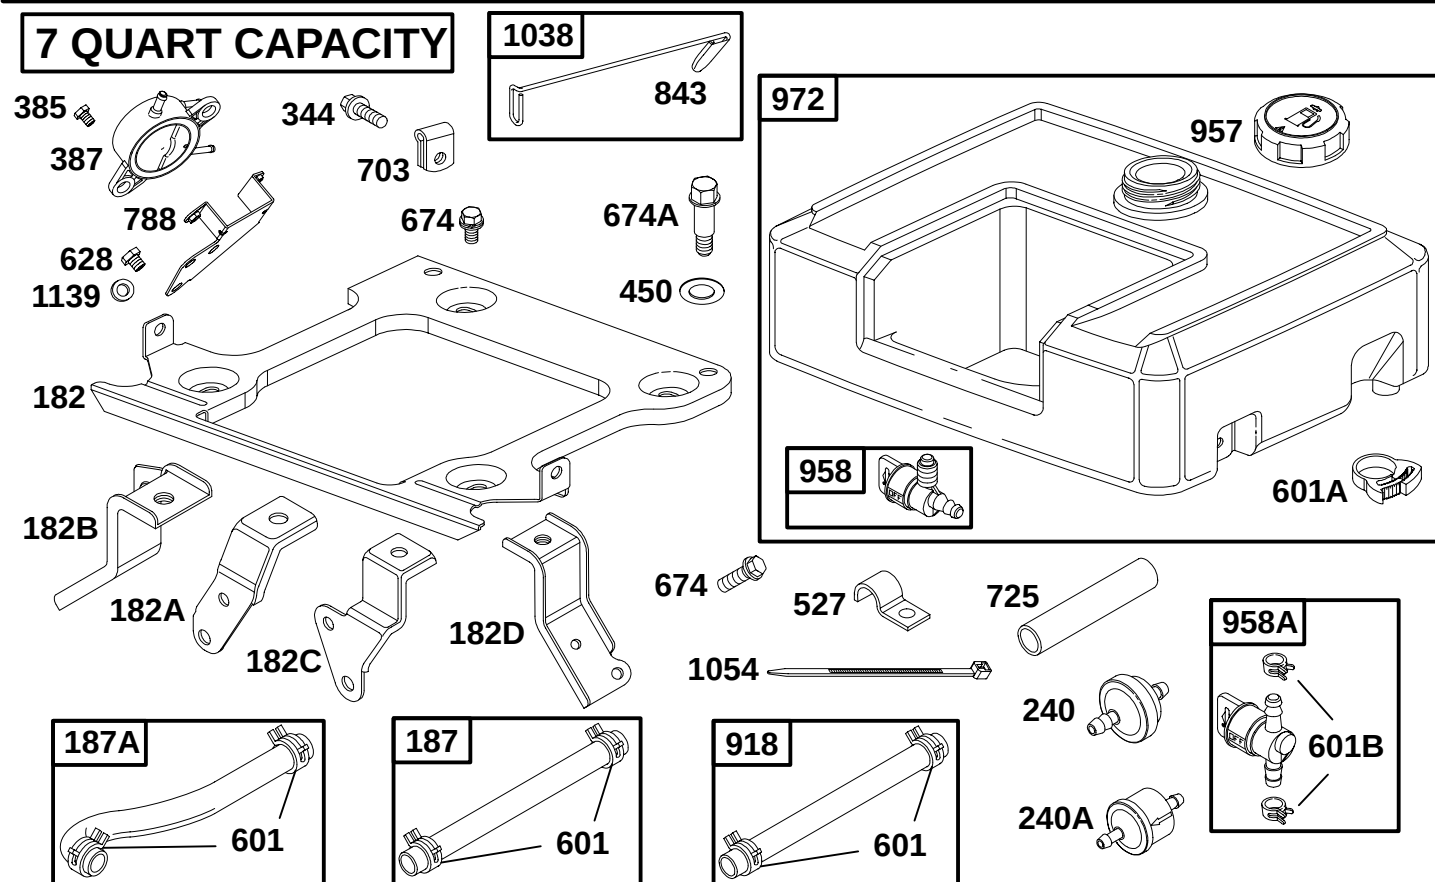

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
182	492317	Bracket–Fuel Tank	450	806497	Washer	788	691559	Bracket–Fuel Pump
182A	690778	Bracket–Fuel Tank			(Fuel Tank Bracket)	843	691322	Sleeve–Lever
182B	690780	Bracket–Fuel Tank	527	690423	Clamp–Tube	918	393815	Hose–Vacuum
182C	690779	Bracket–Fuel Tank	601	95162	Clamp–Hose			(Rocker Cover To
182D	690781	Bracket–Fuel Tank	601A	805813	Clamp–Hose			Impulse Pump)
187	298049	Line–Fuel	601B	93807	Clamp–Hose			(Cut to Length)
187A	691049	Line–Fuel	628	806660	Screw	957	491367	Cap–Fuel Tank
		(Molded)			(Fuel Pump Bracket)	958	399517	Valve–Fuel Shut Off
240	298090	Filter–Fuel	674	805247	Screw	958A	494768	Valve–Fuel Shut Off
240A	493629	Filter–Fuel			(Fuel Tank Bracket)	972	492369	Tank–Fuel
344	94504	Screw	674A	94536	Screw	1038	492374	Rod–Fuel Shut-Off
		(Cable Clamp)			(Fuel Tank Bracket)	1054	280275	Tie–Cable
385	693169	Screw	703	94484	Clip	1139	806497	Washer
		(Fuel Pump)	725	280866	Shield–Heat			(Fuel Pump Bracket)
387	808656	Pump–Fuel			(Cut to Length)			

★ Included in Engine Gasket Set—See Ref. 358.
● Included in Carburetor Overhaul Kit—See Ref. 121.

Δ Included in Valve Gasket Set—See Ref. 1095.

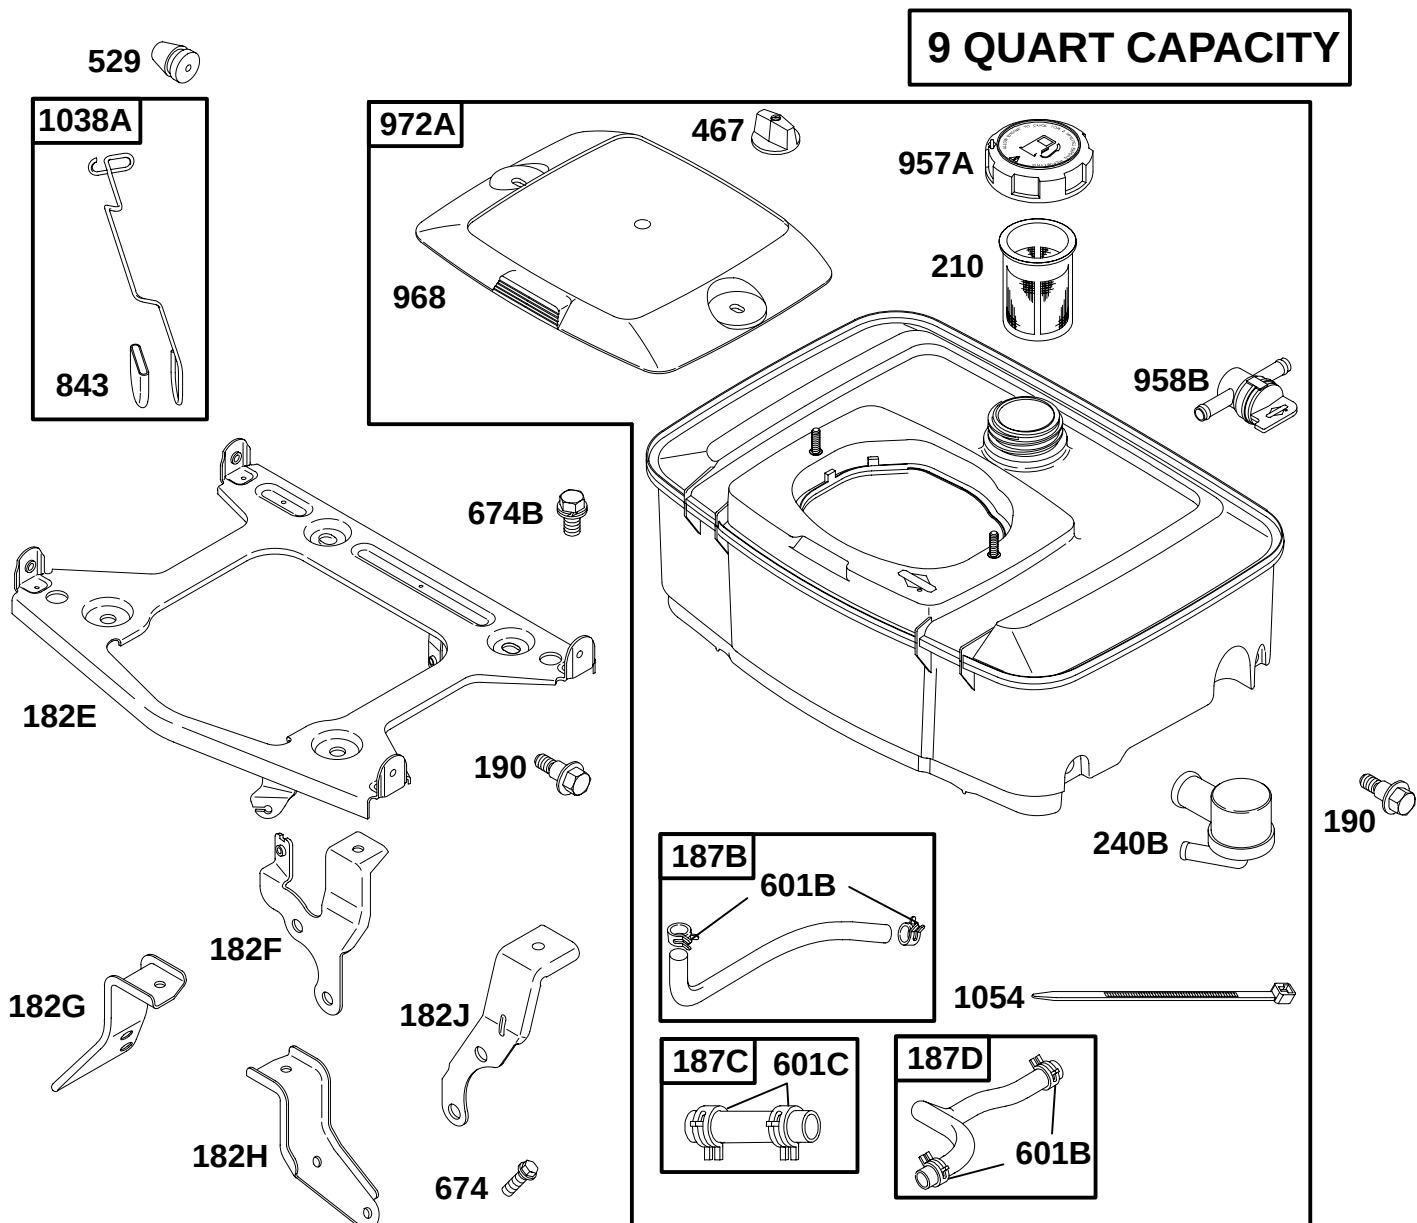


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
182E	691566	Bracket-Fuel Tank	210	691370	Strainer-Fuel	674B	805025	Screw (Fuel Tank Bracket)
182F	691520	Bracket-Fuel Tank	240B	808116	Filter-Fuel	843	691322	Sleeve-Lever
182G	691523	Bracket-Fuel Tank	467	491875	Knob-Air Cleaner	957A	493988	Cap-Fuel Tank
182H	691524	Bracket-Fuel Tank	529	691527	Grommet	958B	494914	Valve-Fuel Shut Off
182J	691525	Bracket-Fuel Tank	601B	93807	Clamp-Hose	968	691334	Cover-Air Cleaner
187B	808122	Line-Fuel	601C	691522	Clamp-Hose	972A	690663	Tank-Fuel
187C	808121	Line-Fuel	674	805247	Screw (Fuel Tank Bracket)	1038A	691567	Rod-Fuel Shut-Off
187D	808123	Line-Fuel				1054	280275	Tie-Cable
190	94895	Screw (Fuel Tank)						

★ Included in Engine Gasket Set-See Ref. 358.
● Included in Carburetor Overhaul Kit-See Ref. 121.

△ Included in Valve Gasket Set-See Ref. 1095.

294400 to 294499

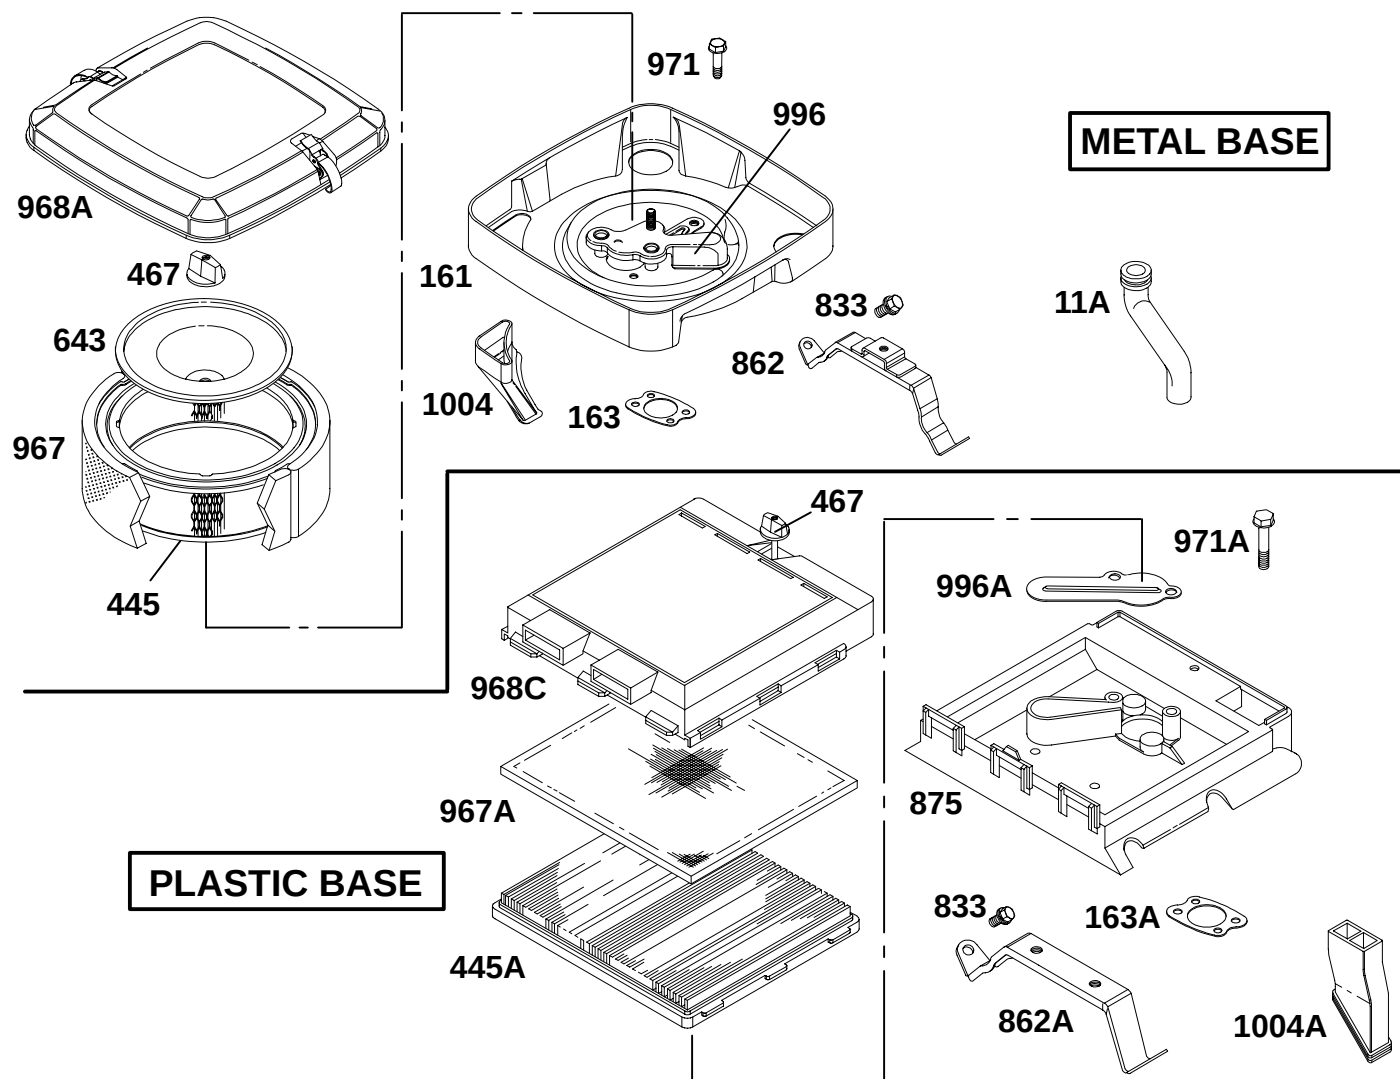


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
11A	806083	Tube-Breather (Used Before Code Date 96101100).	445	394018	Filter-Air Cleaner Cartridge	875	690894	Base-Air Cleaner
161	691561	Base-Air Cleaner ----- Note ----- 690909 Base-Air Cleaner Used on Type No(s). 0414, 0478, 1114, 1155, 1178.	445A	805113	Filter-Air Cleaner Cartridge	967	272490	Filter-Pre Cleaner
163	★805655	Gasket-Air Cleaner	467	491875	Knob-Air Cleaner	967A	805267	Filter-Pre Cleaner
163A	★805003	Gasket-Air Cleaner	643	805631	Retainer-Air Filter	968A	807862	Cover-Air Cleaner
			833	690872	Screw (Cleaner Mounting Strap)	968C	690694	Cover-Air Cleaner
			862	692153	Strap-Cleaner Mounting	971	692537	Screw (Air Cleaner Base)
			862A	807563	Strap-Cleaner Mounting	971A	690699	Screw (Air Cleaner Base)
						996	691577	Shield-Carburetor
						996A	690696	Shield-Carburetor
						1004	690743	Duct-Air
						1004A	692538	Duct-Air

★ Included in Engine Gasket Set-See Ref. 358.

● Included in Carburetor Overhaul Kit-See Ref. 121.

△ Included in Valve Gasket Set-See Ref. 1095.

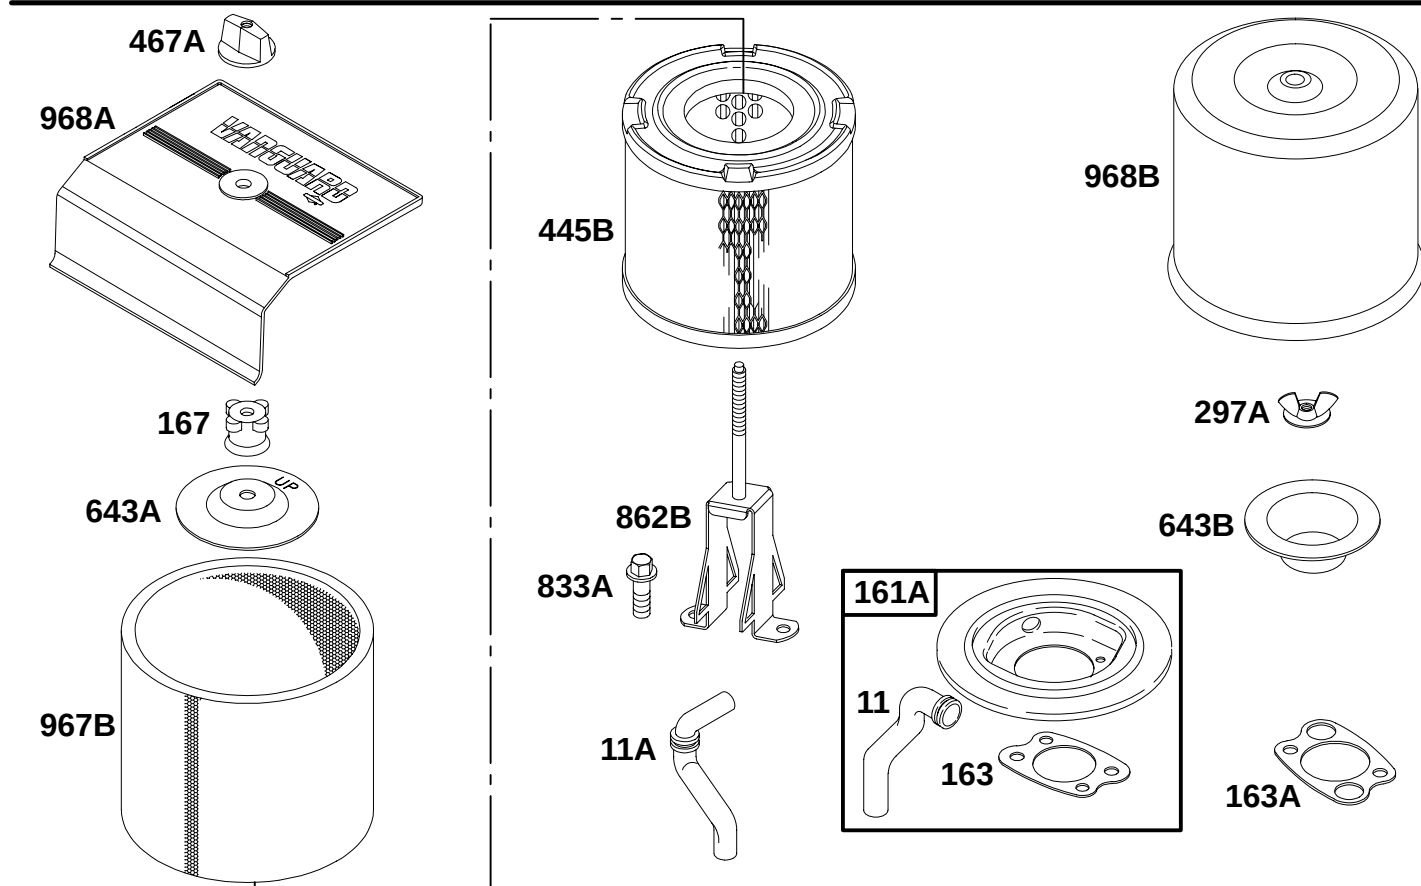


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
11	691556	Tube-Breather (Used After Code Date 96101000).	163	★805655	Gasket-Air Cleaner	833A	810037	Screw (Cleaner Mounting Strap)
11A	806083	Tube-Breather (Used Before Code Date 96101100).	163A	★805003	Gasket-Air Cleaner	862B	691565	Strap
161A	808414	Base-Air Cleaner (Used After Code Date 96101000).	167	281051	Seal-Air Cleaner Nut	967B	271794	Filter-Pre Cleaner
		----- Note -----	297A	94289	Nut (Air Filter Retainer)	968A	280903	Cover-Air Cleaner
		808117 Base-Air Cleaner (Used Before Code Date 96101100).	445B	393957	Filter-Air Cleaner Cartridge	968B	224885	Cover-Air Cleaner
			467A	493903	Knob-Air Cleaner			
			643A	690447	Retainer-Air Filter			
			643B	222272	Retainer-Air Filter			

★ Included in Engine Gasket Set-See Ref. 358.
● Included in Carburetor Overhaul Kit-See Ref. 121.

△ Included in Valve Gasket Set-See Ref. 1095.


294400 to 294499

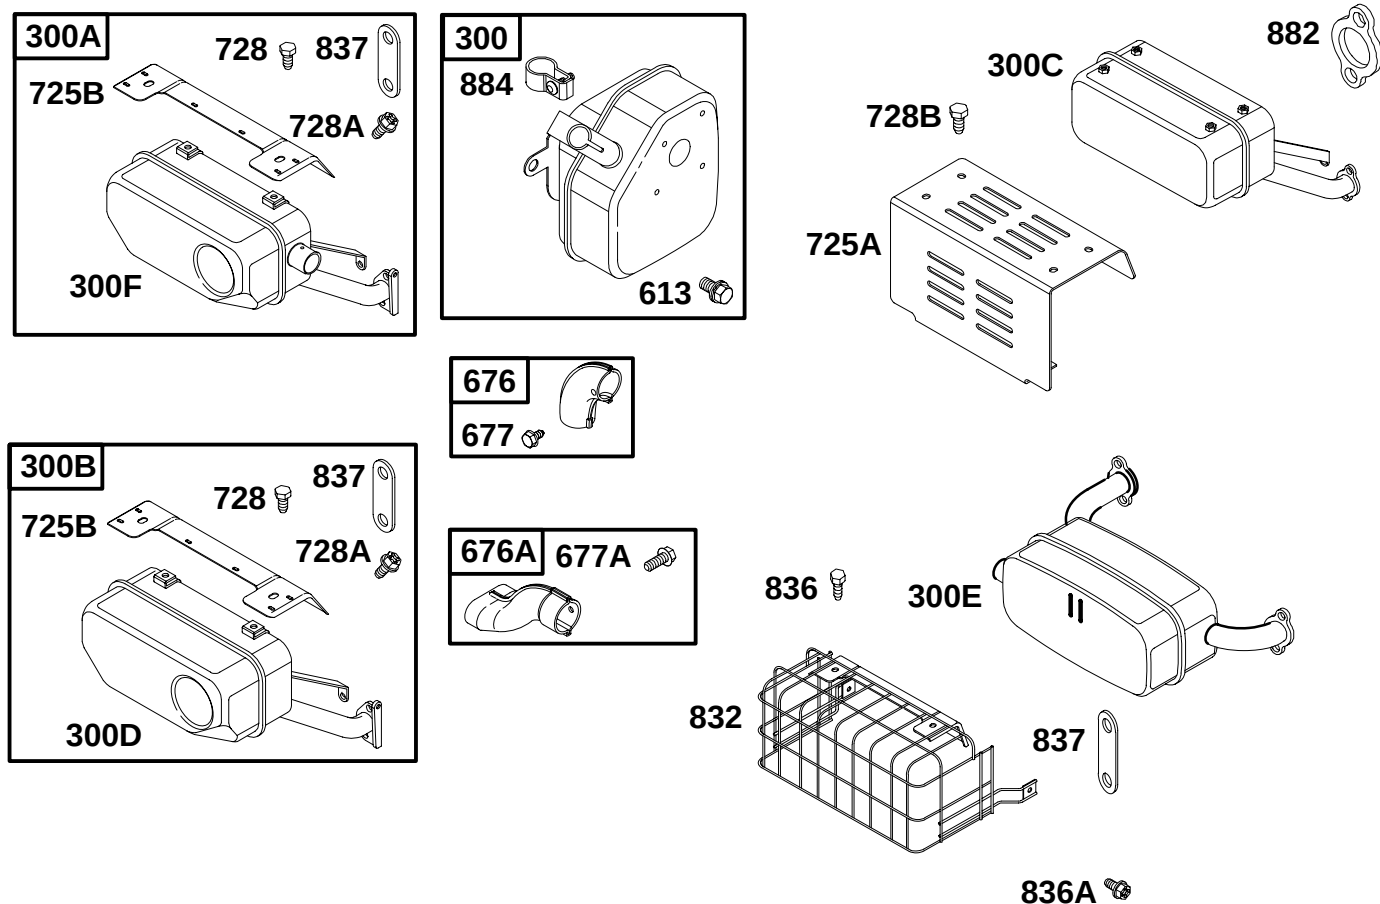

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
300	807742	Muffler (Used With Manifold Part No. 805142)	300F	691562	Muffler (Cylinder #2 Side Outlet)	728	691514	Screw (Heat Shield)
300A	808379	Muffler (Cylinder #2 Side Outlet)	613	805025	Screw (Exhaust Muffler)	728A	805448	Screw (Heat Shield)
300B	808380	Muffler (Cylinder #1 Side Outlet)	676	495518	Deflector-Muffler (90 Degree Outlet)	728B	805704	Screw (Heat Shield)
300C	807831	Muffler (Cylinder #1 Side Outlet)	676A	808393	Deflector-Muffler	832	691571	Guard-Muffler
300D	690906	Muffler (Cylinder #1 Side Outlet)	677	810079	Screw (Muffler Deflector)	836	691514	Screw (Muffler Guard)
300E	690931	Muffler (Special High Mount)	677A	690688	Screw (Muffler Deflector)	836A	805448	Screw (Muffler Guard)
			725A	805702	Shield-Heat	837	808085	Spacer-Muffler (Includes 2)
			725B	691498	Shield-Heat	882	805502	Flange-Exhaust
						884	690898	Clamp-Muffler

★ Included in Engine Gasket Set-See Ref. 358.
● Included in Carburetor Overhaul Kit-See Ref. 121.

△ Included in Valve Gasket Set-See Ref. 1095.

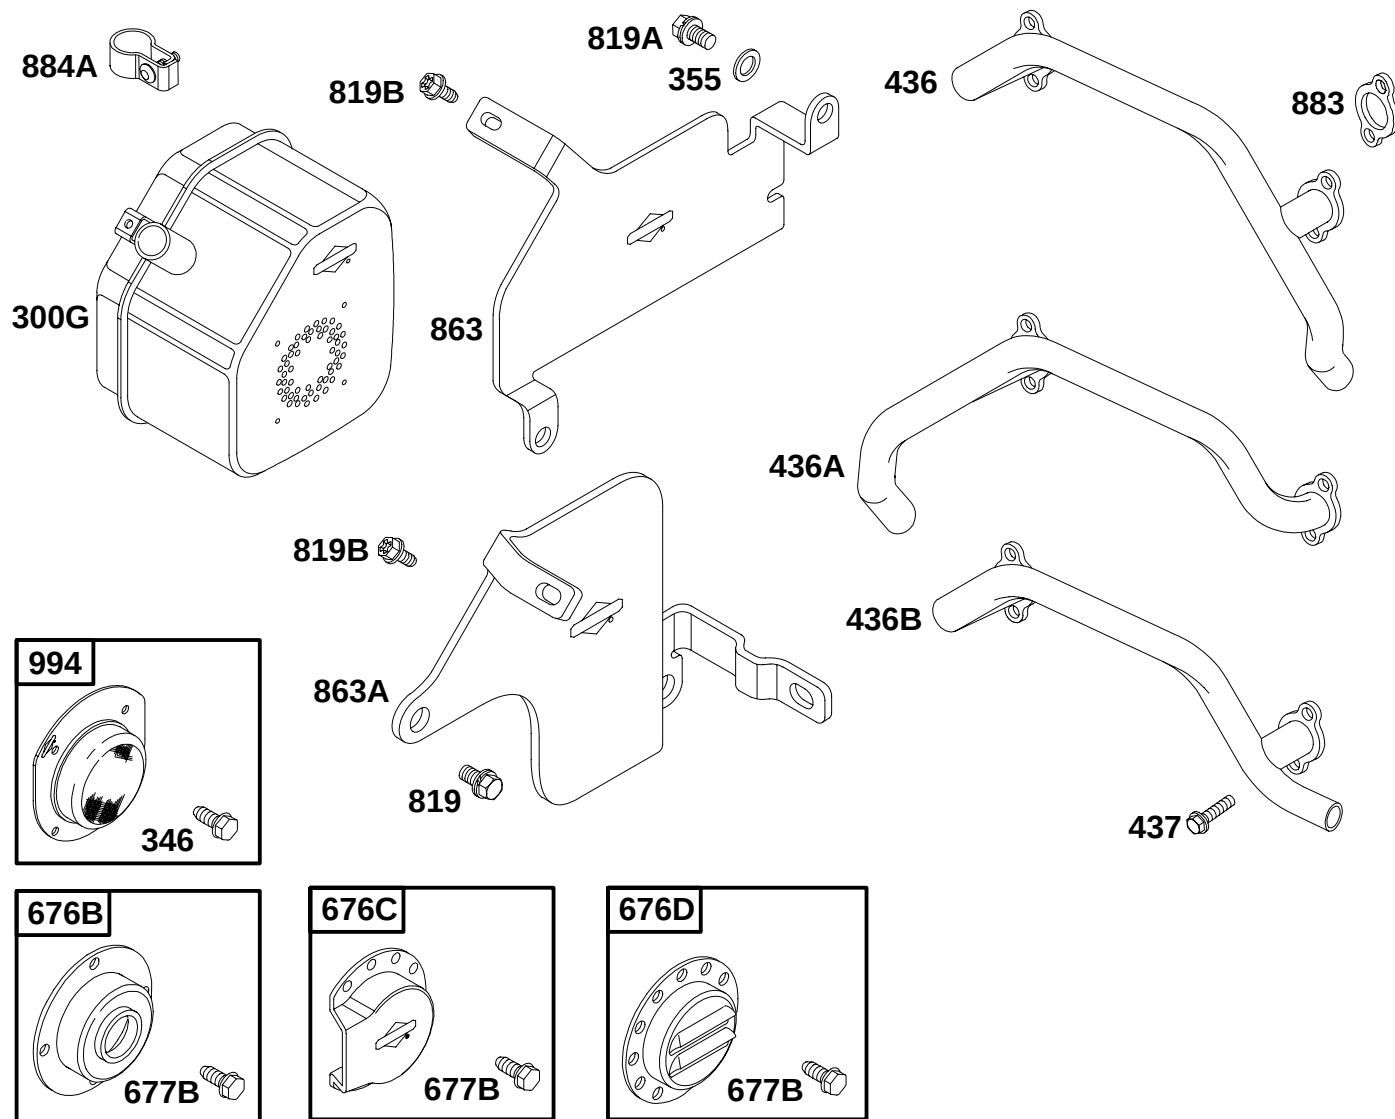

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
300G	807948	Muffler (Lo Mount)	436B	691501	Manifold-Exhaust (Used With Muffler Supplied By Customer)	819A	690943	Screw (Muffler Bracket M8 1.25x16)
346	94896	Screw (Spark Arrestor)	437	805158	Screw (Exhaust Manifold)	819B	805448	Screw (Muffler Bracket M6 1x12)
355	690944	Washer (Muffler Bracket)	676B	396903	Deflector-Muffler (Direct Out)	863	691513	Bracket-Muffler (Cylinder #2 Side)
436	805142	Manifold-Exhaust (Used With Muffler Part No. 807742)	676C	393761	Deflector-Muffler (Side Out)	863A	690756	Bracket-Muffler (Cylinder #1 Side)
436A	691499	Manifold-Exhaust (Cylinder #2 Side Outlet)	676D	397630	Deflector-Muffler (Louvered)	883	★△805024	Gasket-Exhaust
			677B	94896	Screw (Muffler Deflector)	884A	392649	Clamp-Muffler
			819	805025	Screw (Muffler Bracket M8 1.25x14)	994	392390	Arrestor-Spark


★ Included in Engine Gasket Set-See Ref. 358.

● Included in Carburetor Overhaul Kit-See Ref. 121.


△ Included in Valve Gasket Set-See Ref. 1095.

294400 to 294499

FOR
METAL
AIR CLEANER
BASE

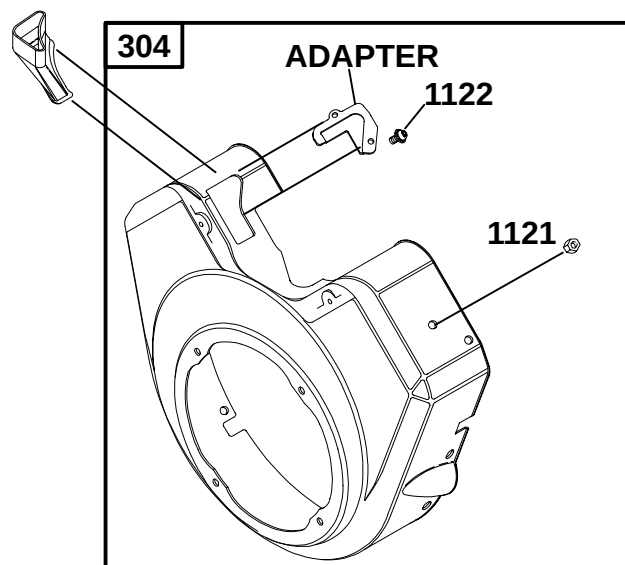

FOR
PLASTIC
AIR CLEANER
BASE

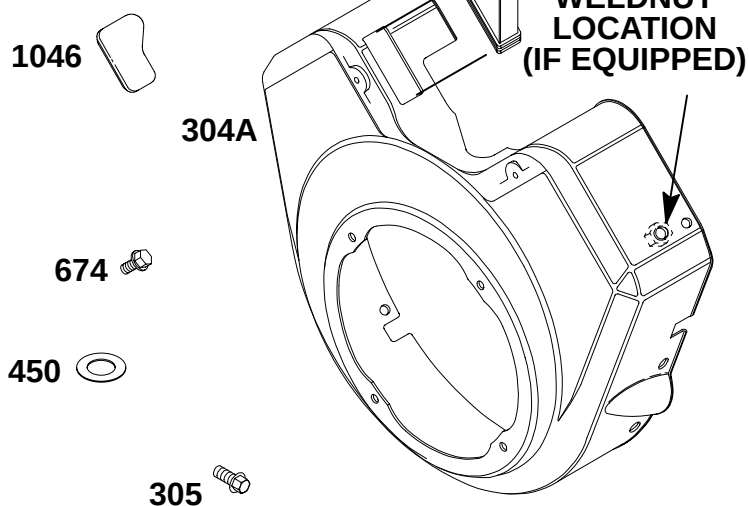


1036 EMISSIONS LABEL

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
304	808055	Housing-Blower (Red; With Weld Nut, For Metal Air Cleaner Base) ----- Note ----- 808408 Housing-Blower (Black; With Weld Nut, For Metal Air Cleaner Base)		807820	Housing-Blower (Red; Without Weld Nut, For Plastic Air Cleaner Base)	450	806497	Washer (Fuel Tank Bracket)
304A	807814	Housing-Blower (Black; Without Weld Nut, For Plastic Air Cleaner Base) (Used After Code Date 90111600). ----- Note ----- 807662 Housing-Blower (Black; With Weld Nut, For Plastic Air Cleaner Base) (Used Before Code Date 90111700).		808008	Housing-Blower (Red; With Weld Nut, For Plastic Air Cleaner Base) (Used After Code Date 90111600).	674	805247	Screw (Fuel Tank Bracket)
				807654	Housing-Blower (Red; With Weld Nut, For Plastic Air Cleaner Base) (Used Before Code Date 90111700).	1036	806881	Label-Emissions (Used After Code Date 00063000). ----- Note ----- 806687 Label-Emissions (Used Before Code Date 00070100 and After Code Date 99093000).
			305	692539	Screw (Blower Housing M6x10)		806583	Label-Emissions (Used Before Code Date 99100100 and After Code Date 98123100).
						1046	805753	Plug-Blower Housing
						1121	810056	Nut (Fuel Pump Bracket)
						1122	93410	Screw (Blower Housing Adapter)

★ Included in Engine Gasket Set-See Ref. 358.

● Included in Carburetor Overhaul Kit-See Ref. 121.

△ Included in Valve Gasket Set-See Ref. 1095.

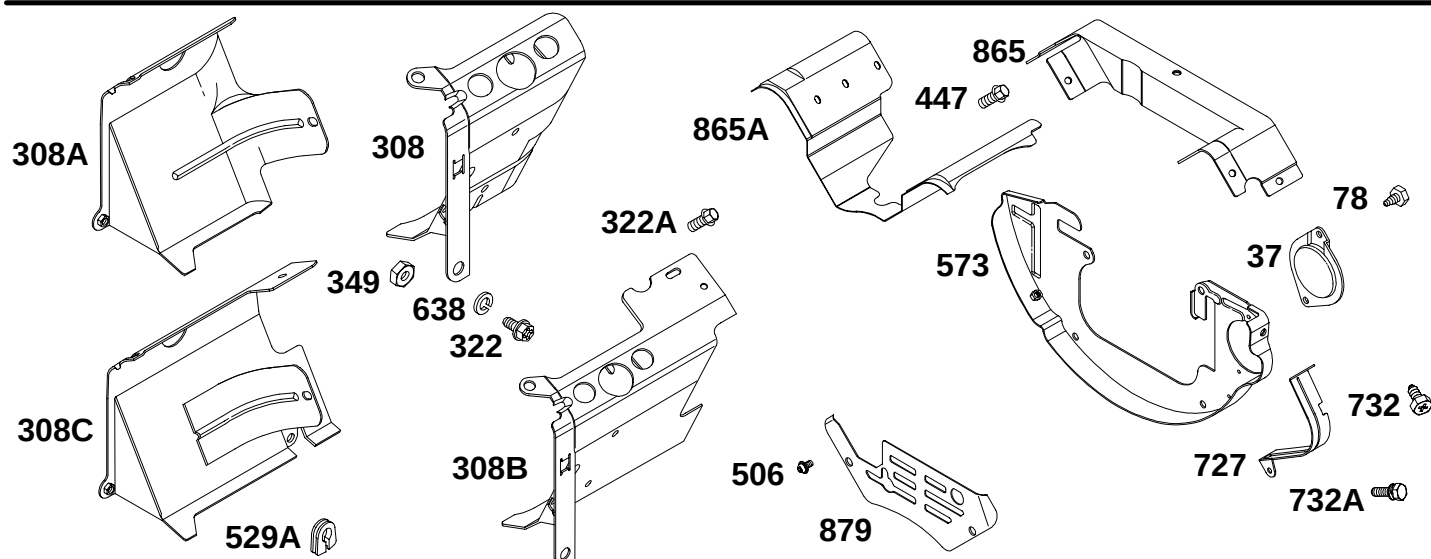


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
37	690715	Guard-Flywheel (Black) ----- Note ----- 805504 Guard-Flywheel (Red)	308B	691576	Cover-Cylinder Head (Used After Code Date 95071400). ----- Note ----- 807658 Cover-Cylinder Head (Cylinder 1, Black) (Used Before Code Date 95071500).	529A	690744	Grommet
78	690688	Screw (Flywheel Guard)				573	690902	Plate-Back
308	692806	Cover-Cylinder Head (Cylinder 1, Black Ducted) (Used After Code Date 95071400). ----- Note ----- 807868 Cover-Cylinder Head (Cylinder 1, Black) (Used After Code Date 90111600 and Before Code Date 95071500). 807656 Cover-Cylinder Head (Cylinder 1, Black) (Used Before Code Date 90111700).	308C	691563	Cover-Cylinder Head (Cylinder 2, Black) (Used After Code Date 90111600). ----- Note ----- 807659 Cover-Cylinder Head (Used Before Code Date 90111700).	638	691551	Washer (Locked Tooth Cylinder Head Cover)
308A	807869	Cover-Cylinder Head (Cylinder 2, Black) (Used After Code Date 90111600). ----- Note ----- 807657 Cover-Cylinder Head (Cylinder 2, Black) (Used Before Code Date 90111700).	322	805448	Screw (Cylinder Head Cover)	727	690714	Cover-Starter Drive (Black) ----- Note ----- 805503 Cover-Starter Drive (Red)
			322A	692539	Screw (Cylinder Head Cover)	732	690688	Screw (Starter Drive Cover)
			349	690238	Nut (Cylinder Cover)	732A	692539	Screw (Starter Drive Cover)
			447	692539	Screw (Air Guide Cover)	865	690901	Cover-Air Guide (Black) ----- Note ----- 690908 Cover-Air Guide (Black) Used on Type No(s). 0445, 1145. 807653 Cover-Air Guide (Red) Used on Type No(s). 0030.
			506	690677	Screw (Carburetor Cover)	865A	690750	Cover-Air Guide (Valley, Black)
						879	690757	Cover-Carburetor

★ Included in Engine Gasket Set-See Ref. 358.

● Included in Carburetor Overhaul Kit-See Ref. 121.

△ Included in Valve Gasket Set-See Ref. 1095.


294400 to 294499

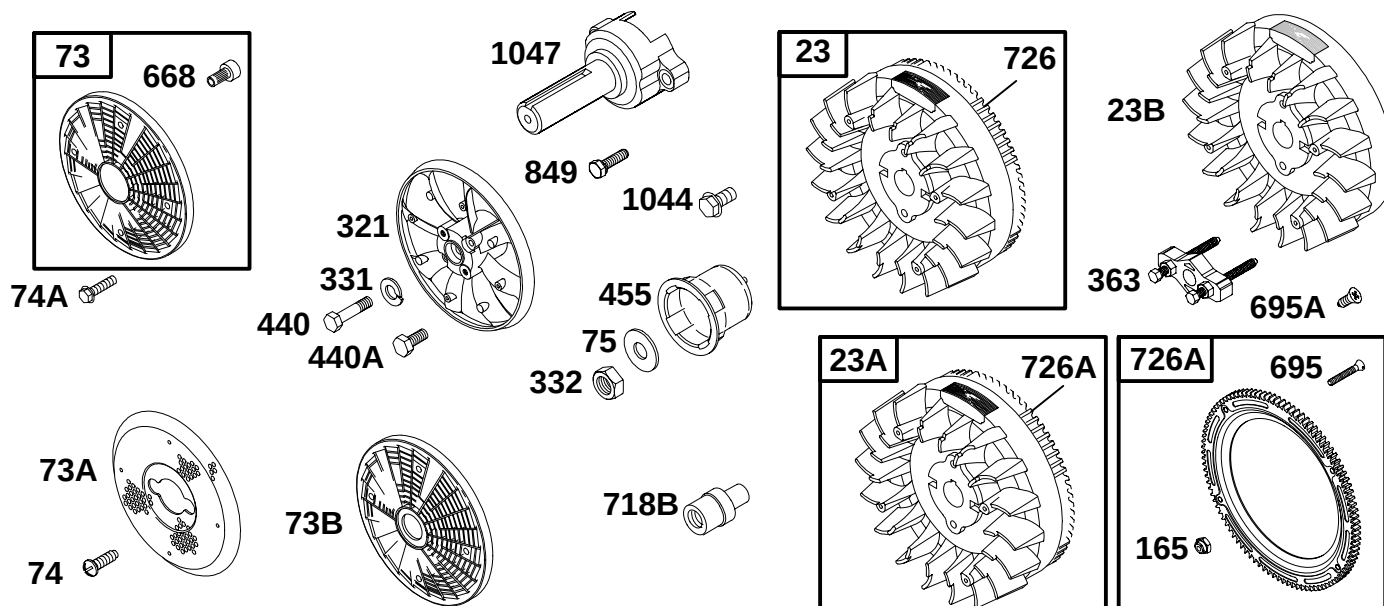

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
23	808766	Flywheel (Steel Ring Gear) ----- Note ----- 808774 Flywheel (Steel Ring Gear) Used on Type No(s). 0460, 1132, 1142, 1145, 1146, 1189, 1211, 1231, 1245, 1256, 1259, 1263. 808770 Flywheel (Steel Ring Gear) Used on Type No(s). 1155, 1261.	23B	690889	Flywheel (For Rewind Starter)	455	691517	Cup-Flywheel (Used After Code Date 93072500). ----- Note ----- 805153 Cup-Flywheel (Used Before Code Date 93072600).
23A	690892	Flywheel (Aluminum Ring Gear) ----- Note ----- 690891 Flywheel (Aluminum Ring Gear) Used on Type No(s). 0422, 0428, 0432, 0449, 0460, 0462, 0480, 1113, 1128, 1132, 1146, 1149, 1162, 1189, 1192, 1193, 1211, 1231.	73	494439	Screen-Rotating (Flush)	668	691500	Spacer
			73A	690478	Screen-Rotating	695	693109	Screw (Ring Gear)
			73B	690749	Screen-Rotating (With Stub Shaft Hole)	695A	693149	Screw (Ring Gear)
			74	94626	Screw (Rotating Screen)	718B	690740	Pin-Locating Gear-Ring (Steel) (Sold in Flywheel Kit Only; See Ref. 23)
			74A	691647	Screw (Rotating Screen)	726	807805	Gear-Ring (Aluminum)
			75	691490	Washer (Flywheel)	849	691088	Screw (Stub Shaft)
			165	693148	Nut (Ring Gear)	1044	805025	Screw (Flywheel)
			321	690379	Fan-Booster	1047	807867	Shaft-Stub
			331	691075	Washer (Booster Fan)			
			332	690887	Nut (Flywheel)			
			363	19203	Flywheel Puller			
			440	690335	Screw (Booster Fan)			
			440A	690342	Screw (Booster Fan)			


★ Included in Engine Gasket Set-See Ref. 358.
● Included in Carburetor Overhaul Kit-See Ref. 121.

△ Included in Valve Gasket Set-See Ref. 1095.

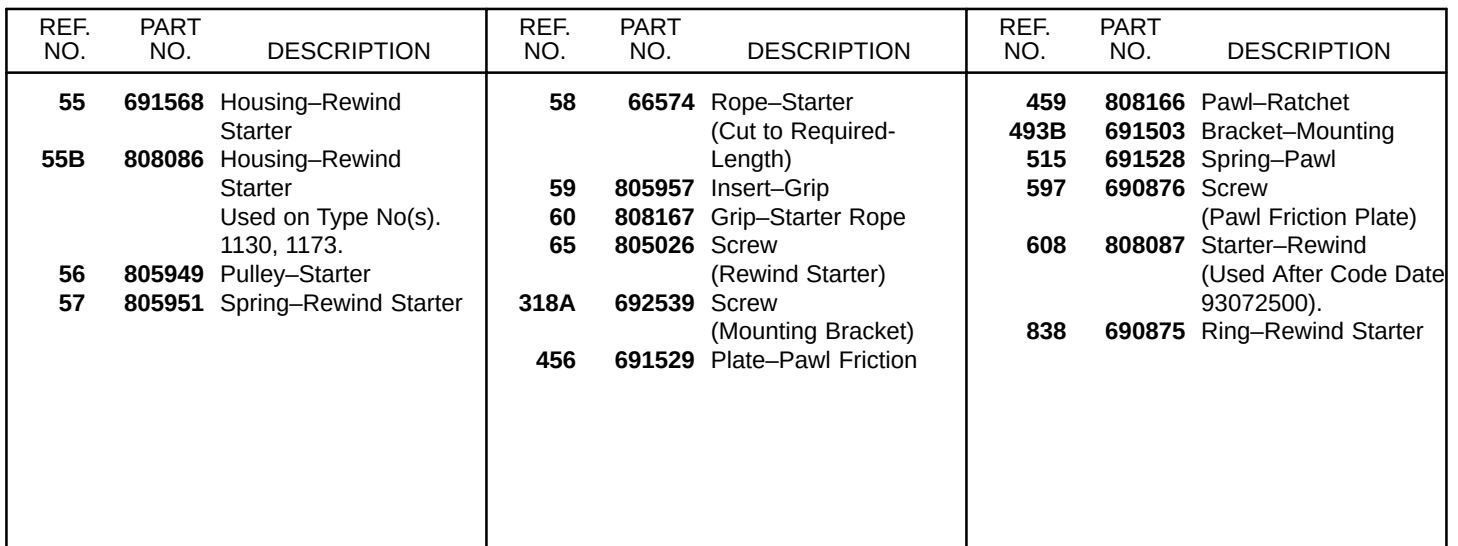

△ Included in Valve Gasket Set—See Ref. 1095.

294400 to 294499

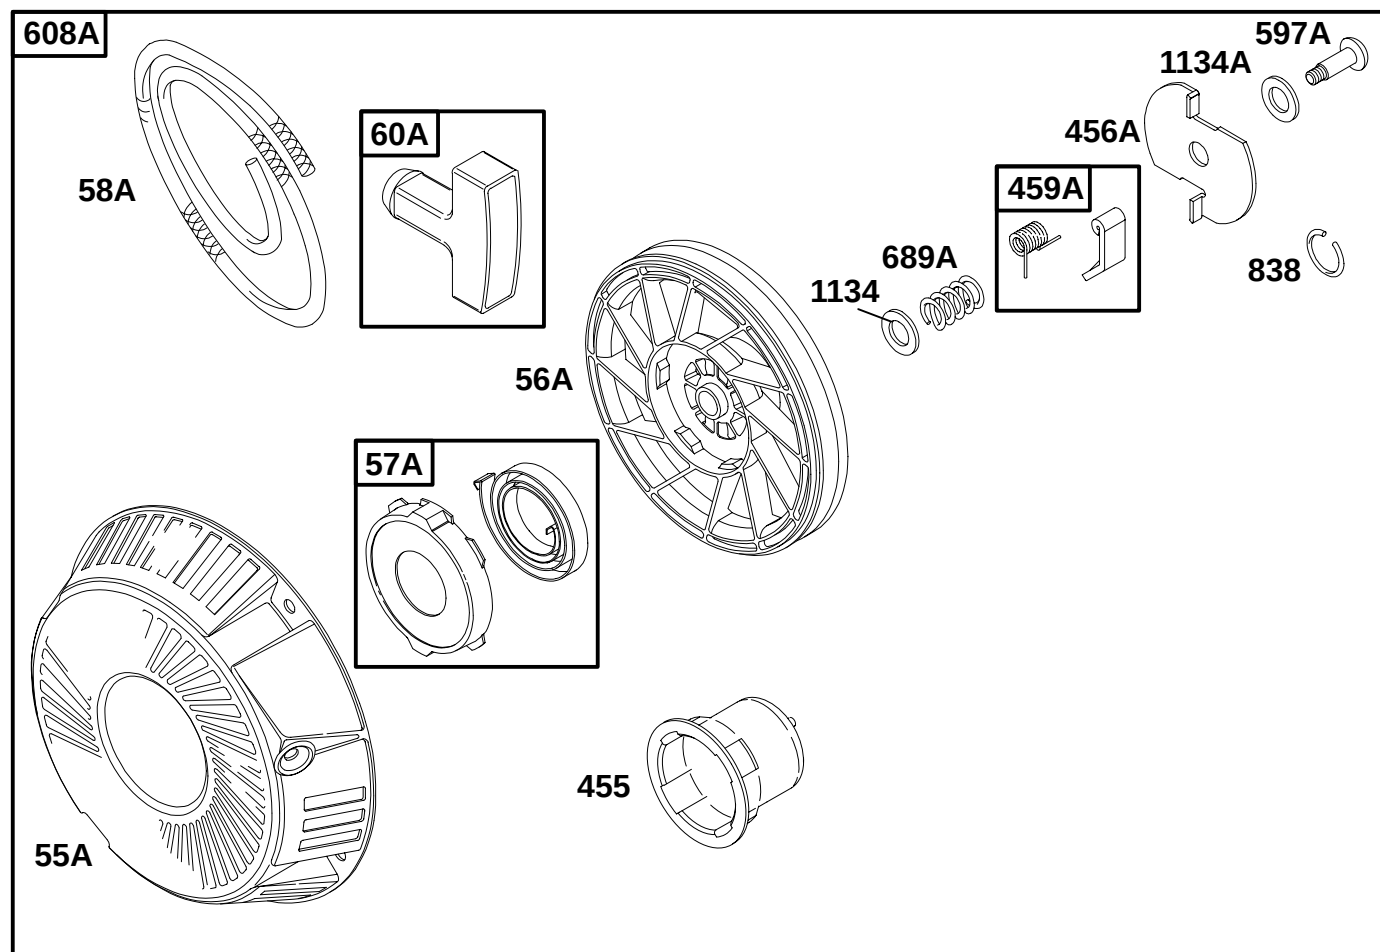


65A 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
55A	492193	Housing-Rewind Starter	455	691517	Cup-Flywheel	689A	262564	Spring-Friction
56A	494956	Pulley-Starter	456A	224228	Plate-Pawl Friction	838	690875	Retainer
57A	492194	Spring-Rewind Starter	459A	492431	Ratchet-Pawl	1134	94464	Washer (Pawl Friction Plate)
58A	66894	Rope-Starter (Cut to Length)	597A	94463	Screw (Pawl Friction Plate)	1134A	94462	Washer (Pawl Friction Plate)
60A	490652	Grip-Starter Rope	608A	808152	Starter-Rewind (Used Before Code Date 93072600).			
65A	692539	Screw (Rewind Starter)						

★ Included in Engine Gasket Set-See Ref. 358.
● Included in Carburetor Overhaul Kit-See Ref. 121.

△ Included in Valve Gasket Set-See Ref. 1095.

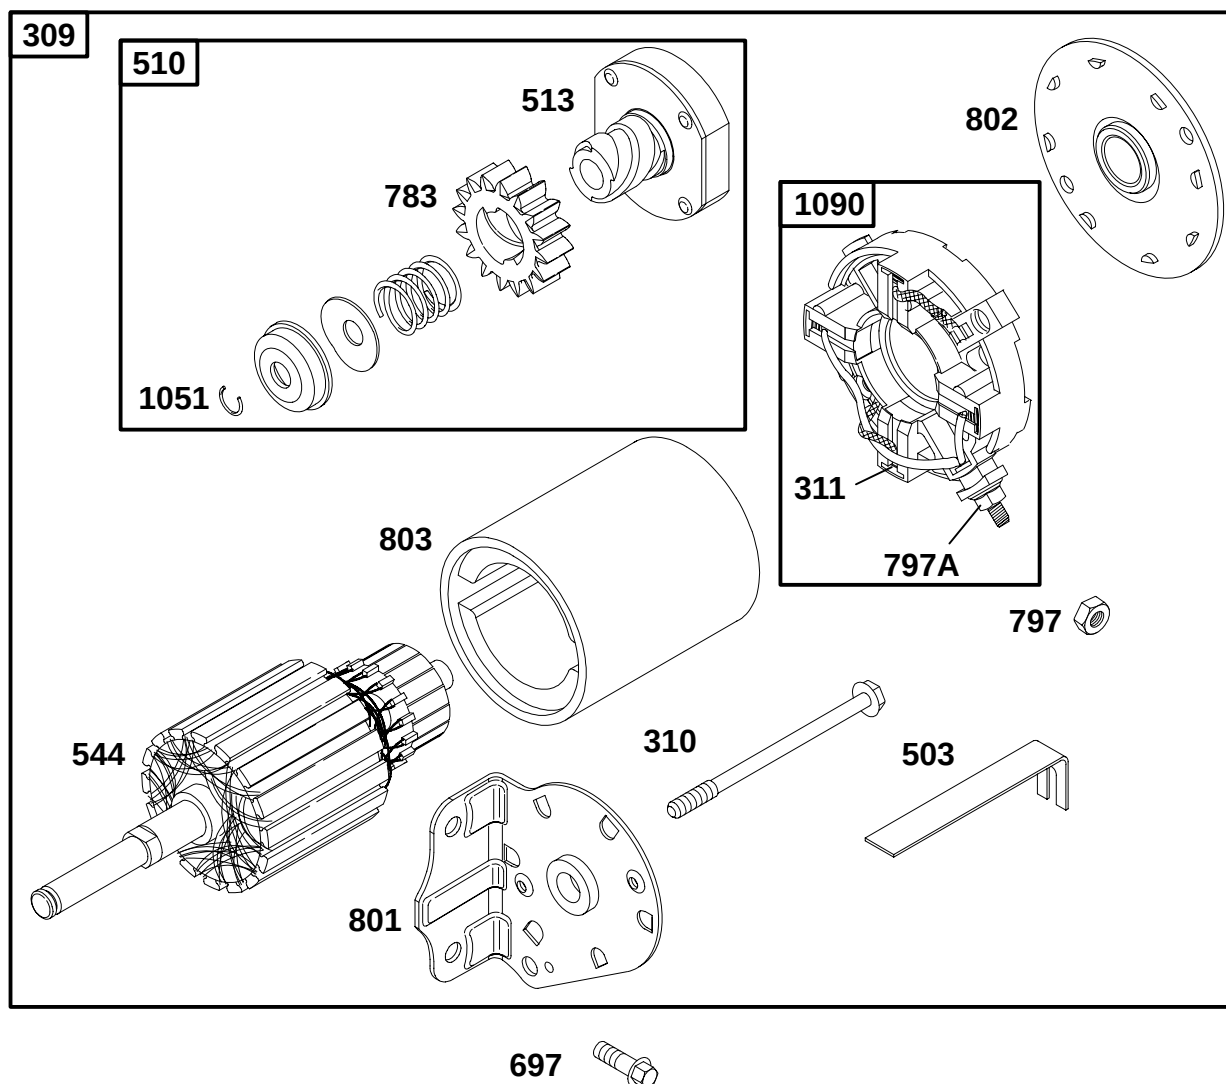


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
309	499521	Motor-Starter (Services Aluminum Ring Gear Only)	544		Armature-Starter (Served By 499521 Starter Motor Only)	797A	693167	Nut (Brush Retainer)
310	691263	Bolt (Starter Motor) (10 24x4 3/16)	697	805247	Screw (Drive Cap)	801	691429	Cap-Drive
311	497608	Brush Set	783	693059	Gear-Pinion (Services Aluminum Ring Gear Only)	802	497607	Cap-End
503	691532	Strap-Starter	797	92278	Nut (Brush Retainer)	803		Housing-Starter (Served By 499521 Starter Motor Only)
510	497606	Drive-Starter				1051	263080	Ring-Retaining
513	398003	Clutch-Drive				1090	497605	Retainer-Brush

★ Included in Engine Gasket Set-See Ref. 358.
● Included in Carburetor Overhaul Kit-See Ref. 121.

△ Included in Valve Gasket Set-See Ref. 1095.


294400 to 294499

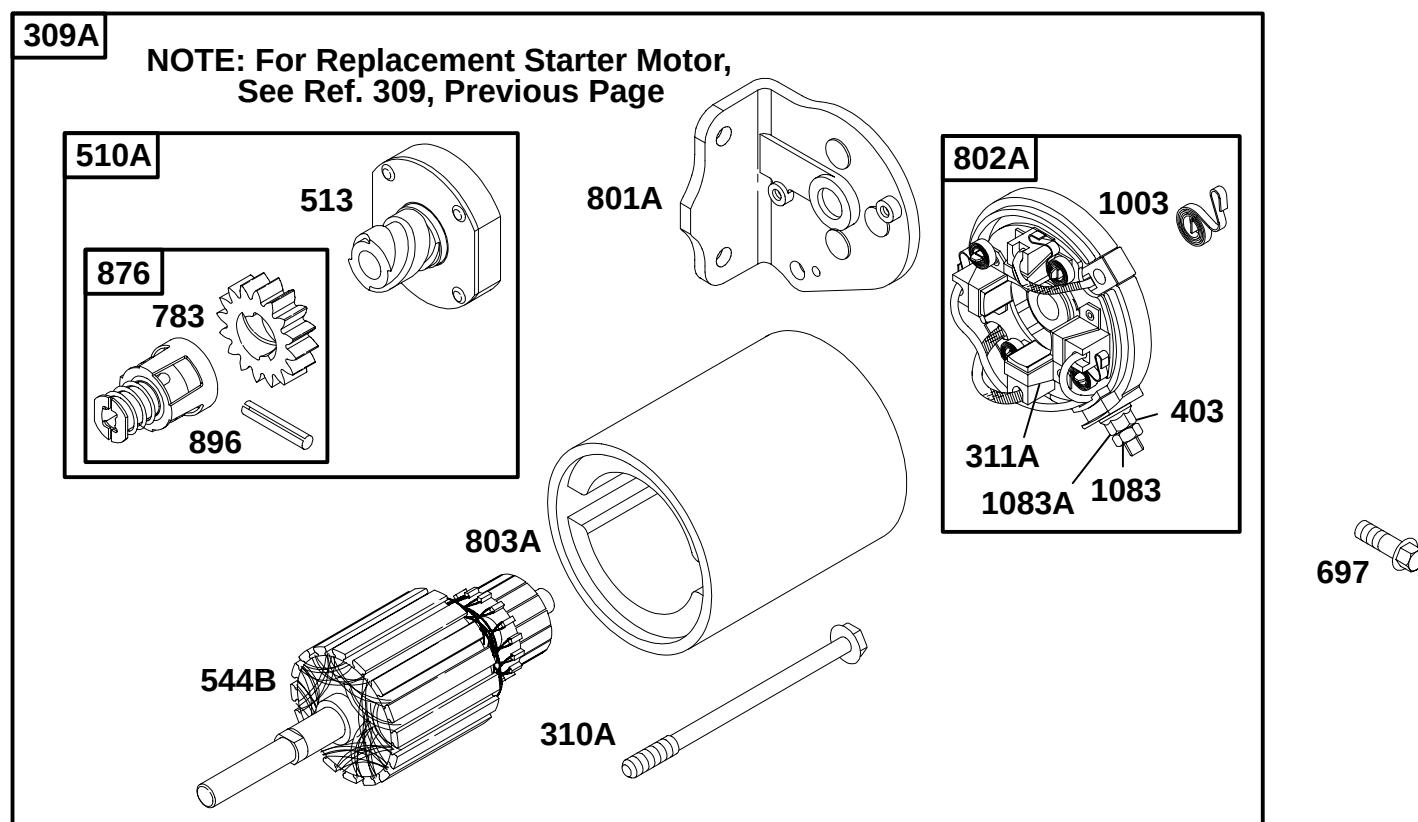

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
309A		Motor-Starter (For Replacement Starter Motor, See Ref 309, Previous Page) (Services Aluminum Ring Gear Only)	510A	495878	Drive-Starter	803A	494205	Housing-Starter (For 4 3/8" Housing Length)
			513	398003	Clutch-Drive			----- Note -----
			544B	490309	Armature-Starter (For 4 3/8" Housing Length)			398892 Housing-Starter
310A	692329	Bolt (Starter Motor) (10 24x5 3/8)	697	805247	Screw (Drive Cap)			(For 4 9/16" Housing Length)
311A	490311	Brush Set (For 4 9/16" Housing Length)	783	693059	Gear-Pinion (Services Aluminum Ring Gear Only)	876	495877	Kit-Pinion Spring
			801A	394856	Cap-Drive	896	94288	Pin-Drive Retainer
403	690288	Washer (End Cap)	802A	494988	Cap-End (For 4 3/8" Housing Length)	1003	490316	Spring-Brush
						1083	93715	Nut (End Cap)
						1083A	94010	Nut (End Cap)

★ Included in Engine Gasket Set-See Ref. 358.
● Included in Carburetor Overhaul Kit-See Ref. 121.

△ Included in Valve Gasket Set-See Ref. 1095.

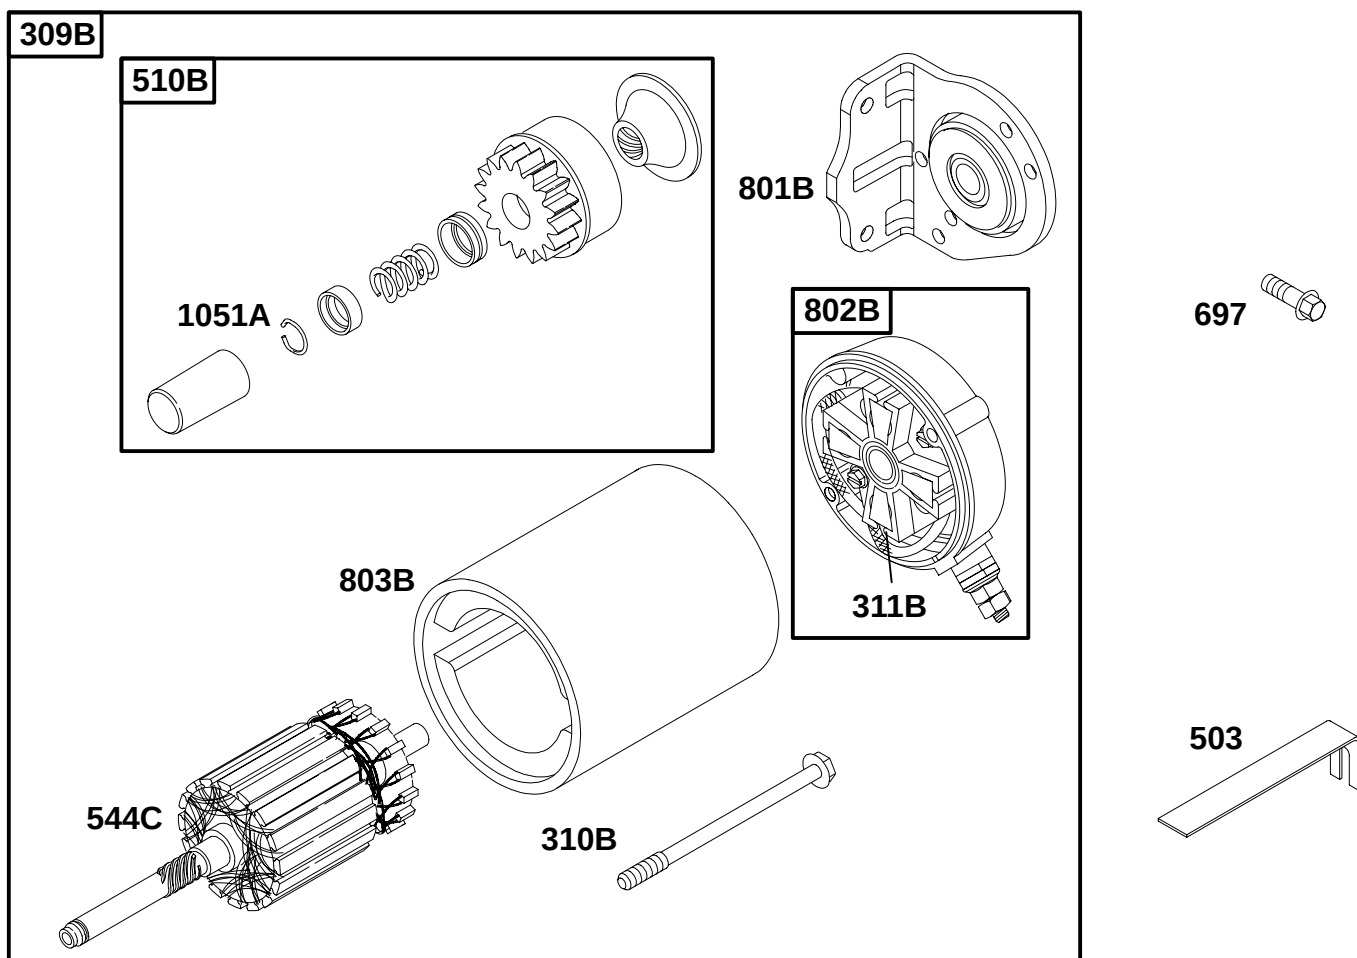

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
309B	691564	Motor-Starter (Services Steel Ring Gear Only)	311B	496887	Brush Set	697	805247	Screw (Drive Cap)
310B	496880	Bolt (Starter Motor) (1/4 20 x 4 1/4)	503	691532	Strap-Starter	801B	808777	Cap-Drive
			510B	496881	Drive-Starter (Services Steel Ring Gear Only)	802B	496813	Cap-End
			544C	690855	Armature-Starter	803B	690854	Housing-Starter
						1051A	691124	Ring-Retaining


★ Included in Engine Gasket Set—See Ref. 358.
● Included in Carburetor Overhaul Kit—See Ref. 121.

△ Included in Valve Gasket Set—See Ref. 1095.

294400 to 294499

309C

**Note: For Replacement Starter Motor,
See Ref. 309, Previous Pages**

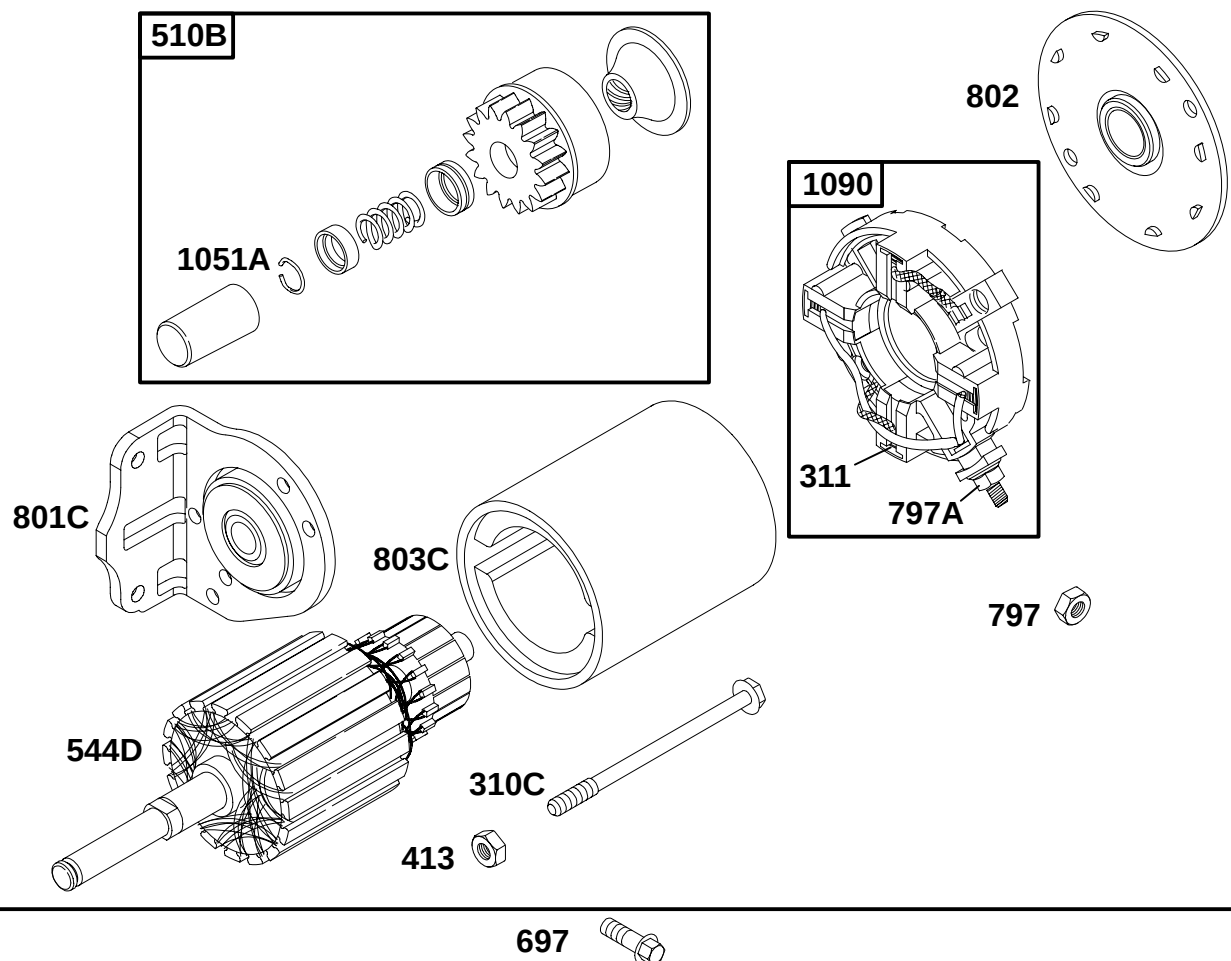


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
309C		Motor-Starter (For Replacement Starter Motor, See Ref 309, Previous Pages)	413	693587	Nut (Starter Motor)	797	92278	Nut (Brush Retainer)
310C	690323	Bolt (Starter Motor) (10 24 x 4 7/16)	510B	496881	Drive-Starter (Services Steel Ring Gear Only)	797A	693167	Nut (Brush Retainer)
311	497608	Brush Set	544D	693548	Armature-Starter	801C	808778	Cap-Drive
			697	805247	Screw (Drive Cap)	802	497607	Cap-End
						803C	693547	Housing-Starter
						1051A	691124	Ring-Retaining
						1090	497605	Retainer-Brush

★ Included in Engine Gasket Set—See Ref. 358.

● Included in Carburetor Overhaul Kit—See Ref. 121.

△ Included in Valve Gasket Set—See Ref. 1095.


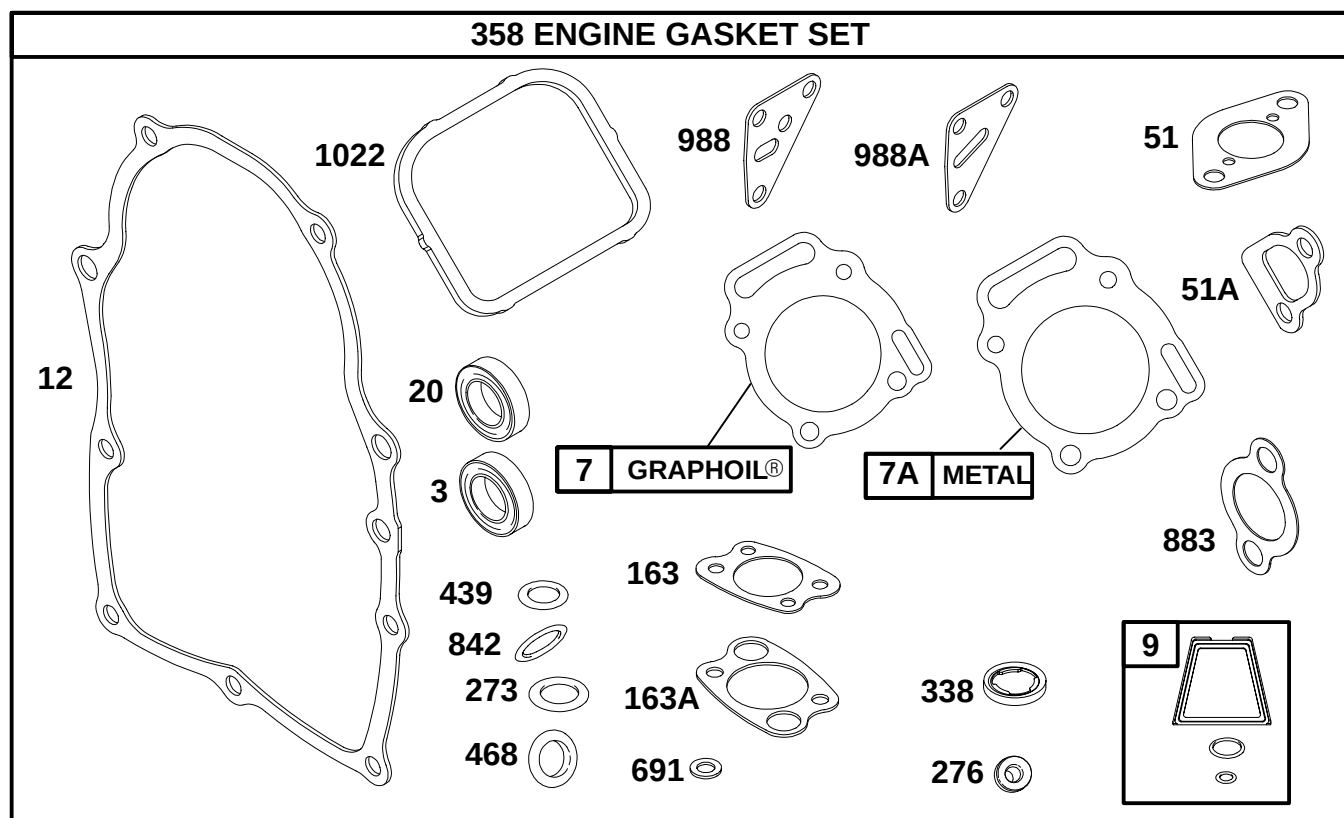


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
3	★805101	Seal—Oil	20	★805049	Seal—Oil	439	★692154	O—Ring Seal (Crankcase Cover/ Sump)
7	★Δ806085	Gasket—Cylinder Head (Used After Code Date 96033100).	51	★805700	Gasket—Intake (Manifold To Carburetor)			(Used After Code Date 97043000).
7A	★Δ807986	Gasket—Cylinder Head (Used Before Code Date 96040100).	51A	★Δ805023	Gasket—Intake (Manifold To Head)			----- Note -----
9	★807688	Gasket—Breather	163	★805655	Gasket—Air Cleaner			★805198 O—Ring Seal (Crankcase Cover/ Sump)
12	★806190	Gasket—Crankcase (Used After Code Date 97043000).	163A	★805003	Gasket—Air Cleaner			(Used Before Code Date 97050100).
		----- Note -----	273	★690681	O—Ring Seal (Oil Pump)			
		★691684 Gasket—Crankcase (Used Before Code Date 97050100).	276	★Δ805420	Washer—Sealing (Governor Crank)	468	★690690	O—Ring Seal (Oil Pump Screen)
			338	★Δ691312	Gasket—Dipstick	691	★690680	Seal—Governor Shaft
			358	808390	Gasket Set—Engine	842	★805386	O—Ring Seal
						883	★Δ805024	Gasket—Exhaust
						988	★805250	Gasket—Oil Adapter
						988A	★690687	Gasket—Oil Adapter
						1022	★Δ806039	Gasket—Rocker Cover

★ Included in Engine Gasket Set—See Ref. 358.
 ● Included in Carburetor Overhaul Kit—See Ref. 121.

Δ Included in Valve Gasket Set—See Ref. 1095.

294400 to 294499

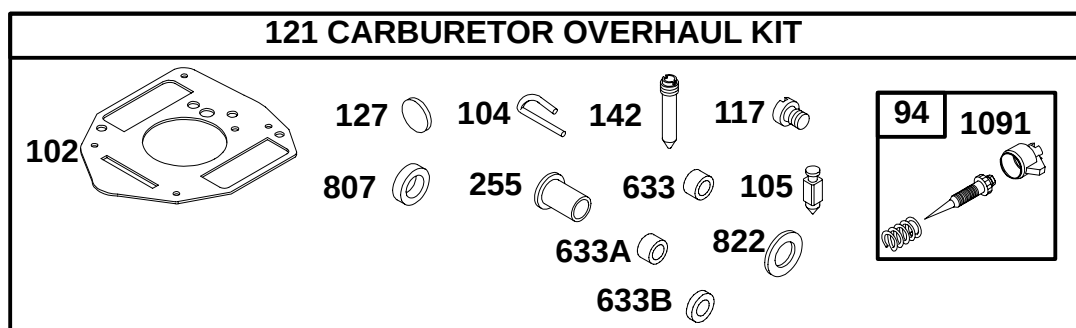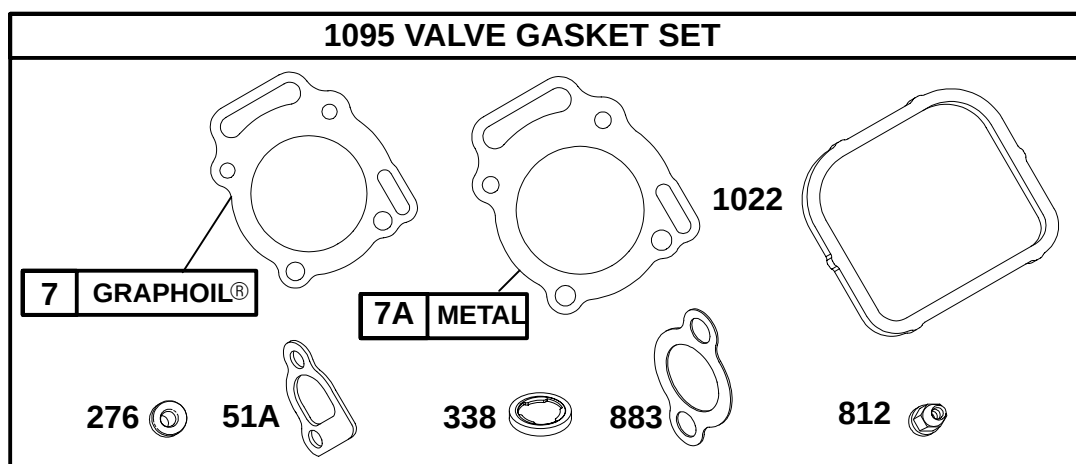

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
7	★Δ806085	Gasket-Cylinder Head (Used After Code Date 96033100).	121	809021	Kit-Carburetor Overhaul (Used After Code Date 00073100).	127	●690727	Plug-Welch
7A	Δ★807986	Gasket-Cylinder Head (Used Before Code Date 96040100).			----- Note ----- 807850 Kit-Carburetor Overhaul (Used Before Code Date 00080100).	142	●690725	Nozzle-Carburetor
51A	★Δ805023	Gasket-Intake			809020 Kit-Carburetor Overhaul (Used After Code Date 00073100).	255	●690721	Bushing-Choke Shaft
94	●808257	Kit-Idle Mixture			Used on Type No(s). 0478, 1155, 1178.	276	★Δ805420	Washer-Sealing
102	●805541	Gasket-Carburetor Body			808262 Kit-Carburetor Overhaul (Used Before Code Date 00080100).	338	★Δ691312	Gasket-Dipstick
104	●690723	Pin-Float Hinge			Used on Type No(s). 0478, 1155, 1178.	633	●806131	Seal-Choke/Throttle Shaft
105	●805547	Valve-Float Needle (Pump Feed Carburetors)				633A	●695414	Seal-Choke/Throttle Shaft
		----- Note ----- ●805620 Valve-Float Needle (Gravity Feed Carburetors)				633B	●690722	Seal-Choke/Throttle Shaft
117	●690861	Jet-Main				807	●805557	Spacer-Throttle
						812	Δ805019	Nut (Rocker Cover)
						822	●690724	O-Ring Seal (Carburetor Plug)
						883	★Δ805024	Gasket-Exhaust
						1022	★Δ806039	Gasket-Rocker Cover
						1095	808392	Set-Valve Gasket
						1091	●691516	Cap-Limiter

★ Included in Engine Gasket Set-See Ref. 358.
● Included in Carburetor Overhaul Kit-See Ref. 121.

Δ Included in Valve Gasket Set-See Ref. 1095.