

91200 to 91299

Illustrated Parts List

Model Series

91200 to 91299

TYPE NUMBERS

0002 through 0024,
0034 through 0042,
0049 through 0068,
0104 through 0168,
0171 through 0198,
0200 through 0227,
0249, 0335, 0354,
0359, 0609, 0616,
0619, 0620, 0649,
0676, 0680, 0800,
1002, 1004, 1005,
1013 through 1025,
1034 through 1042,

TYPE NUMBERS

1047 through 1054,
1059 through 1068,
1204 through 1218,
1220 through 1231,
1234 through 1241,
1244 through 1257,
1264, 1267, 1274,
1278, 1286, 1289,
1290, 1292, 1296,
1300 through 1310,
1313, 1314, 1319,
1323 through 1331,
1353 through 1372.

TO FIND

**THE CORRECT NUMBER OF THE PART YOU NEED:
FOLLOW THE INSTRUCTIONS BELOW**


- A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 0123 01 are listed only as 0123 in most instances. The two digits (01 or 02, etc.) to the right of the space may be required for more accurate parts identification in some instances. Select the Illustrated Parts List covering the correct Model Series and Type Number.
- B. Refer to the Illustrations and compare the original part with Illustration. The number next to the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames having individual reference numbers can be purchased separately.
- C. After the Reference Number has been identified, refer to the Numerical text, where Reference and Primary Part Number are listed. **THE PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE."**
- D. If a "Note" appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types. If your Type number is listed under "Note," order the part referred to at the "Note."
- E. If your Engine Type Number does not appear after any part number listed under "Note," use the Primary Part Number.
- F. For Engine Type Numbers not covered by this book, check other Parts Lists having the same engine model or contact your source of supply.

PRINTED IN U.S.A.



COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

91200 to 91299

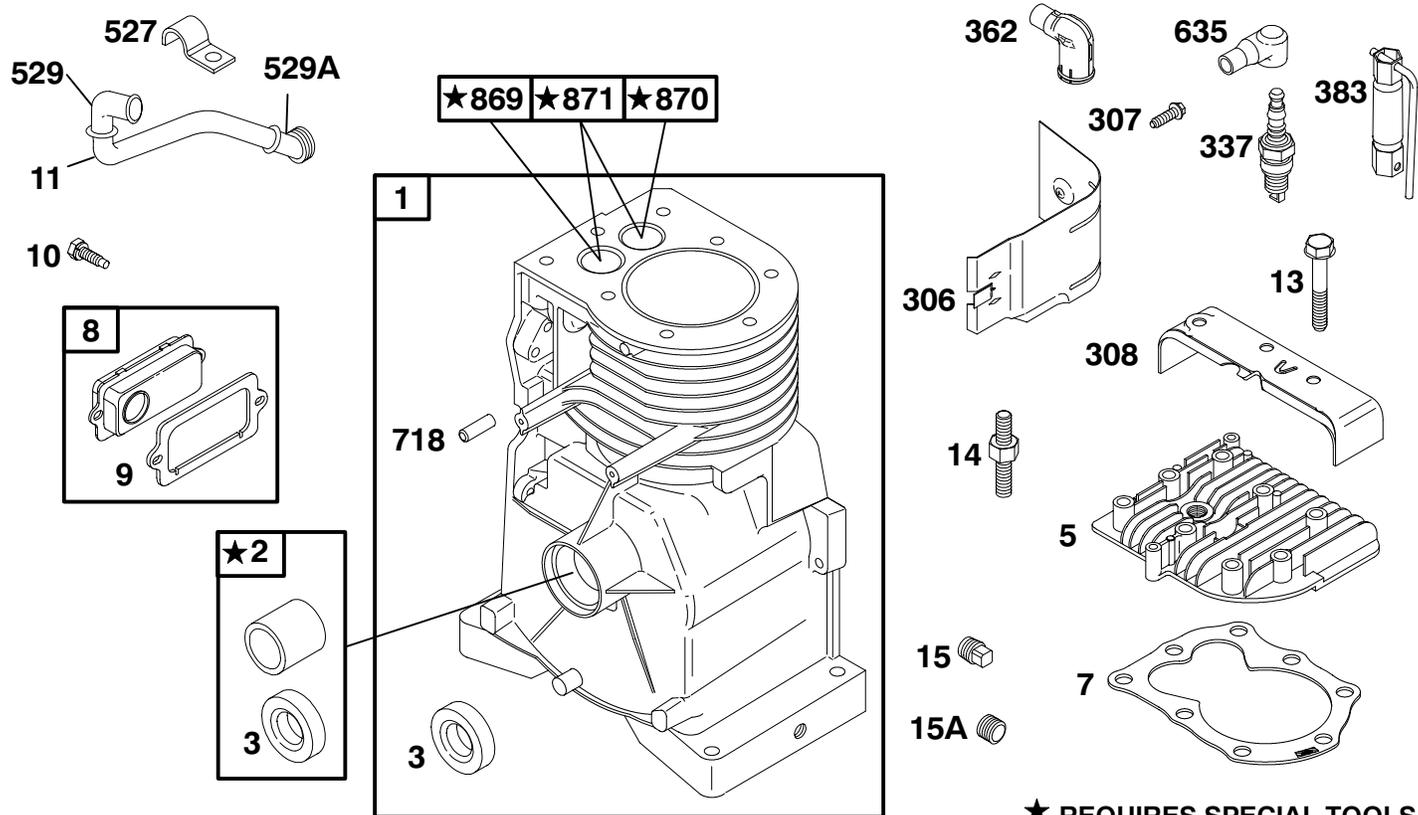

★ **REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.**

1019 LABEL KIT


1058 OWNER'S MANUAL

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	494549	Cylinder Assembly	307	94680	Screw (Cylinder Shield)	871	262001	Bushing-Valve Guide (Exhaust) (Used After Code Date 92071900).
2	399269	Kit-Bushing/Seal (Magneto Side)	308	690462	Cover-Cylinder Head			
3	★299819	Seal-Oil (Magneto Side)	337	492167	Sparkplug			
5	690386	Head-Cylinder			Note ----- 802592 Sparkplug (Resistor)			Note ----- 231348 Bushing-Valve Guide (Exhaust) (Used Before Code Date 92072000).
7★	272694	Gasket-Cylinder Head	362	392273	Shield-Sparkplug Used on Type No(s). 0013.			63709 Bushing-Valve Guide (Intake)
8	495774	Breather Assembly	383	89838	Wrench-Sparkplug	1019	491069	Kit-Label
9★	27549	Gasket-Breather	527	223786	Clamp-Tube	1058	274260	Owner's Manual (Emission Engine) Note ----- 272643 Owner's Manual (Non-Emission Engine)
10	691666	Screw (Breather Assembly)	529A	★66578	Grommet			
11	231527	Tube-Breather	635	66538	Grommet-Sparkplug			
13	94221	Screw (Cylinder Head)	718	230192	Pin-Locating (Cylinder)			
14	690361	Stud (Cylinder Head)	869	211172	Seat-Valve (Intake)			
15	94916	Plug-Oil Drain (Square Head)	870	211291	Seat-Valve (Exhaust)			
15A	94886	Plug-Oil Drain (Hex Socket)						
306	690461	Shield-Cylinder						

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

Included in Valve Gasket Set-Ref. No. 1095.

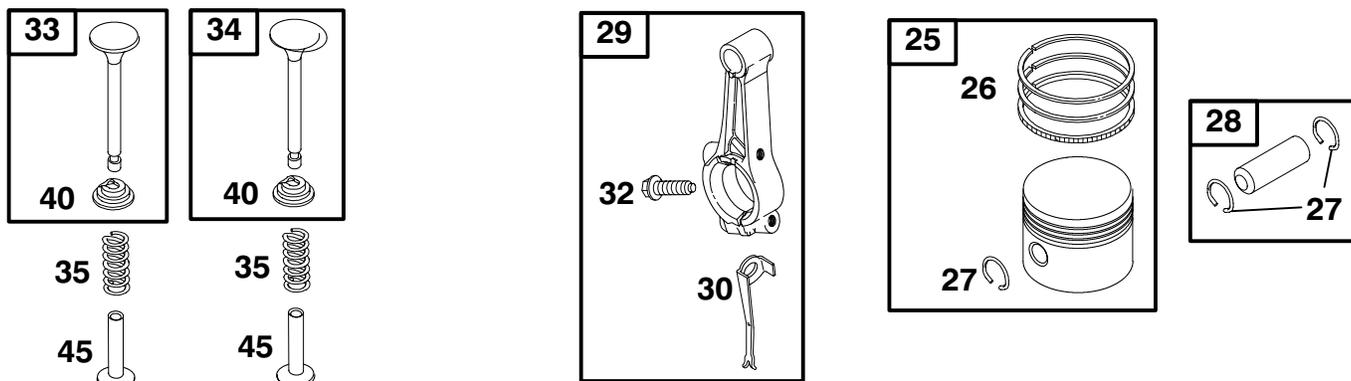


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
25	498668	Piston Assembly (Standard) (Used After Code Date 96012800). ----- Note ----- 298904 Piston Assembly (Standard) (Used Before Code Date 96012900).	26	498680	Ring Set (Standard) (Used After Code Date 96012800). ----- Note ----- 298982 Ring Set (Standard) (Used Before Code Date 96020600).	27	26026	Lock-Piston Pin
		498669 Piston Assembly (.010 O.S.) (Used After Code Date 96012800). 298905 Piston Assembly (.010 O.S.) (Used Before Code Date 96012900).			498681 Ring Set (.010 O.S.) (Used After Code Date 96012800). 298983 Ring Set (.010 O.S.) (Used Before Code Date 96020600).	28	298909	Pin-Piston (Standard) ----- Note ----- 298908 Pin-Piston (.005 O.S.)
		498670 Piston Assembly (.020 O.S.) (Used After Code Date 96012800). 298906 Piston Assembly (.020 O.S.) (Used Before Code Date 96012900).			498682 Ring Set (.020 O.S.) (Used After Code Date 96012800). 298984 Ring Set (.020 O.S.) (Used Before Code Date 96020600).	29	294367	Rod-Connecting (Standard) ----- Note ----- 296079 Rod-Connecting (.020 Undersize)
		498671 Piston Assembly (.030 O.S.) (Used After Code Date 96012800). 298907 Piston Assembly (.030 O.S.) (Used Before Code Date 96012900).			498683 Ring Set (.030 O.S.) (Used After Code Date 96012800). 298985 Ring Set (.030 O.S.) (Used Before Code Date 96020600).	30	220670	Dipper-Connecting Rod
						32	94699	Screw (Connecting Rod)
						33	296676	Valve-Exhaust ----- Note ----- 262581 Valve-Exhaust Used on Type No(s). 0063, 0127. 497871 Valve-Exhaust Used on Type No(s). 1063.
						34	296677	Valve-Intake
						35	260552	Spring-Valve (Exhaust)
						36	262750	Spring-Valve (Intake) Used on Type No(s). 0063, 0127.
						40	93312	Retainer-Valve ----- Note ----- 691367 Retainer-Valve (Exhaust) Used on Type No(s). 0063, 0127.
						45	230173	Tappet-Valve

★ Included in Engine Gasket Set-Ref. No. 358.
● Included in Carburetor Overhaul Kit-Ref. No. 121.

Included in Valve Gasket Set-Ref. No. 1095.

91200 to 91299


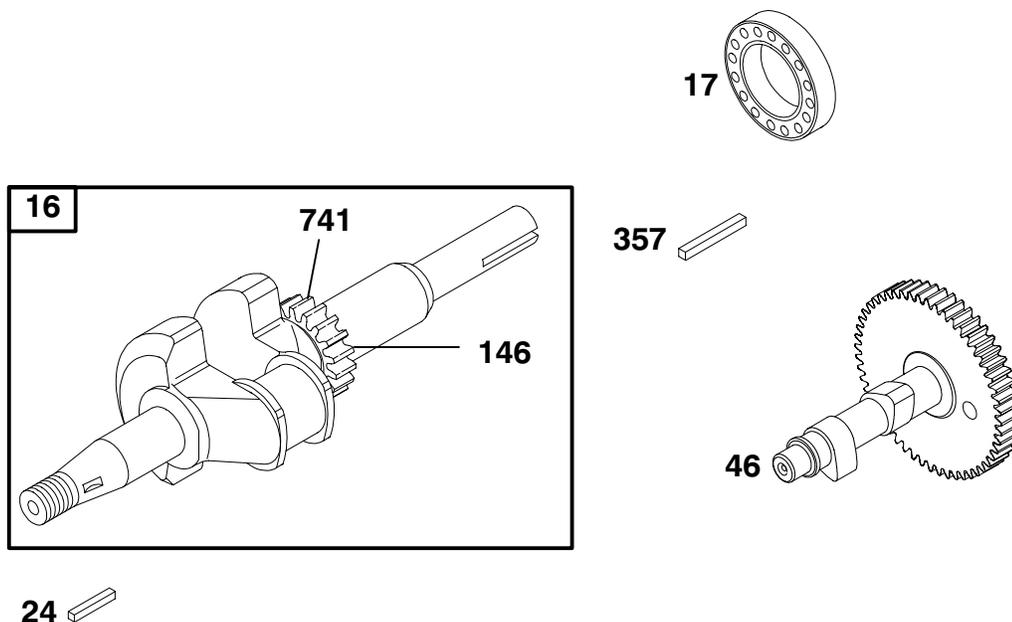


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
16	492880	Crankshaft ----- Note ----- 691488 Crankshaft Used on Type No(s). 1040, 1286, 1353. 691489 Crankshaft Used on Type No(s). 1036, 1052, 1062, 1063, 1304, 1308. 692146 Crankshaft Used on Type No(s). 0800, 1014, 1020, 1034, 1035, 1047, 1054, 1061, 1207, 1214, 1215, 1218, 1234, 1253, 1310, 1323, 1325, 1328, 1362, 1363, 1364, 1365, 1369. 691473 Crankshaft Used on Type No(s). 1292, 1367. 691474 Crankshaft Used on Type No(s). 1209, 1231, 1249, 1309.			690673 Crankshaft Used on Type No(s). 1049, 1239, 1250, 1278. 497232 Crankshaft Used on Type No(s). 0003, 0013, 0017, 0018, 0040, 0064, 0067, 0119, 0123, 0127, 0128, 0129, 0131, 0135, 0144, 0146, 0149, 0150, 0151, 0160, 0172, 0186, 0189, 0198, 0227, 0609, 0616, 0620, 0649, 1002, 1005, 1013, 1017, 1025, 1220, 1235, 1244, 1251, 1327, 1354, 1359, 1366, 1368, 1371. 690821 Crankshaft Used on Type No(s). 0014, 0020, 0034, 0035, 0038, 0061, 0068, 0105, 0107, 0114, 0115, 0116,			0118, 0133, 0134, 0145, 0153, 0155, 0156, 0162, 0174, 0181, 0188, 0191, 0192, 0201, 0203, 0206, 0207, 0210, 0223, 0225, 0335, 0354, 0676. 495210 Crankshaft Used on Type No(s). 0024, 0036, 0052, 0062, 0063, 0117, 0175, 0204, 0208. 493632 Crankshaft Used on Type No(s). 0219, 0619, 1372. 493599 Crankshaft Used on Type No(s). 0005, 0049, 0050, 0108, 0139, 0165, 0178, 0183.
						17	690824	Bearing-Ball
						24	222698	Key-Flywheel
						46	493747	Camshaft
						146	499047	Key-Timing
						357	91539	Key-Drive Pulley
						741	261533	Gear-Timing

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

Included in Valve Gasket Set-Ref. No. 1095.

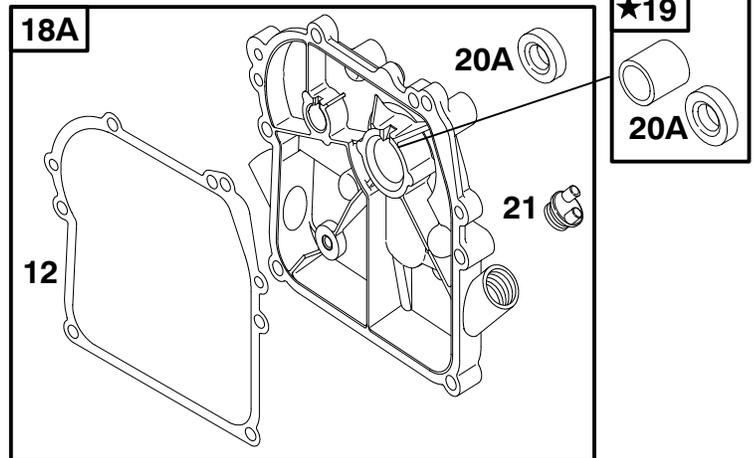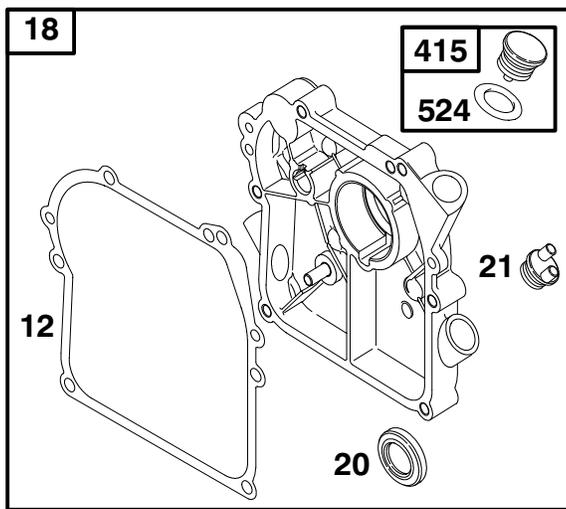


★ REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
12	★270833	Gasket-Crankcase (.015 Thick, Std.)	21	281658	Cap-Oil Fill	170	691120	Stud (Crankcase Cover) (Used in Position 1)
		----- Note -----	22	691129	Screw (Crankcase Cover)			(Used in Position 1)
		★270895 Gasket-Crankcase (.005 Thick)			----- Note -----			Used on Type No(s).
		★270896 Gasket-Crankcase (.009 Thick)			693732 Screw (Crankcase Cover)			1005, 1016, 1017, 1019, 1035, 1036, 1040, 1212, 1241, 1286, 1326.
18	497502	Cover-Crankcase (Ball Bearing Cover)			(Used in Positions No. 1 and 6)	415	691363	Plug
		----- Note -----			Used on Type No(s).	524	271485	Seal-Plug
		4966790 Cover-Crankcase (Ball Bearing Cover)			1002, 1022, 1025, 1042, 1049, 1060, 1221, 1237, 1239, 1240, 1250, 1257, 1267, 1278, 1290, 1292, 1302, 1305, 1319, 1331, 1360, 1366, 1367, 1368, 1370.			
18A	394820	Cover-Crankcase (Plain Bearing Cover)						
19	399269	Kit-Bushing/Seal (PTO Side)						
20	495355	Seal-Oil (PTO Side) (Ball Bearing Covers)						
20A	★299819	Seal-Oil (PTO Side) (Plain Bearing Covers)						

★ Included in Engine Gasket Set-Ref. No. 358.
 ● Included in Carburetor Overhaul Kit-Ref. No. 121.

Included in Valve Gasket Set-Ref. No. 1095.

91200 to 91299


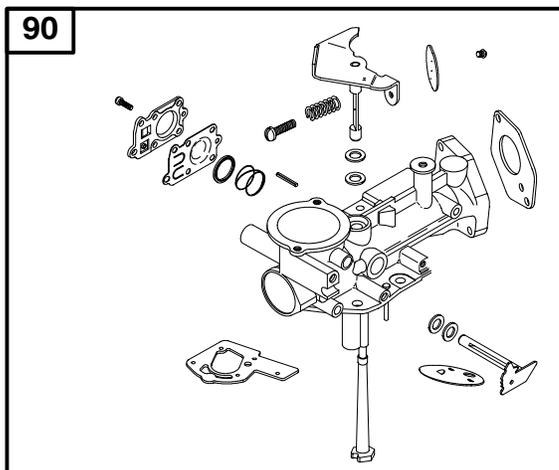


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
90	499952	Carburetor (For 2 Quart Tank) (Used After Code Date 98082300). Used on Type No(s). 1014, 1016, 1017, 1022, 1035, 1036, 1040, 1049, 1212, 1214, 1220, 1234, 1237, 1240, 1241, 1244, 1249, 1250, 1253, 1264, 1267, 1278, 1286, 1290, 1300, 1305, 1309, 1310, 1325, 1328, 1331, 1360, 1361, 1363, 1369, 1370, 1372. ----- Note ----- 499491 Carburetor (For 2 Quart Tank) (Used Before Code Date 98082400). Used on Type No(s). 1014, 1016, 1017, 1022, 1035, 1036, 1040, 1049, 1212, 1214, 1220, 1237, 1240, 1241, 1244, 1249, 1250, 1253, 1264, 1267, 1278, 1286, 1290, 1300, 1305, 1309, 1310, 1325, 1328, 1331, 1360, 1361, 1363.			693029 Carburetor (For 2 Quart Tank) Used on Type No(s). 1257. 495459 Carburetor (For 2 Quart Tank) Used on Type No(s). 0003, 0040, 0049, 0050, 0064, 0067, 0800, 0014, 0016, 0017. 0022, 0024. 0035, 0036, 0037, 0038, 0151, 0159, 0166, 0176, 0178, 0186, 0191, 0197, 0201, 0212, 0225. 499470 Carburetor (For 2 Quart Tank Choke A Matic) Used on Type No(s). 0149, 0153. ----- 499953 Carburetor (For 3 Quart Tank) (Used After Code Date 98082300). Used on Type No(s). 0354, 0359, 0676, 1020, 1034, 1047, 1052, 1054, 1059, 1060, 1061, 1062, 1063, 1204, 1207, 1211, 1215, 1218, 1221, 1235, 1239, 1292, 1304, 1323,			1326, 1327, 1353, 1354, 1362, 1364, 1365, 1367, 1371. 499490 Carburetor (For 3 Quart Tank) (Used Before Code Date 98082400). Used on Type No(s). 1020, 1034, 1047, 1052, 1054, 1059, 1060, 1061, 1062, 1063, 1204, 1207, 1211, 1215, 1218, 1221, 1235, 1239, 1292, 1304, 1308, 1323, 1326, 1327, 1353, 1354, 1362, 1364, 1365, 1367. 495460 Carburetor (For 3 Quart Tank) ----- 495461 Carburetor (For 1 Quart Tank) 499492 Carburetor (For 1 Quart Tank) Used on Type No(s). 0616, 1002, 1005, 1013, 1019, 1025, 1042, 1209, 1222, 1231, 1251, 1302, 1319, 1359, 1366, 1368.

★ Included in Engine Gasket Set-Ref. No. 358.


● Included in Carburetor Overhaul Kit-Ref. No. 121.

Included in Valve Gasket Set-Ref. No. 1095.

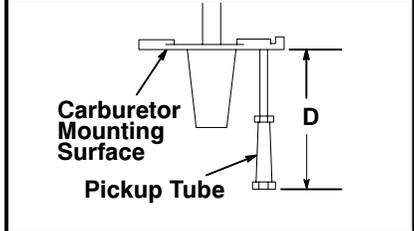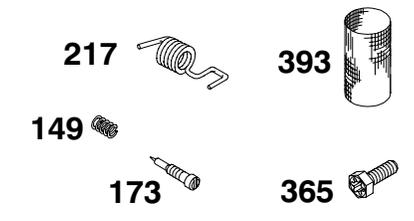

To replace carburetor assembly, determine fuel tank capacity as shown

Fuel Tank Capacity (Quarts)	1	2	3
D (Inches)	2-5/16	4-1/4	4-7/8

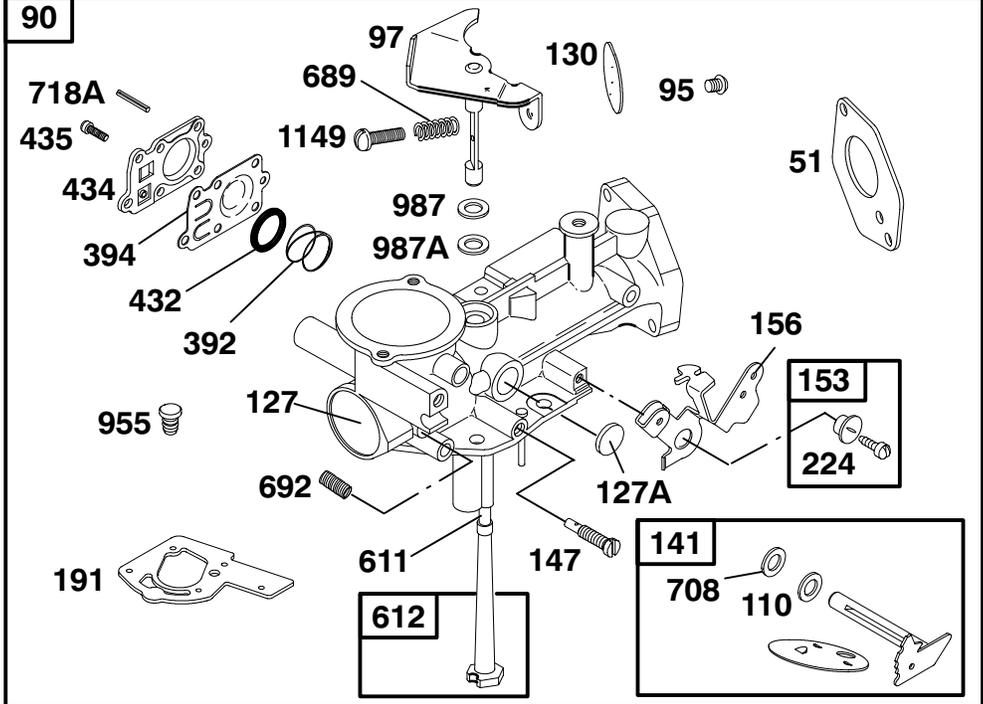


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
51	★273113	Gasket-Intake	147	691250	Jet-Pilot	432	221377	Cap-Spring (Pump Diaphragm)
90		Carburetor (See Previous Page)			----- Note -----	434	213963	Cover-Diaphragm
95	93499	Screw (Throttle Valve)			499502 Jet-Pilot (High Altitude)	435	93141	Screw (Diaphragm Cover)
97	495313	Shaft-Throttle	149	●26336	Spring-Needle Valve	611	690507	Pipe-Fuel (For 2 Quart Tank)
110	690401	Washer (Choke Shaft)	153	490501	Kit-Collar/Screw			----- Note -----
127	220352	Plug-Welch (1" Diameter)	156	692651	Lever-Speed Adjuster			231068 Pipe-Fuel (For 3 Quart Tank)
127A	223789	Plug-Welch (7/16" Diameter)	173	●231533	Valve-Idle Mixture	612	391813	Tube-Pick up (For 2 and 3 Quart Tanks)
130	223793	Valve-Throttle	191	★272489	Gasket-Fuel Tank			----- Note -----
141	497230	Kit-Choke Shaft (Used After Code Date 94083100).	217	262281	Spring-Choke Return			297219 Tube-Pick up (For 1 Quart Tank)
		----- Note -----	224	690320	Screw (Collar/Screw Kit)	689	260575	Spring-Friction (Carburetor)
		491177 Kit-Choke Shaft (Used Before Code Date 94090100).	365	94913	Screw (Carburetor)	692	690572	Spring-Detent
		495949 Kit-Choke Shaft (Used on Type No(s) 0149, 0153).	392	262328	Spring-Pump Diaphragm	708	270382	Seal-Dust
			393	691213	Screen-Carburetor	718A	690296	Pin-Locating (Carburetor)
			394	●272538	Diaphragm-Carburetor (Used After Code Date 92090600).			----- Note -----
					----- Note -----	955	281227	Plug-Carburetor
					●270026 Diaphragm-Carburetor (Used Before Code Date 92090700).	987	271853	Seal-Throttle Shaft
						987A	398970	Seal-Throttle Shaft
						1149	93527	Screw (Throttle Shaft)

★ Included in Engine Gasket Set-Ref. No. 358.
● Included in Carburetor Overhaul Kit-Ref. No. 121.

Included in Valve Gasket Set-Ref. No. 1095.

91200 to 91299

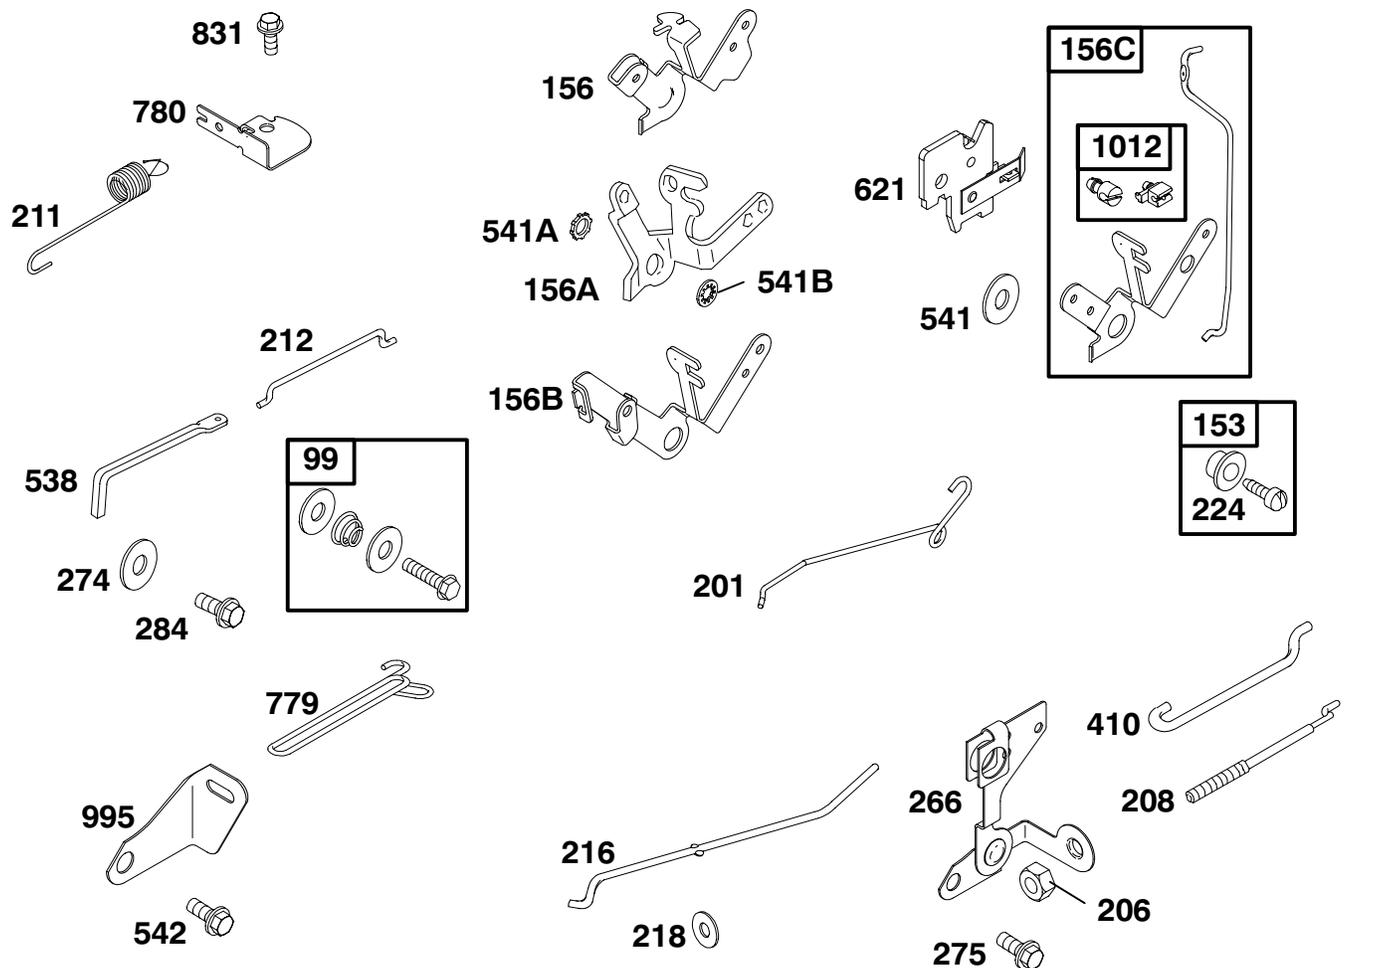


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
99	490956	Kit-Spring/Screw	224	690320	Screw	541B	690288	Washer
153	490501	Kit-Collar/Screw			(Collar/Screw Kit)			(Speed Adjuster Lever)
156	692651	Lever-Speed Adjuster	266	691414	Control-Throttle	542	94897	Screw
156A	690439	Lever-Speed Adjuster	274	66432	Washer			(Link Bracket)
156B	690438	Lever-Speed Adjuster			(Cable Casing)	621	296110	Switch-Stop
156C	492905	Lever-Speed Adjuster	275	94897	Screw	779	262570	Link-Bell Crank
201	691305	Link-Air Vane			(Throttle Control)	780	691211	Anchor-Spring
206	690325	Nut	284	691082	Screw	831	691099	Screw
		(Governor Control Rod)			(Control Wire Casing)			(Spring Anchor)
208	262321	Rod-Governor Control	410	691274	Link-Control	995	225057	Bracket-Link
211	691289	Spring-Governed Idle	538	260683	Rod-Control			(Used After Code Date 94083100).
212	260684	Link-Throttle	541	691067	Washer			----- Note -----
216	690551	Link-Choke			(Speed Adjuster Lever)			691756 Bracket-Link
218	221198	Washer			(Replaces Stop Switch, Ref. 621)			(Used Before Code Date 94090100).
		(Choke Link)	541A	690299	Washer	1012	490507	Retainer-Link
					(Speed Adjuster Lever)			

★ Included in Engine Gasket Set-Ref. No. 358.


● Included in Carburetor Overhaul Kit-Ref. No. 121.

Included in Valve Gasket Set-Ref. No. 1095.

209

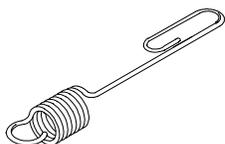

419

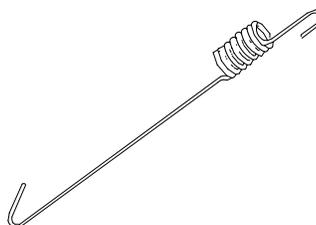


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
209	260041	Spring-Governor ----- Note ----- 260662 Gov. Spring Used on Type No(s). 0003, 0005, 0013, 0014, 0024, 0035-01, 0115, 0118, 0127, 0135, 0144, 0146, 0150, 0160, 0179, 0186, 0201, 0210, 0225, 1227. 263200 Spring- Governor Used on Type No(s). 0354, 0609. 692911 Spring- Governor Used on Type No(s). 1020, 1034, 1036, 1047, 1052, 1054, 1061, 1062, 1063, 1304, 1308, 1323, 1353, 1354, 1364, 1365. 262317 Spring- Governor Used on Type No(s). 0002, 0004, 0020, 0034, 0036, 0038, 0052, 0060, 0061, 0062, 0063, 0067, 0116, 0117, 0123, 0133, 0136, 0151, 0159, 0174, 0175, 0177, 0182, 0183, 0190, 0196, 0204, 0205, 0208, 0209, 0223, 0227, 0335, 1004, 1217, 1274, 1296.			262391 Spring- Governor Used on Type No(s). 0015, 0018, 0128, 0129, 0137, 0149, 0153, 0180, 0359, 0616, 0619, 0620, 0649, 0676, 1015, 1018, 1228. 690563 Spring- Governor Used on Type No(s). 0017, 0022, 0035-02, 0042, 0050, 0059, 0111, 0114, 0119, 0120, 0121, 0122, 0125, 0131, 0138, 0140, 0141, 0142, 0145, 0155, 0156, 0161, 0164, 0168, 0172, 0176, 0181, 0189, 0197, 0198, 0212, 0213, 0214, 0219, 0249, 0680, 1017, 1022, 1025, 1035-E2, 1042, 1059, 1209, 1211, 1212, 1214, 1220, 1221, 1231, 1237, 1240, 1249, 1250, 1251, 1253, 1264, 1289, 1305, 1309, 1313, 1314, 1319, 1328, 1360, 1366, 1368.			692612 Spring- Governor Used on Type No(s). 1013, 1014, 1215, 1218, 1235, 1244, 1286, 1310, 1325, 1362, 1363, 1370. 692613 Spring- Governor Used on Type No(s). 1234, 1292, 1302, 1359, 1367. 419 262288 Spring-Return Used on Type No(s). 0121.

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

Included in Valve Gasket Set-Ref. No. 1095.

91200 to 91299




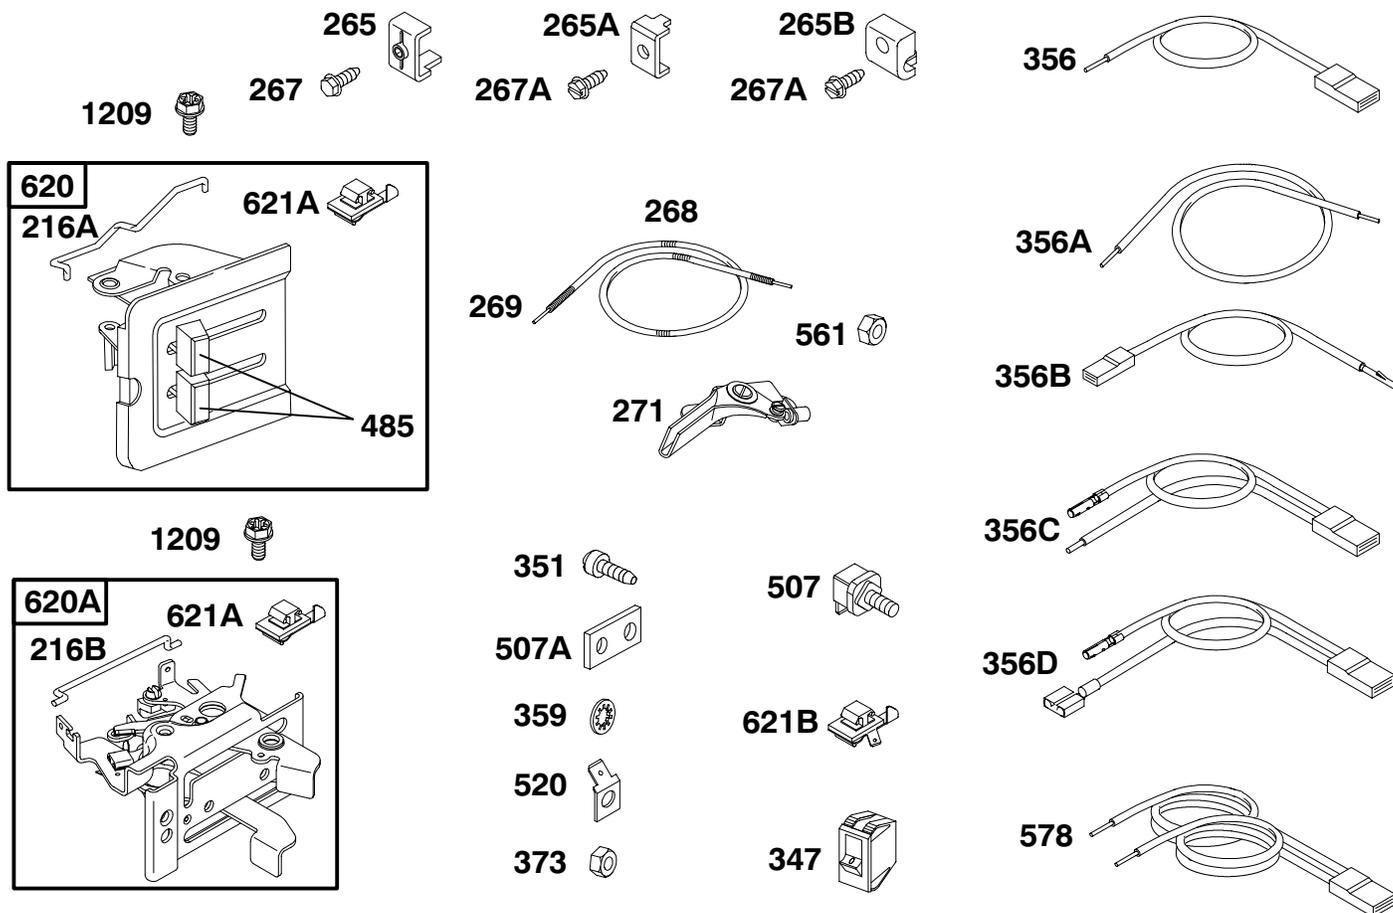


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
216A	262359	Link-Choke	351	90200	Screw	356C	691418	Wire-Stop
216B	263188	Link-Choke			(Ground Terminal)	356D	691409	Wire-Stop
265	690393	Clamp-Casing	356	692390	Wire-Stop	359	691077	Washer
265A	691024	Clamp-Casing			----- Note -----			(Ground Terminal)
265B	213146	Clamp-Casing			490346 Wire-Stop	373	90576	Nut
267	691082	Screw			Used on Type No(s).			(Ground Terminal)
267A	94906	Screw			0002, 0003, 0004,	485	280715	Knob-Control
		(Casing Clamp)			0005, 0016, 0017,	507	398525	Insulator
268	65616	Casing-Control Wire			0022, 0024, 0035,	507A	66895	Insulator
		(Cut to Length)			0036, 0037, 0038,	520	691084	Terminal-Ground
269	26633	Wire-Control			0040, 0049, 0050,	561	63426	Nut
		(Cut to Length)			0052, 0059, 0060,			(Control Lever)
271	290568	Lever-Control			0061, 0062, 0063,	578	398153	Wire Assembly
347	691396	Switch-Rocker			0064, 0067, 0159,	620	490649	Bracket-Speed
					0166, 0176, 0177,			Control
					0178, 0186, 0190,	620A	692686	Bracket-Speed
					0191, 0197, 0204.			Control
					399223 Wire-Stop	621A	396847	Switch-Stop
					Used on Type No(s).	621B	496819	Switch-Stop
					0145, 0155.	1209	94924	Screw
356A	494250	Wire-Stop						(Speed Control
356B	690791	Wire-Stop						Bracket)

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

Included in Valve Gasket Set-Ref. No. 1095.

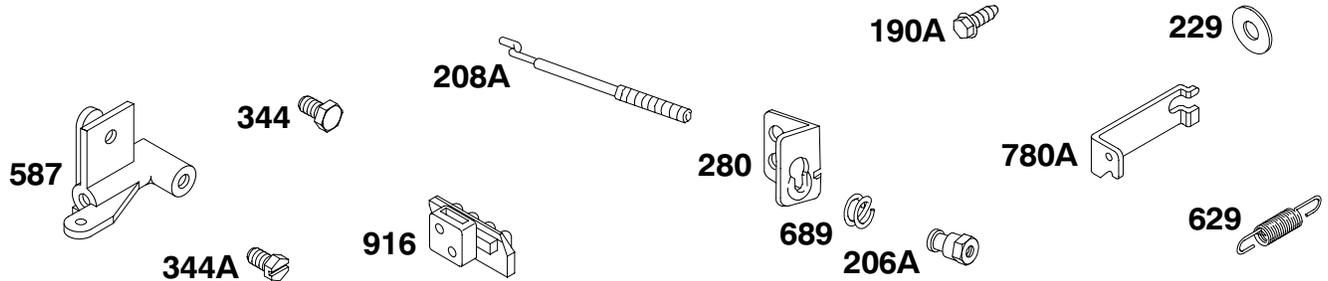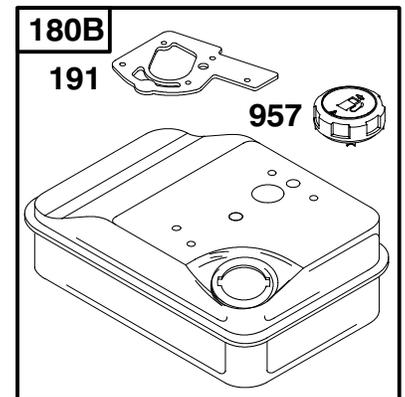
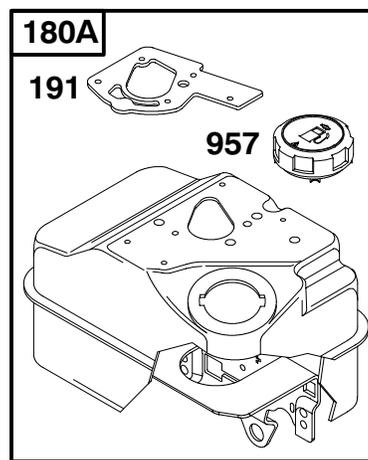
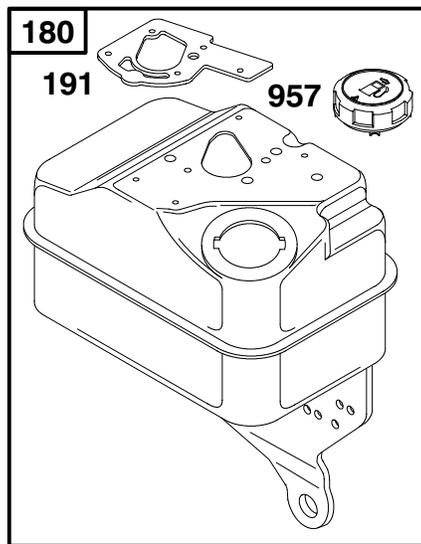


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
180	495377	Tank-Fuel (2 Quart, Air Vane) ----- Note ----- 495391 Tank-Fuel (3 Quart, Air Vane)	190A	691141	Screw (Fuel Tank With Support Strap)	230	690390	Washer (Control Bracket)
180A	495376	Tank-Fuel (2 Quart Mechanical Governor) ----- Note ----- 495388 Tank-Fuel (3 Quart, Mechanical Governor)	190B	94919	Screw (Carburetor To Tank)	280	691184	Bracket-Rod ----- Note ----- 690424 Bracket-Rod Used on Type No(s). 0005, 0052, 0059, 0061, 0062.
180B	495370	Tank-Fuel (1 Quart Air Vane)	191	★272489	Gasket-Fuel Tank (Used After Code Date 92090600). ----- Note ----- ★272996 Gasket-Fuel Tank (Used Before Code Date 92090700).	344	94414	Screw (Cable Clamp)
190	94914	Screw (Fuel Tank, 2 And 3 Quart Only)	206A	231266	Nut (Governor Control Rod)	344A	94415	Screw (Cable Clamp)
			208A	262323	Rod-Governor Control	587	213474	Clamp-Cable
			229	66432	Washer (Fuel Tank With Support Strap)	629	261137	Spring-Throttle Return
						689	26855	Spring-Friction (Governor Control Rod)
						780A	224085	Anchor-Spring
						916	280321	Rack-Governor Gear
						955	281227	Plug-Carburetor
						957	494559	Cap-Fuel Tank

★ Included in Engine Gasket Set-Ref. No. 358.
● Included in Carburetor Overhaul Kit-Ref. No. 121.

Included in Valve Gasket Set-Ref. No. 1095.

91200 to 91299





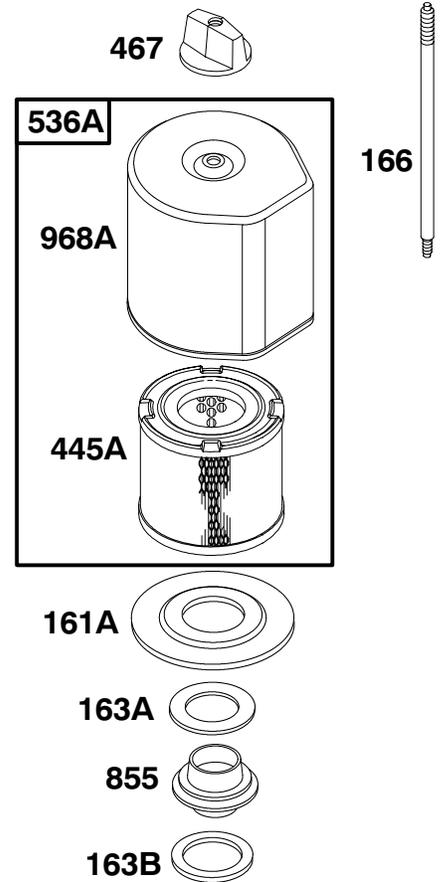
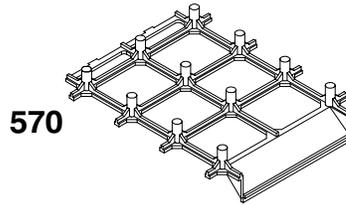
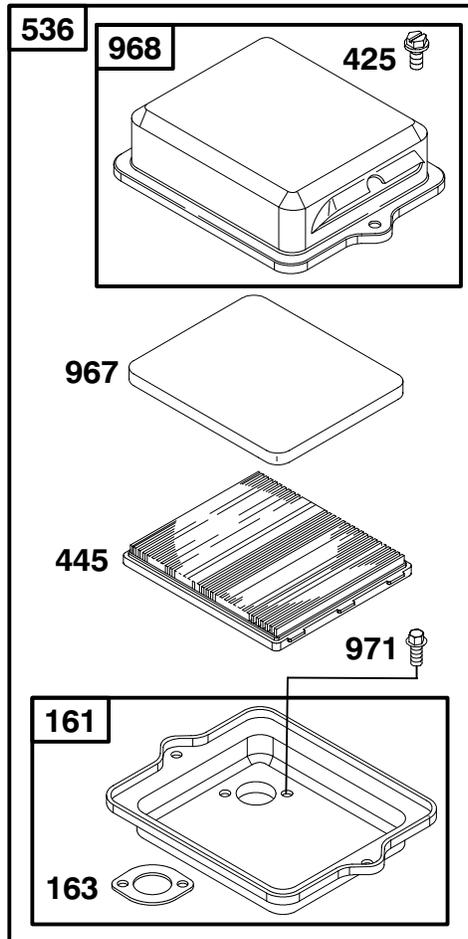


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
161	492797	Base-Air Cleaner	425	490073	Screw (Air Cleaner Cover)	855	690599	Adapter-Air Cleaner
161A	222844	Base-Air Cleaner	445	491588	Filter-Air Cleaner Cartridge	967	491435	Filter-Pre Cleaner
163★	271935	Gasket-Air Cleaner	445A	396424	Filter-Air Cleaner Cartridge	968	495872	Cover-Air Cleaner
163A	●271139	Gasket-Air Cleaner	467	493903	Knob-Air Cleaner	968A	493822	Cover-Air Cleaner
163B	690580	Gasket-Air Cleaner	536	494279	Cleaner-Air	971	690370	Screw (Air Cleaner Base)
166	691248	Stud (Air Cleaner)	536A	396397	Cleaner-Air			
			570	280737	Support-Foam Element			

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

Included in Valve Gasket Set-Ref. No. 1095.

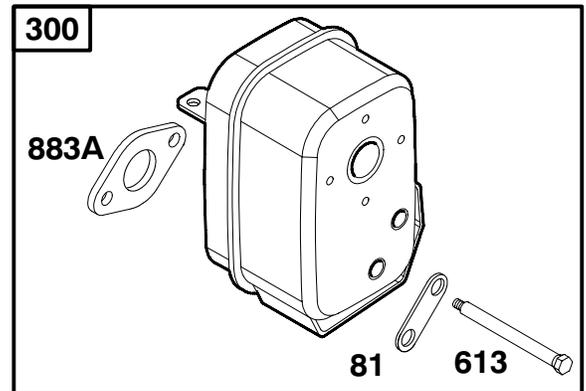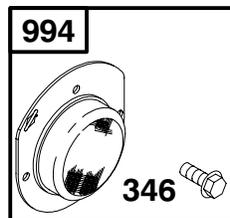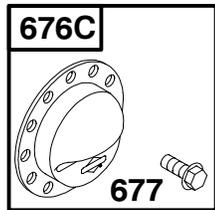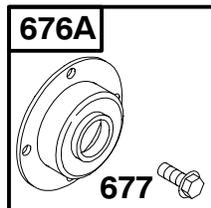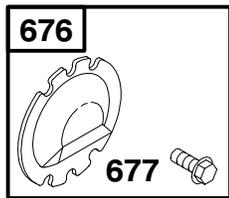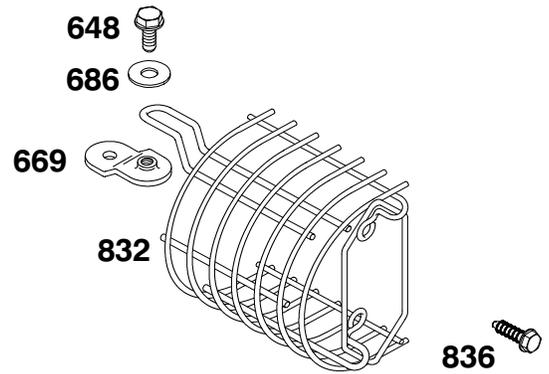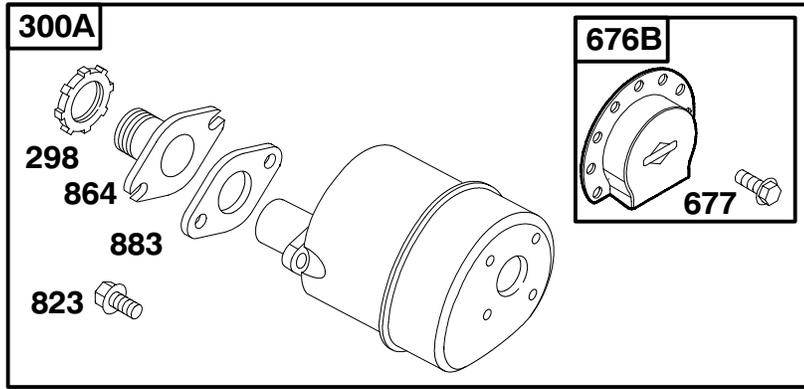


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
81	691179	Lock-Muffler Screw	669	691194	Bracket-Muffler Guard	823	692336	Screw (Muffler Adapter)
298	220859	Locknut-Muffler/Elbow	676	393756	Deflector-Muffler	832	690789	Guard-Muffler
300	691360	Muffler	676A	397931	Deflector-Muffler	836	690367	Screw (Muffler Guard)
300A	493288	Muffler	676B	393760	Deflector-Muffler	864	690776	Adapter-Muffler
303	690291	Elbow-Exhaust	676C	396548	Deflector-Muffler	883	★691314	Gasket-Exhaust
346	94896	Screw (Spark Arrestor)	677	94896	Screw (Muffler Deflector)	883A	★272252	Gasket-Exhaust
613	94042	Screw (Muffler)	686	691186	Washer (Muffler Guard Bracket)	994	398067	Arrestor-Spark
648	94874	Screw (Muffler Guard Bracket)						

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

Included in Valve Gasket Set-Ref. No. 1095.

91200 to 91299


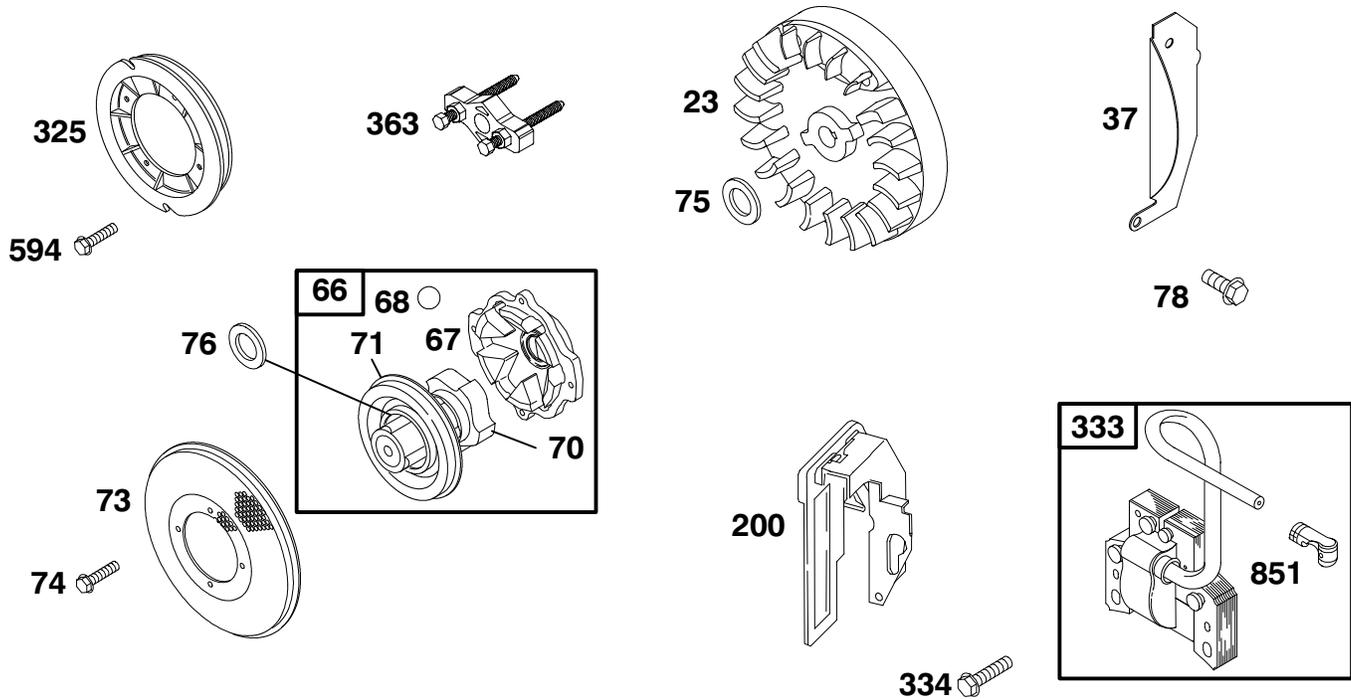


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
23	690843	Flywheel ----- Note ----- 496893 Flywheel Used on Type No(s). 0119, 0128, 0129, 0149, 0151, 0153, 0161, 0209, 0214, 0609, 0616, 0620, 0649, 1215, 1228, 1231, 1249, 1251, 1253, 1309, 1314, 1353. 495046 Flywheel Used on Type No(s). 0117, 1367.	66	399671	Clutch-Starter (Used Before Code Date 97060600).	325	690590	Pulley-Rope Starter (Used Before Code Date 97060600). Used on Type No(s). 0024.
			67	394897	Clutch-Housing	333	496914	Armature-Magneto ----- Note ----- 398428 Armature- Magneto Used on Type No(s). 0063, 0204, 1063, 1304.
			68	63770	Ball-Clutch	334	94731	Screw (Magneto Armature)
			70	298799	Ratchet-Clutch	363	19069	Puller-Flywheel
			71	691359	Cover-Ratchet	594	94058	Screw (Rope Start Pulley)
			73	221661	Screen-Rotating (Used Before Code Date 97060600).	851	493880	Terminal-Sparkplug
			74	94058	Screw (Rotating Screen)			
			75	223047	Washer (Flywheel)			
			76	68238	Seal-Ratchet			
			78	690364	Screw (Flywheel Guard)			
			200	498770	Blade-Governor			

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

Included in Valve Gasket Set-Ref. No. 1095.

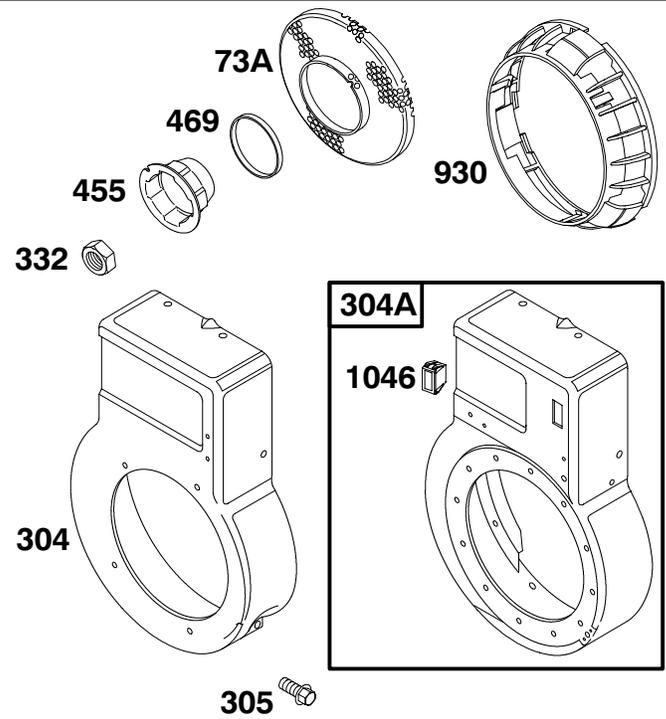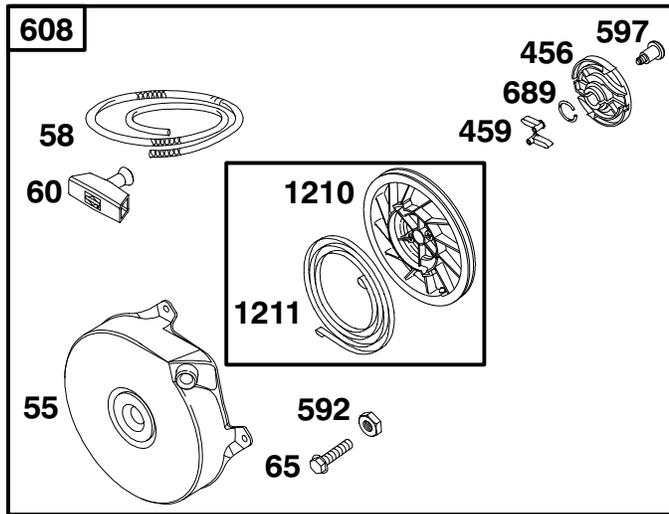


1036 EMISSIONS LABEL

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
55	692144	Housing-Rewind Starter	455	691236	Cup-Flywheel	1036	695097	Label-Emission (Used After Code Date 99093000).
58	281464	Rope-Starter (Cut To Required Length)	456	281503	Plate-Pawl Friction	----- Note -----		
60	281101	Grip-Starter Rope	459	281505	Pawl-Ratchet	694421	Label-Emission (Used Before Code Date 99100100 and After Code Date 9812320).	
65	94904	Screw (Rewind Starter)	592	94908	Nut (Rewind Starter)	499329	Label-Emission (Used Before Code Date 99010100 and After Code Date 97063000).	
73A	691235	Screen-Rotating (Used After Code Date 97060500).	597	94943	Screw (Pawl Friction Plate)	499328	Label-Emission (Used Before Code Date 97070100).	
304	693004	Housing-Blower	608	690101	Starter-Rewind (Used After Code Date 97060500).	1046	691337	Plug-Blower Housing
304A	692622	Housing-Blower Used on Type No(s). 1034, 1060, 1215, 1221, 1239, 1244, 1290, 1305, 1310, 1356.	689	263073	Spring-Friction (Rewind Starter)	1210	499901	Pulley/Spring Assembly (Pulley)
305	94786	Screw (Blower Housing)	930	691348	Guard-Rewind	1211	499901	Pulley/Spring Assembly (Spring)
332	94877	Nut (Flywheel)						

★ Included in Engine Gasket Set-Ref. No. 358.
 ● Included in Carburetor Overhaul Kit-Ref. No. 121.

Included in Valve Gasket Set-Ref. No. 1095.

91200 to 91299

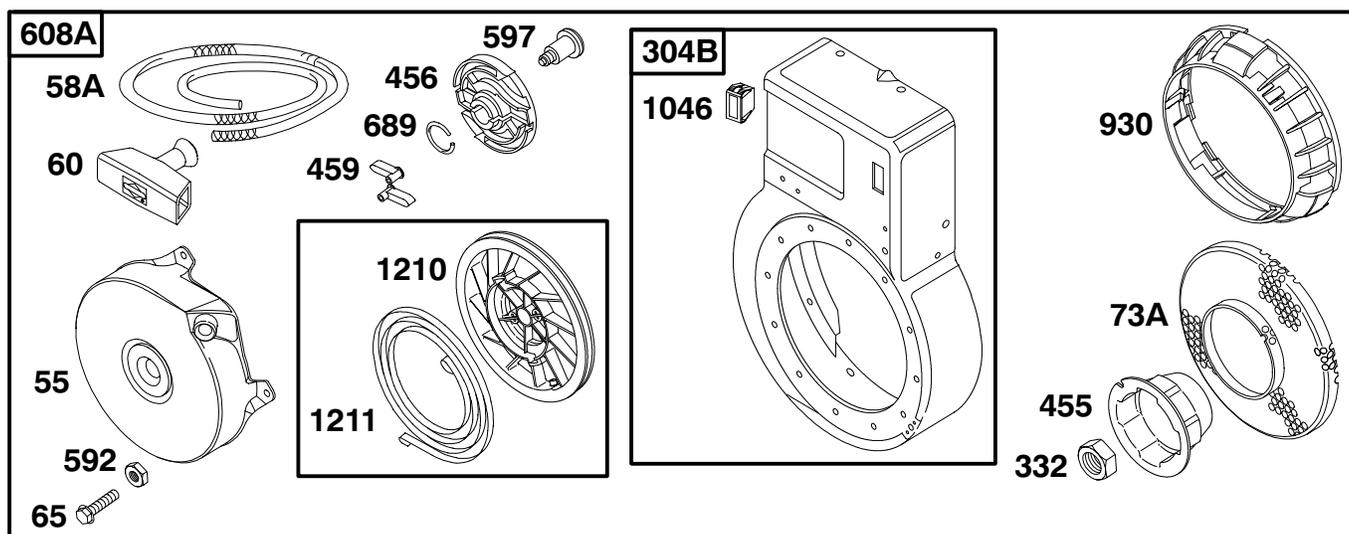


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
55	692144	Housing-Rewind Starter	332	94877	Nut (Flywheel)	689	263073	Spring-Friction (Rewind Starter)
58A	280399	Rope-Starter	455	691236	Cup-Flywheel	930	691348	Guard-Rewind
60	281101	Grip-Starter Rope	456	281503	Plate-Pawl Friction	1046	691337	Plug-Blower Housing
65	94904	Screw (Rewind Starter)	459	281505	Pawl-Ratchet	1210	499901	Pulley/ Spring Assembly (Pulley)
73A	691235	Screen-Rotating	592	94908	Nut (Rewind Starter)	1211	499901	Pulley/ Spring Assembly (Spring)
304B	692622	Housing-Blower	597	94943	Screw (Pawl Friction Plate)			
			608A	690098	Starter-Rewind			

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

Included in Valve Gasket Set-Ref. No. 1095.

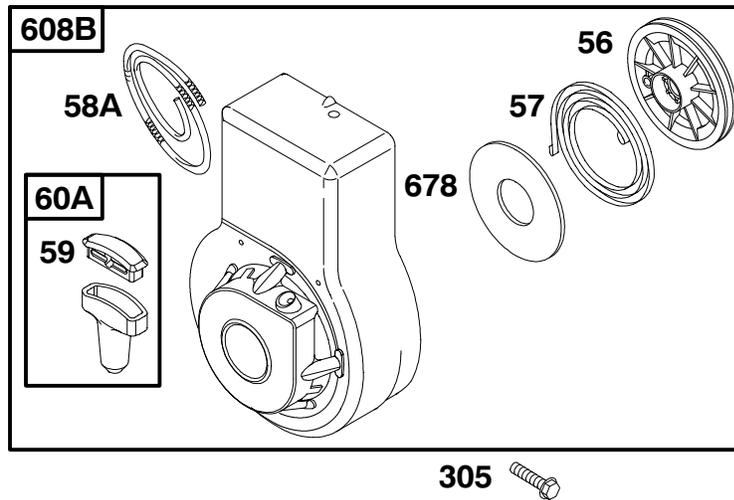


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
56	280439	Pulley-Starter	59	396892	Insert-Grip	608B	498007	Starter-Rewind (10 O' Clock) (Used Before Code Date 97060600 and After Code Date 95071600).
57	490179	Spring-Rewind Starter	60A	393152	Grip-Starter Rope			----- Note ----- 498000 Starter-Rewind (1 O' Clock) (Used Before Code Date 97060600 and After Code Date 95071600).
58A	280399	Rope-Starter (Cut to Required-Length)	305	94786	Screw (Blower Housing)	678	490817	Spacer-Rewind

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

Included in Valve Gasket Set-Ref. No. 1095.




91200 to 91299

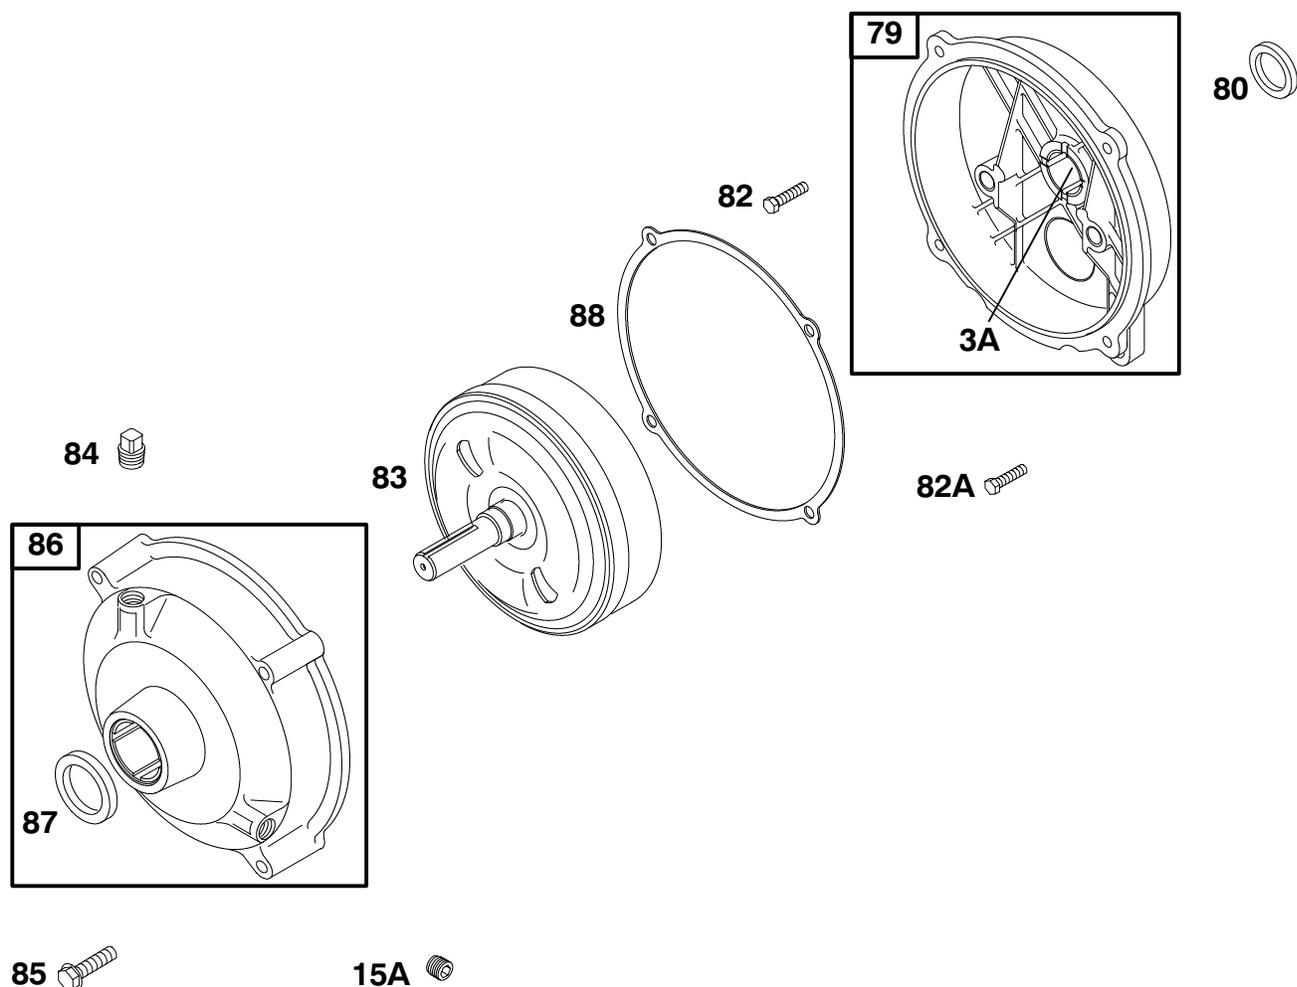

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
3A	★299819	Seal-Oil (Gear Reduction Case)	82A	691122	Screw (Gear Reduction Case) (1 1/2" Length)	85	691117	Screw (Gear Cover to Gear Reduction)
15A	94886	Plug-Oil Drain (Gear Cover)	83	690374	Shaft-Auxiliary Drive	86	690608	Cover-Gear
79	690605	Case-Gear Reduction	84	691121	Plug-Breather	87	19011	Seal-Gear Reduction
80	27667	Gasket-Gear Case				88	27313	Gasket-Gear Reduction Cover
82	690369	Screw (Gear Reduction Case) (7/8" Length)						

★ Included in Engine Gasket Set-Ref. No. 358.
● Included in Carburetor Overhaul Kit-Ref. No. 121.

Included in Valve Gasket Set-Ref. No. 1095.

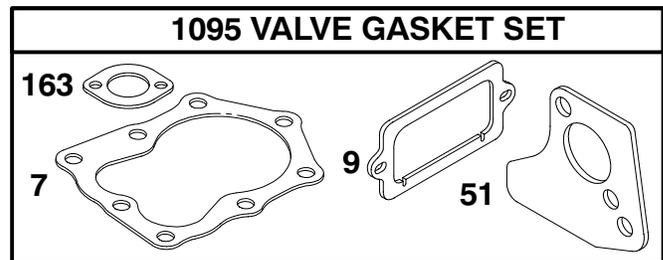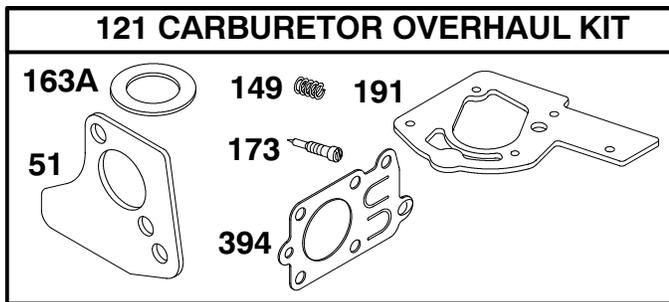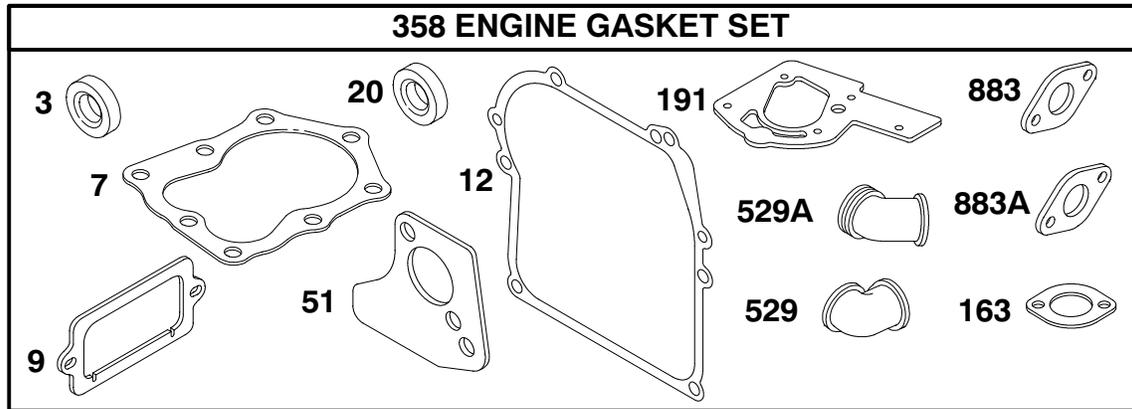

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
3	★299819	Seal-Oil (Magneto Side)	163	★ 271935	Gasket-Air Cleaner	394	●272538	Diaphragm-Carburetor (Used After Code Date 92090600).
7	★ 272694	Gasket-Cylinder Head	163A	●271139	Gasket-Air Cleaner			----- Note -----
9	★ 27549	Gasket-Breather	173	●231533	Valve-Idle Mixture			●270026 Diaphragm-Carburetor (Used Before Code Date 92090700).
12	★270833	Gasket-Crankcase (.015 Thick, Standard)	191	●★272489	Gasket-Fuel Tank (Used After Code Date 92090600).	529	★692189	Grommet
		----- Note -----			----- Note -----	529A	★66578	Grommet
		★270895 Gasket-Crankcase (.005 Thick)			●★272996 Gasket-Fuel Tank (Used Before Code Date 92090700).	883	★641314	Gasket-Exhaust
		★270896 Gasket-Crankcase (.009 Thick)	358	495605	Gasket Set-Engine (Used After Code Date 92060700).	883A	★272252	Gasket-Exhaust
20	★299819	Seal-Oil (PTO Side)			----- Note -----	1095	692638	Gasket Set-Valve
51	★●273113	Gasket-Intake			494550 Gasket Set-Engine (Used Before Code Date 92060800).			
121	495606	Overhaul Kit-Carburetor						
149	●26336	Spring-Needle Valve						

★ Included in Engine Gasket Set-Ref. No. 358.
 ● Included in Carburetor Overhaul Kit-Ref. No. 121.

Included in Valve Gasket Set-Ref. No. 1095.