

10K900

Illustrated Parts List

Model Series

10K900

TYPE NUMBER
0100, 0110, 0111,
0343, 0346, 0354.

TABLE OF CONTENTS


Air Cleaner	4
Blower Housing/Shrouds	4
Brakes	4
Cam	2
Carburetor	3
Controls	3
Crankcase Cover/Sump	2
Crankshaft	2
Cylinder	2
Flywheel	4
Fuel Tank	3
Governor Spring	3
Head	2
Ignition	3
Kits/Gaskets-Engine	2
Kits/Gaskets-Valve	2
Muffler	4
Oil Group	2
Piston Group	2
Rewind	4
Valves	2



PRINTED IN U.S.A.














COPYRIGHT by BRIGGS & STRATTON CORPORATION
 All rights reserved. No part of this material may be reproduced or transmitted,
 in any form or by any means, electronic or mechanical, including photocopying,
 recording or by any information storage and retrieval system, without permission
 in writing from Briggs & Stratton Corporation.


10K900

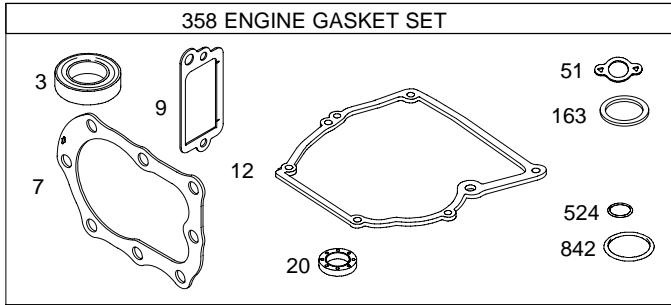

1058 OWNER'S MANUAL


1330 REPAIR MANUAL

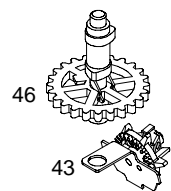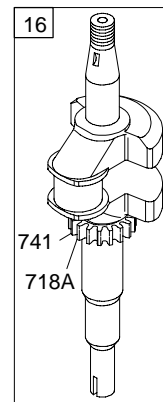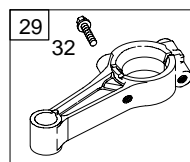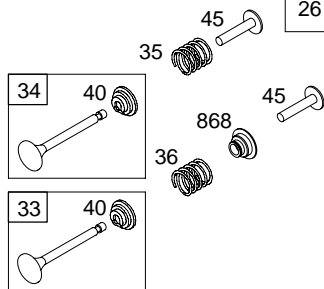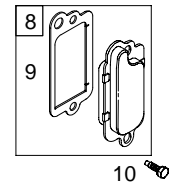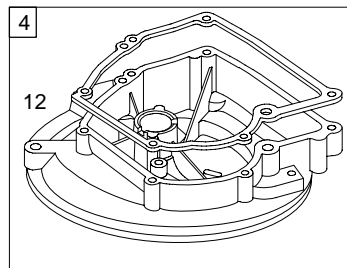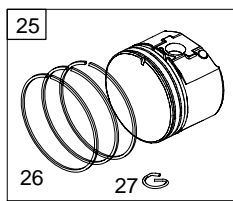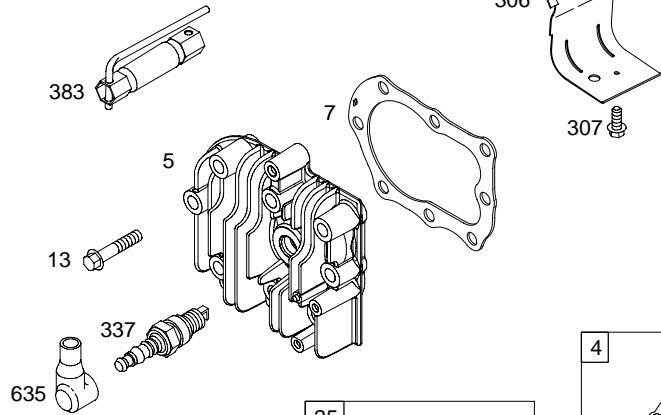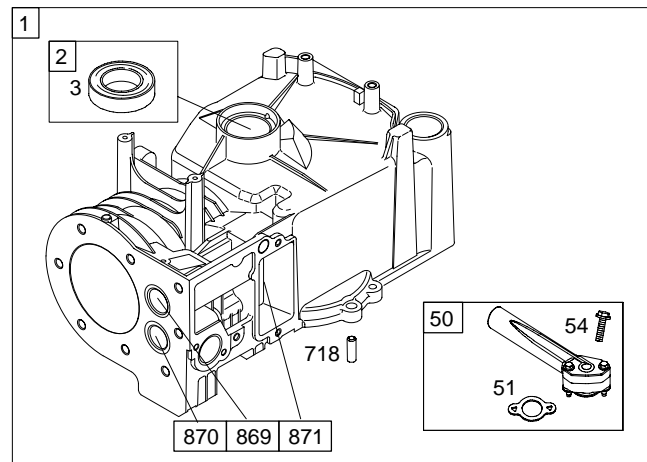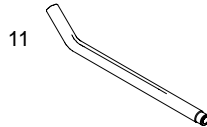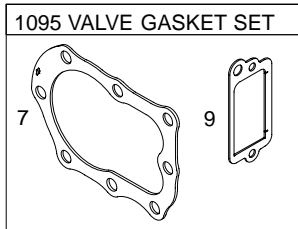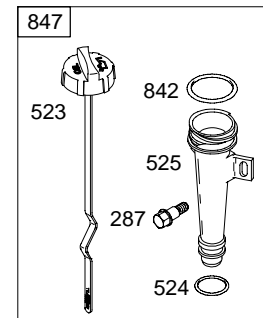


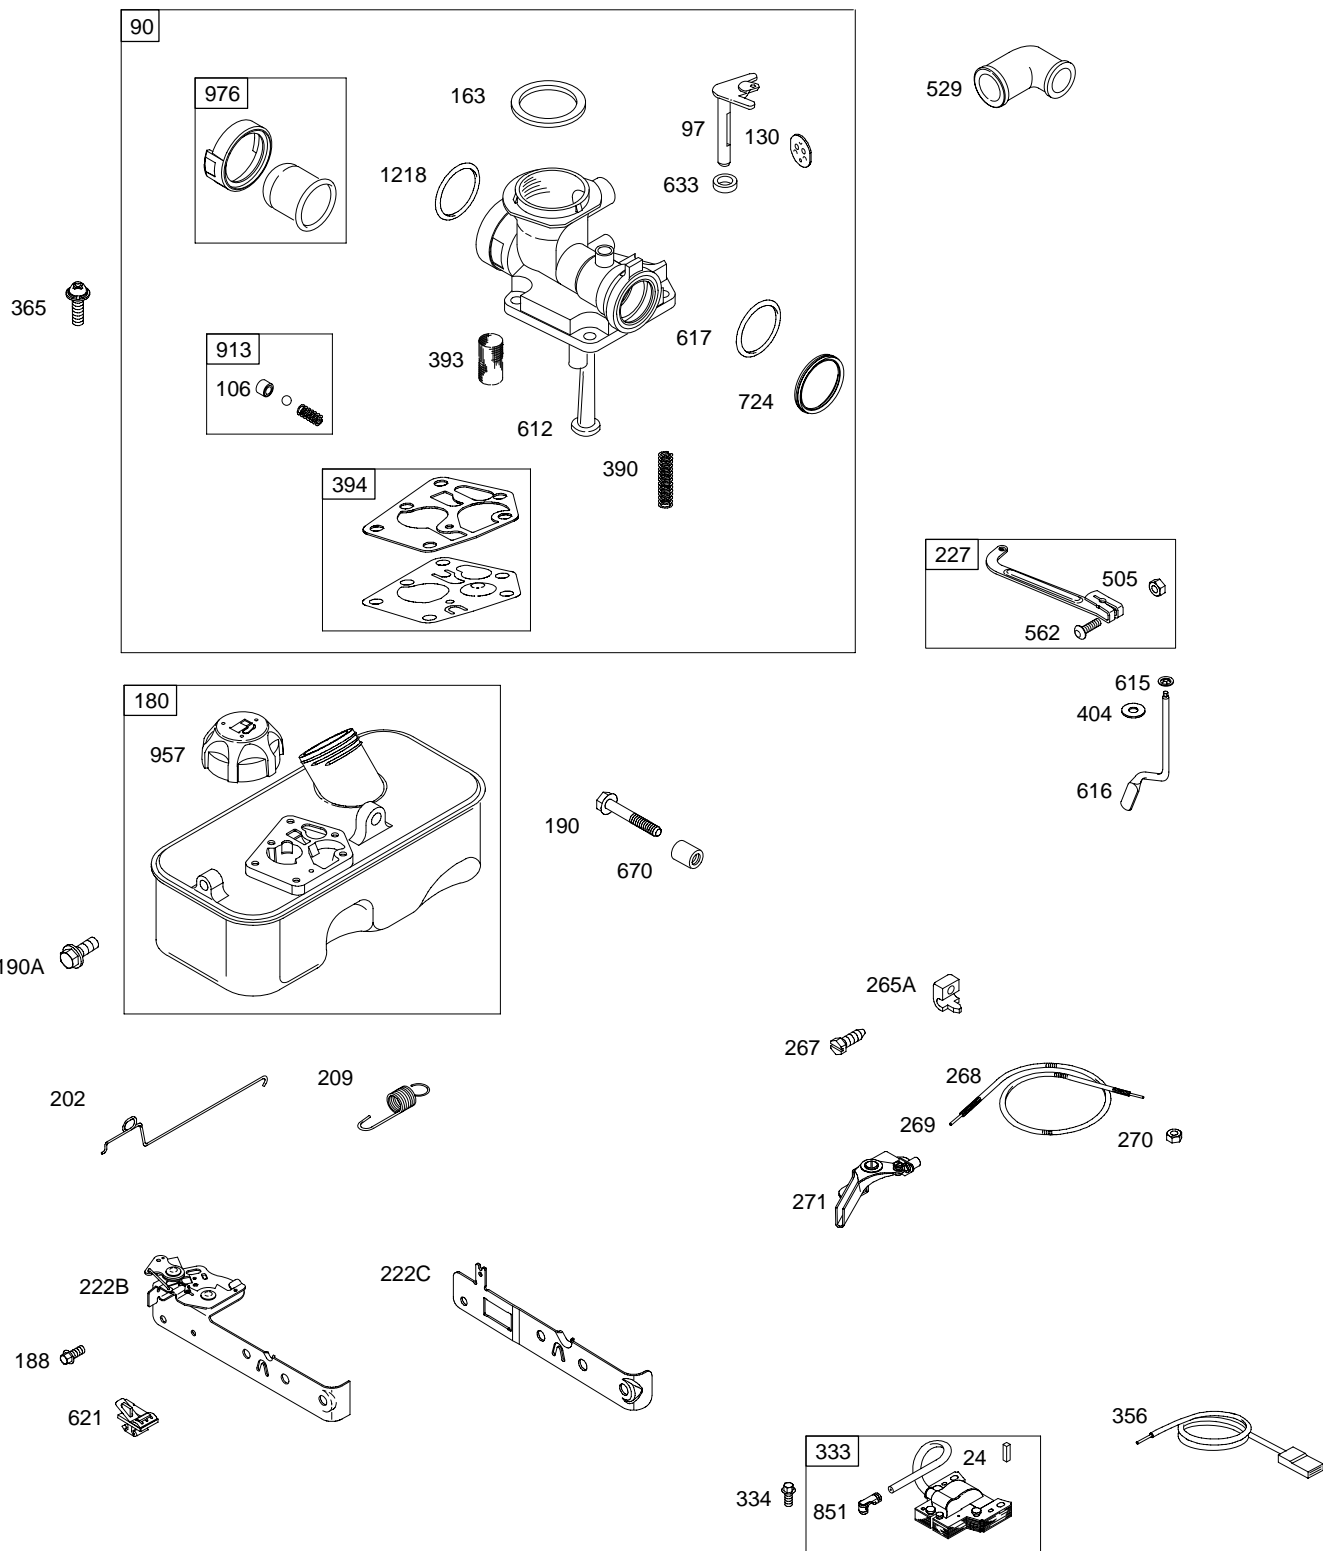


10K900

300A

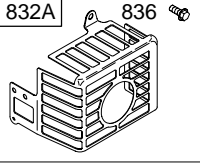

534

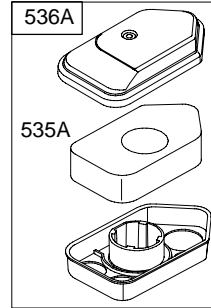


163



1019 LABEL KIT


1036 EMISSIONS LABEL

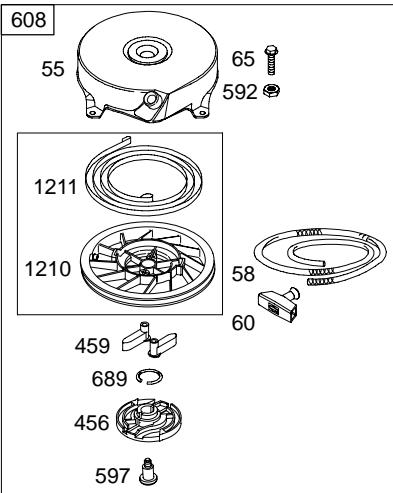

332



455



73A




363



23




930

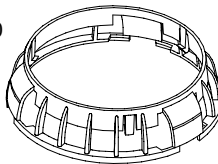


921

969

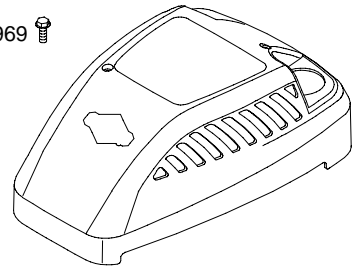


921C

969

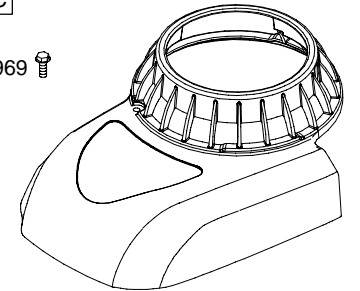


304

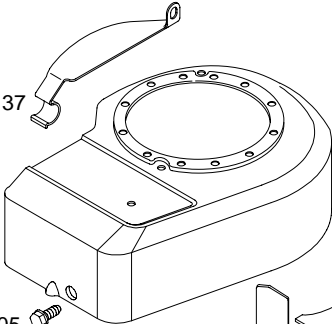

305



37A



78



1277



1278



729



1208



745A



745




772



925



923

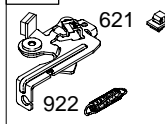

621



922



10K900

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	699650	Cylinder Assembly	26	790909	Ring Set (Standard) (Used After Code Date 04111400).	90	790206	Carburetor (Used After Code Date 03111900).
2	399269	Kit-Bushing/Seal (Magneto Side)						----- Note -----
3	*299819	Seal-Oil (Magneto Side)						697415 Carburetor (Used Before Code Date 03112000). Used on Type No(s). 0343, 0346.
4	698691	Sump-Engine			699658 Ring Set (Standard) (Used Before Code Date 04111500).			
5	790169	Head-Cylinder	27	691588	Lock-Piston Pin	97	697414	Shaft-Throttle
7	*Δ698717	Gasket-Cylinder Head	28	699659	Pin-Piston (Standard)	106	691901	Seat-Inlet
8	699640	Breather Assembly	29	699654	Rod-Connecting	130	691190	Valve-Throttle
9	*Δ695890	Gasket-Breather	32	691664	Screw (Connecting Rod)	163	*271139	Gasket-Air Cleaner
10	691666	Screw (Breather Assembly)	33	296676	Valve-Exhaust	180	494406	Tank-Fuel
11	691245	Tube-Breather	34	296677	Valve-Intake	188	692198	Screw (Control Bracket)
12	*692218	Gasket-Crankcase (Standard)	35	690520	Spring-Valve (Intake)	190	691640	Screw (Fuel Tank)
13	691640	Screw (Cylinder Head)	36	690520	Spring-Valve (Exhaust)	190A	692198	Screw (Fuel Tank)
15	691680	Plug-Oil Drain	37	697403	Guard-Flywheel (Muffler Side)	202	698835	Link-Mechanical Governor
16	691472	Crankshaft Used on Type No(s). 0100, 0343, 0346. ----- Note -----	37A	691209	Guard-Flywheel (Carburetor Side)	209	698726	Spring-Governor (Pink) Used on Type No(s). 0343, 0346, 0354. ----- Note -----
		691471 Crankshaft Used on Type No(s). 0354.	40	692194	Retainer-Valve			698719 Spring- Governor (Light Blue) Used on Type No(s). 0100, 0110, 0111.
		692989 Crankshaft Used on Type No(s). 0110, 0111.	43	697799	Slinger-Governor/Oil			
20	*391483	Seal-Oil (PTO Side)	45	691762	Tappet-Valve			
			46	691998	Camshaft			
22	691662	Screw (Crankcase Cover/Sump)	50	699644	Manifold-Intake			
			51	*699649	Gasket-Intake			
23	692009	Flywheel	54	691111	Screw (Intake Manifold)	222B	697410	Bracket-Control Used on Type No(s). 0100, 0110, 0111, 0343, 0346.
24	222698	Key-Flywheel	55	692144	Housing-Rewind Starter			
25	790908	Piston Assembly (Standard) (Used After Code Date 04111400). ----- Note -----	58	697316	Rope-Starter (88 5/8" Long)	222C	698725	Bracket-Control Used on Type No(s). 0354.
		699657 Piston Assembly (Standard) (Used Before Code Date 04111500).	60	691915	Grip-Starter Rope	227	697402	Lever-Governor Control
			65	690837	Screw (Rewind Starter)	265A	690798	Clamp-Casing Used on Type No(s). 0100, 0110, 0111.
			73A	699850	Screen-Rotating			
			78	692198	Screw (Flywheel Guard)	267	691044	Screw (Casing Clamp) Used on Type No(s). 0100, 0110, 0111.

* Engine Gasket Set-Reference 358

Δ Valve Gasket Set-Reference 1095

10K900

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
268	691072	Casing-Control Wire (Cut To Required Length)	404	690272	Washer (Governor Crank)	745	691146	Screw (Brake) (7/8" Long)
269	691026	Wire-Control (Cut To Required Length)	455	691236	Cup-Flywheel	745A	690859	Screw (Brake) (1/2" Long)
270	691027	Nut (Control Wire Casing)	456	692299	Plate-Pawl Friction	772	691111	Screw (Linkage Cover) (1 1/8" Long)
271	691028	Lever-Control	459	281505	Pawl-Ratchet	832A	699670	Guard-Muffler Used on Type No(s). 0110, 0111, 0346..
287	691002	Screw (Dipstick Tube)	505	691251	Nut (Governor Control Lever)	836	690664	Screw (Muffler Guard) Used on Type No(s). 0110, 0111, 0346..
300A	394569	Muffler (Round Lo Tone)	523	692040	Dipstick	842	*691870	Seal-O Ring (Dipstick Tube)
304	697411	Housing-Blower (Compliance) Used on Type No(s). 0100, 0110, 0343, 0346, 0354. ----- Note ----- 698046 Housing- Blower (Compliance) Used on Type No(s). 0111.	523A	691913	Dipstick Used on Type No(s). 0111.	847	691440	Dipstick/Tube Assembly
305	692198	Screw (Blower Housing)	524	*691876	Seal-Dipstick Tube	851	493880	Terminal-Spark Plug
306	690400	Shield-Cylinder (Used Before Code Date 04071400).	525	691320	Tube-Dipstick	868	697338	Seal-Valve
307	690345	Screw (Cylinder Shield) (Used Before Code Date 04071400).	529	692189	Grommet	869	699641	Seat-Valve (Intake)
332	690662	Nut (Flywheel)	534	691417	Screw (Air Cleaner)	870	699642	Seat-Valve (Exhaust)
333	496914	Armature-Magneto	535A	698369	Filter-Air Cleaner Foam	871	699643	Bushing-Valve Guide (Exhaust Valve) ----- Note ----- 63709 Bushing-Valve Guide (Intake Valve)
334	691061	Screw (Magneto Armature)	536A	698472	Cleaner-Air	913	494409	Seat-Check Valve
337	802592	Plug-Spark	562	92613	Bolt (Governor Control Lever)	921	694044	Cover-Blower Housing Used on Type No(s). 0100, 0110.
356	692390	Wire-Stop	592	690800	Nut (Rewind Starter)	921C	699796	Cover-Blower Housing Used on Type No(s). 0343, 0346, 0354.
358	699933	Gasket Set-Engine	597	691696	Screw (Pawl Friction Plate)	922	692135	Spring-Brake
363	19069	Puller-Flywheel	608	499706	Starter-Rewind	923	691487	Brake
365	790029	Screw (Carburetor)	612	496046	Tube-Pick Up	925	691349	Cover-Linkage
383	89838	Wrench-Spark Plug	615	690340	Retainer-Governor Shaft	930	691348	Guard-Rewind Used on Type No(s). 0111.
390	691839	Spring-Choke Diaphragm	616	697405	Crank-Governor	957	497929	Cap-Fuel Tank
393	691837	Screen-Carburetor	617	270344	Seal-O Ring (Intake Manifold)	969	692523	Screw (Blower Housing Cover) (21/32" Long) ----- Note ----- 694046 Screw (Blower Housing Cover) (2 1/4" Long)
394	495770	Diaphragm-Carburetor	621	692310	Switch-Stop			
			633	691321	Seal-Choke/Throttle Shaft			
			635	66538	Boot-Spark Plug			
			670	691633	Spacer-Fuel Tank			
			689	691855	Spring-Friction			
			718	690959	Pin-Locating (Cylinder)			
			718A	499047	Pin-Locating (Crankshaft)			
			724	697478	Retainer-Seal			
			729	690586	Clip-Wire			
			741	691805	Gear-Timing			

★ Engine Gasket Set-Reference 358

△ Valve Gasket Set-Reference 1095

10K900

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
976	694394	Primer-Carburetor	1058	275508	Operator's Manual	1218	695866	Seal-O Ring (Carburetor)
1019	496757	Kit-Label	1095	498526	Gasket Set-Valve	1277	698718	Guard-Governor Nut
1036	790713	Label-Emissions (Used After Code Date 04063000).	1208	690859	Screw (Brake Bracket)	1278	691002	Screw (Governor Nut Guard)
		----- Note -----	1210	499901	Pulley/Spring Assembly (Pulley)	1330	270962	Repair Manual
		699930 Emissions-Label (Used Before Code Date 04070100).	1211	499901	Pulley/Spring Assembly (Spring)			

★ Engine Gasket Set-Reference 358

△ Valve Gasket Set-Reference 1095

5851-7

Assemblies include all parts shown in frames.

06/09/2005