



122000

Illustrated Parts List

Model Series

122000

TYPE NUMBERS
0101 through 0496.

TABLE OF CONTENTS


Air Cleaner	5
Blower Housing	6
Camshaft	2
Carburetor	4
Controls	5
Crankcase Cover	2
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electric Starter	6
Exhaust System	5
Flywheel	6
Fuel Supply	4
Governor Spring	5
Ignition	5
Kits/Gaskets - Carburetor	4
Kits/Gaskets - Engine	2
Kits/Gaskets - Valve	3
Lubrication	2
Piston Group	2
Rewind Starter	6






PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

122000




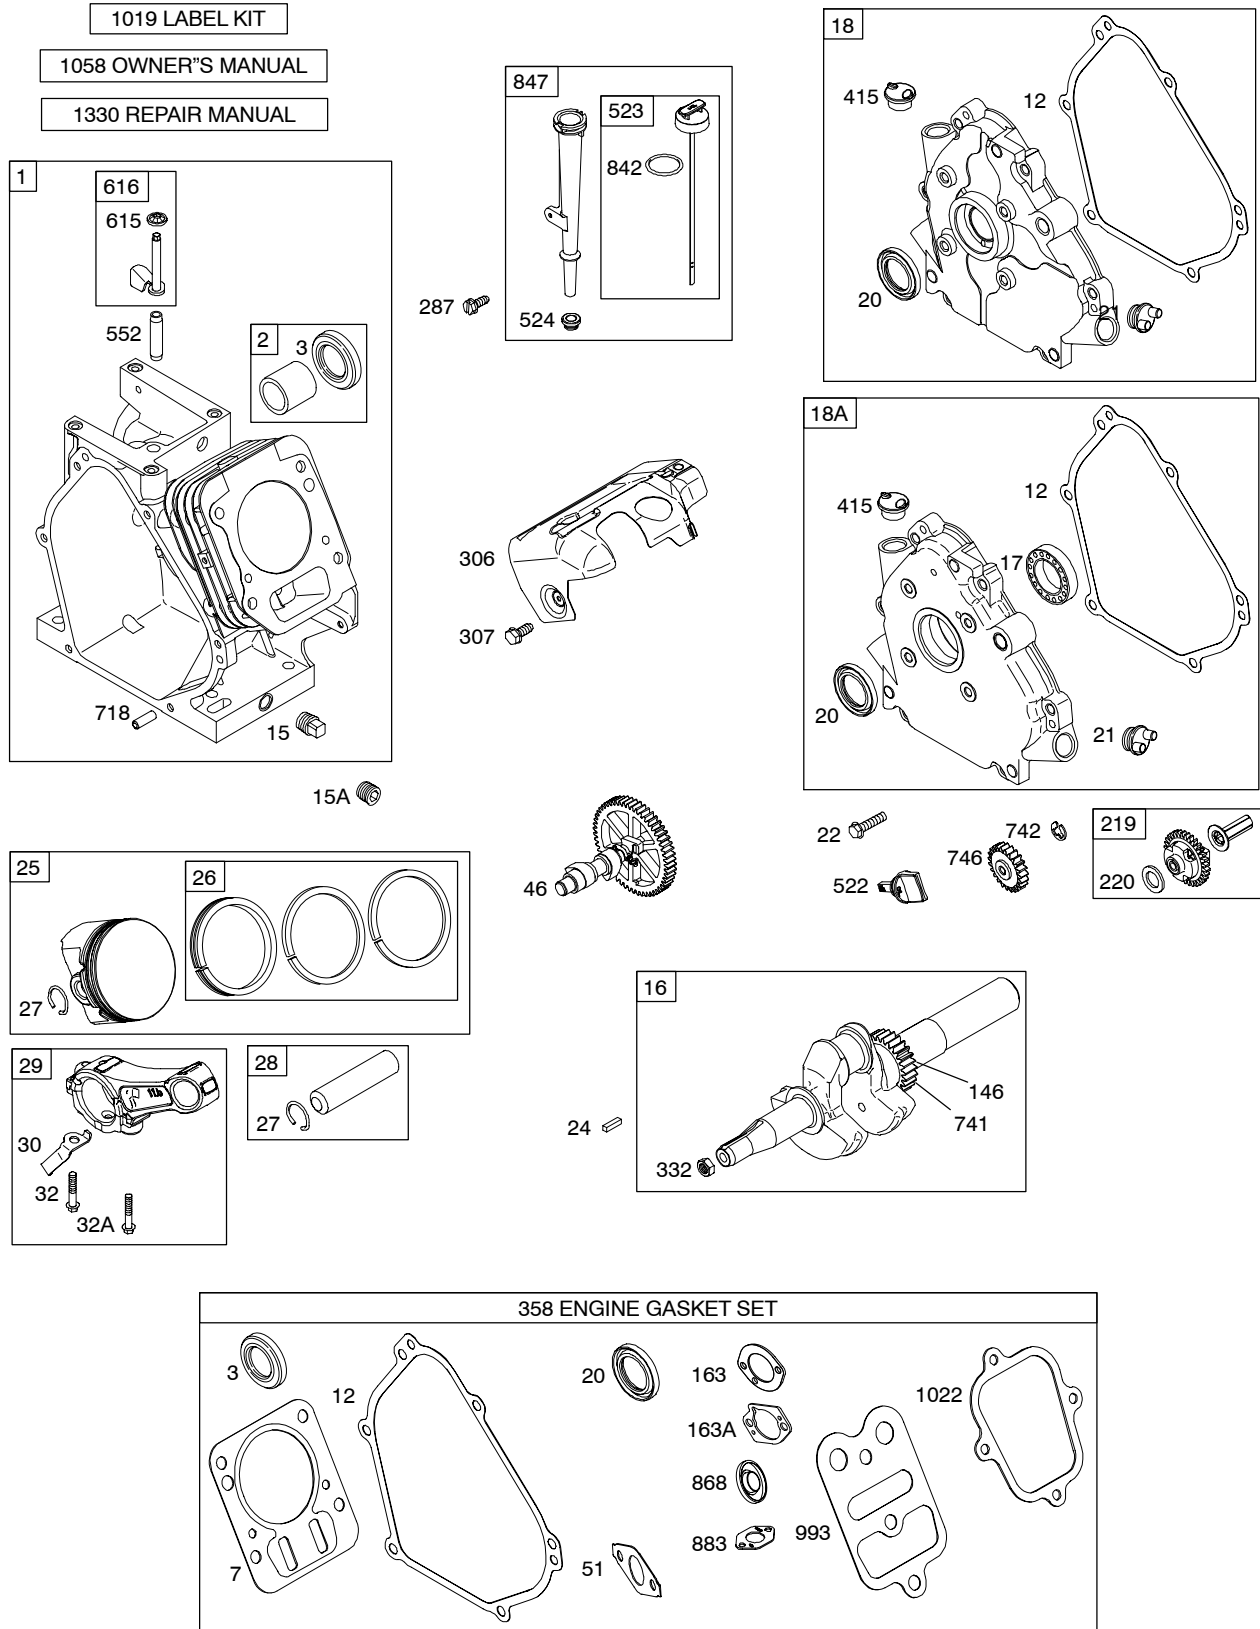


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.









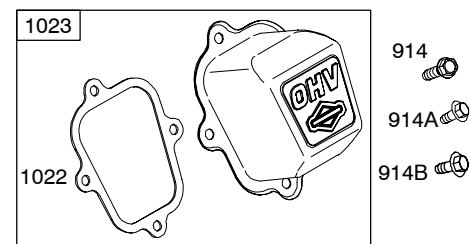
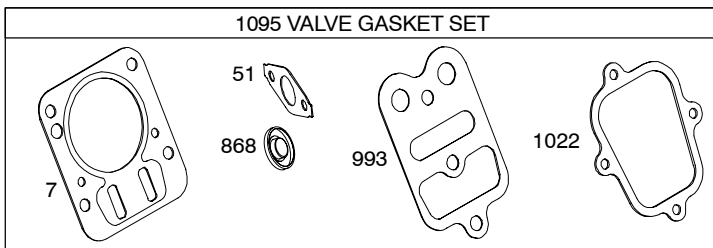
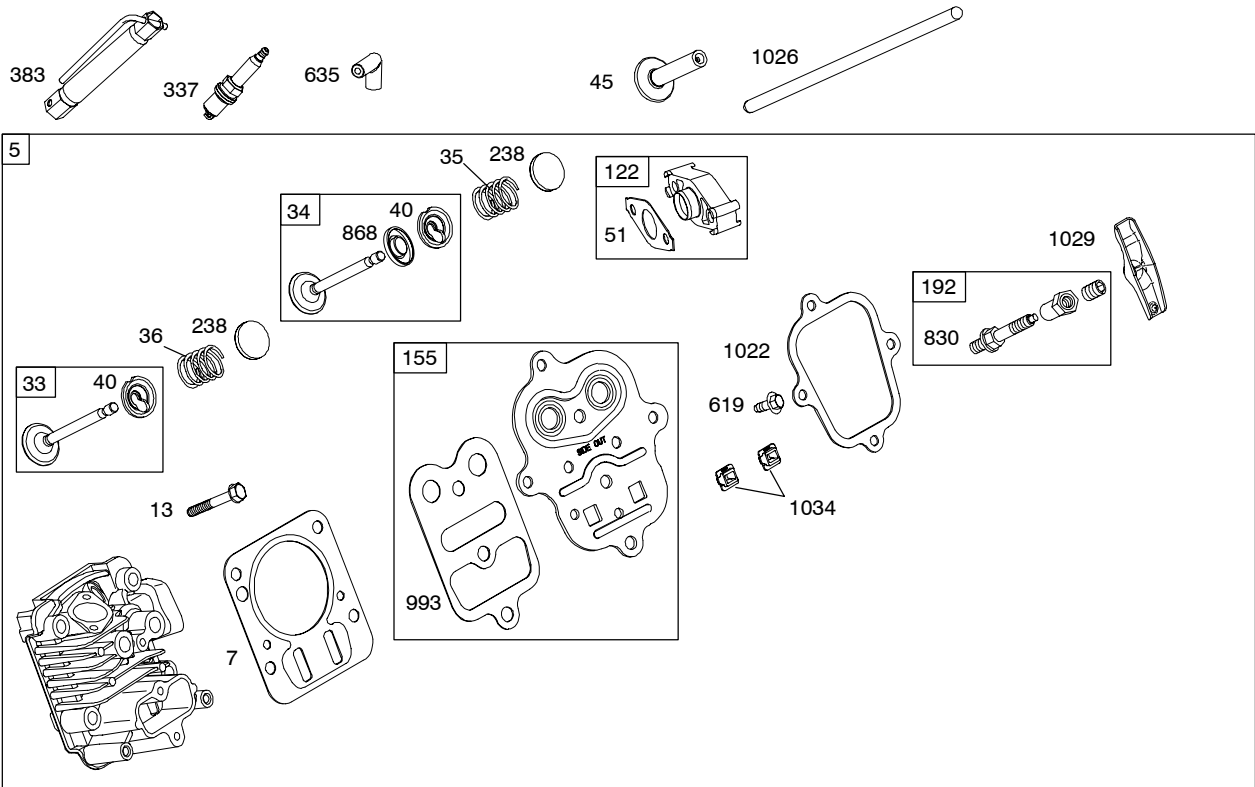


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

122000

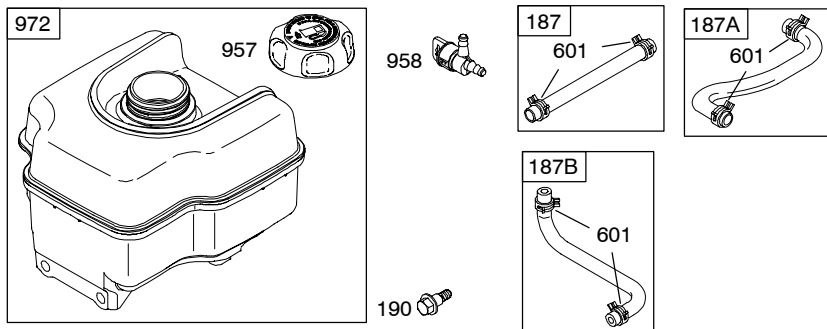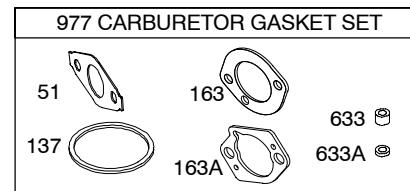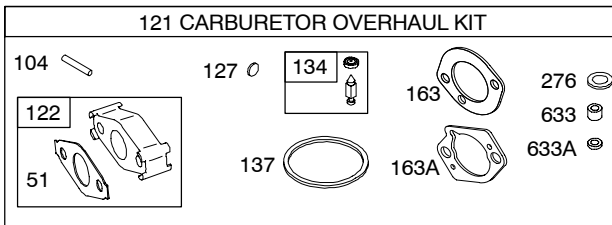
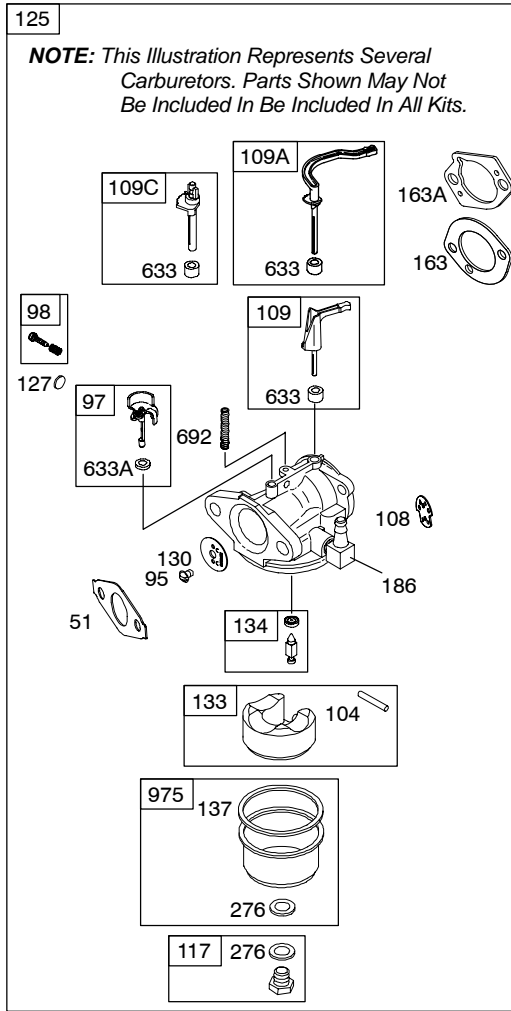


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

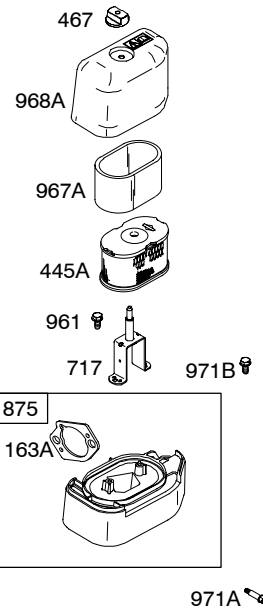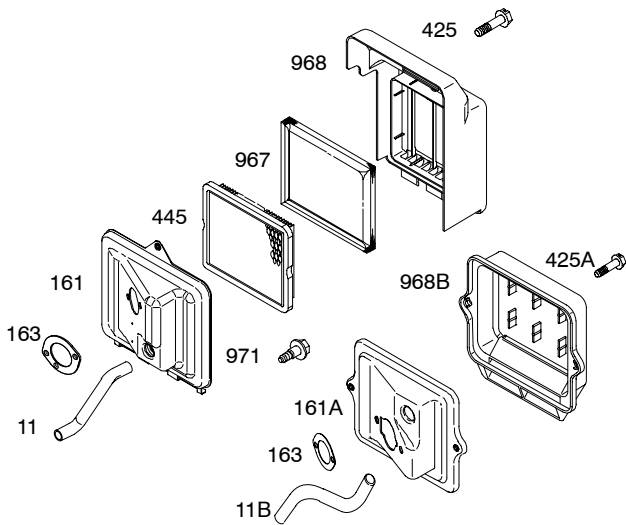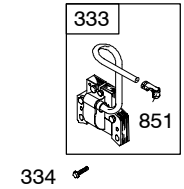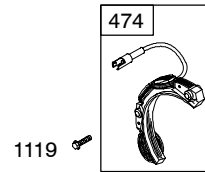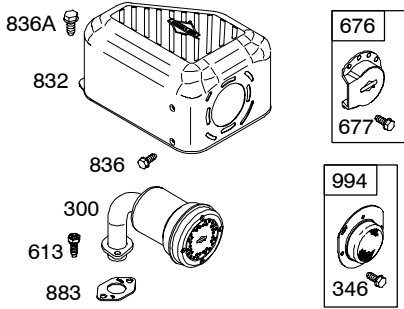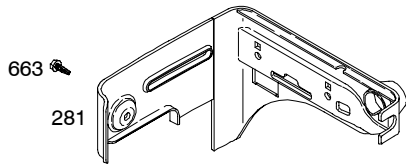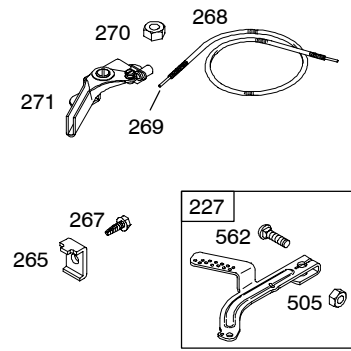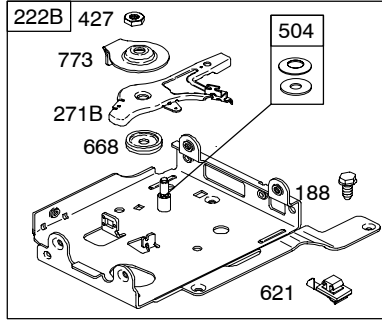
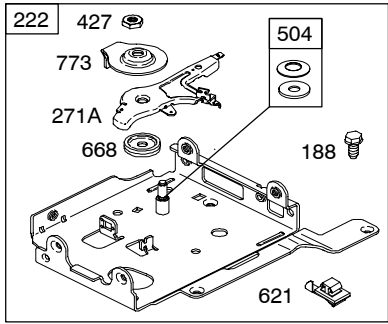


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 3248-5 Assemblies include all parts shown in frames. 11/03/2005

122000

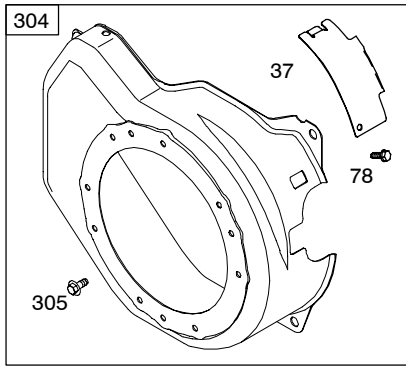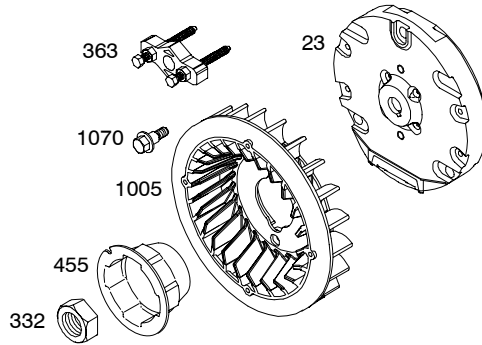

1036 EMISSION LABEL

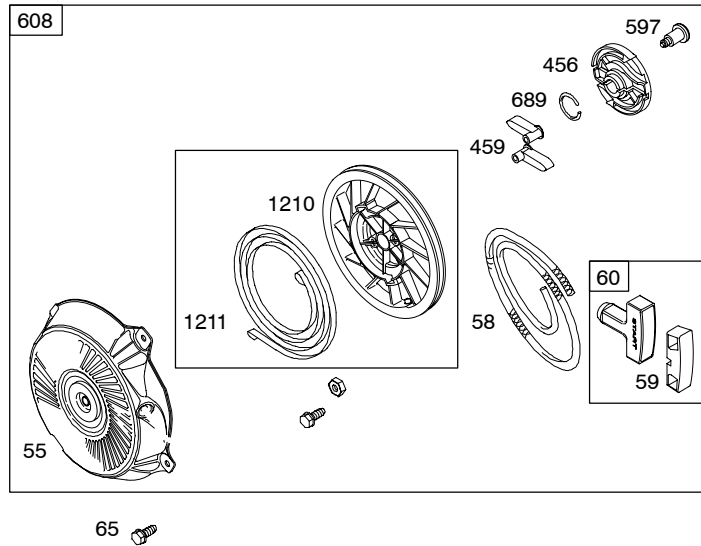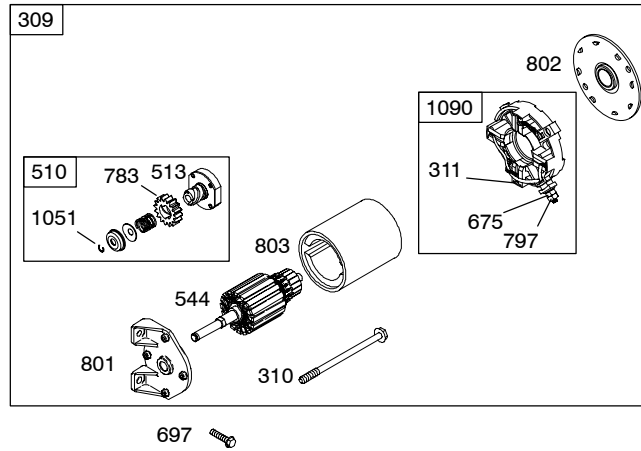

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	699505	Cylinder Assembly	18	699804	Cover-Crankcase Used on Type No(s). 0114, 0115, 0116, 0118, 0120, 0123, 0358, 0361, 0374, 0416.	26	791969	Ring Set (Standard) (Used After Code Date 05030800). ----- Note -----
2	399269	Kit-Bushing/Seal (Magneto Side)						
3	★299819S	Seal-Oil (Magneto Side)						
5	699486	Head-Cylinder						
7	★∅698210	Gasket-Cylinder Head						
11	692600	Tube-Breather (Flat Panel Air Cleaner)						
11A	693647	Tube-Breather (High Mount Air Cleaner)	18A	699672	Cover-Crankcase Used on Type No(s). 0101, 0111, 0112, 0119.			
11B	790632	Tube-Breather (Ultra Low Air Cleaner)						
12	★699485	Gasket-Crankcase	20	★692550	Seal-Oil (PTO Side)			
13	699482	Screw (Cylinder Head)	21	281658S	Cap-Oil Fill			
15	691686	Plug-Oil Drain (Square Head)	22	699478	Screw (Crankcase Cover/ Sump)	27	691866	Lock-Piston Pin
15A	691682	Plug-Oil Drain (Flush)				28	499423	Pin-Piston
16	699445	Crankshaft Used on Type No(s). 0115, 0118, 0394, 0496. ----- Note ----- 699452 Crankshaft Used on Type No(s). 0358, 0416. 699449 Crankshaft Used on Type No(s). 0361, 0374. 699451 Crankshaft Used on Type No(s). 0112, 0114, 0116, 0119, 0120, 0121, 0123. 699443 Crankshaft Used on Type No(s). 0110, 0111.	23	699488	Flywheel ----- Note ----- 699514 Flywheel Used on Type No(s). 0121, 0374.	29	690124	Rod-Connecting
			24	222698S	Key-Flywheel	30	692562	Dipper-Connecting Rod
			25	792004	Piston Assembly (Standard) (Used After Code Date 05030800). ----- Note ----- 499627 Piston Assembly (Standard) (Used Before Code Date 05030900). 791325 Piston Assembly (.020" Oversize) (Used After Code Date 05030800). 692789 Piston Assembly (.020" Oversize) (Used Before Code Date 05030900).	32	691664	Screw (Connecting Rod)
						32A	695759	Screw (Connecting Rod)
						33	499642	Valve-Exhaust
						34	499641	Valve-Intake
						35	691304	Spring-Valve (Intake)
						36	691304	Spring-Valve (Exhaust)
						37	699661	Guard-Flywheel
						40	692194	Retainer-Valve
						45	690977	Tappet-Valve
						46	693404	Camshaft
						51★♦∅692555	Gasket-Intake	
						55	691422	Housing-Rewind Starter
						58	693389	Rope-Starter (Cut to Required Length)
						59	490653	Grip-Insert

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

♦ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

122000

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
60	490652	Grip-Starter Rope (2 Piece)	125	698474	Carburetor Used on Type No(s). 0101, 0112, 0114, 0115, 0118, 0119, 0120, 0121, 0358, 0361, 0374, 0416.	188	699479	Screw (Control Bracket)
65	699228	Screw (Rewind Starter)				190	699220	Screw (Fuel Tank)
78	699205	Screw (Flywheel Guard)				192	694543	Adjustor-Rocker Arm
95	691636	Screw (Throttle Valve)				209	692571	Spring-Governor Used on Type No(s). 0101, 0111, 0112, 0114, 0118, 0119, 0358, 0361, 0374, 0394, 0416, 0496.
97	690024	Shaft-Throttle						----- Note -----
98	398185	Kit-Idle Speed (Carburetor)						693206 Spring-Governor
104	691242	Pin-Float Hinge	127	691739	Plug-Welch			Used on Type No(s). 0115, 0116, 0123, 0394, 0496.
108	692567	Valve-Choke	130	691181	Valve-Throttle			----- Note -----
109	690023	Shaft-Choke	133	398187	Float-Carburetor			
109A	693628	Shaft-Choke	134	691888	Kit-Needle/Seat			
109C	790624	Shaft-Choke	137	693981	Gasket-Float Bowl			
117	690048	Jet-Main (Standard) Used on Type No(s). 0101, 0112, 0114, 0115, 0118, 0119, 0120, 0121, 0358, 0361, 0374, 0416.	146	690979	Key-Timing			
		----- Note -----	155	698214	Plate-Cylinder Head	209A	691278	Spring-Governor
		698344 Jet-Main (Standard) Used on Type No(s). 0111, 0116, 0123, 0394, 0496.	161	699207	Base-Air Cleaner (Flat Panel Air Cleaner)	219	693578	Gear-Governor
			161A	790631	Base-Air Cleaner (Ultra Low Air Cleaner)	220	691724	Washer (Governor Gear)
			163	696024	Gasket-Air Cleaner	222	699589	Bracket-Control
			163A	696979	Gasket-Air Cleaner	222B	699591	Bracket-Control
			186	692317	Connector-Hose	227	692573	Lever-Governor Control
			187	791766	Line-Fuel (Cut to Required Length) (Used After Code Date 05063000).	238	691300	Valve-Cap
					----- Note -----	265	691024	Clamp-Casing
					691050 Line-Fuel (Cut to Required Length) (Used Before Code Date 05070100).	267	699492	Screw (Casing Clamp)
118	498976	Jet-Main (High Altitude) Used on Type No(s). 0101, 0112, 0114, 0115, 0118, 0119, 0120, 0121, 0358, 0361, 0374, 0416.	187A	791867	Line-Fuel (Molded) (Used After Code Date 05063000).	268	691025	Casing-Control Wire (72" Long) (Cut to Required Length)
		----- Note -----			----- Note -----	269	691026	Wire-Control (78" Long) (Cut to Required Length)
		694176 Jet-Main (High Altitude) Used on Type No(s). 0111, 0116, 0123, 0394, 0496.			692601 Line-Fuel (Molded) (Used Before Code Date 05070100).	270	691027	Nut (Control Wire Casing)
121	696998	Kit-Carburetor Overhaul	187B	791874	Line-Fuel (Molded)	271	691028	Lever-Control
122	693749	Spacer-Carburetor				271A	694256	Lever-Control
						271B	695743	Lever-Control
						276	691716	Washer-Sealing
						281	699639	Panel-Control
						287	699629	Screw (Dipstick Tube)
						300	693593	Muffler
						304	699598	Housing-Blower

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊘ Included in Valve Gasket Set-Ref. No.1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
305	699480	Screw (Blower Housing)	474	694457	Alternator Used on Type No(s). 0374.	663	699206	Screw (Control Panel)
306	693610	Shield-Cylinder				668	694257	Spacer
307	699483	Screw (Cylinder Shield)			----- Note -----	675	691261	Washer (Brush Retainer)
309	694504	Motor-Starter			695730 Alternator Used on Type No(s). 0121.	676	393757	Deflector-Muffler
310	690323	Screw (Starter Motor)	504	694254	Washer Set-Friction	677	690661	Screw (Muffler Deflector)
311	497608	Brush Set	505	691251	Nut (Governor Control Lever)	689	691855	Spring-Friction
332	699359	Nut (Flywheel)	510	499308	Drive-Starter	692	690572	Spring-Detent
333	695711	Armature-Magneto	513	692024	Drive-Clutch	697	790537	Screw (Starter Motor)
334	699477	Screw (Magneto Armature)	522	697689	Plug-Dipstick/Fill	717	693462	Bracket-Air Cleaner
337	491055S	Plug-Spark (Resistor)	523	693618	Dipstick	718	690959	Pin-Locating
		----- Note -----			----- Note -----	741	695087	Gear-Timing
		691043 Plug-Spark (EMS)			790546 Dipstick Used on Type No(s). 0361, 0374.	742	692564	Retainer-E Ring
346	690661	Screw (Spark Arrester)	524	281370S	Seal-Dipstick Tube	746	692566	Gear-Idler
356	693651	Wire-Stop	544	692966	Armature-Starter	773	694258	Retainer
356A	692390	Wire-Stop	552	692346	Bushing-Governor Crank	783	692353	Gear-Pinion
358	699638	Gasket Set-Engine	562	691119	Bolt (Governor Control Lever)	797	691029	Nut (Brush Retainer)
363	19069	Puller-Flywheel				801	694482	Cap-Drive
365	699484	Screw (Carburetor)				802	691286	Cap-End
383	19374S	Wrench-Spark Plug				803	693757	Housing-Starter
415	693463	Plug	597	691696	Screw (Pawl Friction Plate)	830	694544	Stud-Rocker Arm
425	699208	Screw (Air Cleaner Cover)	601	95162S	Clamp-Hose	832	693583	Guard-Muffler
425A	699492	Screw (Air Cleaner Cover)	608	693394	Starter-Rewind	836	699203	Screw (Muffler Guard)
427	694255	Nut (Control Bracket)	613	699209	Screw (Muffler)	836A	699632	Screw (Muffler Guard)
445	491588S	Filter-Air Cleaner Cartridge (Flat Panel)	615	692576	Retainer-Governor Shaft	842	691031	Seal-O Ring (Dipstick Tube)
445A	697029	Filter-Air Cleaner Cartridge (High Mount)	616	692547	Crank-Governor	847	693617	Dipstick/Tube Assembly
455	692591	Cup-Flywheel	619	699230	Screw (Cylinder Head Plate)			----- Note -----
456	692299	Plate-Pawl Friction	621	692310	Switch-Stop			790545 Dipstick/Tube Assembly
459	281505S	Pawl-Ratchet	632	693408	Spring/Link- Mechanical Governor			Used on Type No(s). 0361, 0374.
467	691668	Knob-Air Cleaner	633	◆693867	Seal-Choke/Throttle Shaft	851	493880S	Terminal-Spark Plug
			633A	◆691321	Seal-Choke/Throttle Shaft	868	★Ø692044	Seal-Valve
			635	692076	Boot-Spark Plug	875	697030	Base-Air Cleaner (High Mount)
						883	★691893	Gasket-Exhaust

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

122000

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
914	699481	Screw (Rocker Cover) (Bottom)	971	690370	Screw (Air Cleaner Base)	1036		Label-Emission (Available From An Authorized Briggs & Statton Sevice Dealer)
914A	692557	Screw (Rocker Cover) (Top)	971A	690349	Screw (Air Cleaner Base)	1051	691265	Ring-Retaining
914B	697551	Screw (Rocker Cover) (Center)	971B	699629	Screw (Air Cleaner Base)	1058	276355	Owner's Manual
951	790630	Lever-Choke	972	694260	Tank-Fuel	1070	699201	Screw (Flywheel Fan)
957	694261	Cap-Fuel Tank	975	493640	Bowl-Float	1090	691293	Retainer-Brush
958	698180	Valve-Fuel Shut Off	977	697001	Gasket Set-Carburetor	1095	698215	Gasket Set-Valve
961	698304	Screw (Air Cleaner Bracket)	993	Ø694088	Gasket-Cylinder Head Plate	1119	699772	Screw (Alternator)
967	493537S	Filter-Pre Cleaner (Flat Panel)	994	399541	Arrester-Spark	1210	498144	Pulley/Spring Assembly (Pulley)
967A	273356S	Filter-Pre Cleaner (High Mount)	1005	692592	Fan-Flywheel	1211	498144	Pulley/Spring Assembly (Spring)
968	692584	Cover-Air Cleaner (Flat Panel Air Cleaner)	1019	694852	Kit-Label	1330	272147	Repair Manual
968A	693460	Cover-Air Cleaner (High Mount)	1022	★Ø691890	Gasket-Rocker Cover	1330	272147	Repair Manual
968B	791082	Cover-Air Cleaner (Ultra Low Air Cleaner)	1023	499924	Cover-Rocker Arm			
			1026	790287	Rod-Push			
			1029	691230	Arm-Rocker			
			1034	691343	Guide-Push Rod			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.