



123300

Illustrated Parts List

Model Series

123300

TYPE NUMBERS
0035 through 0303.

TABLE OF CONTENTS

Air Cleaner	6
Blower Housing	7
Camshaft	2
Carburetor	4
Controls	5
Crankcase Cover	2
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electric Starter	5
Exhaust System	6
Flywheel	7
Fuel Supply	5
Gear Reduction	6
Governor Spring	5
Ignition	5
Kits/Gaskets – Carburetor	4
Kits/Gaskets – Engine	2
Kits/Gaskets – Valves	3
Lubrication	5
Piston Group	2
Rewind Starter	7

BRIGGS & STRATTON



PRINTED IN U.S.A.












COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

123300

1019 LABEL KIT

1058 OWNER'S MANUAL

1330 REPAIR MANUAL

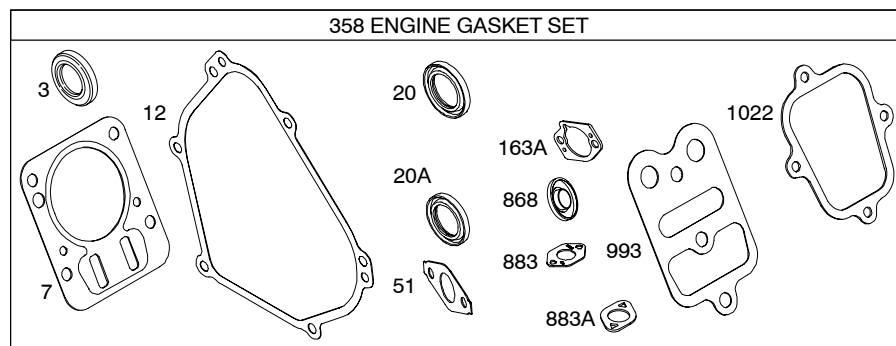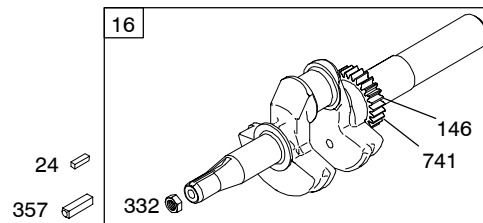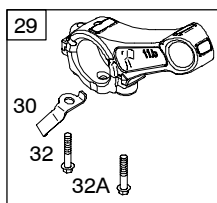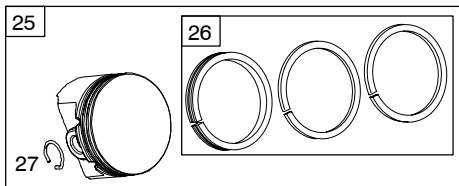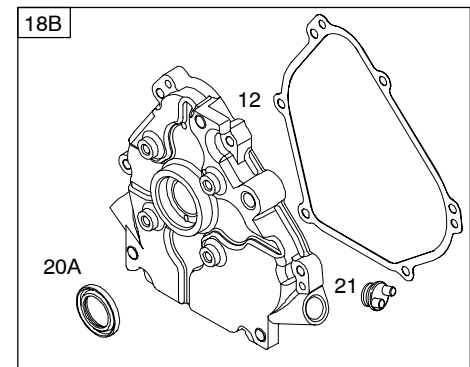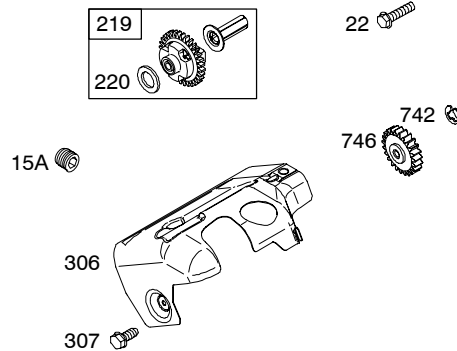
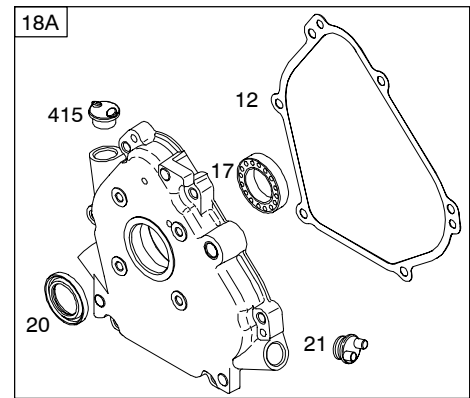
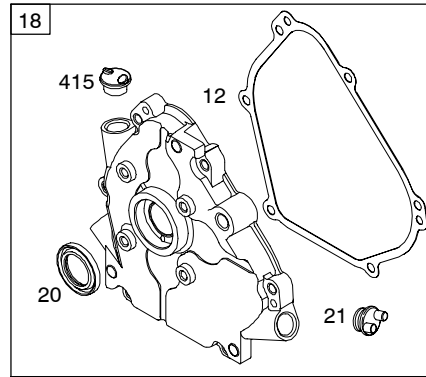
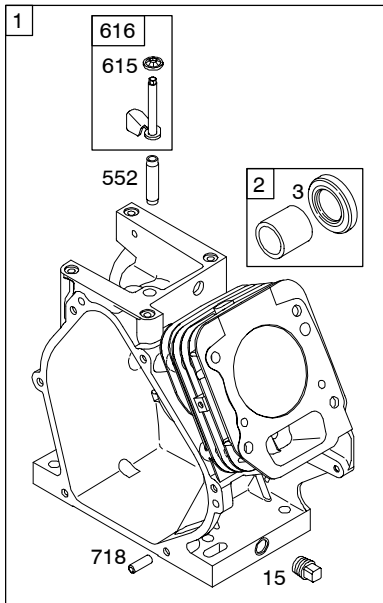


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5719-2


Assemblies include all parts shown in frames.

11/07/2005

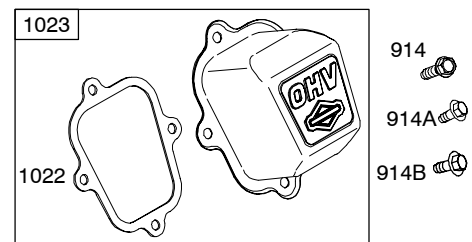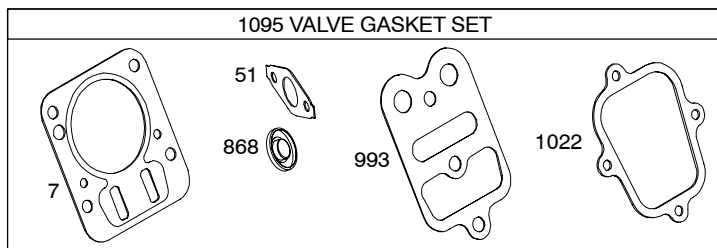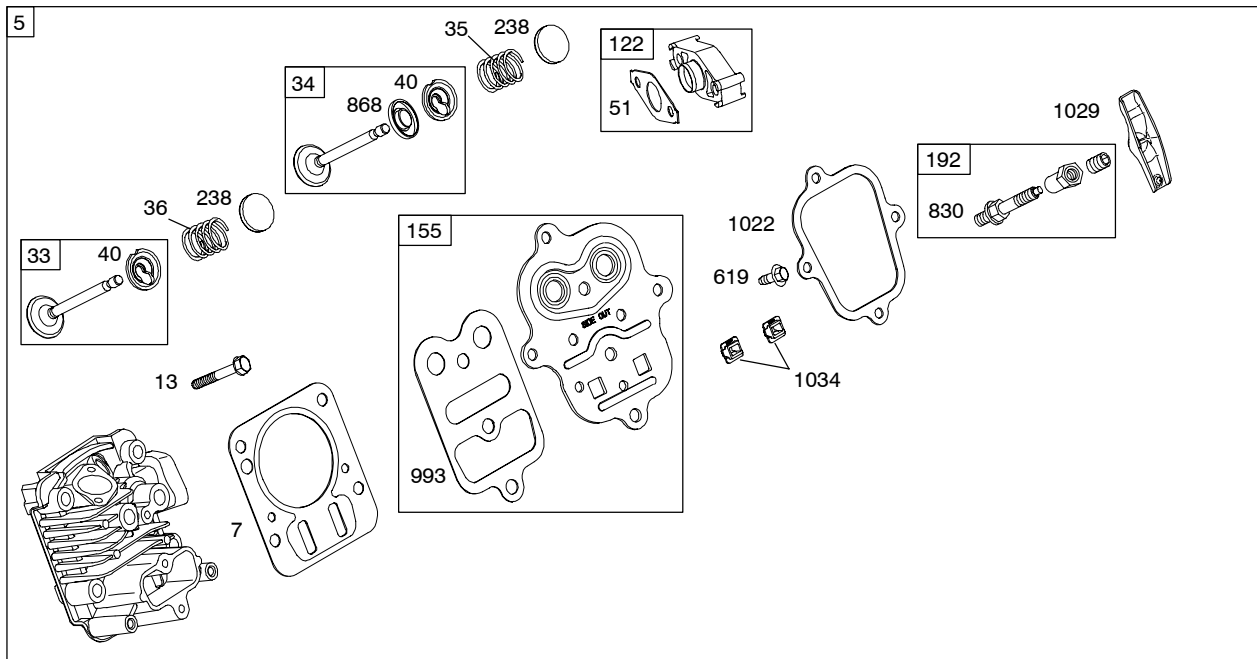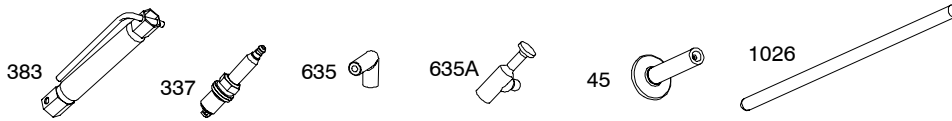

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

123300

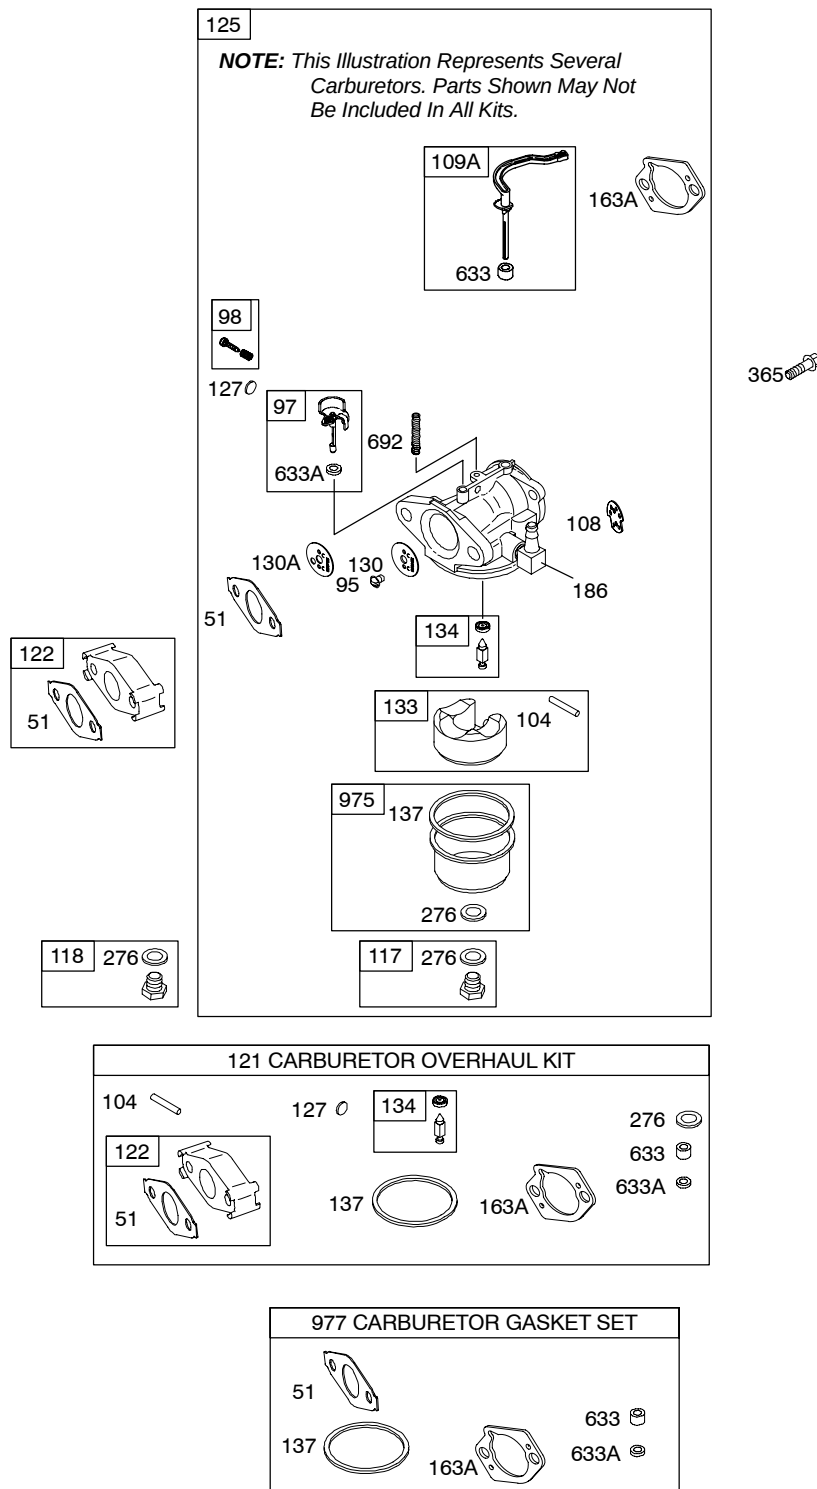


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5719-4

Assemblies include all parts shown in frames.

11/07/2005

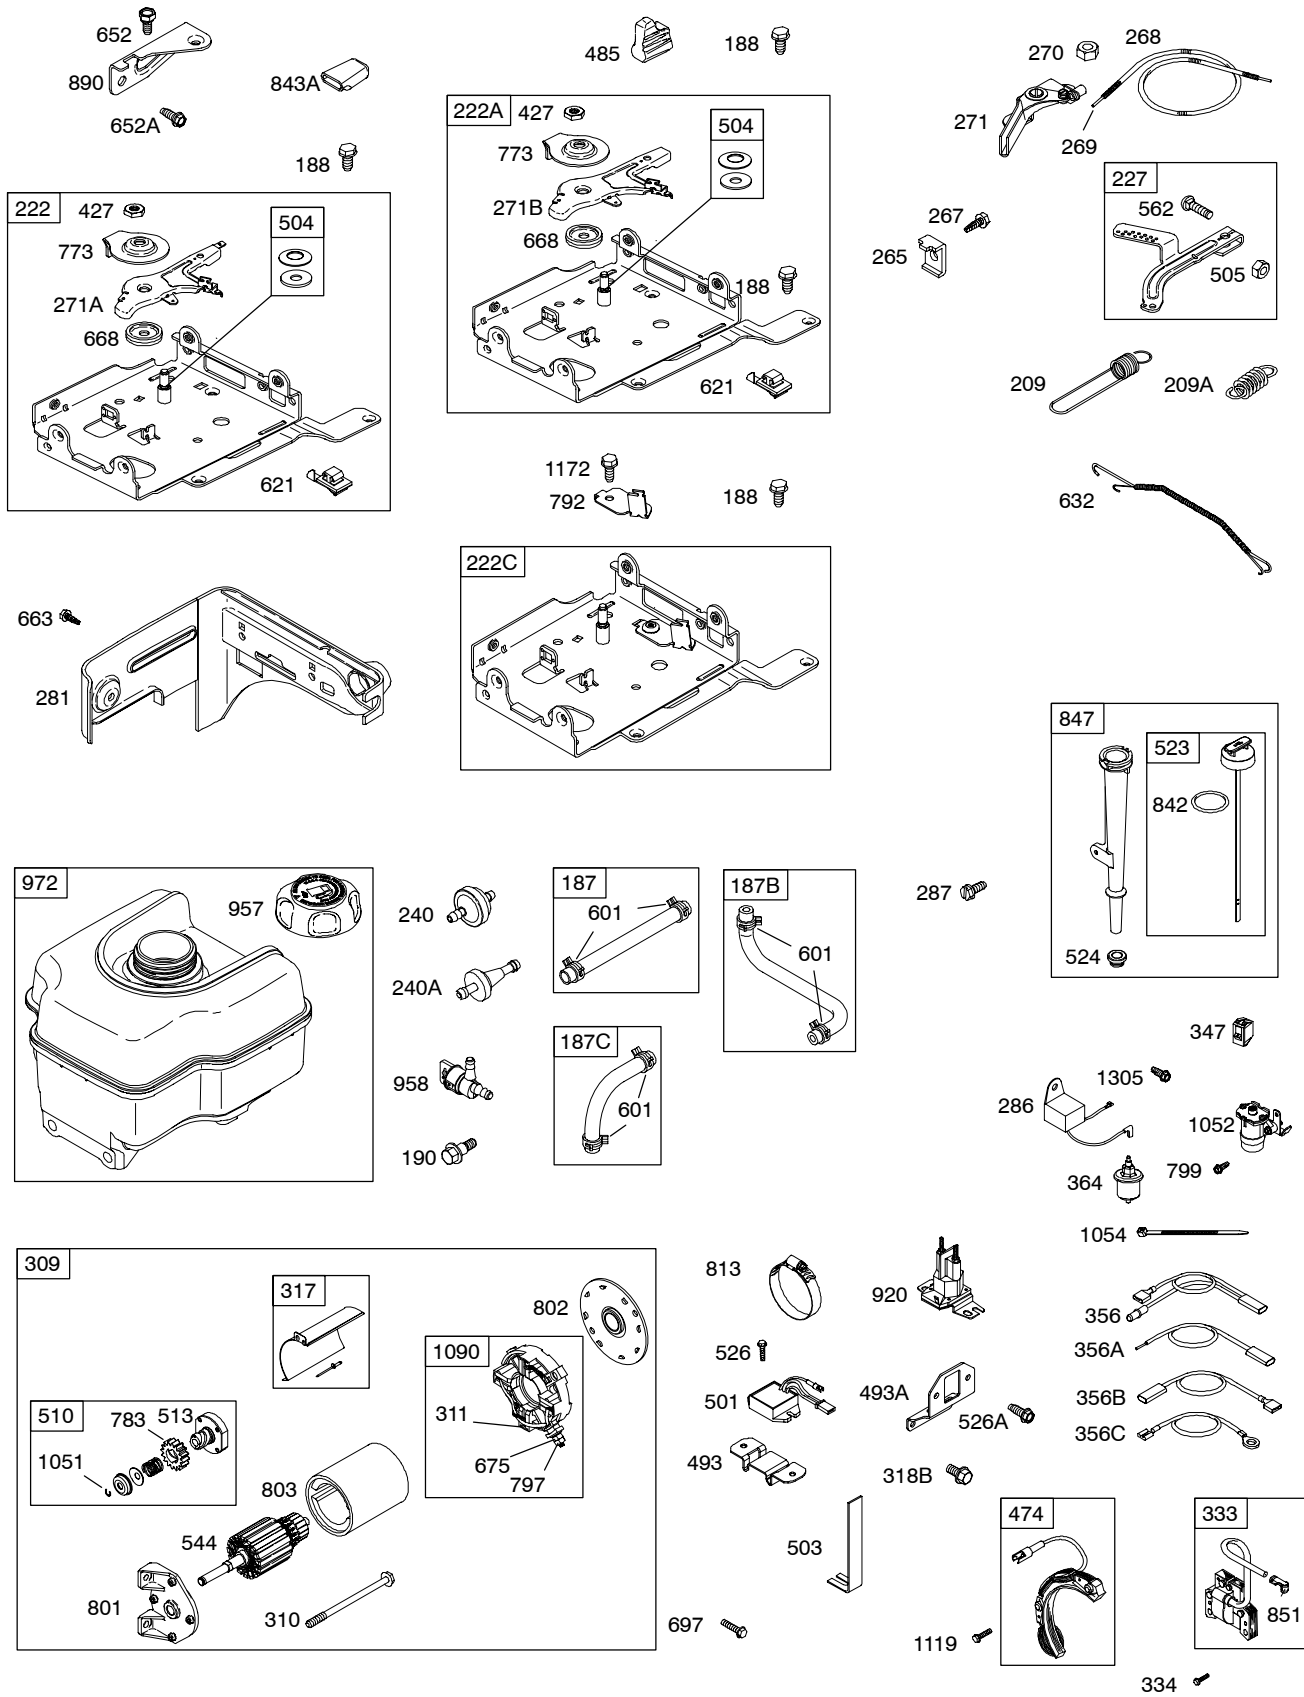





Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5719-5

Assemblies include all parts shown in frames.

11/07/2005



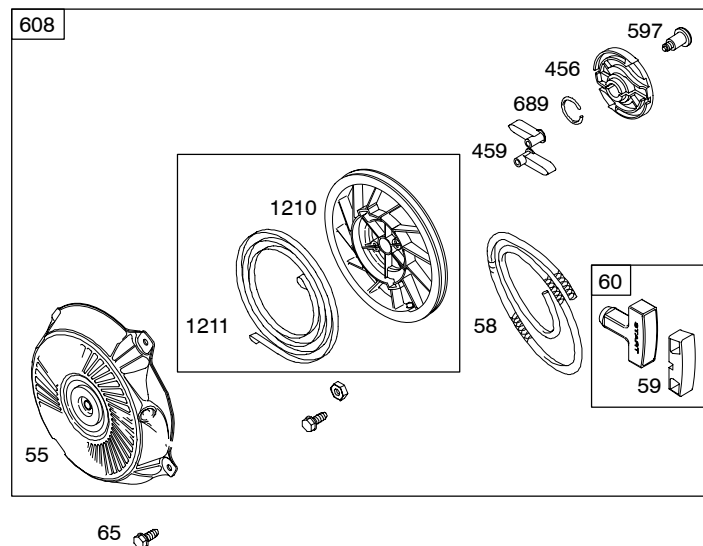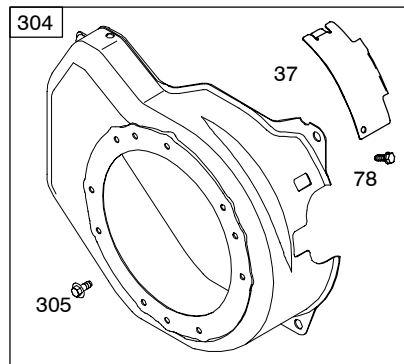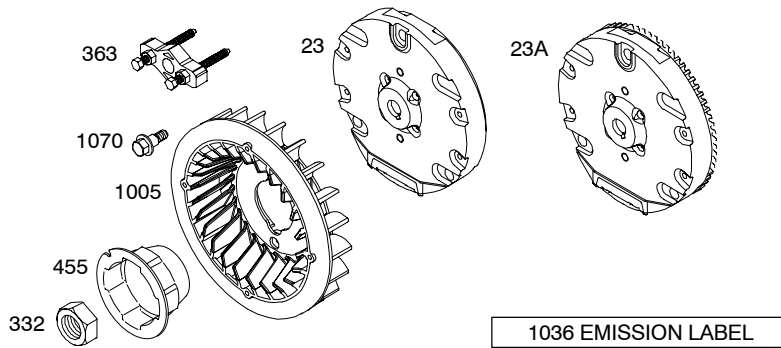

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5719-7

Assemblies include all parts shown in frames.

11/07/2005

123300

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	699505	Cylinder Assembly	18	699804	Cover-Crankcase Used on Type No(s). 0049, 0249, 0303.	25	792004	Piston Assembly (Standard) (Used After Code Date 05030800).
2	399269	Kit-Bushing/Seal (Magneto Side)	18A	699672	Cover-Crankcase Used on Type No(s). 0035, 0036, 0050, 0118, 0121, 0122, 0135, 0136, 0138, 0140, 0141, 0144, 0145, 0151, 0170, 0172, 0176, 0178, 0179, 0235, 0236, 0250, 0267, 0268, 0300, 0301, 0302.			----- Note ----- 499627 Piston Assembly (Standard) (Used Before Code Date 05030900).
3	★299819S	Seal-Oil (Magneto Side)						791325 Piston Assembly (.020" Oversize) (Used After Code Date 05030800).
5	699486	Head-Cylinder	18B	699761	Cover-Crankcase Used on Type No(s). 0120.			692789 Piston Assembly (.020" Oversize) (Used Before Code Date 05030900).
7	★Ø698210	Gasket-Cylinder Head	20	★692550	Seal-Oil (PTO Side)	26	791969	Ring Set (Standard) (Used After Code Date 05030800).
11A	693647	Tube-Breather (High Mount Air Cleaner)	20A	★694171	Seal-Oil (PTO Side)			----- Note ----- 499631 Ring Set (Standard) (Used Before Code Date 05030900).
12	★699485	Gasket-Crankcase	21	281658S	Cap-Oil Fill			791324 Ring Set (.020" Oversize) (Used After Code Date 05030800).
13	699482	Screw (Cylinder Head)	22	699478	Screw (Crankcase Cover/ Sump)			692786 Ring Set (.020" Oversize) (Used Before Code Date 05030900).
15	691686	Plug-Oil Drain (Square Head)	23	699488	Flywheel			
15A	691682	Plug-Oil Drain (Flush)	23A	699514	Flywheel Used on Type No(s). 0050, 0121, 0138, 0151, 0170, 0172, 0176, 0178, 0250, 0300.			
16	699443	Crankshaft ----- Note ----- 699444 Crankshaft Used on Type No(s). 0120. 699449 Crankshaft Used on Type No(s). 0267, 0300. 699451 Crankshaft Used on Type No(s). 0118, 0122. 699442 Crankshaft Used on Type No(s). 0140, 0145. 699441 Crankshaft Used on Type No(s). 0035, 0235, 0301.			----- Note ----- 790328 Flywheel Used on Type No(s). 0180.			
17	692517	Bearing-Ball	24	222698S	Key-Flywheel			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.***5719-8**

Assemblies include all parts shown in frames.

11/07/2005

123300

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
27	691866	Lock-Piston Pin	86	690608	Cover-Gear	130	691181	Valve-Throttle
28	499423	Pin-Piston	87	691582	Seal-Gear Reduction	130A	691203	Valve-Throttle
29	690124	Rod-Connecting	88	691600	Gasket-Gear			Used on Type No(s).
30	692562	Dipper-Connecting Rod			Reduction Cover			0140, 0145.
37	699661	Guard-Flywheel	95	691636	Screw	133	398187	Float-Carburetor
40	692194	Retainer-Valve			(Throttle Valve)	134	●398188	Kit-Needle/Seat
45	690977	Tappet-Valve	97	690024	Shaft-Throttle	137	●●693981	Gasket-Float Bowl
46	693404	Camshaft	98	398185	Kit-Idle Speed	146	690979	Key-Timing
51★●●	692555	Gasket-Intake			(Carburetor)	155	★698214	Plate-Cylinder Head
55	691422	Housing-Rewind Starter	104	●691242	Pin-Float Hinge	163A★●●	696979	Gasket-Air Cleaner
58	693389	Rope-Starter	108	692567	Valve-Choke			(High Mount)
32	691664	Screw			(.156" Diameter Holes,	186	692317	Connector-Hose
		(Connecting Rod)	109A	693628	Shaft-Choke	187	791766	Line-Fuel
32A	695759	Screw	117	698344	Jet-Main			(Cut to Required
		(Connecting Rod)			(Standard)			Length)
33	499642	Valve-Exhaust			----- Note -----			(Used After Code Date
34	499641	Valve-Intake			494870 Jet-Main			05063000).
35	691304	Spring-Valve			(Standard)			----- Note -----
		(Intake)			Used on Type No(s).			691050 Line-Fuel
36	691304	Spring-Valve			0140, 0145.			(Cut to Required
		(Exhaust)	118	694176	Jet-Main			Length)
		(Cut to Required			(High Altitude)			(Used Before Code
		Length)			----- Note -----			Date 05070100).
59	490653	Grip-Insert			498975 Jet-Main	187B	791874	Line-Fuel
60	490652	Grip-Starter Rope			(High Altitude)			(Molded)
		(2 Piece)			Used on Type No(s).	187C	791866	Line-Fuel
65	699228	Screw			0140, 0145.			(Molded)
		(Rewind Starter)	121	696998	Kit-Carburetor			(Used After Code Date
78	699205	Screw			Overhaul			05063000).
		(Flywheel Guard)	122	★●693749	Spacer-Carburetor			----- Note -----
79	694511	Case-Gear Reduction	125	698475	Carburetor			694486 Line-Fuel
82	690369	Screw			----- Note -----			(Molded)
		(Gear Reduction Case)			790243 Carburetor			(Used Before Code
82A	790197	Screw			Used on Type No(s).			Date 05070100).
		(Gear Reduction Case)			0140, 0145.	188	699479	Screw
83	690374	Shaft-Auxiliary Drive	127	●691739	Plug-Welch			(Control Bracket)
84	691121	Plug-Breather	127A	691585	Plug-Welch	190	699220	Screw
85	692551	Screw						(Fuel Tank)
		(Gear Cover to Gear				192	694543	Adjustor-Rocker Arm
		Reduction)						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⌀ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5719-9

Assemblies include all parts shown in frames.

11/07/2005

123300

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
209	692571	Spring-Governor ----- Note ----- 693206 Spring-Governor Used on Type No(s). 0035, 0118, 0176, 0235, 0301. 693710 Spring-Governor Used on Type No(s). 0151, 0170.	276	271716	Washer-Sealing	347	697854	Switch-Rocker ----- Note ----- 698338 Switch-Rocker Used on Type No(s). 0118, 0136, 0138, 0178.
209A	691278	Spring-Governor	281	699639	Panel-Control	356	693651	Wire-Stop
219	693578	Gear-Governor	286	698611	Module-Oil Sensor	356A	692390	Wire-Stop
220	691724	Washer (Governor Gear)	287	699629	Screw (Dipstick Tube)	356B	692602	Wire-Stop
222	699589	Bracket-Control	300	693593	Muffler	356C	695630	Wire-Stop
222A	699591	Bracket-Control Used on Type No(s). 0268.	300A	699231	Muffler	357	692191	Key-Drive Pulley
222C	699590	Bracket-Control Used on Type No(s). 0140, 0145.	304	699598	Housing-Blower	358	699638	Gasket Set-Engine
227	692573	Lever-Governor Control	305	699480	Screw (Blower Housing)	363	19069	Puller-Flywheel
238	691300	Valve-Cap	306	693610	Shield-Cylinder	364	695693	Terminal-Oil Plug
240	394358	Filter-Fuel	307	699483	Screw (Cylinder Shield)	365	699484	Screw (Carburetor)
240A	694485	Filter-Fuel	309	694504	Motor-Starter	383	19374S	Wrench-Spark Plug
265	691024	Clamp-Casing	310	690323	Screw (Starter Motor)	415	693463	Plug
267	699492	Screw (Casing Clamp)	311	497608	Brush Set	427	694255	Nut (Control Bracket)
268	691025	Casing-Control Wire (Cut to Required Length)	317	695494	Cover-Starter	445A	697029	Filter-Air Cleaner Cartridge (High Mount)
269	691026	Wire-Control (Cut to Required Length)	318B	790537	Screw (Mounting Bracket) (Used After Code Date 04110800). ----- Note ----- 699773 Screw (Mounting Bracket) (Used Before Code Date 04110900).	455	692591	Cup-Flywheel
270	691027	Nut (Control Wire Casing)	332	699359	Nut (Flywheel)	456	692299	Plate-Pawl Friction
271	691028	Lever-Control	333	695711	Armature-Magneto	459	281505S	Pawl-Ratchet
271A	694256	Lever-Control	334	699477	Screw (Magneto Armature)	467	691668	Knob-Air Cleaner
271B	695743	Lever-Control	337	491055S	Plug-Spark (Resistor) ----- Note ----- 691043 Plug-Spark (EMS)	474	694457	Alternator ----- Note ----- 695730 Alternator Used on Type No(s). 0121. 695466 Alternator Used on Type No(s). 0151. 0172. 790320 Alternator Used on Type No(s). 0180.
			346	690661	Screw (Spark Arrester)	485	695755	Knob-Control
						493	691177	Bracket-Mounting
						493A	699048	Bracket-Mounting

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊗ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5719-10

Assemblies include all parts shown in frames.

11/07/2005

123300

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
501	691185	Regulator ----- Note ----- 790325 Regulator Used on Type No(s). 0180.	632	693408	Spring/Link-Mechanical Governor	783	692353	Gear-Pinion
			633	♦♦693867	Seal-Choke/Throttle Shaft	792	694259	Bracket-Fixed Speed
			633A	♦♦691321	Seal-Choke/Throttle Shaft	797	691029	Nut (Brush Retainer)
503	691532	Strap-Starter	635	692076	Boot-Spark Plug	799	699202	Screw (Oil Sensor)
504	694254	Washer Set-Friction	635A	692927	Boot-Spark Plug	801	694482	Cap-Drive
505	691251	Nut (Governor Control Lever)	652	699755	Screw (Support Bracket)	802	691286	Cap-End
			652A	699230	Screw (Support Bracket)	803	693757	Housing-Starter
510	499308	Drive-Starter				813	690635	Clamp
513	692024	Drive-Clutch	663	699206	Screw (Control Panel)	819	699233	Screw (Muffler Bracket)
523	693618	Dipstick				823	699209	Screw (Muffler Adapter)
524	281370S	Seal-Dipstick Tube	668	694257	Spacer	830	694544	Stud-Rocker Arm
526	690297	Screw (Regulator)	675	691261	Washer (Brush Retainer)	832	693583	Guard-Muffler
526A	690326	Screw (Regulator)	676A	697816	Deflector-Muffler	832A	697818	Guard-Muffler
544	692966	Armature-Starter	677A	699776	Screw (Muffler Deflector)	836	699203	Screw (Muffler Guard)
552	692346	Bushing-Governor Crank				836A	699632	Screw (Muffler Guard)
562	691119	Bolt (Governor Control Lever)	689	691855	Spring-Friction	836B	699209	Screw (Muffler Guard)
			692	690572	Spring-Detent	836C	699234	Screw (Muffler Guard)
597	691696	Screw (Pawl Friction Plate)	697	790537	Screw (Starter Motor) (Used After Code Date 04110800).			
601	95162S	Clamp-Hose			----- Note ----- 699773 Screw (Starter Motor) (Used Before Code Date 04110900).	842	691031	Seal-O Ring (Dipstick Tube)
608	693394	Starter-Rewind	717	693462	Bracket-Air Cleaner	843A	695588	Sleeve-Lever
613	699209	Screw (Muffler)	718	690959	Pin-Locating	847	693617	Dipstick/Tube Assembly
613A	699230	Screw (Muffler)	727	698039	Cover-Starter Drive	851	493880S	Terminal-Spark Plug
613B	697812	Screw (Muffler)	732	699200	Screw (Starter Drive Cover)	863	699229	Bracket-Muffler
615	692576	Retainer-Governor Shaft				864	699232	Adapter-Muffler
616	692547	Crank-Governor	741	695087	Gear-Timing	868	★Ø692044	Seal-Valve
619	699230	Screw (Cylinder Head Plate)	742	692564	Retainer-E Ring	875	697030	Base-Air Cleaner (High Mount)
621	692310	Switch-Stop	746	692566	Gear-Idler	883	★691893	Gasket-Exhaust
			773	694258	Retainer	883A	★692237	Gasket-Exhaust
						890	790203	Bracket-Support

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

♦ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5719-11

Assemblies include all parts shown in frames.

11/07/2005

123300

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
914	699481	Screw (Rocker Cover) (Bottom)	972	694260	Tank-Fuel	1054	280275	Cable-Tie
914A	692557	Screw (Rocker Cover) (Top)	975	493640	Bowl-Float	1058	276355	Owner's Manual
914B	697551	Screw (Rocker Cover) (Center)	977	697001	Gasket Set-Carburetor	1070	699201	Screw (Flywheel Fan)
920	691656	Solenoid-Starter	993	Ø694088	Gasket-Cylinder Head Plate	1090	691293	Retainer-Brush
957	694261	Cap-Fuel Tank	994C	790153	Arrester-Spark	1095	698215	Gasket Set-Valve
958	698180	Valve-Fuel Shut Off	1005	692592	Fan-Flywheel	1119	699772	Screw (Alternator)
961	698304	Screw (Air Cleaner Bracket)	1019	694852	Kit-Label	1172	699230	Screw (Fixed Speed Bracket)
967A	273356S	Filter-Pre Cleaner (High Mount)	1022	★Ø691890	Gasket-Rocker Cover	1210	498144	Pulley/Spring Assembly (Pulley)
968A	693460	Cover-Air Cleaner (High Mount)	1023	499924	Cover-Rocker Arm	1211	498144	Pulley/Spring Assembly (Spring)
971A	690349	Screw (Air Cleaner Base)	1026	790287	Rod-Push	1305	699691	Screw (Oil Sensor Module)
971B	699629	Screw (Air Cleaner Base)	1029	691230	Arm-Rocker	1330	272147	Repair Manual
			1034	691343	Guide-Push Rod			
			1036		Label-Emission (Available From An Authorized Briggs & Statton Service Dealer)			
			1051	691265	Ring-Retaining			
			1052	790141	Sensor-Oil			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.***5719-12**

Assemblies include all parts shown in frames.

11/07/2005