



12D600

Illustrated Parts List

Model Series

12D600

TYPE NUMBERS
0015 through 0119.

TABLE OF CONTENTS

Air Cleaner	6
Blower Housing/Shrouds	7
Camshaft	2
Carburetor	4
Controls	5
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electric Starter	7
Engine Sump	2
Exhaust System	6
Flywheel	7
Flywheel Brake	5
Fuel Supply	4
Governor Spring	5
Ignition	5
Lubrication	2
Piston Group	2
Rewind Starter	7


BRIGGS & STRATTON






PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.






12D600

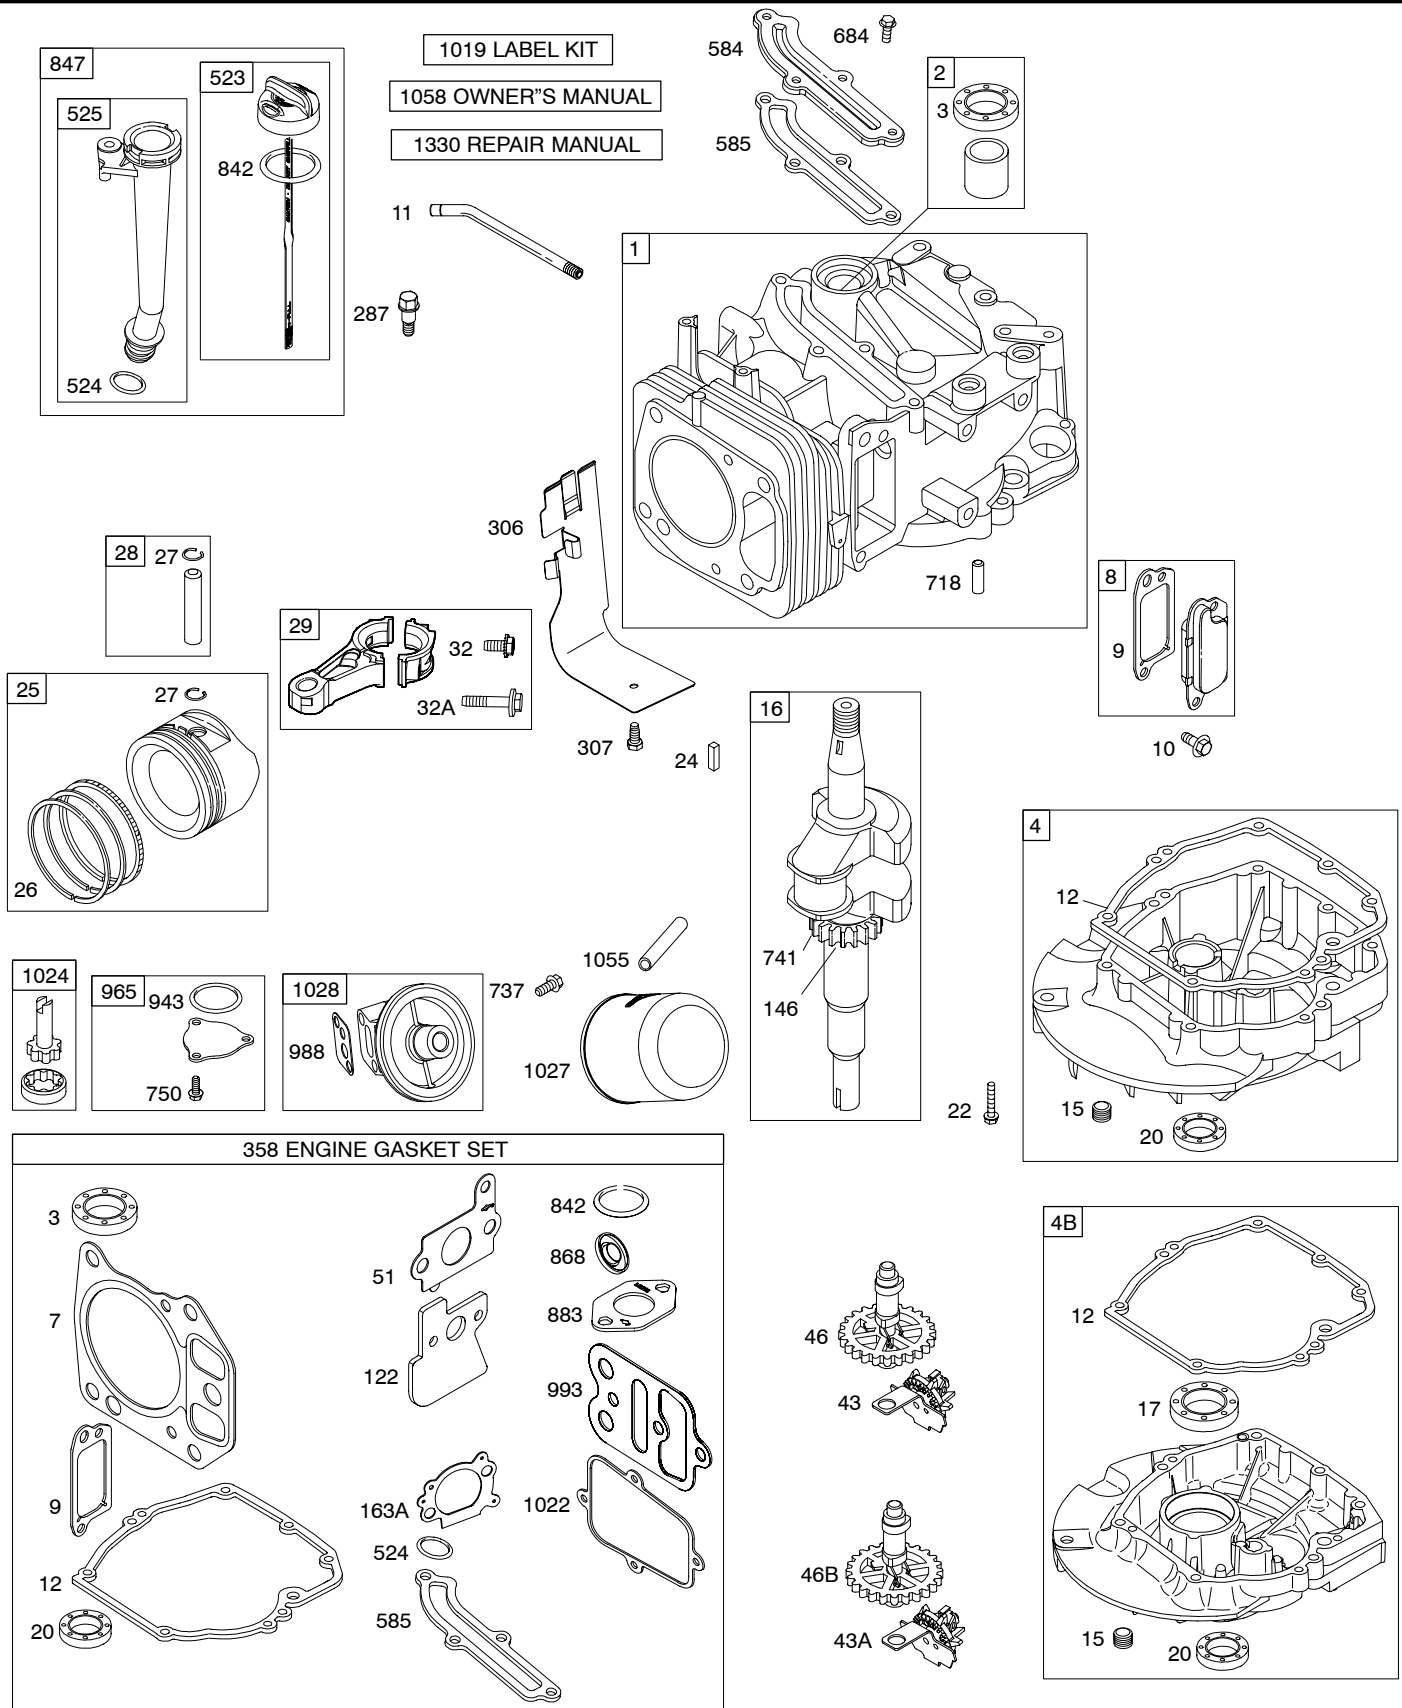


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 6742-2 Assemblies include all parts shown in frames. 10/12/2005

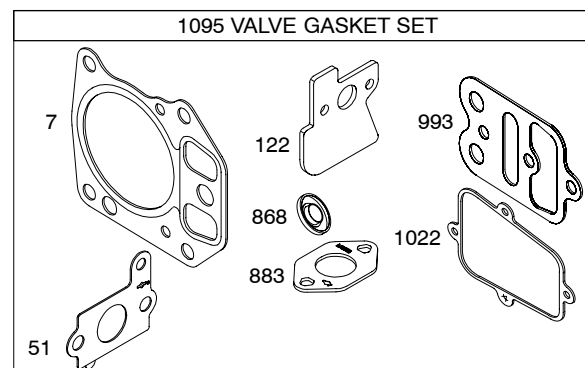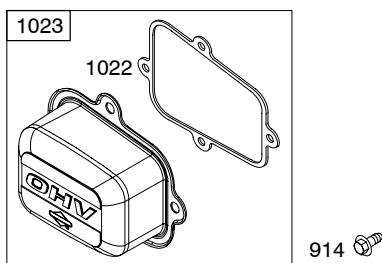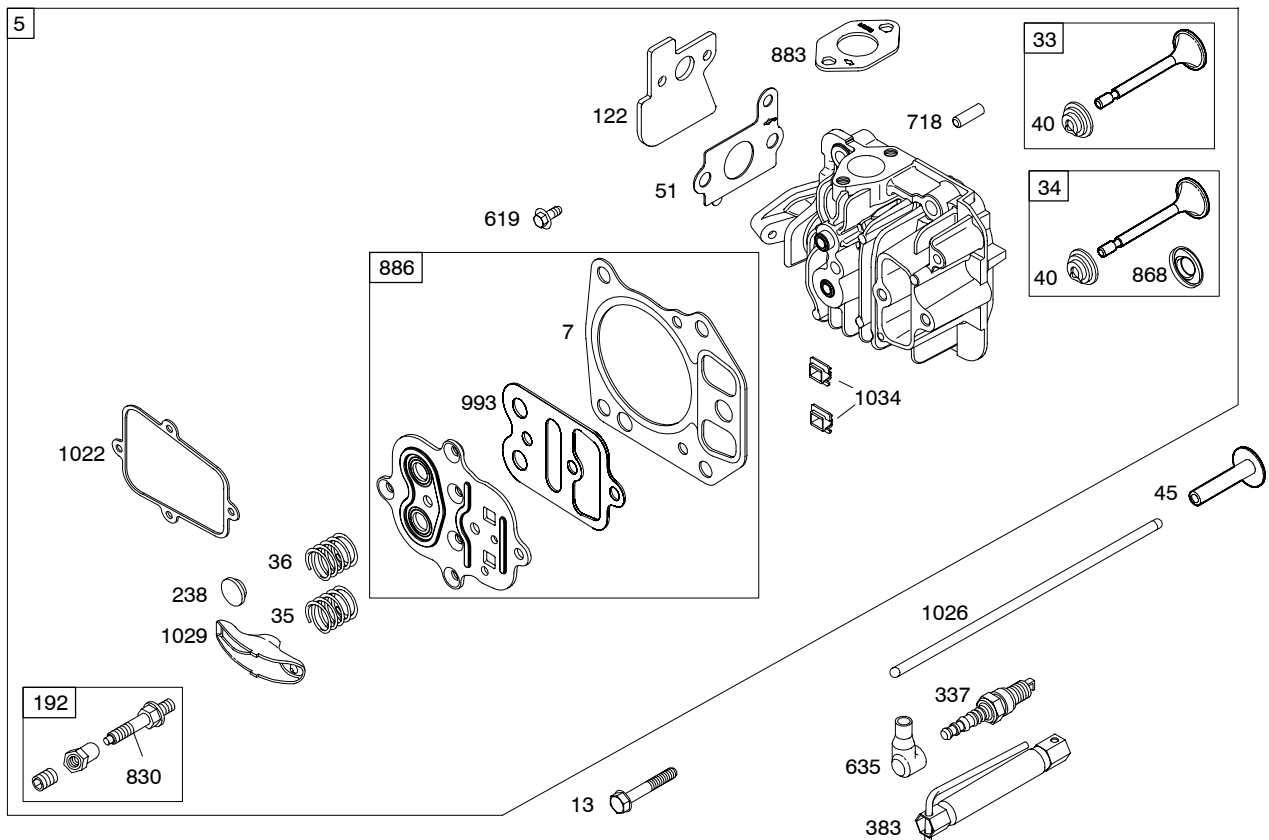








12D600

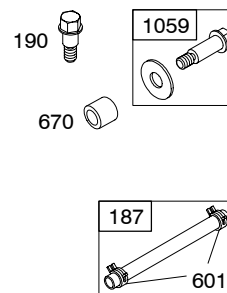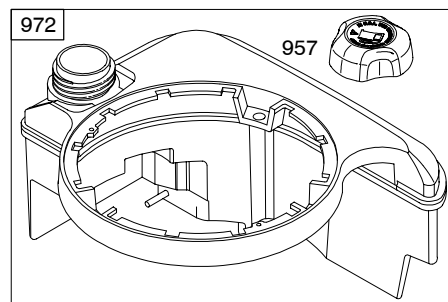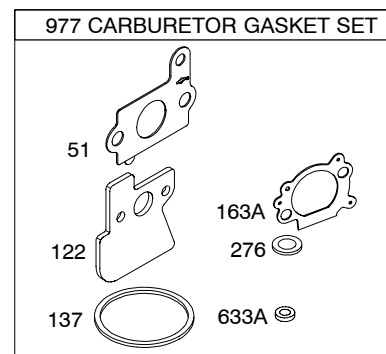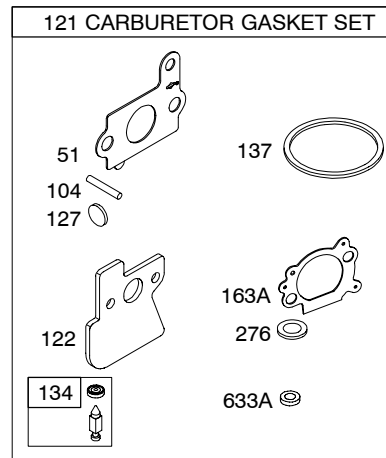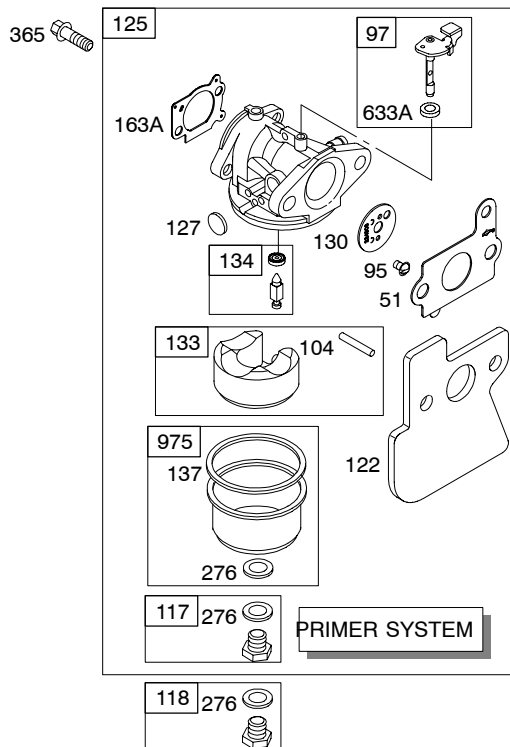


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 6742-4 Assemblies include all parts shown in frames. 10/12/2005

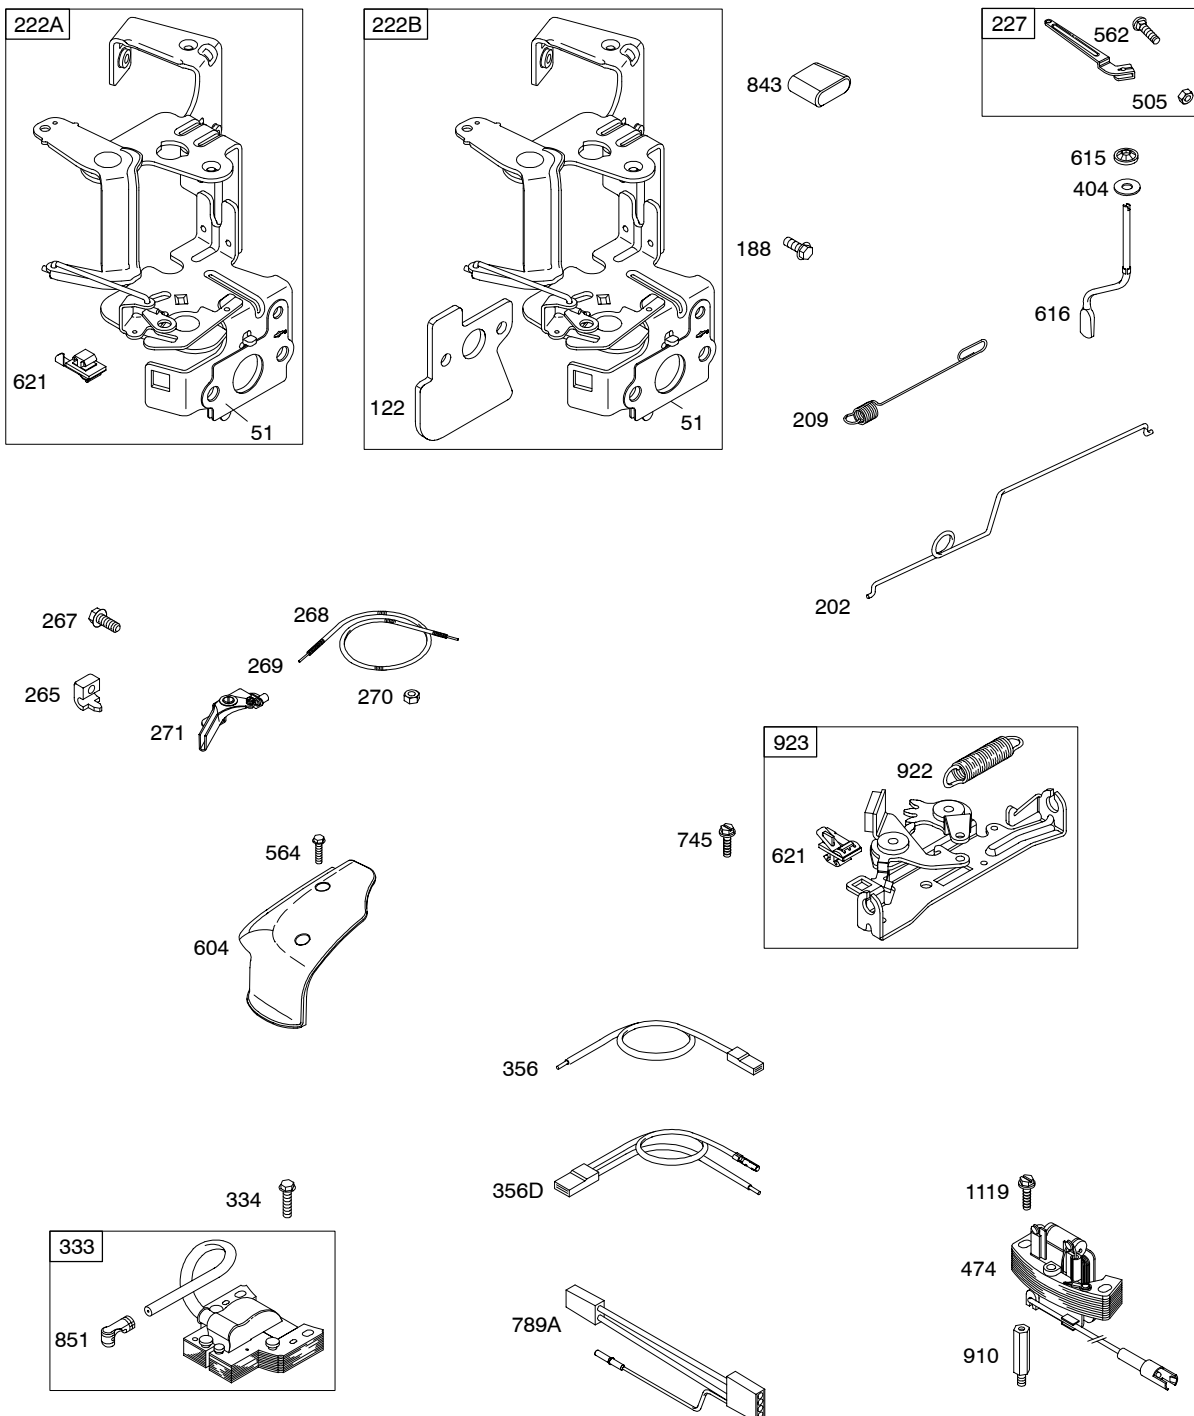

12D600

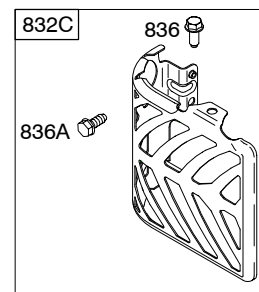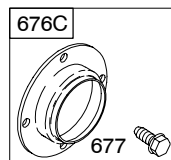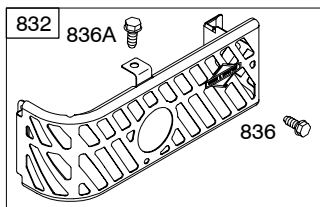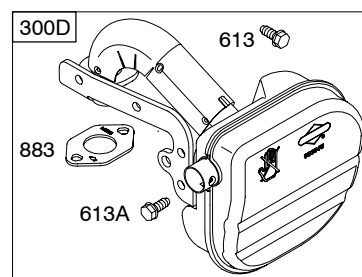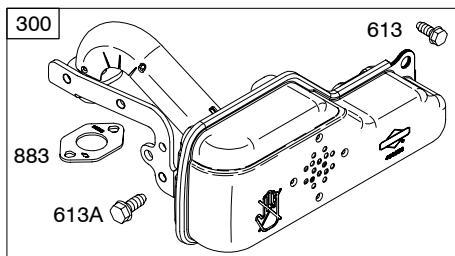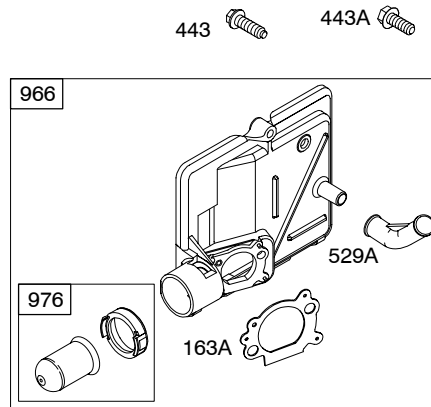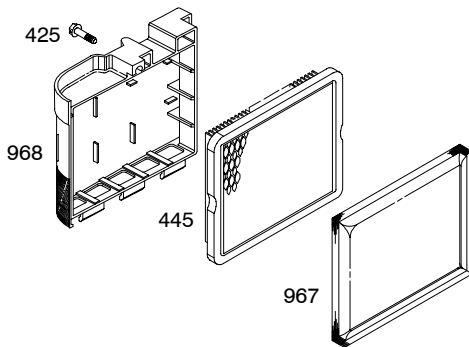

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
6742-6 Assemblies include all parts shown in frames. 10/12/2005

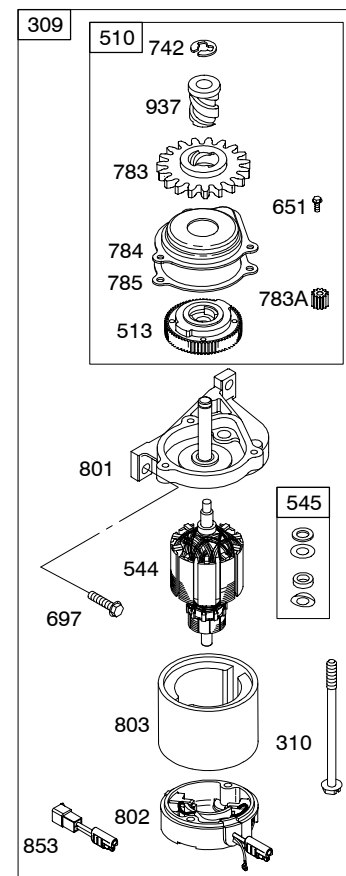

12D600

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	790363	Cylinder Assembly (Used After Code Date 04040400). ----- Note ----- 499678 Cylinder-Assembly (Used Before Code Date 04040500).	24	222698	Key-Flywheel	29	499424	Rod-Connecting
2	399269	Kit-Bushing/Seal (Magneto Side)	25	792004	Piston Assembly (Standard) (Used After Code Date 05030700). ----- Note ----- 499627 Piston Assembly (Standard) (Used Before Code Date 05030800).	32	691664	Screw (Connecting Rod)
3	*299819	Seal-Oil (Magneto Side)				32A	695759	Screw (Connecting Rod)
4	493279	Sump-Engine				33	499642	Valve-Exhaust
4B	692509	Sump-Engine Used on Type No(s). 0115, 0116.				34	499641	Valve-Intake
5	695276	Head-Cylinder				35	691304	Spring-Valve (Intake)
7	*Δ695166	Gasket-Cylinder Head				36	691304	Spring-Valve (Exhaust)
8	495786	Breather Assembly				37	694086	Guard-Flywheel
9	*272481	Gasket-Breather				40	692194	Retainer-Valve
10	691125	Screw (Breather Assembly)				43	691997	Slinger-Governor/Oil
11	499675	Tube-Breather				43A	692505	Slinger-Governor/Oil Used on Type No(s). 0115, 0116.
12	*692232	Gasket-Crankcase				45	690977	Tappet-Valve
13	691137	Screw (Cylinder Head)				46	694039	Camshaft
15	691680	Plug-Oil Drain (Square Socket)				46B	694040	Camshaft Used on Type No(s). 0115, 0116.
16	691457	Crankshaft ----- Note ----- 696607 Crankshaft Used on Type No(s). 0110. 692716 Crankshaft Used on Type No(s). 0109.	26	791969	Ring Set (Standard) (Used After Code Date 05030700). ----- Note ----- 499631 Ring Set (Standard) (Used Before Code Date 05030800).	51	*♦♦Δ692668	Gasket-Intake
17	692517	Bearing-Ball				55	691421	Housing-Rewind Starter
20	*399781	Seal-Oil (PTO Side)				58	697316	Rope-Starter (Cut To Required Length)
22	691092	Screw (Crankcase Cover/Sump)				60	281434	Grip-Starter Rope
23	692693	Flywheel ----- Note ----- 699488 Flywheel Used on Type No(s). 0119.				65	690837	Screw (Rewind Starter)
23A	696569	Flywheel Used on Type No(s). 0015, 0110, 0118.				78	691108	Screw (Flywheel Guard)
						95	691636	Screw (Throttle Valve)
						97	499682	Shaft-Throttle (Metal) ----- Note ----- 790121 Shaft-Throttle (Plastic)
			27	691866	Lock-Piston Pin	104	♦691242	Pin-Float Hinge
			28	499423	Pin-Piston	117	498981	Jet-Main (Standard) (Used After Code Date 03110600). ----- Note ----- 498978 Jet-Main (Standard) (Used Before Code Date 03110700).

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

♦ Included in Carburetor Gasket Set-Ref. No. 977.

Δ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

6742-8

Assemblies include all parts shown in frames.

10/12/2005

12D600

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
118	497466	Jet–Main (High Altitude) (Used After Code Date 03110600). ----- Note ----- 498975 Jet–Main (High Altitude) (Used Before Code Date 03110700).	209	691290	Spring–Governor Used on Type No(s). 0100, 0109. ----- Note ----- 691851 Spring– Governor Used on Type No(s). 0015, 0119. 691291 Spring– Governor Used on Type No(s). 0110, 0111, 0112, 0114, 0115, 0116.	307	690345	Screw (Cylinder Shield)
121	692703	Kit–Carburetor Overhaul	222A	693378	Bracket–Control	309	695550	Motor–Starter
122★♦♦	692799	Spacer–Carburetor	222B	692672	Bracket–Control Used on Type No(s). 0015, 0110, 0118.	310	692327	Bolt (Starter Motor)
125	790120	Carburetor	227	691467	Lever–Governor Control	332	690662	Nut (Flywheel)
127	♦694468	Plug–Welch	238	691300	Cap–Valve	333	802574	Armature–Magneto
130	691203	Valve–Throttle ----- Note ----- 696564 Valve–Throttle (Used With Plastic Throttle Shaft)	265	690798	Clamp–Casing	334	691061	Screw (Magneto Armature)
133	398187	Float–Carburetor	267	691044	Screw (Casing Clamp)	337	692051	Plug–Spark (Resistor) ----- Note ----- 692720 Plug–Spark (EMS)
134	♦398188	Kit–Needle/Seat	268	691025	Casing–Control Wire (Cut To Required Length)	356	692390	Wire–Stop
137	♦♦693981	Gasket–Float Bowl	269	691026	Wire–Control (Cut To Required Length)	356D	692719	Wire–Stop
146	690979	Key–Timing	270	691027	Nut (Control Wire Casing)	358	694090	Gasket Set–Engine
163A★♦♦	692667	Gasket–Air Cleaner	271	691028	Lever–Control	363	19069	Puller–Flywheel
187	791766	Line–Fuel (Cut to Required Length) (Used After Code Date 05063000). ----- Note ----- 691050 Line–Fuel (Cut to Required Length) (Used Before Code Date 05070100).	276 ♦♦	271716	Washer–Sealing	365	691136	Screw (Carburetor)
188	691147	Screw (Control Bracket)	287	690940	Screw (Dipstick Tube)	383	19374	Wrench–Spark Plug
190	690940	Screw (Fuel Tank)	300	694248	Muffler–Exhaust	404	690272	Washer (Governor Crank)
192	694543	Adjuster–Rocker Arm	300D	699769	Muffler–Exhaust	425	690670	Screw (Air Cleaner Cover)
202	691303	Link–Mechanical Governor	304	696527	Housing–Blower ----- Note ----- 697383 Housing– Blower Used on Type No(s). 0118.	443	691637	Screw (Air Cleaner Primer Base)
			305	691108	Screw (Blower Housing) ----- Note ----- 691138 Screw (Blower Housing)	443A	692523	Screw (Air Cleaner Primer Base)
			306	691232	Shield–Cylinder	445	491588	Filter–Air Cleaner Cartridge
						455	695161	Cup–Flywheel
						456	692299	Plate–Pawl Friction
						459	281505	Ratchet–Pawl
						474	691991	Alternator
						505	694251	Nut (Governor Control Lever)
						510	494147	Drive–Starter
						513	692358	Clutch–Drive
						523	499621	Dipstick
						524	★692296	Seal–Dipstick Tube
						525	495265	Tube–Dipstick
						529A	691923	Grommet
						544	690786	Armature–Starter

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

♦ Included in Carburetor Gasket Set–Ref. No. 977.

△ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

6742–9

Assemblies include all parts shown in frames.

10/12/2005

12D600

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
545	492919	Washer Set (Starter Motor)	718	690959	Pin-Locating	937	691325	Spline-Starter
562	691119	Bolt (Governor Control Lever)	737	692511	Screw (Oil Filter Adapter)	943	692514	Seal-O Ring (Oil Pump Cover)
563	691138	Screw (Debris Guard Screen)	741	790345	Gear-Timing (Use Without Woodruff Key)	949	696306	Guard-Debris Screen
564	693808	Screw (Control Cover)	----- Note -----			957	692046	Cap-Fuel Tank (Plastic)
584	697734	Cover-Breather Passage	742	93941	Retainer-E-Ring	965	692507	Cover-Oil Pump
585	★691879	Gasket-Breather Passage	745	691648	Screw (Brake)	966	692673	Base-Air Cleaner Primer
592	690800	Nut (Rewind Starter)	750	691683	Screw (Oil Pump Cover)	967	493537	Filter-Pre Cleaner
597	691696	Screw (Pawl Friction Plate)	783	691918	Gear-Pinion	968	692298	Cover-Air Cleaner
601	95162	Clamp-Hose	783A	691269	Gear-Pinion	972	699374	Tank-Fuel (Plastic)
604	692669	Cover-Control	784	692341	Cover-Starter Gear	975	493640	Bowl-Float
608	497680	Starter-Rewind	785	692352	Gasket-Starter Gear	976	694395	Primer-Carburetor
615	690340	Retainer-Governor Shaft	789A	696546	Harness-Wiring	977	692704	Gasket Set-Carburetor
616	698801	Crank-Governor	801	690782	Cap-Drive	988	692515	Gasket-Oil Adapter
619	691108	Screw (Cylinder Head Plate)	802	695267	Cap-End	993	★Δ694088	Gasket-Cylinder Head Plate
613	691108	Screw (Muffler)	803	695266	Housing-Starter	997	696310	Shield-Debris
613A	691140	Screw (Muffler)	830	694544	Stud-Rocker Arm	1005	691346	Fan-Flywheel
621	692310	Switch-Stop	832	691466	Guard-Muffler	1019	696438	Kit-Label
633A●	691321	Seal-Choke/Throttle Shaft	832C	695593	Guard-Muffler	1022	★Δ691890	Gasket-Rocker Cover
635	66538	Boot-Spark Plug	836	691147	Screw (Muffler Guard)	1023	499624	Cover-Rocker Arm
651	690345	Screw (Starter Gear Cover)	836A	697551	Screw (Muffler Guard)	1024	692508	Pump-Oil
670	692294	Spacer-Fuel Tank	842	★691031	Seal-O Ring (Dipstick Tube)	1026	692045	Rod-Push
676C	497682	Deflector-Muffler	843	691884	Sleeve-Lever	1027	692513	Filter-Oil
676D	697915	Deflector-Muffler	847	692047	Dipstick/Tube Assembly	1028	692516	Adapter_Oil Filter
677	690661	Screw (Muffler Deflector)	851	493880	Terminal-Sparkplug	1029	691230	Arm-Rocker
684	690345	Screw (Breather Passage Cover)	853	695268	Adaptor-Wire	1036		Label-Emission (Available From An Authorized Briggs & Statton Service Dealer)
689	691855	Spring-Friction	868	★Δ692044	Seal-Valve	1034	691343	Guide-Push Rod
697	691127	Screw (Drive Cap)	883	★Δ691893	Gasket-Exhaust	1055	692623	Tube-Oil Pump
703	696309	Clip	886	696268	Gasket Set-Cylinder Head/Plate	1058	276348	Manual-Owner's
			910	691094	Stud (Alternator)	1059	692311	Kit-Screw/Washer
			914	691108	Screw (Rocker Arm Cover)	1095	694091	Gasket Set-Valve
			922	692135	Spring-Brake	1119	691648	Screw (Alternator)
			923	695891	Brake	1210	498144	Pulley/Spring Assembly (Pulley)
			925	690595	Cover-Linkage	1211	498144	Pulley/Spring Assembly (Spring)
						1330	272147	Manual-Repair

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Δ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

6742-10

Assemblies include all parts shown in frames.

10/12/2005