

135400

Illustrated Parts List

Model Series

135400

TYPE NUMBERS
0022 through 0136.

For Use On Engines Built Before Date Code – 02012200

TABLE OF CONTENTS

Air Cleaner	8
Alternator	7
Blower Housing/Shrouds	9
Cam	3
Carburetors	5
Controls	7
Crankcase Cover/Sump	4
Crankshaft	3
Cylinder	2
Flywheel	9
Fuel Tank	6
Governor Spring	7
Head	2
Ignition	7
Kits/Gaskets – Carburetor	5
Kits/Gaskets – Engine	6
Kits/Gaskets – Valves	2
Muffler	8
Oil Group	11
Piston Group	3
Rewind Starters	10
Valves	3


BRIGGS & STRATTON




PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.




135400

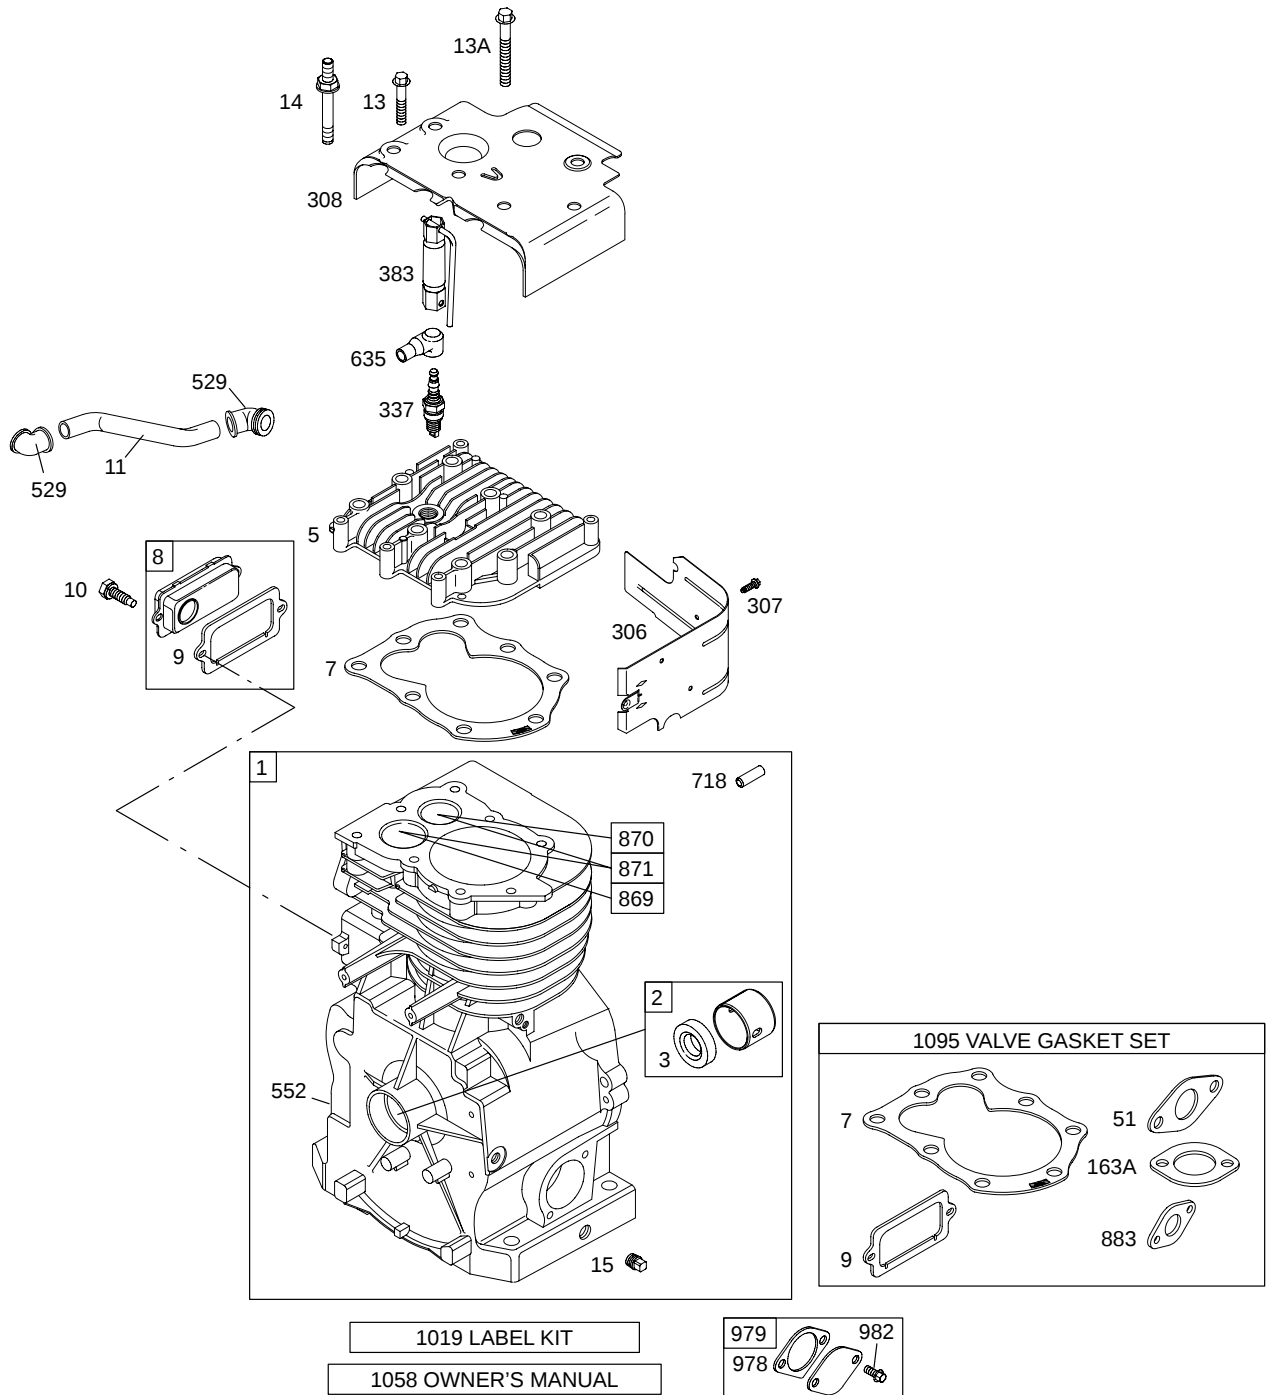





Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5793-2 Assemblies include all parts shown in frames. 4C-1/2002

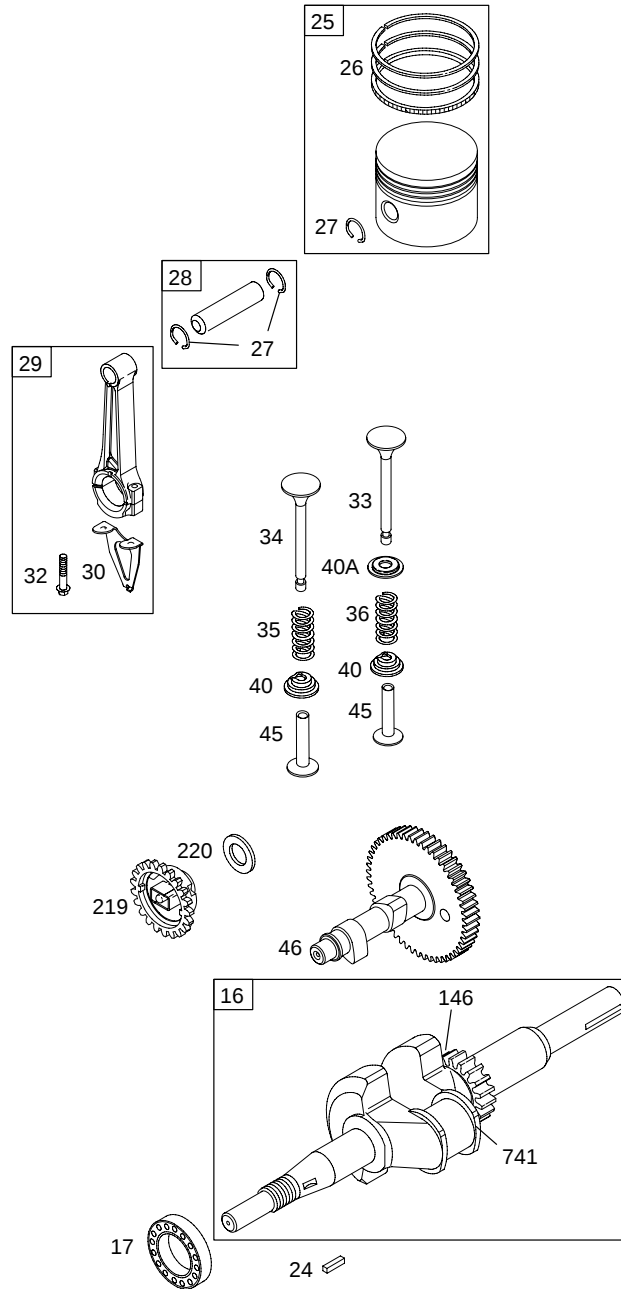



135400

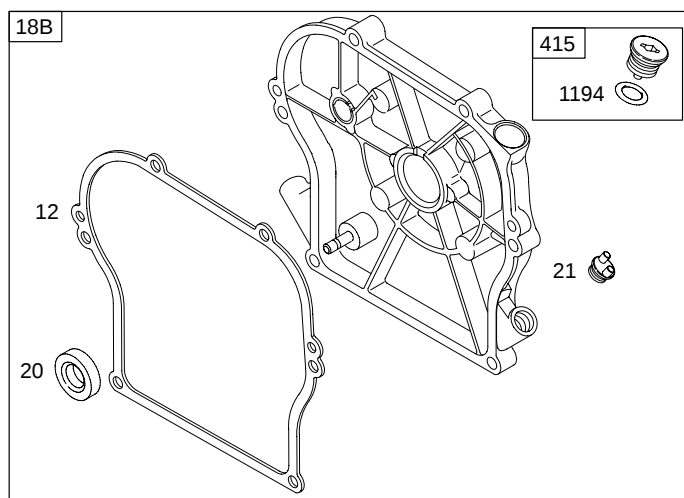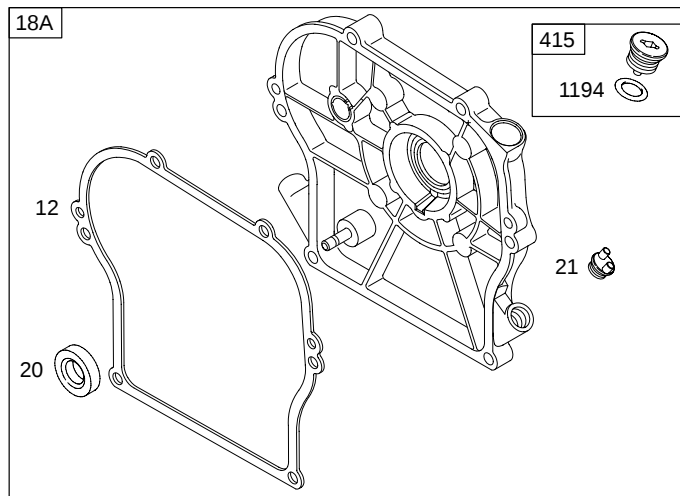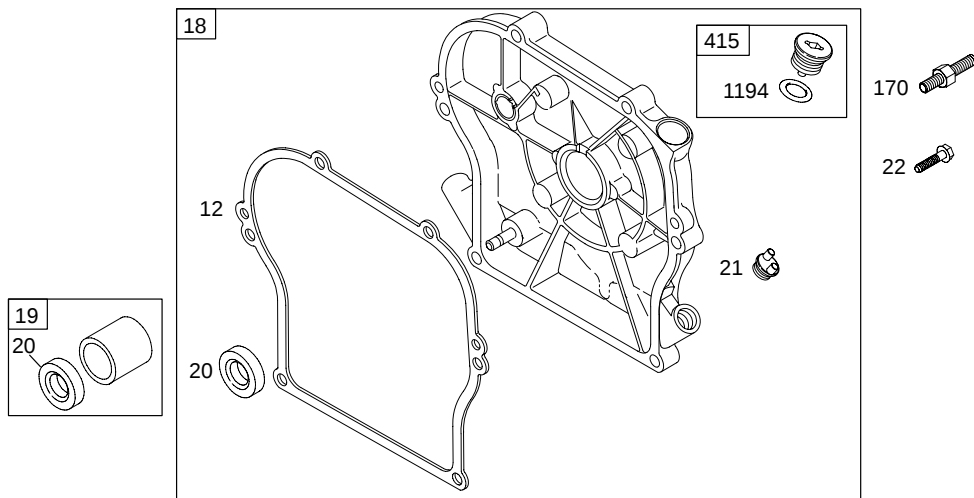


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5793-4 Assemblies include all parts shown in frames. 4C-1/2002

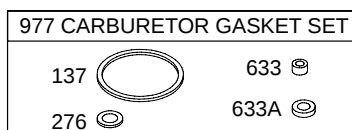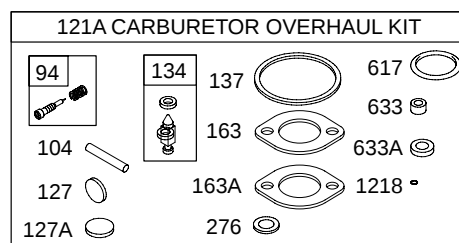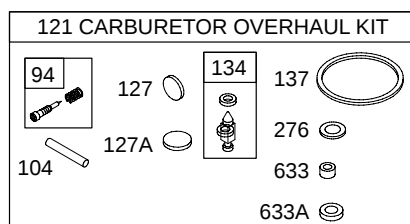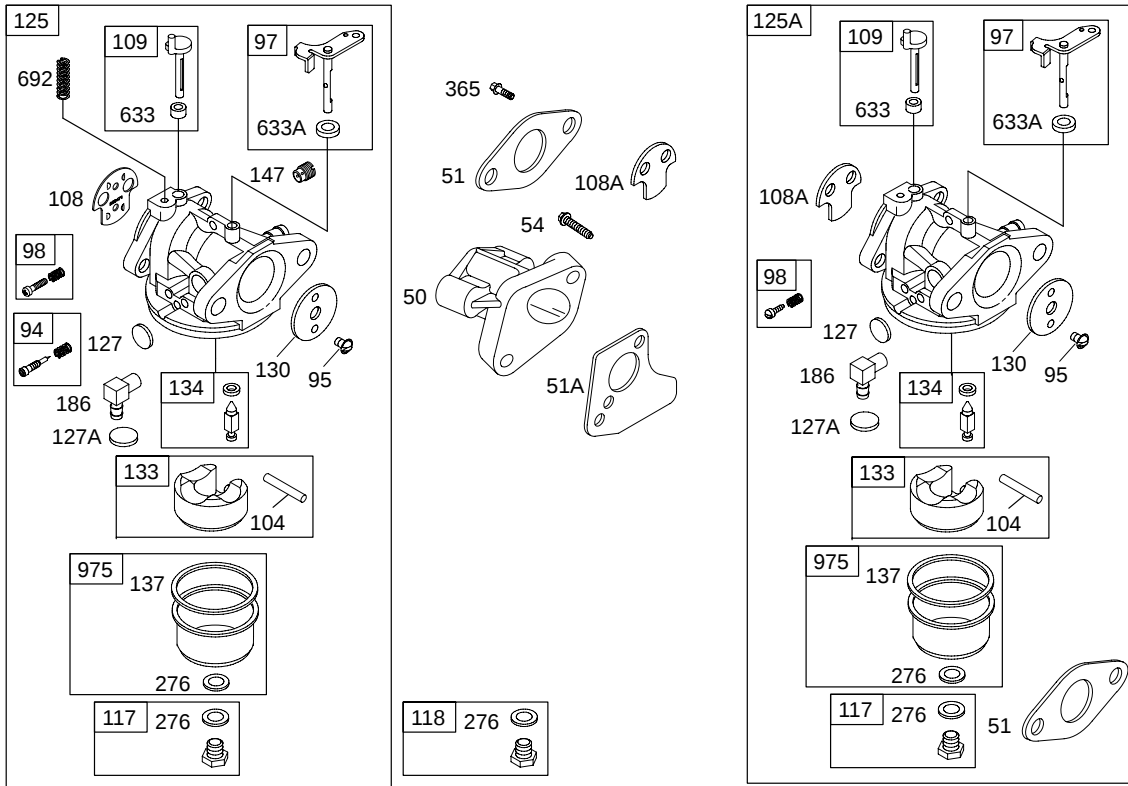

135400

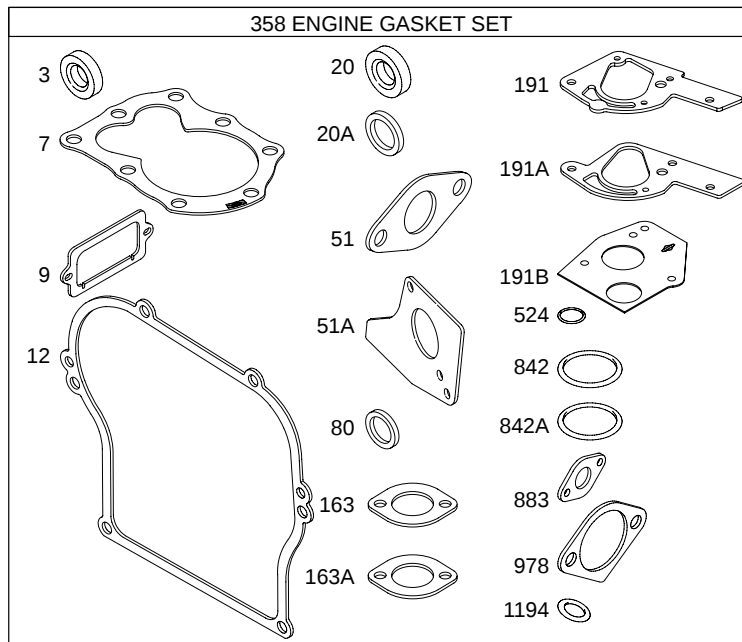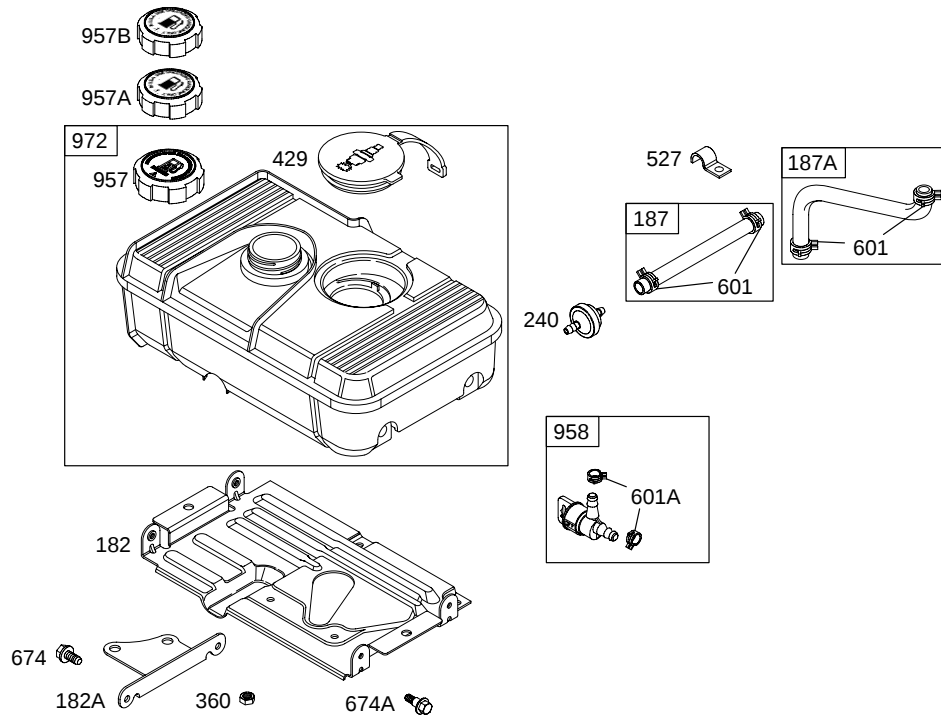


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5793-6 Assemblies include all parts shown in frames. 4C-1/2002

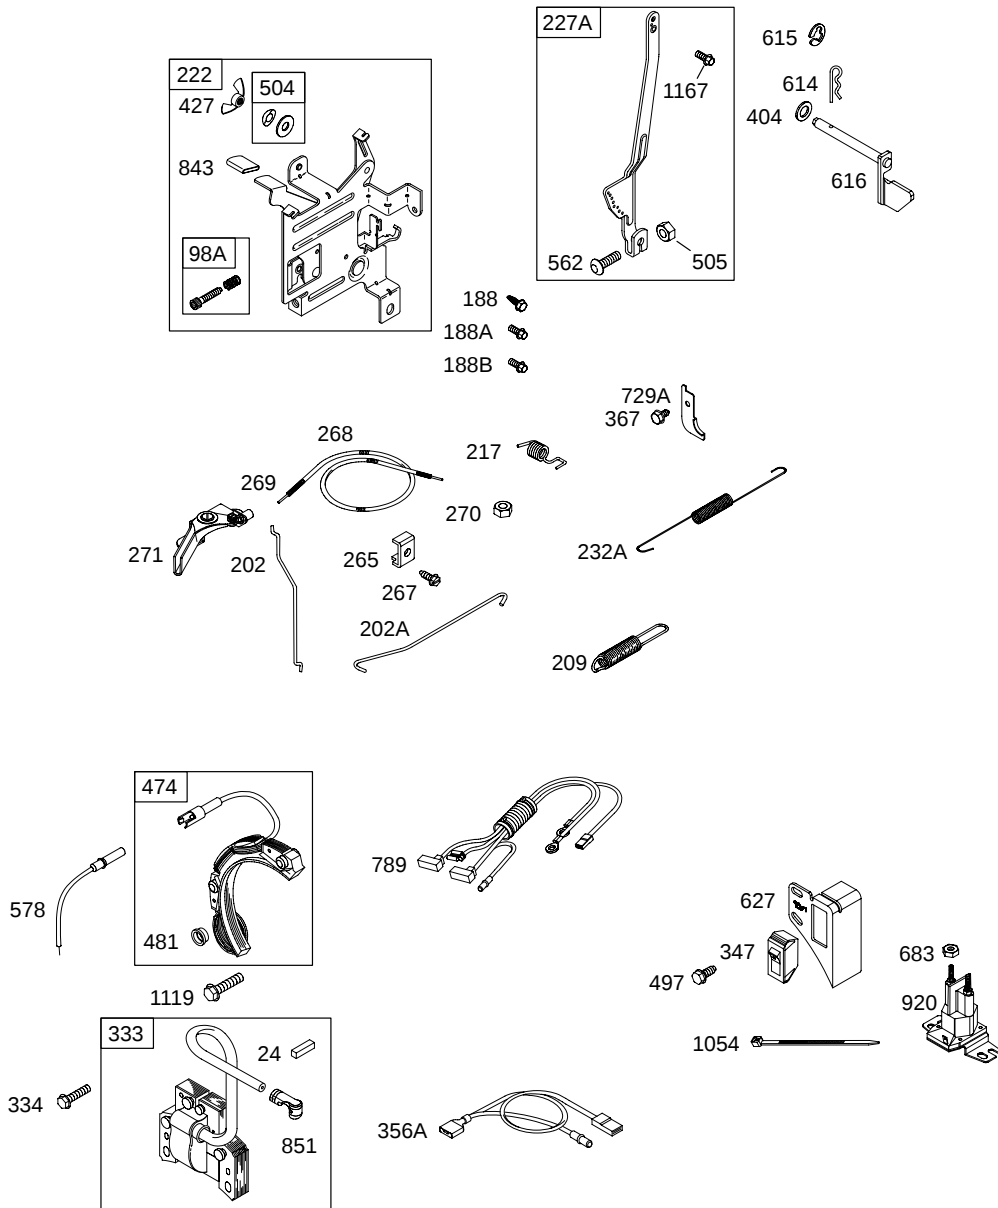


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5793-7 Assemblies include all parts shown in frames. 4C-1/2002

135400

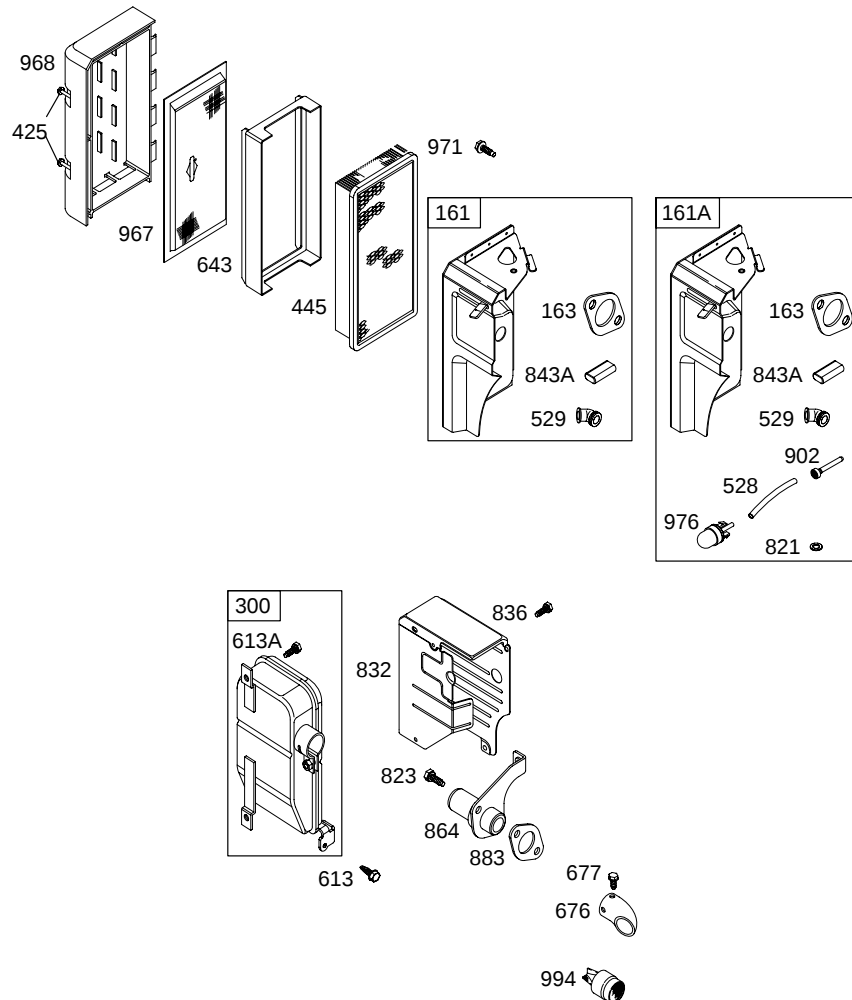


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5793-8 Assemblies include all parts shown in frames. 4C-1/2002

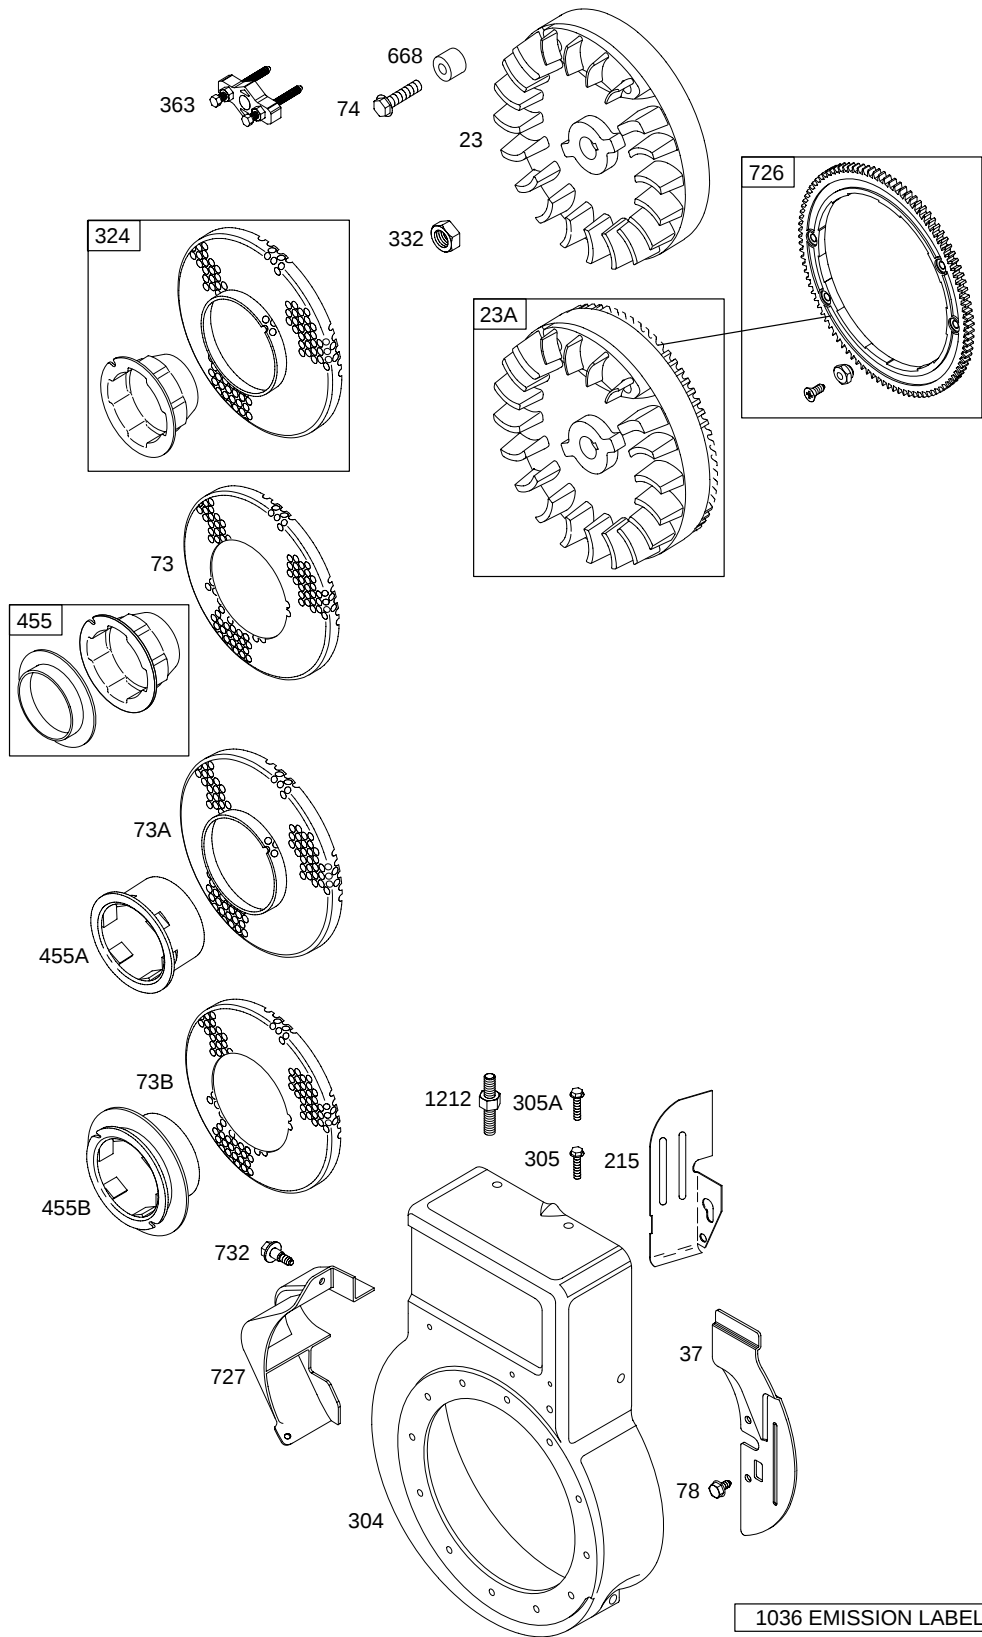


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5793-9 Assemblies include all parts shown in frames. 4C-1/2002

135400

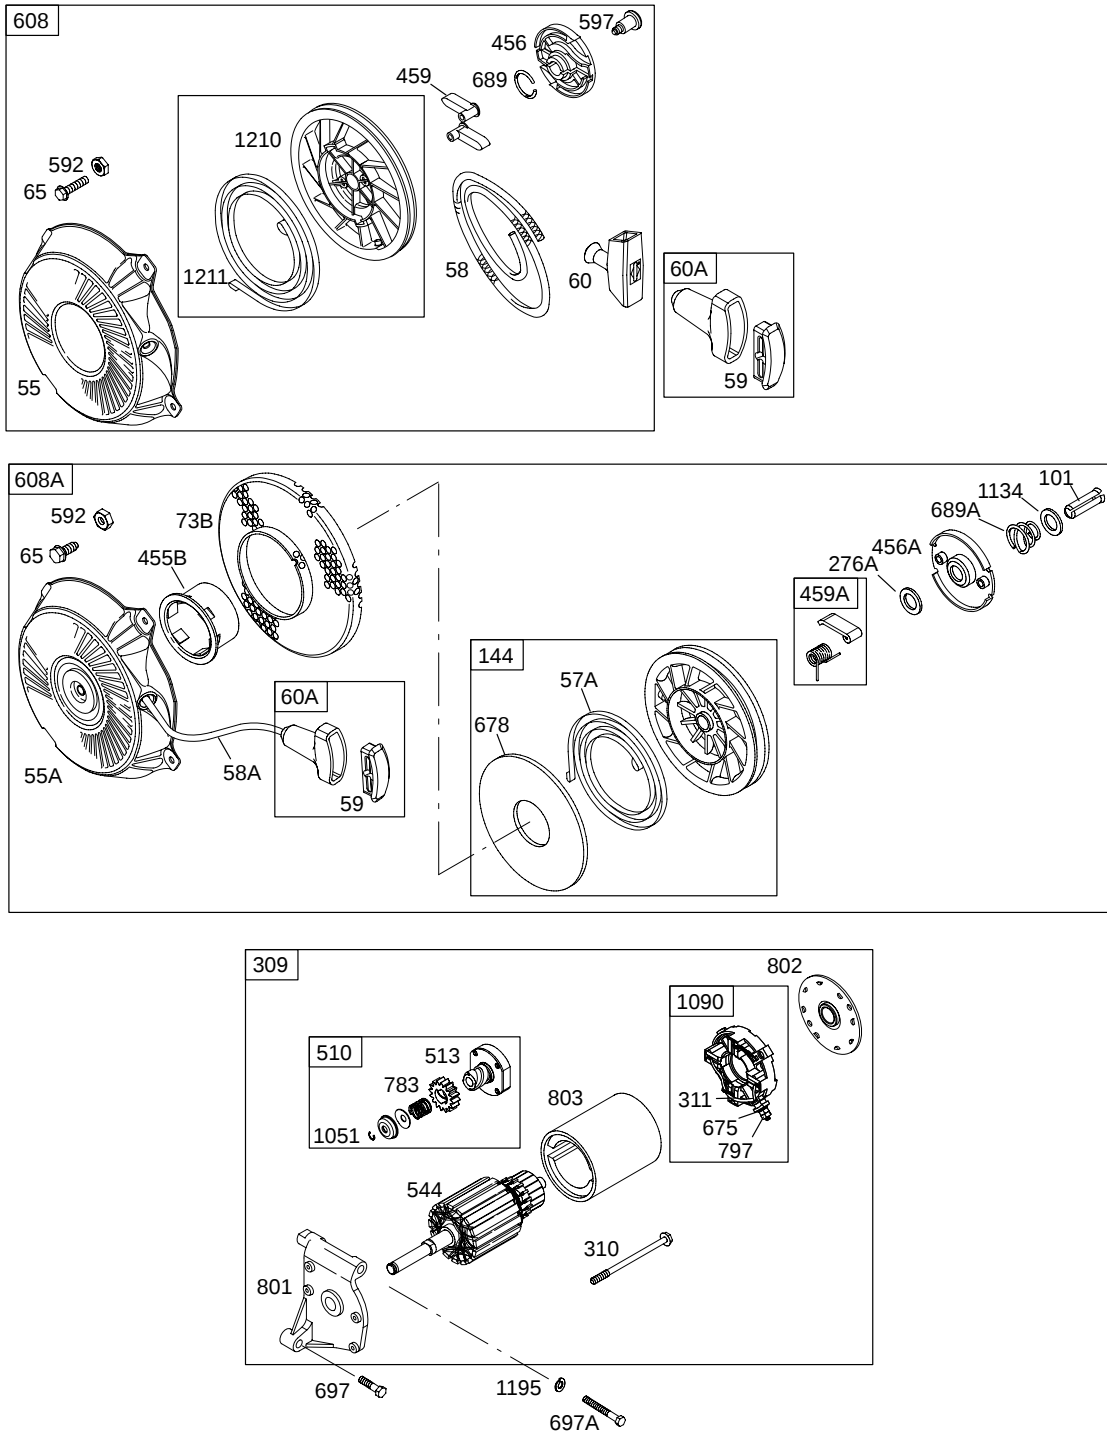

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5793-10 Assemblies include all parts shown in frames. **4C-1/2002**

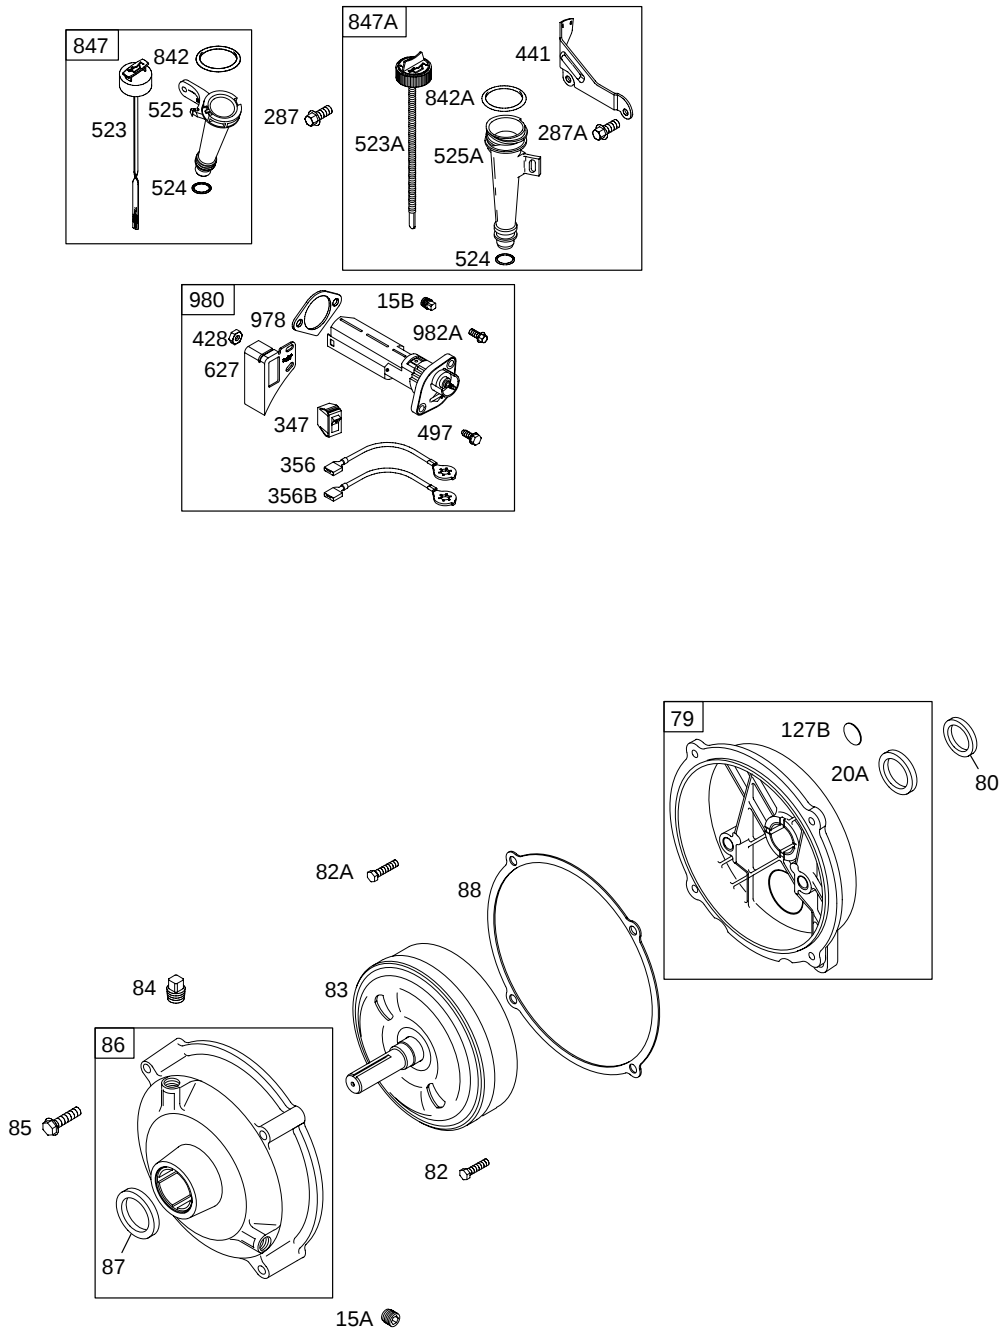

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5793-11 Assemblies include all parts shown in frames. 4C-1/2002

135400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	495133	Cylinder Assembly	16	495645	Crankshaft	27	691588	Lock-Piston Pin
2	399269	Kit-Bushing/Seal (Magneto Side)			----- Note -----	28	691239	Pin-Piston (Standard)
3	★299819	Seal-Oil (Magneto Side)		495643	Crankshaft Used On Type No(s). 0023, 0136.			----- Note -----
5	692729	Head-Cylinder		495644	Crankshaft Used On Type No(s). 0022.		298908	Pin-Piston (.005" Oversize)
7	Ø★272157	Gasket-Cylinder Head				29	299430	Rod-Connecting (Standard)
8	495774	Breather Assembly	17	692007	Bearing-Ball			----- Note -----
9	Ø★27549	Gasket-Breather	18A	694319	Cover-Crankcase		390459	Rod-Connecting (.020" Undersize)
10	691666	Screw (Breather Assembly)	20	★495307	Seal-Oil (PTO Side)	30	691759	Dipper-Connecting Rod
11	691246	Tube-Breather	21	281658	Cap-Oil Fill	32	691664	Screw (Connecting Rod)
12	★692213	Gasket-Crankcase (.015" Thick, Standard)	22	691129	Screw (Crankcase Cover)	33	211119	Valve-Exhaust
		----- Note -----	23	399673	Flywheel	34	261044	Valve-Intake
	★270125	Gasket-Crankcase (.005" Thick)	24	222698	Key-Flywheel	35	690520	Spring-Valve (Intake)
	★270126	Gasket-Crankcase (.009" Thick)	25	298904	Piston Assembly (Standard)	36	690520	Spring-Valve (Exhaust)
13	691640	Screw (Cylinder Head)			----- Note -----	37	691732	Guard-Flywheel
13A	691659	Screw (Cylinder Head)		393820	Piston Assembly (.010" Oversize)	40	692194	Retainer-Valve
15	691686	Plug-Oil Drain (Square Head) (1/4" Diameter)		393821	Piston Assembly (.020" Oversize)	40A	691760	Retainer-Valve
		----- Note -----		393822	Piston Assembly (.030" Oversize)	45	690509	Tappet-Valve
	691663	Plug-Oil Drain (Square Head) (1/4" Diameter) (Magnetic)	26	399067	Ring Set (Standard)	46	691164	Camshaft
15A	691682	Plug-Oil Drain (Hex Socket) (1/4" Diameter)			----- Note -----			
				399014	Ring Set (.010" Oversize)			
				399015	Ring Set (.020" Oversize)			
				399016	Ring Set (.030" Oversize)			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

Ø Included in Valve Gasket Set-Ref. No 1095.

◆ Included in Carburetor Gasket Set-Ref. No 977.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**5793-12**

Assemblies include all parts shown in frames.

4C-1/2002

135400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
50	691922	Manifold-Intake	121A	498260	Kit-Carburetor Overhaul	222	691383	Bracket-Control
51	Ø★692283	Gasket-Intake				227A	690842	Lever-Governor Control
51A	★273113	Gasket-Intake	125	692724	Carburetor	232A	691784	Spring-Governor Link
54	691689	Screw (Intake Manifold)	127	●691739	Plug-Welch (5/16" Diameter)	240	298090	Filter-Fuel
55	691422	Housing-Rewind Starter	127A	●694468	Plug-Welch (3/8" Diameter)	268	691072	Casing-Control Wire (48" Long)
58	691921	Rope-Starter (Cut To Required Length)	130	691181	Valve-Throttle			(Cut To Required Length)
60	691915	Grip-Starter Rope	133	398187	Float-Carburetor			----- Note -----
65	690837	Screw (Rewind Starter) (Used After Code Date 95010800).	134	●398188	Kit-Needle/Seat			691025 Casing Control Wire (72" Long)
73		Screen-Rotating (For Replacement Rotating Screen, See Ref 324 for Service)	137	◆693981	Gasket-Float Bowl			(Cut to Required Length)
78	691660	Screw (Flywheel Guard)	146	690979	Key-Timing	269	691589	Wire-Control (54" Long)
94	●493765	Kit-Idle Mixture	161A	691384	Base-Air Cleaner			(Cut to Required Length)
95	691636	Screw (Throttle Valve)	163	Ø★272948	Gasket-Air Cleaner			----- Note -----
97	493556	Shaft-Throttle	182	690469	Bracket-Fuel Tank			691026 Wire-Control (78" Long)
98	398185	Kit-Idle Speed (Carburetor Mounted)	182A	692658	Bracket-Fuel Tank			(Cut to Required Length)
98A	493280	Kit-Idle Speed (Bracket Mounted)	186	692317	Connector-Hose	270	691027	Nut (Control Wire Casing)
104	●691242	Pin-Float Hinge	187	691050	Line-Fuel (Cut To Required Length)	271	691028	Lever-Control
108	691182	Valve-Choke	187A	495218	Line-Fuel (Molded)	276	◆271716	Washer-Sealing
109	498593	Shaft-Choke	188	690297	Screw (Control Bracket)	287	94807	Screw (Dipstick Tube)
117	692730	Jet-Main (Standard)	188A	691693	Screw (Control Bracket)	287A	691693	Screw (Dipstick Tube)
118	493869	Jet-Main (High Altitude)	202	691282	Link-Mechanical Governor			
			209	691816	Spring-Governor			
			215	691745	Guide-Air			
			219	494845	Gear-Governor			
			220	691724	Washer (Governor Gear)			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

Ø Included in Valve Gasket Set-Ref. No 1095.

◆ Included in Carburetor Gasket Set-Ref. No 977.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**5793-13**

Assemblies include all parts shown in frames.

4C-1/2002

135400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
300	692006	Muffler	358	495661	Gasket Set—Engine	552	690508	Bushing—Governor
304	495759	Housing—Blower (Black)	360	690958	Nut (Fuel Tank Bracket)			Crank
305	691108	Screw (Blower Housing)	363	19069	Flywheel Puller	562	691119	Bolt (Governor Control Lever)
306	694514	Shield—Cylinder	365	691688	Screw (Carburetor)	592	690800	Nut (Rewind Starter)
307	691660	Screw (Cylinder Shield)	383	89838	Wrench—Spark Plug	597	691696	Screw (Pawl Friction Plate)
308	690473	Cover—Cylinder Head	404	691691	Washer (Governor Crank)	601	95162	Clamp—Hose (Green)
324	695161	Screen/Cup Assembly (Used After Code Date 00022100).	415	691363	Plug (For High Oil Fill Hole)	601A	691038	Clamp—Hose (Black)
332	690662	Nut (Flywheel)	425	690670	Screw (Air Cleaner Cover)	608	497830	Starter—Rewind
333	397358	Armature—Magneto	427	690355	Nut (Control Bracket)	613	690810	Screw (Muffler) (39/64" Long)
334	691621	Screw (Magneto Armature)	428	691612	Nut (OIL GARD® Kit)	613A	691693	Screw (Muffler) (23/64" Long)
337	802592	Plug—Spark (Resistor)	429	692354	Cover—Sparkplug	614	691620	Pin—Cotter
347	691995	Switch—Rocker	441	690448	Bracket—Oil Fill	616	692016	Crank—Governor
		----- Note -----	445	494511	Filter—Air Cleaner Cartridge	627	690474	Bracket—Stop Switch
		495098 Switch—Rocker Used On Type No(s). 0136.	455		Cup—Flywheel (For Replacement Flywheel Cup, See Ref 324 for Service)	633	◆◆693867	Seal—Choke/Throttle Shaft
356	690817	Wire—Stop (1 Wire, 6—1/4" Long)(Push—On Insulated Female Blade Terminal, And Internal Tooth Lockwasher Ring Terminal)	456	692299	Plate—Pawl Friction	633A	◆◆691321	Seal—Choke/Throttle Shaft
			459	281505	Pawl—Ratchet	635	66538	Boot—Spark Plug
			497	690661	Screw (Stop Switch Bracket)	643	691908	Retainer—Air Filter
			504	495659	Washer Set—Friction	674	690810	Screw (Fuel Tank Bracket)
356A	690818	Wire—Stop (2 Wires, 5—5/8" And 4—1/4" Long)(Push—On Insulated Female Blade Terminal, Snap Connect Insulated Pin Socket, And Snap Connect Insulated Female Blade Terminal)	505	691251	Nut (Governor Control Lever)	674A	692199	Screw (Fuel Tank)
			523	495264	Dipstick (Used After Code Date 99031400).	689	691855	Spring—Friction
			523A	691388	Dipstick (Used Before Code Date 99031500).	692	690572	Spring—Detent
			524	★691876	Seal—Dipstick Tube	718	690959	Pin—Locking
356B	692363	Wire—Stop (1 Wire, 9—1/2" Long)(Push—On Insulated Female Blade Terminal, And Internal Tooth Lockwasher Ring Terminal)	525	694379	Tube—Dipstick (Used After Code Date 99031400).	741	691847	Gear—Timing
			525A	694531	Tube—Dipstick (Used Before Code Date 99031500).	789	693397	Harness—Wiring
			527	690423	Clamp—Tube	821	692661	Washer
			528	692792	Hose—Primer	823	691665	Screw (Muffler Adapter)
			529	692187	Grommet	832	690811	Guard—Muffler
						836	691693	Screw (Muffler Guard)

★ Included in Engine Gasket Set—Ref. No.358.

● Included in Carburetor Overhaul Kit—Ref. No. 121.

Ø Included in Valve Gasket Set—Ref. No 1095.

◆ Included in Carburetor Gasket Set—Ref. No 977.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5793-14

Assemblies include all parts shown in frames.

4C-1/2002

135400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
842	★691031	Seal–O Ring (Dipstick Tube) (Used After Code Date 99031400).	871	262001	Bushing–Valve Guide (Exhaust Valve) ----- Note ----- 63709 Bushing–Valve Guide (Intake Valve)	980	496605	Kit–Oil Gard®
842A	★691870	Seal–O Ring (Dipstick Tube) (Used Before Code Date 99031500).	883	Ø★692237	Gasket–Exhaust	982	690351	Screw (OIL GARD® Cover)
843	691322	Sleeve–Lever	902	692741	Filter–Primer	982A	690350	Screw (OIL GARD® Kit)
843A	691895	Sleeve Lever	957A	692665	Cap–Fuel Tank (Kerosene Fuel Tank)	1019	692733	Kit–Label
847	694381	Dipstick/Tube Assembly (Used After Code Date 99031400).	957B	692662	Cap–Fuel Tank (Auxiliary Petrol Fuel Tank)	1054	280275	Tie–Cable
847A	691379	Dipstick/Tube Assembly (Used Before Code Date 99031500).	958	494769	Valve–Fuel Shut-Off	1058	274785	Owner's Manual
851	493880	Terminal–Spark Plug	967	492889	Filter–Pre Cleaner	1095	498531	Gasket Set–Valve
864	690812	Adapter–Muffler	968	691327	Cover–Air Cleaner	1167	691693	Screw (Governor Control Lever)
869	691705	Seat–Valve (Intake)	971	690370	Screw (Air Cleaner Base)	1194	691876	Seal–O Ring (Plug)
870	691856	Seat–Valve (Exhaust) (Cobalite®)	972	692735	Tank–Fuel	1210	498144	Pulley/Spring Assembly (Pulley)
			975	493640	Bowl–Float	1211	498144	Pulley/Spring Assembly (Spring)
			976	692666	Primer–Carburetor	1212	690368	Stud (Blower Housing) Used On Type No(s). 0022, 0024, 0120, 0134.
			977	498261	Gasket Set–Carburetor			
			978	★273326	Gasket–Oil Gard®			
			979	691382	Cover–Oil Gard®			

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

Ø Included in Valve Gasket Set–Ref. No 1095.

◆ Included in Carburetor Gasket Set–Ref. No 977.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**5793–15**

Assemblies include all parts shown in frames.

4C–1/2002