



Illustrated Parts List

Model Series

215900

TYPE NUMBERS
0015 THROUGH 0133.

TABLE OF CONTENTS


Air Cleaner	6
Alternator	9
Blower Housing	6
Camshaft	3
Carburetor	5
Controls	8
Crankshaft	3
Cylinder	2
Cylinder Head	4
Electric Starter	7
Engine Sump	2
Exhaust System	6
Flywheel	7
Fuel Supply	8
Gasket Set - Engine	4
Gasket Set - Valve	4
Ignition	8
Kit - Carburetor Overhaul	5
Lubrication	3
Piston, Rings, Connecting Rod	3
Rewind Starter	7
Valves	4



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.




215900

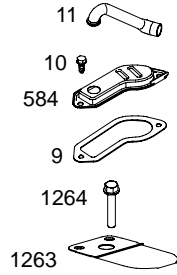

1019 LABEL KIT





1058 OWNER'S MANUAL

1330 REPAIR MANUAL

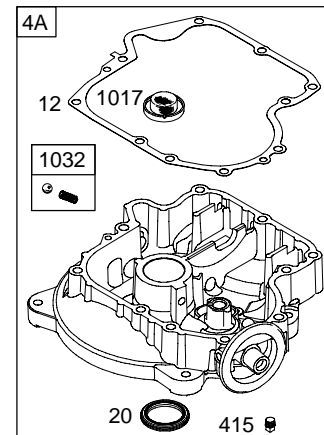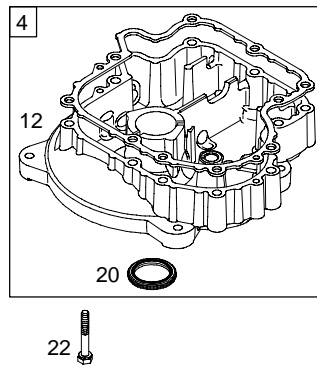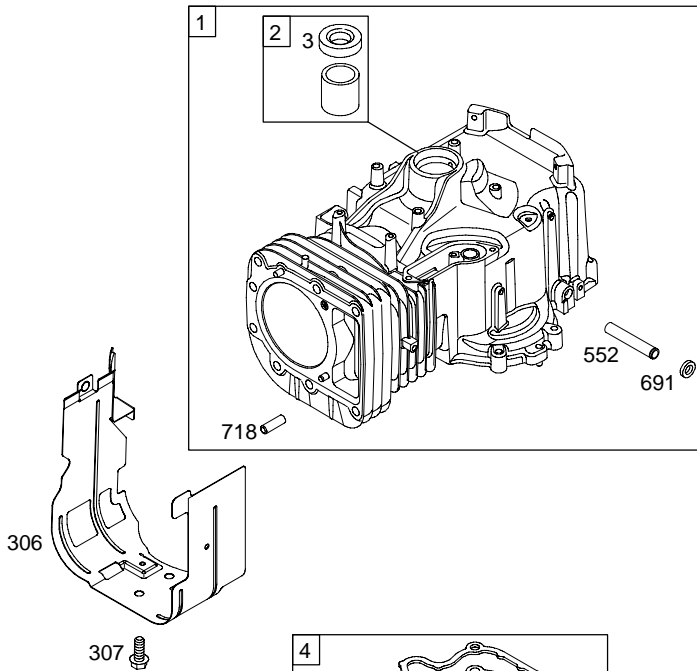




15

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5705-2 Assemblies include all parts shown in frames. 03/11/2005

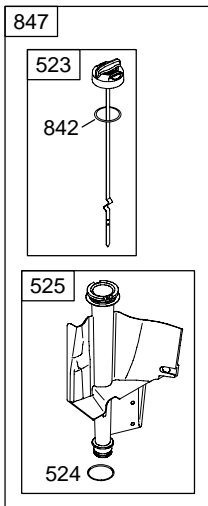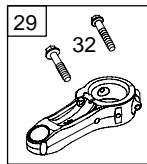

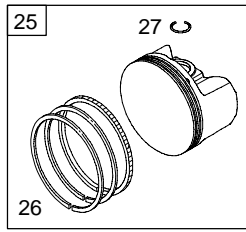


24 







357 

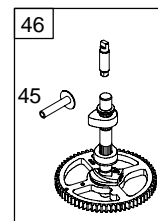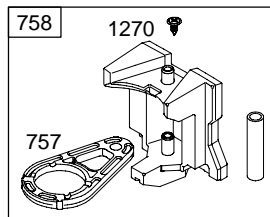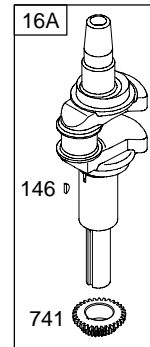

215900

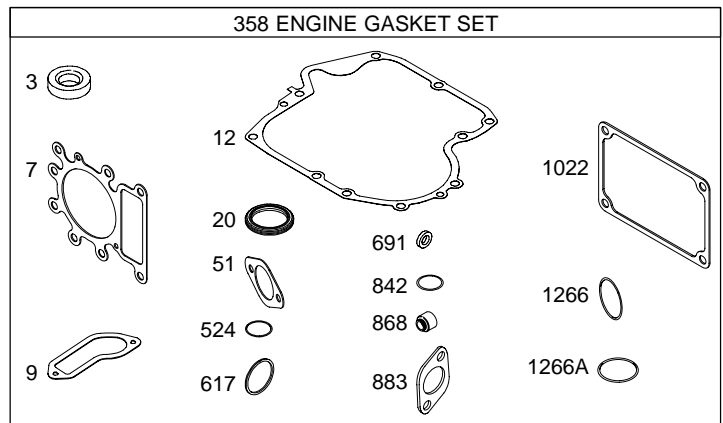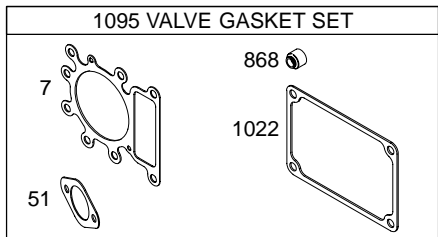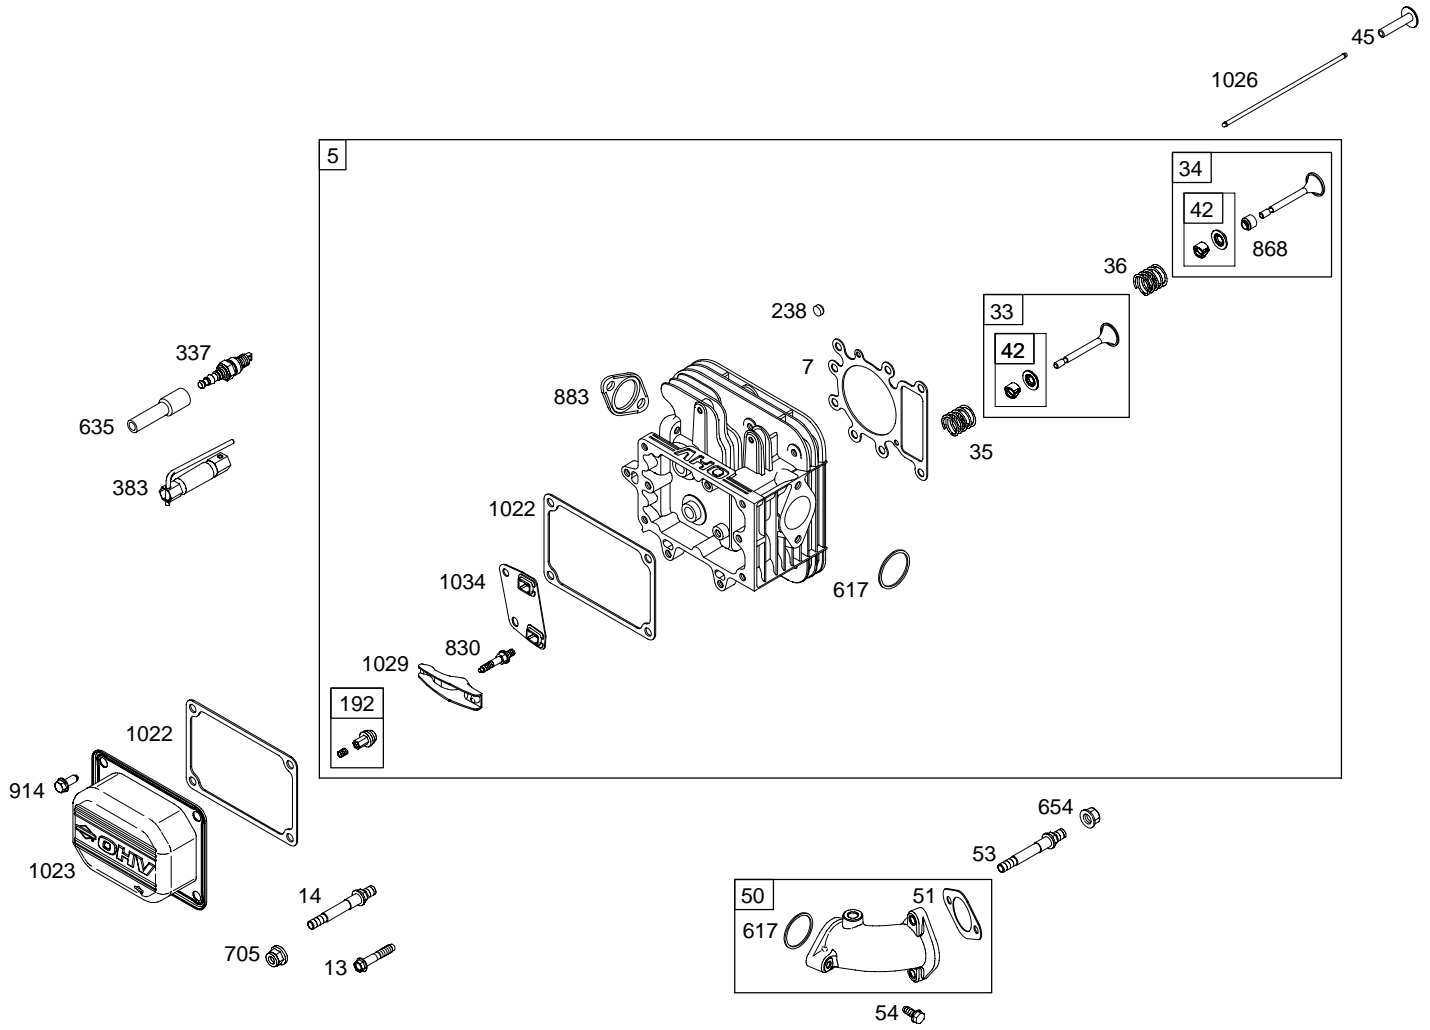








Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5705-4 Assemblies include all parts shown in frames. **03/11/2005**

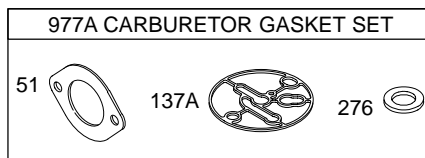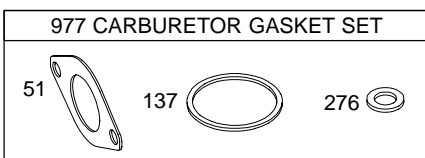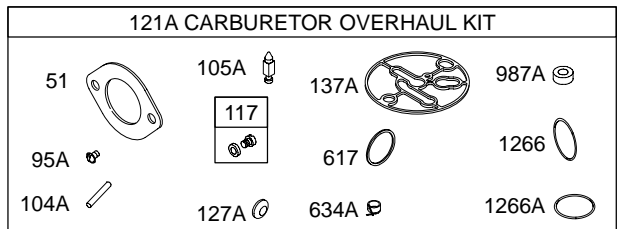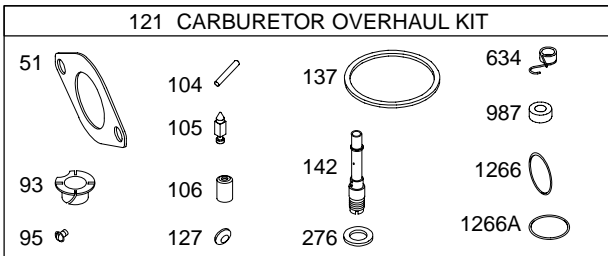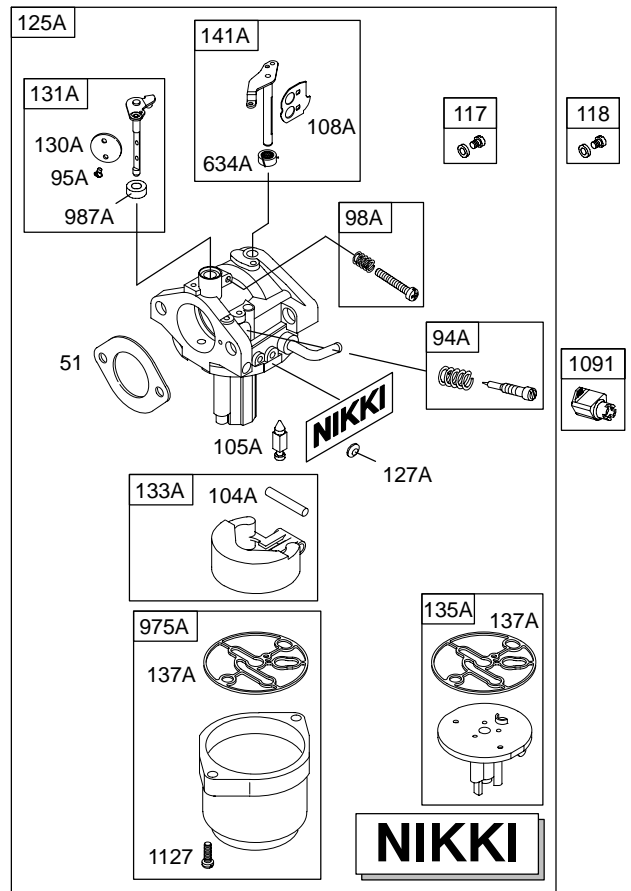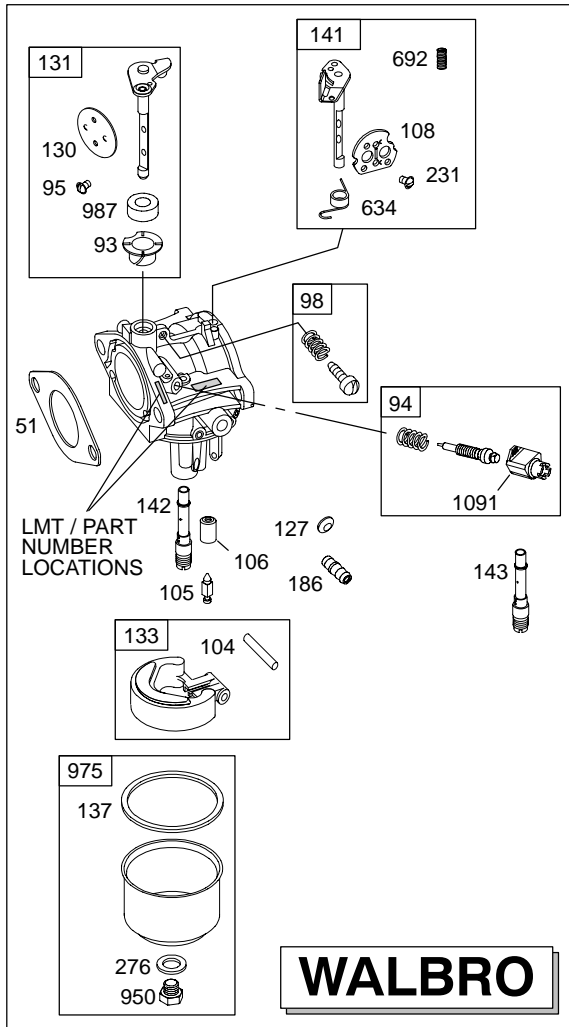





Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5705-5 Assemblies include all parts shown in frames. 03/11/2005

215900

1036 EMISSION LABEL

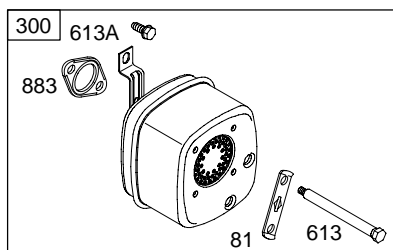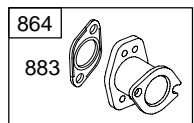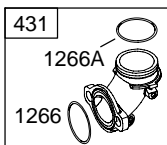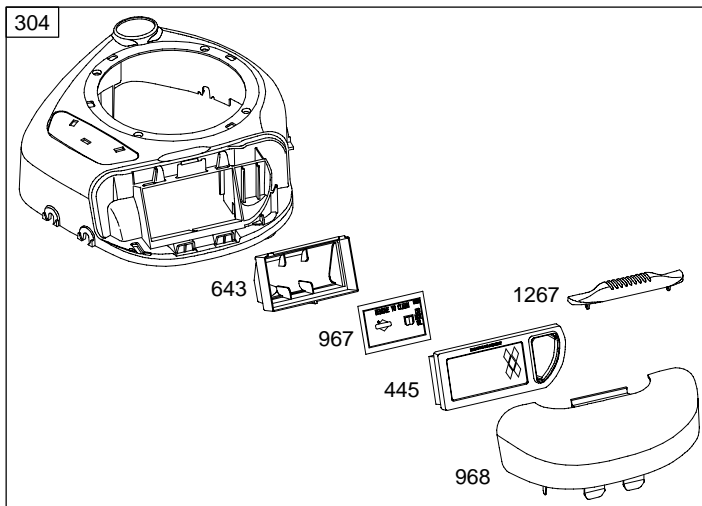


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5705-6 Assemblies include all parts shown in frames. 03/11/2005

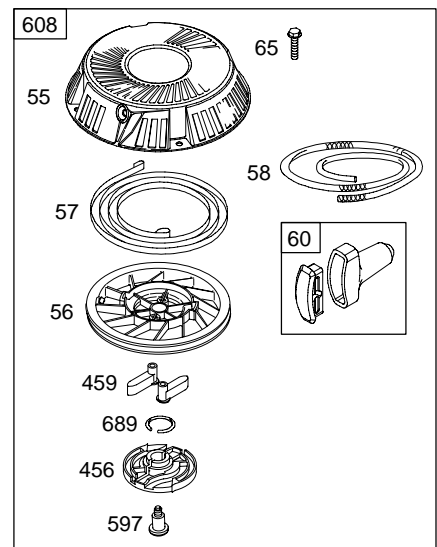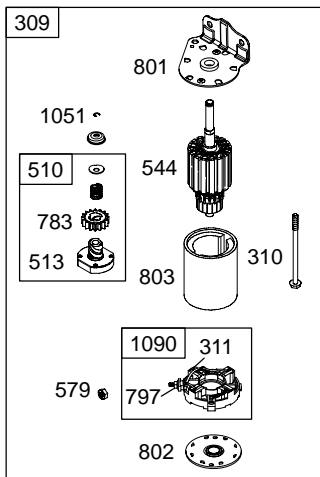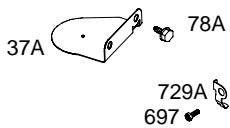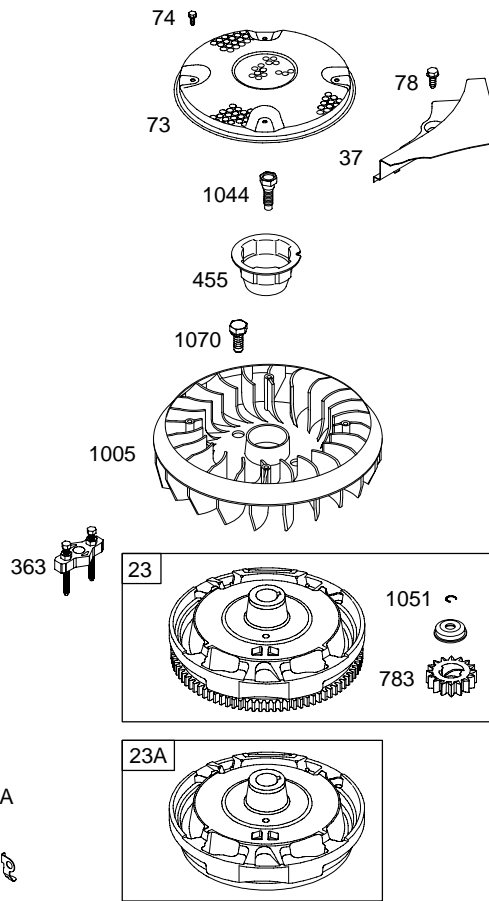

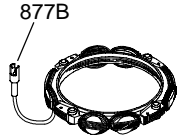


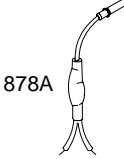




5705-7 *Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.* Assemblies include all parts shown in frames. 03/11/2005


215900

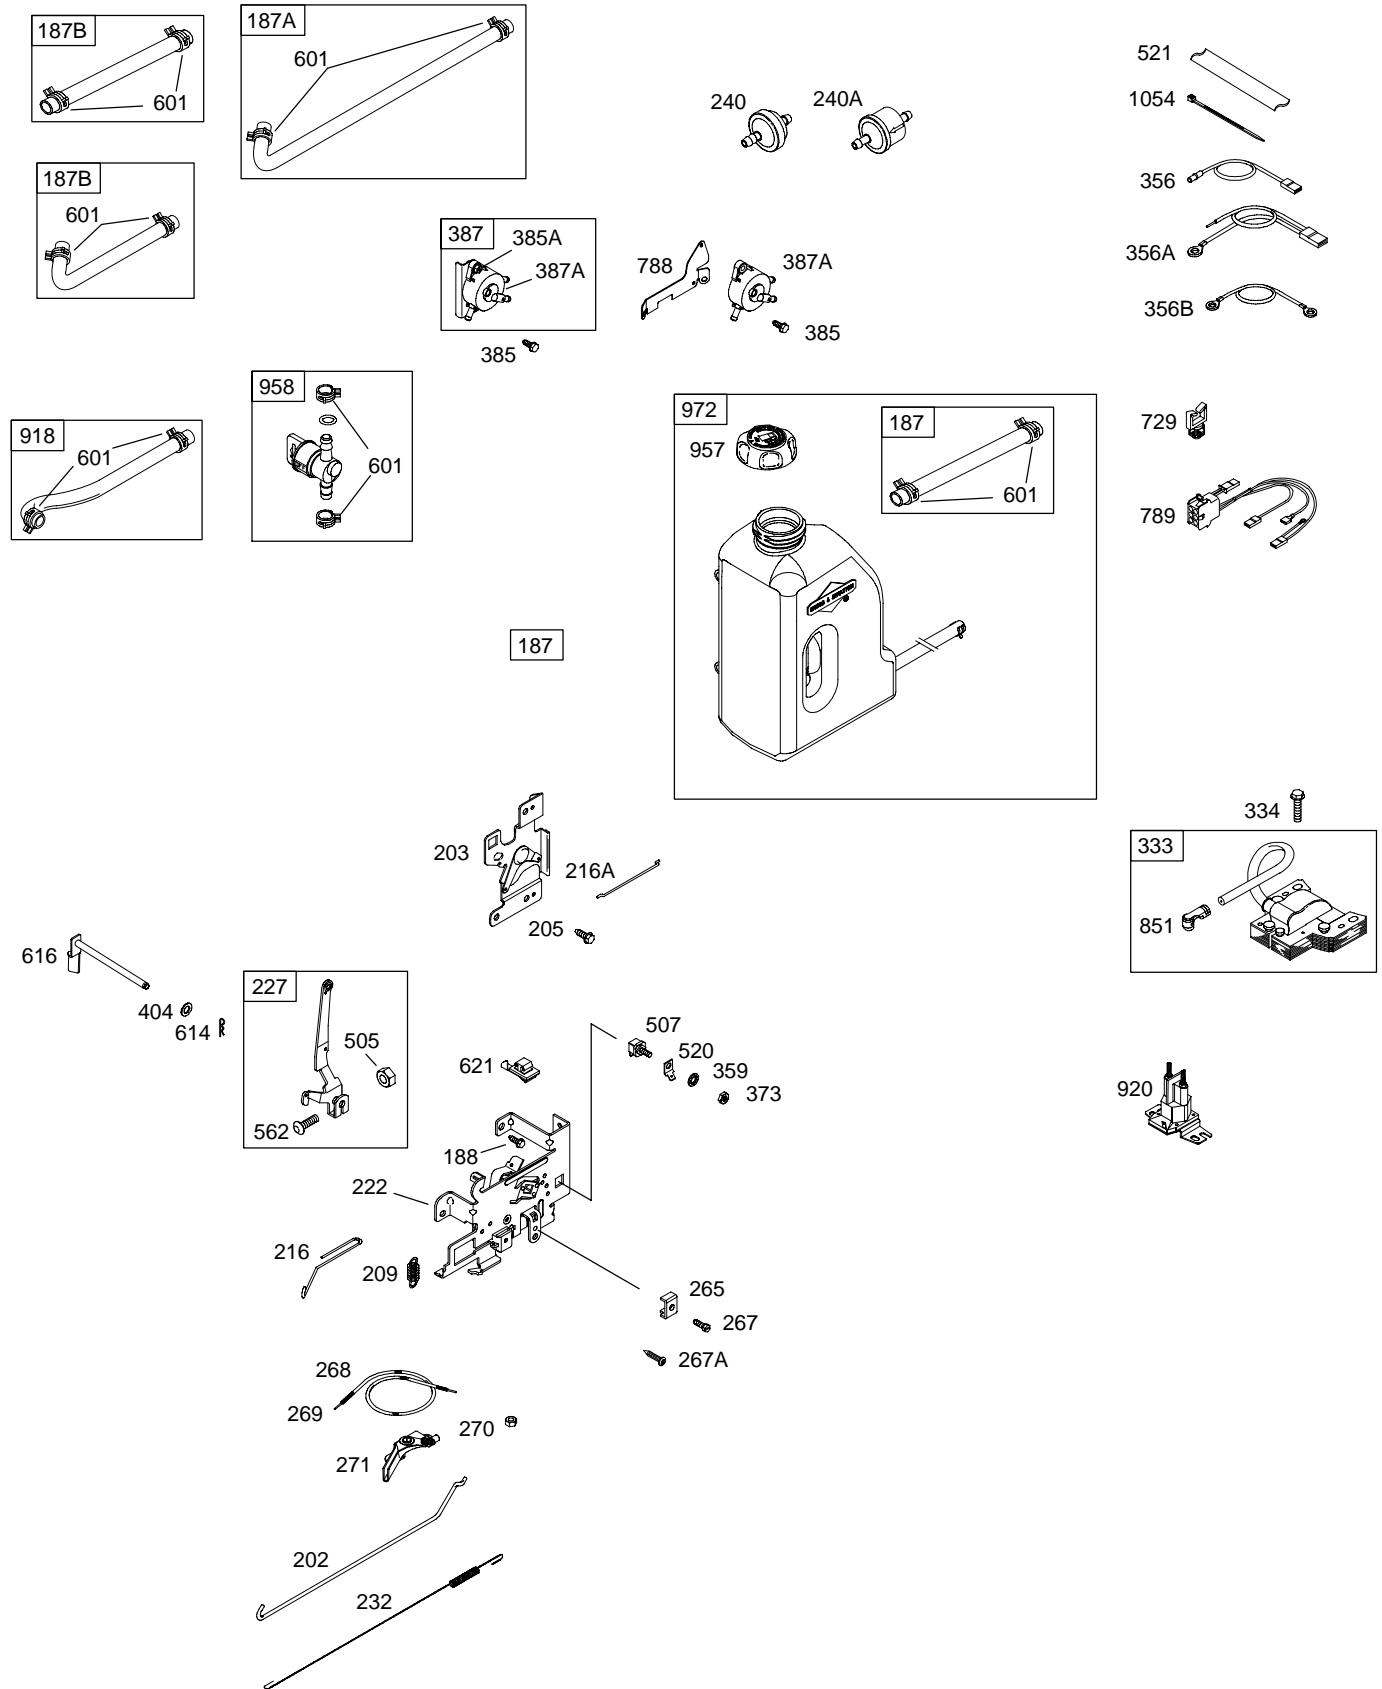

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5705-8 Assemblies include all parts shown in frames. 03/11/2005

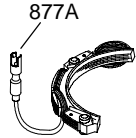DC ONLY	DUAL CIRCUIT	TRI CIRCUIT
474A 	474B 	474C 
		



NOTE: All stators use a No. 1119 mounting screw. 

NOTE: The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information.

215900

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	697377	Cylinder Assembly	24	222698	Key-Flywheel	42	499586	Keeper-Valve
2	399265	Kit-Bushing/Seal (Magneto Side)	25	698371	Piston Assembly (Standard)	43	691968	Slinger-Governor/Oil
3	★391086	Seal-Oil (Magneto Side)			----- Note -----	45	690564	Tappet-Valve
4	697106	Sump-Engine			698372 Piston Assembly (.010" Oversize)	46	790400	Camshaft
4A	697188	Sump-Engine Used on Type No(s). 0112.			698373 Piston Assembly (.020" Oversize)	50	697361	Manifold-Intake
5	697396	Head-Cylinder			698374 Piston Assembly (.030" Oversize)	51★△◆692137	Gasket-Intake	
7	★△273280	Gasket-Cylinder Head			26 698375 Ring Set (Standard)	53	690227	Stud (Carburetor)
9	★697109	Gasket-Breather			----- Note -----	54	691148	Screw (Intake Manifold)
10	697157	Screw (Breather Assembly)			698376 Ring Set (.010" Oversize)	55	695130	Housing-Rewind Starter
11	697113	Tube-Breather			698377 Ring Set (.020" Oversize)	56	695129	Pulley-Starter
12	★697110	Gasket-Crankcase (.015" Thick)(Standard)			698378 Ring Set (.030" Oversize)	57	695131	Spring-Rewind Starter
13	690360	Screw (Cylinder Head)			27 698469 Lock-Piston Pin (Pink)	58	695132	Rope-Starter
14	790560	Stud (Cylinder Head) Used on Type No(s). 0028, 0112, 0117, 0120, 0123, 0125, 0126, 0129, 0133.			28 697099 Pin-Piston	60	494212	Grip-Starter Rope
15	690946	Plug-Oil Drain (3/8" Standard)			29 697364 Rod-Connecting (Standard)	65	697725	Screw (Rewind Starter)
16A	697390	Crankshaft			----- Note -----	73	697133	Screen-Rotating
20	★690947	Seal-Oil (PTO Side)			697262 Rod-Connecting (.020" Undersize)	74	697897	Screw (Rotating Screen)
22	692125	Screw (Crankcase Cover/Sump)			32 692852 Screw (Connecting Rod)	78	691003	Screw (Flywheel Guard)
23	698281	Flywheel Used on Type No(s). 0025, 0028, 0110, 0114, 0115, 0118, 0119, 0125, 0129, 0133.			33 695760 Valve-Exhaust	78A	690364	Screw (Flywheel Guard)(Electric Start) Used on Type No(s). 0015, 0112, 0113, 0117, 0120.
23A	698283	Flywheel Used on Type No(s). 0015, 0126. ----- Note ----- 790920 Flywheel (Painted Flywheel) Used on Type No(s). 0112, 0113, 0117, 0120, 0123.			34 695761 Valve-Intake	81	691178	Lock-Muffler Screw
					35 691279 Spring-Valve (Intake)	93	◆690602	Bushing-Throttle Shaft
					36 691279 Spring-Valve (Exhaust)	94	498030	Kit-Idle Mixture (Walbro)
					37 697352 Guard-Flywheel	94A	695425	Kit-Idle Mixture (Nikki)
					37A 697626 Guard-Flywheel (Electric Start) Used on Type No(s). 0015, 0112, 0113, 0117, 0126.	95	◆691636	Screw (Throttle Valve)(Walbro)
						95A	◆690718	Screw (Throttle Valve)(Nikki)
						98	495800	Kit-Idle Speed (Walbro)
						98A	695408	Kit-Idle Speed (Nikki)

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121 or 121A.

◆ Included in Carburetor Gasket Set-Ref. No. 977 or 977A.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

215900

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
104	●690525	Pin-Float Hinge (Walbro)	131	790901	Kit-Throttle Shaft (Walbro)	187B	699331	Line-Fuel (Formed)(10-1/4 Inches Long)(Cut to Required Length)
104A	●694918	Pin-Float Hinge (Nikki)			Used on Type No(s). 0113, 0114.	188	691693	Screw (Control Bracket)
105	●231855	Valve-Float Needle (Walbro)	131A	698776	Kit-Throttle Shaft (Nikki)	192	691986	Adjuster-Rocker Arm
105A	●696136	Valve-Float Needle (Nikki)	133	494381	Float-Carburetor (Walbro)	202	691841	Link-Mechanical Governor
106	●691780	Seat-Inlet (Pump Feed) Used on Type No(s). 0117, 0123.	133A	694914	Float-Carburetor (Nikki)	203	691381	Crank-Bell Used on Type No(s). 0028, 0120.
		----- Note -----	135A	698780	Tube-Fuel Transfer (Nikki) Used on Type No(s). 0113, 0114.	205	691693	Screw (Bell Crank)
		●690577 Seat-Inlet (Gravity Feed)			----- Note -----	209	692208	Spring-Governor Used on Type No(s). 0110, 0117.
108	691227	Valve-Choke (Walbro)			790030 Tube-Fuel Transfer (Nikki)			----- Note -----
108A	698773	Valve-Choke (Nikki)	137	●♦281165	Gasket-Float Bowl (Walbro)			260902 Spring-Governor Used on Type No(s). 0114, 0115, 0118, 0119.
117	●699897	Jet-Main (Standard)(Nikki)	137A	●♦698781	Gasket-Float Bowl (Nikki)			691798 Spring-Governor Used on Type No(s). 0015, 0025, 0028, 0112, 0113, 0120, 0125, 0126, 0129, 0133.
118	699898	Jet-Main (High Altitude)(Nikki)	141	790902	Kit-Choke Shaft (Walbro)			690480 Spring-Governor Used on Type No(s). 0123.
121	790031	Kit-Carburetor Overhaul (Walbro)	141A	698778	Kit-Choke Shaft (Nikki)	216	691840	Link-Choke
121A	698787	Kit-Carburetor Overhaul (Nikki)	142	790025	Nozzle-Carburetor	216A	691281	Link-Choke Used on Type No(s). 0028, 0120.
125A	791178	Carburetor (Nikki)(Gravity Feed) Used on Type No(s). 0025, 0113, 0114, 0115, 0118, 0119.	142	●790025	Nozzle-Carburetor (Standard)(Walbro)	222	694042	Bracket-Control
		----- Note -----			----- Note -----	227	691374	Lever-Governor Control
		791266 Carburetor (Nikki)(Pump Feed) Used on Type No(s). 0015, 0028, 0110, 0112, 0117, 0120, 0123, 0125, 0126, 0129, 0133.	143	790028	Nozzle-Carburetor (High Altitude)(Walbro)	231	691636	Screw (Choke Valve)
127	●694524	Plug-Welch (Walbro)			----- Note -----	232	691842	Spring-Governor Link
127A	●690727	Plug-Welch (Nikki)			697491 Nozzle-Carburetor (Standard)(Walbro) Used on Type No(s). 0113, 0114.	238	691843	Cap-Valve
130	790024	Valve-Throttle (Walbro)	146	691639	Key-Timing	240	394358	Filter-Fuel (White, 75 Microns) Used on Type No(s). 0025, 0113, 0114, 0115, 0118, 0119.
		----- Note -----	186	698174	Connector-Hose (Straight)			
		690468 Valve-Throttle (Walbro) Used on Type No(s). 0113, 0114.	187	691050	Line-Fuel (15 Inches Long)(Cut To Required Length)			
130A	698774	Valve-Throttle (Nikki)	187A	699332	Line-Fuel (Formed)(21" Long) (Cut To Required Length)			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121 or 121A.

◆ Included in Carburetor Gasket Set-Ref. No. 977 or 977A.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5705-11

Assemblies include all parts shown in frames.

03/11/2005

215900

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
240A	691035	Filter–Fuel (Clear, 40 Microns) Used on Type No(s). 0028, 0112, 0113, 0117, 0120, 0123, 0125, 0126, 0129, 0133.	309	693551	Motor–Starter Used on Type No(s). 0025, 0028, 0110, 0114, 0115, 0118, 0119, 0125, 0129, 0133.	431	697122	Elbow–Intake
265	691024	Clamp–Casing	310	690323	Screw (Starter Motor)	445	698413	Filter–Air Cleaner Cartridge (Non Washable)
267	690804	Screw (Casing Clamp)	311	497608	Brush Set	455	695113	Cup–Flywheel Used on Type No(s). 0112, 0113, 0117, 0120, 0123.
267A	695134	Screw (Casing Clamp) Used on Type No(s). 0114, 0119.	333	492341	Armature–Magneto	456	695128	Plate–Pawl Friction
268	691025	Casing–Control Wire (Cut To Required Length)	334	691061	Screw (Magneto Armature)	459	281505	Pawl–Ratchet
269	691026	Wire–Control (Cut To Required Length)	337	691043	Plug–Spark	474A	696578	Alternator (DC Only) Used on Type No(s). 0110, 0114, 0118, 0119.
270	691027	Nut (Control Wire Casing)	356	697397	Wire–Stop Used on Type No(s). 0015, 0028, 0114, 0117, 0119, 0123.	474B	696459	Alternator (Dual Circuit) Used on Type No(s). 0025, 0028, 0115, 0133.
271	691028	Lever–Control	356A	398808	Wire–Stop Used on Type No(s). 0112, 0113, 0115, 0118, 0120, 0125, 0126, 0129, 0133.	474C	696457	Alternator (Tri Circuit) Used on Type No(s). 0125, 0129.
276	692255	Washer–Sealing	356B	697089	Wire–Stop Used on Type No(s). 0129.	501A	691188	Regulator Used on Type No(s). 0129.
300	697048	Muffler (Lo Tone) Used on Type No(s). 0015, 0025, 0028, 0112, 0113, 0114, 0115, 0117, 0118, 0119, 0120, 0123, 0125, 0126, 0129, 0133.	357	691483	Key–Drive Pulley Used on Type No(s). 0114, 0115, 0118, 0119.	505	691251	Nut (Governor Control Lever)
304	698473	Housing–Blower (Black) Used on Type No(s). 0114, 0119, 0120. ----- Note ----- 699085 Housing–Blower (Red) Used on Type No(s). 0015, 0025, 0028, 0110, 0112, 0113, 0115, 0117, 0118, 0123, 0125, 0126, 0129, 0133.	358	697151	Gasket Set–Engine	507	691972	Insulator Used on Type No(s). 0112, 0113, 0115, 0118, 0120, 0123, 0125, 0126.
305	697102	Screw (Blower Housing)	359	691077	Washer (Ground Terminal)	510	693699	Drive–Starter
305A	697103	Screw (Blower Housing)	363	19203	Puller–Flywheel	513	692024	Clutch–Drive
306	697359	Shield–Cylinder	373	691612	Nut (Ground Terminal)	520	691084	Terminal–Ground
307	691003	Screw (Cylinder Shield)	383	89838	Wrench–Spark Plug	521	690581	Shield–Cable Used on Type No(s). 0112, 0123.
			385	694476	Screw (Fuel Pump)	523	699908	Dipstick
			385A	690297	Screw (Fuel Pump)	524	691032	Seal–Dipstick Tube
			387	697090	Pump–Fuel (Includes Mounting Bracket) Used on Type No(s). 0110, 0112, 0117, 0123, 0125, 0126, 0129, 0133.	525	697184	Tube–Dipstick Used on Type No(s). 0015, 0025, 0113, 0114, 0115, 0118, 0119.
			387A	808656	Pump–Fuel			----- Note ----- 697085 Tube–Dipstick Used on Type No(s). 0028, 0110, 0112, 0117, 0120, 0125, 0126, 0129, 0133.
			404	691691	Washer (Governor Crank)			
			415	690283	Plug (Sump) Used on Type No(s). 0112, 0120, 0123.			

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121 or 121A.

◆ Included in Carburetor Gasket Set–Ref. No. 977 or 977A.

△ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5705–12

Assemblies include all parts shown in frames.

03/11/2005

215900

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
526A	697088	Screw (Regulator) Used on Type No(s). 0129.	676	393761	Deflector-Muffler (Side Out) Used on Type No(s). 0015, 0025, 0028, 0112, 0114, 0115, 0118, 0119, 0120, 0125, 0126, 0129, 0133.	830	691095	Stud-Rocker Arm
544	692034	Armature-Starter	676A	396903	Deflector-Muffler (Direct Out) Used on Type No(s). 0113, 0123.	842	★691031	Seal-O Ring (Dipstick Tube)
552	697144	Bushing-Governor Crank	677	690661	Screw (Muffler Deflector)	847	790442	Dipstick/Tube Assembly Used on Type No(s). 0015, 0025, 0113, 0114, 0115, 0118, 0119.
562	691119	Bolt (Governor Control Lever)	689	691855	Spring-Friction	----- Note -----		
578	692306	Wire Assembly (1 Wire, 48-1/2" Long)(Snap Connect Female Pin Socket, And Bare WireEnd)	691	★692407	Seal-Governor Shaft	851	692424	Terminal-Spark Plug
579	691029	Nut (Starter Cable)	692	691301	Spring-Detent	864	697346	Adapter-Muffler Used on Type No(s). 0015, 0025, 0028, 0112, 0113, 0114, 0115, 0117, 0118, 0119, 0120, 0123, 0125, 0126, 0129, 0133.
584	697112	Cover-Breather Passage	697	690372	Screw (Drive Cap)	868	★△690968	Seal-Valve
597	691696	Screw (Pawl Friction Plate)	705	790561	Nut (Fuel Tank) Used on Type No(s). 0028, 0112, 0117, 0120, 0123, 0125, 0126, 0129, 0133.	877	393456	Wire/Connector- Alternator (Dual Circuit) Used on Type No(s). 0115, 0118.
601	95162	Clamp-Hose (Zinc Plate)(Spring Wire)	718	690959	Pin-Locating	877A	393814	Wire/Connector- Alternator (DC Only) Used on Type No(s). 0110, 0114, 0119.
608	695058	Starter-Rewind Used on Type No(s). 0015, 0025, 0028, 0112, 0113, 0117, 0120, 0123, 0125, 0126, 0129, 0133.	729	691335	Clip-Wire (Wire Retainer)	877B	393537	Wire/Connector- Alternator (Tri Circuit)
613	691416	Screw (Muffler)	729A	691224	Clip-Wire (Starter Motor)	878	691237	Harness-Alternator Used on Type No(s). 0115, 0118, 0133.
613A	691678	Screw (Muffler)	729B	694123	Clip-Wire Used on Type No(s). 0129.	878A	691955	Harness-Alternator
614	691620	Pin-Cotter	741	697128	Gear-Timing	883	★692236	Gasket-Exhaust
616	692012	Crank-Governor	757	697607	Link-Counterweight	914	691108	Screw (Rocker Cover)
617	★●692138	Seal-O Ring (Intake Manifold)	758	697391	Counterweight			
621	692310	Switch-Stop Used on Type No(s). 0112, 0113, 0115, 0118, 0120, 0123, 0125, 0126, 0129, 0133.	783	693713	Gear-Pinion			
634	●690802	Spring/Seal Assembly (Walbro)	788	699347	Bracket-Fuel Pump Used on Type No(s). 0028, 0120.			
634A	●698779	Spring/Seal Assembly (Nikki)	789	698329	Harness-Wiring Used on Type No(s). 0110.			
635	691909	Boot-Spark Plug	797	693167	Nut (Brush Retainer)			
643	697155	Retainer-Air Filter	801	691283	Cap-Drive			
654	690958	Nut (Carburetor)	802	691286	Cap-End			
			803	693757	Housing-Starter			
			823	698941	Screw (Muffler Adapter)			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121 or 121A.

◆ Included in Carburetor Gasket Set-Ref. No. 977 or 977A.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

215900

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
918	697091	Hose-Vacuum (Molded) Used on Type No(s). 0110, 0112, 0117, 0123, 0125, 0126, 0129, 0133.	977A	790032	Gasket Set-Carburetor (Nikki)	1044	698139	Screw (Flywheel)
920	691656	Solenoid-Starter Used on Type No(s). 0115.	987	●691326	Seal-Throttle Shaft (Walbro)	1051	691265	Ring-Retaining
950	691657	Screw-Float Bowl (Bottom Of Bowl)	987A	●698777	Seal-Throttle Shaft (Nikki)	1054	280275	Tie-Cable
957	694261	Cap-Fuel Tank (Plastic)(Plastic)	1005	699044	Fan-Flywheel	1058	275935	Operator's Manual
958	698183	Valve-Fuel Shut Off (Plastic) Used on Type No(s). 0123, 0125, 0126, 0129, 0133.	1017	690770	Screen-Oil Pump	1070	690372	Screw (Flywheel Fan)
967	697292	Filter-Pre Cleaner	1019	699196	Kit-Label ----- Note -----	1090	691293	Retainer-Brush
968	697420	Cover-Air Cleaner (Black) Used on Type No(s). 0110, 0112, 0113, 0114, 0115, 0117, 0118, 0119, 0120, 0123.	1022	★△272475	Gasket-Rocker Cover	1091	691333	Cap-Limiter
972	699710	Tank-Fuel (Plastic) Used on Type No(s). 0028, 0112, 0117, 0120, 0123, 0125, 0126, 0129, 0133.	1023	692492	Cover-Rocker	1095	691581	Gasket Set-Valve
975	495933	Bowl-Float (Walbro)	1026	697395	Rod-Push (Exhaust) ----- Note -----	1119	691183	Screw (Alternator)
975A	698783	Bowl-Float (Nikki)	1029	691751	Arm-Rocker	1127	695407	Screw (Float Bowl)
977	690192	Gasket Set-Carburetor (Walbro)	1032	491710	Ball-Oil Pump	1263	697124	Reed-Breather
			1034	690822	Guide-Push Rod	1264	697104	Screw (Breather Reed)
			1036	790465	Label-Emissions (Used After Code Date 04063000) ----- Note -----	1266	★●691917	Seal-O Ring (Intake Elbow)
					790186	1266A	★●697123	Seal-O Ring (Intake Elbow)
					Label-Emissions (Used After Code Date 03123100 and Before Code Date 04070100). 697221	1267	697424	Latch-Blower Housing (Red) Used on Type No(s). 0110.
					Label-Emissions (Used Before Code Date 04010100)			----- Note -----
			1040	698368	Plate-Trim (Exhaust) Used on Type No(s). 0110, 0114, 0115, 0118, 0119.			697419 Latch-Blower Housing (Black) Used on Type No(s). 0112, 0113, 0114, 0115, 0117, 0118, 0119, 0120, 0123.
						1270	697156	Plug-AVS
						1330	272147	Repair Manual

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121 or 121A.

◆ Included in Carburetor Gasket Set-Ref. No. 977 or 977A.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.