

216900

Illustrated Parts List

Model Series

216900

TYPE NUMBERS
0015 through 0126.

TABLE OF CONTENTS

Air Cleaner/Blower Housing	6
Alternator	9
Cams	3
Carburetor	5
Controls	8
Crankcase Cover/Sump	2
Crankshaft	3
Cylinder	2
Electric Starter	7
Flywheel	7
Head	4
Ignition	8
Kit/Gasket Sets – Carburetor	5
Kit/Gasket Sets – Engine	4
Kit/Gasket Sets – Valve	4
Muffler	6
Oil	3
Piston	3
Rewind Starter	7


BRIGGS & STRATTON




PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.




216900

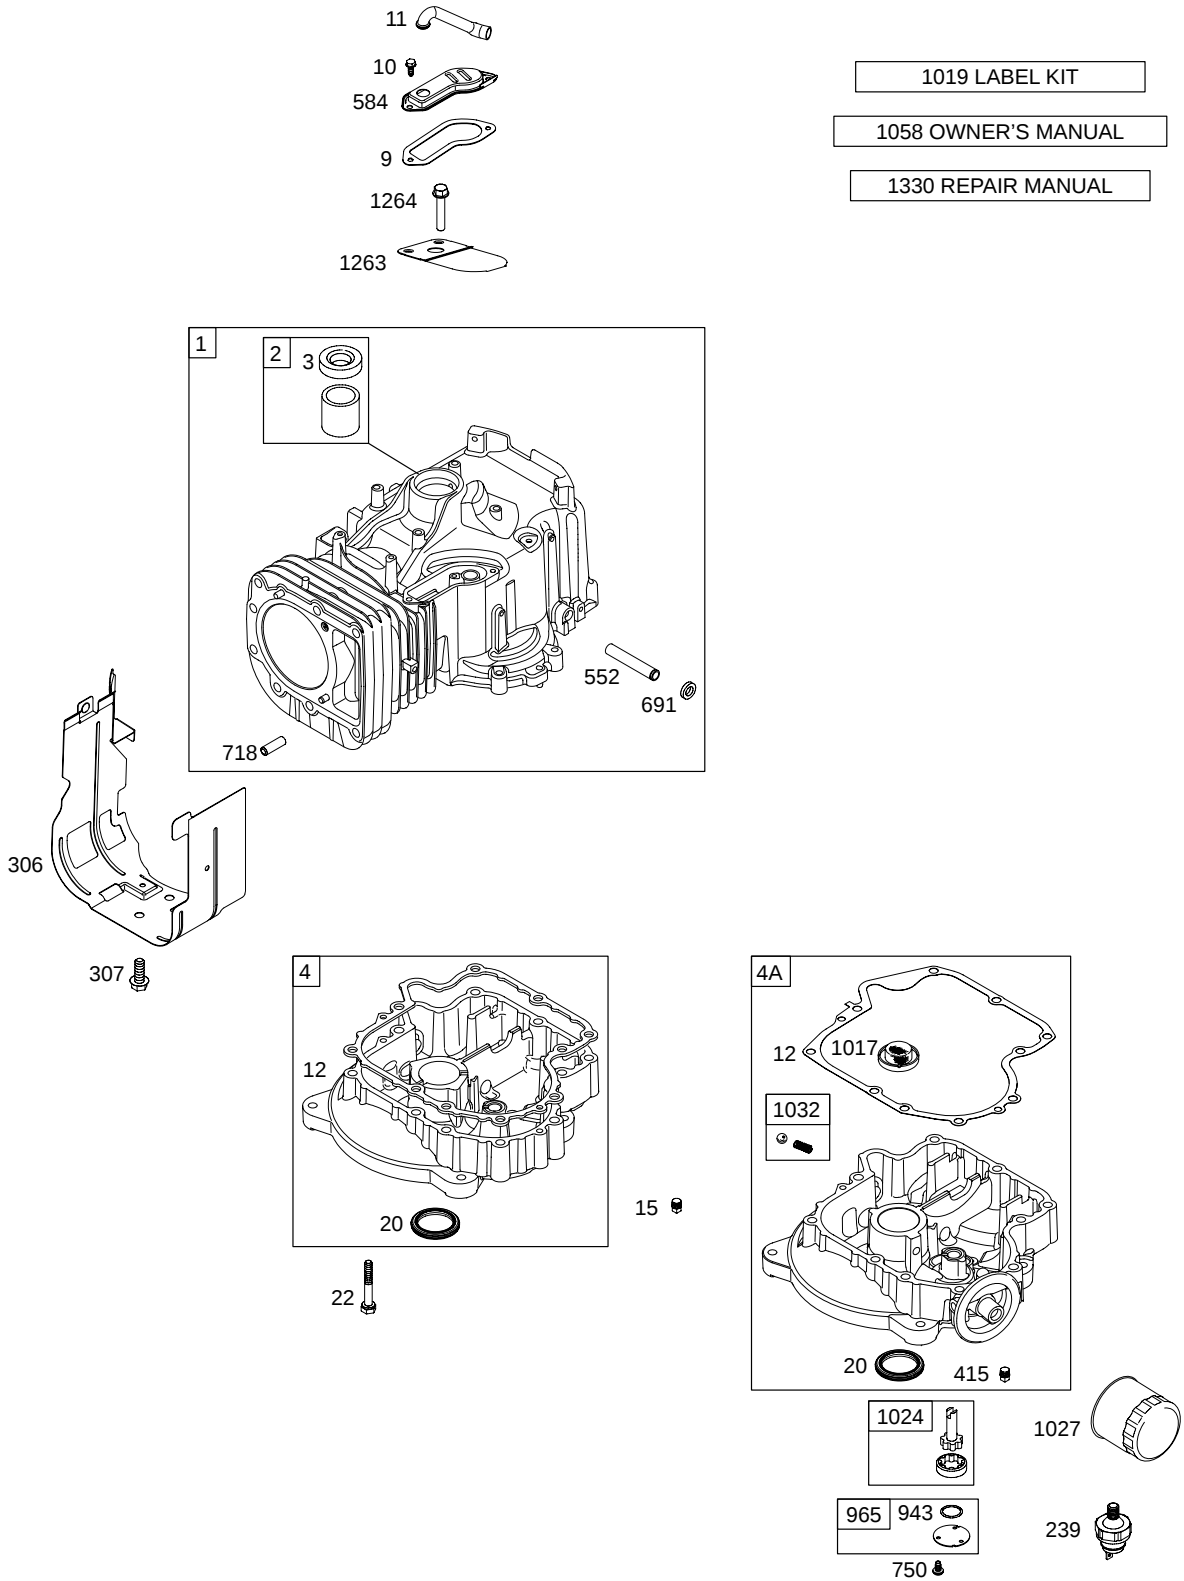

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5707-2 Assemblies include all parts shown in frames. 09/29/2004






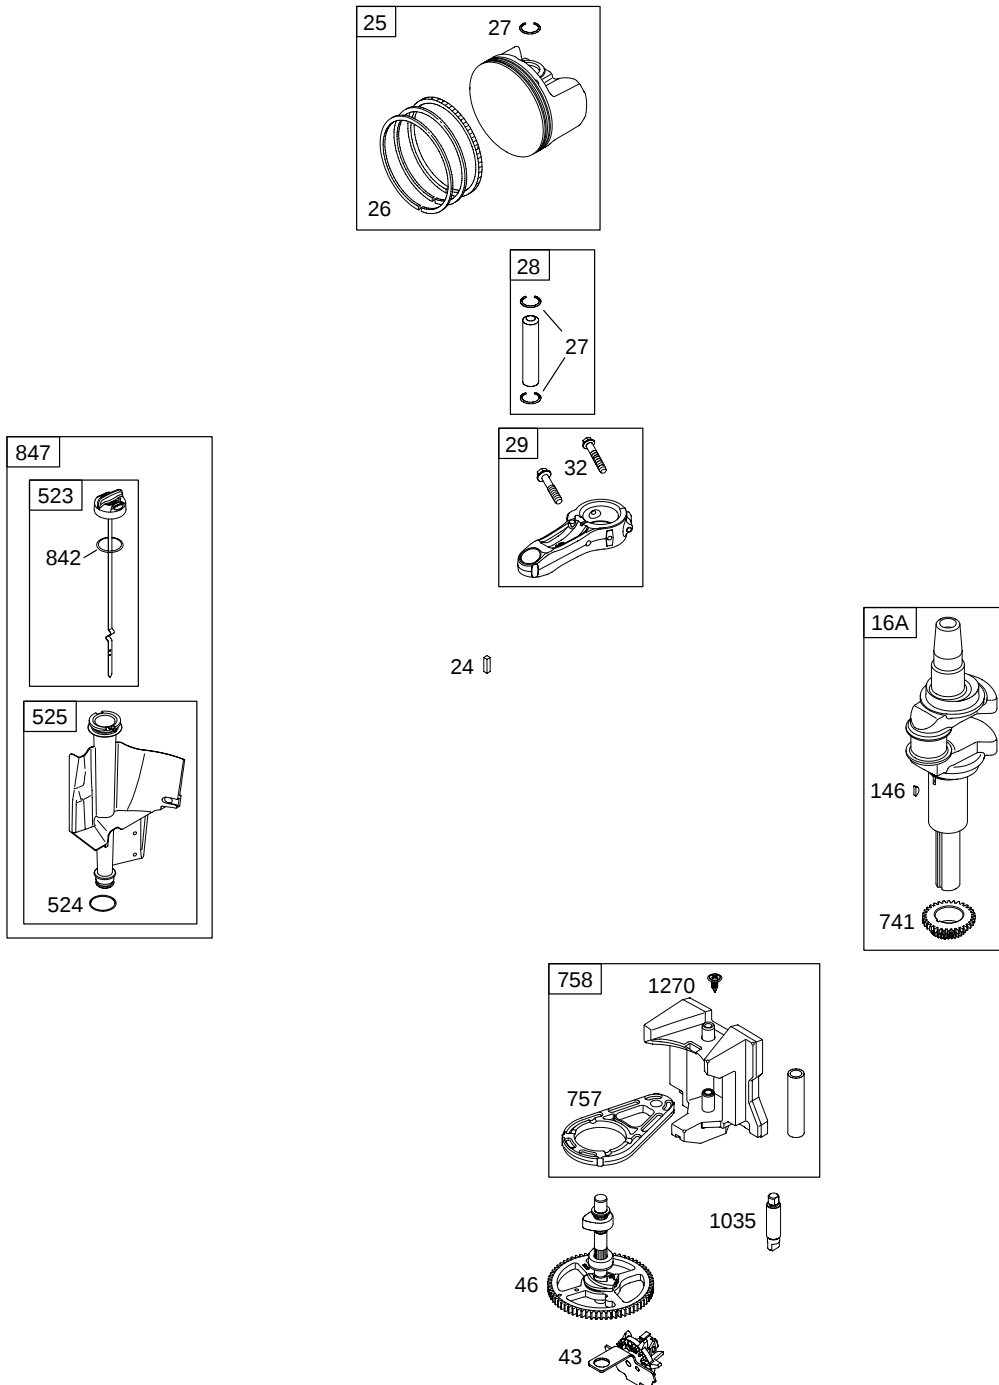


216900

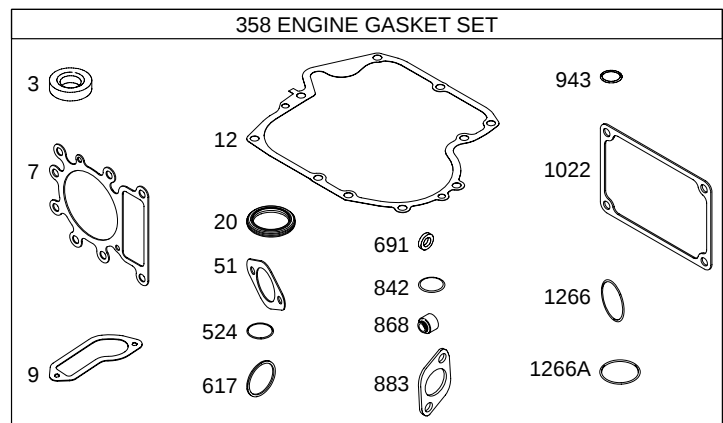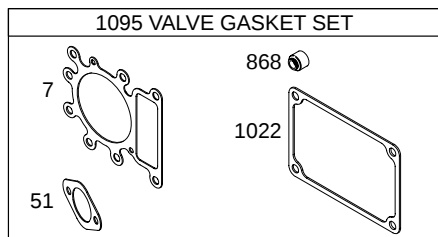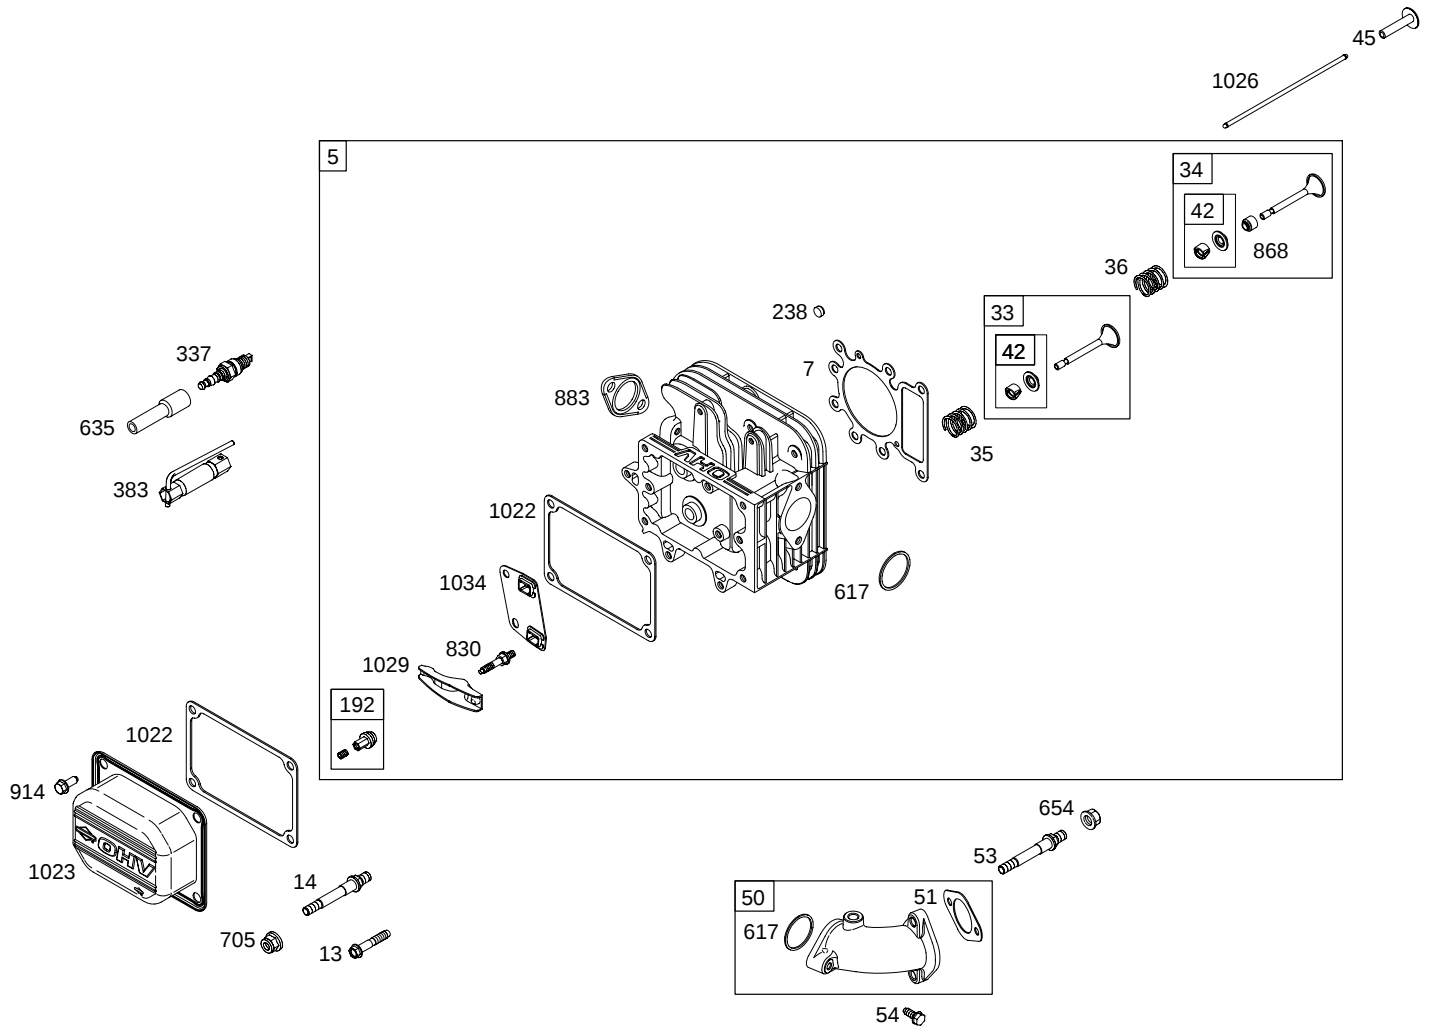


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5707-4 Assemblies include all parts shown in frames. **09/29/2004**

216900

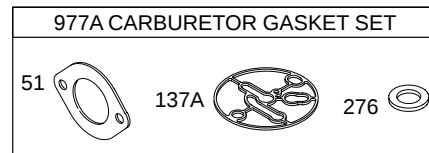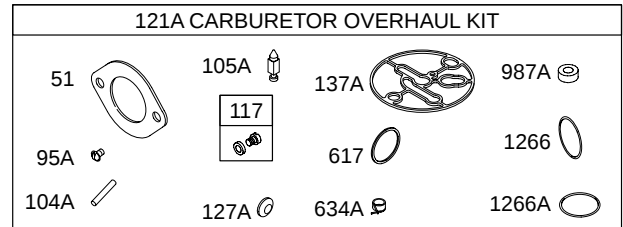
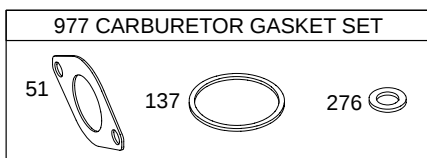
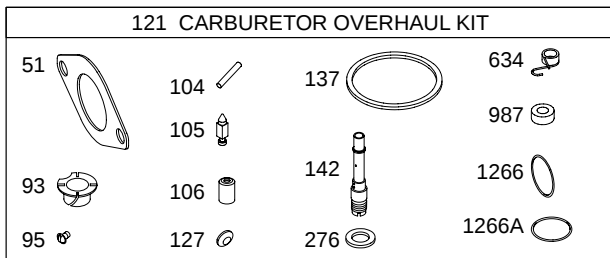
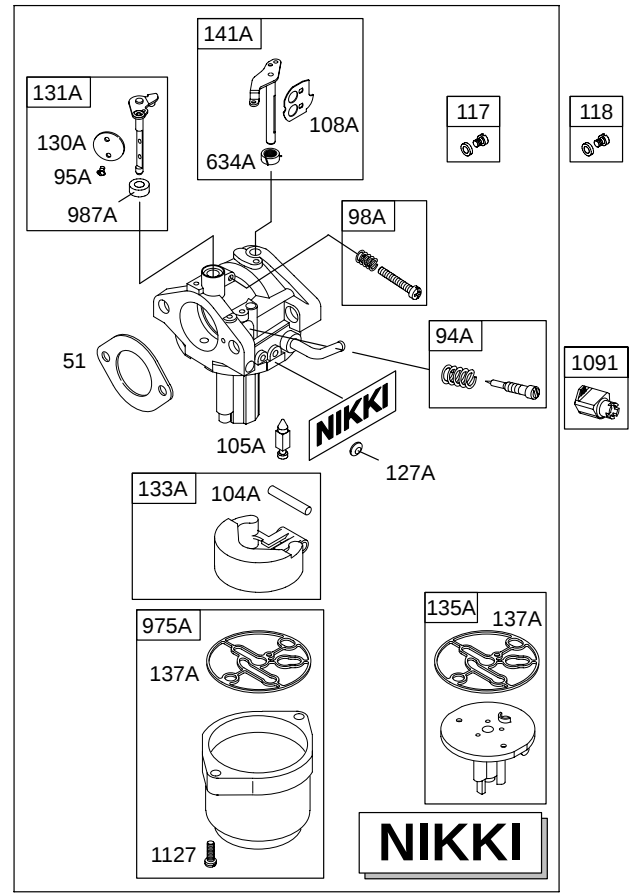
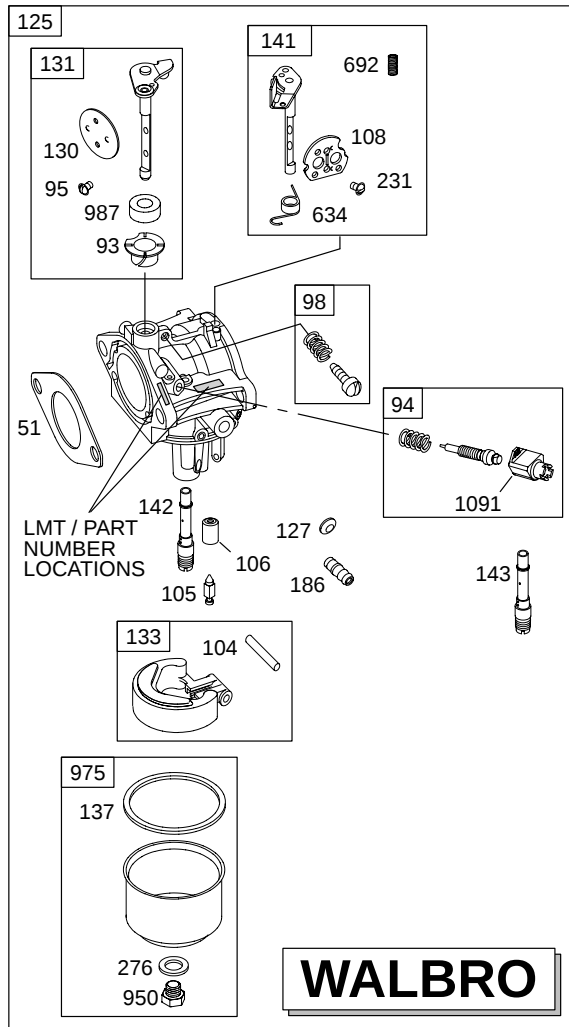


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5707-5 Assemblies include all parts shown in frames. 09/29/2004


216900

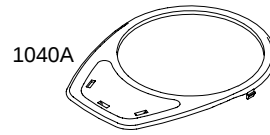


1036 EMISSION LABEL

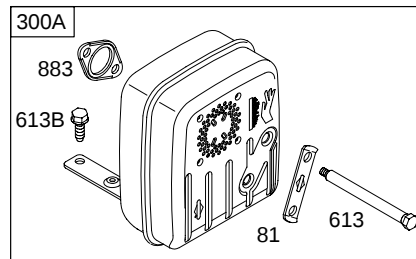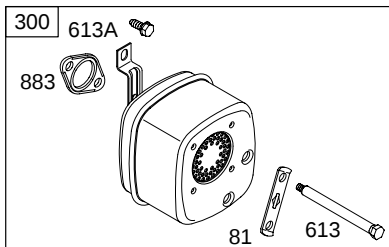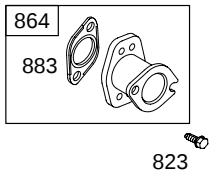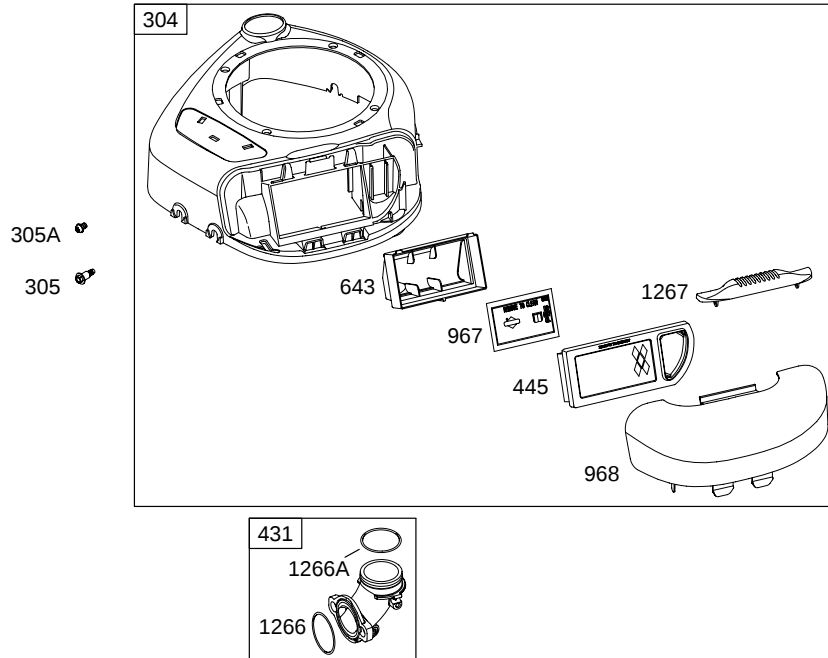



Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5707-6 Assemblies include all parts shown in frames. 09/29/2004

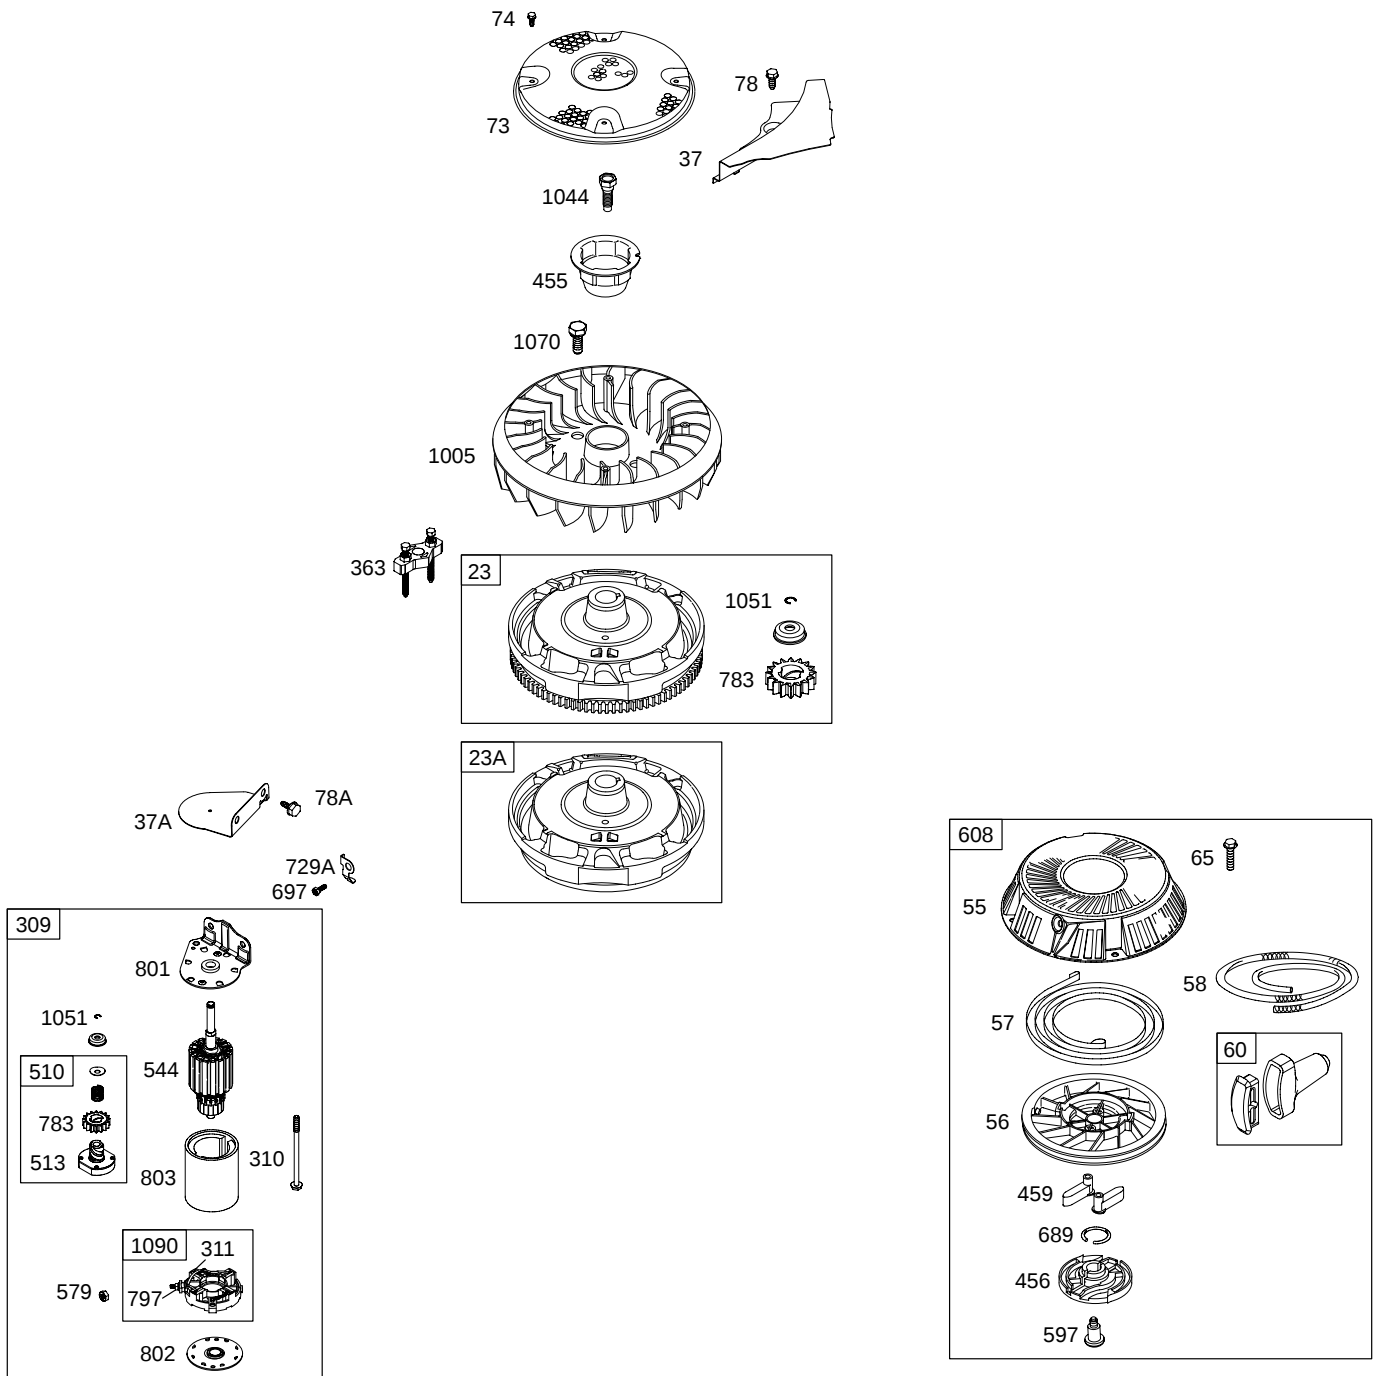

216900

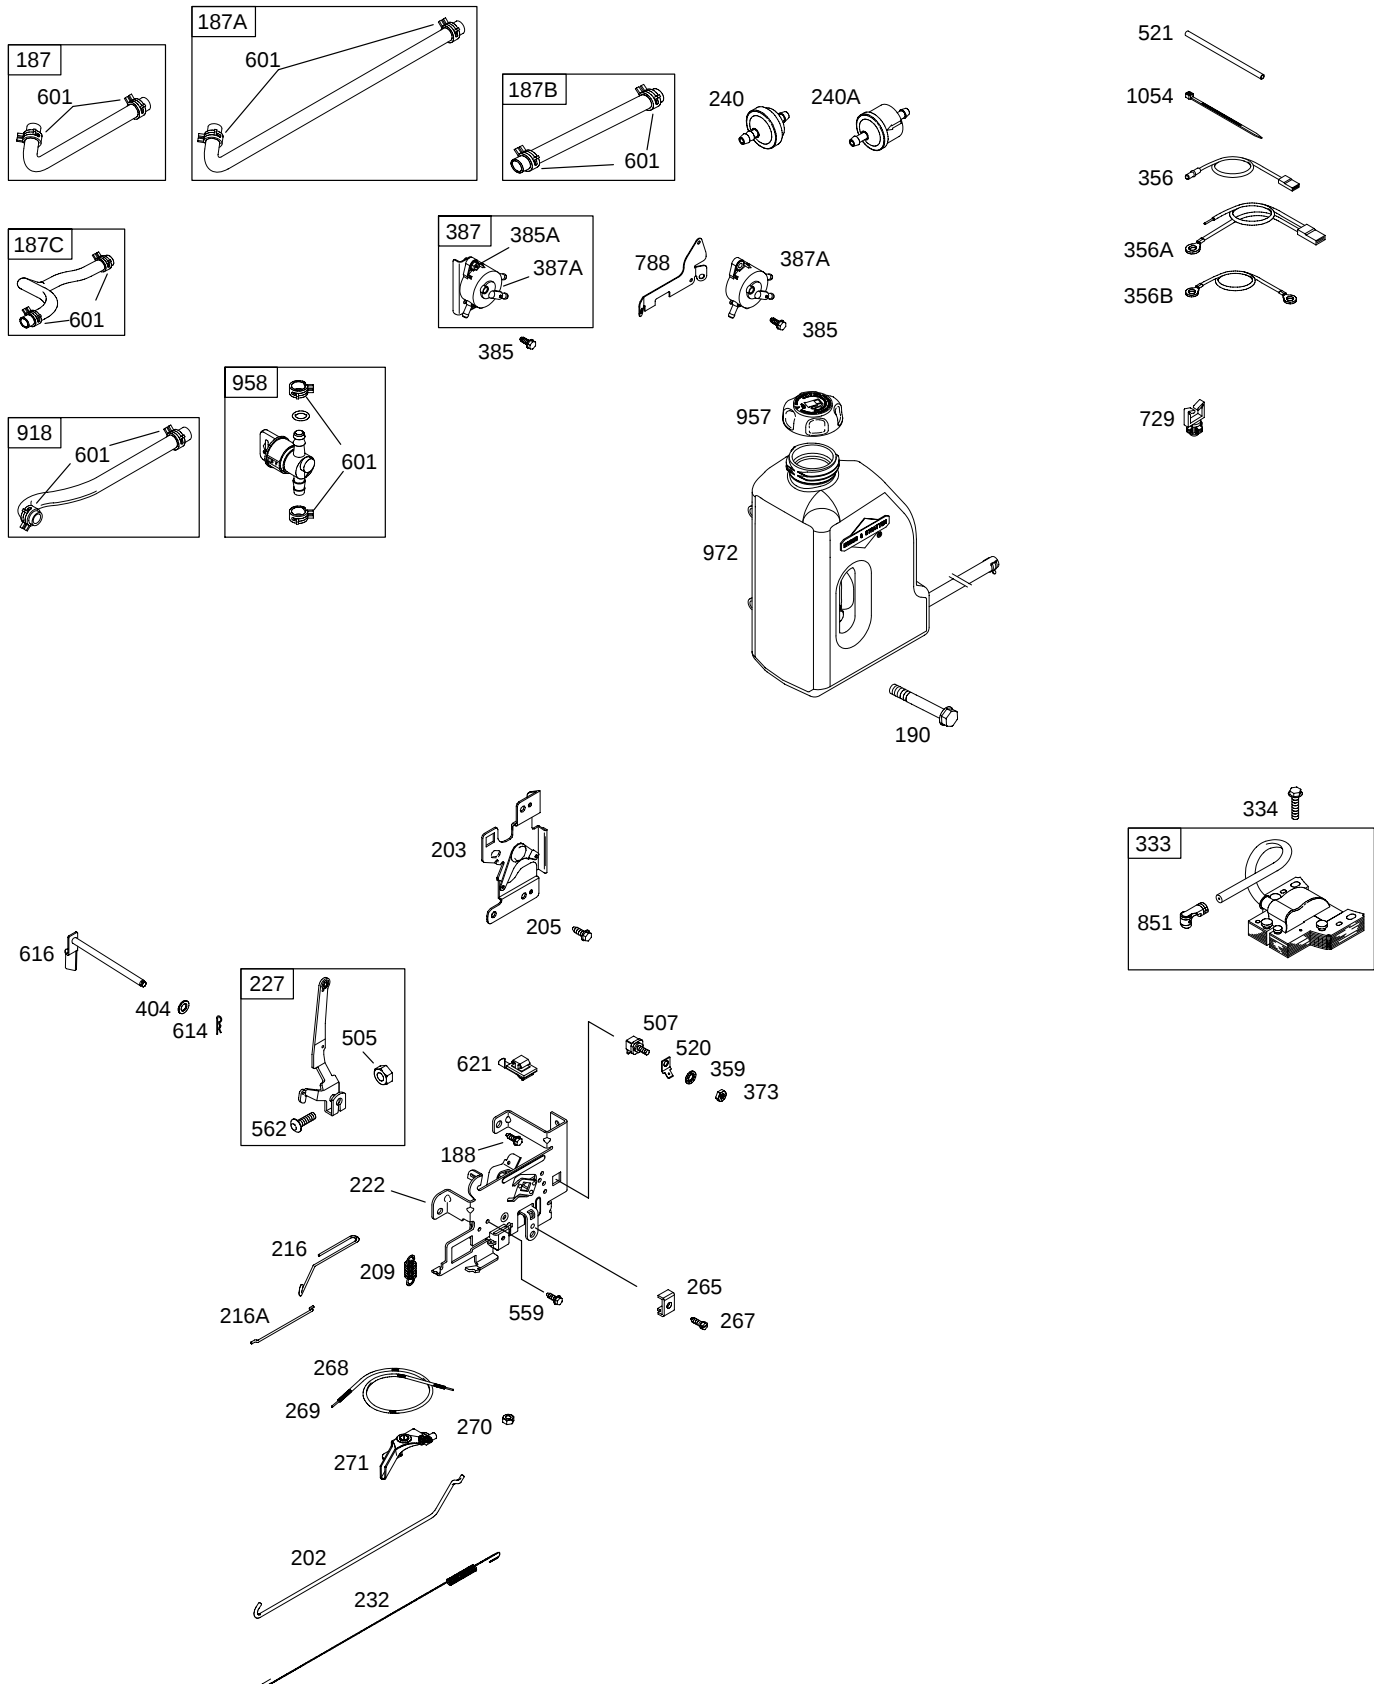

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5707-8 Assemblies include all parts shown in frames. 09/29/2004

DUAL CIRCUIT		5 – 9 AMP	10 – 16 AMP
474B	474C	474D	
877 	877B 	877C 	
878 	578 	578 	
NOTE: All stators use a No. 1119 mounting screw.  NOTE: The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information.		526A  501A 	526  501 

729B 

216900

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	697377	Cylinder Assembly	24	222698	Key–Flywheel	37	697352	Guard–Flywheel
2	399265	Kit–Bushing/Seal (Magnet Side)	25	698371	Piston Assembly (Standard)	37A	697626	Guard–Flywheel (Electric Start)
3	★391086	Seal–Oil (Magnet Side)			----- Note -----			Used on Type No(s). 0015, 0016, 0020, 0120, 0125.
4	697106	Sump–Engine		698372	Piston Assembly (.010" Oversize)	42	499586	Keeper–Valve
4A	697188	Sump–Engine Used on Type No(s). 0116.		698373	Piston Assembly (.020" Oversize)	43	691968	Slinger–Governor/Oil
5	697396	Head–Cylinder		698374	Piston Assembly (.030" Oversize)	45	690564	Tappet–Valve
7	★Δ273280	Gasket–Cylinder Head				46	790392	Camshaft
9	★697109	Gasket–Breather				50	697361	Manifold–Intake
10	697157	Screw (Breather Assembly)				51	★♦692137	Gasket–Intake
11	697113	Tube–Breather	26	698375	Ring Set (Standard)	53	690227	Stud (Carburetor)
12	★697110	Gasket–Crankcase (.015" Thick) (Standard)			----- Note -----	54	691148	Screw (Intake Manifold)
13	690360	Screw (Cylinder Head)		698376	Ring Set (.010" Oversize)	55	695130	Housing–Rewind Starter
14	790560	Stud (Cylinder Head)		698377	Ring Set (.020" Oversize)	56	695129	Pulley–Starter
15	690946	Plug–Oil Drain (3/8" Standard)		698378	Ring Set (.030" Oversize)	57	695131	Spring–Rewind Starter
16A	697390	Crankshaft	27	698469	Lock–Piston Pin (Pink)	58	695132	Rope–Starter
20	★690947	Seal–Oil (PTO Side)	28	697099	Pin–Piston	60	494212	Grip–Starter Rope
22	692125	Screw (Crankcase Cover/Sump)	29	697364	Rod–Connecting (Standard)	65	697725	Screw (Rewind Starter)
23	698281	Flywheel			----- Note -----	73	697133	Screen–Rotating Used on Type No(s). 0025, 0028, 0049, 0116.
		----- Note -----		697262	Rod– Connecting (.020" Undersize)	74	697897	Screw (Rotating Screen)
		698282 Flywheel Used on Type No(s). 0116, 0126.	32	692852	Screw (Connecting Rod)	78	691003	Screw (Flywheel Guard)
23A	698283	Flywheel (Rewind Starter) Used on Type No(s). 0015, 0016, 0020, 0120, 0123.	33	695760	Valve–Exhaust	78A	690364	Screw (Flywheel Guard)(Electric Start)
			34	695761	Valve–Intake			Used on Type No(s). 0015, 0016, 0020, 0120, 0125.
			35	691279	Spring–Valve (Intake)	81	691178	Lock–Muffler Screw
			36	691279	Spring–Valve (Exhaust)	93	♦690602	Bushing–Throttle Shaft

★ Included in Engine Gasket Set–Ref. No. 358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

♦ Included in Carburetor Gasket Set–Ref. No. 977.

Δ Included in Valve Gasket Set–Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5707–10

Assemblies include all parts shown in frames.

09/29/2004

216900

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
94	498030	Kit-Idle Mixture (Walbro)	125	790019	Carburetor (Walbro) (Gravity Feed)	133	494381	Float-Carburetor (Walbro)
94A	695425	Kit-Idle Mixture (Nikki)			Used on Type No(s). 0015, 0016, 0019, 0025, 0125.	133A	694914	Float-Carburetor (Nikki)
95	●691636	Screw (Walbro) (Throttle Valve)			----- Note -----			Used on Type No(s). 0025.
95A	●690718	Screw (Throttle Valve)(Nikki)			790020 Carburetor (Walbro)(Pump Feed)	135A	698780	Tube-Fuel Transfer (Nikki)
98	495800	Kit-Idle Speed (Walbro)			Used on Type No(s). 0020, 0028, 0049, 0050, 0116, 0120, 0121, 0123, 0126, 0128.			Used on Type No(s). 0015, 0016, 0019, 0025, 0125.
98A	695408	Kit-Idle Speed (Nikki)						----- Note -----
104	●690525	Pin-Float Hinge (Walbro)	127	●694524	Plug-Welch			790030 Tube-Fuel Transfer (Nikki)
104A	●694918	Pin-Float Hinge (Nikki)	127A	●690727	Plug-Welch (Nikki)			Used on Type No(s). 0020, 0028, 0049, 0050, 0116, 0120, 0121, 0123, 0126, 0128.
105	●231855	Valve-Float Needle (Walbro)	130	790024	Valve-Throttle	137	●♦281165	Gasket-Float Bowl (Walbro)
105A	●696136	Valve-Float Needle (Nikki)			Used on Type No(s). 0015, 0016, 0019, 0020, 0025, 0028, 0049, 0050, 0116, 0120, 0121, 0123, 0125, 0126.	137A	●♦698781	Gasket-Float Bowl (Nikki)
106	●691780	Seat-Inlet (Pump Feed)	130A	698774	Valve-Throttle (Nikki)			Used on Type No(s). 0128.
		Used on Type No(s). 0020, 0028, 0049, 0050, 0116, 0120, 0121, 0123, 0126, 0128.	131	697542	Kit-Throttle Shaft	141	699027	Kit-Choke Shaft (Walbro)
		----- Note -----			Used on Type No(s). 0015, 0016, 0019, 0121.	141A	698778	Kit-Choke Shaft (Nikki)
		690577 Seat-Inlet (Gravity Feed)			----- Note -----			Used on Type No(s). 0128.
		Used on Type No(s). 0015, 0016, 0019, 0025, 0125.			790175 Kit-Throttle Shaft	142	●790025	Nozzle-Carburetor (Standard)(Walbro)
108	691227	Valve-Choke (Walbro)			Used on Type No(s). 0025, 0028, 0049, 0116, 0128.	143	●790028	Nozzle-Carburetor (High Altitude)(Walbro)
108A	698773	Valve-Choke (Nikki)	131A	698776	Kit-Throttle Shaft (Nikki)	146	691639	Key-Timing
117	699897	Jet-Main (Standard)(Nikki)			Used on Type No(s). 0025.	186	698174	Connector-Hose (Straight)
118	699898	Jet-Main (High Altitude)(Nikki)						
121	790031	Kit-Carburetor Overhaul (Walbro)						
121A	698787	Kit-Carburetor Overhaul (Nikki)						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

♦ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5707-11 Assemblies include all parts shown in frames. **09/29/2004**

216900

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
187	699331	Line–Fuel (Formed)(Cut To Required Length) Used on Type No(s). 0015, 0016, 0019, 0020, 0025, 0028, 0116, 0120, 0121, 0123, 0125.	216	691840	Link–Choke	300	697048	Muffler (Lo Tone) Used on Type No(s). 0015, 0016, 0019, 0020, 0025, 0028, 0120, 0121, 0123.
187A	699332	Line–Fuel (Formed)(Cut To Required Length) Used on Type No(s). 0020, 0028.	216A	691281	Link–Choke Used on Type No(s). 0020, 0028.	300A	697349	Muffler (Lo Tone) Used on Type No(s). 0116.
187B	691050	Line–Fuel (Cut To Required Length) Used on Type No(s). 0120.	222	694042	Bracket–Control	304	699085	Housing–Blower (Red) Used on Type No(s). 0015, 0016, 0019, 0020, 0025, 0028, 0049, 0116, 0120, 0121, 0123.
187C	697907	Line–Fuel (Formed) (8 Inches Long) Used on Type No(s). 0120.	227	691374	Lever–Governor Control	----- Note -----		
188	691693	Screw (Control Bracket)	231	691636	Screw (Choke Valve)	698473	Housing– Blower (Black) Used on Type No(s). 0125.	
190	790931	Screw (Fuel Tank)	232	691842	Spring–Governor Link	305	697102	Screw (Blower Housing)
192	691986	Adjuster–Rocker Arm	233	691843	Cap–Valve	305A	697103	Screw (Blower Housing)
202	691841	Link–Mechanical Governor	238	491657	Switch–Oil Pressure Used on Type No(s). 0116.	306	697359	Shield–Cylinder
203	691381	Crank–Bell Used on Type No(s). 0020, 0028.	239	491657	Switch–Oil Pressure Used on Type No(s). 0116.	307	691003	Screw (Cylinder Shield)
205	691693	Screw (Bell Crank)	240	394358	Filter–Fuel (White, 75 Microns) Used on Type No(s). 0015, 0016, 0019, 0025, 0125.	309	693551	Motor–Starter Used on Type No(s). 0019, 0025, 0028, 0049, 0050, 0116, 0121, 0126.
209	691798	Spring–Governor (Brown) Used on Type No(s). 0015, 0016, 0019, 0020, 0025, 0028, 0049, 0050, 0116, 0120, 0121, 0123, 0125, 0126.	240A	691035	Filter–Fuel (Clear, 40 Microns) Used on Type No(s). 0020, 0028, 0116, 0120, 0121, 0123.	310	690323	Screw (Starter Motor)
			265	691024	Clamp–Casing			
			267	690804	Screw (Casing Clamp)			
			268	691025	Casing–Control Wire (Cut To Required Length)			
			269	691026	Wire–Control (Cut To Required Length)			
			270	691027	Nut (Control Wire Casing)			
			271	691028	Lever–Control			
			276	◆692255	Washer–Sealing			

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

△ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**5707–12**

Assemblies include all parts shown in frames.

09/29/2004

216900

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
311	497608	Brush Set	383	89838	Wrench—Spark Plug	474B	696459	Alternator (Dual Circuit) Used on Type No(s). 0019, 0025, 0028, 0049, 0050, 0121.
333	492341	Armature—Magneto	385	694476	Screw (Fuel Pump) Used on Type No(s). 0116, 0120, 0121, 0123.	474C	696457	Alternator (5 To 9 Amp Regulated) Used on Type No(s). 0126.
334	691061	Screw (Magneto Armature)	385A	690297	Screw (Fuel Pump) Used on Type No(s). 0020, 0028.	474D	696458	Alternator (10 To 16 Amp Regulated) Used on Type No(s). 0116.
337	491055	Plug—Spark	387	697090	Pump—Fuel (Includes Mounting Bracket) Used on Type No(s). 0116, 0120, 0121, 0123.	501	691185	Regulator (10 To 16 Amp Regulated) Used on Type No(s). 0116.
356	697397	Wire—Stop (1 Wire, 20" Long) (Snap Connect Insulated Female Blade Terminal, And Snap Connect Insulated Pin Socket) Used on Type No(s). 0015, 0016, 0019, 0020, 0025, 0028, 0116, 0121.	387A	808656	Pump—Fuel Used on Type No(s). 0020, 0028.	501A	691188	Regulator (5 To 9 Amp Regulated) Used on Type No(s). 0126.
356A	398808	Wire—Stop (2 Wires, 15" And 15–11/16" Long)(Snap Connect Insulated Female Blade Terminal, Ring Terminal, And Bare Wire End) Used on Type No(s). 0049, 0050, 0120, 0123, 0125, 0126.	404	691691	Washer (Governor Crank)	505	691251	Nut (Governor Control Lever)
356B	697089	Wire—Stop (1 Wire, 8" Long) (2 Ring Terminals) Used on Type No(s). 0116, 0126.	415	690283	Plug (Sump) Used on Type No(s). 0116.	507	691972	Insulator Used on Type No(s). 0049, 0050, 0120, 0123, 0125, 0126.
358	697151	Gasket Set—Engine	431	697122	Elbow—Intake	510	693699	Drive—Starter
359	691077	Washer (Ground Terminal) Used on Type No(s). 0049, 0050, 0120, 0123, 0125, 0126.	445	698413	Filter—Air Cleaner Cartridge (Non Washable)	513	692024	Clutch—Drive
363	19203	Puller—Flywheel	455	695113	Cup—Flywheel Used on Type No(s). 0015, 0016, 0019, 0020, 0120, 0121, 0123.	520	691084	Terminal—Ground Used on Type No(s). 0049, 0050, 0120, 0123, 0125, 0126.
373	691612	Nut (Ground Terminal) Used on Type No(s). 0049, 0050, 0120, 0123, 0125, 0126.	456	695128	Plate—Pawl Friction			
			459	281505	Pawl—Ratchet			

★ Included in Engine Gasket Set—Ref. No.358.

● Included in Carburetor Overhaul Kit—Ref. No. 121.

◆ Included in Carburetor Gasket Set—Ref. No. 977.

△ Included in Valve Gasket Set—Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**5707–13**

Assemblies include all parts shown in frames.

09/29/2004

216900

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
521	690581	Shield—Cable Used on Type No(s). 0125.	579	691029	Nut (Starter Cable)	635	691909	Boot—Spark Plug
523	699908	Dipstick	584	697112	Cover—Breather Passage	643	697155	Retainer—Air Filter
524	★691032	Seal—Dipstick Tube	597	691696	Screw (Pawl Friction Plate)	654	690958	Nut (Carburetor)
525	697184	Tube—Dipstick ----- Note ----- 697085 Tube—Dipstick (Used On Engines With Fuel Pump) Used on Type No(s). 0020, 0028, 0116, 0120, 0121, 0123.	601	95162	Clamp—Hose (Zinc Plate)(Spring Wire) ----- Note ----- 691038 Clamp—Hose (Black)(Spring Steel) Used on Type No(s). 0120, 0121, 0123.	676	393761	Deflector—Muffler (Side Out) Used on Type No(s). 0015, 0016, 0019, 0020, 0025, 0028, 0049, 0050, 0116, 0120, 0121, 0123, 0125, 0126.
526	697348	Screw (Regulator)(10 To 16 Amp Regulated) Used on Type No(s). 0116.	608	695058	Starter—Rewind Used on Type No(s). 0015, 0016, 0019, 0020, 0120, 0121, 0123.	677	690661	Screw (Muffler Deflector)
526A	697088	Screw (Regulator)(5 To 9 Amp Regulated) Used on Type No(s). 0126.	613	691416	Screw (Muffler)	689	691855	Spring—Friction
544	692034	Armature—Starter	613A	691678	Screw (Muffler)	691	★692407	Seal—Governor Shaft
552	697144	Bushing—Governor Crank	613B	690297	Screw (Muffler)	692	691301	Spring—Detent Used on Type No(s). 0020, 0028, 0049, 0050, 0116, 0120, 0121, 0123, 0126.
559	697561	Screw (Remote Choke Stop) (Assemble Remote/ Manual Choke Stop Screw in "R" Hole) Used on Type No(s). 0016.	614	691620	Pin—Cotter	697	690372	Screw (Drive Cap)
562	691119	Bolt (Governor Control Lever)	616	692012	Crank—Governor	705	790561	Nut (Fuel Tank)
578	692306	Wire Assembly (1 Wire, 48—1/2" Long) (Snap Connect Female Pin Socket, And Bare Wire End)	617	★692138	Seal—O Ring (Intake Manifold)	718	690959	Pin—Locating
			621	692310	Switch—Stop Used on Type No(s). 0049, 0050, 0120, 0123, 0125, 0126.	729	691335	Clip—Wire (Wire Retainer)
			634	●690802	Spring/Seal Assembly (Walbro) Used on Type No(s). 0015, 0016, 0019, 0125.	729A	691224	Clip—Wire (Starter Motor)
			634A	●698779	Spring/Seal Assembly (Nikki)	729B	694123	Clip—Wire (Regulator) Used on Type No(s). 0116.
						741	697128	Gear—Timing
						750	691033	Screw (Oil Pump Cover)
						757	697607	Link—Counterweight
						758	697391	Counterweight
						783	693713	Gear—Pinion

★ Included in Engine Gasket Set—Ref. No. 358.

● Included in Carburetor Overhaul Kit—Ref. No. 121.

◆ Included in Carburetor Gasket Set—Ref. No. 977.

△ Included in Valve Gasket Set—Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5707-14

Assemblies include all parts shown in frames.

09/29/2004

216900

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
788	699347	Bracket–Fuel Pump Used on Type No(s). 0020, 0028.	878	691237	Harness–Alternator (2 Wires, 48–1/2", And 48–1/2" Long)(Snap Connect Female Pin Terminal,And 2 Bare Wire Ends) Used on Type No(s). 0019, 0025, 0028, 0049, 0050, 0121.	972	699710	Tank–Fuel (Plastic) Used on Type No(s). 0020, 0028, 0120, 0121, 0123.
797	693167	Nut (Brush Retainer)				975	495933	Bowl–Float (Walbro)
801	691283	Cap–Drive				975A	698783	Bowl–Float (Nikki) Used on Type No(s). 0128.
802	691286	Cap–End	883	★692236	Gasket–Exhaust	977	690192	Gasket Set–Carburetor (Walbro)
803	693757	Housing–Starter	914	691108	Screw (Rocker Cover)	977A	790032	Gasket Set–Carburetor (Nikki) Used on Type No(s). 0128.
823	698941	Screw (Muffler Adapter)	918	697091	Hose–Vacuum (Molded) Used on Type No(s). 0116, 0120, 0121, 0123.	987	●691326	Seal–Throttle Shaft (Walbro)
830	691095	Stud–Rocker Arm	943	★690589	Seal–O Ring (Oil Pump Cover)(Oil Pump Cover)	987A	●698777	Seal–Throttle Shaft (Nikki) Used on Type No(s). 0128.
842	★691031	Seal–O Ring (Dipstick Tube)	950	691657	Screw–Float Bowl (Bottom Of Bowl)	1005	699044	Fan–Flywheel
847	790442	Dipstick/Tube Assembly ----- Note ----- 790443 Dipstick/Tube Assembly (Used On Engines With Fuel Pump) Used on Type No(s). 0025, 0028, 0116, 0120, 0121, 0123.	957	694261	Cap–Fuel Tank (Plastic) Used on Type No(s). 0120, 0121.	1017	690770	Screen–Oil Pump
851	692424	Terminal–Spark Plug	958	698183	Valve–Fuel Shut Off (Plastic) Used on Type No(s). 0020, 0028, 0120, 0121, 0123.	1019	699196	Kit–Label
864	697346	Adapter–Muffler Used on Type No(s). 0015, 0016, 0019, 0020, 0025, 0028, 0116, 0120, 0121, 0123.	965	499613	Cover–Oil Pump	1022	★△272475	Gasket–Rocker Cover
868	★△690968	Seal–Valve	967	697292	Filter–Pre Cleaner	1023	692492	Cover–Rocker
877	393456	Wire/Connector– Alternator (Dual Circuit) Used on Type No(s). 0019, 0025, 0028, 0049, 0050, 0121.	968	697422	Cover–Air Cleaner (Red) Used on Type No(s). 0015, 0016, 0019, 0020, 0025, 0028, 0049, 0116, 0120, 0121, 0123. ----- Note ----- 697420 Cover–Air Cleaner (Black) Used on Type No(s). 0125.	1024	499054	Pump–Oil
877B	393537	Wire/Connector– Alternator (5 To 9 Amp Regulated) Used on Type No(s). 0126.				1026	697395	Rod–Push (Exhaust) ----- Note ----- 697394 Rod–Push (Intake)
877C	399916	Wire/Connector– Alternator (10 To 16 Amp Regulated) Used on Type No(s). 0116.						

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

△ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5707–15

Assemblies include all parts shown in frames.

09/29/2004

216900

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1027	492932	Filter—Oil	1044	698139	Screw (Flywheel)	1266	●691917	Seal—O Ring (Intake Elbow)
1029	691751	Arm—Rocker	1051	691265	Ring—Retaining	1266A	●697123	Seal—O Ring (Intake Elbow)
1032	491710	Ball—Oil Pump	1054	280275	Tie—Cable	1267	697424	Latch—Blower Housing (Red)
1034	690822	Guide—Push Rod	1058	275935	Operator's Manual			Used on Type No(s). 0015, 0016, 0019, 0020, 0025, 0028, 0049, 0116, 0120, 0121, 0123.
1035	693784	Shaft—Pump	1070	690372	Screw (Flywheel Fan)			----- Note -----
1036	790465	Label—Emissions (Used After Code Date 04063000)	1090	691293	Retainer—Brush			697419 Latch—Blower Housing (Black)
		----- Note -----	1091	691333	Cap—Limiter			Used on Type No(s). 0125.
		790186	1095	691581	Gasket Set—Valve	1270	697156	Plug—AVS Counterweight
		Label—Emissions (Used After Code Date 03123100 and Before Code Date 04070100).	1119	691183	Screw (Alternator)	1330	272147	Repair Manual
		697221	1127	695407	Screw (Float Bowl)(Nikki)			
		Label—Emissions (Used Before Code Date 04063000)	1263	697124	Reed—Breather			
1040A	697381	Plate—Trim Used on Type No(s). 0025, 0028, 0049, 0116.	1264	697104	Screw (Breather Reed)			

★ Included in Engine Gasket Set—Ref. No. 358.

● Included in Carburetor Overhaul Kit—Ref. No. 121.

◆ Included in Carburetor Gasket Set—Ref. No. 977.

△ Included in Valve Gasket Set—Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**5707-16**

Assemblies include all parts shown in frames.

09/29/2004