

351700

Illustrated Parts List

Model Series

351700

TYPE NUMBERS
0001 through 1148.

TABLE OF CONTENTS

Air Cleaner	8
Alternator	7
Blower Housing	11
Cam	4
Carburetor	5
Controls	7
Crankcase Cover/Sump	2
Crankshaft	4
Cylinder	2
Electric Starter	13
Flywheel	10
Governor Spring	7
Head	6
Ignition	7
Intake Manifold	9
Kit/Gaskets – Carburetor	3
Kit/Gaskets – Engine	3
Kit/Gaskets – Valve	3
Muffler	9
Oil	14
Piston Group	2
Rewind	11
Shrouds	12


BRIGGS & STRATTON











PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.



351700

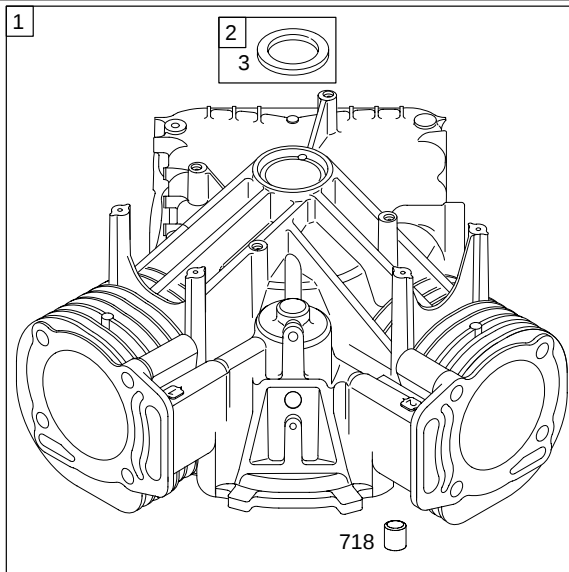




1019 LABEL KIT
1330 REPAIR MANUAL
1058 OWNER'S MANUAL

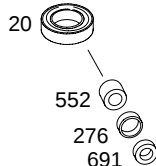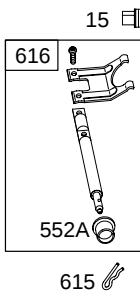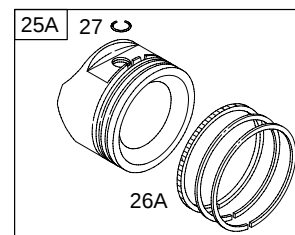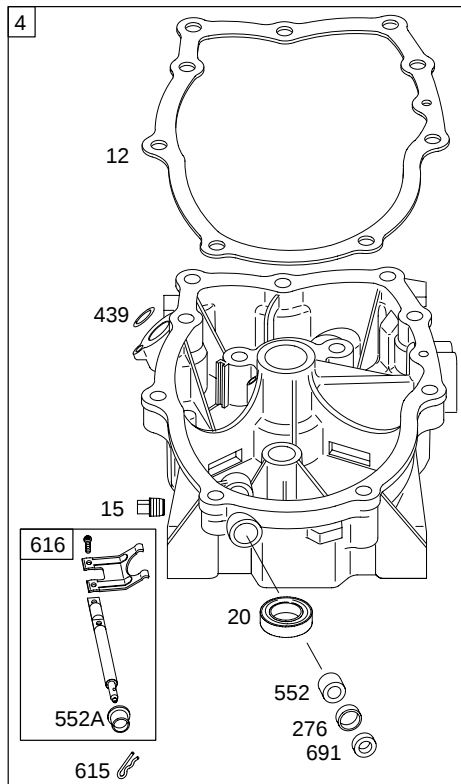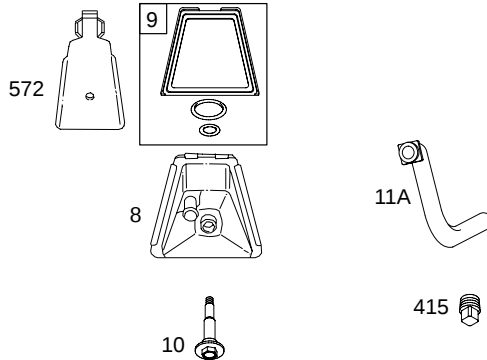









Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
0284-2 Assemblies include all parts shown in frames. 07/2003

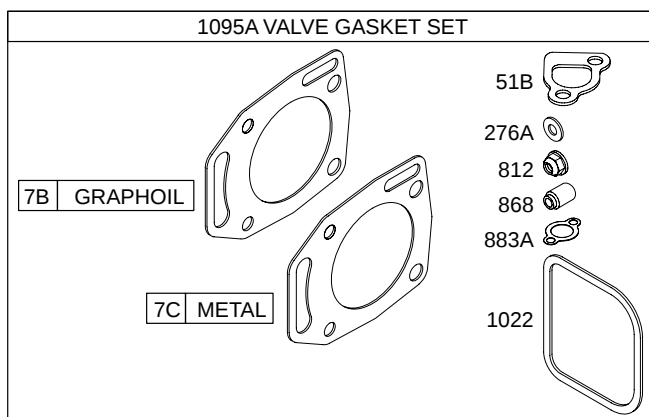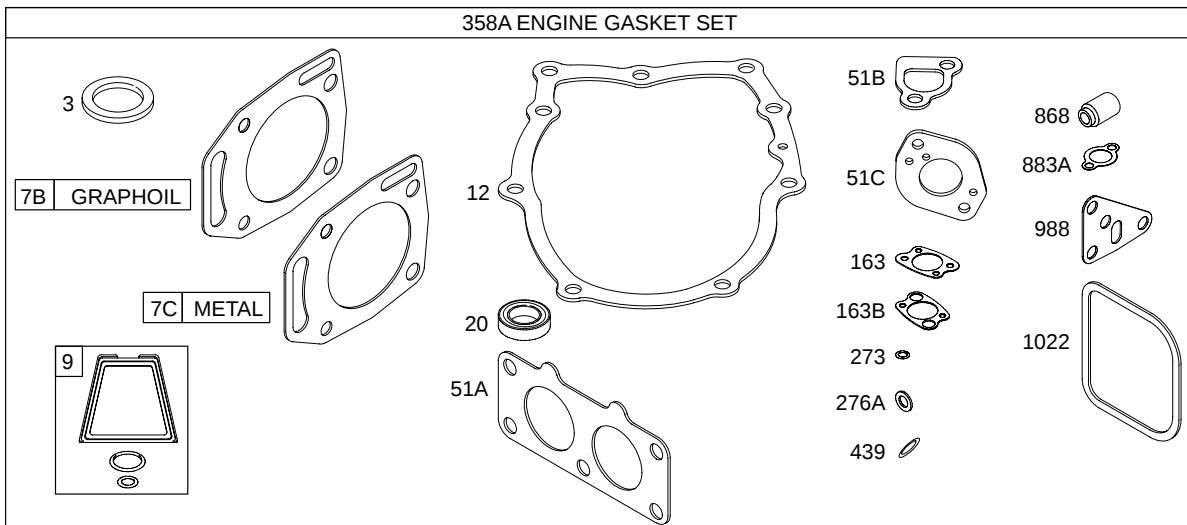


524

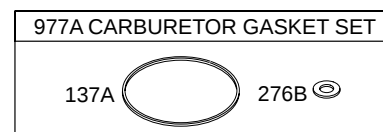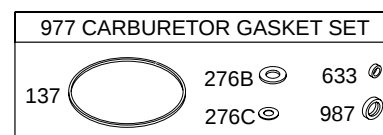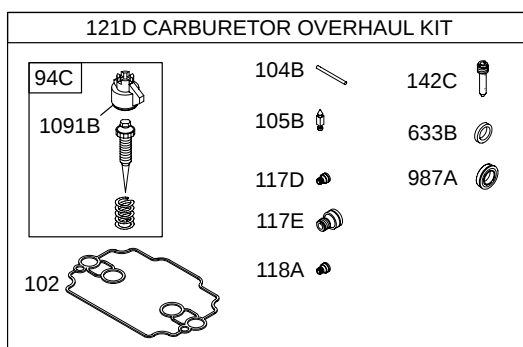


351700

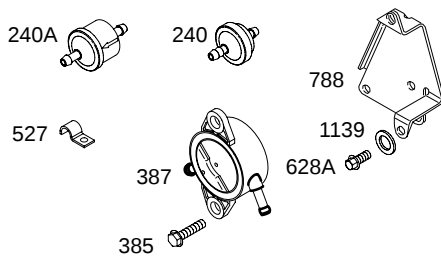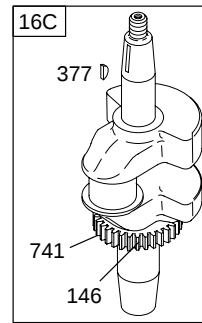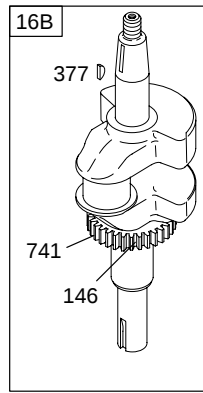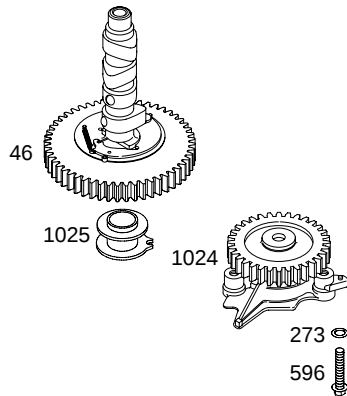

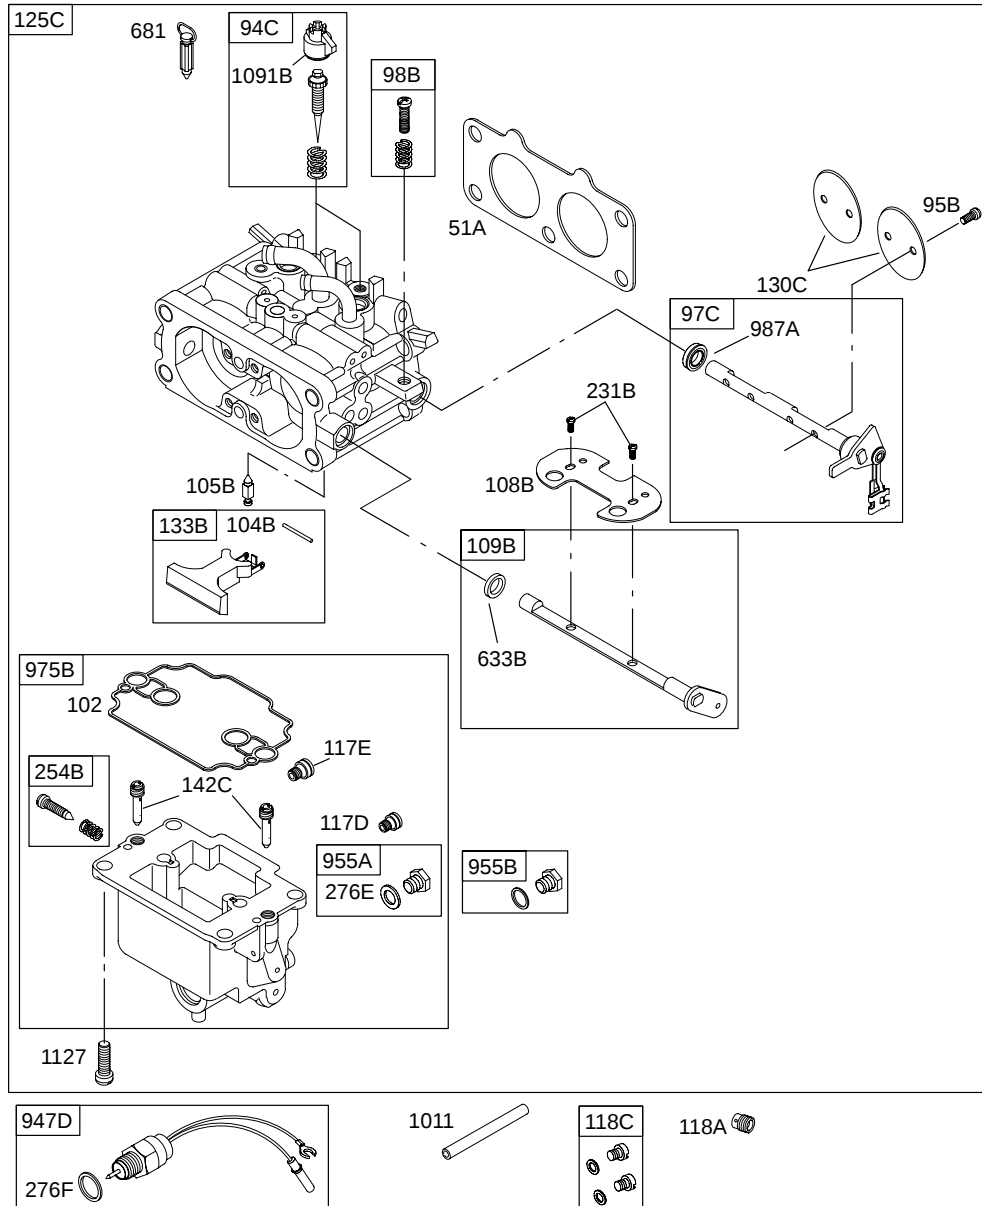


**SEE ADDITIONAL PAGES FOR MORE
CARBURETOR INFORMATION**

351700


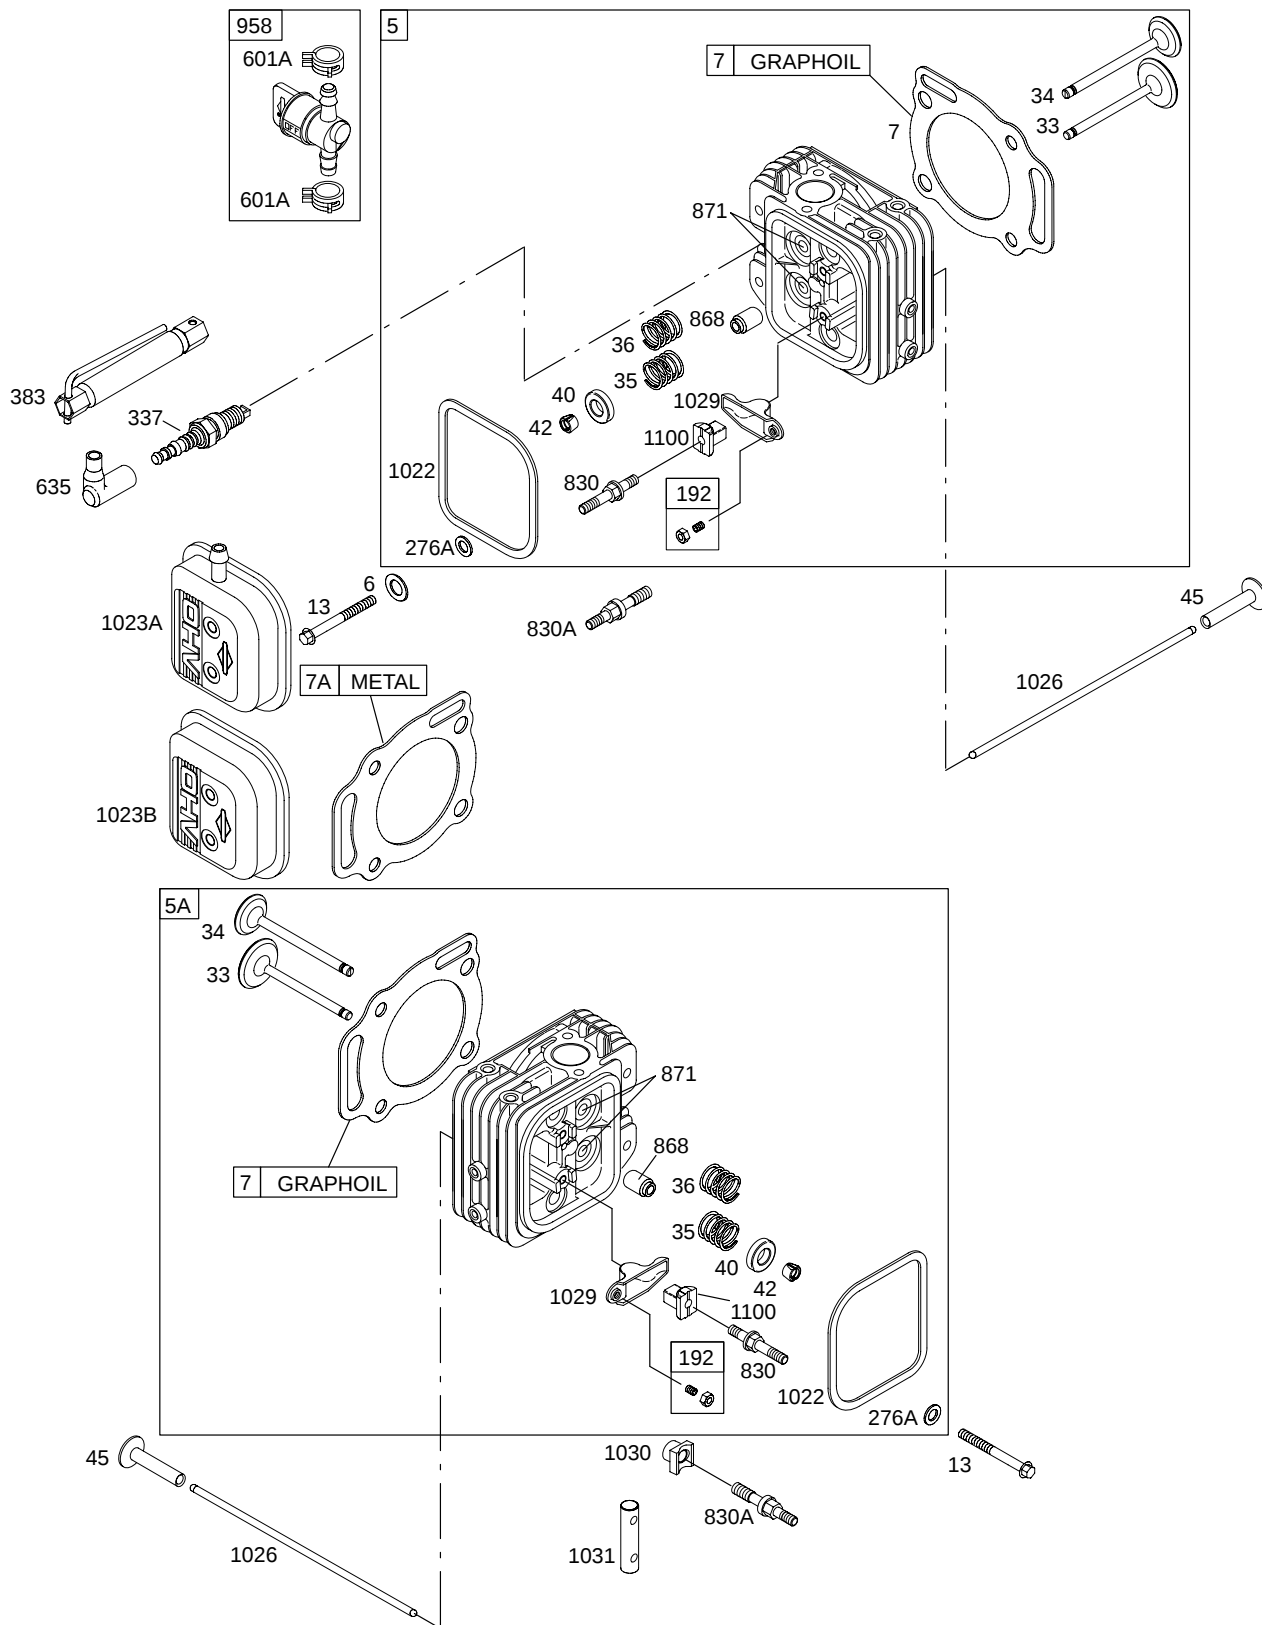


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 0284-6 Assemblies include all parts shown in frames. 07/2003


351700

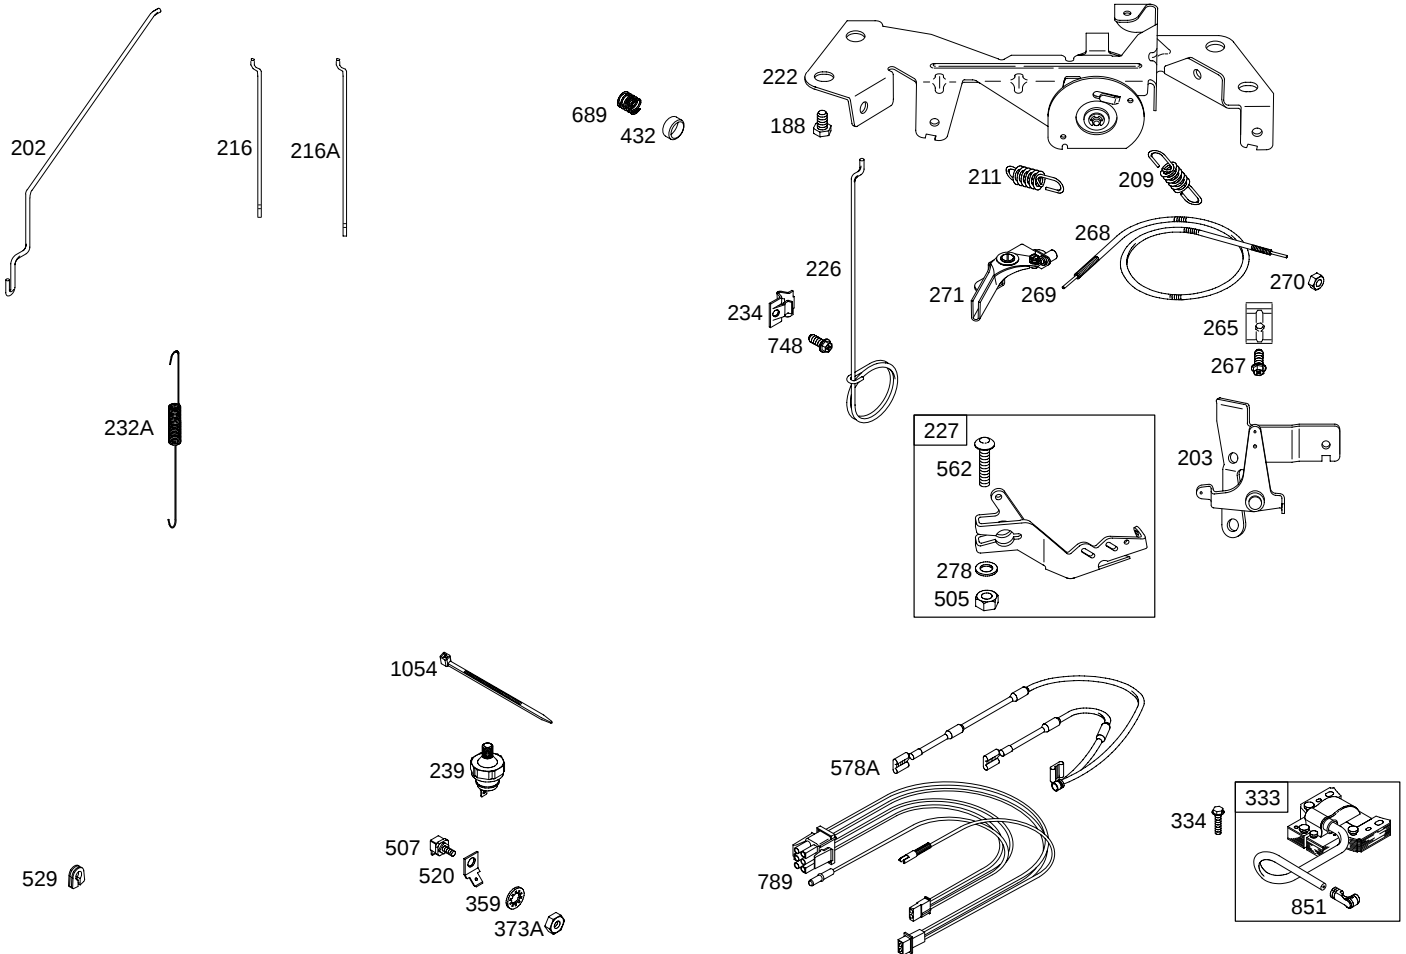


AC ONLY	DC ONLY	DUAL CIRCUIT	TRI CIRCUIT	5 – 9 AMP	10 – 16 AMP	20 AMP
474	474A	474B	474C	474C	474D	474E
578	578	878	878A	578	578	578
NOTE: All stators use a No. 1119 mounting screw. NOTE: The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information.						

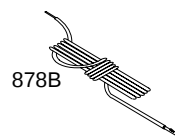

351700

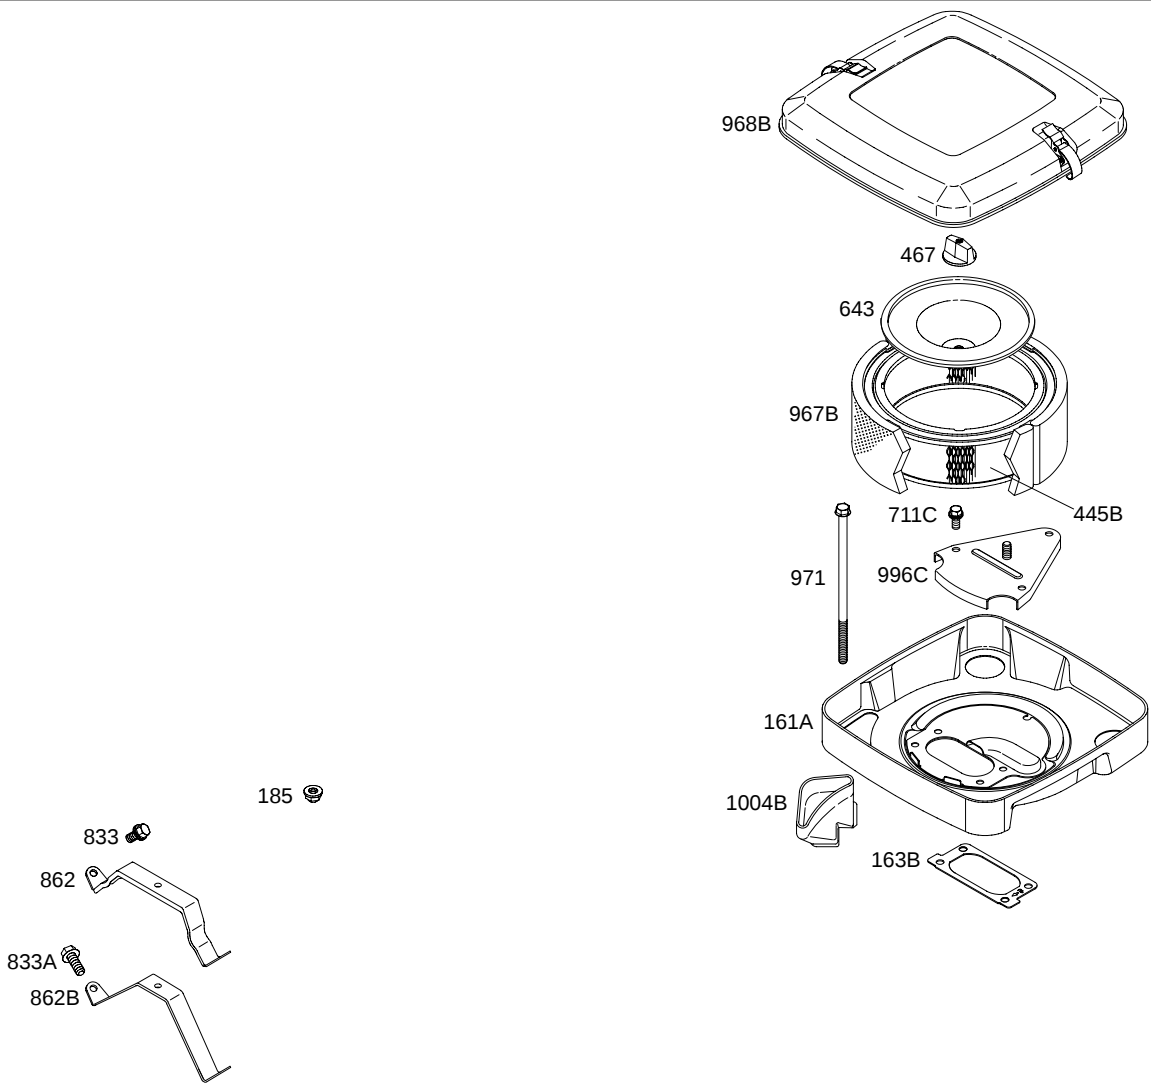


351700

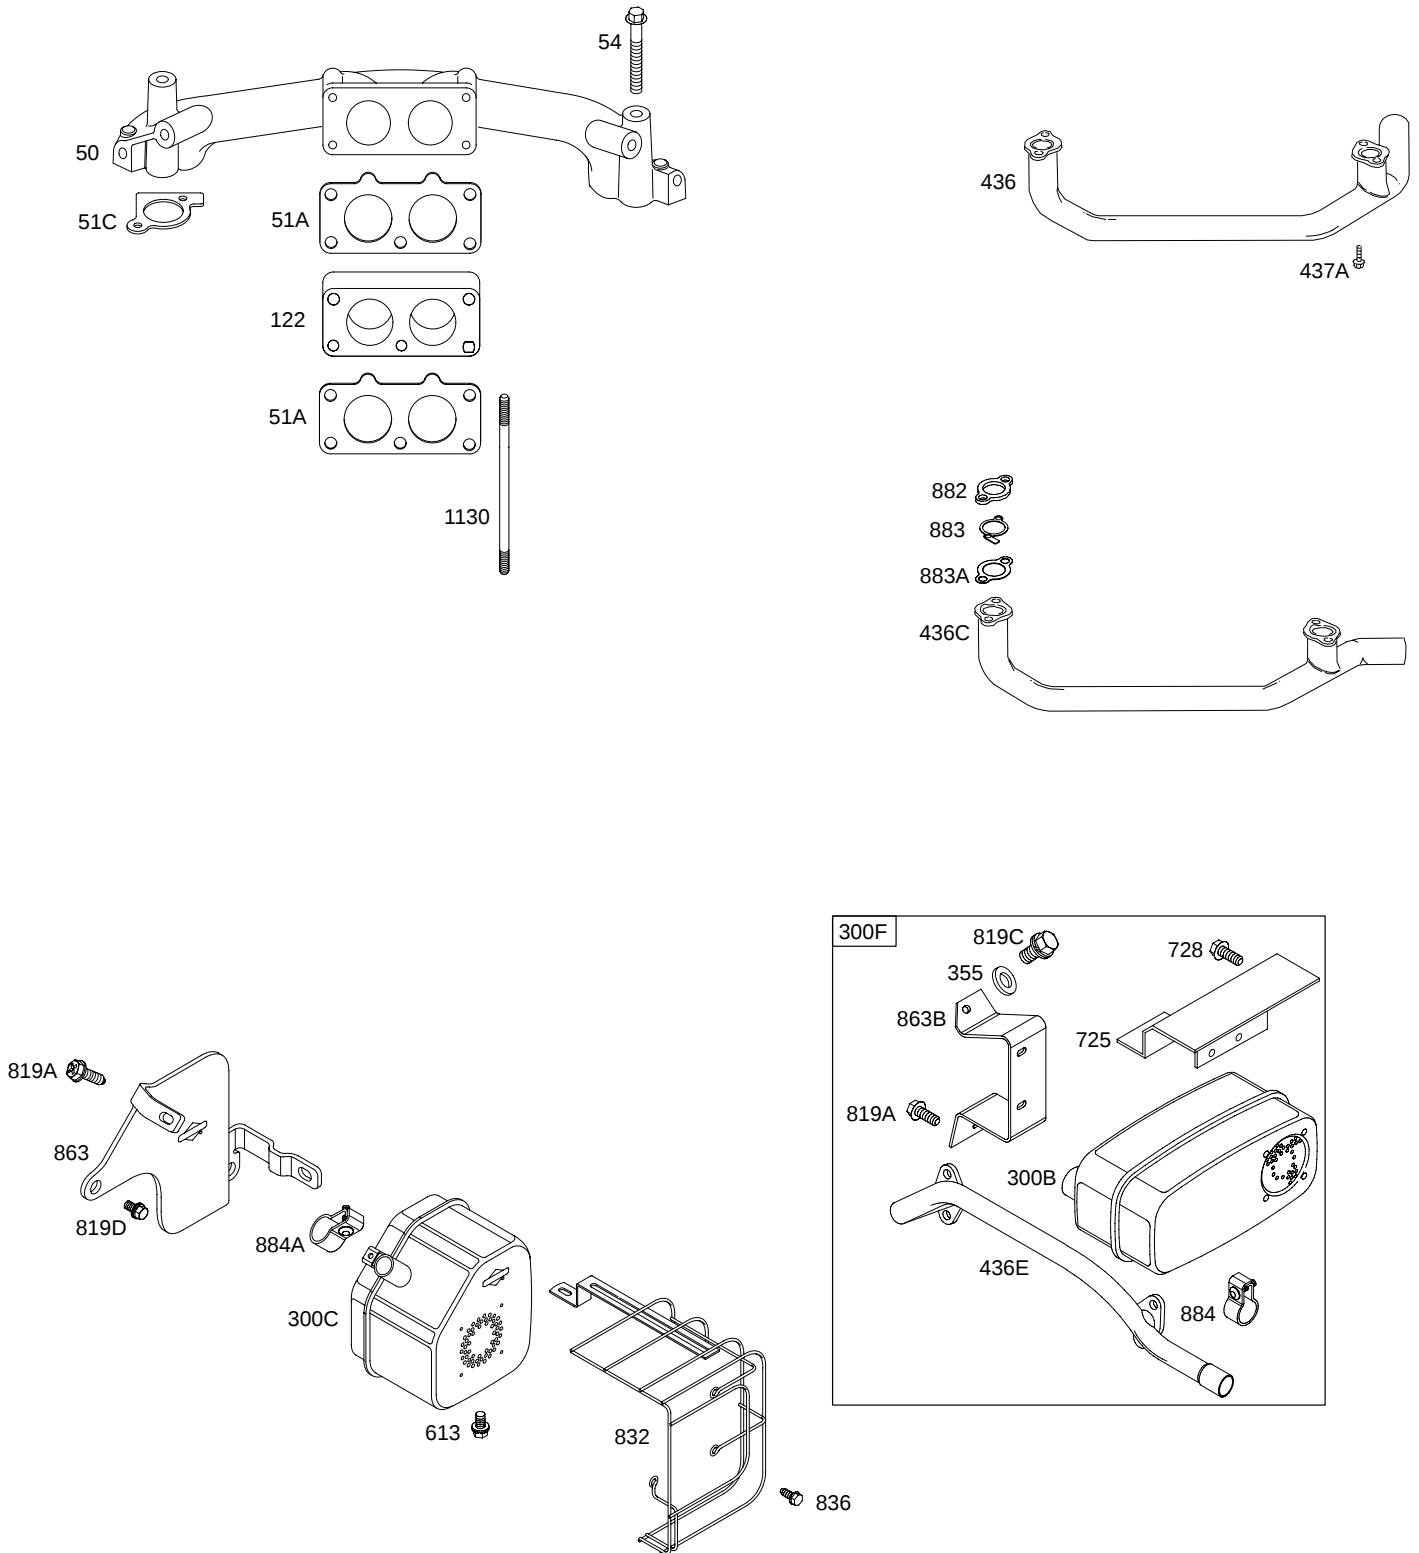


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 0284-9 Assemblies include all parts shown in frames. 07/2003

351700

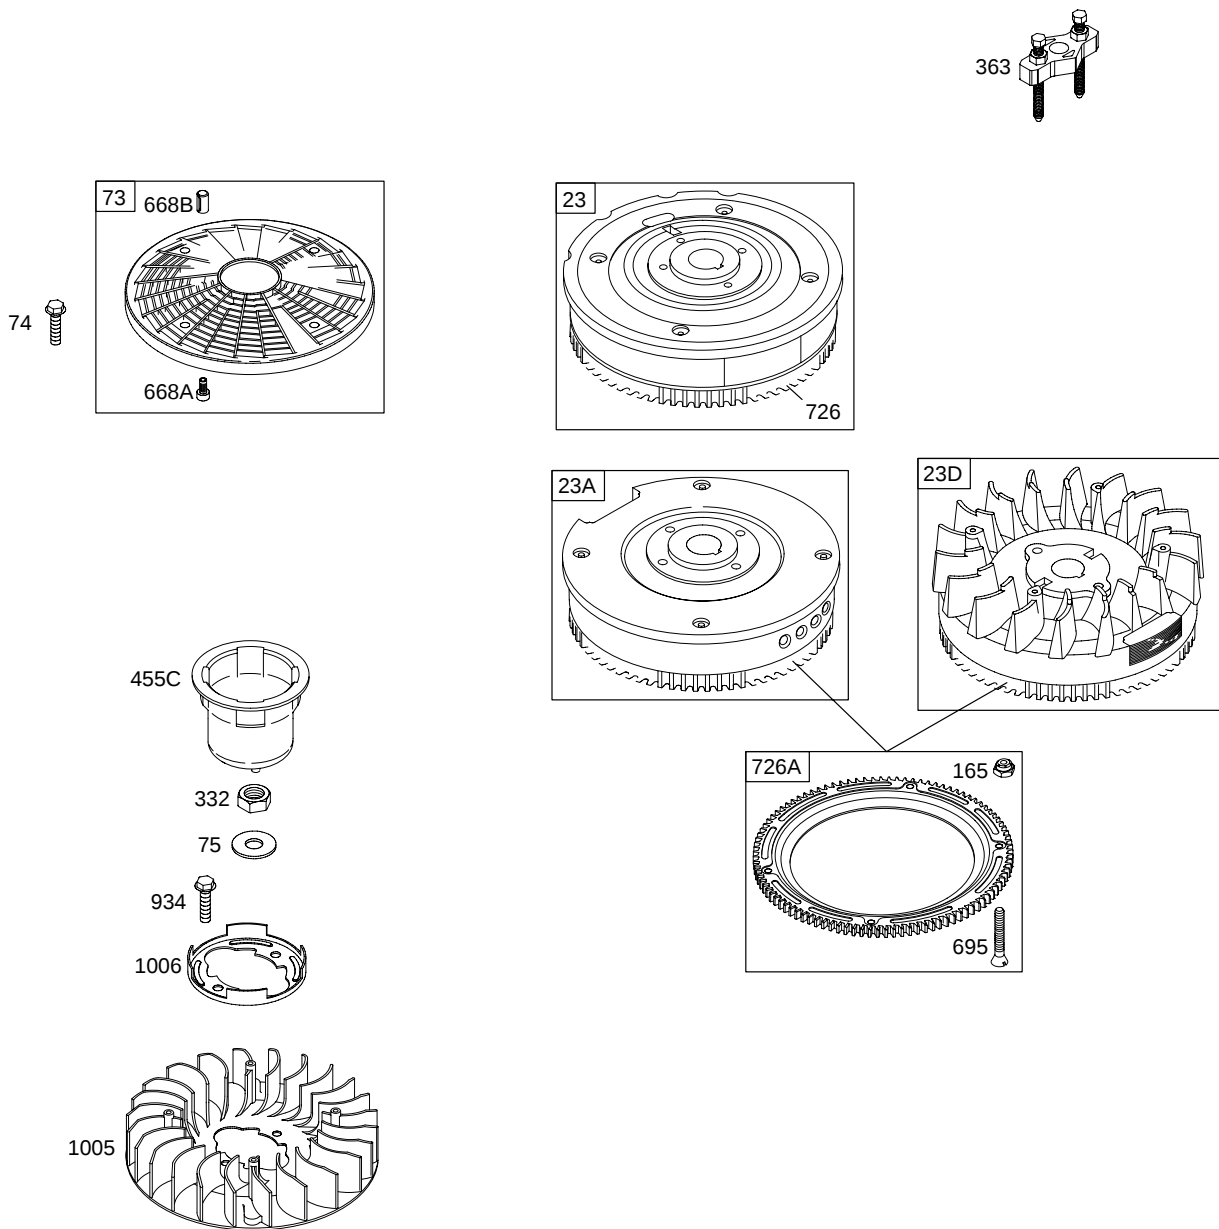


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
0284-10 Assemblies include all parts shown in frames. 07/2003

351700

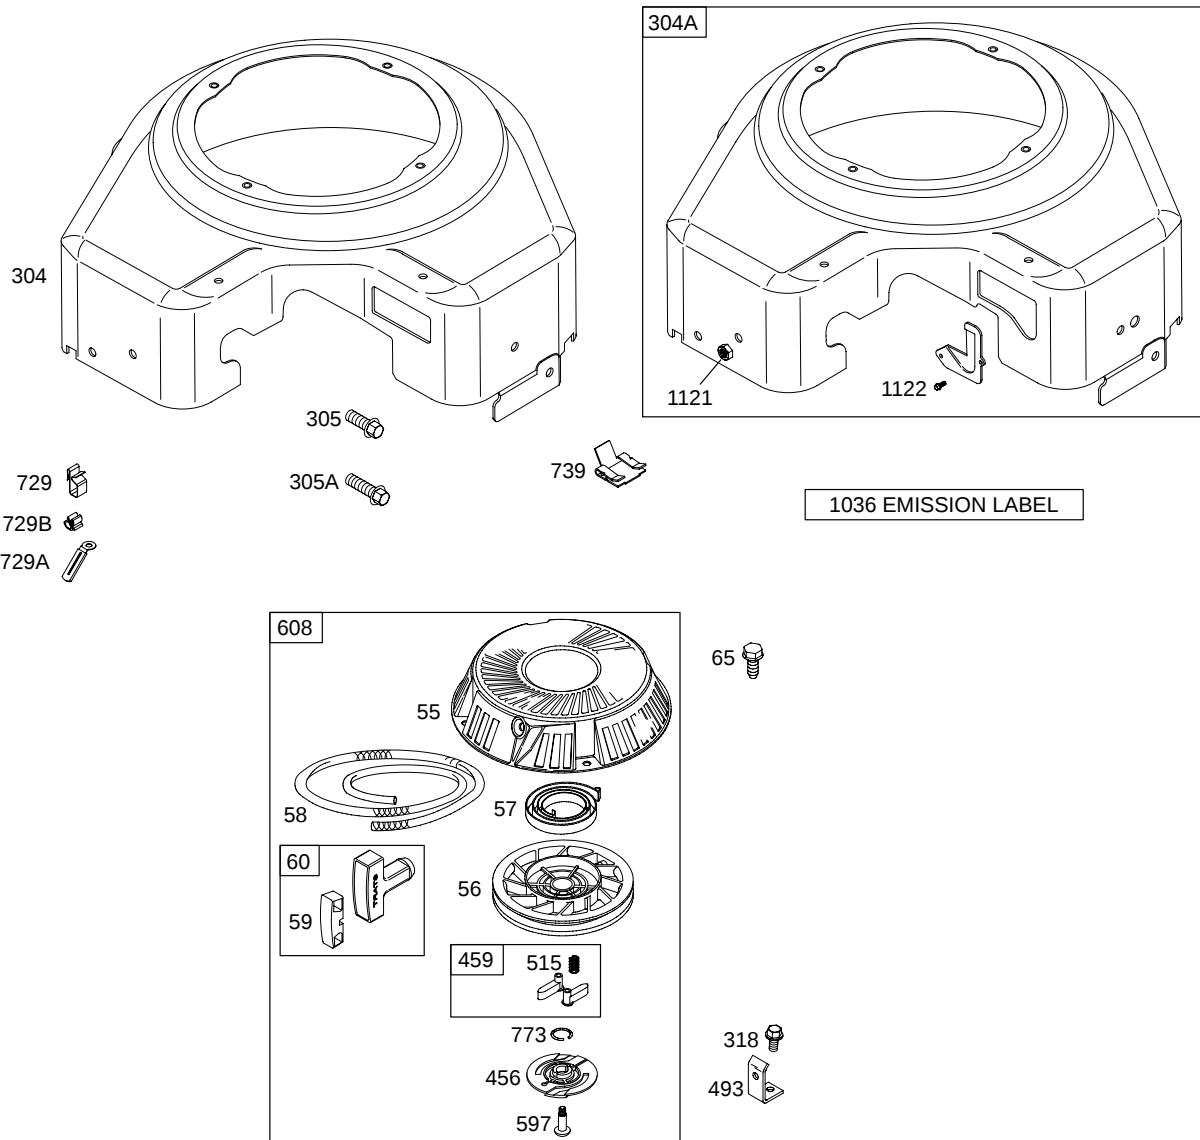


351700

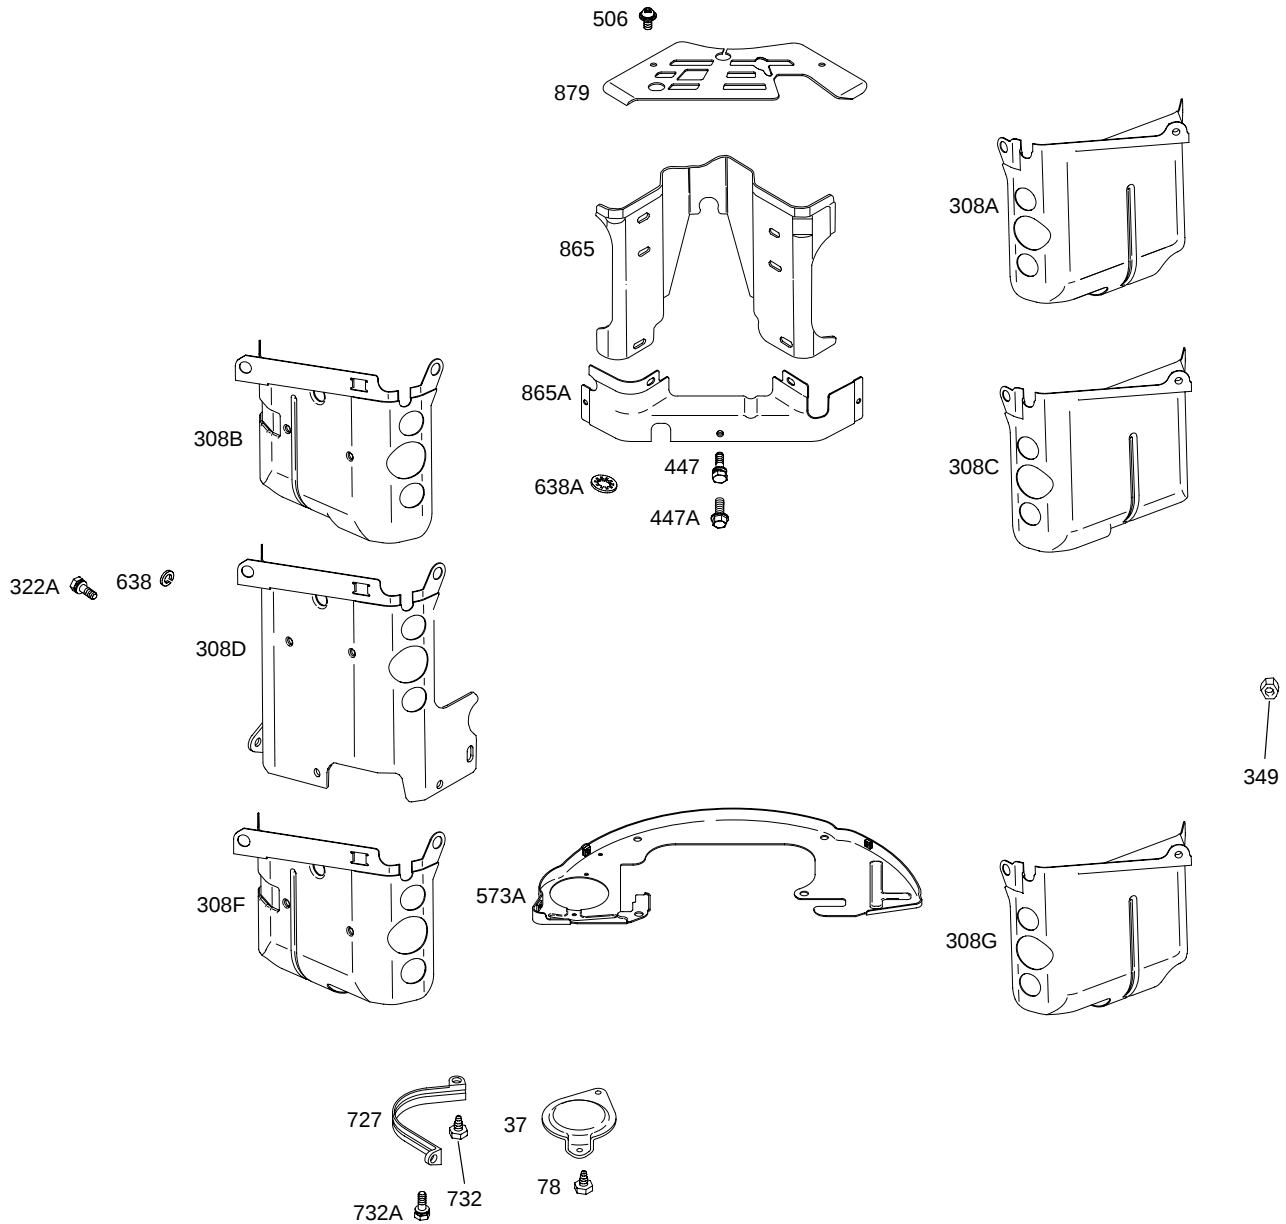


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
0284-12 Assemblies include all parts shown in frames. **07/2003**

697  697A 

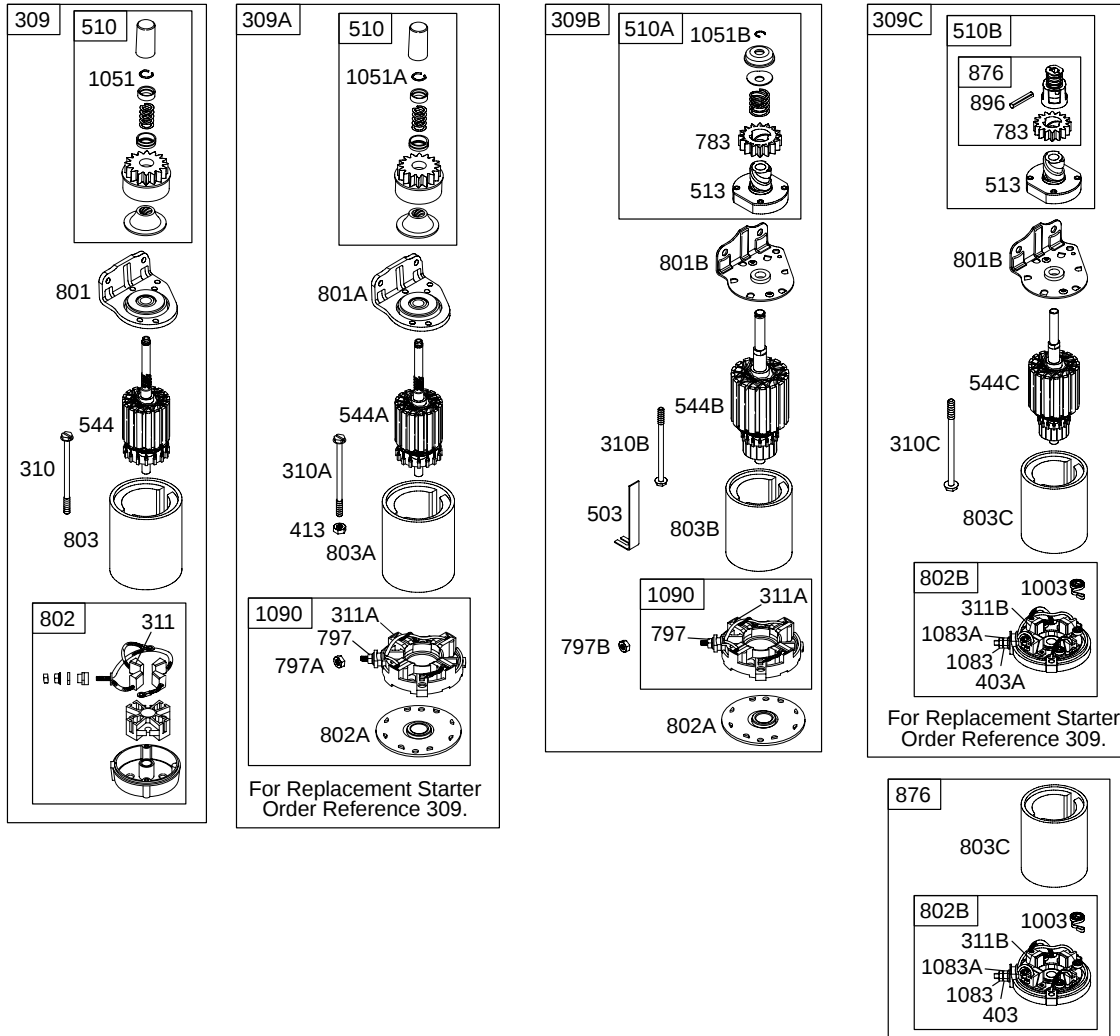

351700

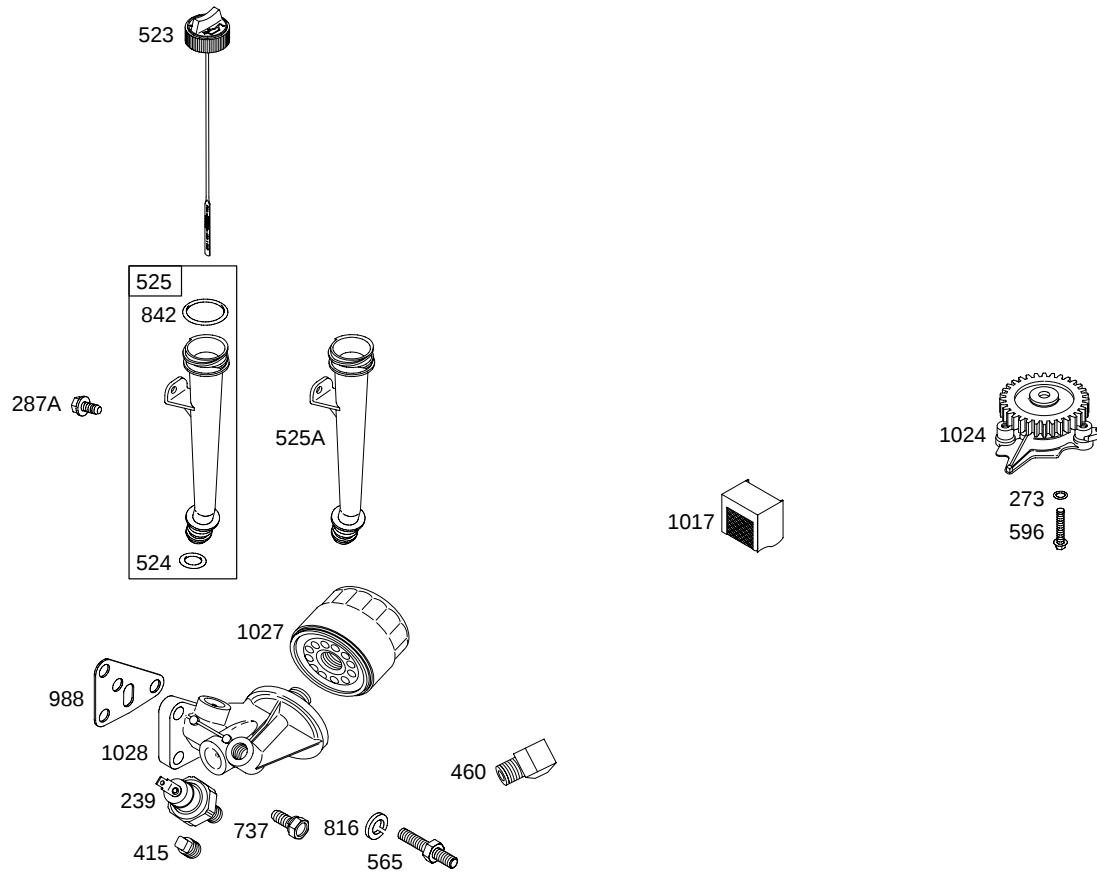

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
0284-14 Assemblies include all parts shown in frames. 07/2003

351700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	692545	Cylinder Assembly (Used After Code Date 97043000). ----- Note ----- 808093 Cylinder Assembly (Used Before Code Date 97050100).	13	692059	Screw (Cylinder Head) (86 mm Long) (Used After Code Date 97043000). ----- Note ----- 805890 Screw (Cylinder Head) (108 mm Long) (Used Before Code Date 97050100). 805959 Screw (Cylinder Head) (100 mm Long) (Used Before Code Date 97050100).	23	808768	Flywheel (Steel Ring Gear) ----- Note ----- 808772 Flywheel (Steel Ring Gear) Used on Type No(s). 1143. 808776 Flywheel (Steel Ring Gear) Used on Type No(s). 1141, 1142.
2	808534	Kit-Bushing/Seal (Magneto Side) (Used After Code Date 97043000). ----- Note ----- 807687 Kit-Bushing/Seal (Magneto Side) (Used Before Code Date 97050100).	15	690946	Plug-Oil Drain (Square Head)	23A	690922	Flywheel (Rewind Start Only) Used on Type No(s). 1045, 1102.
3	★805101	Seal-Oil (Magneto Side)	16B	692172	Crankshaft (Used After Code Date 97043000). ----- Note ----- 807779 Crankshaft (Used Before Code Date 97050100).	23D	690921	Flywheel (Aluminum Ring Gear)
4	808846	Sump-Engine	16C	809829	Crankshaft (Used After Code Date 03043000). Used on Type No(s). 1134, 1137. ----- Note ----- 808675 Crankshaft (Used Before Code Date 03050100). Used on Type No(s). 1134, 1137.	25A	808326	Piston Assembly (Standard) ----- Note ----- 808336 Piston Assembly (.010" Oversize) 808337 Piston Assembly (.020" Oversize) 808338 Piston Assembly (.030" Oversize)
5	809185	Head-Cylinder (Cylinder 1)				26A	807889	Ring Set (Standard) ----- Note ----- 807994 Ring Set (.010" Oversize) 807995 Ring Set (.020" Oversize) 807996 Ring Set (.030" Oversize)
5A	809186	Head-Cylinder (Cylinder 2)	20	★805049	Seal-Oil (PTO Side)	27	690683	Lock-Piston Pin
6	Δ805193	Washer (Cylinder Head) (Used Before Code Date 94050100).	22	692540	Screw (Crankcase Cover/ Sump)	28A	807886	Pin-Piston
7A	★Δ805653	Gasket-Cylinder Head (Metal) (Used Before Code Date 96040100).				29	807900	Rod-Connecting (Standard) ----- Note ----- 807803 Rod-Connecting (.020" Undersize)
7B	★Δ690888	Gasket-Cylinder Head (Graphoil) (Used After Code Date 96033100).						
8	807893	Breather Assembly						
9	★809094	Gasket-Breather						
10	690751	Screw (Breather Assembly)						
11A	690873	Tube-Breather						
12	★691684	Gasket-Crankcase						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊘ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

0284-15

Assemblies include all parts shown in frames.

07/2003

351700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
32	690698	Screw (Connecting Rod)	102	●693711	Gasket–Carburetor Bod	202	690867	Link–Mechanical Governor
33	807681	Valve–Exhaust	104B	●690882	Pin–Float Hinge	203	690923	Crank–Bell
34	807680	Valve–Intake	105B	●808798	Valve–Float Needle (Used After Code Date 99031600).	209	692070	Spring–Governor (Red)
35	692084	Spring–Valve (Intake)			----- Note -----			
36	692084	Spring–Valve (Exhaust)			692078 Valve–Float Needle			692071 Spring– Governor (White)
37	690715	Guard–Flywheel (Black)			(Used Before Code Date 99031700).			Used on Type No(s). 0036, 1036, 1114, 1123, 1139.
40	692058	Retainer–Valve	108B	690883	Valve–Choke			691508 Spring– Governor (Blue)
42	807683	Keeper–Valve	109B	808181	Shaft–Choke			Used on Type No(s). 1126, 1144, 1145.
45	690977	Tappet–Valve	117D	●690881	Jet–Main (Standard) (Cylinder 2)			690710 Spring– Governor (Silver)
46	691557	Camshaft						Used on Type No(s). 1135, 1138, 1140.
50	690886	Manifold–Intake	117E	●690880	Jet–Main (Standard) (Cylinder 1)			691507 Spring– Governor (Brown)
51A	★690950	Gasket–Intake (Manifold/Carburetor)						Used on Type No(s). 1134.
51C	★△692035	Gasket–Intake (Manifold/Heads)	118C	808406	Jet–Main (High Altitude)			692072 Spring Governor (Purple)
54	690676	Screw (Intake Manifold)	121D	808265	Kit–Carburetor Overhaul			Used on Type No(s). 1128.
55	691568	Housing–Rewind Starter	122	690870	Spacer–Carburetor	211	692069	Spring–Governed Idle
56	692085	Pulley–Starter	125C	808266	Carburetor	216	690705	Link–Choke
57	692086	Spring–Rewind Starter	130C	690884	Valve–Throttle	216A	690871	Link–Choke
58	66574	Rope–Starter (Cut to Required Length)	133B	808180	Float–Carburetor	222	808454	Bracket–Control
59	805957	Insert–Grip	142C	●690879	Nozzle–Carburetor (Standard)	226	692075	Rod–Hand Choke
60	808167	Grip–Starter Rope	146	691639	Key–Timing	227	690236	Lever–Governor Control
65	691982	Screw (Rewind Starter)	161A	690916	Base–Air Cleaner (Metal)	231B	690718	Screw (Choke Valve)
73	494439	Screen–Rotating	163B	★692087	Gasket–Air Cleaner (Used With Metal Air Cleaner Base)	232A	690874	Spring–Governor Link
74	691647	Screw (Rotating Screen)				234	691723	Clip–Control Rod
75	691490	Washer (Flywheel) (Used Before Code Date 95051500).	165	693148	Nut (Ring Gear)	239	690233	Switch–Oil Pressure (Oil Guard Only)
78	690688	Screw (Flywheel Guard)	185	690939	Nut (Air Cleaner Base)	240 A	691035	Filter–Fuel (40 Microns)
94C	●808257	Kit–Idle Mixture	187	691050	Line–Fuel	254B	808178	Drain–Carburetor Bowl
94D	494923	Kit–Idle Mixture Used on Type No(s). 0045, 1045.	187A	296004	Line–Fuel (Cut to Required Length)			
95B	690718	Screw (Throttle Valve)	187C	691049	Line–Fuel (Molded)			
97C	808719	Shaft–Throttle	188	692056	Screw (Control Bracket)			
98B	808177	Kit–Idle Speed	192	807623	Adjuster Rocker Arm			

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

Ø Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

0284–16

Assemblies include all parts shown in frames.

07/2003

351700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
265	691024	Clamp—Casing	305	692056	Screw	309	691564	Motor—Starter
267	692083	Screw (Casing Clamp)			(Blower Housing)			(Steel Ring Gear Only)
		----- Note -----	305A	692062	Screw	309A		Motor—Starter
	695134	Screw			(Blower Housing)			(For Replacement
		(Casing Clamp)	308A	806546	Cover—Cylinder Head	309B	499521	Motor—Starter
		Used on Type No(s).			(Cylinder 2)			(Services Aluminum
268	691025	Casing—Control Wire			(Used After Code Date	309C		Ring Gear Only)
		(Cut to Required	308B	806547	98120100).			Motor—Starter
		Length)			Cover—Cylinder Head			(Services Aluminum
269	691026	Wire—Control			(Cylinder 1)			Ring Gear Only)
		(Cut to Required			(Used Before Code			(For Replacement
		Length)			Date 98113000).			Starter Motor, See
270	691027	Nut	308C	690913	Cover—Cylinder Head			Ref 309B)
		(Control Wire Casing)			(Cylinder 2)	310	496880	Bolt
271	691028	Lever—Control			(Used Before Code			(Starter Motor)
273	★690681	Seal—O Ring			Date 98113000).	310A	690323	Bolt
		(Oil Pump)	308D	806545	Cover—Cylinder Head			(Starter Motor)
276	690704	Washer—Sealing			(Cylinder 1)	310B	691263	Bolt
		(Crankcase Cover/			(Used After Code Date			(Starter Motor)
		Sump)			98120100).	310C	692329	Bolt
276A	★Δ807085	Washer—Sealing			Used on Type No(s).			(Starter Motor)
		(Used After Code Date			1126.	311	496887	Brush Set
		01120200).			----- Note -----	311A	497608	Brush Set
		----- Note -----			691576 Cover—	311B	490311	Brush Set
	691766	Washer—Seal-			Cylinder Head			(4 9/16"
		ing			(Cylinder 1)			Housing Length)
		(Rocker Cover)			(Used Before Code	318	692539	Screw
		(Used Before Code			Date 98113000).			(Mounting Bracket)
		Date 01120300).			Used on Type No(s).	322A	692539	Screw
276E	690724	Washer—Sealing			1126.			(Cylinder Head Cover)
276F	693497	Washer—Sealing	308F	806547	Cover—Cylinder Head	332	690887	Nut
278	690237	Washer			(Cylinder 1)			(Flywheel)
		(Governor Control			(Used After Code Date	333	492341	Armature—Magneto
		Lever)			98120100).	334	692066	Screw
287A	807084	Screw	308G	806544	Cover—Cylinder Head			(Magneto Armature)
		(Dipstick Tube)			(Cylinder 2)	337	491055	Plug—Spark
300C	692099	Muffler			(Used After Code Date			
300F	498984	Muffler			98120100).			
		Used on Type No(s).			Used on Type No(s).			
		1141, 1142.			1126.			
304	690915	Housing—Blower			----- Note -----			
		(Red)			691563 Cover—			
304A	690914	Housing—Blower			Cylinder Head			
		(Black)			(Cylinder 2)			
					(Used Before Code			
					Date 98113000).			
					Used on Type No(s).			
					1126.			

★ Included in Engine Gasket Set—Ref. No.358.

● Included in Carburetor Overhaul Kit—Ref. No. 121.

◆ Included in Carburetor Gasket Set—Ref. No. 977.

⊗ Included in Valve Gasket Set—Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**0284-17**

Assemblies include all parts shown in frames.

07/2003

351700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
349	690238	Nut (Cylinder Cover)	447	692539	Screw (Air Guide Cover)	526A	690717	Screw (Regulator)
357	691483	Key–Drive Pulley	447A	692067	Screw (Air Guide Cover)	527	690423	Clamp–Tube
358A	808389	Gasket Set–Engine	455C	690864	Cup–Flywheel	529	690744	Grommet
359	691077	Washer (Ground Terminal)	456	691529	Plate–Pawl Friction	544	690855	Armature–Starter
363	19203	Puller Flywheel	459	808166	Pawl–Ratchet	544A	693548	Armature–Starter
373A	691612	Nut (Ground Terminal)	467	691985	Knob–Air Cleaner	544B		Armature–Starter (Serviced By 499521 Starter Motor Only)
377	808095	Key–Woodruff	474C	696457	Alternator (Tri Circuit)	544C	490309	Armature–Starter
383	19374	Wrench–Spark Plug	474D	696458	Alternator (Regulated)	552	690701	Bushing–Governor Crank
385	693169	Screw (Fuel Pump)	474E	696579	Alternator (20 Amp) Used on Type No(s). 1143.	552A	806686	Bushing–Governor Crank (Used After Code Date 99072000).
		----- Note -----				552B	690702	Bushing–Governor Crank (Used Before Code Date 99072100).
		807084 Screw (Fuel Pump)	493	691503	Bracket–Mounting			
387	808656	Pump–Fuel	501	691185	Regulator (3 Wire)(16 Amp)	562	690239	Bolt (Governor Control Lever)
403A	690288	Washer (End Cap)	501A	691188	Regulator (2 Wire)(9 Amp)	565	690682	Stud (Oil Filter Adapter)
413	693587	Nut (Starter Motor)	503	691532	Strap–Starter	572	690686	Baffle–Breather
415	690283	Plug (Square Head)	505	690238	Nut (Governor Control Lever)	573A	690902	Plate–Back
436	691502	Manifold–Exhaust Used on Type No(s). 1141, 1142.	506	690677	Screw (Carburetor Cover)	578	692306	Wire Assembly (1 Wire, 48–1/2” Long)(Snap Connect Female Pin Socket, And Bare Wire End)
436C	691501	Manifold–Exhaust	507	691972	Insulator	578A	692319	Wire Assembly (With Diodes)
437A	691902	Screw (Exhaust Manifold)	510	496881	Drive–Starter	596	691492	Screw (Oil Pump)
439	★692154	Seal–O Ring (Crankcase Cover/Sump) (Used After Code Date 97043000).	510A	497606	Drive–Starter	597	690876	Screw (Pawl Friction Plate)
		----- Note -----	510B	495878	Drive–Starter			
		★805198 Seal–O Ring (Crankcase Cover/Sump) (Used Before Code Date 97050100).	513	692024	Clutch–Drive			
			515	691528	Spring–Pawl			
			520	691084	Terminal–Ground (Brass)			
			523	692101	Dipstick			
			524	692053	Seal–Dipstick Tube			
			525	692093	Tube–Dipstick			
			526	692067	Screw (Regulator)			
					----- Note -----			
445B	394018	Filter–Air Cleaner Cartridge (Round)			691547 Screw (Regulator) Used on Type No(s). 1143.			

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

⊗ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

0284–18

Assemblies include all parts shown in frames.

07/2003

351700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
601A	691038	Clamp–Hose (Black)	695	693109	Screw (Ring Gear)	801A	808778	Cap–Drive
601B	691638	Clamp–Hose Used on Type No(s). 1126, 1140, 1144, 1145.	697	692062	Screw (Drive Cap)	801B	691429	Cap–Drive
608	692102	Starter–Rewind	711C	691492	Screw (Carburetor Shield))	802	496813	Cap–End
613A	690297	Screw Used on Type No(s). 1141, 1142.	718	806469	Pin–Locating	802A	691286	Cap–End
615	691550	Retainer–Governor Shaft (Used After Code Date 99072000).	726		Gear–Ring (Steel) (Sold in Flywheel Kit Only, Ref 23)	802B	494988	Cap–End (4 3/8" Housing Length)
615A	805417	Retainer–Governor Shaft (Used Before Code Date 99072100).	726A	807805	Gear–Ring (Aluminum)	----- Note -----		
616	806685	Crank–Governor (Used After Code Date 99072000).	727	690714	Cover–Starter Drive (Black)	803	690854	Housing–Starter
616A	690899	Crank–Governor (Used Before Code Date 99072100).	729	805827	Clip–Wire Used on Type No(s). 1126, 1140, 1144, 1145.	803A	693547	Housing–Starter
628A	692062	Screw (Fuel Pump Bracket)	729B	690586	Clip–Wire (Snap In Nylon)	803B		Housing–Starter (Serviced By 499521 Starter Motor Only)
----- Note -----			732	690688	Screw (Starter Drive Cover)	803C	494205	Housing–Starter (4 3/8" Housing Length)
633B	690722	Seal–Choke/Throttle Shaft	732A	692539	Screw (Starter Drive Cover)	----- Note -----		
635	692076	Boot–Spark Plug	737	690679	Screw (Oil Filter Adapter)	812	Δ807084	Nut (Rocker Arm Cover) (Used After Code Date 01120200).
638	690706	Washer (Cylinder Cover)	739	690451	Clip–Debris	----- Note -----		
638A	691551	Washer (Cylinder Cover)	741	691530	Gear–Timing	692055		Nut (Rocker Arm Cover) (Used Before Code Date 01120300).
643	692079	Retainer–Air Filter	748	692083	Screw (Control Rod Clip)	816	690706	Washer (Oil Filter Adapter)
668A	691500	Spacer (Knurled Insert)	773	690875	Retainer (Pawl Friction Plate)	819A	692056	Screw (Muffler Bracket)
681	691984	Kit–Needle Valve	783	693059	Gear–Pinion (Services Aluminum Ring Gear Only)	819C	692067	Screw (Muffler Bracket)
691	690680	Seal–Governor Shaft	788	691559	Bracket–Fuel Pump	830	809157	Stud–Rocker Arm
			789	695050	Harness–Wiring Used on Type No(s). 1145.	830A	691497	Stud–Rocker Arm
			797	693167	Nut (Brush Retainer)	832	692361	Guard, Muffler Used on Type No(s). 1141, 1142.
			797A	691029	Nut (Brush Retainer)			
			801	808777	Cap–Drive			

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

⊘ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**0284–19**

Assemblies include all parts shown in frames.

07/2003

351700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
833	807084	Screw (Air Cleaner Mounting Strap/Stud) (Used After Code Date 97103100).	879	690757	Cover–Carburetor	1005	809441	Fan–Flywheel (Used After Code Date 03043000).
833A	692539	Screw (Air Cleaner Mounting Strap/Stud) ----- Note ----- 807163 Screw (Air Cleaner Mounting Strap/Stud)	883A	★△691613	Gasket–Exhaust			----- Note ----- 690911 Fan–Flywheel (Used Before Code Date 03050100 and After Code Date 94032800).
836	690661	Screw (Muffler Guard) Used on Type No(s). 1141, 1142.	884	690898	Clamp–Muffler			808410 Fan–Flywheel (Used Before Code Date 94032900).
842	691870	Seal–O Ring (Dipstick Tube)	884A	691956	Clamp–Muffler Used on Type No(s). 1141, 1142	1006	690452	Retainer–Fan
851	493880	Terminal–Spark Plug	896	691641	Pin–Retainer Drive	1011	692929	Tube–Vent (Cut To Required Length) Used on Type No(s). 1126, 1140, 1144, 1145.
862B	690868	Strap/Stud–Air Cleaner Mounting	918	393815	Hose–Vacuum (Cut to Required Length)	1017	690878	Screen–Oil Pump
863	691513	Bracket–Muffler	934	691058	Screw (Fan Retainer)	1019	808158	Kit–Label
865	690750	Cover–Air Guide (Black)	947D	808624	Solenoid–Fuel	1022	★△806039	Gasket–Rocker Cover
865A	690901	Cover–Air Guide (Black)	955A	807723	Plug–Carburetor (M9)	1023A	691558	Cover–Rocker Arm (Cylinder 1) (With Fuel Pump)
868	△691963	Seal–Valve	955B	808176	Plug–Carburetor (M12)	1023B	691494	Cover–Rocker Arm
871	692057	Bushing–Valve Guide	958	494768	Valve–Fuel Shut Off (Plastic)	1024	693186	Pump–Oil
876	495877	Kit–Pinion Spring	967B	272490	Filter–Pre Cleaner (Round)	1025	690689	Spool–Governor
877B	393537	Wire/Connector–Alternator (Tri Circuit)	968B	692097	Cover–Air Cleaner (Used With Metal Air Cleaner Base)	1026	691836	Rod–Push (Intake) (Steel) ----- Note ----- 691758 Rod–Push (Exhaust) (Aluminum)
878A	691955	Harness–Alternator (Tri Circuit)	971	690866	Screw (Air Cleaner Base To Carburetor)			
878B	691362	Harness–Alternator Used on Type No(s). 1143.	975B	808179	Bowl–Float			
			987A	●692090	Seal–Throttle Shaft			
			988	★692063	Gasket–Oil Adapter			
			996C	690917	Shield–Carburetor			
			1003	490316	Spring–Brush			
			1004B	690865	Duct–Air (Used With Metal Air Cleaner Base)			

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

⊘ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

0284–20

Assemblies include all parts shown in frames.

07/2003

351700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1027	492932	Filter—Oil (2 1/4" Long) (Used After Code Date 95020500). ----- Note ----- 491056 Filter—Oil (3 1/4" Long) (Used Before Code Date 95020600).	1036	806886	Label—Emission (Used After Code Date 00063000). ----- Note ----- 806698 Label— Emission (Used After Code Date 98123100 and Before Code Date 99100100). 806637 Label— Emission (Used After Code Date 98111800 and Before Code Date 99010100). 806636 Label— Emission (Used After Code Date 98111800 and Before Code Date 99010100). 499374 Label— Emission (Used After Code Date 97110200 and Before Code Date 98111900). 499373 Label— Emission (Used Before Code Date 97110300).	1051	690736	Ring—Retaining
						1051A	691124	Ring—Retaining
						1051B	691265	Ring—Retaining
						1054	280275	Tie—Cable
						1058	275071	Owner's Manual
						1083	691626	Nut (End Cap)
						1083A	690958	Nut (End Cap)
1028	808235	Adapter—Oil Filter				1090	691293	Retainer—Brush
1029	691543	Arm—Rocker (Used After Code Date 96033100). ----- Note ----- 692103 Arm—Rocker (Used Before Code Date 96040100).				1091B	691516	Cap—Limiter
						1095A	808391	Gasket Set—Valve
						1100	690973	Pivot—Rocker Arm
						1119	691552	Screw (Alternator)
1030	691496	Support—Rocker Arm				1121	810056	Nut (Fuel Pump Bracket)
1031	690693	Shaft—Rocker Arm				1122	93410	Screw (Blower Housing Adapter)
						1127	690885	Screw (Mount Float Bowl To Carburetor Bowl)
						1130	690869	Stud (Intake Manifold)
						1139	806497	Washer (Fuel Pump Bracket)
						1330	272144	Repair Manual

★ Included in Engine Gasket Set—Ref. No.358.

● Included in Carburetor Overhaul Kit—Ref. No. 121.

◆ Included in Carburetor Gasket Set—Ref. No. 977.

⌀ Included in Valve Gasket Set—Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**0284-21**

Assemblies include all parts shown in frames.

07/2003