

# 28BH00

## Illustrated Parts List

### Model Series

# 28BH00

TYPE NUMBERS  
0114.

### TABLE OF CONTENTS


Air Cleaner .....	5
Alternator .....	7
Blower Housing .....	5
Camshaft .....	2
Carburetor .....	4
Controls .....	7
Engine Sump .....	2
Crankshaft .....	2
Cylinder .....	2
Cylinder Head .....	3
Electric Starter .....	7
Exhaust System .....	5
Flywheel .....	6
Fuel Supply .....	4
Gasket Set - Engine .....	2
Gasket Set - Valve .....	3
Governor Spring .....	7
Ignition .....	7
Intake Manifold .....	3
Kit - Carburetor Overhaul. ....	4
Lubrication .....	3
Piston, Rings, Connecting Rod .....	2
Rewind Starter .....	6
Valves .....	3

PRINTED IN U.S.A.




COPYRIGHT by BRIGGS & STRATTON CORPORATION  
 All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

# 28BH00





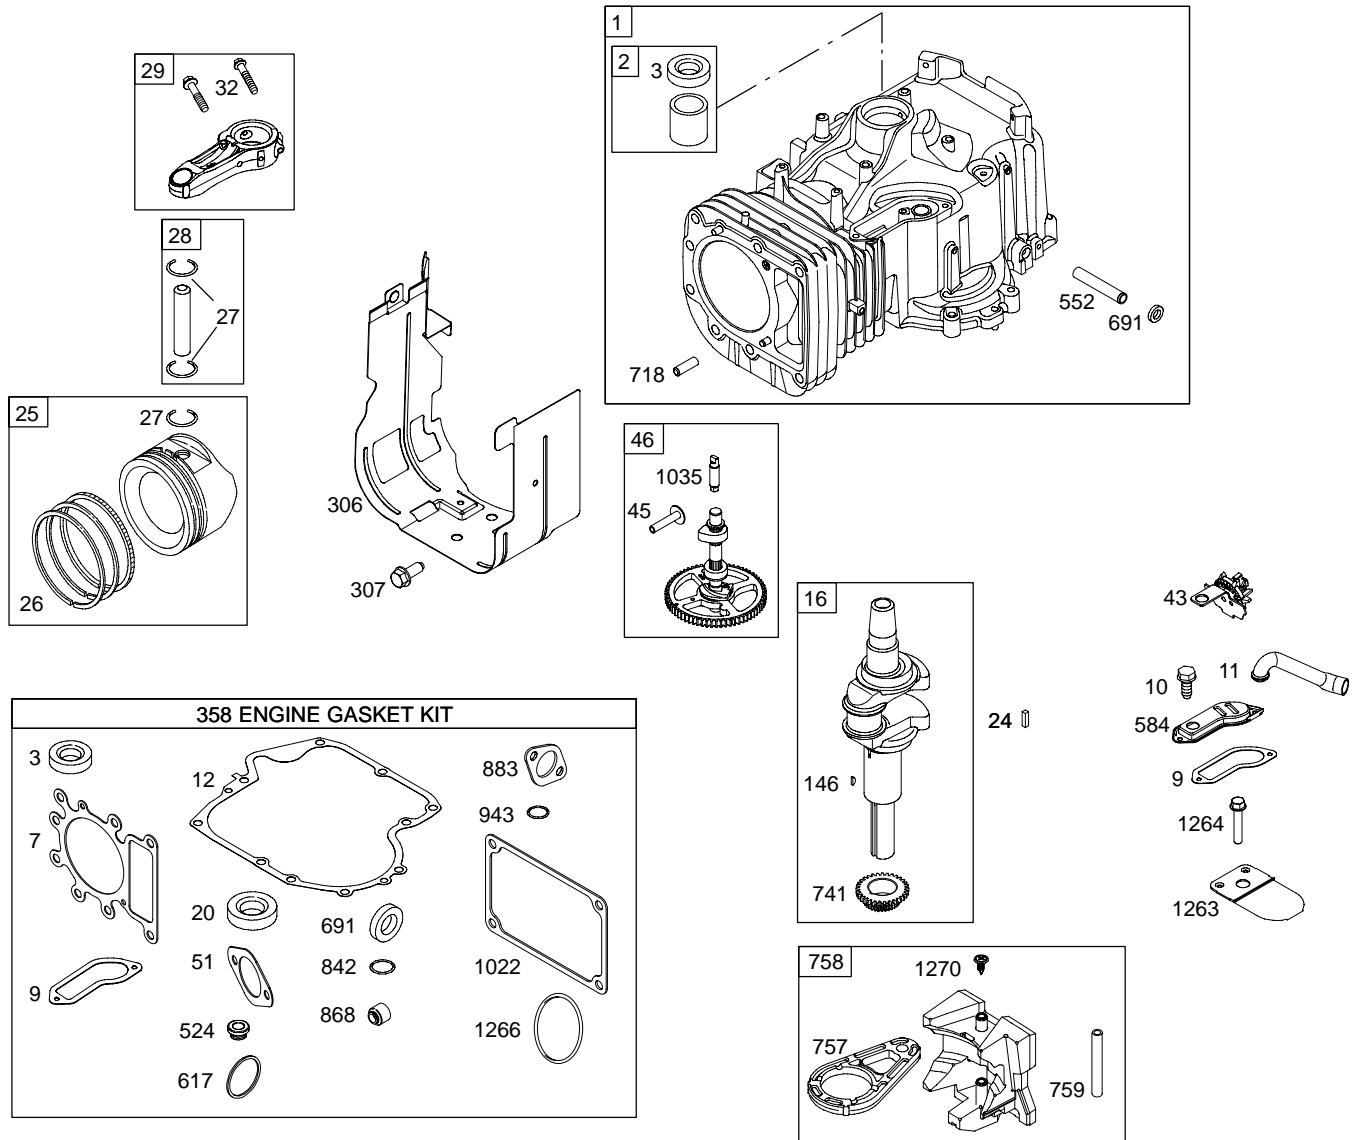


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

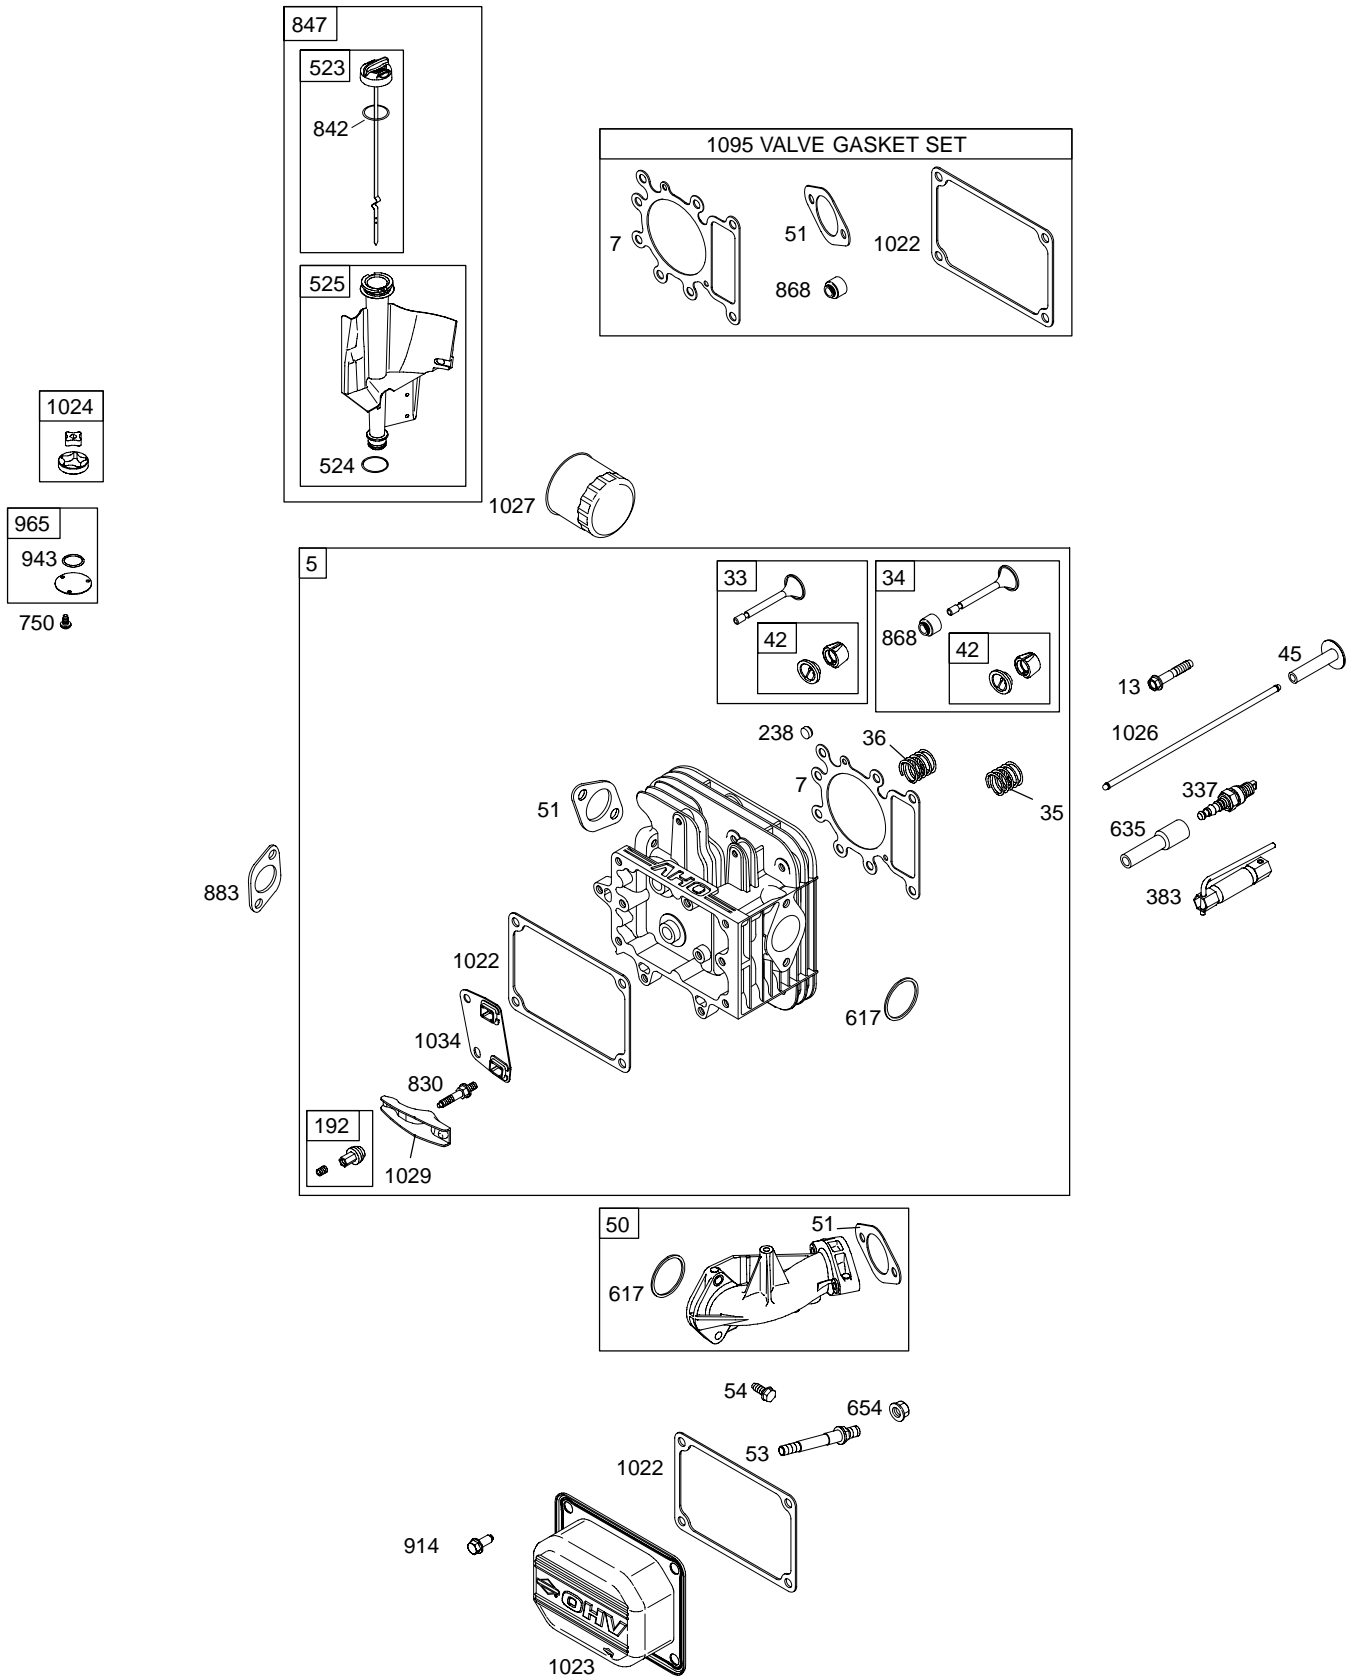


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
 5329-3 Assemblies include all parts shown in frames. 09/09/2005


# 28BH00

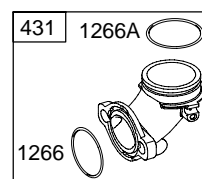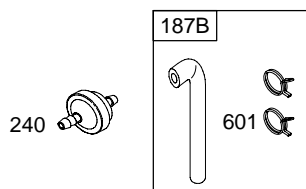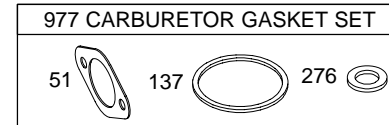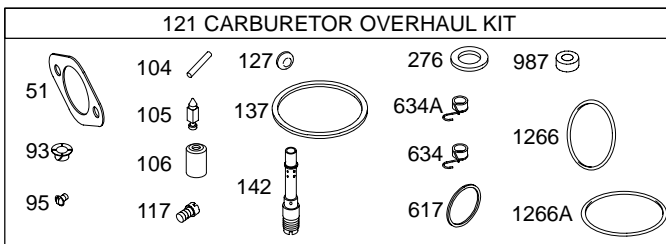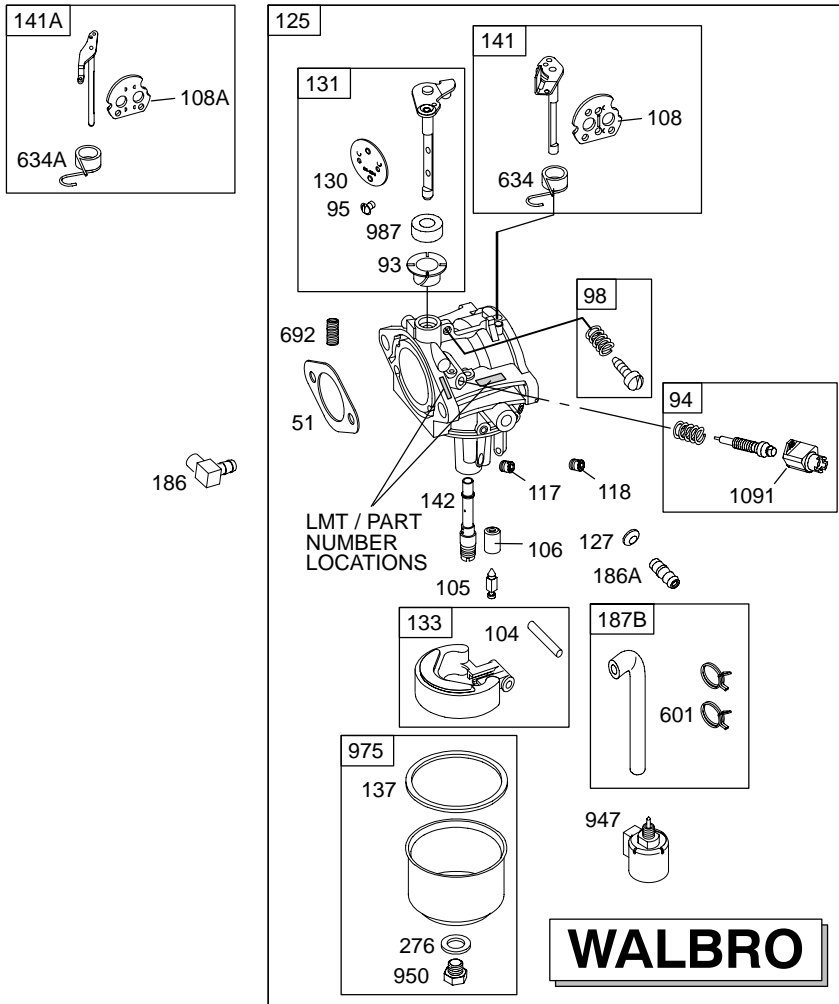

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.




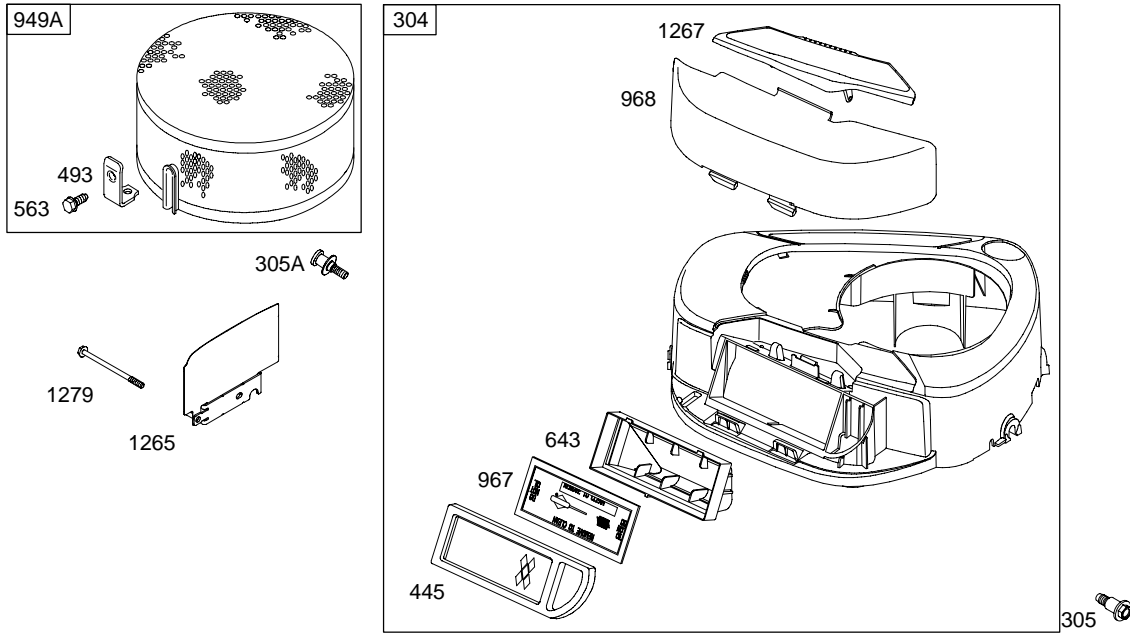



1036 EMISSION LABEL

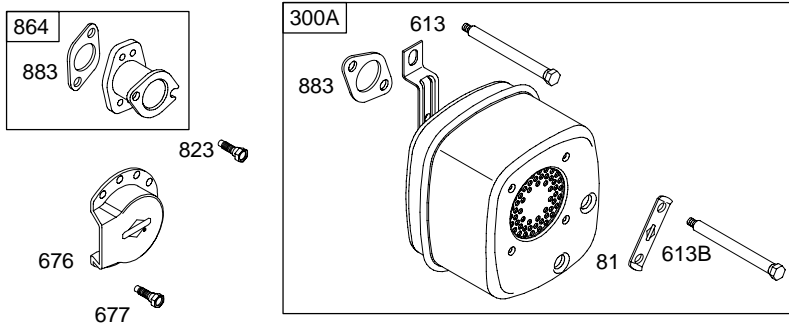


*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.*


# 28BH00

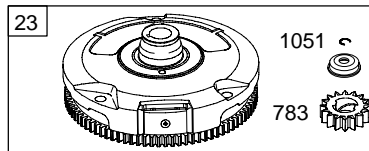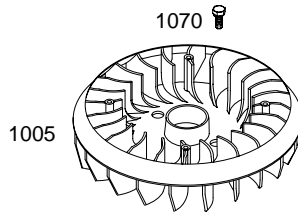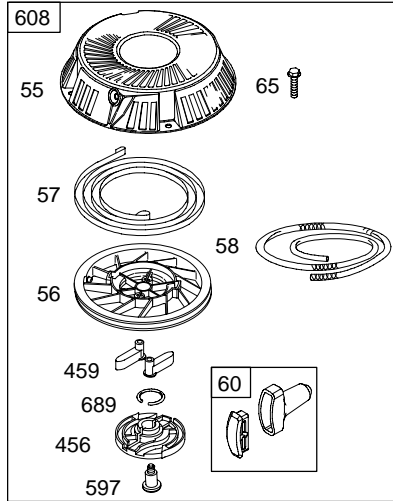

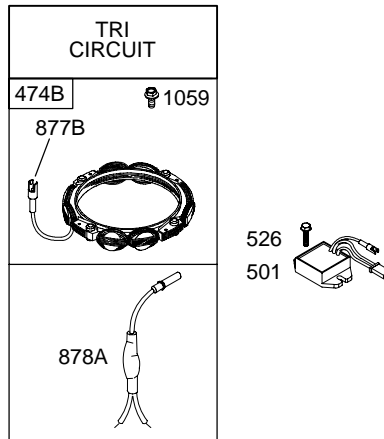

**NOTE:** All stators use a No. 1119 mounting screw. 

**NOTE:** The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information.

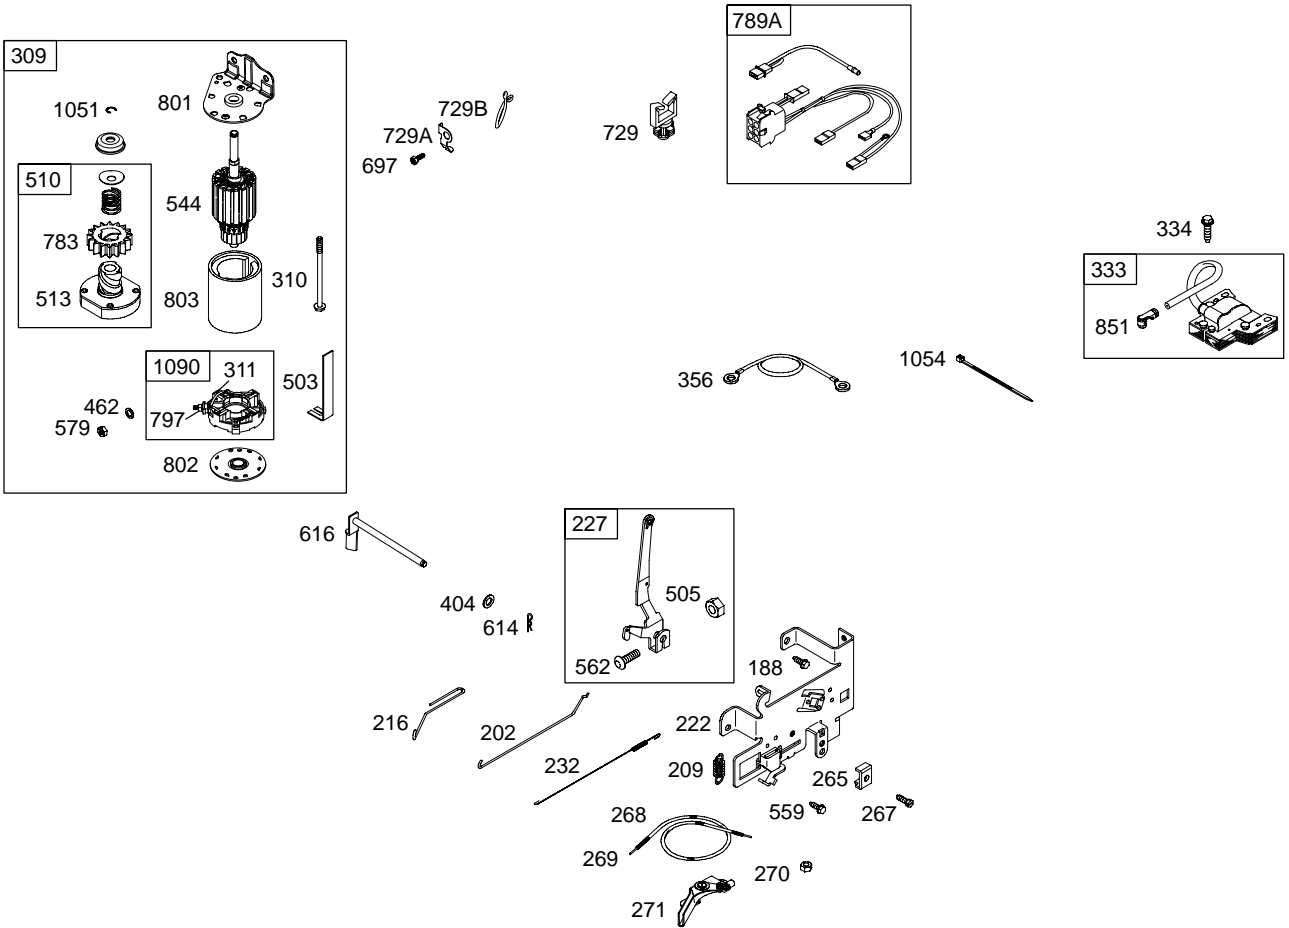

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
 5329-7 Assemblies include all parts shown in frames. 09/09/2005

## 28BH00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	697132	Cylinder Assembly	32	692852	Screw (Connecting Rod)	127	●695005	Plug–Welch
2	399265	Kit–Bushing/Seal (Magneto Side)	33	698370	Valve–Exhaust	130	691750	Valve–Throttle
3	★391086	Seal–Oil (Magneto Side)	34	695761	Valve–Intake	131	494379	Kit–Throttle Shaft
4A	697188	Sump–Engine	35	691279	Spring–Valve (Intake)	133	494381	Float–Carburetor
5	698404	Head–Cylinder	36	691279	Spring–Valve (Exhaust)	137	●◆281165	Gasket–Float Bowl
7	★Δ273280	Gasket–Cylinder Head	37A	697626	Guard–Flywheel	141	495097	Kit–Choke Shaft (LMT 697204)
9	★697109	Gasket–Breather	42	499586	Keeper–Valve	141A	495931	Kit–Choke Shaft (LMT 696181, 697203)
10	697157	Screw (Breather Assembly)	43	691968	Slinger–Governor/Oil	142	●697140	Nozzle–Carburetor (Standard)
11	697113	Tube–Breather	45	690564	Tappet–Valve	146	691639	Key–Timing
12	★697110	Gasket–Crankcase	46	698492	Camshaft	186	692317	Connector–Hose (90 Degree)
13	690360	Screw (Cylinder Head)	50	690193	Manifold–Intake	186A	698174	Connector–Hose (Straight)
15	690946	Plug–Oil Drain	51★Δ◆692137	Gasket–Intake	187B	791805	Line–Fuel (Formed) (10–1/4 Inches Long) (Cut To Required Length)	
16	697516	Crankshaft	53	690227	Stud (Carburetor)	188	691693	Screw (Control Bracket)
20	★690947	Seal–Oil (PTO Side)	54	691148	Screw (Intake Manifold)	192	691986	Adjuster–Rocker Arm
22	692125	Screw (Crankcase Cover/Sump)	55	695130	Housing–Rewind Starter	202	691841	Link–Mechanical Governor
23	693556	Flywheel	56	695129	Pulley–Starter	209	690480	Spring–Governor
24	222698	Key–Flywheel	57	695131	Spring–Rewind Starter	216	691840	Link–Choke
25	698390	Piston Assembly (Standard)	58	695132	Rope–Starter	222	694042	Bracket–Control
		----- Note -----	60	494212	Grip–Starter Rope	227	691374	Lever–Governor Control
		698393 Piston Assembly (.010" Oversize)	65	697725	Screw (Rewind Starter)	232	691842	Spring–Governor Link
		698394 Piston Assembly (.020" Oversize)	78A	690364	Screw (Flywheel Guard)	238	691843	Cap–Valve
		698395 Piston Assembly (.030" Oversize)	81	691178	Lock–Muffler Screw	239	491657	Switch–Oil Pressure
26	698389	Ring Set (Standard)	93	●690602	Bushing–Throttle Shaft	240	394358	Filter–Fuel (White, 75 Microns)
		----- Note -----	94	498030	Kit–Idle Mixture	265	691024	Clamp–Casing
		698396 Ring Set (.010" Oversize)	95	●691636	Screw (Throttle Valve)	267	690804	Screw (Casing Clamp)
		698397 Ring Set (.020" Oversize)	98	495800	Kit–Idle Speed	268	691025	Casing–Control Wire (Cut To Required Length)
		698398 Ring Set (.030" Oversize)	104	●690525	Pin–Float Hinge	269	691026	Wire–Control (Cut To Required Length)
27	698469	Lock–Piston Pin	105	●231855	Valve–Float Needle	270	691027	Nut (Control Wire Casing)
28	697099	Pin–Piston (Standard)	106	●690577	Seat–Inlet (Gravity Feed)	271	691028	Lever–Control
29	697518	Rod–Connecting (Standard)	108	690464	Valve–Choke (LMT 697204)	276	●◆692255	Washer–Sealing
		----- Note -----	108A	692344	Valve–Choke (LMT 696181, 697203)	300A	698356	Muffler Used on Type No(s). 0114.
		697264 Rod– Connecting (.020" Undersize)	117	●694352	Jet–Main (Standard)	304	698599	Housing–Blower (Black)
			118	697228	Jet–Main (High Altitude)	305	697102	Screw (Blower Housing)
			121	697241	Kit–Carburetor Overhaul			
			125	698445	Carburetor (Gravity Feed)			

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

Δ Included in Valve Gasket Set–Ref. No.1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**

5329–8

Assemblies include all parts shown in frames.

09/09/2005



**28BH00**

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
305A	697103	Screw (Blower Housing)	579	691029	Nut (Starter Cable)	823	698941	Screw (Muffler Adapter)
306	697107	Shield-Cylinder	584	697112	Cover-Breather Passage	830	691095	Stud-Rocker Arm
307	691003	Screw (Cylinder Shield)	597	691696	Screw (Pawl Friction Plate)	842	★691031	Seal-O Ring (Dipstick Tube)
309	693551	Motor-Starter	601	95162	Clamp-Hose	847	790442	Dipstick/Tube Assembly
310	690323	Screw (Starter Motor)	608	695058	Starter-Rewind	851	692424	Terminal-Spark Plug
311	497608	Brush Set	613	691416	Screw (Muffler)	864	697346	Adapter-Muffler
333	492341	Armature-Magneto	613B	691678	Screw (Muffler)	868	★△690968	Seal-Valve
334	691061	Screw (Magneto Armature)	614	691620	Pin-Cotter	877B	393537	Wire/Connector- Alternator
337	491055	Plug-Spark	616	692012	Crank-Governor	878A	691955	Harness-Alternator
356	697089	Wire-Stop	617	★692138	Seal-O Ring (Intake Manifold)	883	★692236	Gasket-Exhaust Screw
358	697151	Gasket Set-Engine	634	●690801	Spring/Seal Assembly (LMT 697204)	914	691108	Screw (Rocker Cover)
363	19203	Puller-Flywheel	634A	●690802	Spring/Seal Assembly (LMT 696181, 697203)	943	★690589	Seal-O Ring (Oil Pump Cover)
383	89838	Wrench-Spark Plug	635	691909	Boot-Spark Plug	947	694393	Solenoid-Fuel
404	691691	Washer (Governor Crank)	643	698401	Retainer-Air Filter	949A	695448	Guard-Debris Screen
415	690283	Plug (.125-27 NPTF)	654	690958	Nut (Carburetor)	950	695407	Screw-Float Bowl (Bottom Of Bowl)
431	697122	Elbow-Intake	676	393761	Deflector-Muffler	965	499613	Cover-Oil Pump
445	698083	Filter-Air Cleaner Cartridge (Non Washable)	677	690661	Screw (Muffler Deflector)	967	697015	Filter-Pre Cleaner
455	695113	Cup-Flywheel	689	691855	Spring-Friction	968	698403	Cover-Air Cleaner (Black)
456	695128	Plate-Pawl Friction	691	★692407	Seal-Governor Shaft	975	495933	Bowl-Float
459	281505	Pawl-Ratchet	692	690572	Spring-Detent	977	690192	Gasket Set-Carburetor
462	691261	Washer (Starter Cable)	697	690372	Screw (Drive Cap)	987	●691326	Seal-Throttle Shaft
474B	696457	Alternator (Tri Circuit)	718	690959	Pin-Locating	1005	699043	Fan-Flywheel
493	695450	Bracket-Mounting	729	691335	Clip-Wire (Wire Saddle)	1017	690770	Screen-Oil Pump (Push In)
501	698315	Regulator	729A	691224	Clip-Wire (Aluminum Coated Steel)	1019	699196	Kit-Label
503	691532	Strap-Starter	729B	694123	Clip-Wire (Nylon)	1022	★△272475	Gasket-Rocker Cover
505	691251	Nut (Governor Control Lever)	741	697128	Gear-Timing	1023	692492	Cover-Rocker
510	693699	Drive-Starter	750	790832	Screw (Oil Pump Cover)	1024	499054	Pump-Oil
513	692024	Clutch-Drive	757	697607	Link-Counterweight	1026	692003	Rod-Push (Intake)
523	699908	Dipstick	758	697134	Counterweight	----- <b>Note</b> -----		
524	★691032	Seal-Dipstick Tube	759	697392	Pin-Counterweight	692011	Rod-Push (Exhaust)	
525	697184	Tube-Dipstick	783	693713	Gear-Pinion	1027	696854	Filter-Oil
526	697348	Screw (Regulator)	789A	698329	Harness-Wiring	1029	691751	Arm-Rocker
544	692034	Armature-Starter	797	693167	Nut (Brush Retainer)	1032	491710	Ball-Oil Pump
552	697144	Bushing-Governor Crank	801	691283	Cap-Drive	1034	690822	Guide-Push Rod
559	697561	Screw (Remote Choke Stop)	802	691286	Cap-End	1035	693784	Shaft-Pump
562	691119	Bolt (Governor Control Lever)	803		Housing-Starter (Not Serviced Separately, Order Starter Motor 693551)	1036		Label-Emissions (Available from an Authorized Briggs & Stratton Service Dealer)
563	695449	Screw (Debris Screen Guard)						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**

## 28BH00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1044	698139	Screw (Flywheel)	1263	697124	Reed-Breather	1267	697419	Latch-Blower Housing
1051	691265	Ring-Retaining	1264	697104	Screw (Breather Reed)	1270	697156	Plug-AVS Counterweight
1054	280275	Tie-Cable	1265	697125	Support-Blower Housing	1279	691108	Screw (Blower Housing Support)
1058	276344	Manual-Owner's	1266	★●691917	Seal-O Ring (Intake Elbow)	1330	272147	Repair Manual
1059	698516	Kit-Screw/Washer	1266A	●697123	Seal-O Ring (Intake Elbow)			
1070	690372	Screw (Flywheel Fan)						
1090	691293	Retainer-Brush						
1091	691333	Cap-Limiter						
1095	691581	Gasket Set-Valve						
1119	691183	Screw (Alternator)						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**

5329-10

Assemblies include all parts shown in frames.

09/09/2005