



294700

Illustrated Parts List

Model Series

294700

TYPE NUMBERS
0015 through 1150.

TABLE OF CONTENTS

Air Cleaner	7
Alternator	6
Blower Housing	11
Camshaft	3
Carburetor	4
Controls	6
Crankshaft	3
Cylinder	2
Cylinder Head	5
Electric Starter	13
Engine Sump	2
Exhaust System	8
Flywheel	10
Fuel Supply	4
Gasket Set – Engine	2
Gasket Set – Valve	5
Governor Spring	6
Ignition	6
Intake Manifolds	3
Kit – Carburetor Overhaul	4
Lubrication	14
Piston, Rings, Connecting Rod	2
Rewind Starter	9
Shrouds	12
Valves	5


BRIGGS & STRATTON



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

294700





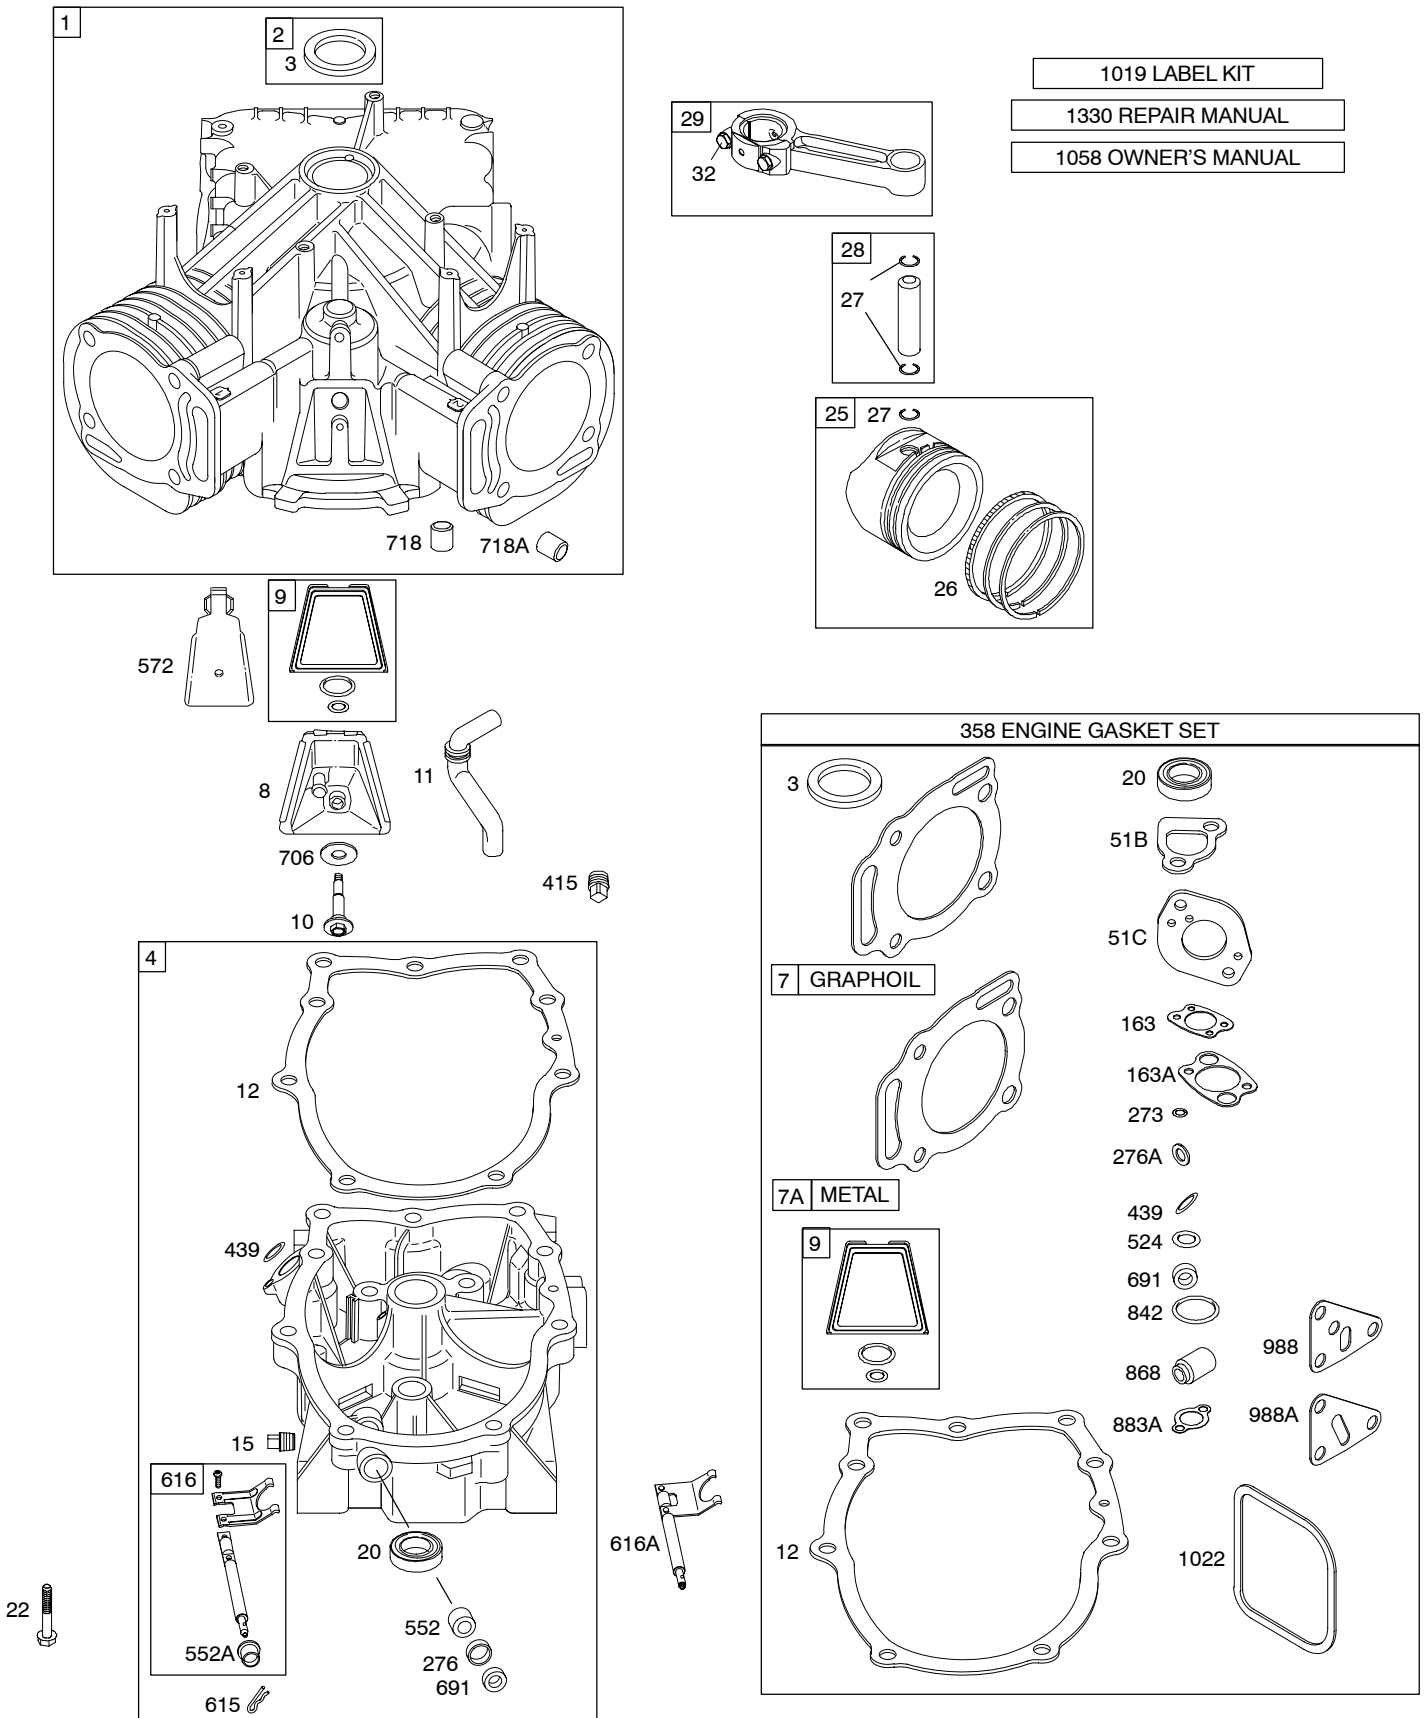


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

9748-2

Assemblies include all parts shown in frames.

11/30/2005

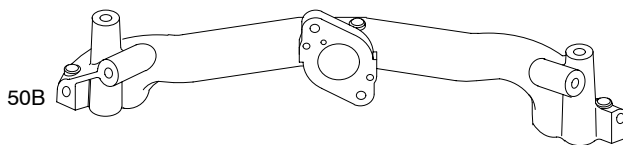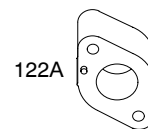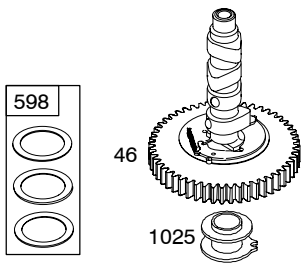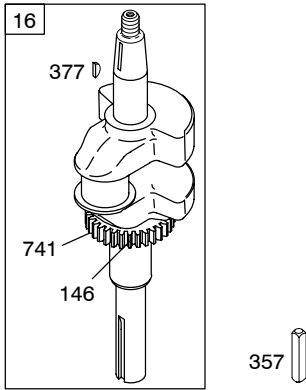

654 5




Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

9748-3



Assemblies include all parts shown in frames.

11/30/2005

294700

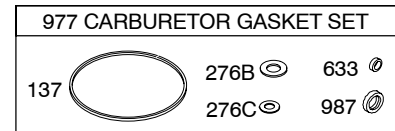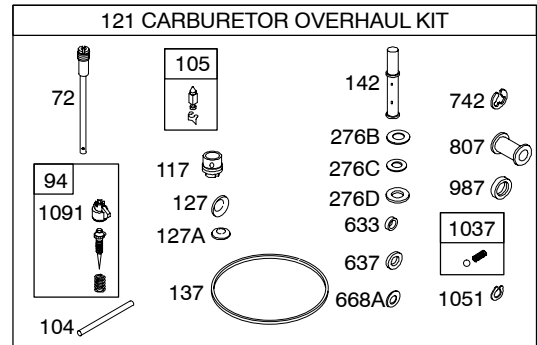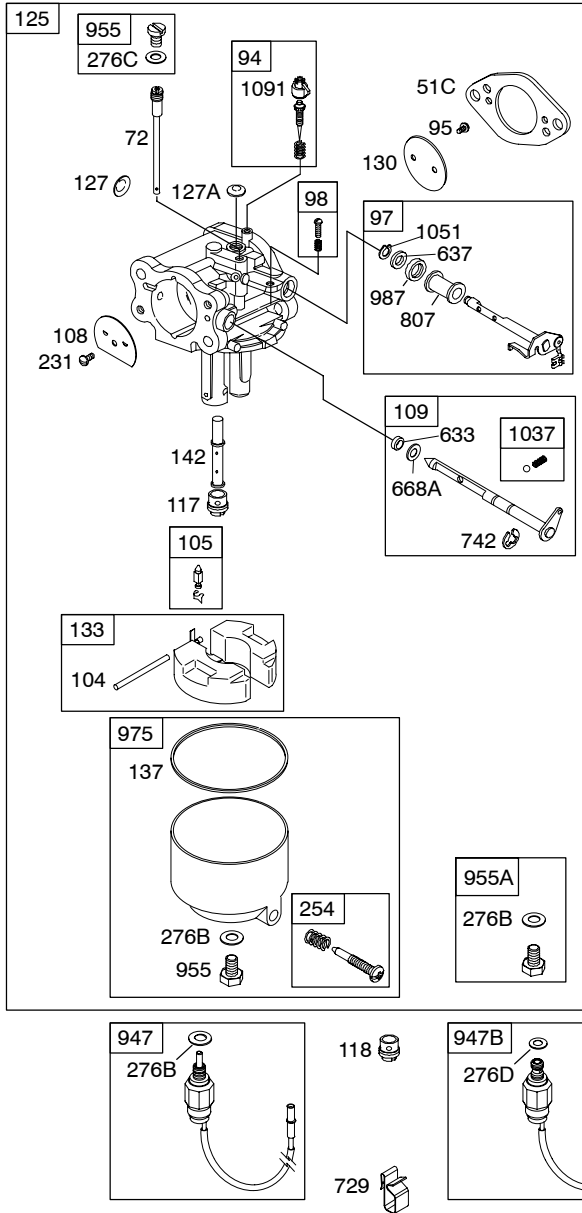

For 807639 carburetor, Order reference 142 for main jet.

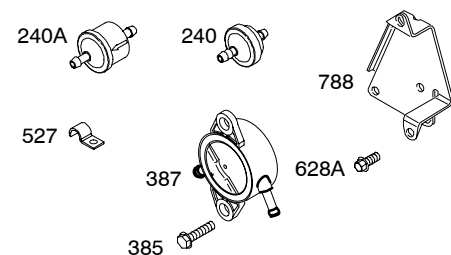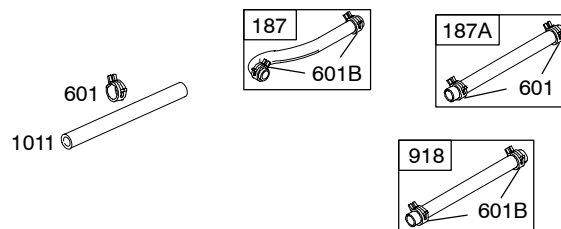


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

9748-4

Assemblies include all parts shown in frames.

11/30/2005

294700

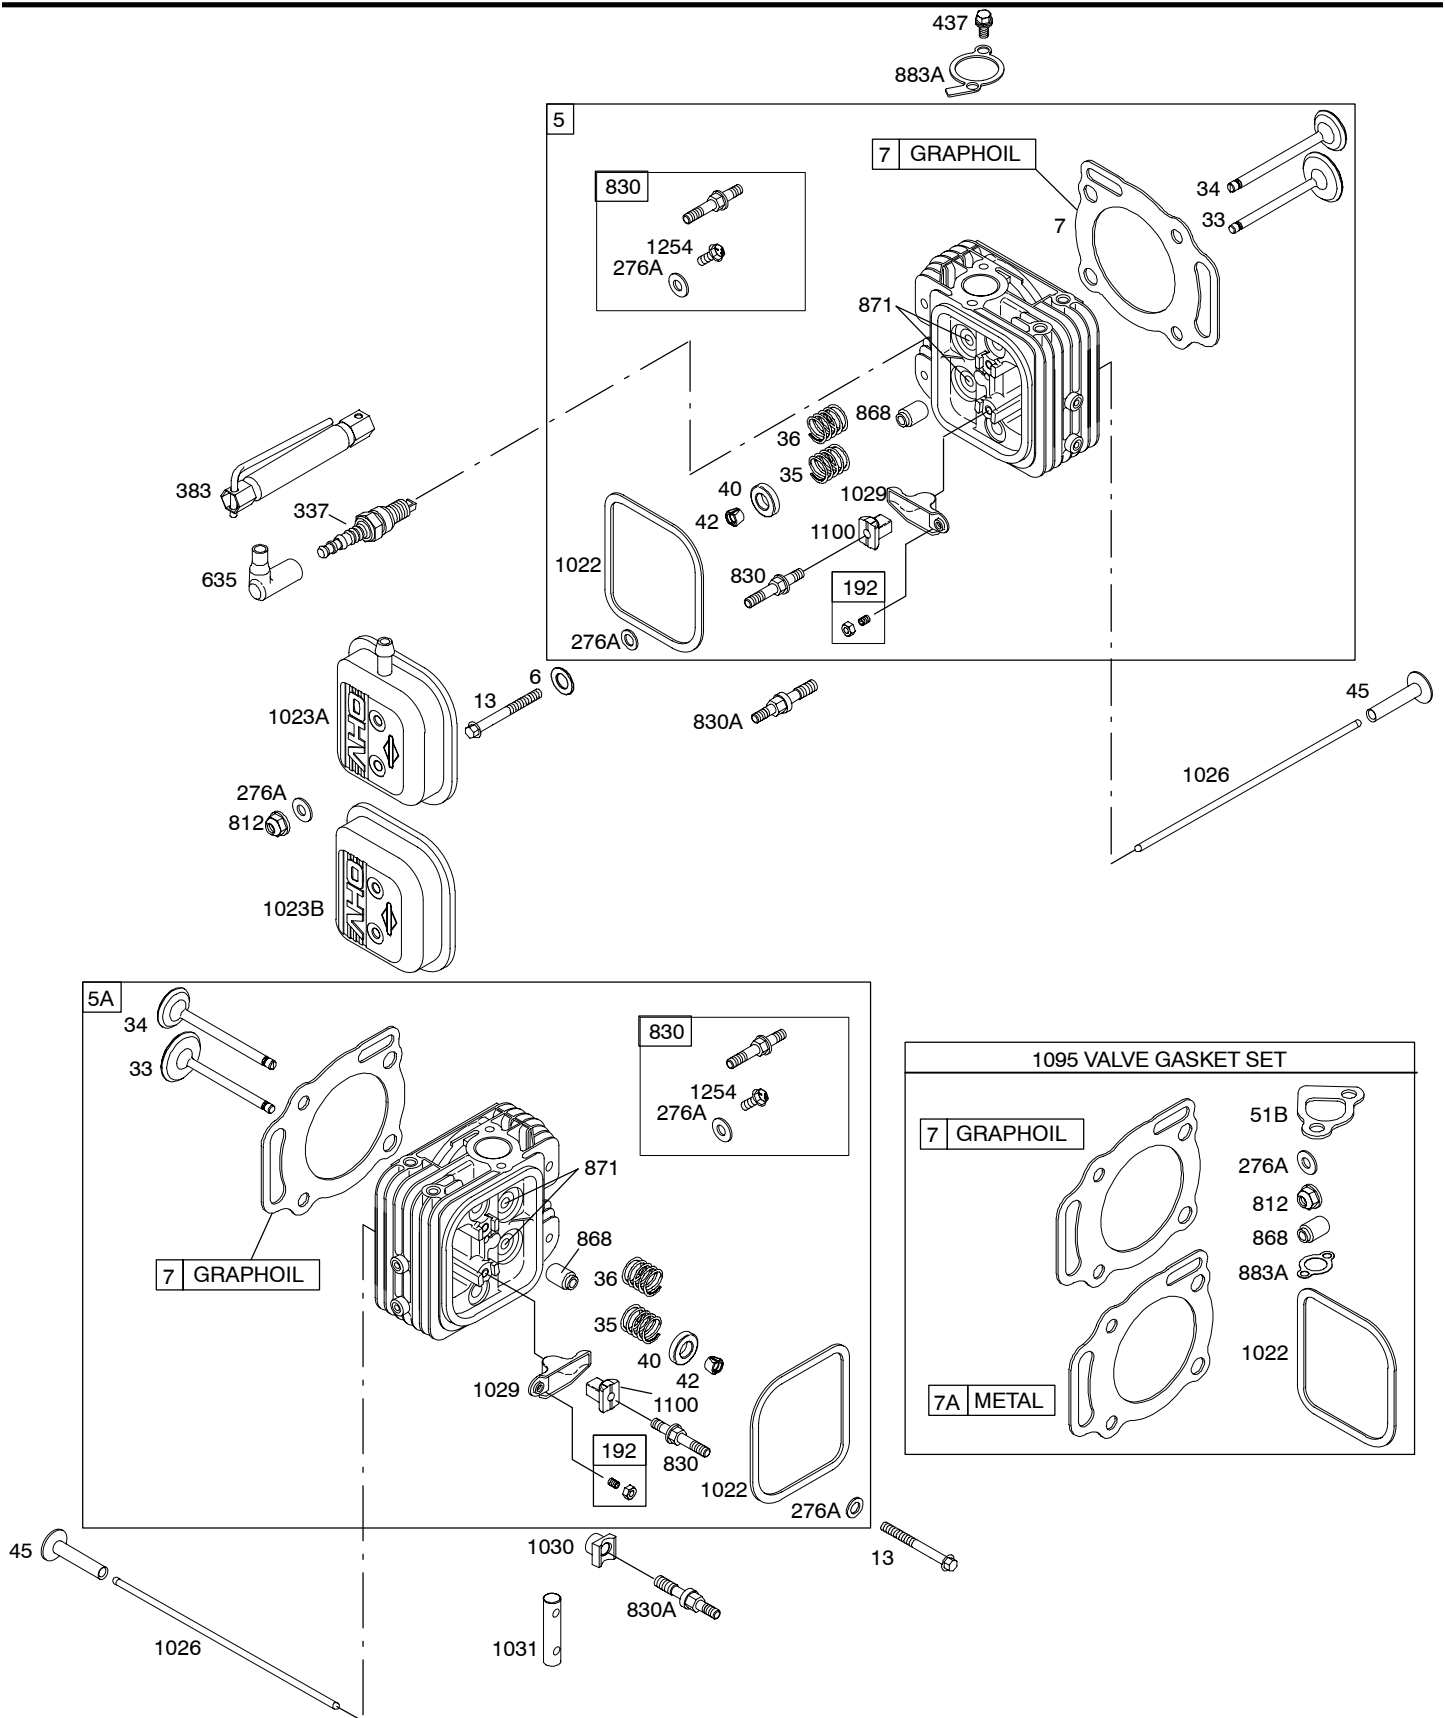


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

9748-5

Assemblies include all parts shown in frames.

11/30/2005

294700

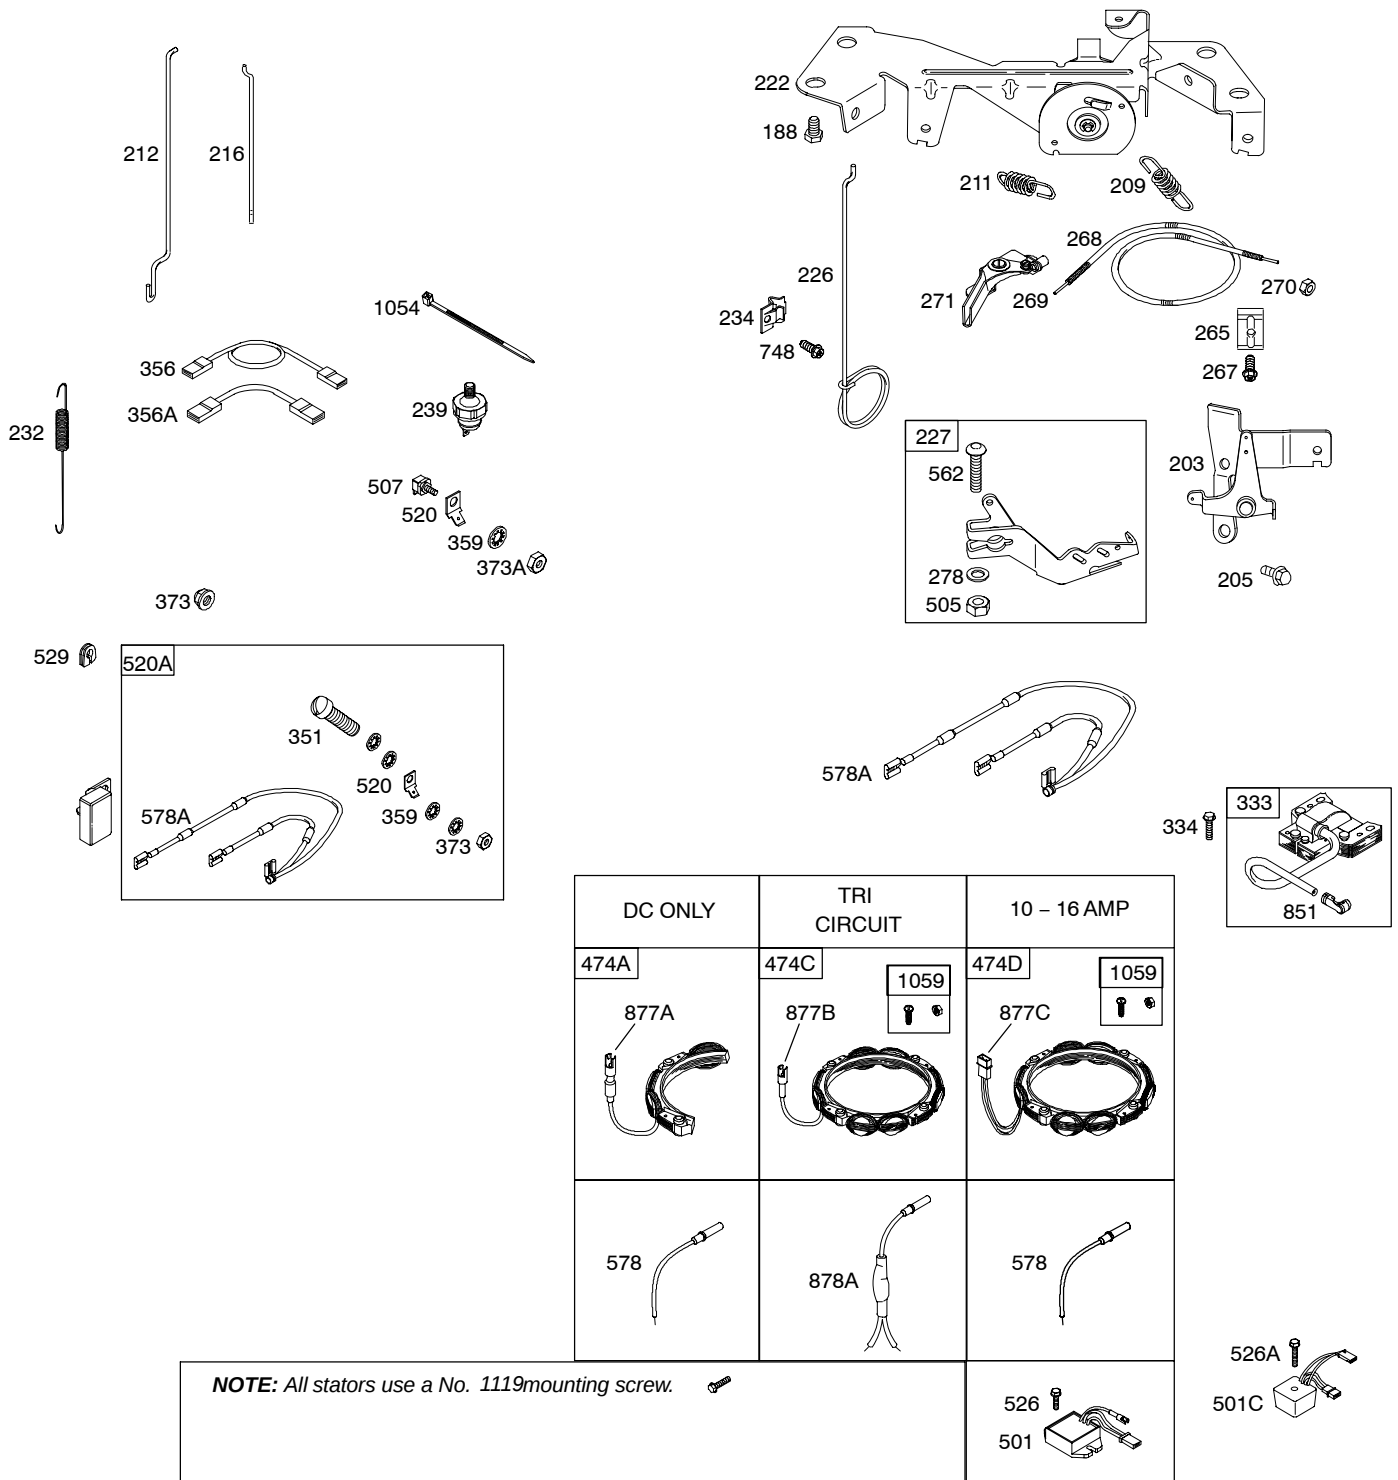


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

9748-6

Assemblies include all parts shown in frames.

11/30/2005

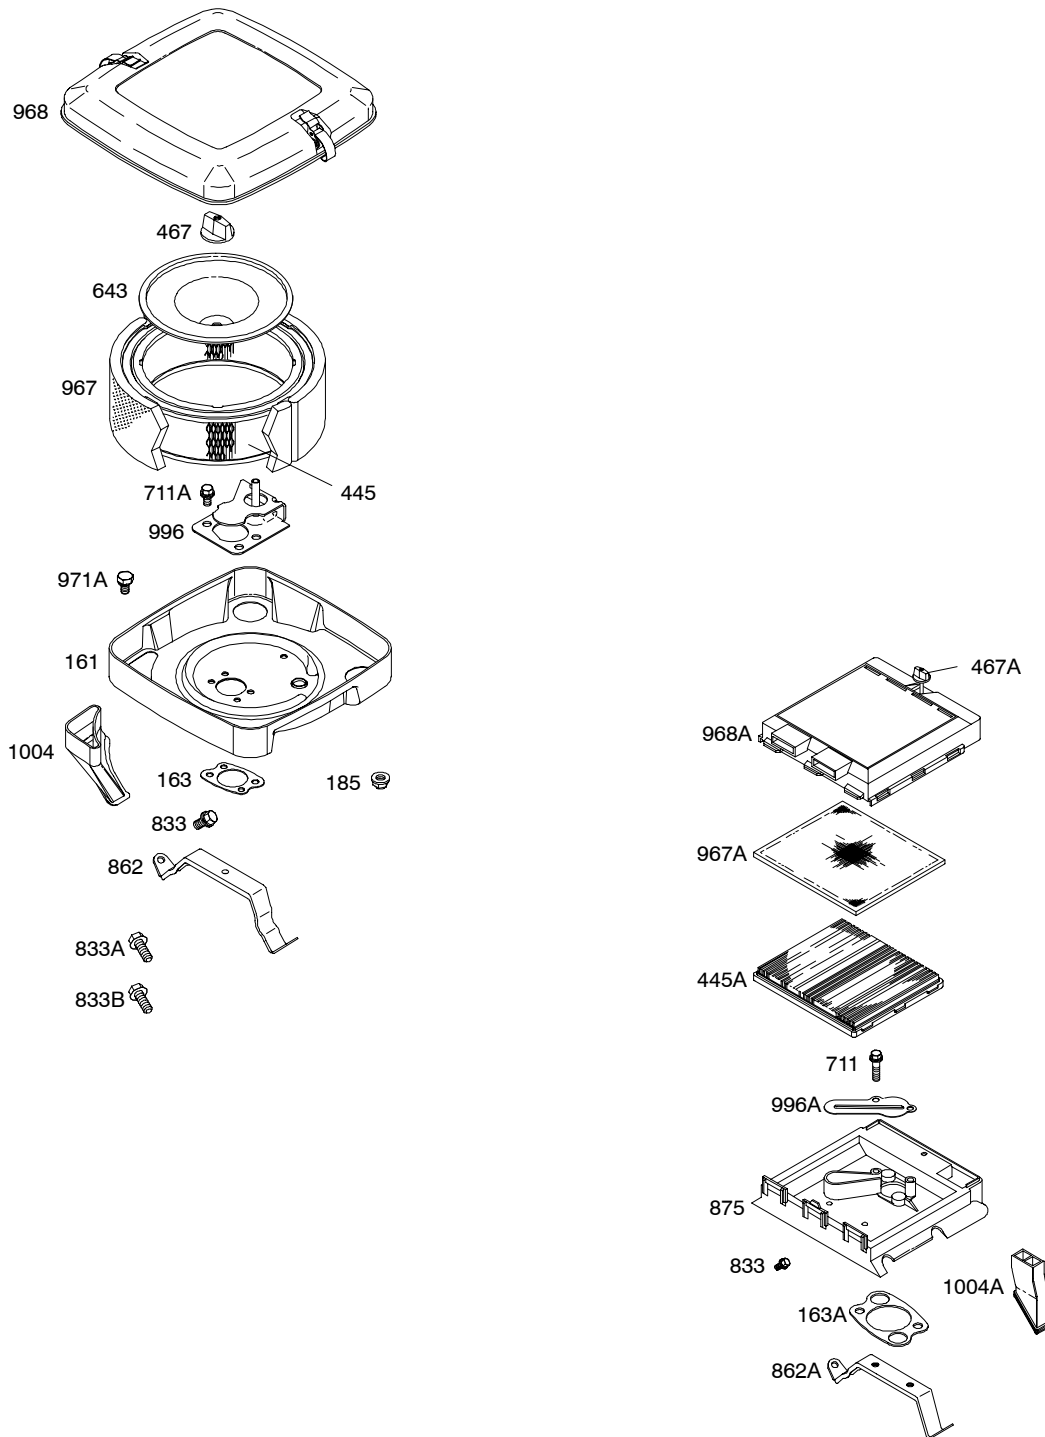


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

9748-7

Assemblies include all parts shown in frames.

11/30/2005

294700


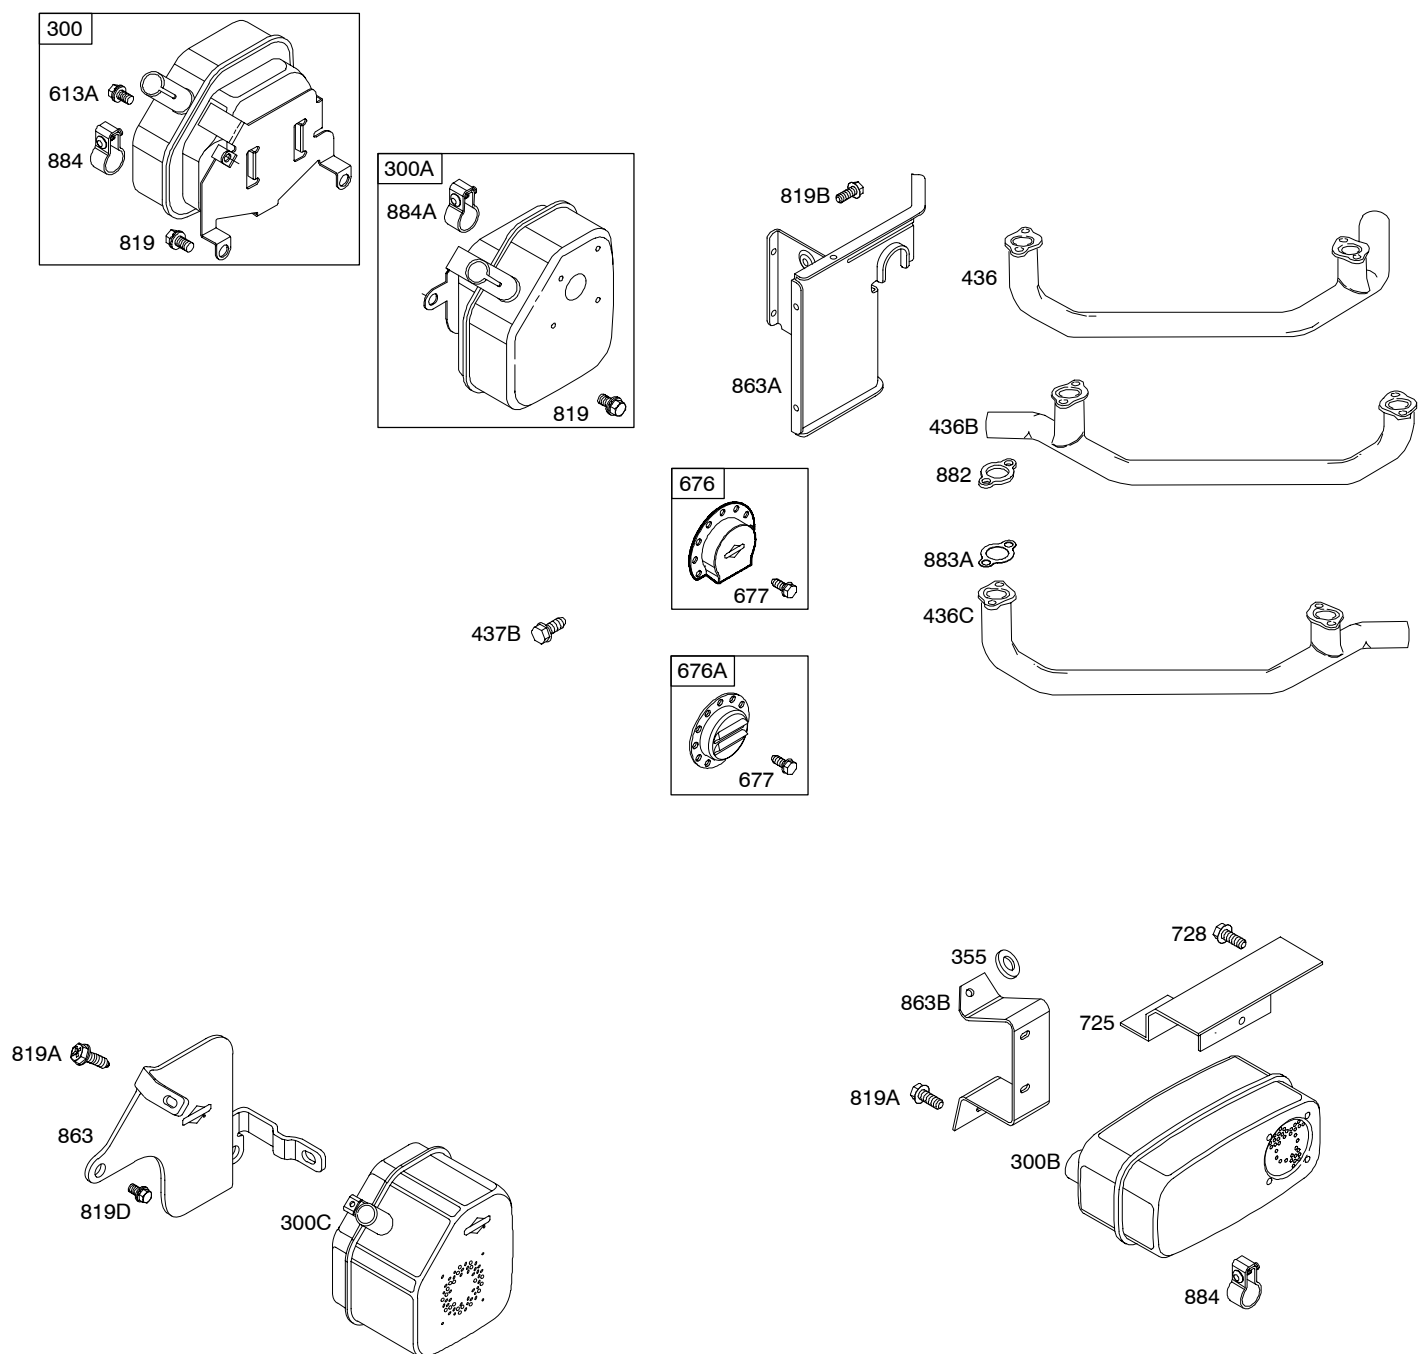


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

9748-8

Assemblies include all parts shown in frames.

11/30/2005

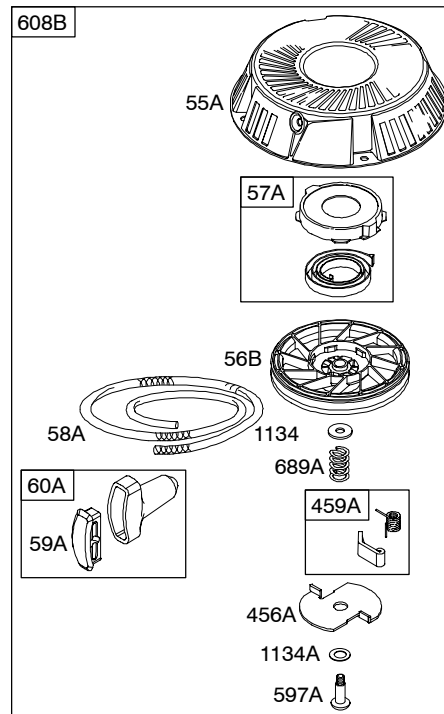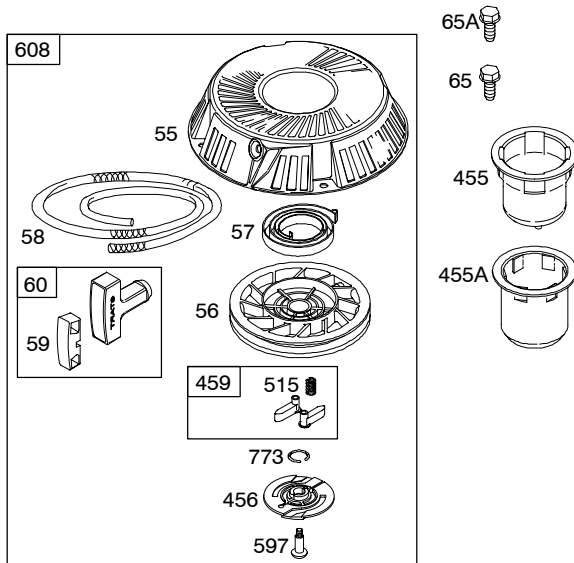


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

9748-9

Assemblies include all parts shown in frames.

11/30/2005

294700

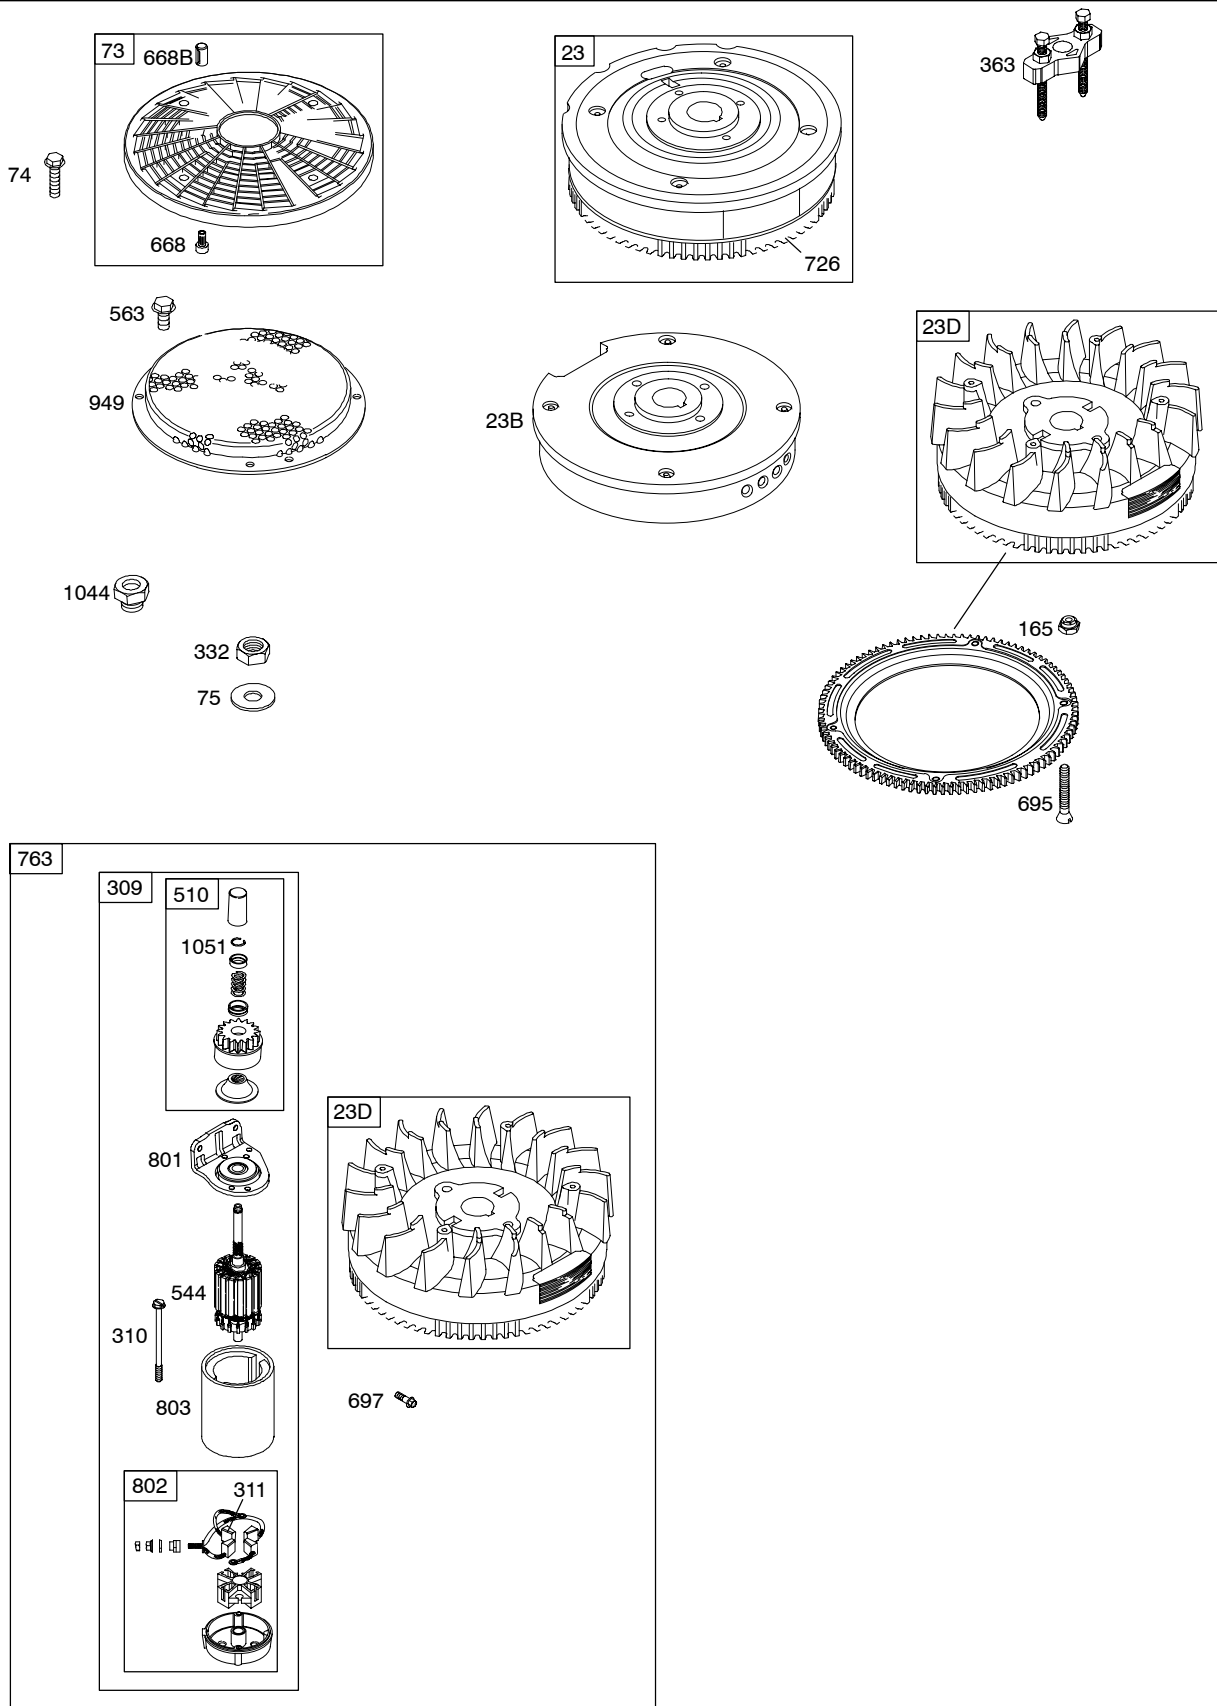


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

9748-10


Assemblies include all parts shown in frames.

11/30/2005

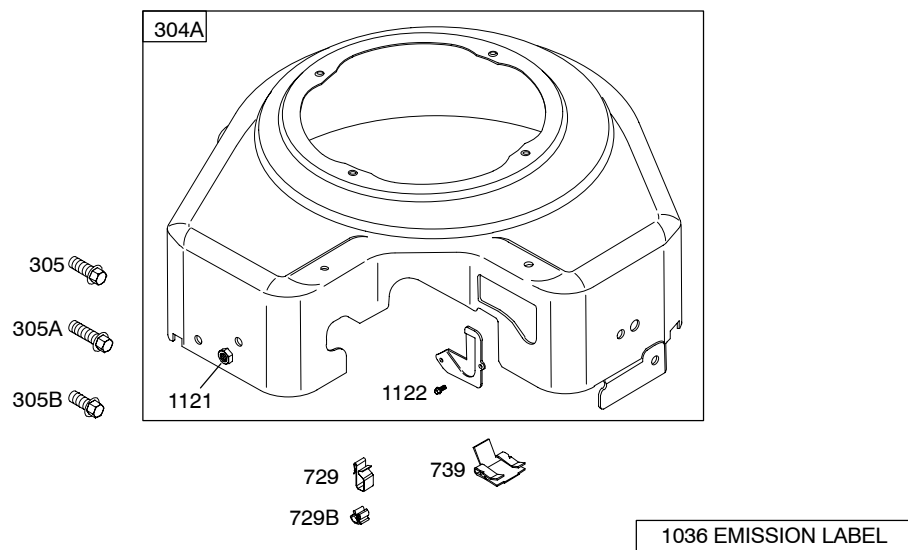

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

294700

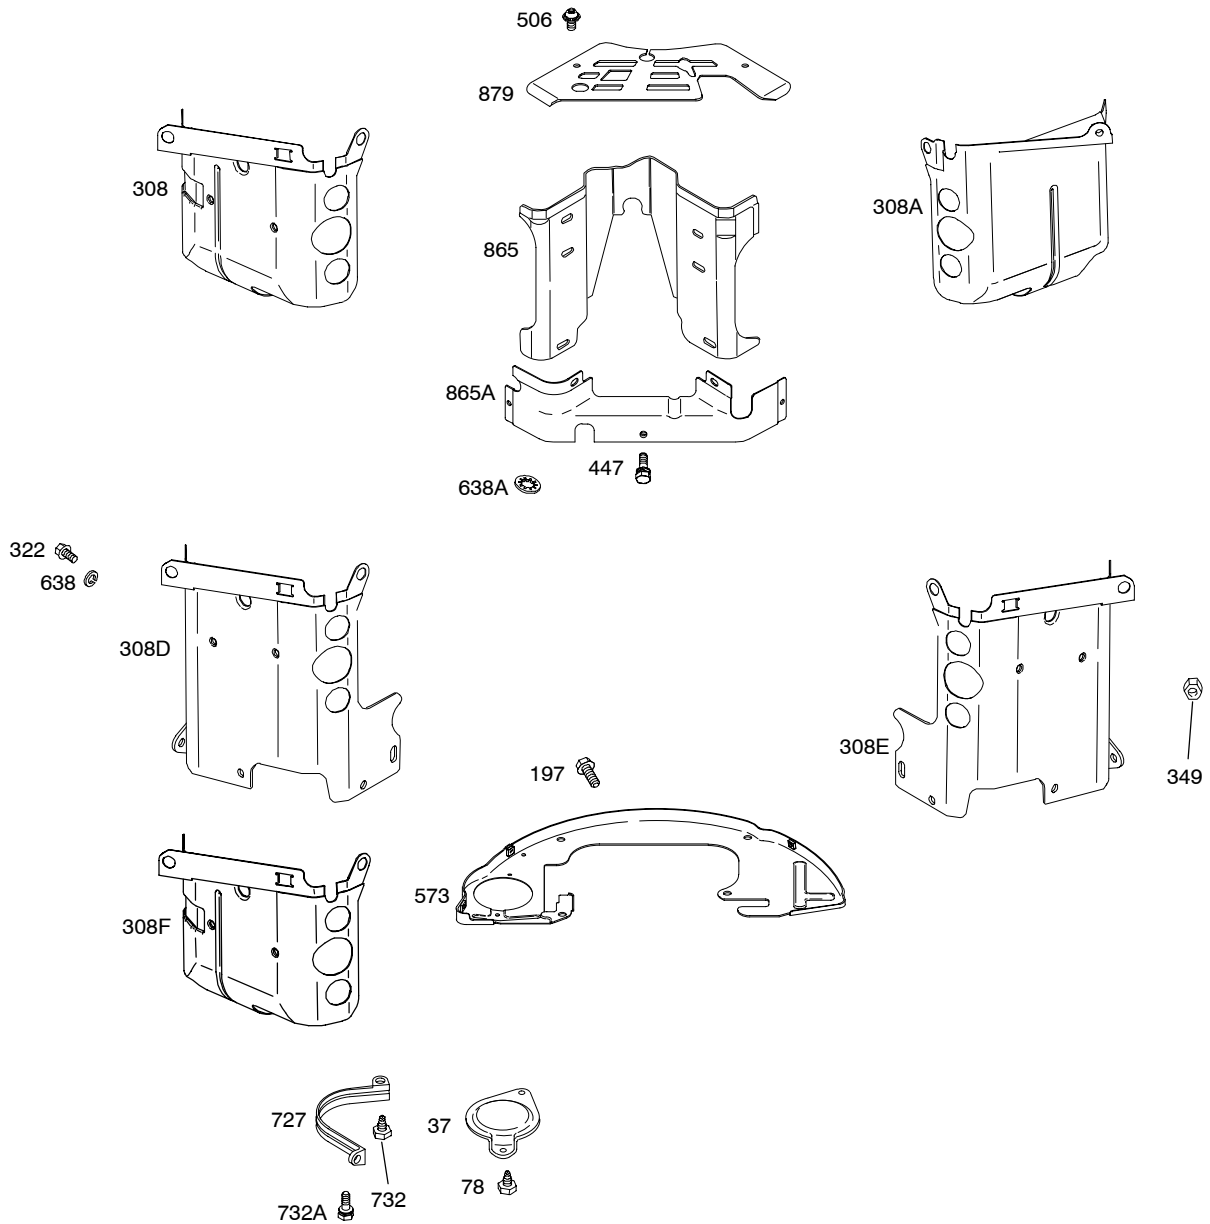


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

9748-12

Assemblies include all parts shown in frames.


11/30/2005

697 

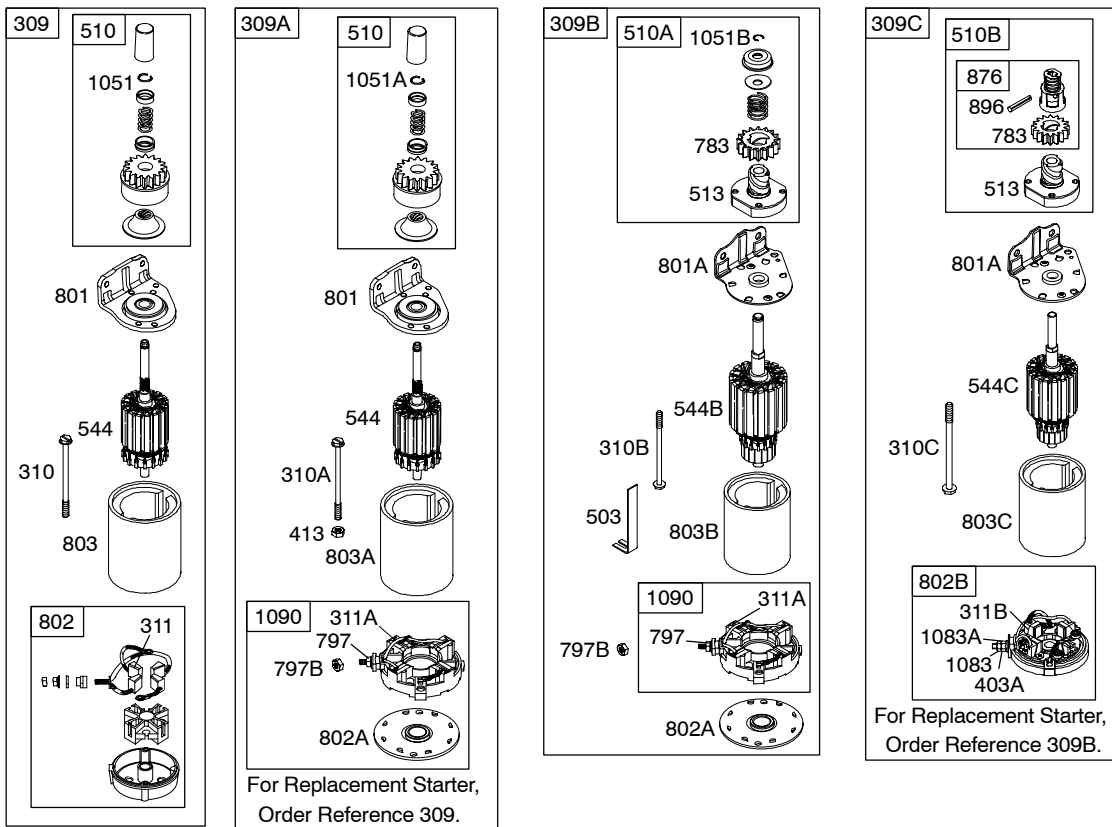

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

294700

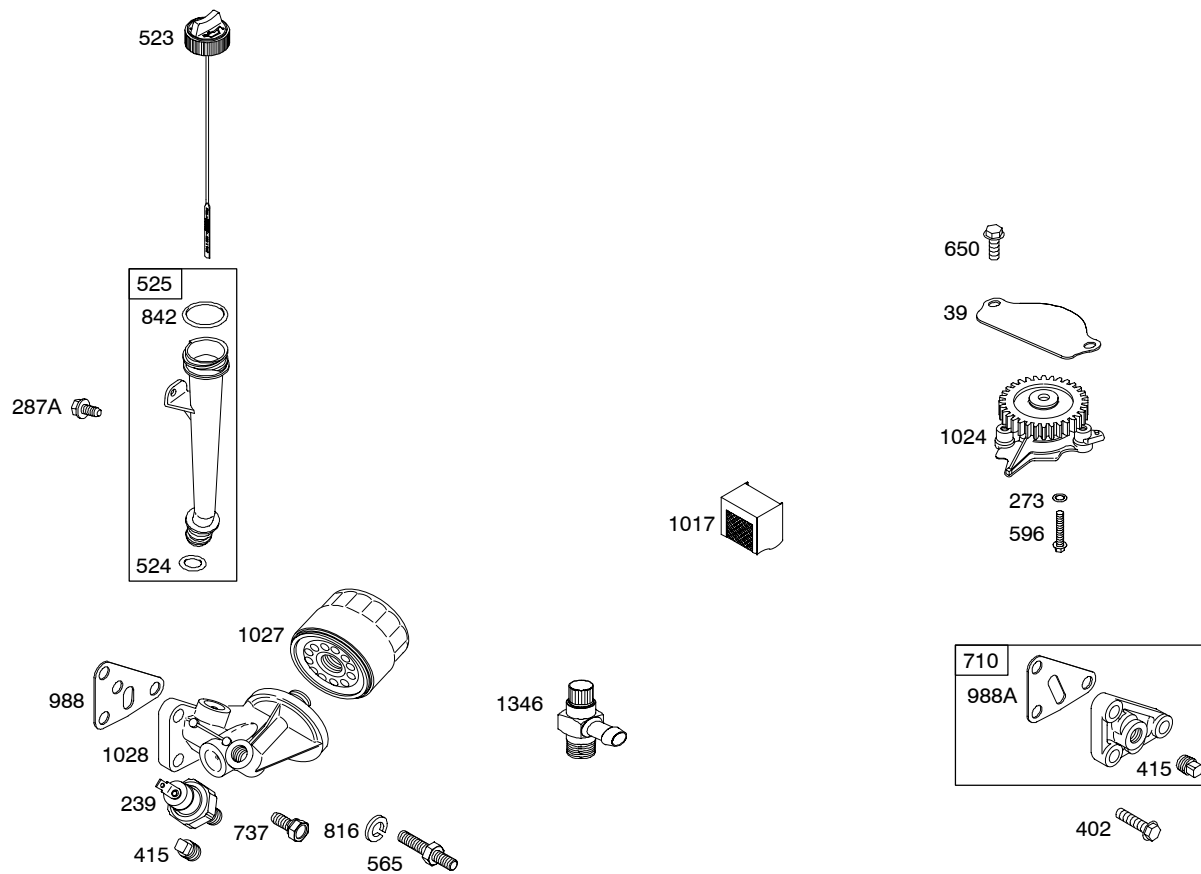

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

9748-14

Assemblies include all parts shown in frames.

11/30/2005

294700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	692543	Cylinder Assembly (Used After Code Date 97043000). ----- Note ----- 807511 Cylinder Assembly (Used Before Code Date 97050100).	11	806083s	Tube-Breather	25	807619	Piston Assembly (Standard) ----- Note ----- 807809 Piston Assembly (.020" Oversize)
2	808534	Kit-Bushing/Seal (Magneto Side) (Used After Code Date 97043000). ----- Note ----- 807687 Kit-Bushing/Seal (Magneto Side) (Used Before Code Date 97050100).	12	★691684	Gasket-Crankcase	26	807620	Ring Set (Standard) ----- Note ----- 807810 Ring Set (.020" Oversize)
3	★805101s	Seal-Oil (Magneto Side)	13	692059	Screw (Cylinder Head)	27	690683	Lock-Piston Pin
4	808846	Sump-Engine	15	690946	Plug-Oil Drain (Square Head)	28	807621	Pin-Piston
5	809200	Head-Cylinder (Cylinder 1)	16	692159	Crankshaft (Used After Code Date 97043000). ----- Note ----- 807586 Crankshaft (Used Before Code Date 97050100).	29	807900s	Rod-Connecting (Standard) ----- Note ----- 807803 Rod-Connecting (.020" Undersize)
5A	809201	Head-Cylinder (Cylinder 2)	20	★805049s	Seal-Oil (PTO Side)	32	690698	Screw (Connecting Rod)
6	△805193	Washer (Cylinder Head) (Used Before Code Date 94050100).	22	807362	Screw (Crankcase Cover/Sump)	33	807681	Valve-Exhaust
7★△806085s		Gasket-Cylinder Head (Graphoil) (Used After Code Date 96033100).	23	808766	Flywheel (Steel Ring Gear) ----- Note ----- 808774 Flywheel (Steel Ring Gear) Used on Type No(s). 1121, 1122, 1124, 1125, 1132, 1142, 1145. Flywheel (For Replacement Flywheel, Order Part Number 808190) Used on Type No(s). 0111, 0119, 0419, 0432, 0433, 1119.	34	807680	Valve-Intake
7A	★△807986	Gasket-Cylinder Head (Metal) (Used Before Code Date 96040100).	23B	690889	Flywheel (Rewind Starter) Used on Type No(s). 0320, 0334, 1034, 1102, 1138, 1140, 1147, 1150.	35	692084	Spring-Valve (Intake)
8	807893	Breather Assembly	23D	690919	Flywheel (Steel Ring Gear)	36	692084	Spring-Valve (Exhaust)
9	★809094	Gasket-Breather				37	690715	Guard-Flywheel (Black) ----- Note ----- 805504 Guard-Flywheel (Red) 841309 Guard-Flywheel (Black) Used on Type No(s). 1102, 1132, 1147, 1150.
10	690751	Screw (Breather Assembly) (Used After Code Date 90111400). ----- Note ----- 805194 Screw (Breather Assembly) (Used Before Code Date 90111500).				39	690745	Deflector-Oil
						40	692058	Retainer-Valve
						42	807683	Keeper-Valve
						45	690977	Tappet-Valve
						46	691557	Camshaft
						50B	690754	Manifold-Intake
						51B	★△692035	Gasket-Intake (Manifold/Heads)

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

9748-15

Assemblies include all parts shown in frames.

11/30/2005

294700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
51C	★691694	Gasket-Intake (Manifold/Carburetor Spacer)	94	●808258	Kit-Idle Mixture (Used After Code Date 95092700). ----- Note ----- 807707 Kit-Idle Mixture (Used Before Code Date 95092800).	122A	690753	Spacer-Carburetor ----- Note ----- 690692 Spacer- Carburetor Used on Type No(s). 0015, 0016, 0017, 0033, 0035, 0102, 0108, 0109, 0111, 0112, 0113, 0114, 0116, 0117, 0118, 0119, 0316, 0320, 0330, 0331, 0332, 0333, 0335, 0400, 0410, 0411, 0412, 0414, 0415, 0416, 0417, 0429, 1035, 1100, 1110.
54	690676	Screw (Intake Manifold)	95	690728	Screw (Throttle Valve)	125	842651	Carburetor (Used After Code Date 98062600). ----- Note ----- 808728 Carburetor (Used After Code Date 92040600 and Before Code Date 98062700). 807639 Carburetor (Used Before Code Date 92040700).
55	691568	Housing-Rewind Starter	97	842650	Shaft-Throttle (Used After Code Date 05063000). ----- Note ----- 808323 Shaft-Throttle (Used Before Code Date 05070100).	127	●690731	Plug-Welch (6.9mm Diameter)
55A	492193	Housing-Rewind Starter	98	807705	Kit-Idle Speed	127A	●690730	Plug-Welch (9mm Diameter)
56	692085	Pulley-Starter	104	●690739	Pin-Float Hinge	130	690732	Valve-Throttle
56B	280918	Pulley-Starter	105	●807706	Valve-Float Needle	133	807710	Float-Carburetor
57	692086	Spring-Rewind Starter	108	690729	Valve-Choke	137	◆●806481	Gasket-Float Bowl
57A	492194	Spring-Rewind Starter	109	807711	Shaft-Choke			
58	66574	Rope-Starter (Cut To Required Length)	117	●806487	Jet-Main (Standard)			
58A	695002	Rope-Starter (Cut To Required Length)	118	806634	Jet-Main (High Altitude)			
59	805957	Insert-Grip	121	808807	Kit-Carburetor Overhaul (Used After Code Date 98062600). ----- Note ----- 808324 Kit-Carburetor Overhaul (Used After Code Date 92040600 and Before Code Date 98062700). 807708 Kit-Carburetor Overhaul (Used Before Code Date 92040700).			
59A	490653	Insert-Grip						
60	808167	Grip-Starter Rope						
60A	490652	Grip-Starter Rope						
65	691982	Screw (Rewind Starter)						
65A	807163	Screw (Rewind Starter)						
72	●806488	Tube-Jet (Used After Code Date 98062600). ----- Note ----- 690755 Tube-Jet (Used After Code Date 92040600 and Before Code Date 98062700). 806480 Tube-Jet (Used Before Code Date 92040700).						
72A	694069	Tube-Jet (High Altitude) (Used After Code Date 98062600).						
73	494439	Screen-Rotating						
74	691647	Screw (Rotating Screen)						
75	691490	Washer (Flywheel)						
78	690688	Screw (Flywheel Guard)						

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

294700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
142	●806635	Nozzle-Carburetor (Standard) (Used After Code Date 98062600). ----- Note ----- 807960 Nozzle-Carburetor (Standard) (Used After Code Date 92040600 and Before Code Date 98062700). 807712 Nozzle-Carburetor (Standard) (Used Before Code Date 92040700).	187A	841858	Line-Fuel	231	690728	Screw (Choke Valve)
146	691639	Key-Timing	188	692056	Screw (Control Bracket)	232	692073	Spring-Governor Link
161	691561	Base-Air Cleaner (Metal)	192	807623	Adjuster-Rocker Arm	234	691723	Clip-Control Rod
163	692081	Gasket-Air Cleaner (Used With Metal Air Cleaner Base)	197	807163	Screw (Back Plate)	239	690233	Switch-Oil Pressure (Oil GARD Only)
163A	★692052	Gasket-Air Cleaner (Used With Plastic Air Cleaner Base)	203	690923	Crank-Bell	240	394358s	Filter-Fuel (White, 75 Microns)
165	693148	Nut (Ring Gear)	205	692083	Screw (Bell Crank)	240A	691035	Filter-Fuel (Includes Paper Element With A 40 Micron Rating)
185	690939	Nut (Air Cleaner Base)	209	692070	Spring-Governor (Red) ----- Note ----- 692071 Spring-Governor (White) Used on Type No(s). 0035, 0108, 0112, 0118, 0330, 0332, 0335, 0411, 0415, 0420, 0429, 0432, 0435, 1035, 1120, 1121, 1132, 1146, 1150. 691508 Spring-Governor (Blue) Used on Type No(s). 0109, 0111, 0113, 0114, 0116, 0410, 0417, 1110, 1117. 690710 Spring-Governor (Silver) Used on Type No(s). 0331, 0431, 0433, 1131, 1138, 1140, 1147. 692072 Spring-Governor (Purple) Used on Type No(s). 0416, 1110, 1122, 1124, 1125.	254	807713	Drain-Carburetor Bowl
187	791766	Line-Fuel (Cut To Required Length) (Used After Code Date 05063000). ----- Note ----- 691050 Line-Fuel (Cut To Required Length) (Used Before Code Date 05070100). 791745 Line-Fuel (Used After Code Date 05063000). Used on Type No(s). 1035, 1121, 1122, 1125, 1131, 1142, 1145, 1146. 296004 Line-Fuel (Used Before Code Date 05070100). Used on Type No(s). 1035, 1121, 1122, 1125, 1131, 1142, 1145, 1146.	211	692069	Spring-Governed Idle	265	691024	Clamp-Casing
			212	690712	Link-Throttle	267	692083	Screw (Casing Clamp)
			216	690705	Link-Choke	268	691025	Casing-Control Wire (Cut To Required Length)
			222	808454	Bracket-Control	269	691026	Wire-Control (Cut To Required Length)
			226	692075	Rod-Hand Choke	270	691027	Nut (Control Wire Casing)
			227	690236	Lever-Governor Control	271	691028	Lever-Control
						273	★690681	Seal-O Ring (Oil Pump)
						276	690704	Washer-Sealing (Crankcase Cover/Sump)
						276A	★△807085	Washer-Sealing (Used After Code Date 01120200). ----- Note ----- 691766 Washer-Sealing (Used Before Code Date 01120300).
						276B	◆●806476	Washer-Sealing (Float Bowl)
						276C	◆●806477	Washer-Sealing (Carburetor Plug)
						276D	692343	Washer-Sealing (Float Bowl)
						278	842122	Washer (Governor Control Lever)

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

9748-17

Assemblies include all parts shown in frames.

11/30/2005

294700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
287A	807084	Screw (Dipstick Tube)	308A	807869	Cover-Cylinder Head (Cylinder 2) (Used After Code Date 91051400). ----- Note -----	310C	692329	Screw (Starter Motor) (5-3/8" Long)
300		Muffler (For Replacement Muffler, Use 692099)				311	496887	Brush Set
300A	807742	Muffler				311A	497608	Brush Set
300B	498984s	Muffler				311B	490311	Brush Set (4 9/16" Housing Length)
300C	692099	Muffler				322	692067	Screw (Cylinder Head Cover)
304A	807814	Housing-Blower (Red) (Without Weld Nut) (Used After Code Date 90111600). ----- Note -----				332	690887	Nut (Flywheel)
		808055 Housing- Blower (Red)	308D	841317	Cover-Cylinder Head (Cylinder 1)	333	492341	Armature-Magneto
		808408 Housing- Blower (Black)	308E	806544	Cover-Cylinder Head (Cylinder 2)	334	692066	Screw (Magneto Armature)
305	692056	Screw (Blower Housing) (14mm)	308F	841182	Cover-Cylinder Head (Cylinder 2) Used on Type No(s). 0435, 1035, 1100, 1102, 1121, 1122, 1124, 1125, 1132, 1142, 1145, 1146, 1147, 1150.	337	491055s	Plug-Spark ----- Note -----
305A	692062	Screw (Blower Housing) (18mm Long)	309	691564	Motor-Starter (Steel Ring Gear Only)			496018 Plug-Spark Used on Type No(s). 0414.
305B	841233	Screw (Blower Housing) (12 mm)	309A		Motor-Starter (For Replacement See Reference 309)			792015 Plug-Spark Used on Type No(s). 1035, 1110, 1121, 1122, 1124, 1125, 1142, 1145, 1146, 1147, 1150.
308	841232	Cover-Cylinder Head (Cylinder 1) (Used After Code Date 91051400). ----- Note -----	309B	499521	Motor-Starter (Services Aluminum Ring Gear Only)	349	690238	Nut (Cylinder Head Cover)
		807656 Cover- Cylinder Head (Cylinder 1) (Used Before Code Date 91051500). 841232 Cover- Cylinder Head (Cylinder 1) Used on Type No(s). 1125, 1150.	309C		Motor-Starter (Services Aluminum Ring Gear Only)(For Replacement See Reference 309B)	351	692083	Screw (Ground Terminal)
			310	496880	Screw (Starter Motor)	355	842122	Washer (Muffler Bracket)
			310A	690323	Screw (Starter Motor)	356	807593	Wire-Stop (Cylinder 2) (Used Before Code Date 90120100).
			310B	691263	Screw (Starter Motor)	356A	807594	Wire-Stop (Cylinder 1) (Used Before Code Date 90120100).
						357	691483	Key-Drive Pulley

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

294700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
358	842722	Gasket Set–Engine (Used After Code Date 01120200). ----- Note ----- 808390 Gasket Set–Engine (Used Before Code Date 01120300).	436C	691501	Manifold–Exhaust (Cylinder 2)(Side Outlet)(Used With Customer Supplied Muffler)	501	691185	Regulator (3 Wire)(16 Amp)
359	691077	Washer (Ground Terminal)	437	691902	Screw (Exhaust Manifold)	501C	691188	Regulator (2 Wire)(9 Amp)
363	19203	Puller–Flywheel	437B	692062	Screw (Exhaust Manifold)	503	691532	Strap–Starter
365A	690695	Screw (Carburetor)	439	692154	Seal–O Ring (Crankcase Cover/Sump)	505	690238	Nut (Governor Control Lever)
373	691612	Nut (Ground Terminal)	445	394018s	Filter–Air Cleaner Cartridge (Round)	506	690677	Screw (Carburetor Cover)
373A	690713	Nut (Ground Terminal)	445A	805113	Filter–Air Cleaner Cartridge (Rectangular)	507	691972	Insulator
377	808095	Key–Woodruff	447	841233	Screw (Air Guide Cover)	510	496881	Drive–Starter
383	19374s	Wrench–Spark Plug ----- Note ----- 19576s Wrench–Spark Plug Used on Type No(s). 1121, 1122, 1124, 1125, 1142, 1145.	455	691517	Cup–Flywheel (Used After Code Date 93072500).	510A	696541	Drive–Starter
385	807084	Screw (Fuel Pump)	455A	805153	Cup–Flywheel (Used Before Code Date 93072600).	510B	696540	Drive–Starter
387	808656	Pump–Fuel	456	691529	Plate–Pawl Friction	513	692024	Clutch–Drive
402	690679	Screw (Oil Filter Cover)	456A	224228	Plate–Pawl Friction	515	691528	Spring–Pawl
403A	690288	Washer (End Cap)	459	808166	Pawl–Ratchet	520	691084	Terminal–Ground (Brass)
413	693587	Nut (Starter Motor)	459A	492431	Pawl–Ratchet	520A	809077	Terminal–Ground (Ignition Shutoff)
415	690283	Plug (Square Head)	467	691985	Knob–Air Cleaner	523	692101	Dipstick
436	692061	Manifold–Exhaust (Cylinder 2)(Side Outlet)(Used With Customer Supplied Muffler)	467A	690895	Knob–Air Cleaner	524	★692053	Seal–Dipstick Tube
436B	691502	Manifold–Exhaust (Cylinder 1)(Side Outlet)(Used With Customer Supplied Muffler)	474A	696578	Alternator (DC Only) Used on Type No(s). 1121, 1122, 1124, 1125, 1142, 1145.	525	692093	Tube–Dipstick
			474C	696457	Alternator (Tri Circuit)	526	692067	Screw (Regulator)
			474D	696458	Alternator (Regulated) Used on Type No(s). 0435, 1035, 1100, 1110, 1130, 1131, 1133, 1146.	526A	690717	Screw (Regulator)(5 To 9 Amp Regulated) (Used After Code Date 90021400). ----- Note -----
						527	690423	Clamp–Tube
						529	690744	Grommet
						544		Armature–Starter (For Replacement Armature, Order Reference 309)
						544A		Armature–Starter (Serviced By 499521 Starter Motor Only)
						544B		Armature–Starter (Serviced By 499521 Starter Motor Only)
						544C	490309	Armature–Starter

★ Included in Engine Gasket Set–Ref. No. 358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

△ Included in Valve Gasket Set–Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

9748–19

Assemblies include all parts shown in frames.

11/30/2005

294700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
552	690701	Bushing-Governor Crank	615	691550	Retainer-Governor Shaft (Used After Code Date 99072000).	711	690699	Screw (Carburetor Shield)
552A	806686	Bushing-Governor Crank				711A	807084	Screw (Carburetor Shield)
562	690239	Bolt (Governor Control Lever)	616	806685	Crank-Governor	718	806469	Pin-Locating
563	691982	Screw (Debris Screen Guard)	616A	690899	Crank-Governor (Used Before Code Date 99072100).	718A	805102	Pin-Locating (Used Before Code Date 90091100).
565	690682	Stud (Oil Filter Adapter)	628A	806660	Screw (Fuel Pump Bracket)	725	806102	Shield-Heat
572	690686	Baffle-Breather	633 ♦ 690738		Seal-Choke/Throttle Shaft	726		Gear-Ring (Steel)(See Reference 23 for Service)
573	841310	Plate-Back	635	692076	Boot-Spark Plug	727	841313	Cover-Starter Drive (Black)
578	692306	Wire Assembly (1 Wire, 48-1/2" Long)(Snap Connect Female Pin Socket, And Bare Wire End)	637	● 690735	Washer (Throttle Shaft)	728	690297	Screw (Heat Shield)
578A	692319	Wire Assembly (With Diodes)	638	690706	Washer (Cylinder Head Cover)	729	805827	Clip-Wire (Black)(Spring Steel)
596	691492	Screw (Oil Pump)	638A	691551	Washer (Cylinder Head Cover) (Used Before Code Date 03110100).	729B	690586	Clip-Wire (Snap In)(Nylon)
597	690876	Screw (Pawl Friction Plate)	643	692079	Retainer-Air Filter	732	690688	Screw (Starter Drive Cover)
597A	94463	Screw (Pawl Friction Plate)	650	691982	Screw (Oil Deflector)	732A	841233	Screw (Starter Drive Cover)
598	807625	Shim-End Play (Crankshaft or Camshaft Bearing)	654	690939	Nut (Carburetor)	737	690679	Screw (Oil Filter Adapter)
601	841859	Clamp-Hose (Silver)	668	● 691500	Spacer (Knurled Insert)	739	690451	Clip-Debris
		----- Note -----	668A	690737	Spacer	741	691530	Gear-Timing
		691638 Clamp-Hose (Silver)	668B	691215	Spacer	742	● 805578	Retainer-E Ring
		Used on Type No(s). 1110, 1121, 1122.	676	393761	Deflector-Muffler (Side Out)	748	692083	Screw (Control Rod Clip)
601B	791850	Clamp-Hose (Silver)	676A	397630	Deflector-Muffler (Dual Louvered)	763	808190	Kit-Starter (For 12 Volt Gear Drive)(Aluminum Ring Gear)
608	692102	Starter-Rewind (Used After Code Date 93072500).	677	690661	Screw (Muffler Deflector)			Used on Type No(s). 0111, 0119, 0419, 0432, 0433, 1119.
608B	808152	Starter-Rewind (Used Before Code Date 93072600).	689A	262564	Spring-Friction	773	690875	Retainer (Pawl Friction Plate)
613A	692056	Screw (Muffler)	691	690680	Seal-Governor Shaft	783	695708	Gear-Pinion (Services Aluminum Ring Gear Only)
			695	693149	Screw (Ring Gear)	788	691559	Bracket-Fuel Pump
			697	692062	Screw (Drive Cap)	797	693167	Nut (Brush Retainer)
			706	805484	Washer (Breather Assembly)			
			710	807689	Cover-Oil Filter			

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

♦ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

294700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
797B	691029	Nut (Brush Retainer)	833	690872	Screw (Air Cleaner Mounting Strap/Stud)	879	841860	Cover-Carburetor
801	808778	Cap-Drive				882	692074	Flange-Exhaust
801A	691283	Cap-Drive	833A	841233	Screw (Air Cleaner Mounting Strap/Stud)	883A	★△691613	Gasket-Exhaust
802	496813	Cap-End				884	690898	Clamp-Muffler (1 9/64" Inside Diameter) Used on Type No(s). 0112, 0411, 0418, 0430, 1118, 1130, 1138, 1140, 1142.
802A	691286	Cap-End	833B	690699	Screw (Air Cleaner Mounting Strap/Stud)			
802B		Cap-End (Serviced By 499521 Starter Motor Only)	842	★691870	Seal-O Ring (Dipstick Tube)	884A	691956	Clamp-Muffler (1 1/4" Inside Diameter)
803	690854	Housing-Starter	851	493880s	Terminal-Spark Plug	896	691641	Pin-Drive Retainer
803A	693547	Housing-Starter	862	692542	Strap/Stud-Air Cleaner Mounting	918	393815	Hose-Vacuum (Cut To Required Length)
803B		Housing-Starter (Serviced By 499521 Starter Motor Only)	862A	690896	Strap/Stud-Air Cleaner Mounting	947	806472	Solenoid-Fuel (Used After Code Date 98062600).
803C	494205	Housing-Starter (4-3/8" Housing Length) ----- Note ----- 398892 Housing-Starter (4 9/16" Housing Length)	863	691513	Bracket-Muffler	947B	807744	Solenoid-Fuel (Used Before Code Date 98062700).
			863A	224359	Bracket-Muffler	949	690475	Guard-Debris Screen
			863B	805610	Bracket-Muffler	950	691511	Screw-Float Bowl
			865	841312	Cover-Air Guide (Black)	955	691511	Plug-Carburetor
			865A	841319	Cover-Air Guide (Black)	955A	807714	Plug-Carburetor
807	●690733	Spacer-Throttle	868	△691963	Seal-Valve	967	272490s	Filter-Pre Cleaner (Round)
812	692055	Nut (Rocker Cover) (Used Before Code Date 01120300).	871	692057	Bushing-Valve Guide	967A	805267s	Filter-Pre Cleaner (Rectangular)
			875	690894	Base-Air Cleaner (Plastic)	968	699959	Cover-Air Cleaner (Used With Metal Air Cleaner Base)
816	690706	Washer (Oil Filter Adapter)	876	696539	Kit-Pinion Spring	968A	690694	Cover-Air Cleaner (Used With Plastic Air Cleaner Base)
819	692056	Screw (Muffler Bracket)	877A	393814	Wire/Connector- Alternator (DC Only)	971A	692537	Screw (Air Cleaner Base to Carburetor)
819A	692067	Screw (Muffler Bracket)	877B	393537	Wire/Connector- Alternator	975	807715	Bowl-Float
819B	692198	Screw (Muffler Bracket) (Used Before Code Date 97012400).	877C	399916	Wire/Connector- Alternator (2 Wires, 7-53/64" Long)(2 Bare Wire Ends, And Insulated Snap Connect Male Pin Terminal)			
819D	690297	Screw (Muffler Bracket)	878A	691955	Harness-Alternator (3 Wires, 5", 48", And 48" Long)(Snap Connect Pin Socket, 2 Bare Wire Ends, And 2 Insulated Rectifier)			
830	809157	Stud-Rocker Arm (Used After Code Date 96033100).						
830A	691497	Stud-Rocker Arm (Used Before Code Date 96040100).						

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

9748-21

Assemblies include all parts shown in frames.

11/30/2005

294700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
977	808325	Gasket Set-Carburetor (Used After Code Date 92040600). ----- Note ----- 807716 Gasket Set-Carburetor (Used Before Code Date 92040700).	1023B	691494	Cover-Rocker	1051	690736	Ring-Retaining
			1024	693186	Pump-Oil	1051A	691124	Ring-Retaining
			1025	690689	Spool-Governor	1051B	691265	Ring-Retaining
			1026	691836	Rod-Push (Intake)(Steel) ----- Note ----- 691758 Rod-Push (Exhaust)(Aluminum)	1054	280275	Tie-Cable
						1058	276353	Operator's Manual
						1059	698516	Kit-Screw/Washer
987	691548	Seal-Throttle Shaft (Used After Code Date 92040600). ----- Note ----- 690734 Seal-Throttle Shaft (Used Before Code Date 92040700).	1027	491056	Filter-Oil (3 1/4" Long) ----- Note ----- 492932s Filter-Oil (2 1/4" Long) Used on Type No(s). 0035, 0109, 0113, 0118, 0332, 0335, 0417, 0418, 0429, 0430, 0435, 1034, 1035, 1100, 1102, 1110, 1117, 1118, 1119, 1120, 1121, 1122, 1124, 1125, 1130, 1131, 1133, 1142, 1145, 1146.	1083A	690958	Nut (End Cap)
						1090	691293	Retainer-Brush
988	692063	Gasket-Oil Adapter				1091	691515	Cap-Limiter
988A	690687	Gasket-Oil Adapter				1095	842723	Gasket Set-Valve (Used After Code Date 01120200). ----- Note ----- 808392 Gasket Set-Valve (Used Before Code Date 01120300).
996	691577	Shield-Carburetor						
996A	690696	Shield-Carburetor				1100	690973	Pivot-Rocker Arm
1004	690743	Duct-Air (Used With Metal Air Cleaner Base)				1119	691552	Screw (Alternator)
1004A	692538	Duct-Air (Used With Plastic Air Cleaner Base)	1028	808235	Adapter-Oil Filter ----- Note ----- 808033 Adapter-Oil Filter Used on Type No(s). 0418, 0430, 1118, 1130, 1140, 1142.	1121	810056	Nut (Fuel Pump Bracket)
						1122	93410	Screw (Blower Housing Adapter)
1011	692929	Tube-Vent (Cut To Required Length) Used on Type No(s). 1110, 1120, 1121, 1122, 1124, 1125.				1130	690746	Stud (Intake Manifold)
1017	690878	Screen-Oil Pump	1029	807323	Arm-Rocker	1134	94464	Washer (Pawl Friction Plate)
1019	808035	Kit-Label	1030	691496	Support-Rocker Arm	1134A	94462	Washer (Pawl Friction Plate)
1022	806039s	Gasket-Rocker Cover	1031	690693	Shaft-Rocker Arm	1254	807084	Screw (Rocker Cover Stud)(Used on Stud For Rocker Cover) (Used After Code Date 01120200).
1023A	691558	Cover-Rocker (Cylinder 1) (With Fuel Pump)	1036		Label-Emissions (Available from an Authorized Briggs & Stratton Service Dealer)	1330	272144	Repair Manual
						1346	492031	Valve-Oil Drain Shut Off
			1037	807717	Ball-Choke Locator			
			1044	692056	Screw (Flywheel)			

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.