



407600

Illustrated Parts List

Model Series

407600

TYPE NUMBERS
0101 through 0259.

TABLE OF CONTENTS

Air Cleaner	5
Alternator	7
Blower Housing	5
Camshaft	2
Carburetor	4
Controls	6
Engine Sump	2
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electric Starter	6
Flywheel	6
Gasket Set – Engine	4
Gasket Set – Valve	4
Governor Spring	6
Kit – Carburetor Overhaul	4
Piston	2
Valves	3


BRIGGS & STRATTON



PRINTED IN U.S.A.







COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted,
in any form or by any means, electronic or mechanical, including photocopying,
recording or by any information storage and retrieval system, without permission
in writing from Briggs & Stratton Corporation.

407600

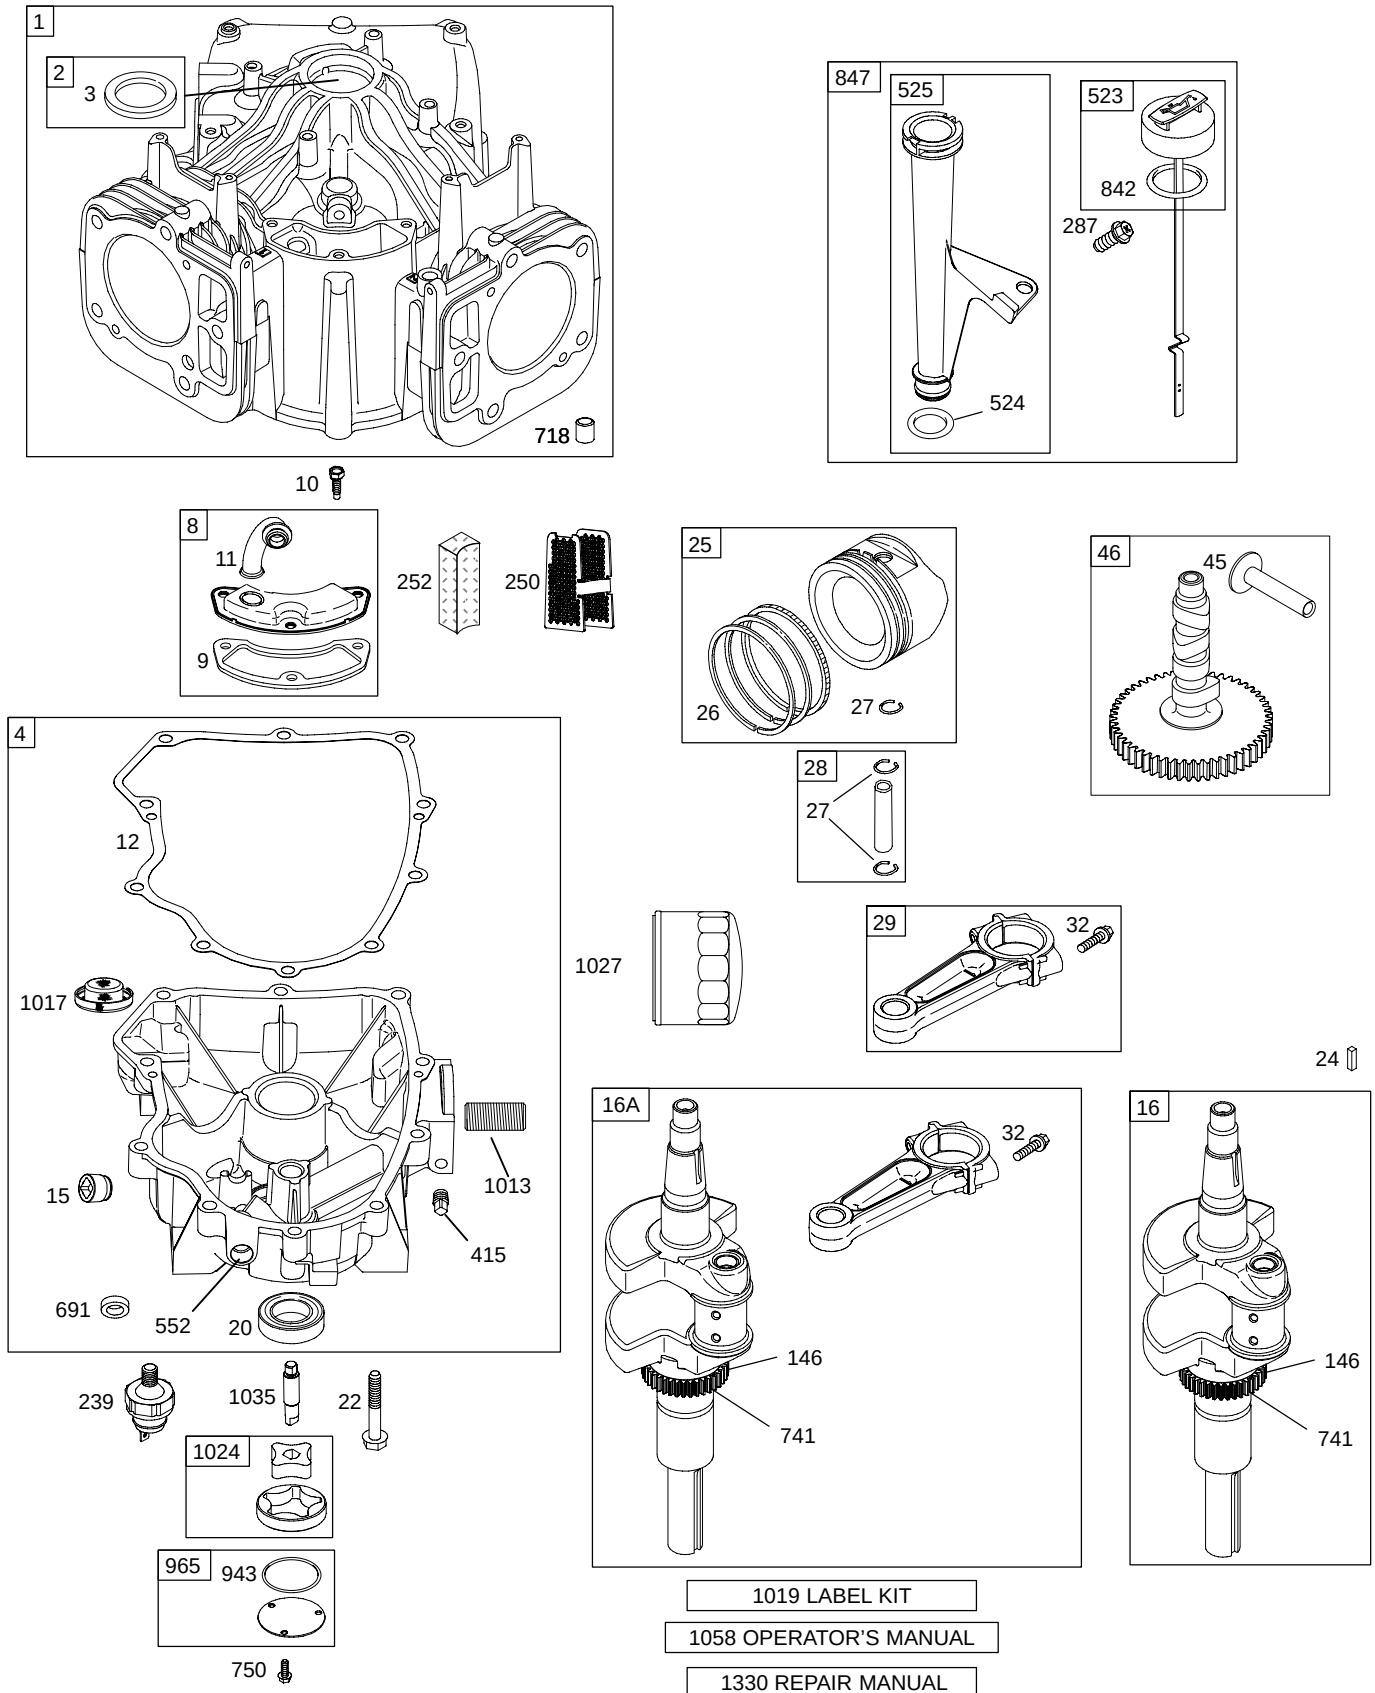







Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5558-2 Assemblies include all parts shown in frames. 10/13/2004


407600

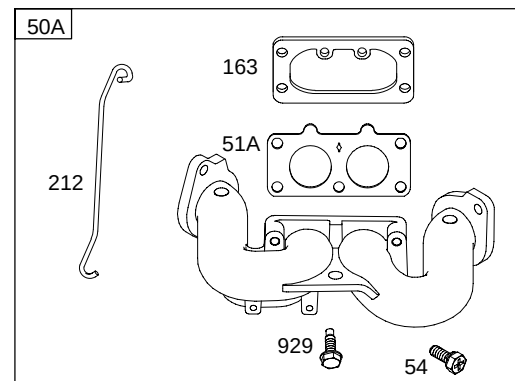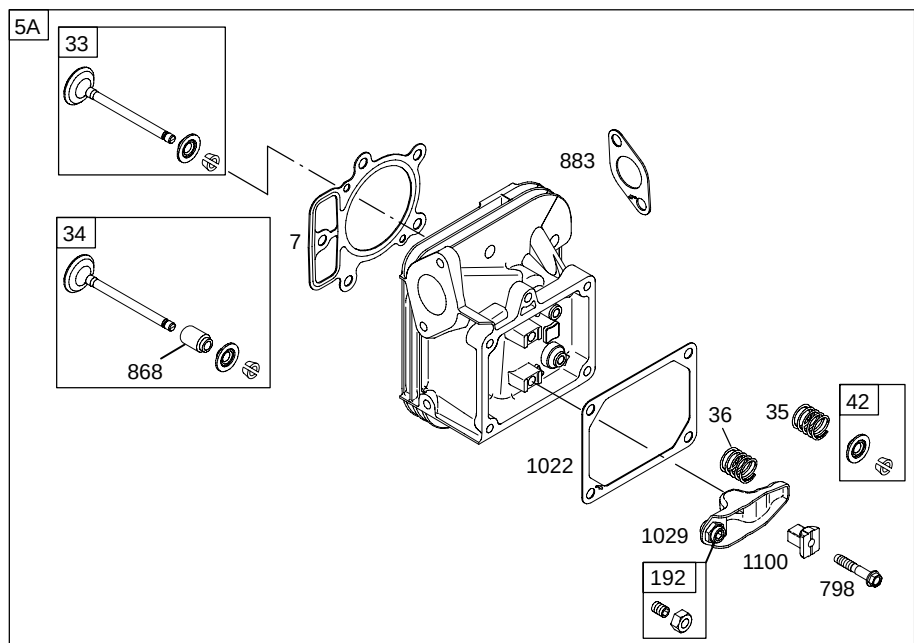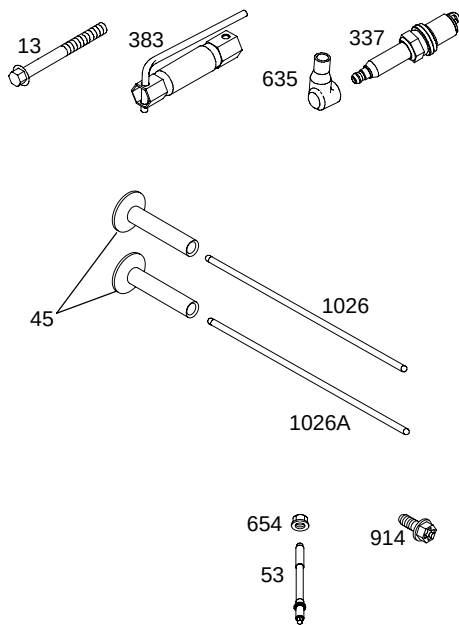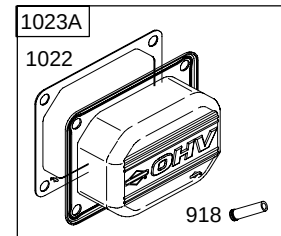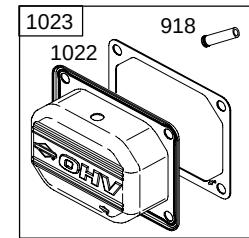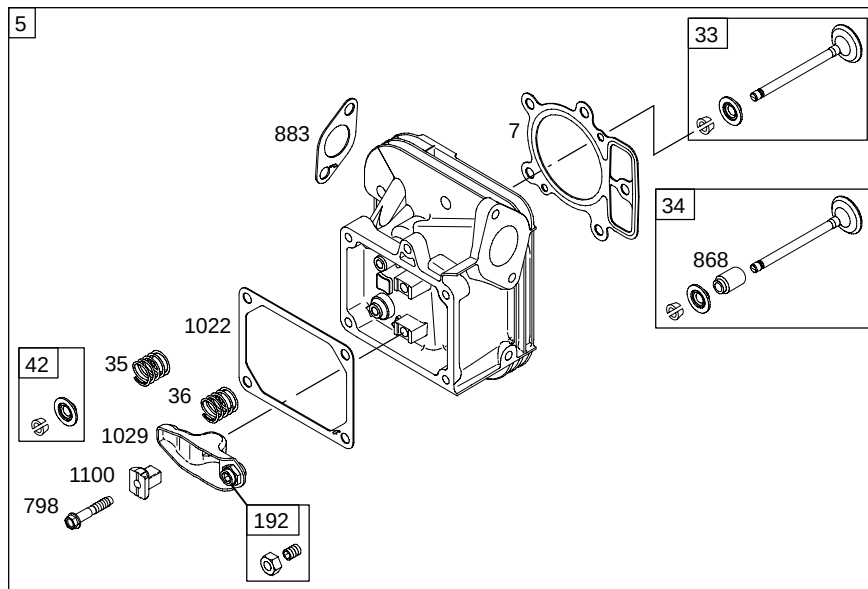


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5558-3 Assemblies include all parts shown in frames. 10/13/2004

407600

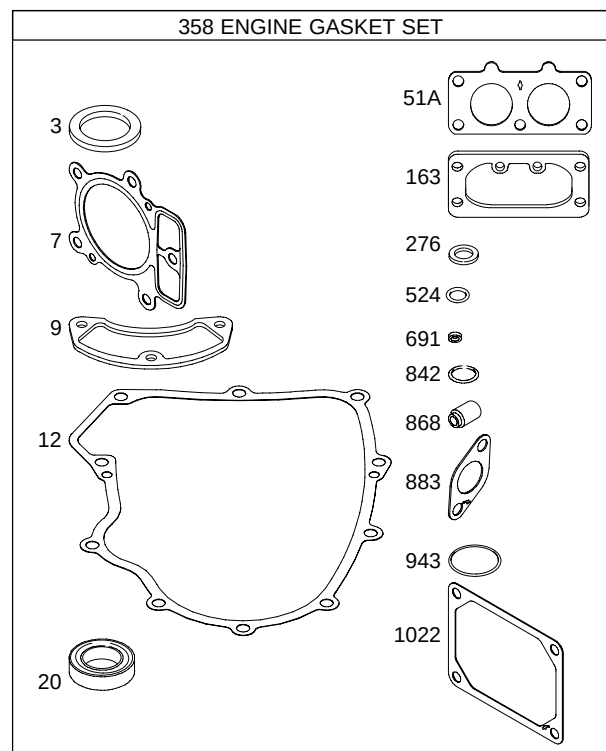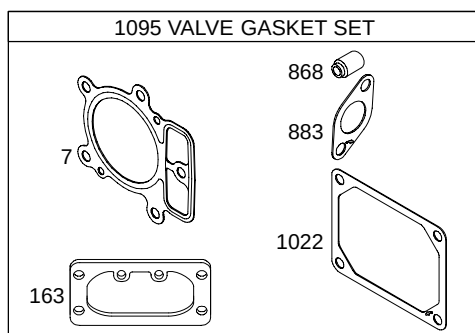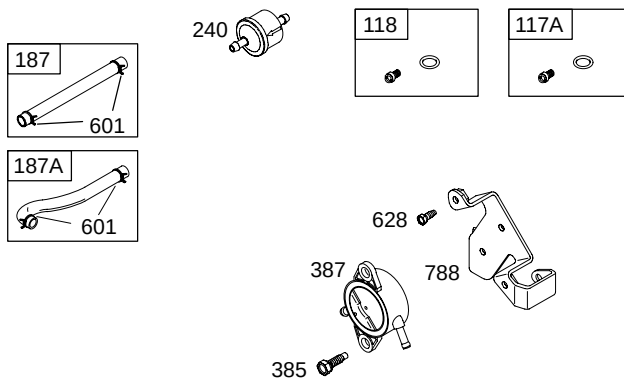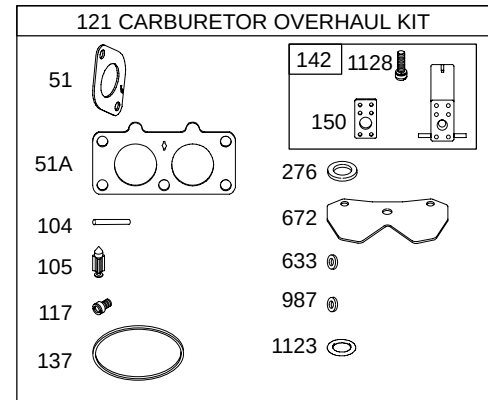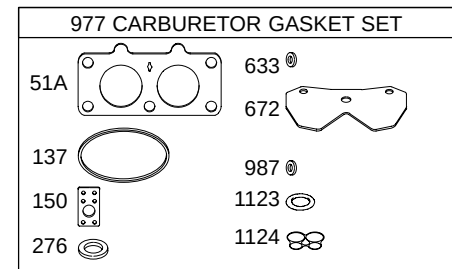
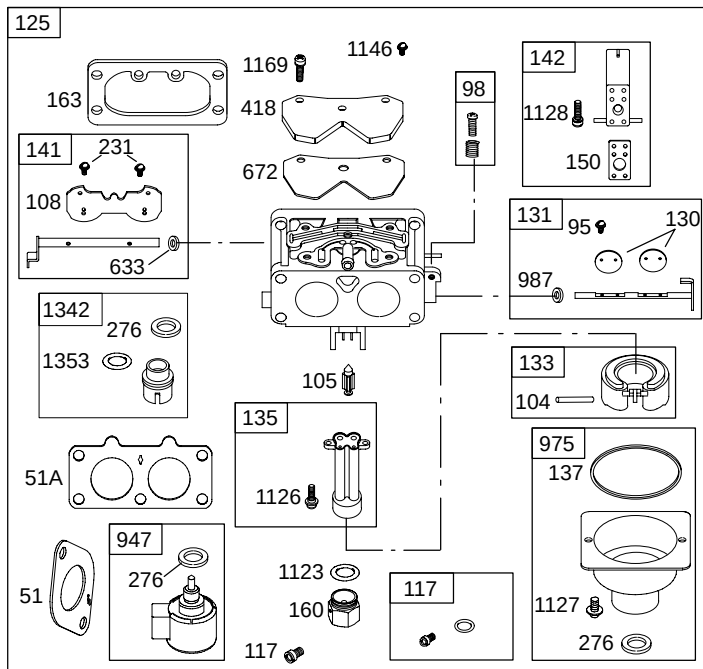




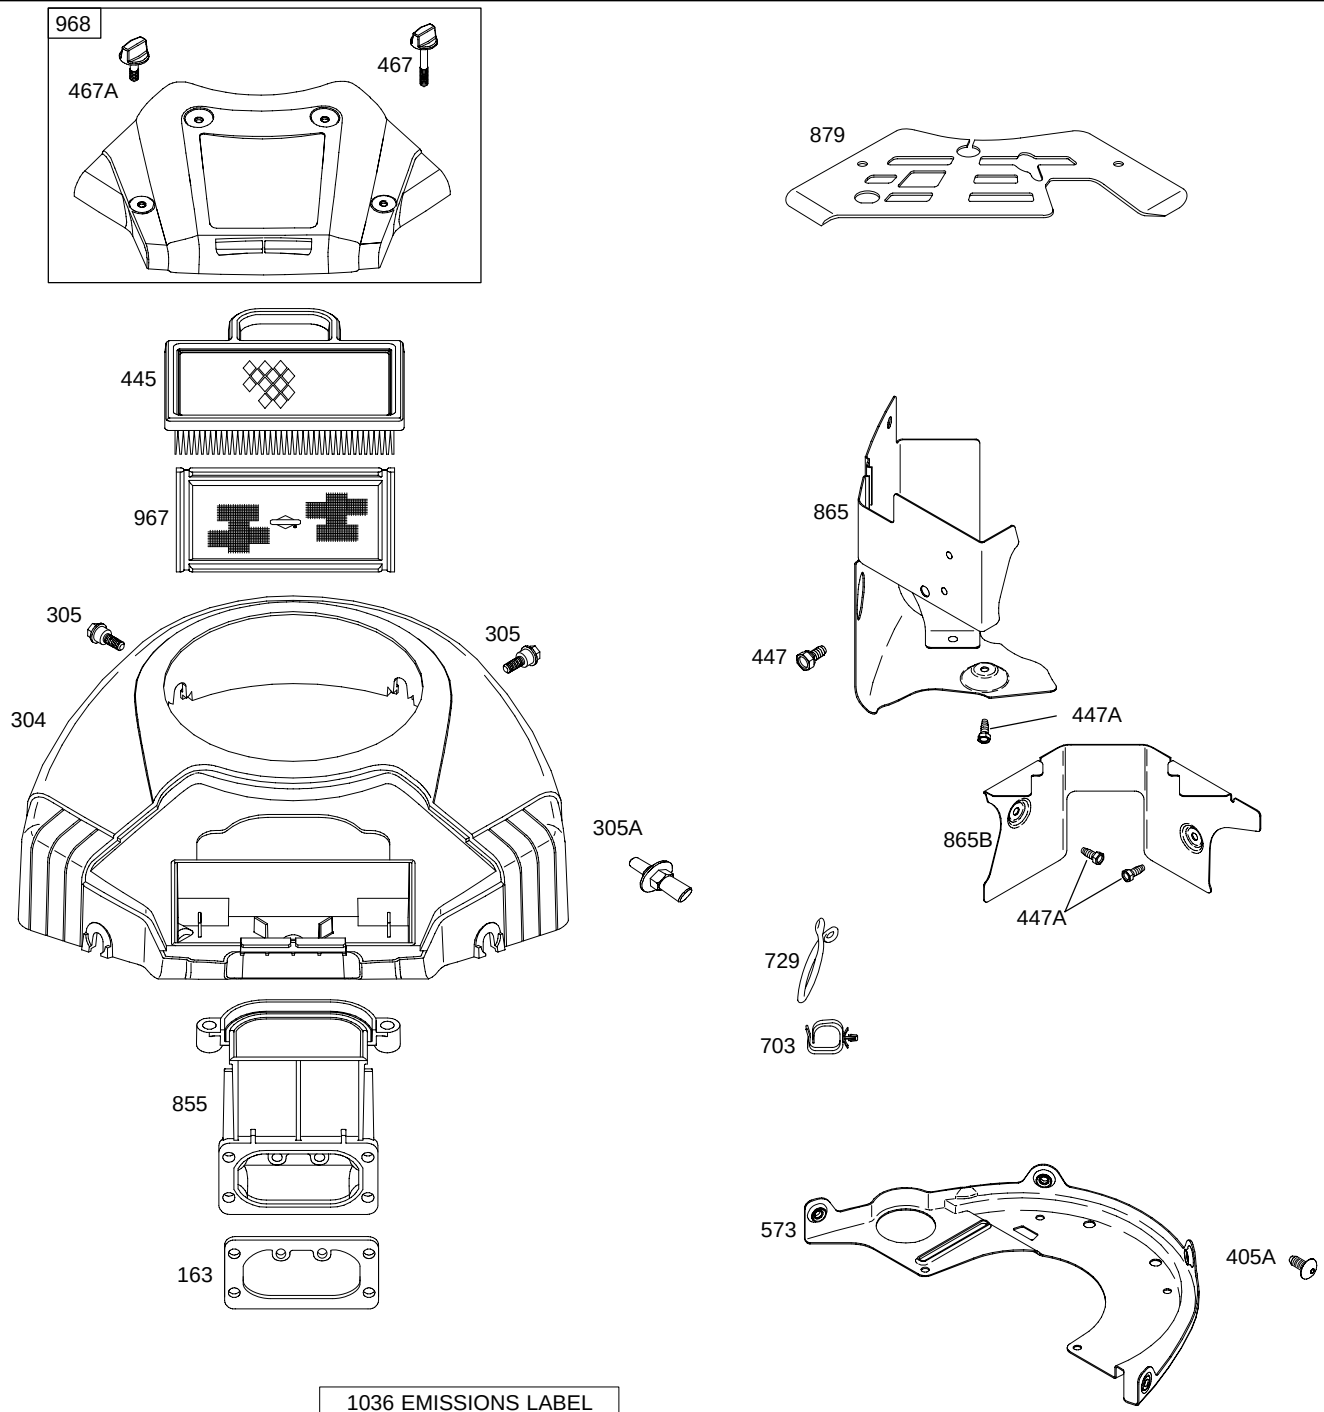


407600

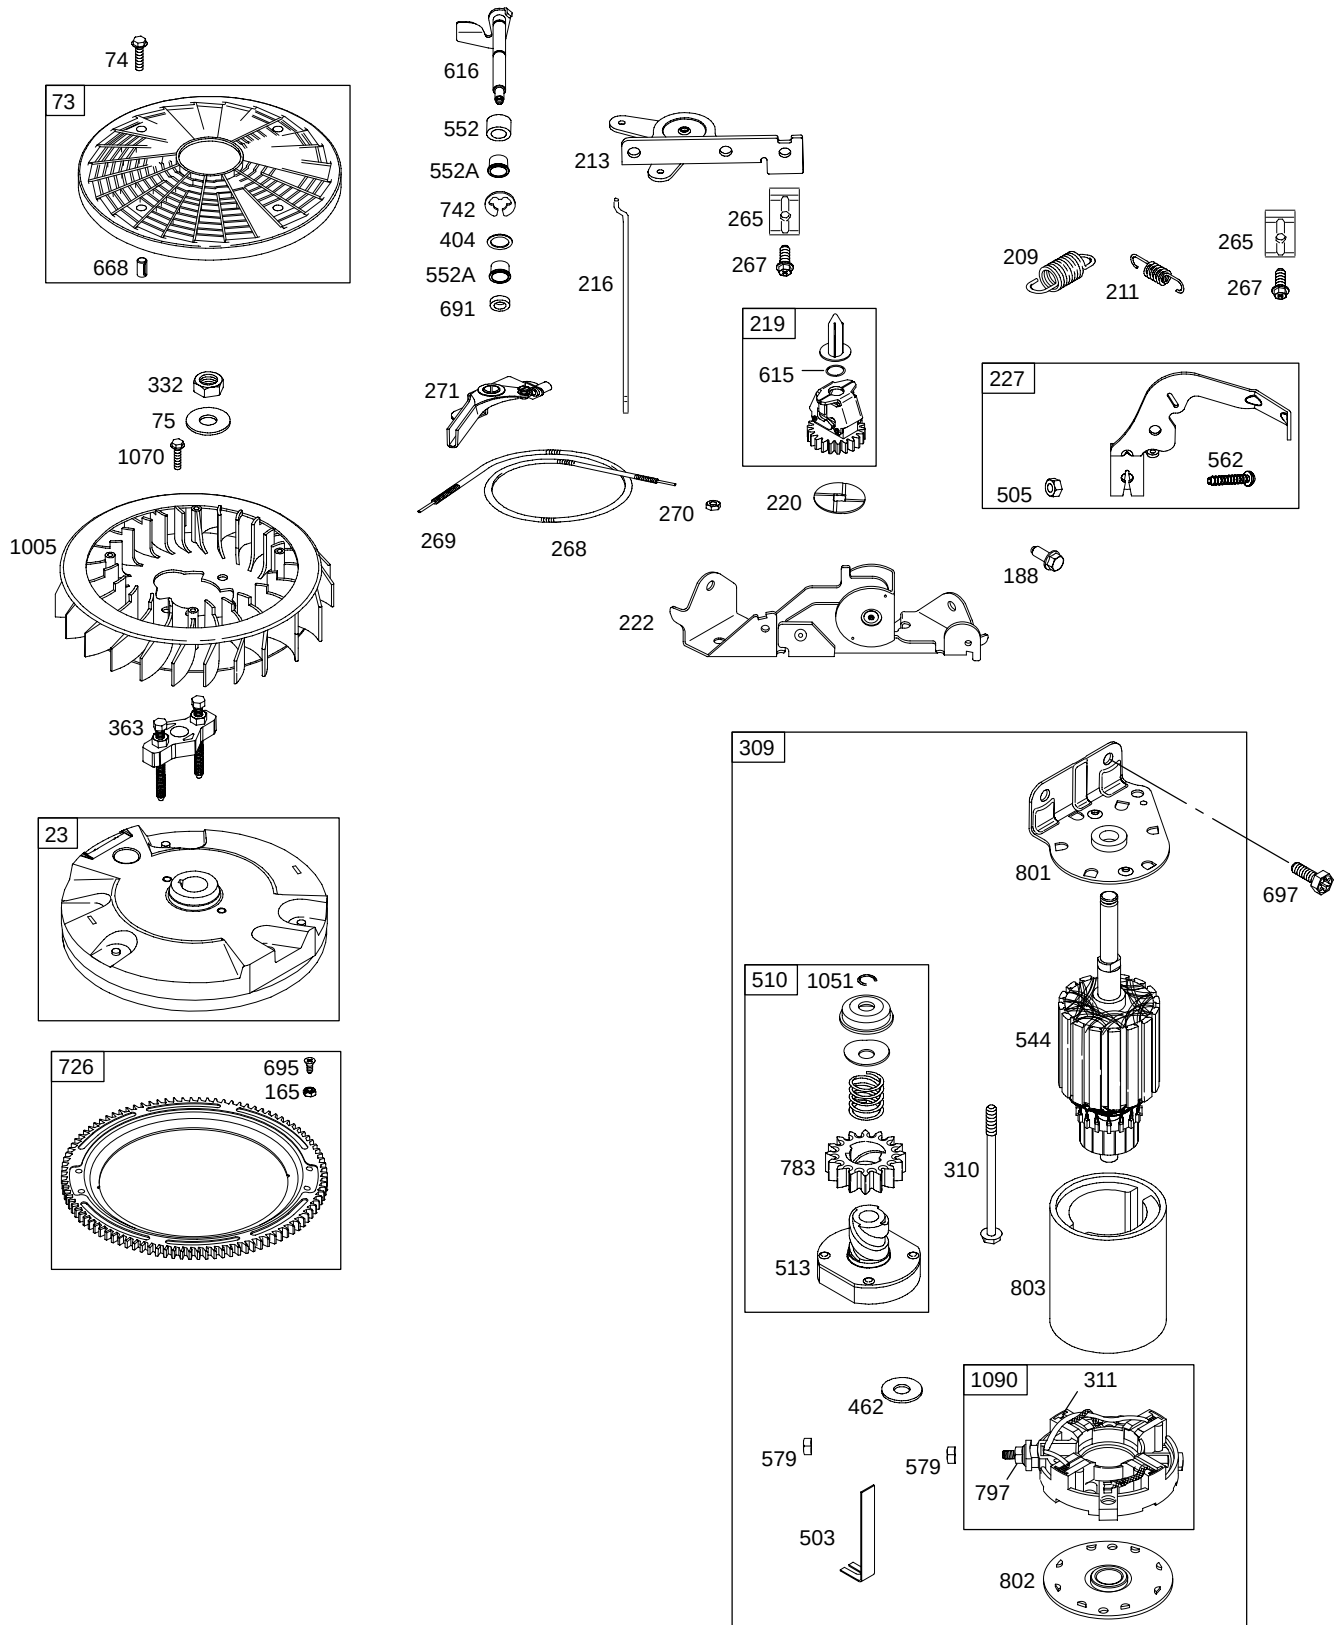

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5558-6 Assemblies include all parts shown in frames. 10/13/2004

DUAL CIRCUIT		10 – 16 AMP	
474B	1059	474D	1059
877		877C	
		578 	
NOTE: All Stators Use a No. 1119 Mounting Screw.  NOTE: The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information.		501	526 

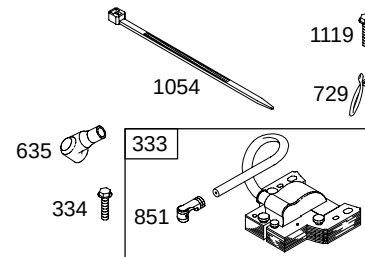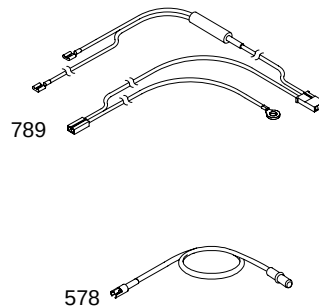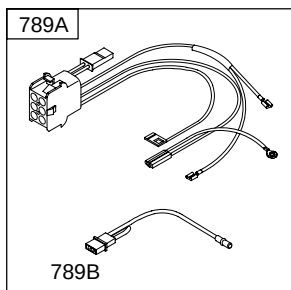

407600

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	699751	Cylinder Assembly (Used After Code Date 03082800). ----- Note ----- 699742 Cylinder Assembly (Used Before Code Date 03082900).	20	★690947	Seal-Oil (PTO Side)	46	790562	Camshaft (Used After Code Date 04082300). ----- Note ----- 690978 Camshaft (Used Before Code Date 03082900).
2	499585	Kit-Bushing/Seal (Magnetos Side)	22	694966	Screw (Crankcase Cover/Sump)	50A	695241	Manifold-Intake (Plastic)
3	★391086	Seal-Oil (Magnetos Side)	23	691053	Flywheel ----- Note ----- 691054 Flywheel Used on Type No(s). 0101, 0182, 0229, 0233, 0258, 0259.	51★●◆690949		Gasket-Intake
4	699747	Sump-Engine (Used After Code Date 03082800). ----- Note ----- 690069 Sump-Engine (Used Before Code Date 03082900).	24	222698	Key-Flywheel	51A★●△690950		Gasket-Intake
5	693998	Head-Cylinder (Cylinder 1)	25	499588	Piston Assembly (Standard) ----- Note ----- 499590 Piston Assembly (.020" Oversize)	53	690951	Stud (Carburetor)
5A	693999	Head-Cylinder (Cylinder 2)	26	499604	Ring Set (Standard) ----- Note ----- 499606 Ring Set (.020" Oversize)	54	699816	Screw (Intake Manifold) (Used After Code Date 04110400). ----- Note ----- 695240 Screw (Intake Manifold) (Used Before Code Date 04110500).
7	★690962	Gasket-Cylinder Head	27	690975	Lock-Piston Pin	73	494439	Screen-Rotating
8	499601	Breather Assembly	28	690229	Pin-Piston (Standard)	74	698425	Screw (Rotating Screen)
9	★690937	Gasket-Breather	29	699699	Rod-Connecting (Standard) (Used After Code Date 04122700). ----- Note ----- (For Replacement Connecting Rod, See Reference 16A) (Used Before Code Date 04122800).	75	691056	Washer (Flywheel)
10	691108	Screw (Breather Assembly)	32	690976	Screw (Connecting Rod)	95	690718	Screw (Throttle Valve)
11	690942	Tube-Breather	33	499596	Valve-Exhaust	98	699721	Kit-Idle Speed (Used After Code Date 04100500). ----- Note ----- 499802 Kit-Idle Speed (Used Before Code Date 04100600).
12	★697227	Gasket-Crankcase	34	697464	Valve-Intake	104	●694918	Pin-Float Hinge (Used After Code Date 04100500). ----- Note ----- 690984 Pin-Float Hinge (Used Before Code Date 04100600).
13	791130	Screw (Cylinder Head) (Used After Code Date 04111500). ----- Note ----- 690360 Screw (Cylinder Head) (Used Before Code Date 04111600).	35	690963	Spring-Valve (Intake)			
15	691680	Plug-Oil Drain	36	690963	Spring-Valve (Exhaust)			
16	699700	Crankshaft (Used After Code Date 03122700).	42	499586	Keeper-Valve			
16A	699701	Crankshaft (Used Before Code Date 03122800).	45	690977	Tappet-Valve			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5558-8

Assemblies include all parts shown in frames.

10/13/2004

407600

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
105	●698537	Valve-Float Needle (Used After Code Date 04100500). ----- Note ----- 690985 Valve- Float Needle (Used Before Code Date 04100600).	135	●699729	Tube-Fuel Transfer (Used After Code Date 04100500). ----- Note ----- 499803 Tube-Fuel Transfer (Used Before Code Date 04100600).	211	691019	Spring-Governed Idle
108	699723	Valve-Choke (Used After Code Date 04100500). ----- Note ----- 690986 Valve-Choke (Used Before Code Date 04100600).	137	●Δ690994	Gasket-Float Bowl	212	695238	Link-Throttle
117	699732	Jet-Main (Standard) (Used After Code Date 04100500). ----- Note ----- 690232 Jet-Main (Standard) (Used Before Code Date 04100600).	141	699722	Kit-Choke Shaft	213	691021	Bracket-Choke Control
117A	699733	Jet-Main (Standard) (Used After Code Date 04100500).	142	●699726	Nozzle-Carburetor (Standard) (Used After Code Date 04100500). ----- Note ----- 499808 Nozzle-Carburetor (Standard) (Used Before Code Date 04100600).	216	691022	Link-Choke
118	699820	Jet-Main (High Altitude) (Used Before Code Date 04100600).	146	690979	Key-Timing	219	698231	Gear-Governor
121	699734	Kit-Carburetor Overhaul (Used After Code Date 04100500). ----- Note ----- 499811 Kit-Carburetor Overhaul (Used Before Code Date 04100600).	150	●Δ690995	Gasket-Nozzle	220	690412	Washer (Governor Gear)
125	699709	Carburetor	160	699727	Retainer-Solenoid (Used After Code Date 04100500). ----- Note ----- 690996 Retainer- Solenoid (Used Before Code Date 04100600).	222	698761	Bracket-Control ----- Note ----- 698757 Bracket- Control Used on Type No(s). 0232, 0233.
130	690993	Valve-Throttle	163	★●691001	Gasket-Air Cleaner	227	691048	Lever-Governor Control
131	499805	Kit-Throttle Shaft	165	693148	Nut (Ring Gear)	231	690718	Screw (Choke Valve)
133	699724	Float-Carburetor (Used After Code Date 04100500). ----- Note ----- 499806 Float-Carburetor (Used Before Code Date 04100600).	187	691050	Line-Fuel (Cut To Required Length)	239	491657	Switch-Oil Pressure
			187A	691049	Line-Fuel (Molded)	240	691035	Filter-Fuel
			188	691108	Screw (Control Bracket)	250	690957	Retainer-Breather
			192	690083	Adjuster-Rocker Arm	252	690956	Collector-Oil
			209	697674	Spring-Governor ----- Note ----- 693102 Spring- Governor Used on Type No(s). 0259.	265	691024	Clamp-Casing
					698071 Spring- Governor Used on Type No(s). 0101.	267	691044	Screw (Casing Clamp)
						268	691025	Casing-Control Wire (Cut To Required Length)
						269	691026	Wire-Control (Cut To Required Length)
						270	691027	Nut (Control Wire Casing)
						271	691028	Lever-Control
						276★●Δ690997	Washer-Sealing	
						287	691108	Screw (Dipstick Tube)
						304	790692	Housing-Blower (Black)
						305	691005	Screw (Blower Housing)
						305A	698336	Screw (Blower Housing) Used on Type No(s). 0182, 0201.
						309	497595	Motor-Starter
						311	497608	Brush Set
						332	691059	Nut (Flywheel)

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Δ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5558-9

Assemblies include all parts shown in frames.

10/13/2004

407600

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
333	691060	Armature-Magneto	503	691532	Strap-Starter	726	499612	Gear-Ring
334	691061	Screw (Magneto Armature)	505	691029	Nut (Governor Control Lever)	729	694123	Clip-Wire
337	491055	Plug-Spark	510	696541	Drive-Starter	741	690980	Gear-Timing
		----- Note -----	513	692024	Clutch-Drive	742	690328	Retainer-E Ring
		691043 Plug-Spark	523	691036	Dipstick	750	696999	Screw (Oil Pump Cover)
		Used on Type No(s).	524	★691032	Seal-Dipstick Tube	783	695708	Gear-Pinion
		0182, 0201, 0229,	525	691037	Tube-Dipstick	788	691039	Bracket-Fuel Pump
		0232, 0233, 0258,	526	691108	Screw (Regulator)(10-16 Amp Regulated)	789	691220	Harness-Wiring
		0259.				789A	698330	Harness-Wiring (6 Pin Customer Conversion)
358	694012	Gasket Set-Engine	544	692034	Armature-Starter	789B	790544	Harness-Wiring
363	19203	Puller-Flywheel	552	690552	Bushing-Governor Crank	797	693167	Nut (Brush Retainer)
383	19374	Wrench-Spark Plug	552A	690553	Bushing-Governor Crank	798	697890	Screw (Rocker Arm)
385	691108	Screw (Fuel Pump)	562	690311	Bolt (Governor Control Lever)	801	691283	Cap-Drive
387	808656	Pump-Fuel				802	691286	Cap-End
404	690442	Washer (Governor Crank)	573	790444	Plate-Back	803	693757	Housing-Starter
405A	697820	Screw (Back Plate)(Mounting)	578	691208	Wire Assembly	842	★691031	Seal-O Ring (Dipstick Tube)
415	690283	Plug (Sump)	579	691029	Nut (Starter Cable)	847	499602	Dipstick/Tube Assembly
418	690999	Plate-Carburetor	601	95162	Clamp-Hose	851	493880	Terminal-Spark Plug
445	499486	Filter-Air Cleaner Cartridge	615	698290	Retainer-Governor Shaft	855	691011	Adapter-Air Cleaner
447	691003	Screw (Air Guide Cover)	616	691045	Crank-Governor	865	691012	Cover-Air Guide (Cylinder 1)
447A	691108	Screw (Air Guide Cover)	628	691108	Screw (Fuel Pump Bracket)	865	691014	Cover-Air Guide (Cylinder 2)
462	691261	Washer (Starter Cable)	633	◆690998	Seal-Choke/Throttle Shaft	865B	691015	Cover-Air Guide (Valley)
467	691008	Knob-Air Cleaner	635	66538	Boot-Spark Plug	868	★690968	Seal-Valve
467A	790697	Knob-Air Cleaner	654	690958	Nut (Carburetor)	877	393456	Wire/Connector- Alternator (Dual Circuit)
474B	696459	Alternator (Dual Circuit)	668	691215	Spacer	877C	399916	Wire/Connector- Alternator (10-16 Amp Regulated)
474D	696458	Alternator (10-16 Amp Regulated) Used on Type No(s).	672	◆690234	Gasket-Carburetor Plate			
		0201, 0232.	691	★690657	Seal-Governor Shaft	879	690757	Cover-Carburetor
501	691185	Regulator (10-16 Amp Regulated) Used on Type No(s).	695	693149	Screw (Ring Gear)	883	★690970	Gasket-Exhaust
		0201, 0232.	697	690372	Screw (Drive Cap)	914	691127	Screw (Rocker Cover)
			703	691010	Clip	918	694000	Hose-Vacuum
			718	690959	Pin-Locating			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5558-10

Assemblies include all parts shown in frames.

10/13/2004

407600

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
929	695239	Screw (Choke Control Bracket)	1035	691042	Shaft-Pump	1124	690988	Seal-O Ring (Fuel Transfer Tube)
943	★690589	Seal-O Ring (Oil Pump Cover)	1036	790626	Label-Emissions (Used After Code Date 04120500). ----- Note -----			(Used Before Code Date 04100600).
947	699728	Solenoid-Fuel (Used After Code Date 04100500). ----- Note -----		790625	Label-Emissions (Used After Code Date 04063000 and Before Code Date 04120600).	1126	690991	Screw (Fuel Transfer Tube)
	499809	Solenoid-Fuel (Used Before Code Date 04100600).		695704	Label-Emissions (Used Before Code Date 04070100).	1127	690992	Screw (Float Bowl)
965	499613	Cover-Oil Pump				1128	690990	Screw (Carburetor Nozzle)
967	273638	Filter-Pre Cleaner	1051	691265	Ring-Retaining	1146	690718	Screw (Choke Shaft)
968	790095	Cover-Air Cleaner	1054	280275	Tie-Cable	1169	693140	Screw (Carburetor Cover Plate)
975	499810	Bowl-Float	1058	276245	Operator's Manual			(Used Before Code Date 03081100).
977	699735	Gasket Set-Carburetor	1059	698516	Kit-Screw/Washer	1330	273521	Repair Manual
987	●△691000	Seal-Throttle Shaft	1070	691058	Screw (Flywheel Fan)	1342	699731	Extension-Fuel Transfer Tube
1005	790698	Fan-Flywheel						(Used After Code Date 04100500).
1013	690954	Nipple-Oil Filter	1090	691293	Retainer-Brush	1353	699725	Seal-O Ring (Fuel Transfer Tube Extension)
1017	690770	Screen-Oil Pump	1095	694013	Gasket Set-Valve			(Used After Code Date 04100500).
1019	790094	Kit-Label	1100	690973	Pivot-Rocker Arm			
1022	★◆690971	Gasket-Rocker Cover	1119	691183	Screw (Alternator)			
1023	499599	Cover-Rocker (Cylinder 1)			Seal-O Ring (Solenoid Retainer)			
1023A	499600	Cover-Rocker (Cylinder 2)	1123	●△699725	(Used After Code Date 04100500). ----- Note -----			
1024	499054	Pump-Oil		690987	Seal-O Ring (Solenoid Retainer)			
1026	690981	Rod-Push (Steel)			(Used Before Code Date 04100600).			
1026A	690982	Rod-Push (Aluminum)						
1027	492932	Filter-Oil						
1029	690972	Arm-Rocker						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5558-11

Assemblies include all parts shown in frames.

10/13/2004