
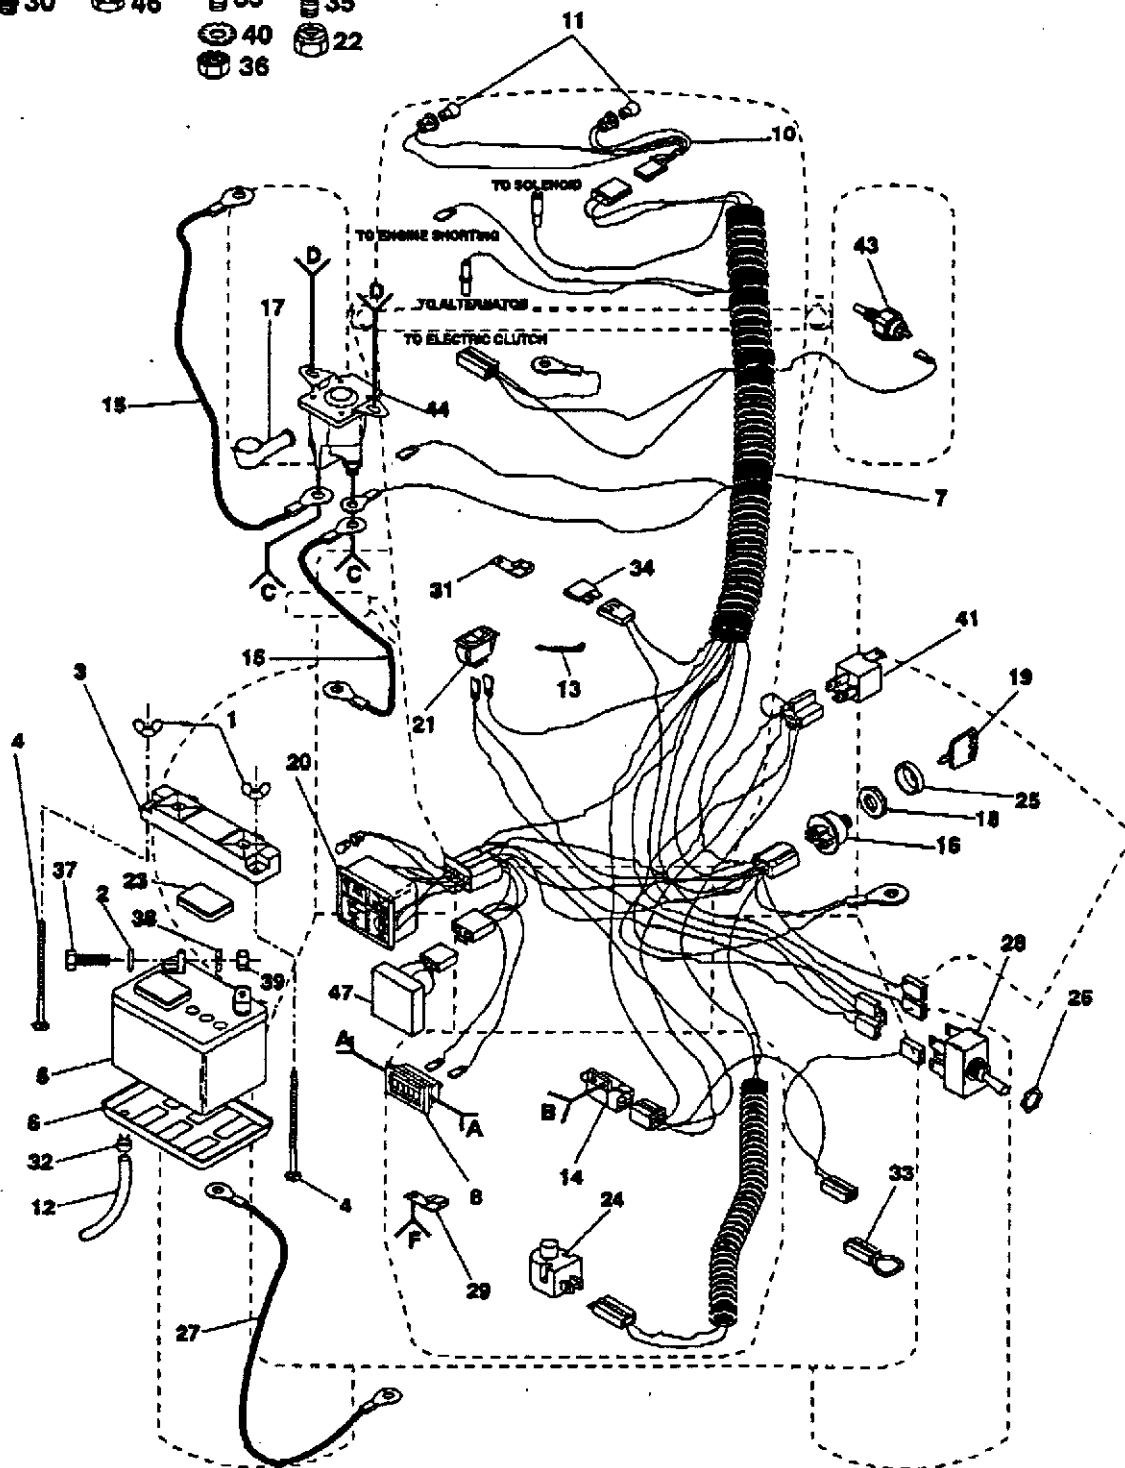


ILLUSTRATED PARTS BREAKDOWN

**HUSQVARNA - EXPORT
14 HP 44" YARD TRACTOR
MODEL NO. YTH142 (H14H44A)
954 00 03-52**

REPAIR PARTS

14 HP 44" TRACTOR -- MODEL NO. YTH142, PRODUCT NO. 954 00 03-52
ELECTRICAL

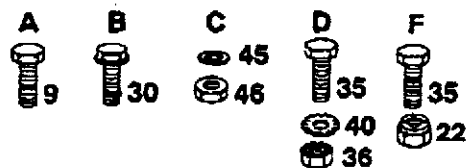

REPAIR PARTS


14 HP 44" TRACTOR - - MODEL NO. YTH142, PRODUCT NO. 954 00 03-52
ELECTRICAL

KEY PART NO. NO.	DESCRIPTION	KEY PART NO. NO.	DESCRIPTION
1 532123198	Nut, Wing 1/4-20	30 817021008	Screw, Hex, Tap #10-24 UNC
2 819091016	Washer 9/32 x 5/8 x 16 Gauge	31 532124996	Clip, Line Fuel
3 532102476	Guard, Terminal	32 532109596	Clamp, Hose
4 872240460	Bolt, Carriage 1/4-20 x 7-1/2	33 532102501	Loop, Wire
5 532121537	Battery	34 532108824	Fuse
6 532124886	Tray, Battery	35 874780408	Bolt, Hex 1/4-20 x 1/2 Grade 5
7 532131564	Harness, Ignition (Includes Key #41)	36 873510400	Nut, Hex, Keps 1/4-20
8 532110940	Meter, Hour	37 874760412	Bolt, Hex 1/4-20 x 3/4
9 817011008	Screw #10-24 x 1/2	38 810040400	Washer, Lock 1/4
10 532127441	Harness, Socket Light	39 873220400	Nut, Hex 1/4-20
11 532124893	Bulb, Light	40 811050400	Washer, Lock, External Tooth 1/4
12 532100541	Tube, Tray Battery	41 532109748	Relay
13 532124756	Tie, Cable	43 532126825	Switch, Oil Sensor
14 532109553	Switch, Interlock (Clutch)	44 532109081	Solenoid
15 532124770	Cable, Battery (2)	45 810090400	Washer, Lock 1/4
16 532102972	Switch, Ignition	46 873350400	Nut, Hex, Jam 1/4-20
17 532131563	Cover, Terminal	47 532127385	Sensor, Low Voltage
18 532124211	Nut, Ignition	49 532110143	Bulb, Light Package
19 532122147	Key, Molded	— 532101639	Sheet, Instruction, Tractor 15° Slope (English)
20 532124524	Package, Light	— 532101572	Sheet, Instruction, Tractor 15° Slope (French)
21 532110712	Switch, Light	— 532131432	Manual, Operator's (Swedish, Danish, Finnish, Norwegian)
22 873680400	Nut, Crownlock 1/4-20	— 532131433	Manual, Operator (English, French, Dutch, German, Spanish, Italian)
23 532121264	Caps, Battery	— 532121549	Decal, Battery, Caution
24 532121305	Switch, Plunger		
25 532123620	Bezel, Ignition		
26 532124932	Nut, Hex		
27 532124773	Cable, Battery		
28 532126018	Switch, PTO		
29 532124995	Clip, Insulated		

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm

REPAIR PARTS

14 HP 44" TRACTOR -- MODEL NO. YTH142, PRODUCT NO. 954 00 03-52
CHASSIS AND ENCLOSURES

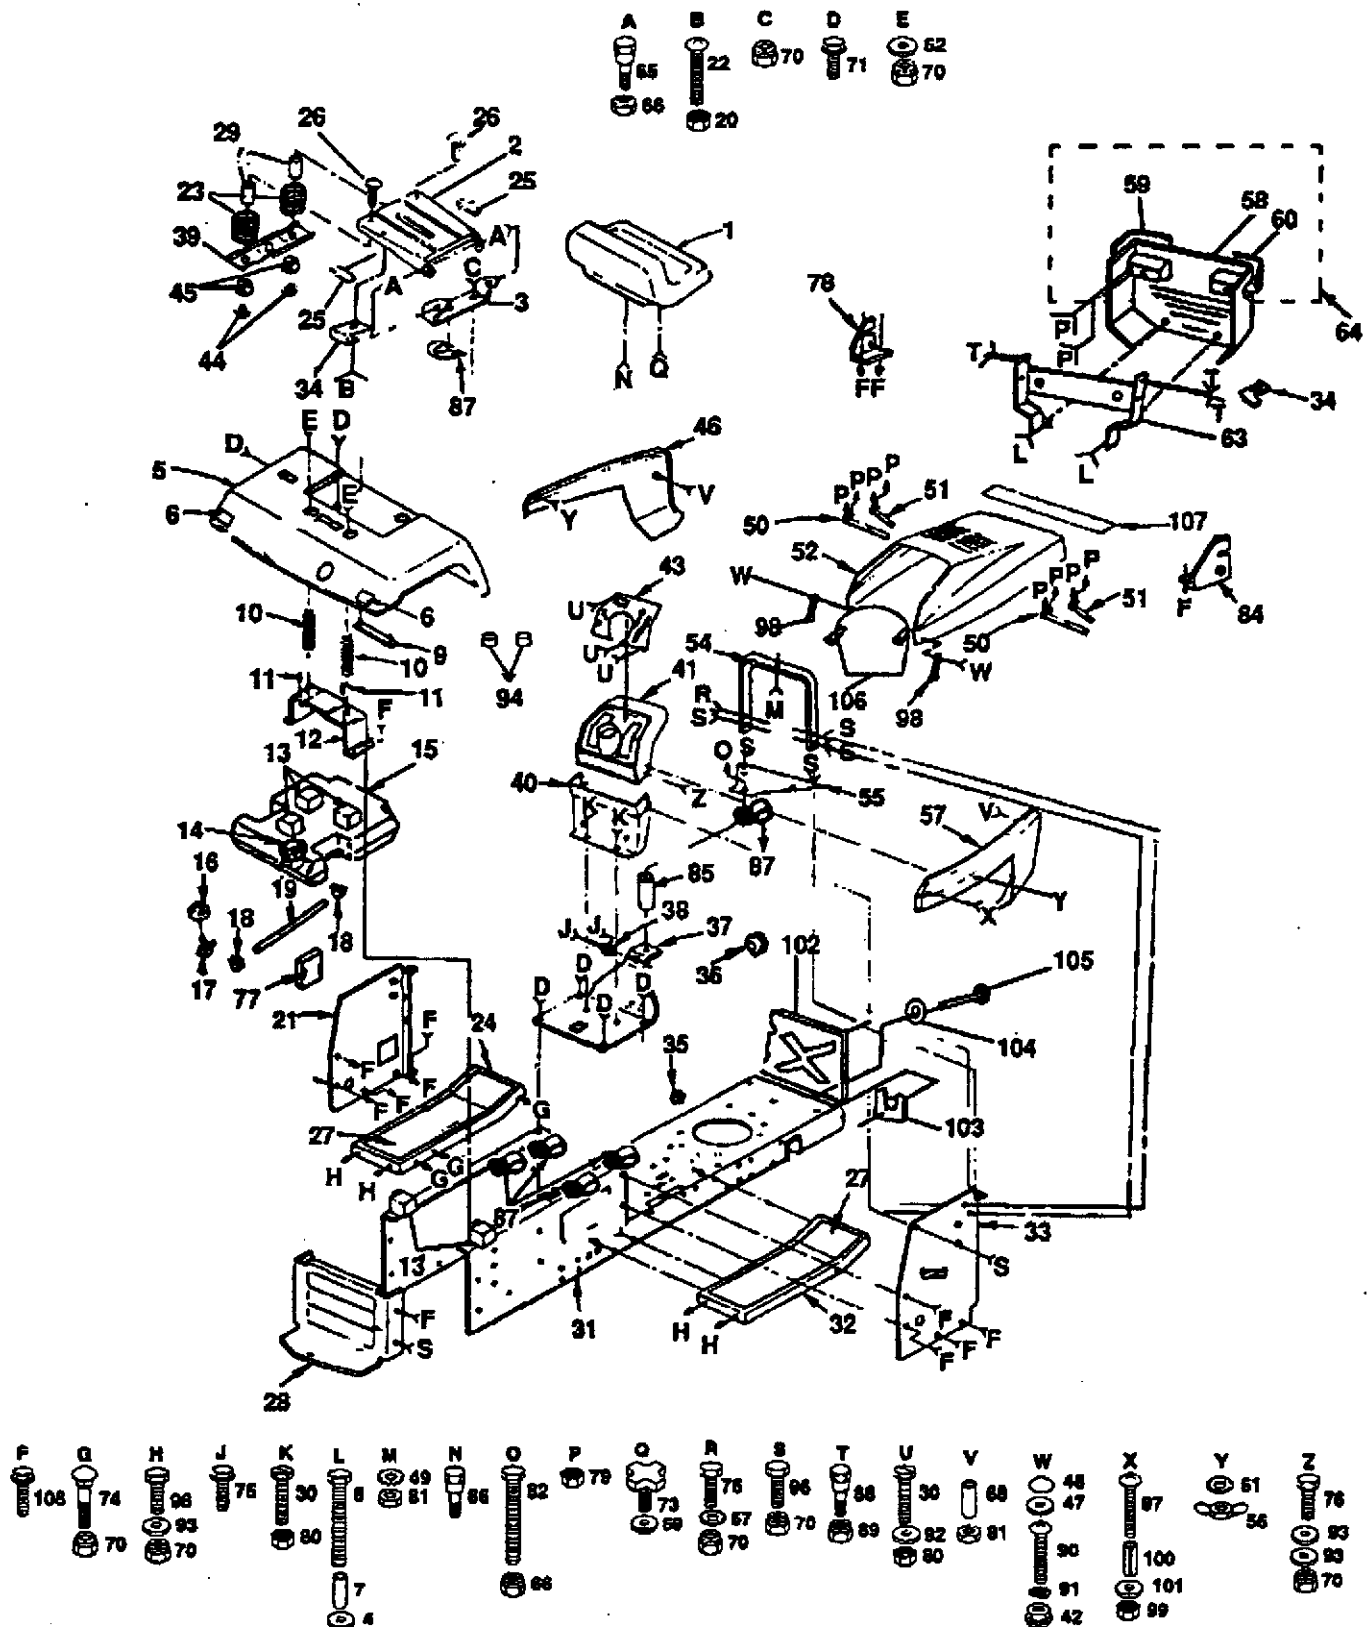

REPAIR PARTS

14 HP 44" TRACTOR - - MODEL NO. YTH142, PRODUCT NO. 954 00 03-52

CHASSIS AND ENCLOSURES


KEY PART NO. NO.	DESCRIPTION	KEY PART NO. NO.	DESCRIPTION
1 532124186	Seat	60 532124251	Lens, R.H.
2 532124294	Pan, Seat	61 811030400	Washer, Lock Tooth Int/External 1/4
3 532126656	Bracket, Pivot, Seat	62 819131614	Washer 13/32 x 1 x 14 Gauge
4 819091216	Washer 9/32 x 3/4 x 18 Ga.	63 532124574	Support, Grill, Assembly
5 532125110	Fender	64 532127320	Assembly, Grill (Inc. Key 59 & 60)
6 532106202	Reflector, Taillight	65 532105529	Bolt, Shoulder 5/16-18
7 532121235	Spacer	66 873680500	Nut, Crownlock 5/16-18
8 874760440	Bolt, Fin, Hex 1/4-20 x 2-1/2	67 811050600	Washer, Lock Tooth External 3/8
9 532105511	Strap, Fender	68 532001260	Spacer
10 532124181	Spring, Compression, Seat	69 819171912	Washer 17/32 x 1-3/16 x 12 Gauge
11 532105531	Nut, Push	70 873680600	Nut, Crownlock 3/8-16
12 532105509	Bracket, Fender	71 817490608	Screw, Hex Washer Thread Rolling 3/8-16 x 1/2
13 532006431	Pad, Spacer	73 532120068	Knob, 1/2" Seat
14 532124462	Cap, Fuel	74 872140606	Bolt, Carriage 3/8-16 x 3/4
15 532106020	Tank, Fuel	75 817431008	Screw, Hex Self Tapping #10-16 x 1/2
16 532124952	Bushing	76 874760616	Bolt, Hex 3/8-16 x 1
17 532124951	Stem, Tank, Fuel	77 532121794	Cover, Access
18 532123487	Clamp, Hose	78 532110852	Bracket Assembly, L.H.
19 532124953	Line, Fuel	79 873510400	Nut, Keps, Hex 1/4-20 UNC
20 873951000	Nut, Keps #10	80 873510500	Nut, Keps, 5/16-18 UNC
21 532124118	Panel, Dash, L.H.	81 873220400	Nut, Fin, Hex 1/4-20 UNC
22 874641008	Screw, Pan Hd. #10-32	82 874760532	Bolt, Hex 5/16-18 x 2
23 532123740	Spring, Compression	84 532110853	Bracket, Assembly R.H.
24 532124899	Footrest, L.H.	85 532121236	Spacer
25 532121251	Foam, Strip	86 532127018	Bolt, Shoulder 5/16-18 x .62
26 872050411	Bolt, Carriage 1/4-20 x 1-1/4	87 532124996	Clip
27 532108256	Pad, Footrest	88 532123481	Bolt, Shoulder 1/4-20
28 532127866	Drawbar	89 873680400	Nut, Crownlock 1/4-20
29 532121249	Spacer, Split	90 874191008	Screw, Pan Hd. Mach. #10-24 x 1/2
30 874180512	Screw, Mach. Cr. Thd. 5/16-18 x 3/4	91 810071000	Washer, Lock #10
31 532127166	Chassis	92 819111116	Washer 11/32 x 11/16 x 16 Gauge
32 532124914	Footrest, R.H.	94 532124238	Cap, Spring, Seat
33 532110828	Panel, Dash, R.H.	93 819131312	Washer 13/32 x 13/16 x 12 Gauge
34 532124967	Clip, Insulated	96 874760612	Bolt, Hex 3/8-16 x 3/4
35 532110436	Grommet, Split	97 874981020	Screw, Mach. Cr. Pan #10-24 x 1-1/4
36 532124934	Grommet	98 532109808	Latch, Hood
37 532124766	Saddle	99 873731000	Nut, Keps #10-24
38 532124720	Bushing, Steering	100 532007206	Spacer, Split #10 x 3/4
39 532121246	Bracket, Switch Mount	101 819070818	Washer 7/32 x 1/2 x 18 Gauge
40 532104805	Assembly, Dash, Lower	102 532108105	Shield, Heat
41 532124182	Dash	103 532105839	Receptacle, 1/4 Turn
42 532125004	Nut, Weld	104 532105838	Retainer, 1/4 Turn
43 532125147	Plate, Dash	105 532123650	Stud, 1/4 Turn
44 532123976	Locknut, Flange Hex, Large	106 532126493	Baffle, Vertical
45 532121248	Bushing, Snap	107 532105037	Foam, Strip 18"
46 532125009	Panel, Side, L.H.	108 817490612	Screw, Hex Washer, Thread Rolling 3/8-16 x 3/4
47 532110357	Washer, Cap, Snap		
48 532110356	Cap, Snap		
49 811050400	Washer, Lock, Tooth External 1/4		
50 532106784	Assembly, Strap Hinge, Rear		
51 532104618	Assembly, Strap Hinge, Front		
52 532125007	Hood		
54 532124130	Support, Dash		
55 532106965	Plate, Support, Battery		
56 532123198	Nut, Wing		
57 532125008	Panel, Side, R.H.		
58 532127325	Grill		
59 532124250	Lens, L.H.		

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm

REPAIR PARTS

14 HP 44" TRACTOR -- MODEL NO. YTH142, PRODUCT NO. 954 00 03-52

DRIVE

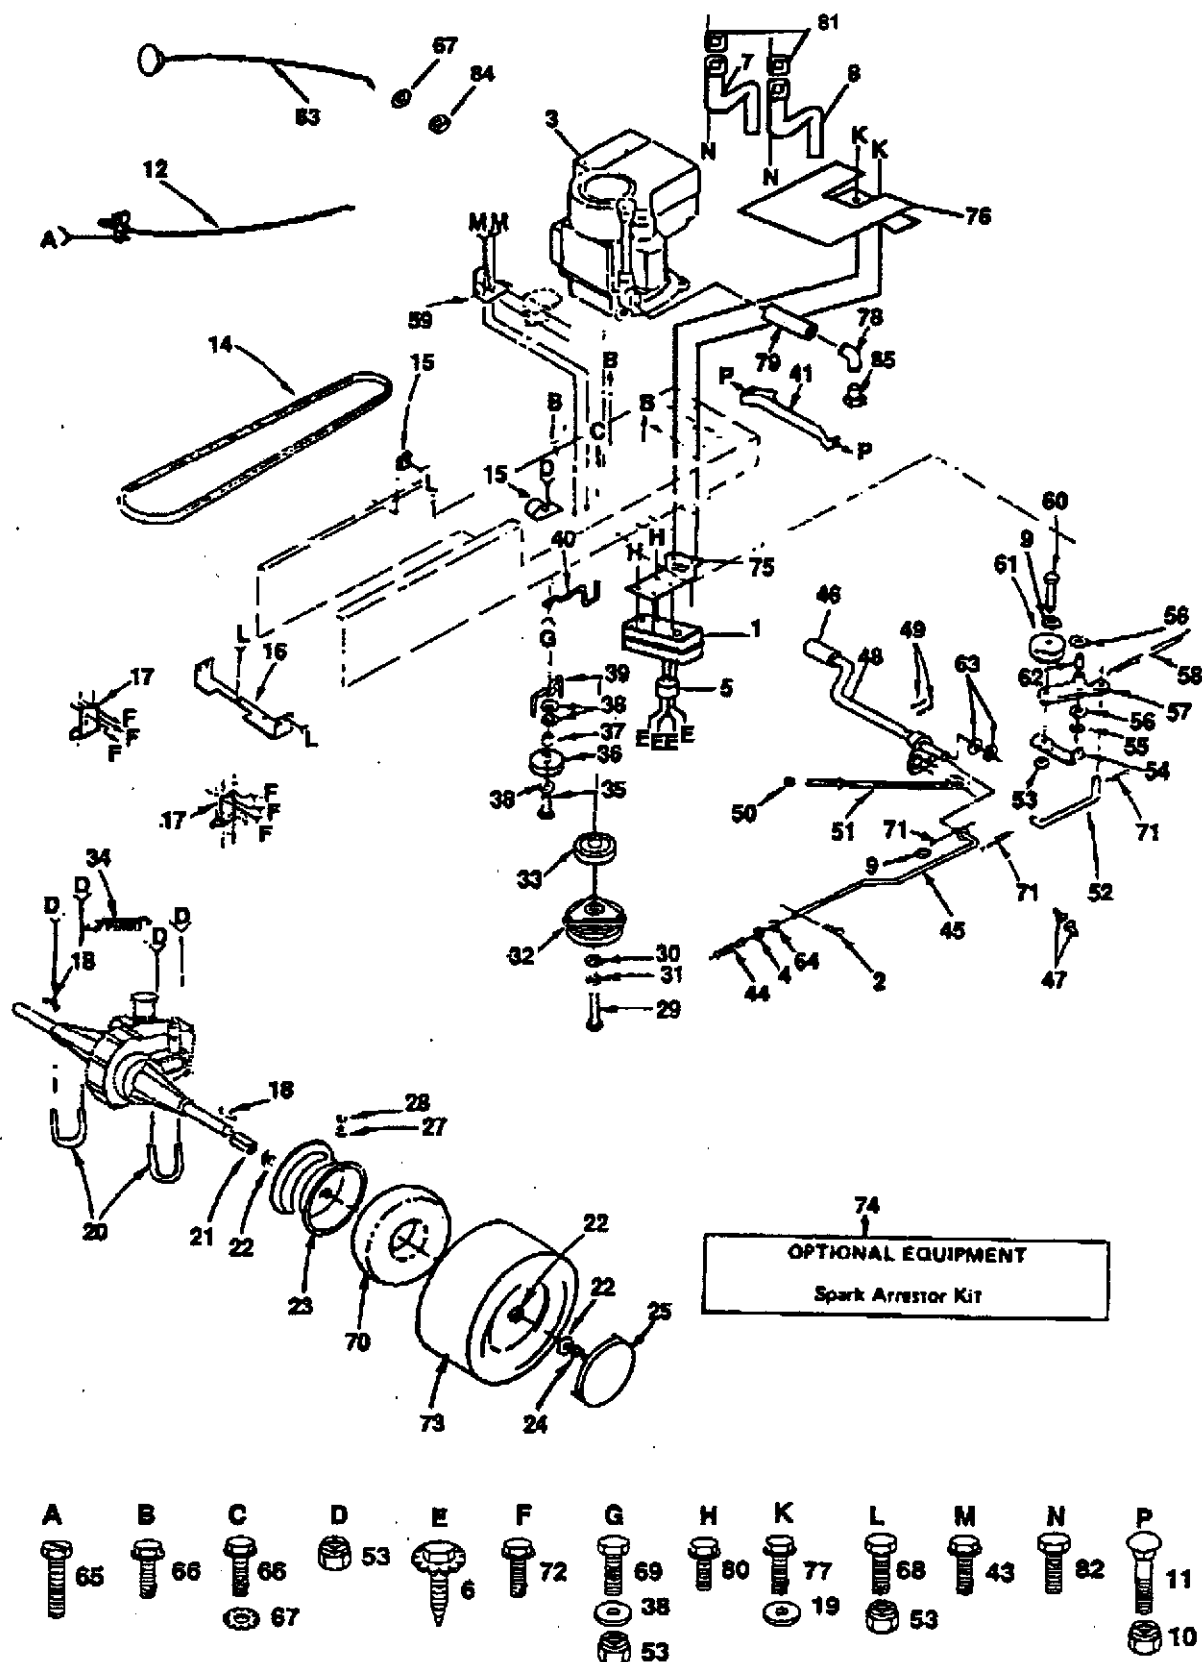

REPAIR PARTS

14 HP 44" TRACTOR - - MODEL NO. YTH142, PRODUCT NO. 954 00 03-52



DRIVE

KEY PART NO. NO.	DESCRIPTION	KEY PART NO. NO.	DESCRIPTION
1 532122440	Muffler	46 532123533	Cover, Pedal
2 532124788	Clip, Hairpin	47 532120183	Bearing, Nylon
3	Engine, Briggs & Stratton, Vanguard Model #303777	48 532122424	Shaft, Foot Pedal, Assembly
4 873350600	Nut, Hex, Jam 3/8 x 16 UNC	49 532124963	Pin, Roll 3/16 x 1
5 532101326	Deflector	50 532071673	Cap, Plunger
6 817030808	Screw, Spider Lock, Hex #8 x 1/2	51 532133261	Rod, Brake, Park
7 532122434	Tube Manifold, L.H.	52 532105710	Link, Clutch
8 532122435	Tube Manifold, R.H.	53 873680600	Nut, Crownlock 3/8-16
9 819131316	Washer 13/32 x 13/16 x 16 Gauge	54 532123205	Retainer, Belt
10 873680500	Nut, Crownlock 5/16-18	55 812000039	Ring, Klip
11 872140506	Bolt, Carriage 5/16-18 x 3/4	56 532110812	Washer, Hardened
12 532132763	Control, Throttle	57 532123789	Arm, Assembly, Idler (Include Key No. 62)
14 532123461	V-Belt, Drive	58 532105709	Spring, Return, Clutch
15 532124996	Clip	59 532108236	Bracket, Switch
16 532121187	Bracket, Mounting, Hydro T/A	60 874760624	Bolt, Hex 3/8-16 x 1-1/2
17 532126649	Bracket, Transaxle	61 532127783	Pulley, Idler
18 532123583	Key, Square 1/4 x 2	62 532105708	Bearing
19 819131614	Washer 13/32 x 1 x 14 Gauge	63 819211616	Washer 21/32 x 1 x 16 Gauge
20 532121189	U-Bolt 3/8-16 x 2.83	64 873800600	Locknut, Hex W/Wash 3/8-16
21 532121199	Spacer, Split	65 817720410	Screw, Hex Thread Cut, 1/4-20 x 5/8
22 532121748	Washer 1-1/32 x 1-5/8 x 16 Gauge	66 817490624	Screw, Hex Washer Thread Rolling 3/8-16 x 1-1/2
23 532124999	Rim, Rear	67 811050600	Washer, Lock External Tooth 3/8
24 812000001	E-Ring	68 874760612	Bolt, Hex 3/8-16 x 3/4
25 532124578	Cover, Wheel	69 874760616	Bolt, Hex 3/8-16 x 1
27 532065139	Stem, Valve	70 532124926	Tube
28 532059192	Cap, Valve	71 878020412	Pin, Cotter 1/8 x 3/4
29 871130768	Bolt, Hex, Fin 7/16-20 UNF x 4 Grade 8	72 817490612	Screw, Hex, Thdrol 3/8-16 x 3/4
30 532126197	Washer 1-1/2 OD x 15/32 ID x .250	73 532122082	Tire
31 810040700	Washer, Lock 7/16	74 532121851	Spark, Arrestor Kit
32 532108218	Clutch, Electric	75 532122439	Bracket, Muffler Mounting
33 532123795	Pulley, Engine	76 532122981	Shield, Heat
34 532110422	Spring, Brake Return	77 817490512	Screw, Hex, Washer Thdrol 5/16-18 x 3/4
35 874760644	Bolt, Hex 3/8-16 x 2-3/4	78 813200300	Elbow, STD 90° 3/8-18 NPT
36 532004859	Idler, Flat	79 813280336	Nipple, Pipe
37 532124965	Spacer	80 817190408	Screw, Hex, Washer Thdrol 1/4-20
38 819131312	Washer 13/32 x 13/16 x 12 Gauge	81 -----	Gasket (Order from Engine Mfg..)
39 532109070	Retainer, Belt	82 -----	Bolt, Metric (Order from Engine Mfg.)
40 532129921	Keeper, Belt, Engine	83 532132781	Choke Control
41 532109169	Retainer, Clutch Assembly	84 873610600	Nut, Hex 3/8-24 UNF
43 817021008	Screw, Tap, Hex Hd, #10-24 x 1/2 Type T	85 -----	Plug, Oil Drain (Order from Engine Manufacturer)
44 532106888	Spring, Rod, Brake		
45 532121200	Rod, Brake		

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm

REPAIR PARTS

14 HP 44" TRACTOR - - MODEL NO. YTH142, PRODUCT NO. 954 00 03-52
STEERING ASSEMBLY

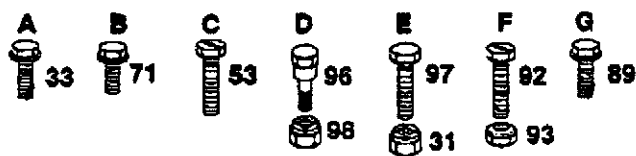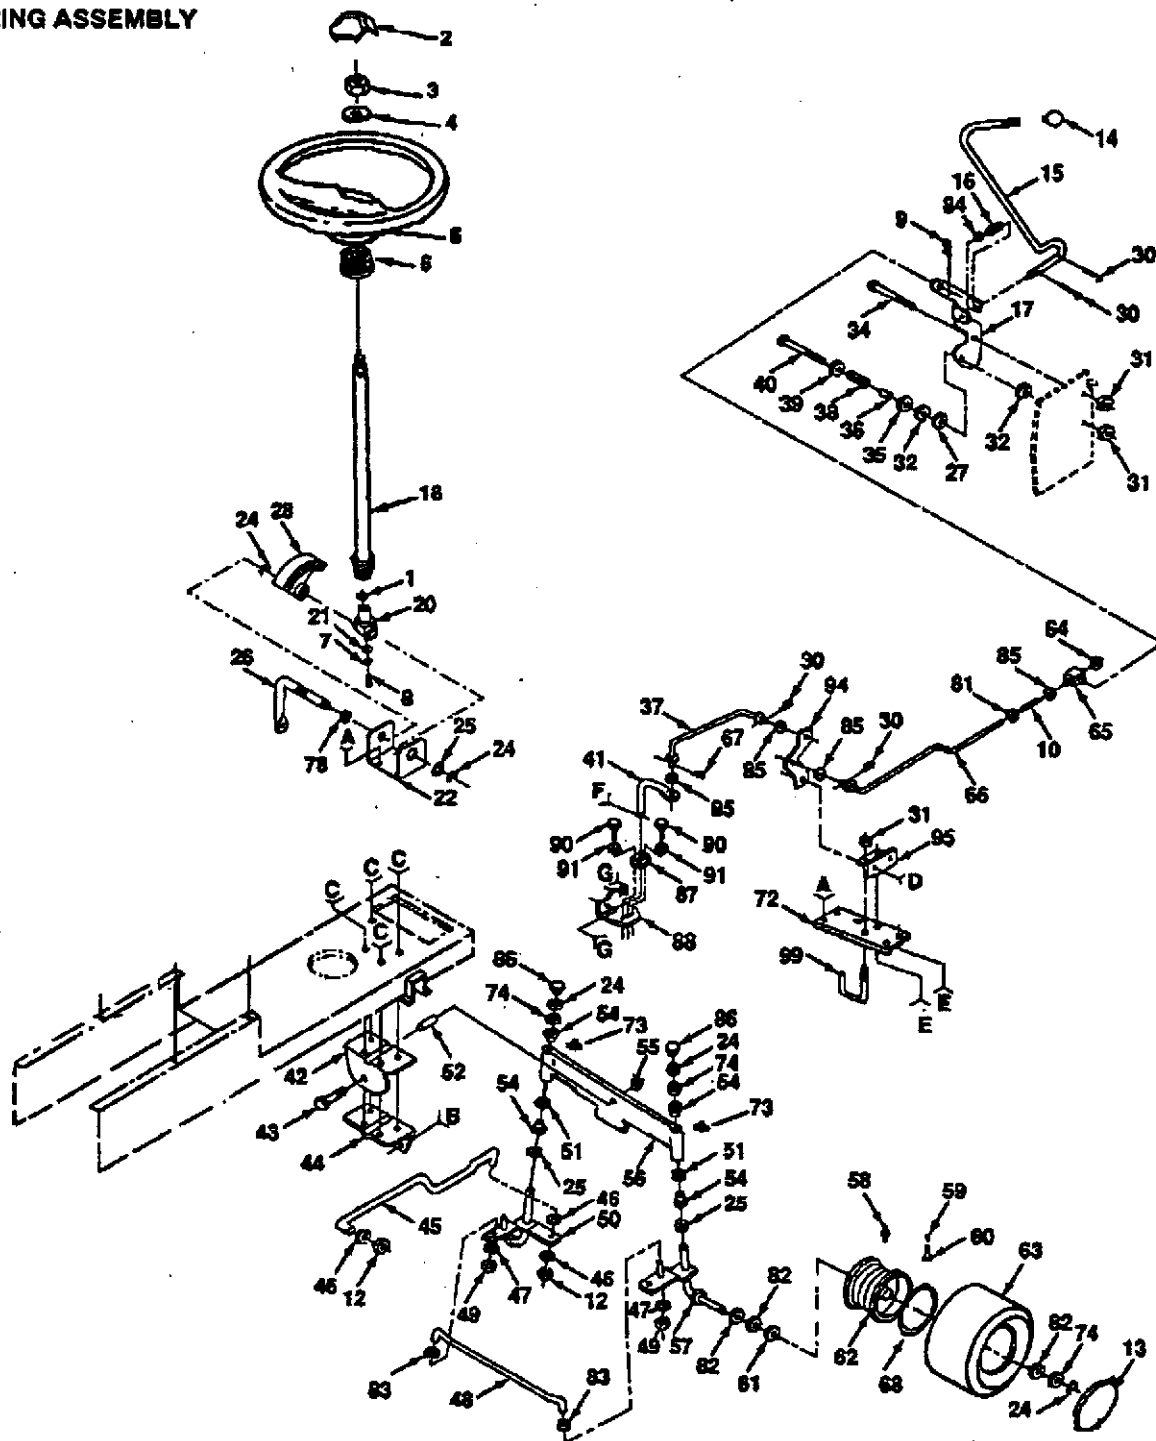

REPAIR PARTS

14 HP 44" TRACTOR - - MODEL NO. YTH142, PRODUCT NO. 954 00 03-52


STEERING ASSEMBLY

KEY PART NO. NO.	DESCRIPTION	KEY PART NO. NO.	DESCRIPTION
1 532057079	Washer	53 532122819	Screw, Special 3/8-16 x 3/4
2 532124416	Insert, Steering Wheel	54 532124937	Bearing
3 873940800	Nut, Jam, Toplock 1/2-20	55 873601000	Nut, Jam Lock Hex W/Washer 5/8-16
4 532100712	Washer	56 532108075	Axle, Front
5 532124415	Wheel, Steering	57 532130459	Spindle, R.H.
6 532100711	Adapter, Steering Wheel	58 532124957	Fitting, Grease
7 810040400	Washer, Lock 1/4	59 532065139	Stem, Valve
8 871070410	Screw, Socket, Hex 1/4-20 x 5/8	60 532059192	Cap, Valve
9 532124961	Spring, Retainer	61 532124959	Bearing
10 532102670	Spring, Compression	62 532125102	Rim, Front
12 873610600	Nut, Hex, Fin 3/8-24 UNF	63 532106222	Tire, Front
13 532124577	Cover, Wheel	64 873600600	Locknut, Hex, w/Wsh. 3/8-16
14 532121274	Knob, Gear Shift	65 532108212	Trunnion
15 532110845	Rod, Control	66 532121750	Rod, Control, Adjustable
16 532121631	Spring, Torsion	67 532124788	Clip, Hairpin
17 532108196	Bracket, Control Rod	68 532059904	Tube, Tire Front
18 532128762	Shaft, Steering	71 817490508	Screw, Hex Washer Thread Rolling 5/16-18 x 1/2
20 532124035	Support, Shaft	72 532123186	Bracket, Chassis, Reinforcement, Hydro
21 532126684	Washer, Shim 1/4 x 5/8 x .062	73 532124836	Fitting, Grease
22 532124036	Bracket, Steering	74 532121748	Washer 25/32 x 1-5/8 x 16 Gauge
24 812000029	Ring, Klip	78 532109816	Nyliner, Snap-In
25 532124931	Bearing, Thrust	81 819131212	Washer 13/32 x 3/4 x 12 Gauge
26 532127501	Shaft, Pitman	82 532121749	Washer 25/32 x 1-1/4 x 16 Gauge
27 532108972	Washer, Friction	83 819111216	Washer 11/32 x 3/4 x 16 Gauge
28 532124034	Gear, Sector	84 819151516	Washer 15/32 x 15/16 x 18 Gauge
30 876020412	Pin, Cotter 1/8 x 3/4	85 532110739	Washer, Spring
31 873680600	Nut, Crownlock 3/8-16	86 532121232	Cap, Spindle
32 532108200	Spacer, Nylon	87 532121217	Guide, Control
33 817490612	Screw, Hex Washer Thread Rolling 3/8-16 x 3/4	88 532121216	Bracket, Control Guide
34 532108518	Bolt, Hex Shoulder 3/8-16 x 1-3/8	89 817490512	Screw, Hex Washer Thread Rolling 5/16-18 x 3/4 Type TT
35 819212016	Washer 21/32 x 1-1/4 x 16 Gauge	90 817021008	Screw, Tap Hex Hd. #10-24 UNC x 1/2 Type T
36 532108201	Spacer	91 819070816	Washer 7/32 x 1/2 x 16 Gauge
37 532121202	Link, Control, Pump	92 874561014	Screw, Hex Socket Hd. #10-24 UNC
38 532108844	Spring, Compression	93 532069180	Locknut #10-24 UNC
39 819132012	Washer 13/32 x 1-1/4 x 12 Gauge	94 532121204	Ballcrank
40 874760648	Bolt, Hex 3/8-16 x 3	95 532121206	Bracket, Bellcrank, Pivot
41 532121209	Lever, Pump Control	96 532100536	Bolt, Shoulder
42 532105663	Support, Saddle, Rear	97 874760616	Bolt, Hex, Fin 3/8-16 UNC x 1
43 874761060	Bolt, Hex 5/8-11 x 3-3/4	98 873680500	Nut, Crownlock 5/16-18
44 532105664	Support, Saddle, Front	99 532121190	Keeper, Centerspan
45 532130468	Link, Drag		
46 810040600	Washer, Lock 3/8		
47 810040500	Washer, Lock 5/16		
48 532130487	Rod, Tie		
49 873810500	Nut, Hex 5/16-24 UNF		
50 532130460	Spindle, L.H.		
51 819272016	Washer 27/32 x 1-1/4 x 16 Gauge		
52 532110438	Spacer, Bearing		

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm

REPAIR PARTS

14 HP 44" TRACTOR -- MODEL NO. YTH142, PRODUCT NO. 954 00 03-52
LIFT ADJUSTMENT

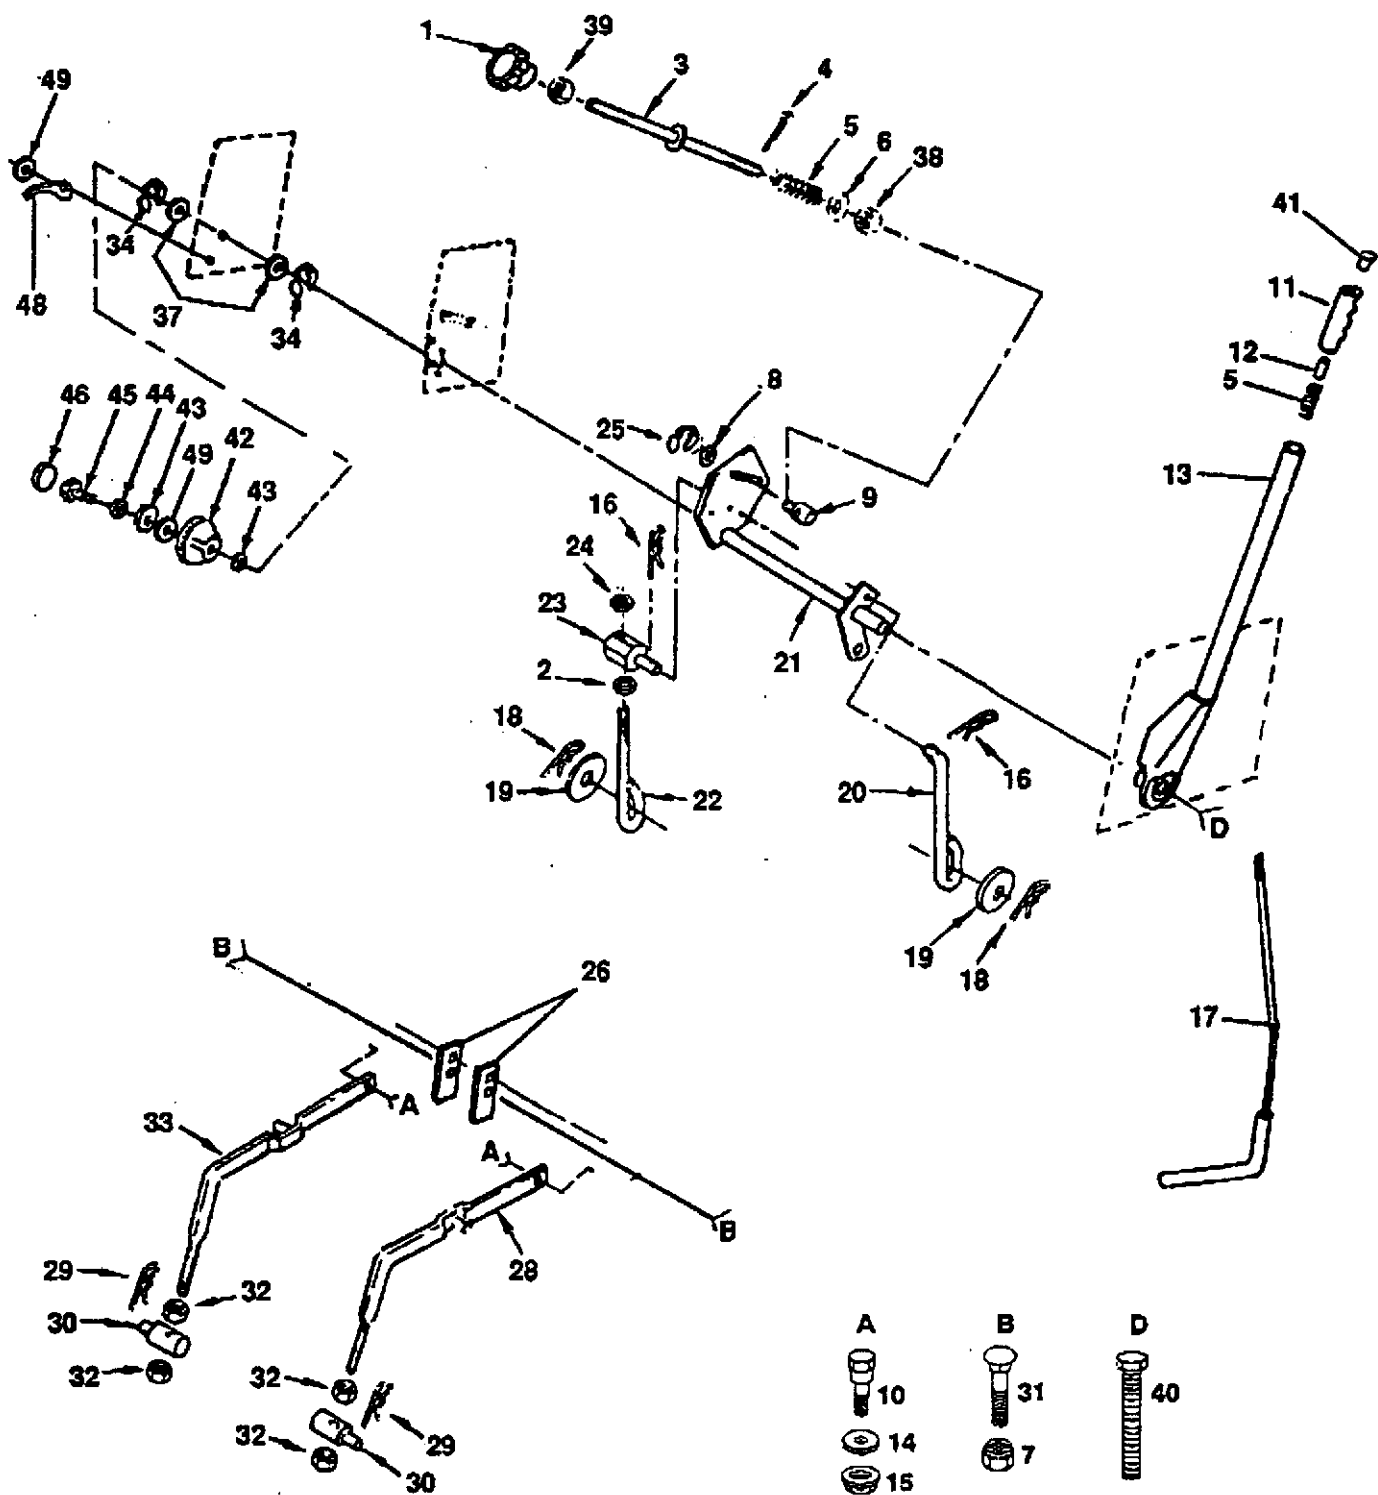

REPAIR PARTS

14 HP 44" TRACTOR - - MODEL NO. YTH142, PRODUCT NO. 954 00 03-52

LIFT ADJUSTMENT


KEY PART NO. NO.	DESCRIPTION
1 532121891	Handle, Lift, Adjustment
2 873360700	Nut, Hex 3/8-16
3 532110729	Rod, Adjust, Lift
4 876020308	Pin, Cotter 3/32 x 1/2
5 532124874	Spring
6 819131016	Washer 13/32 x 5/8 x 16 Gauge
7 873680600	Nut, Crownlock 3/8-16
8 819151216	Washer 15/32 x 3/4 x 16 Gauge
9 532110810	Trunnion, Depth Stop
10 532105848	Bolt, Shoulder 3/8-16
11 532125631	Grip, Handle
12 532122364	Plunger, Lever, Lift
13 532121002	Lever, Lift
14 532110739	Spring, Washer
15 873980600	Nut, Center, Lock, Flange 3/8 x 16
16 532124670	Retainer, Spring
17 532121006	Rod, Lever
18 532124961	Retainer, Spring
19 819171516	Washer 17/32 x 15/16 x 16 Gauge
20 532110029	Link, Lift
21 532131926	Shaft, Lift, Assembly
22 532110448	Link, Lift, Adjust
23 532110447	Trunnion, Lift
24 873710700	Locknut 7/16-14

KEY PART NO. NO.	DESCRIPTION
25 812000037	Ring, Klip
26 532121252	Upstop, Mower
28 532121598	Arm, Suspension, R.H.
29 532124960	Retainer, Spring
30 532106308	Trunnion, Lift, Lower
31 872140608	Bolt, Carriage 3/8-16 UNC x 1
32 873220800	Nut, Hex, Fin. 1/2-13
33 532121599	Arm, Suspension, L.H.
34 812000022	E-Ring, Truarc
37 819292016	Washer 29/32 x 1-1/4 x 16 Gauge
38 532110807	Nut, Special
39 873350600	Nut, Hex, Jam 3/8 x 16 UNC
40 874780624	Bolt, Hex 3/8-16 x 1-1/2
41 532124526	Button, Plunger
42 532123934	Scale, Height, Indicator
43 819112410	Washer 11/32 x 1-1/2 x 10 Gauge
44 810040500	Washer, Lock, Heavy, Helical, Spring
45 874780516	Bolt, Hex, Fin. 5/16-18 UNC x 1
46 532123935	Plug, Hole
48 532124763	Pointer, Height Indicator
49 532120529	Washer, Nylon

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm

REPAIR PARTS

14 HP 44" TRACTOR -- MODEL NO. YTH142, PRODUCT NO. 954 00 03-52
MOWER

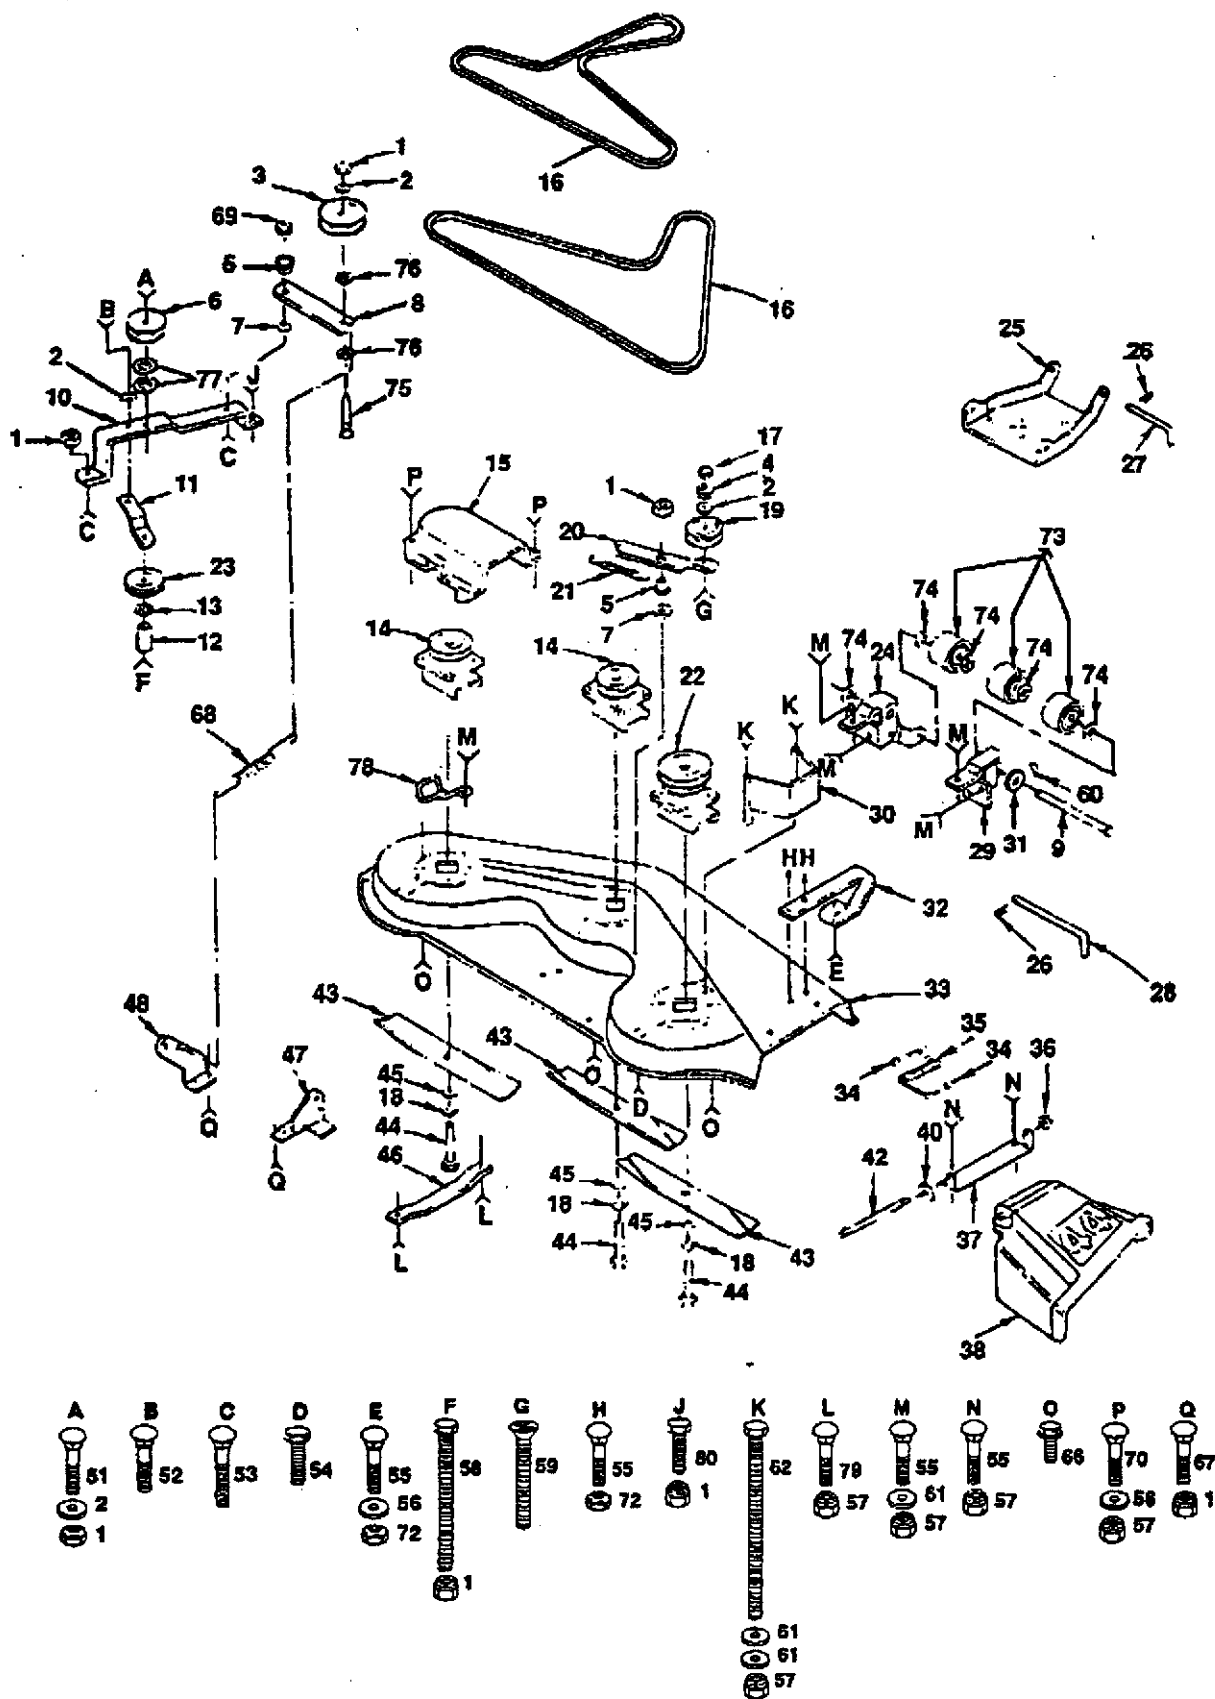

REPAIR PARTS

14 HP 44" TRACTOR -- MODEL NO. YTH142, PRODUCT NO. 954 00 03-52


MOWER

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	873680600	Nut, Crownlock 3/8-16	42	532106735	Rod, Hinge
2	819131614	Washer 13/32 x 1 x 14 Gauge	43	532122265	Blade, Mower
3	532121316	Pulley, Idler	44	874610624	Bolt, Hex 3/8-24 x 1-1/2 Grade 5
4	810040600	Washer, Lock 3/8	45	819132012	Washer 13/32 x 1-1/4 x 12 Gauge
5	532106902	Spacer	46	532125074	Runner, L.H.
6	532124858	Pulley, Idler	47	532123807	Bracket, Suspension, Rear, R.H.
7	532106513	Washer, Wear	48	532123808	Bracket, Suspension, Rear, L.H.
8	532121425	Arm, Idler	51	872140614	Bolt, Carriage 3/8-16 x 1-3/4
9	532109776	Pin, Pivot	52	872140608	Bolt, Carriage 3/8-16 x 1
10	532106523	Bar, Support, Idler	53	872140612	Bolt, Carriage 3/8-16 x 1-1/2
11	532106522	Brace, Idler, Deck	54	874760620	Bolt, Hex 3/8-16 x 1-1/4
12	532121236	Spacer	55	872140506	Bolt, Carriage 5/16-18 x 3/4
13	819131316	Washer 13/32 x 13/16 x 16 Gauge	56	819111116	Washer 11/32 x 11/16 x 16 Gauge
14	532121658	Mandrel, Secondary	57	873680500	Nut, Crownlock 5/16-18
15	532108214	Guard	58	874760648	Bolt, Hex 3/8-16 x 3
16	532106085	V-Belt	59	874110632	Screw, Flat Head 3/8-16 x 2
17	873220600	Nut, Hex 3/8-16	60	876020412	Pin, Cotter
18	810030600	Washer, Lock 3/8	61	819111216	Washer 11/32 x 3/4 x 16 Gauge
19	532102932	Idler, Flat	62	874760580	Bolt, Hex 5/16-18 x 5
20	532106526	Arm, Idler, Deck	66	817490612	Screw, Hex Washer Thread Rolling 3/8-16 x 3/4
21	532124885	Spring, Extension	67	872140606	Bolt, Carriage 3/8-16 x 3/4
22	532121705	Mandrel, Primary	68	532102727	Spring, Extension
23	532102403	Pulley, Idler	69	873930600	Nut, Centerlock 3/8-16
24	532109599	Bracket, Lift, L.H.	70	872110506	Bolt, Carriage 5/16-18 x 3/4
25	532105662	Link, Parallel	72	532124949	Locknut 5/16-18
26	532124961	Retainer, Spring	73	532109729	Roller, Nose
27	532105744	Pin, Front Hinge	74	819151610	Washer 15/32 x 1 x 10 Gauge
28	532109835	Pin, Rear Hinge	75	872140620	Bolt, Carriage 3/8-16 x 2-1/2
29	532109600	Bracket, Lift, L.H.	76	819131210	Washer 13/32 x 3/4 x 10 Gauge
30	532108119	Guard, Belt, R.H.	77	819131410	Washer 13/32 x 7/8 x 10 Gauge
31	819151616	Washer 15/32 x 1 x 16 Gauge	78	532121352	Keeper, L.H., Mandrel
32	532124950	Runner, R.H.	79	872110505	Bolt, Carriage 5/16-18 x 5/8
33	532121423	Housing, Mower	80	874760616	Bolt, Hex, Fin 3/8-16 x 1
34	532105304	Cap, Sleeve	—	532131508	Mower Deck, Complete
35	532106734	Spring			
36	532110452	Nut, Push			
37	532109743	Bracket, Deflector			
38	532109785	Guard, Discharge			
40	819111016	Washer 11/32 x 5/8 x 16 Gauge			

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm

REPAIR PARTS

14 HP 44" TRACTOR -- MODEL NO. YTH142, PRODUCT NO. 954 00 03-52
TRANSAXLE AND PUMP ASSEMBLY

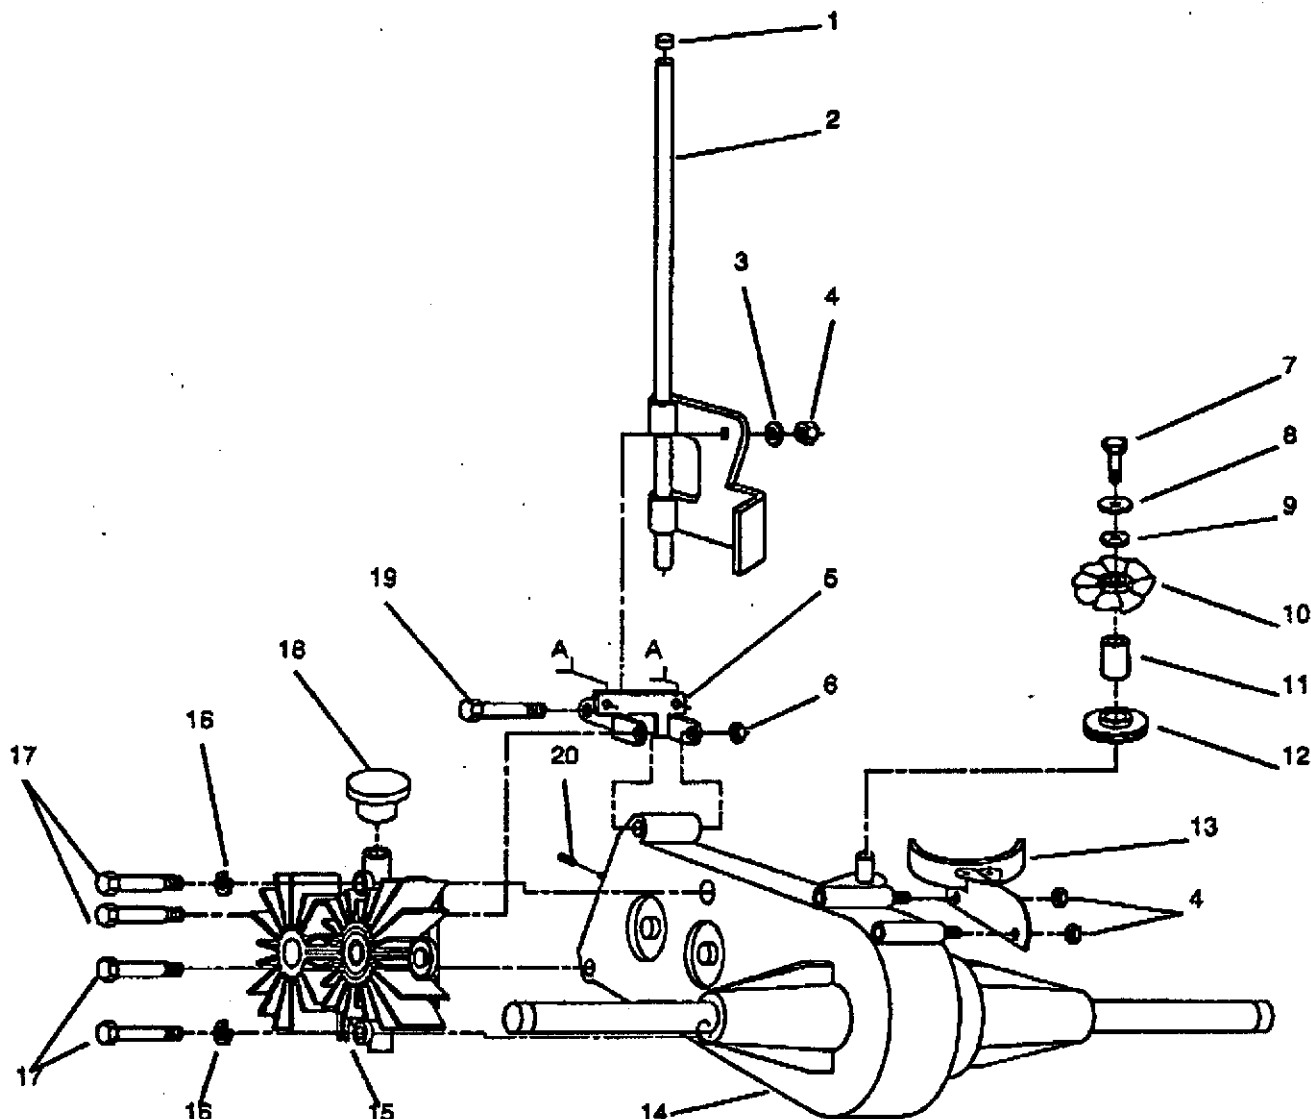

KEY PART NO. NO.

DESCRIPTION

1	532071673	Cap, Plunger
2	532123634	Rod, Free Wheel Control Assembly
3	532120529	Washer, Nylon
4	873680400	Nut, Crownlock 1/4-20 UNC
5	532121188	Bracket, Painted, Mounting, Differential
6	873680500	Nut, Crownlock 5/16-18
7	874780412	Bolt, Hex 1/4-20 UNC x 3/4
8	810040400	Washer
9	819092016	Washer 9/32 x 1-1/4 x 16 Gauge
10	532121186	Fan, Hydro, 8"
11	532121211	Standoff, Fan, Hydro
12	532121180	Pulley, Transaxle
13	532121182	Guard Assembly, Belt
14	532121431	Differential Assembly

KEY PART NO. NO.

DESCRIPTION


15	532121430	Pump Assembly
16	810040500	Washer Lock
17	874760572	Bolt, Hex Fin. 5/16-18 UNC x 4 1/2
18	532121323	Reservoir, Pump
19	532124815	Bolt, Shoulder 1/4-20 UNC
20	532121250	Spring, Compression
21	874760612	Bolt, Hex 3/8-16 x 3/4
22	873680600	Nut, Crownlock 3/8-16 UNC

NOTE: All component dimensions
given in U.S. inches
1 inch = 25.4 mm



REPAIR PARTS

14 HP 44" TRACTOR - - MODEL NO. YTH142, PRODUCT NO. 954 00 03-52
AGRI-FAB TRANSAXLE MODEL NUMBER 121431X

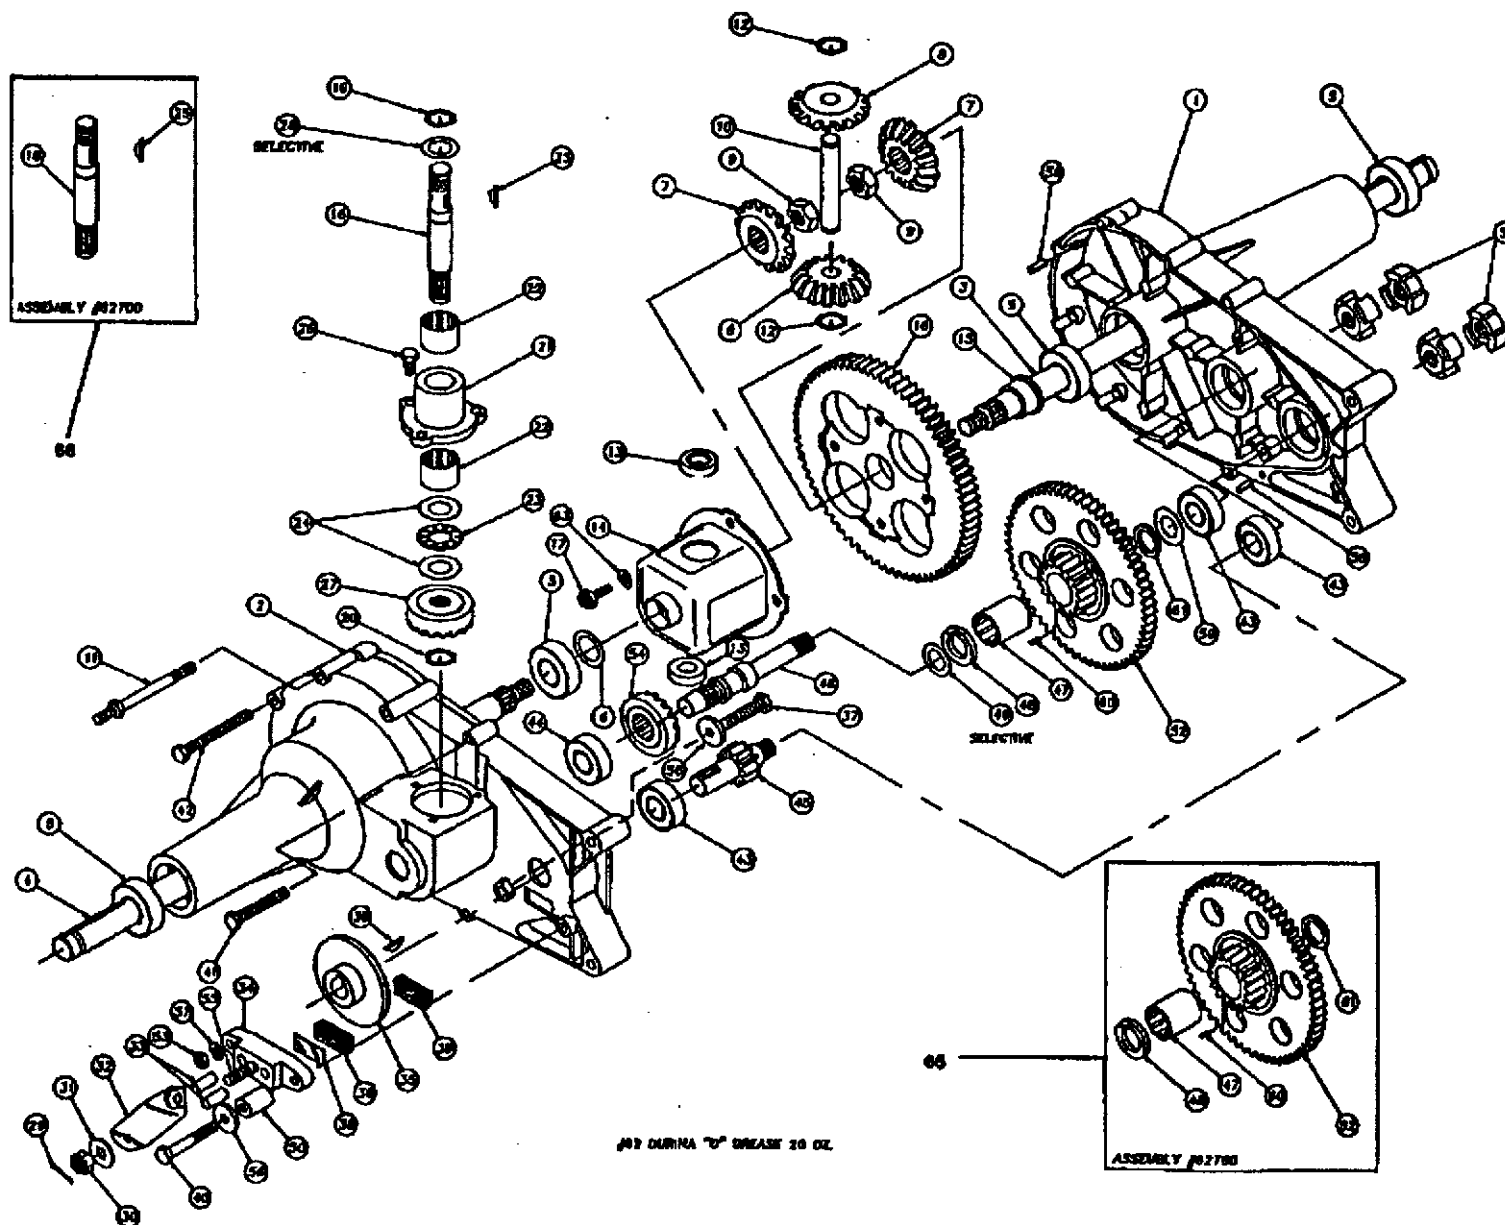

For Husqvarna Parts Call 606-678-9623 or 606-561-4983

REPAIR PARTS

14 HP 44" TRACTOR -- MODEL NO. YTH142, PRODUCT NO. 954 00 03-52
AGRI-FAB TRANSAXLE MODEL NUMBER 121431X

KEY PART NO. NO.	DESCRIPTION
1 532122614	Housing, Hal, L.H.
2 532122615	Housing, Hal, R.H.
3 532122618	Axle, L.H.
4 532122620	Axle, R.H.
5 532122621	Bearing, Ball
6 532122622	Washer, Flat 3/4 x 1-1/8 x .030
7 532122623	Gear, Miter
8 532122624	Gear, Miter
9 532122625	Nut, Hex Jam W/Patch 1/2-20
10 532122626	Shaft, Cross
11 532122688	Screw, Stud
12 532122629	Snap, Ring
13 532122631	Bearing, Thrust
14 532122633	Housing Assembly, Differential
15 532122634	Bearing, Flange
16 532122640	Gear, Differential 72 Tooth
17 532122641	Bolt, Torx Head 1/4-28 x 5/8"
18 532122642	Shaft, Input
19 532122643	Snap, Ring
20 532122644	Retaining Ring 7/16"
21 532122645	Housing, Input Bearing
22 532122646	Bearing, Needle
23 532122647	Bearing, Thrust
24 532122648	Washer, Flat 5/8 x 1-1/8 x .030
25 532122649	Key, Hi-Pro 3/32 x 5/8
26 532122650	Screw, Hex W/Patch 1/4-20 x 3/4
27 532122651	Gear, Input Pinion 17 Tooth
28 532123061	Washer, Flat .62 x 1 x .05
--- 532122678	Washer, Flat .62 x 1.125 x .060
--- 532122654	Washer, Flat .62 x 1 x .040
29 532122656	Pin, Cotter
30 532122658	Nut, Castle 5/16-24
31 532122659	Washer, Flat .343 x .88 x .062
32 532122660	Arm, Brake Actuator
33 532122662	Pin, Brake Actuating
34 532122663	Brake, Yoke
35 532122664	Disc, Brake


KEY PART NO. NO.	DESCRIPTION
36 532123065	Key, Hi-Pro 3/16 x 5/8"
37 532122668	Screw, Hex 1/4-20 x 1.50
38 532122687	Plate, Puck
39 532122668	Puck, Brake
40 532123066	Screw, Hex W/Patch 1/4-20 x 2.00
41 532122670	Screw, Hex Self-Tap 1/4-20 x 2.00
42 532122671	Screw, Hex Self-Tap 1/4-20 x 3.00
43 532126982	Bearing, Ball
44 532122673	Bearing, Ball
45 532122674	Shaft, Pinion W/11 Tooth Gear
46 532122675	Shaft, Drive
47 532123059	Bearing, Needle
48 532123080	Bronze Thrust Brg. 5/8 x 1-1/4 x 7/64
49 532122654	Washer, Flat .62 x 1.0 x .040
— 532123061	Washer, Flat .62 x 1.0 x .050
50 532122689	Spacer
51 532121839	Coupling
52 532126975	Gear, 60 and 17 Tooth
53 532122682	Nut, Hex 1/4-20
54 532122683	Gear, Drive Pinion 17 Tooth
55 532122684	Bolt, Square Head
56 532122685	Washer 15/16 x .265 x .125
57 532122686	Washer 1/4" Spring Lock
58 532122687	Pin, Roll 3/16" x 1/2"
59 532122652	Washer, Flat .62 x 1.0 x .030
60 532123062	Pin, Dowel 3/32 x 1/4
61 532123063	Seal, Grease
62 532126976	Shell, Durina-O Grease (20oz.)
63 532126977	Washer, Head Spring Lock 1/4"
65 532126980	Assembly, Gear, Reduction
66 532126981	Assembly, Shaft, Input
— 532121431	Transaxle Assembly Complete

NOTE: All component dimensions given in U.S. Inches
1 inch = 25.4 mm

REPAIR PARTS

14 HP 44" TRACTOR -- MODEL NO. YTH142, PRODUCT NO. 954 00 03-52

PUMP ASSEMBLY

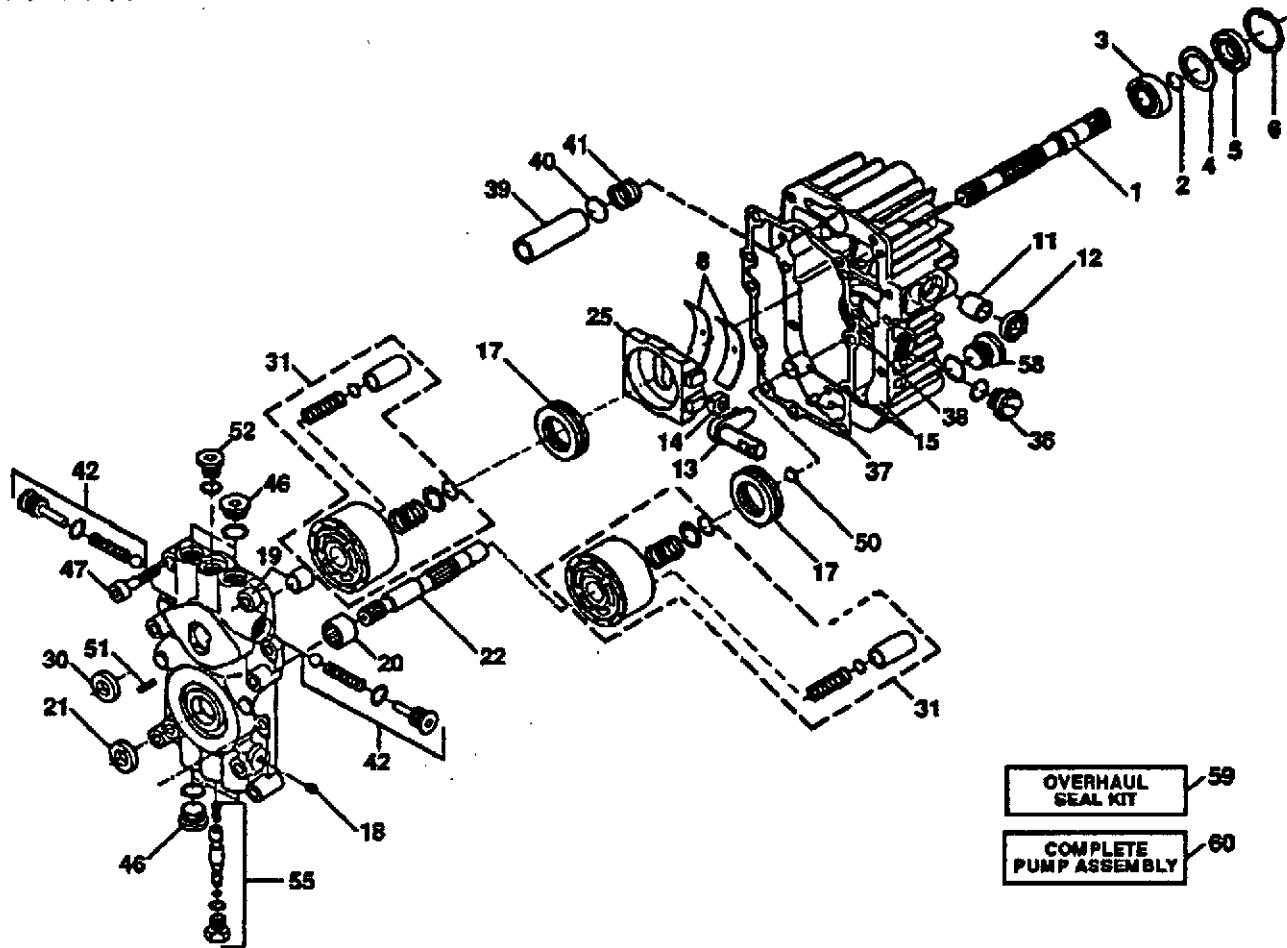

KEY PART NO. NO.

DESCRIPTION

1	532122756	Shaft, Pump
2	532122716	* Ring, Retaining
3	532122745	Bearing, Ball
4	532122715	* Spacer
5	532122700	* Seal, Lip
6	532122699	* Ring, Retaining
8	532122767	Bearing, Cradle
11	532122747	Bearing, Journal
12	532122717	* Seal, Lip
13	532122748	Arm, Trunnion
14	532122749	Guide, Slot
15	532127148	Housing Kit, Transmission
17	532122770	Bearing, Thrust, Ball
18	532122771	Plug, Pipe
19	532127147	Center Section Kit
20	532122773	Bearing, Needle
21	532122722	* Seal, Lip
22	532122750	Shaft, Motor
25	532127148	Swashplate, Variable
30	532122723	* Seal, Lip
31	532127149	Block Kit, Cylinder
36	532127151	Plug, Plastic

KEY PART NO. NO.

DESCRIPTION


37	532122786	Pin, Stainless, Headless
38	532122718	* Gasket, Center Section
39	532122731	Filter
40	532122730	Washer, Thrust
41	532122728	Spring, Helical, Compression
42	532127152	Check Valve Kit
46	532122787	Plug, Stainless, Threaded
47	532122752	Screw, Socket Head, Cap
50	532122788	Washer, Thrust
51	532122789	Pin, Spiral
52	532122754	Plug, Stainless, Threaded
55	532127153	Bypass Valve Kit
58	532122790	Plug, Stainless, Threaded
59	532127154	Overhaul Seal Kit, BDU-10
60	532121430X	Pump Assembly, Complete

* STANDARD HARDWARE - PURCHASE LOCALLY

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

14 HP 44" TRACTOR - - MODEL NO. YTH142, PRODUCT NO. 954 00 03-52
DECALS

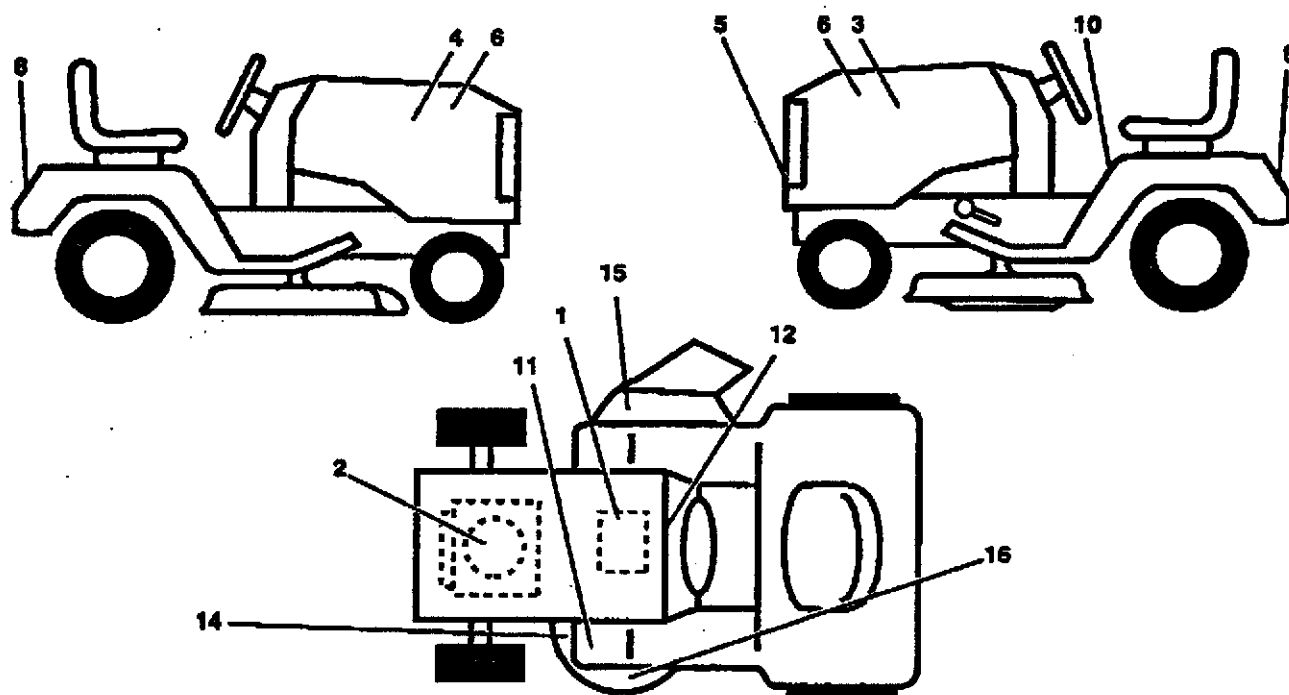

KEY NO.	PART NO.	DESCRIPTION
1	532121549	Decal, Caution, Battery
2	532131972	Decal, HP, Engine
3	532131588	Decal, Hood, L. H.
4	532131585	Decal, Hood, R. H.
5	532125989	Decal, Logo, Grill
6	532131411	Decal, Model, Side Panel
8	532131582	Decal, Logo, Fender
9	532127520	Decal, USA
10	532120822	Decal, Operating, Warning, (English/French)
—	532126679	Decal, Operating, Warning, (Swedish/Danish)
—	532126680	Decal, Operating, Warning, (Norwegian/Finnish)
—	532126682	Decal, Operating, Warning, (German/Dutch)
—	532126683	Decal, Operating, Warning, (Spanish/Italian)
11	532101892	Decal, Clutch/Brake, (English/French/German/Dutch)
—	532126676	Decal, Clutch/Brake, (Swedish/Finnish/Danish/Norwegian)
—	532126678	Decal, Clutch/Brake, (Spanish/Italian)
12	532108813	Decal, Instruction, Operating, (English/French/German/Dutch)

KEY NO.	PART NO.	DESCRIPTION
14	532126193	Decal, Warning, Deflector, (Finnish/Swedish/Norwegian/Danish)
—	532126194	Decal, Warning, Deflector, (English/French/German/Dutch)
—	532126347	Decal, Warning, Deflector, (Spanish/Italian)
15	532126191	Decal, Warning, (Swedish/Finnish/Norwegian/Danish)
—	532126192	Decal, Warning, (English/French/German/Dutch)
—	532126345	Decal, Warning, (Spanish/Italian)
16	532126195	Decal, Rotating Blades, (Swedish/Finnish/Norwegian/Danish)
—	532126196	Decal, Rotating Blades, (English/French/German/Dutch)
—	532126346	Decal, Rotating Blades, (Spanish/Italian)
—	532101539	Sheet, Instruction, Tractor, 15 Degree Slope, (English)
—	532101572	Sheet, Instruction, Tractor, 15 Degree Slope, (French)
—	532131432	Manual, Operator's, (Swedish/Danish/Finnish/Norwegian)
—	532131433	Manual, Operator's, (English/French/German/Dutch/Spanish/Italian)