



MODEL 7-4297
BODY SECTION

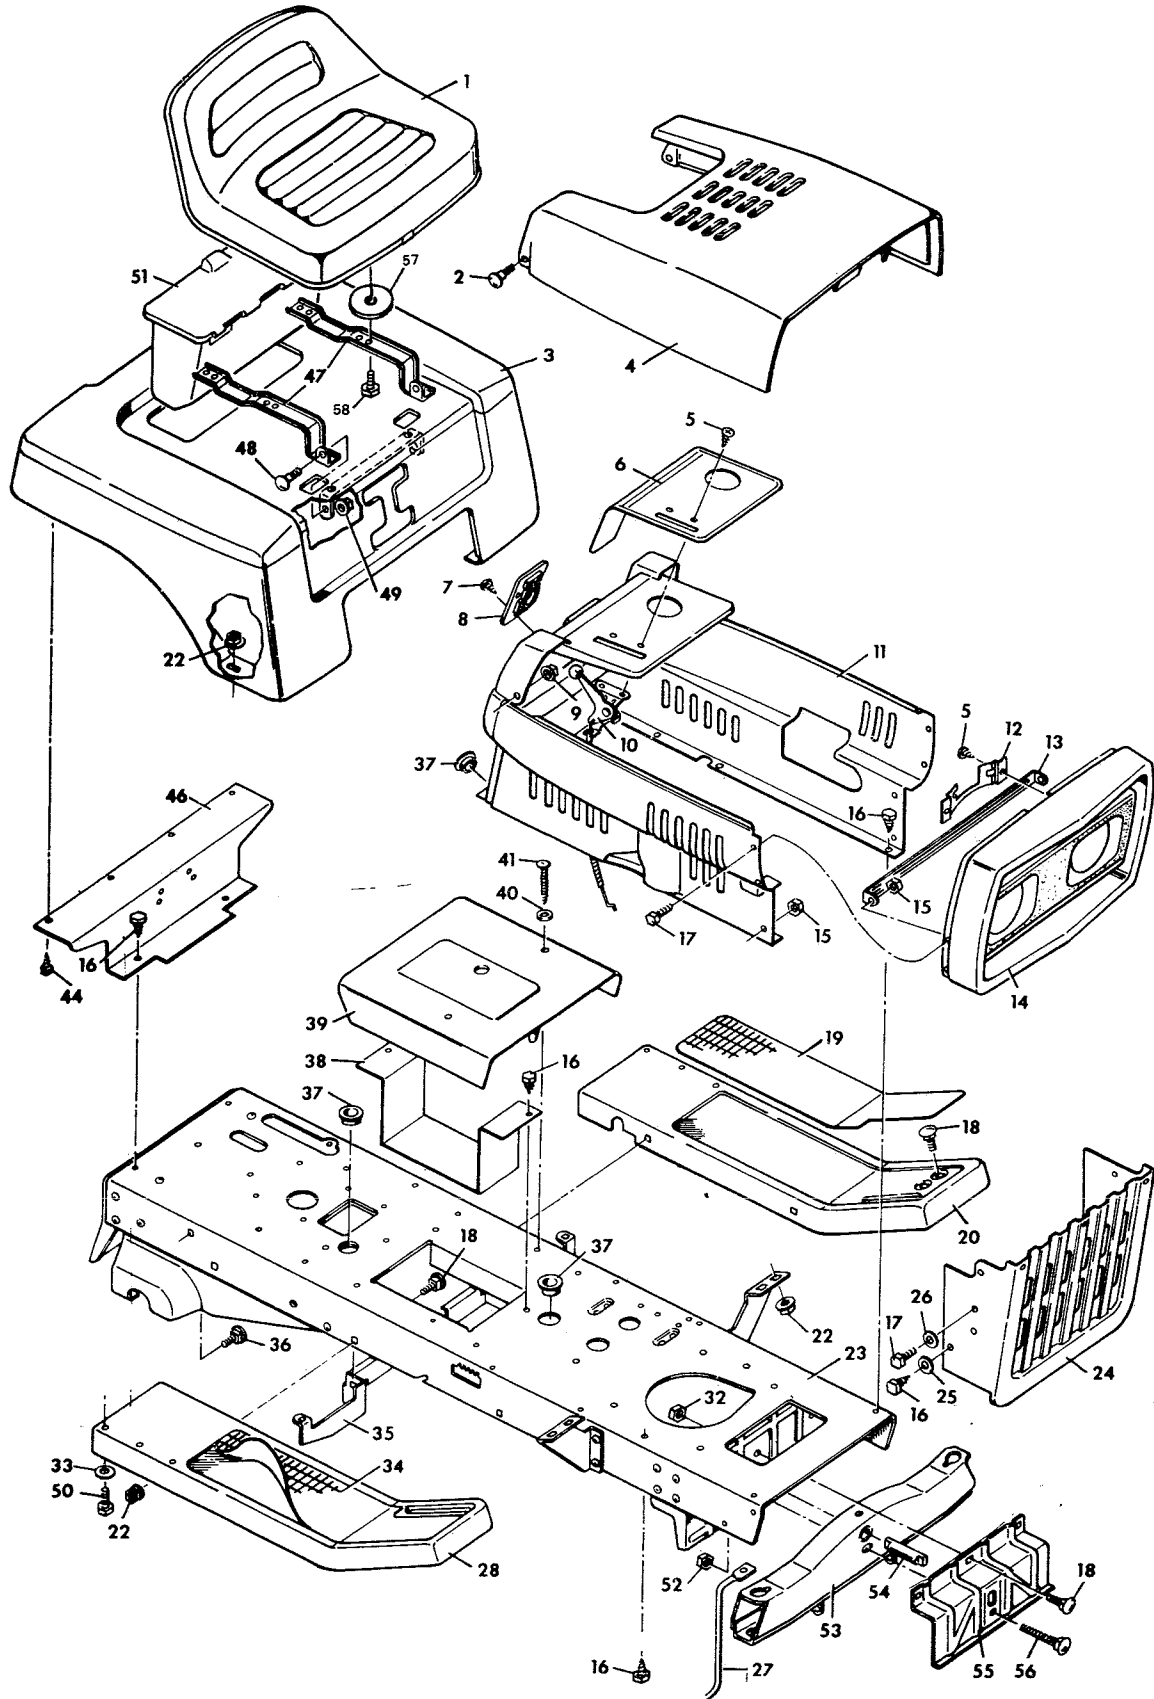

MODEL 7-4297

KEY NO.	PART NO.	DESCRIPTION
1	21970	Seat
2	20661	Shoulder Bolt $\frac{3}{8}$ "-16X $\frac{7}{8}$ "
3	21418	Rear Shroud Ass'y.
4	21435	Hood
5	26X159	Screw #8X $\frac{3}{8}$ " Type A
6	21691	Control Plate
7	26X186	Screw #10 $\frac{1}{2}$ " Type AB
8	21531	Steering Post Bearing
9	15X68	Flange Nut $\frac{3}{8}$ "-16
10	21540PA	Remote Control Unit
11	21458	Engine Shroud Ass'y.
12	21485Z	Sealed Beam Retainer
13	21650Z	Grille & Shroud Brace
14	21406	Grill
15	15X82Z	Flange Nut $\frac{1}{4}$ "-20
16	26X174	Screw 5/16"X $\frac{3}{4}$ " Type A
17	1X38Z	Bolt $\frac{1}{4}$ "-20X $\frac{5}{8}$ "
18	2X53	Carriage Bolt 5/16"-18X $\frac{5}{8}$ "
19	21569	Mat L.H.
20	21933	Running Board L.H.
22	15X79Z	Flange Nut 5/16"-18
23	403035	Frame Ass'y.
24	21446	Lower Grill
25	17X47Z	Washer
26	17X37Z	Washer
27	23146Z	Belt Guide
28	21932	Running Board R.H.
32	15X88Z	Locknut 5/16"-18
33	17X47Z	Washer
34	21568	Mat R.H.
35	21547	Support & Clip Ass'y.
36	2X56	Carriage Bolt $\frac{3}{8}$ "-16X $\frac{3}{4}$ "
37	21268	Grommet
38	23094	Battery Support
39	21403	Battery Cover
40	17X112	Finishing Washer
41	26X193	Screw #10X3- $\frac{1}{8}$ " Type AB
44	26X185	Screw #10X $\frac{3}{8}$ " Type AB
46	21411	Shroud Support
47	23110Z	Seat Hinge
48	20662	Shoulder Screw
49	15X84Z	Flange Locknut
50	1X45Z	Bolt 5/16"-18X $\frac{5}{8}$ "
51	21404	Tool Box
52	15X84Z	Lock Nut $\frac{3}{8}$ "-16
53	21331	Front Axle Assembly
54	21469	Front Axle Spacer
55	21534	Front Axle Hanger
56	2X60	Carriage Bolt $\frac{3}{8}$ "-16X3"
57	20094Z	Washer
58	1X84Z	Bolt


MODEL 7-4297
STEERING SECTION

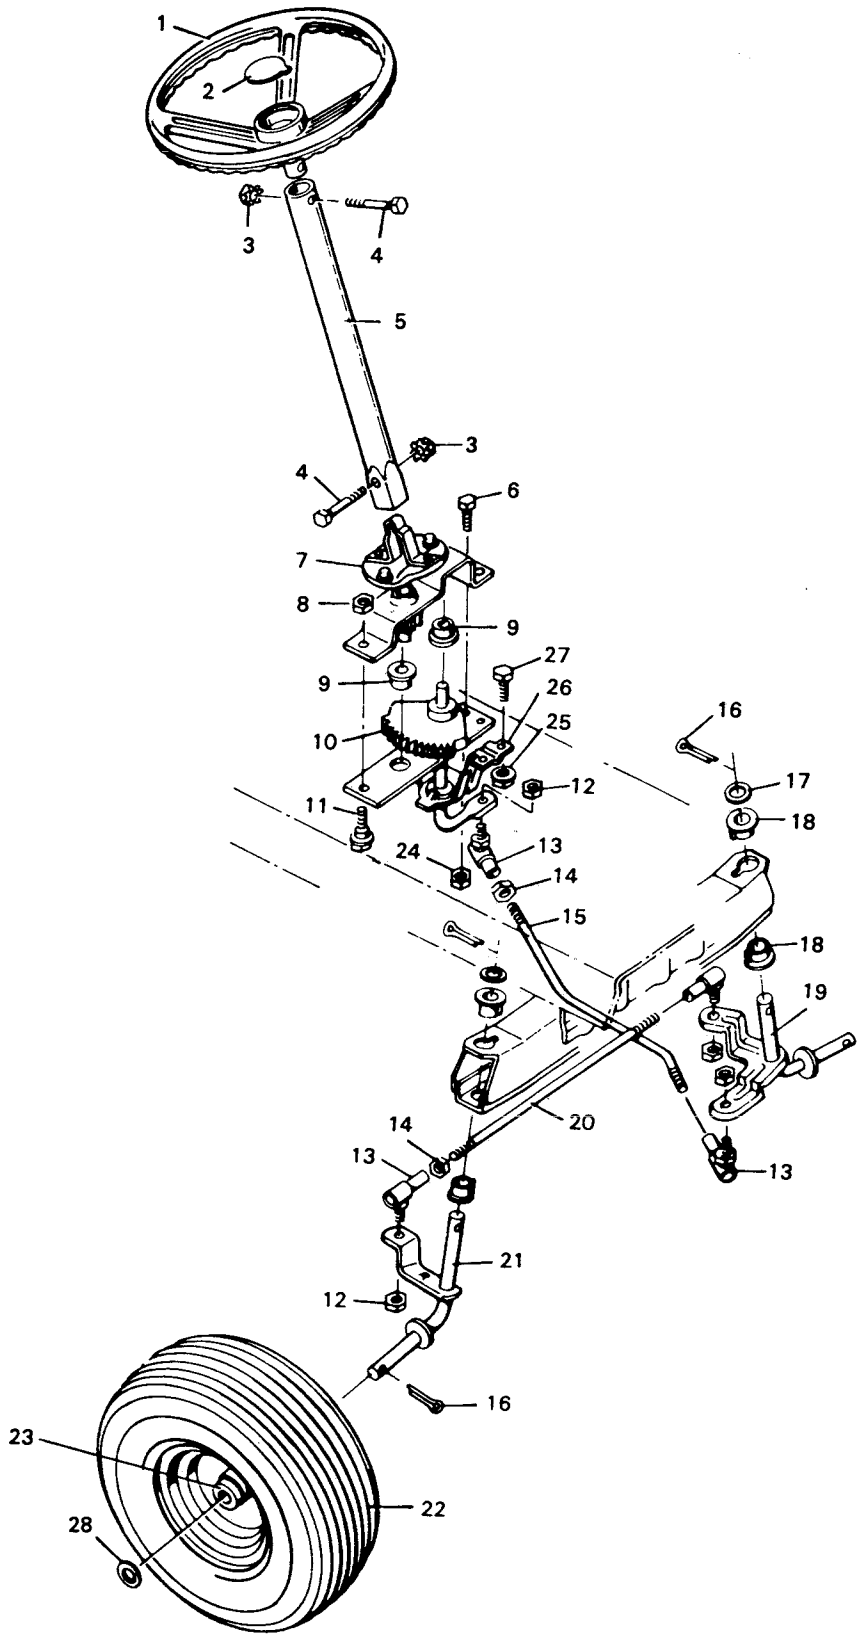

MODEL 7-4297

KEY NO.	PART NO.	DESCRIPTION
1	21688	Steering Wheel
2	21303	Steering Wheel Cap
3	15X76	Keps Nut 5/16"-18
4	1X75	Bolt 5/16"-18X1 ³ / ₄ "
5	21486C	Steering Post
6	1X73Z	Screw 5/16"-18X7/8"
7	21493	Steering Gear & Coupling Ass'y.
8	15X84Z	Locknut 3/8"-16
9	20587	Bearing
10	21692	Steering Arm Gear & Brkt. Ass'y.
11	21426	Shoulder Bolt
12	15X87Z	Locknut 3/8"-24
13	21031	Ball Joint
14	15X61Z	Hex Nut 3/8"-24
15	21482	Drag Link Rod
16	30X49	Cotter Pin 1 ¹ / ₄ "
17	17X83Z	Washer
18	21401	Spindle Bearings
19	21476	Spindle Ass'y. L.H.
20	21475	Tie Rod Ass'y.
21	21479	Spindle Ass'y. R.H.
22	21527	Front Wheel & Tire
	403000	Rim Only
	403001	Tire Only
	400162	Valve Stem & Cap
	20797	Hub Cap
23	403010	Front Wheel Bearing
24	15X43Z	Locknut 5/16"-18
25	15X79Z	Flange Nuts 5/16-18
26	21693	Steering Bracket
27	1X45Z	Bolt 5/16-18X5/8"
28	17X115	Washer
	23243	Parts Bag

**MODEL NO. 4297 (10 hp.)
DRIVE SECTION**

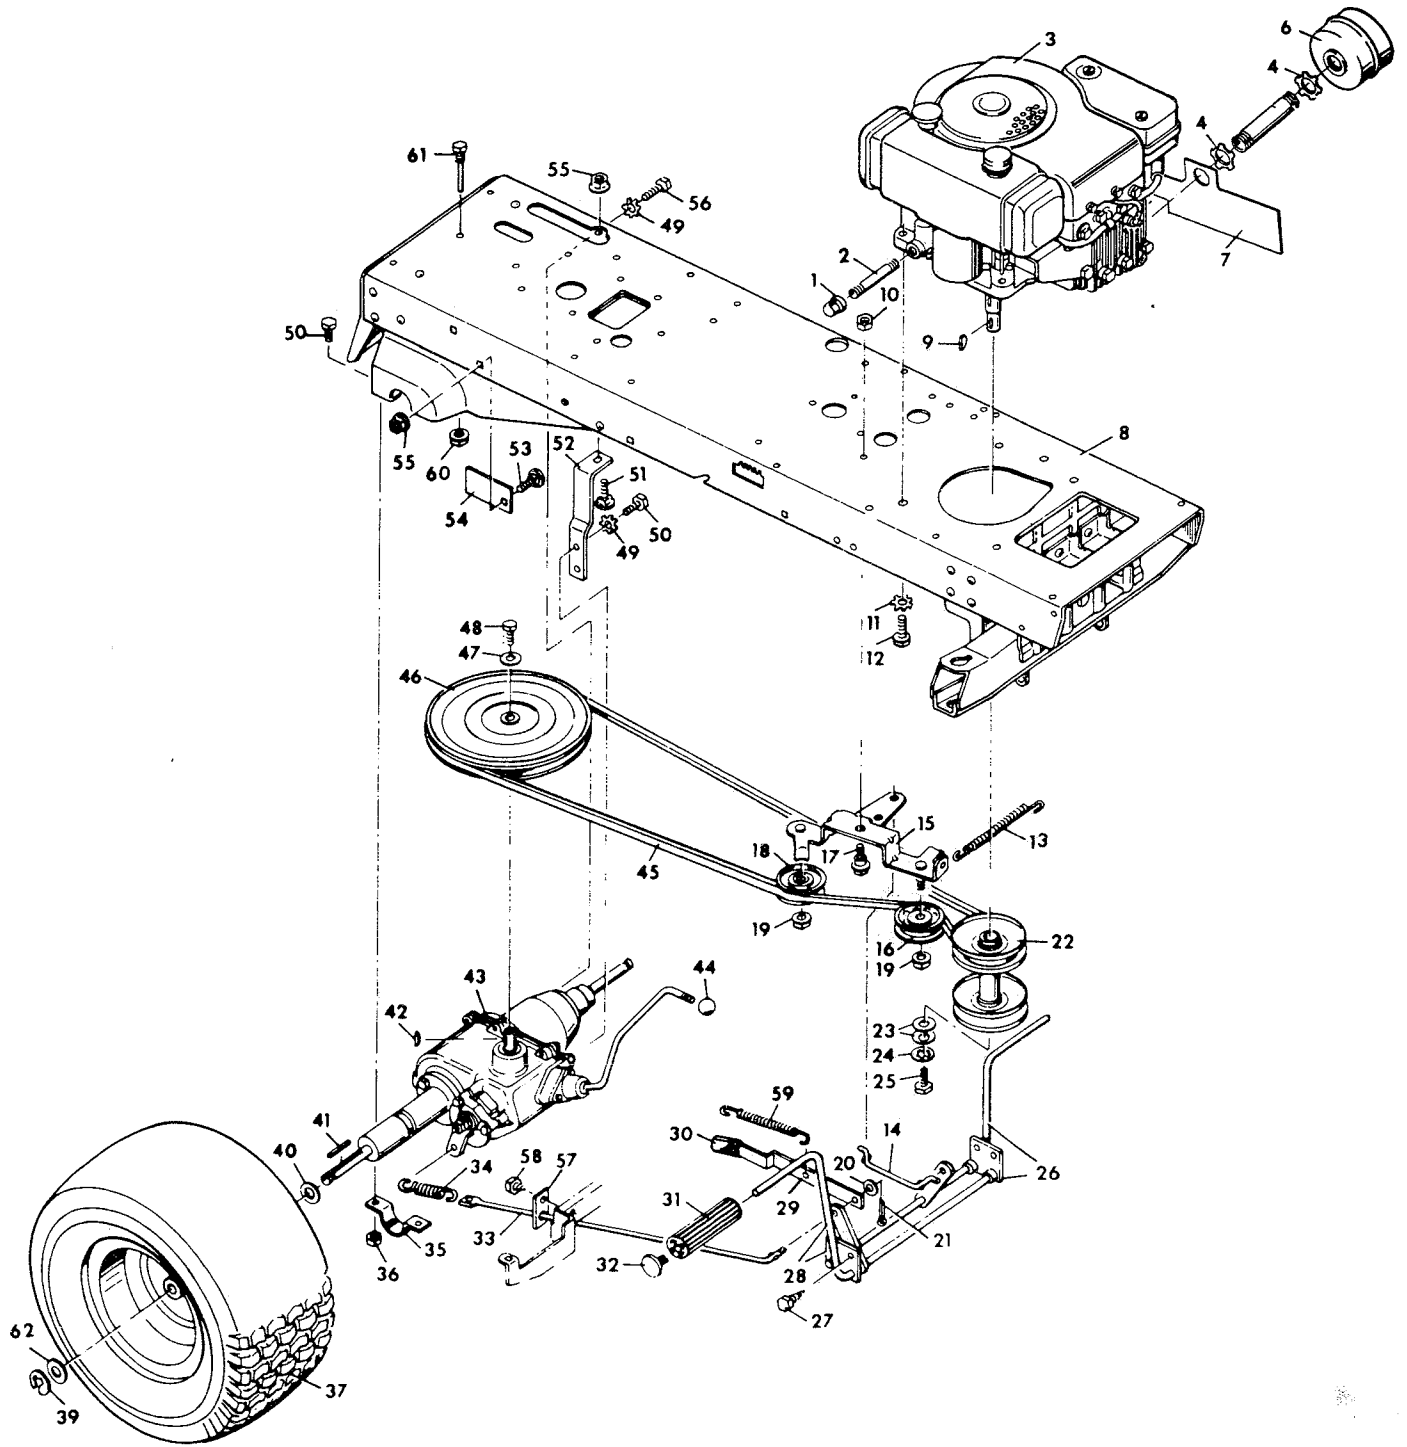


MODEL NO. 4297 10 hp.

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	21651	Cap	34	21675	Spring
2	21652	Oil Drain Extension	35	21473	Transaxle Clamp
3	-----	Engine†	36	15X88Z	Lock Nut 5/16"-18
4	21616	Lock Nut	37	21526	Wheel & Tire 18X9.50-8
5	-----	Muffler Extension†		403004	Wheel Only
6	-----	Muffler (10 hp.)†		403005	Tire 18X9.50-8
7	21664Z	Heat Shield		400162	Valve Stem & Cap
8	403035	Frame Ass'y.		21662	Hub Cap
9	20662	Woodruff Key #6	39	11X3	E-Ring
10	15X84Z	Lock Nut 3/8"-16	40	21521	Washer
11	19X8	Lock Washer	41	21553	Square Key
12	20103	Engine Bolt 3/8"-16X1	42	21539	Woodruff Key
13	20684	Spring	43	-----	Transaxle#
14	21681	Clutch Link Rod	44	20841	Knob
15	21428	Idler Bracket & Stud Ass'y.	45	21615	Drive Belt 1/2"X95"
16	21409	Idler Pulley	46	21447	Input Pulley
17	21426	Shoulder Bolt 3/8"-16X7/8"	47	18X30	Lockwasher
18	20613	Idler Pulley	48	1X38Z	Bolt 1/4"-20X5/8"
19	15X84Z	Flange Lock Nut 3/8-16	49	18X15	Lock Washer
20	17X47Z	Washer	50	1X73	Bolt 5/16"-18X7/8"
21	30X20	Cotter Pin 3/4"	51	2X57	Carriage Bolt 3/8"-16X7/8"
22	21415Z	Stack Pulley	52	21440Z	Transaxle Support Bracket
23	10851Z	Washer	53	2X56	Carriage Bolt 3/8"-16X3/4"
24	19X39	Shakeproof Washer	54	21683	Belt Guide
25	1X20	Bolt 3/8"-24X1"	55	15X68	Lock Nut 3/8"-16
26	21950	Clutch Lever Ass'y.	56	1X84Z	Bolt 5/16"-18X1"
27	26X174	Screw	57	21678Z	Brake Rod Support
28	21946	Brake Lever Ass'y.	58	26X185	Screw #10X1/2" Type AB
29	21484Z	Parking Brake Arm	59	20682	Spring
30	21434	Grip	60	15X79Z	Lock Nut
31	21544	Pedal	61	20619	Belt Guide
32	21535	Cap	62	17X115	Washer
33	21472Z	Brake Rod			

†NOTE: Your engine Model, type and Code Number is stamped on Blower Housing.


#NOTE: Transaxle parts available through Tecumseh Dealer's Only.

**MODEL 7-4297
BLADE HOUSING
(UPPER)**

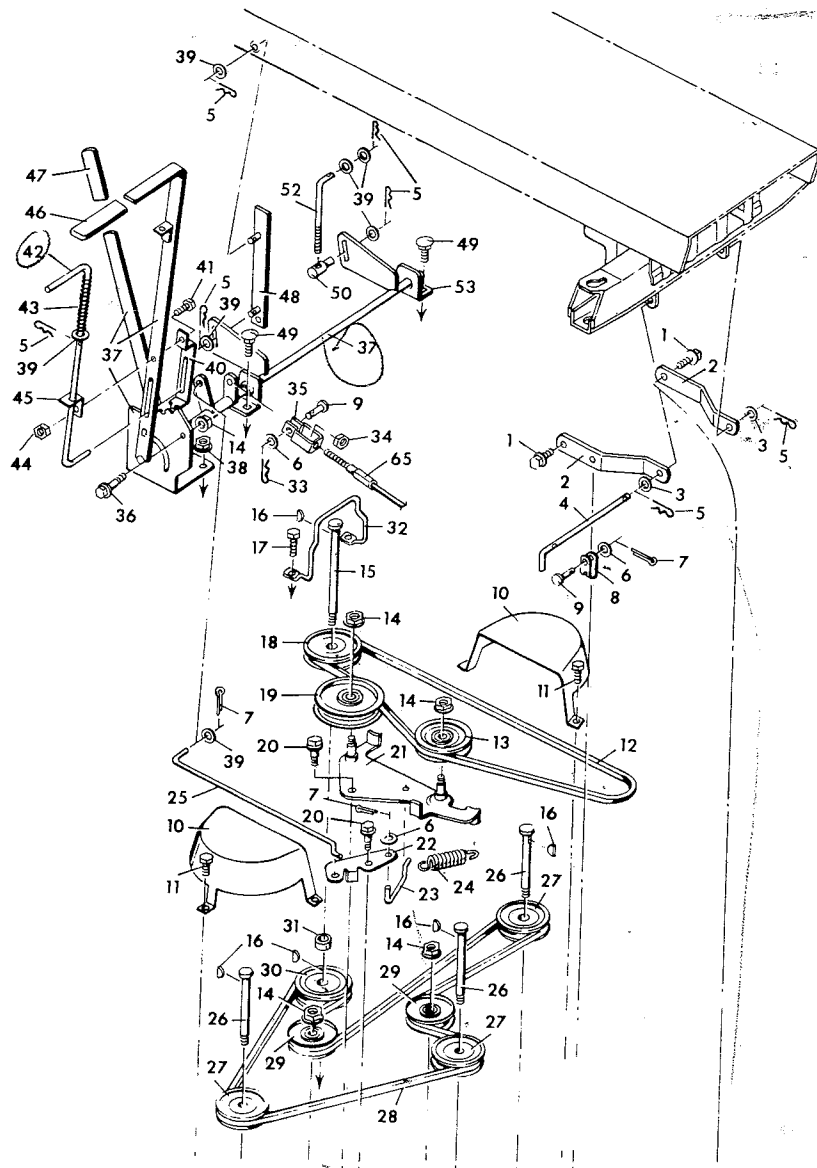


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	20661	Shoulder Bolt	24	23219	Spring
2	23185	Support Arm	25	23232Z	Link Rod
3	17X57Z	Washer I.D. 15/32"	26	20616	Jackshaft
4	21912Z	Pull Pin	27	23212	Pulley
5	20692	Hair Pin	28	23223	Cross Drive Belt 1/2"X95"
6	17X47Z	Washer I.D. 11/32"	29	21409	Backside Idler Pulley
7	30X20	Cotter Pin	30	20615	Pulley
8	21914Z	Clevis	31	23213Z	Spacer
9	29X93	Clevis Pin	32	23215Z	Belt Guide
10	23231	Pulley Cover	33	20101	Hair Pin
11	1X38	Shoulder Bolt	34	15X2	Hex Nut 5/16"-18
12	23214	Blade Drive Belt 1/2"X59"	35	21915	Adjusting Clevis
13	23211	Idler Pulley	36	21602	Shoulder Bolt 3/8"-16
14	15X84Z	Flange Locknut 3/8"-16	37	23201	Lifter Ass'y.
15	23180	Jackshaft	38	15X88Z	Flange Nut 5/16-18
16	20062	Woodruff Key	39	17X53Z	Washer I.D. 13/32
17	1X84Z	Hex Bolt 5/16"-18X1"	40	23192Z	Lifter Guide Brkt.
18	21096	Jackshaft Pulley	41	1X95	Hex Bolt 1/4"-20X3/8"
19	23238	Backside Idler Pulley	42	23194Z	Lifter Rod
20	21426	Shoulder Bolt 3/8"-16X7/8	43	23221Z	Spring
21	23179Z	Blade Drive Idler	44	15X66	Hex Nut 1/4"-20
22	23226Z	Engagement Link	45	23193Z	Guide Bracket
23	23228Z	Link Rod	46	23222	Lifter Grip

**MODEL 7-4297
BLADE HOUSING
(LOWER)**

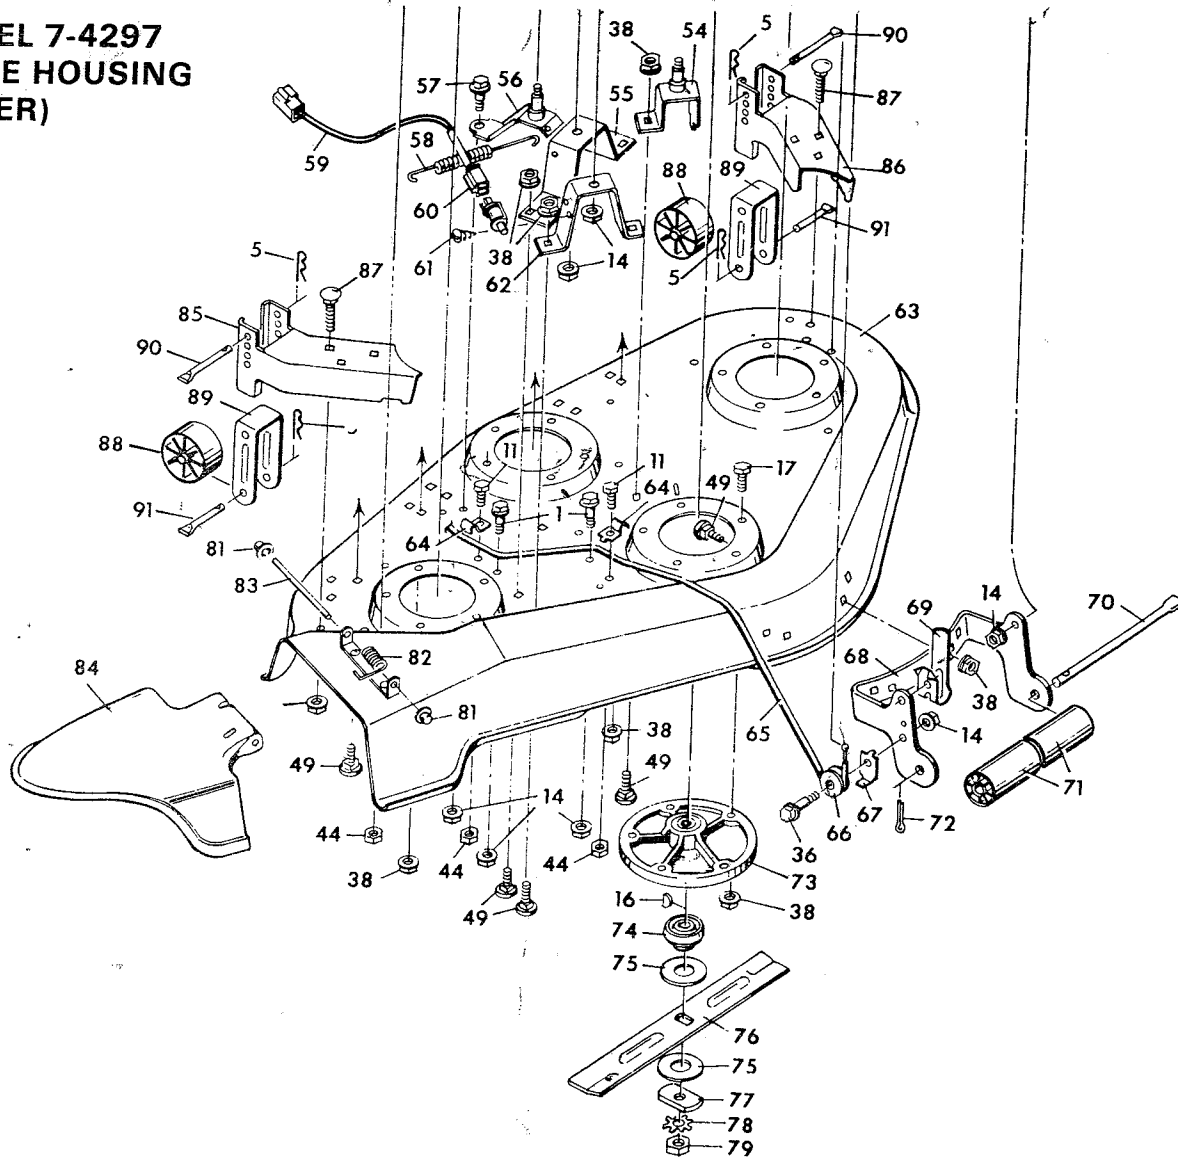

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
47	21249	Engagement Lever Grip	70	23186Z	Roller Axle
48	23188Z	R.H. Mounting Bracket	71	23203	Roller
49	2X53	Carriage Bolt 5/16"-18X3/4"	72	30X49	Cotter Pin
50	21920	Adjusting Nut	73	20551	Jackshaft Housing
52	23275Z	L.H. Mounting Bracket	74	20617	Blade Adapter
53	23184	Lifter Support	75	21673Z	Washer
54	23177	Fixed Idler Ass'y.	76	23209	Blade
55	23240	Idler Support	77	20663Z	Blade Washer
56	23178Z	Idler Ass'y.	78	18X27	Lock Washer
57	20662	Shoulder Bolt 3/8"-16X7/8"	79	15X72	Hex Nut 1/4"-20
58	23220	Spring	80	23208	Rear Roller Support
59	23239	Jumper Wire	81	28X23	Push-On-Cap
60	21549	Safety Switch	82	21189	Torsion Spring
61	26X159	Screw	83	23173Z	Deflector Rod
62	23241	Engagement Link Support	84	23224	Chute Deflector
63	23171	Housing	85	23262	R.H. Gauge Wheel Bracket
64	21953Z	Cable Guide	86	23263	L.H. Gauge Wheel Bracket
65	23216	Lifter Cable	87	2X58	Carriage Bolt 5/16"-18X2 1/2"
66	23187	Nylon Pulley	88	23257	Gauge Wheel
67	23191Z	Cable Guide	89	23260Z	Gauge Wheel Retainer
68	23225	Roller Support	90	23259Z	Retainer Pin
69	23255Z	Belt Guide	91	23258Z	Axle Pin
				40404Z	Complete Blade Housing Assy. (Less Lifter Ass'y.)

**MODEL 7-4297
WIRING DIAGRAM**

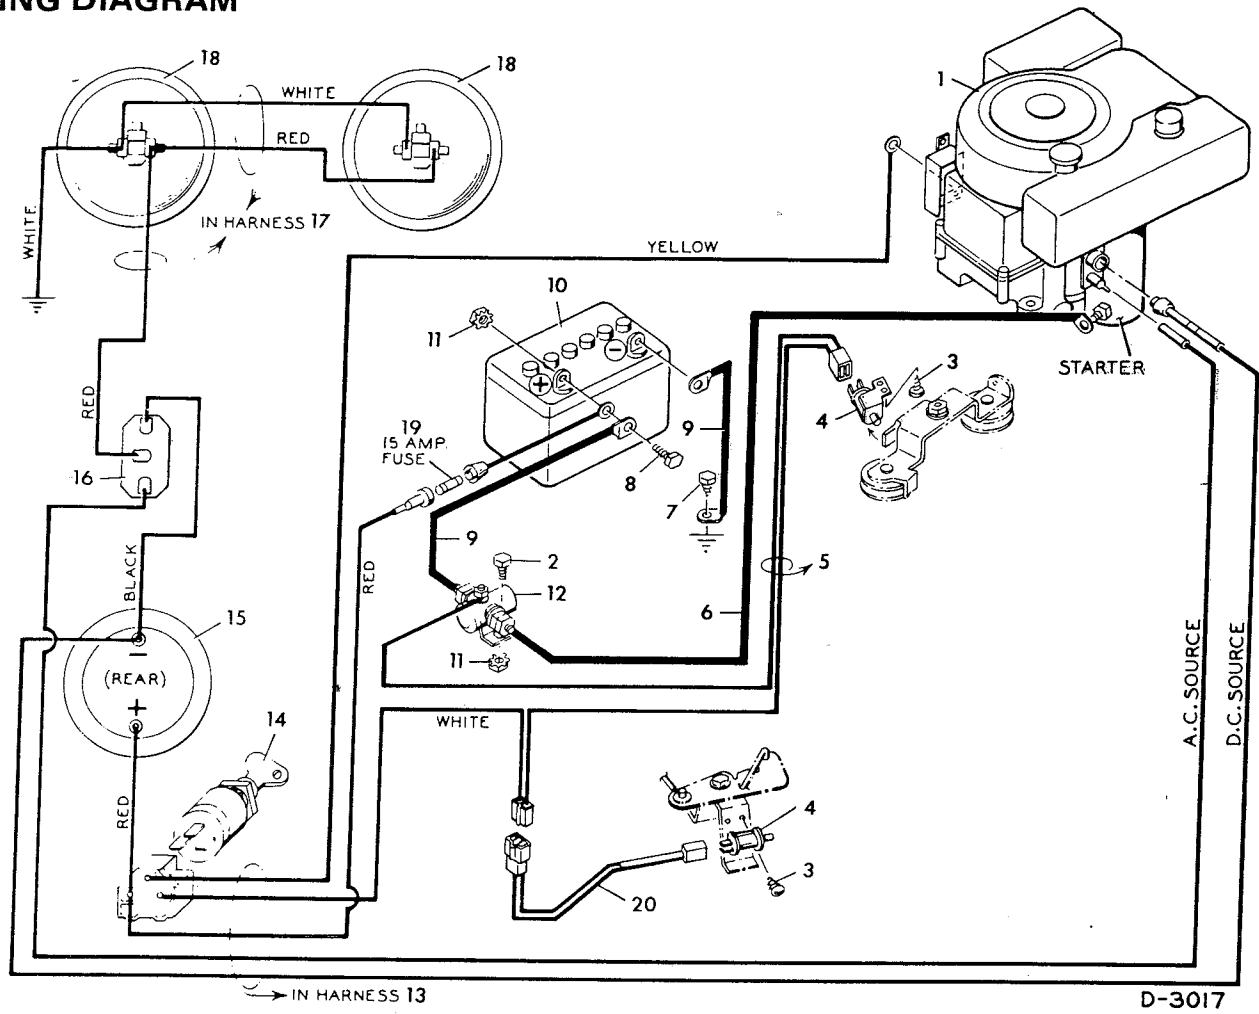

KEY NO.	PART NO.	DESCRIPTION
1	----	Engine
2	26X186	Screw
3	26X159	Screw #8X ³ / ₈ " Type A
4	21549	Safety Switch
5	21612	Jumper Wire
6	21577	Battery Cable
7	26X197	Screw 5/16"X ³ / ₄ " Type A
8	1X38Z	Hex Bolt 1/4"-20X ⁵ / ₈ "
9	21613	Battery Cable
10	23095	Battery
11	15X66	Keps Nut 1/4"-20
12	21261	Solenoid
13	21609	Wiring Harness
14	21064PA	Switch & Key
15	21057PA	Ammeter Ass'y.
16	21686PA	Light Switch
17	21687	Wiring Harness
18	20837	Seal Beam Light
19	21023	Fuse 15 Amp.
20	23239	Jumper Wire
	20729	Key Only