











Ref #	Part Number	Qty	S/P/F	Description
1		1		"Cylinder Order s/b if replacement is req.
24	530110	1	/P	Ball Bearing
27	510319	1		Oil Seal
28	28427	1		Oil Seal
29	530151	1		Needle Bearing & Liner Set 30 Needle s
29A	530104A	1	/P	Cartridge Bearing
30	290595	1	/P	Crankshaft & Rod Ass'y. (Incl. 45)
30	330177	1		Adapter Plate (8" B.C.)
34	650797	1	/P	Screw, 5/16-18 x 1/2"
41	310283A	1	/P	Piston & Pin Ass'y. (Std.)(Incl. 43)
41	310272A	1	/P	Piston & Pin Ass'y. (.010" OS)
42	310190	1	S/P	Ring Set (Std.)
42	310273	1		Ring Set (.010" OS)
43	310167	1	S	Piston Pin Retaining Ring
45	310263	1		Connecting Rod Ass'y. Incl. 29, 29A & 46
46	650633	1		Connecting Rod Bolt
69	510292A	1	/P	* Cylinder Cover Gasket
77	780097	1		Cartridge Bearing
89A	611032	1		Adapter Sleeve
90	611046A	1	/P	Flywheel
92	650815	1	/P	Belleville Washer
93	650390	1	/P	Flywheel Nut
100	34443A	1	S/P	Solid State Ignition (Incl. 101)
100	730207	1	/P	Magneto to Solid State Conversion Kit (Includes solid state module, solid state flywheel key, and instructions. )(Use as required on external ignitio n engines only.)
101	610118	1		Spark Plug Cover
103	650814	1	S	Screw, Torx T-15, 10-24 x 1"
110	611031	1		Ground Wire
119	510274A	1	/P	* Cylinder Head Gasket
120	250240B	1	/P	Cylinder Head
122	570641	1		Retaining Ring
130	650477	1	/P	Screw, Torx T-30, 1/4-20 x 3/4"
135	33636	1	/P	Resistor Spark Plug - RJ17LM
169	510323A	1	/P	* Cover Plate Gasket
170	470152A	1	/P	Reed & Cover Plate (Incl. 178)
174	650579	1	/P	Screw, Torx T-25, 10-24 x 1/2"
178	650456	1	/P	Nut, 1/4-20
184	510110A	1	/P	* Carburetor Gasket
220	570640	1		Control Knob
257	650561	1	/P	Screw, 1/4-20 x 5/8"
258	350408	1	/P	Blower Housing Base (Incl. 27)
260	350403	1		Blower Housing
261	650958	1		Screw, 1/4-20 x 7/16"
261B	650854	1		Washer
274	510314	1	S	Exhaust Gasket
275	390300	1		Muffler
277	650911	1	/P	Screw, Torx T-30, 1/4-20 x 5/8"
287	30646	1	/P	Screw, 1/4-20 x 1-3/8"
287A	650561	1	/P	Screw, 1/4-20 x 5/8"
290	29774	1	/P	Fuel Line (8.62")
292	26460	1	/P	Fuel Line Clamp

Ref #	Part Number	Qty	S/P/F	Description
298	650803	1		Screw, 10-32 x 7/8"
300	410241	1		Fuel Tank (Incl. 301)
301	410238	1	/P	Fuel Cap
370A	34686	1	S/P	Name Decal
370C	550214	1		Choke Fast-Stop Decal
370D	550212	1	/P	Fuel Mix Decal
370B	550213	1		Warning Decal
380	632335	1	/P	Carburetor (Incl. 184) (Refer to Division 5, Section A, page A1-42 or Fiche 23B, Grid F-13 for breakdown)
390	590552	1		Side Mount Rewind Starter Refer to Division 5, Section C, page 32 or Fiche 23B, Grid G-13 for breakdown
400	510295A	1	/P	* Gasket Set (Incl. items marked *)
422	730227D	1	/P	2-Cycle Oil with Fuel Stabilizer - 8 oz.

ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

VIEW 2 OF 2

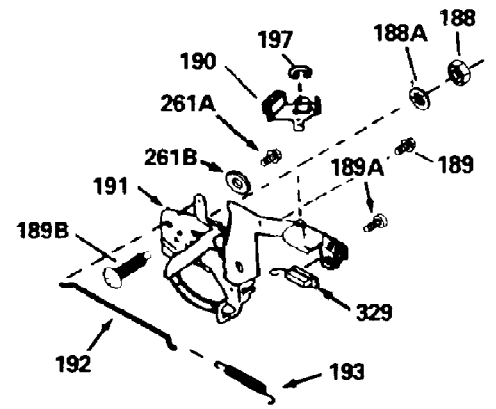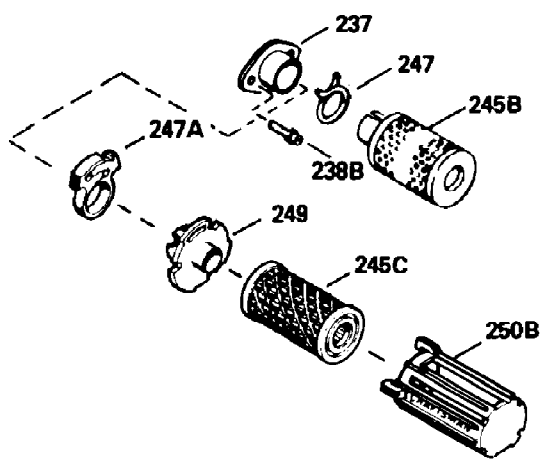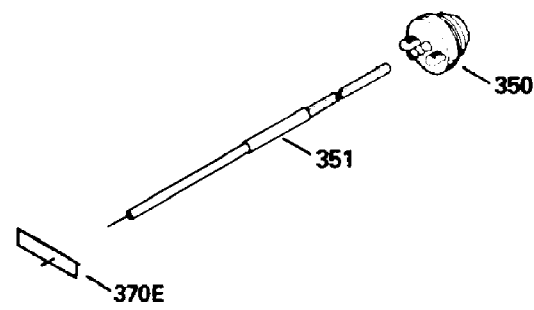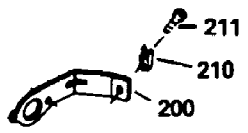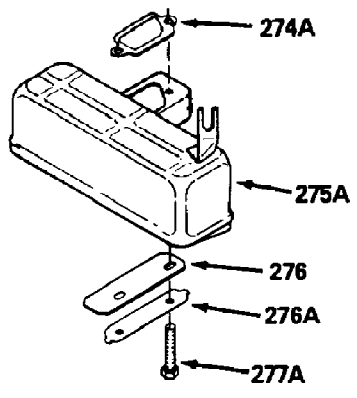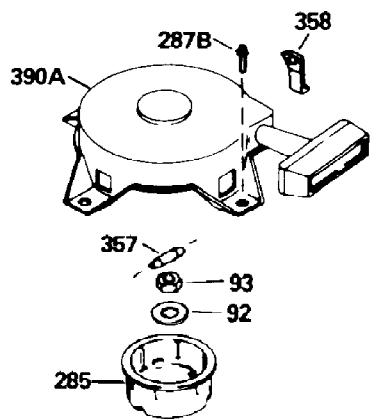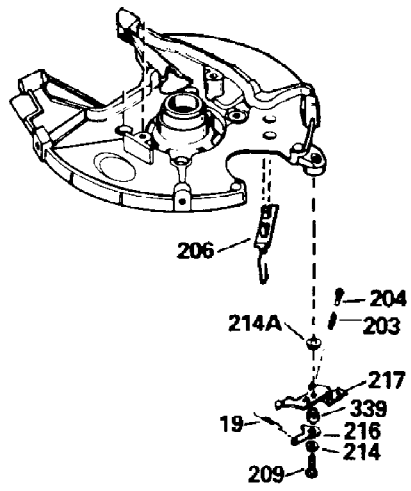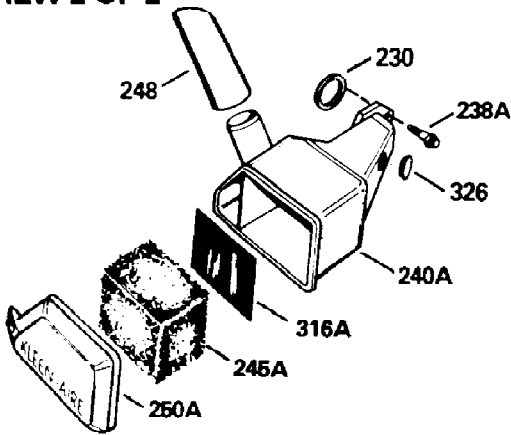

Ref #	Part Number	Qty	S/P/F	Description
92	650815	1	/P	Belleville Washer
93	650390	1	/P	Flywheel Nut
189A	650911	1	/P	Screw, Torx T-30, 1/4-20 x 5/8" As re q.
230	34338	1		Air Cleaner Gasket
238A	650806	1		Screw, 10-32 x 5/8"
240A	450234	1		Air Cleaner Body
245A	450236	1		Air Filter
248	33008	1		Air Cleaner Tube
250A	33007	1		Air Cleaner Cover
261B	650854	1		Washer
316A	450235	1		Air Filter
326	450237	1		Button Plug