


ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

VIEW 1 OF 2

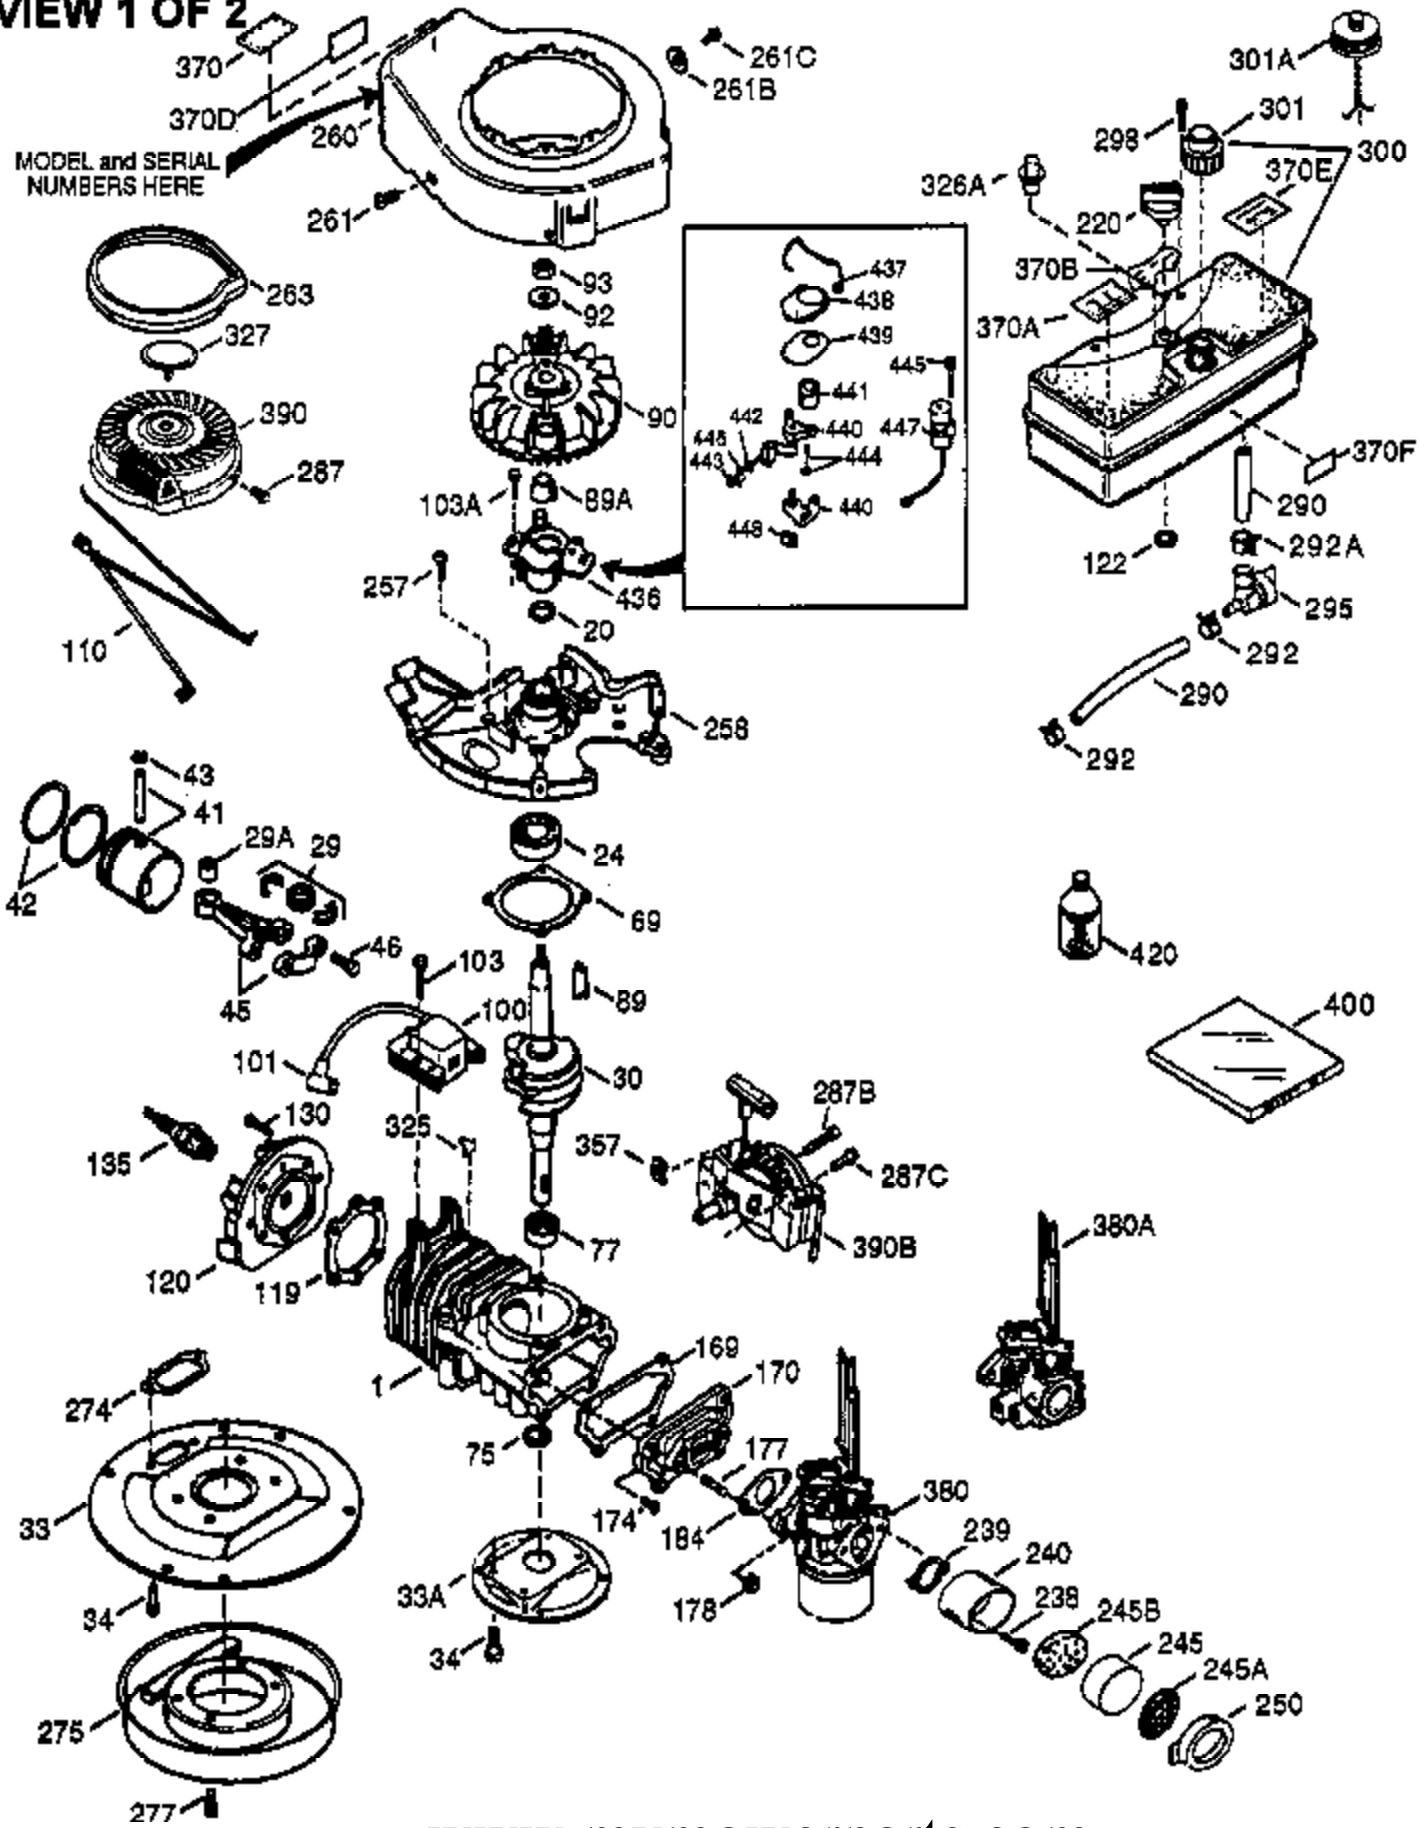









Engine Parts List #1

| Ref # | Part Number | Qty | Description |
|-------|-------------|-----|---|
| 1 | 0 | 1 | Cylinder (Order S/B if replacement is needed) |
| 20 | 510319 | 1 | Oil Seal |
| 24 | 530110 | 1 | Ball Bearing |
| 29A | 530104A | 1 | Cartridge Bearing |
| 29 | 530150 | 1 | Needle Bearing & Liner Set (37 Needle s) |
| 30 | 290546 | 1 | Crankshaft |
| 33 | 330177 | 1 | Adapter Plate |
| 34 | 650797 | 4 | Screw, 5/16-18 x 1/2" |
| 41 | 310283A | 1 | Piston & Pin Ass'y. (Incl. 43) |
| 42 | 310190 | 2 | Ring Set |
| 43 | 310167 | 2 | Piston Pin Retaining Ring |
| 45 | 310235B | 1 | Connecting Rod Ass'y. (Incl. 29, 29A & 46) |
| 46 | 650633 | 4 | Connecting Rod Bolt |
| 69 | 510292A | 1 | * Cylinder Cover Gasket |
| 75 | 28427 | 1 | Oil Seal |
| 77 | 780097 | 1 | Cartridge Bearing |
| 89A | 611032 | 1 | Adapter Sleeve |
| 90 | 611112 | 1 | Flywheel |
| 92 | 650815 | 1 | Belleville Washer |
| 93 | 650390 | 1 | Flywheel Nut |
| 100 | 34443A | 1 | Solid State Ignition |
| 101 | 610118 | 1 | Spark Plug Cover |
| 103 | 651007 | 2 | Screw, Torx T-15, 10-24 x 15/16" |
| 110 | 611059 | 1 | Ground Wire |
| 119 | 510274A | 1 | * Cylinder Head Gasket |
| 120 | 250240B | 1 | Cylinder Head |
| 122 | 570641 | 1 | Retaining Ring |
| 130 | 650477 | 6 | Screw, Torx T-30, 1/4-20 x 3/4" |
| 135 | 33636 | 1 | Resistor Spark Plug (RJ17LM) |
| 169 | 510323A | 1 | * Cover Plate Gasket |
| 170 | 470152A | 1 | Reed & Cover Plate (Incl. 178) |
| 174 | 650579 | 4 | Screw, Torx T-25, 10-24 x 1/2" |
| 178 | 29752 | 2 | Nut & Lock Washer, 1/4-28 |
| 184 | 510110A | 1 | * Carburetor Gasket |
| 220 | 570657 | 1 | Control Knob |
| 238 | 650806 | 2 | Screw, 10-32 x 5/8" |
| 240 | 450234 | 1 | Air Cleaner Body |
| 245 | 450236 | 1 | Air Cleaner Filter |
| 245B | 450235 | 1 | Air Cleaner Filter |
| 250 | 33007 | 1 | Air Cleaner Cover |
| 257 | 650911 | 4 | Screw, Torx T-30, 1/4-20 x 5/8" |
| 258 | 350427 | 1 | Blower Housing Base (Incl. 20) |
| 260 | 350458 | 1 | Blower Housing |
| 261 | 650958 | 3 | Screw, 1/4-20 x 7/16" |
| 261B | 650854 | 1 | Washer |
| 261C | 650773 | 1 | Screw, 1/4-20 x 1/2" |
| 274 | 510314A | 1 | Exhaust Gasket |
| 275 | 390300 | 1 | Muffler |
| 277 | 650911 | 2 | Screw, Torx T-30, 1/4-20 x 5/8" |
| 287 | 650926 | 4 | Screw, 8-32 x 21/64" |
| 290 | 34357 | 1 | Fuel Line |
| 292 | 26460 | 2 | Fuel Line Clamp |
| 298 | 650803 | 2 | Screw, 10-32 x 7/8" |
| 300 | 410241 | 1 | Fuel Tank (Incl. 301) |
| 301 | 410238 | 1 | Fuel Cap |
| 370B | 550224 | 1 | Control Decal |
| 370I | 550213 | 1 | Warning Decal |
| 370K | 36695 | 1 | Starter Decal |

| Ref # | Part Number | Qty | Description |
|-------|-------------|-----|--|
| 370A | 36261 | 1 | Lubrication Decal |
| 370 | 550212 | 1 | Fuel Mix Decal |
| 380 | 632326 | 1 | Carburetor (Incl. 184) |
| 390 | 590732 | 1 | Rewind Starter (NOTE: This engine could have been built with 590738 starter. Refer to the design of the rope pulley strength ribs for part identification. Individual starter parts do not interchange.) |
| 400 | 510295A | 1 | * Gasket Set (Incl. items marked PK in notes) (Incl. one each of part #'s: 510110A, 510217A, 510227A, 510268A, 510270A, 510274A, 510292A, 510323A) |
| 420 | 730227A | 1 | 2-Cycle Oil (8 oz.) |

ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

VIEW 2 OF 2

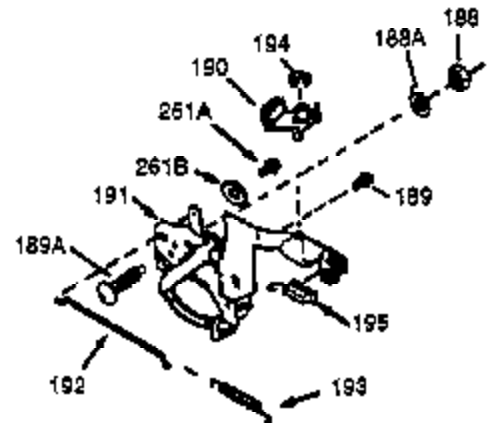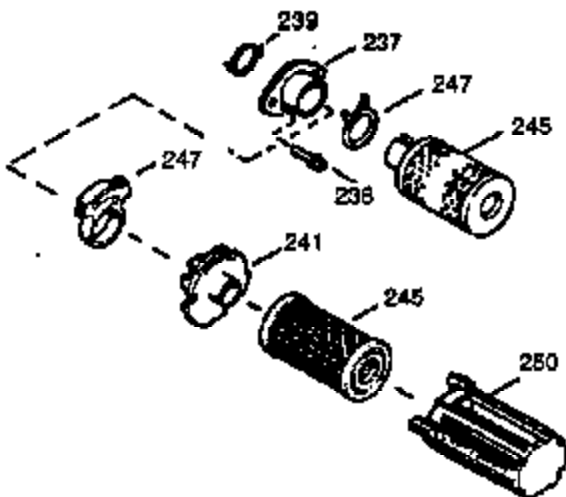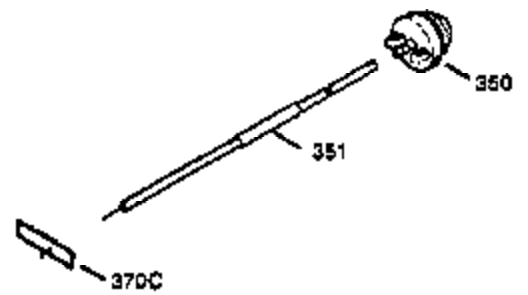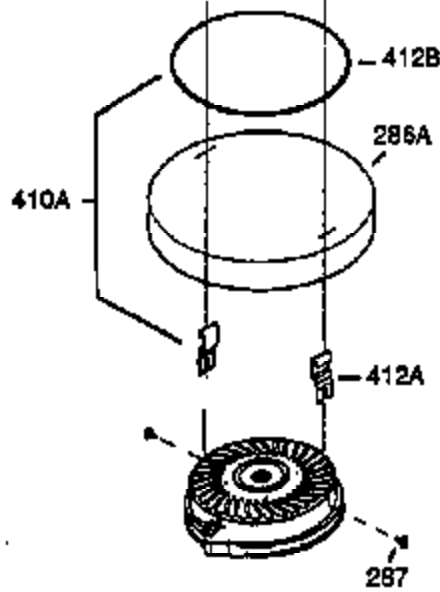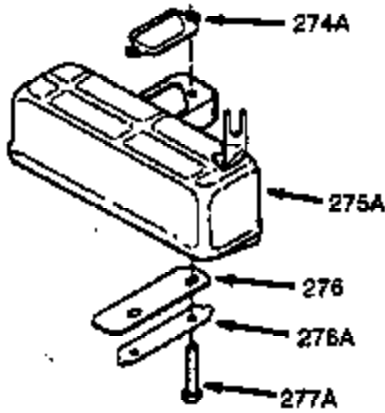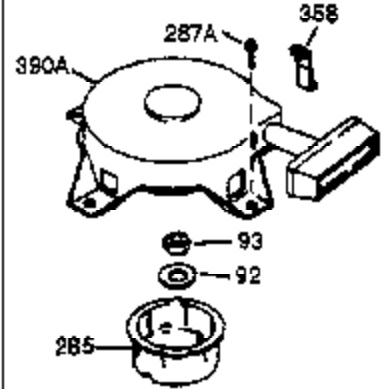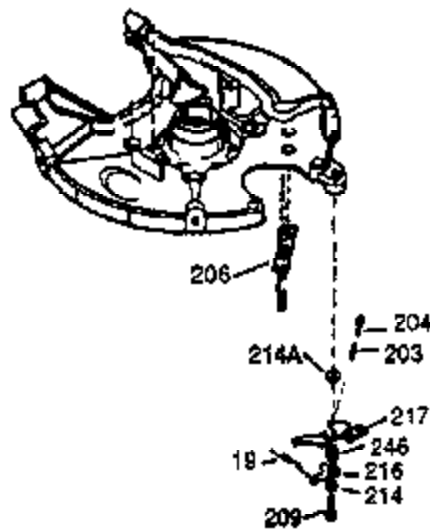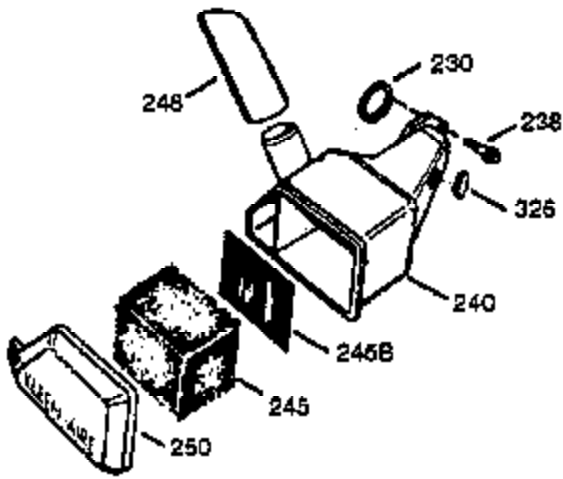

| Ref # | Part Number | Qty | Description |
|-------|-------------|-----|--------------------------------|
| 92 | 650815 | 1 | Belleville Washer |
| 93 | 650390 | 1 | Flywheel Nut |
| 189 | 650773 | 1 | Screw, 1/4-20 x 1/2" |
| 190 | 35831 | 1 | Brake Lever |
| 191 | 570658A | 1 | S.E. Brake Bracket (Incl. 195) |
| 192 | 34966 | 1 | Brake Control Link |
| 193 | 34965 | 1 | Brake Spring |
| 194 | 32309 | 1 | Retaining Ring |
| 195 | 610973 | 1 | Terminal |
| 230 | 34338 | 1 | Air Cleaner Gasket |
| 238 | 650806 | 2 | Screw, 10-32 x 5/8" |
| 240 | 450234 | 1 | Air Cleaner Body |
| 245B | 450235 | 1 | Air Cleaner Filter |
| 245 | 450236 | 1 | Air Cleaner Filter |
| 248 | 33008 | 1 | Air Cleaner Tube |
| 250 | 33007 | 1 | Air Cleaner Cover |
| 261A | 650853 | 1 | Screw, 1/4-20 x 1/2" |
| 261B | 650854 | 1 | Washer |
| 285 | 590551 | 1 | Starter Cup |
| 326 | 450237 | 1 | Plug |
| 350 | 570682 | 1 | Primer Assembly |
| 351 | 570656 | 1 | Primer Line |
| 370C | 36260 | 1 | Primer Decal |
| 370I | 550213 | 1 | Warning Decal |
| 370K | 36695 | 1 | Starter Decal |