


TB20CS 41CDT20C966  
Engine Assembly

Page 1 of 4

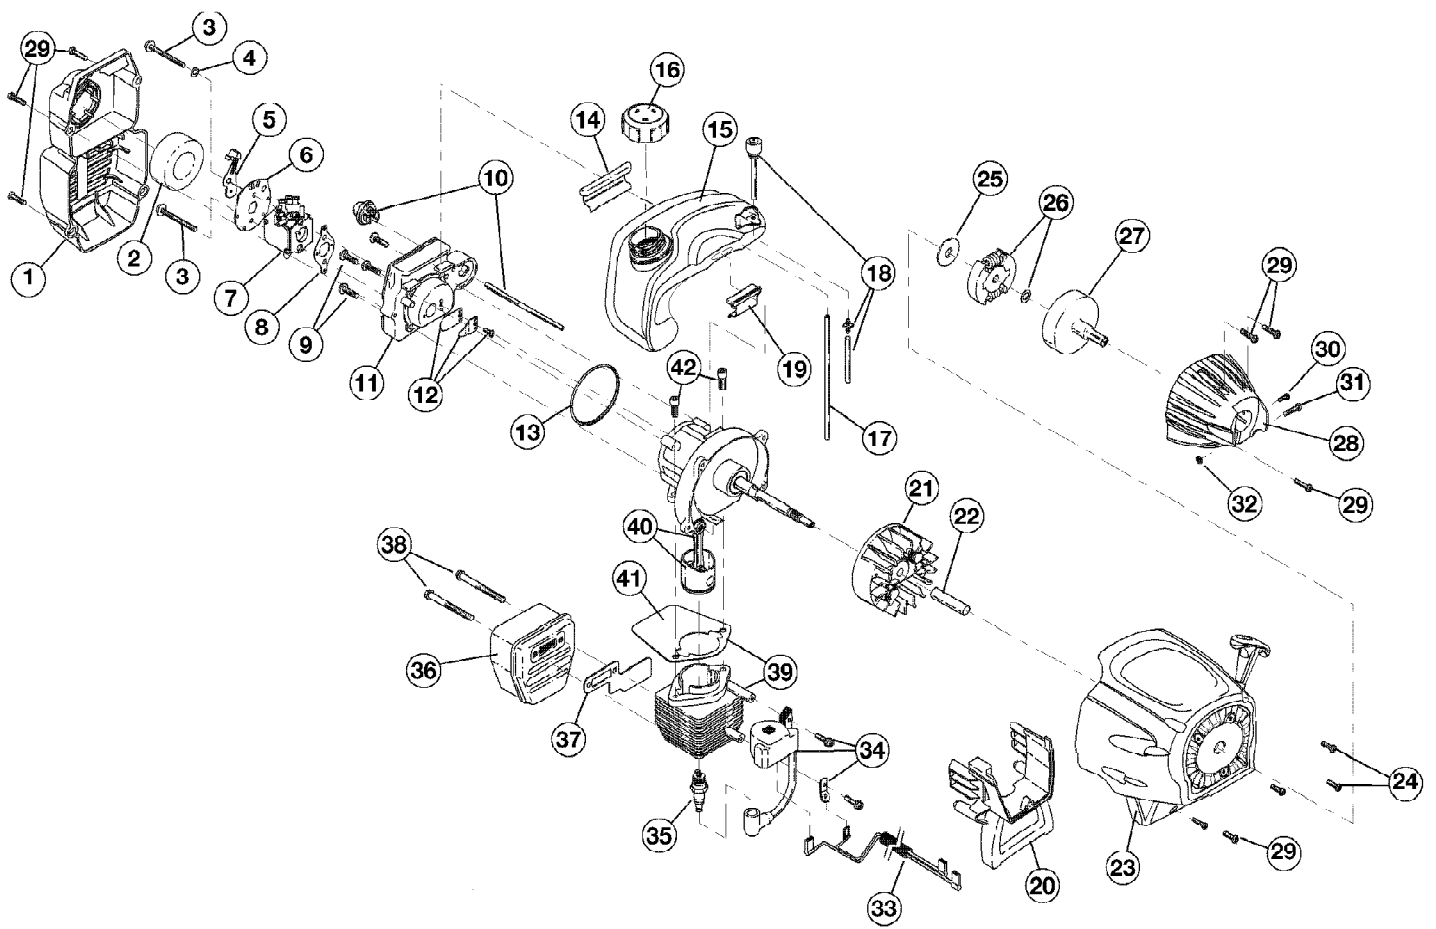


TB20CS 41CDT20C966  
Engine Assembly

Page 2 of 4

Ref #	Part Number	Qty	S/P/F	Description
1	753-04511	1	/P	Air Cleaner Cover Assembly (Incl. Ref No. 2 & 29)
2	791-180350B	1	/P	Air Cleaner Filter
3	791-180351	1		Carburetor Mounting Screw Assembly
4	791-180226	1	S	Wavey Washer
5	753-04418	1	/P	Choke Lever Assembly
6	753-04419	1	/P	Choke Plate Assembly (Incl. Ref No. 5)
7	753-05133	1		Carburetor Assembly (Incl. Ref No. 8 & 18)
8	791-610675	1		Carburetor Gasket
9	791-181860	1		Carb Mount Screw
10	791-683974B	1	/P	Primer & Hose Assembly
11	753-1196	1	/P	Carb Mount Assembly (Incl. Ref No. 9, 12 & 13)
12	791-684451	1		Reed Assembly
13	753-05487	1	S	O-Ring
14	791-612134	1		Rear Mounting Pad
15	753-04307	1	/P	Fuel Tank Assembly (Incl. Ref No. 16-18)
16	791-182529	1		Fuel Cap Assembly
17	791-181086	1	/P	Fuel Return Line
18	753-04233	1		Fuel Line Assembly
19	791-145308	1		Front Mounting Pad
20	753-04409	1	S	Shroud Extension & Stand (Incl. Ref No. 29)
21	753-05240	1	/P	Flywheel Assembly
21	914-04016	1	/P	Woodruff Key.125 x .375 Not shown
22	791-181525	1		Spacer
23	753-05775	1		Starter Housing Assembly (Incl. Ref No. 24 & 29)
24	791-181862	1	/P	Housing Screw
25	791-182396	1	S	Clutch Washer
26	753-05722	1		Clutch Rotor Assembly
27	753-05723	1		Clutch Drum Assembly
28	753-04403	1		Clutch Cover Assembly (Incl. Ref No. 29-32)
29	791-181345	1	/P	Cover Screw
30	791-182519	1		Anti-Rotation Screw
31	753-04003	1		Clamping Screw
32	791-180217	1	S	Clamping Nut
33	753-05025	1	/P	Wire Leads and Sleeve
34	753-04336	1		Module Assembly
35	791-610311B	1	/P	Spark Plug
36	753-05169	1	/P	Muffler Assembly (Incl. Ref No. 37, 38 & Spark Arrestor)
37	753-04619	1	/P	Exhaust Gasket
38	753-04620	1	S	Muffler Mounting Bolts
39	753-04814	1	/P	Cylinder Assembly (Incl. Ref No. 41 & 42)
40	753-04367	1	/P	Piston and Rod Assembly
41	753-04182	1		Cylinder Gasket
42	791-182723	1		Cylinder Bolt
	753-1209	1		Piston Ring Set Not Shown
	753-04812	1	/P	Short Block Assembly Not Shown (includes Crankcase, 9, 35 & 39-42)
	791-181599	2		Clutch Springs Not Shown

TB20CS 41CDT20C966  
General Assembly

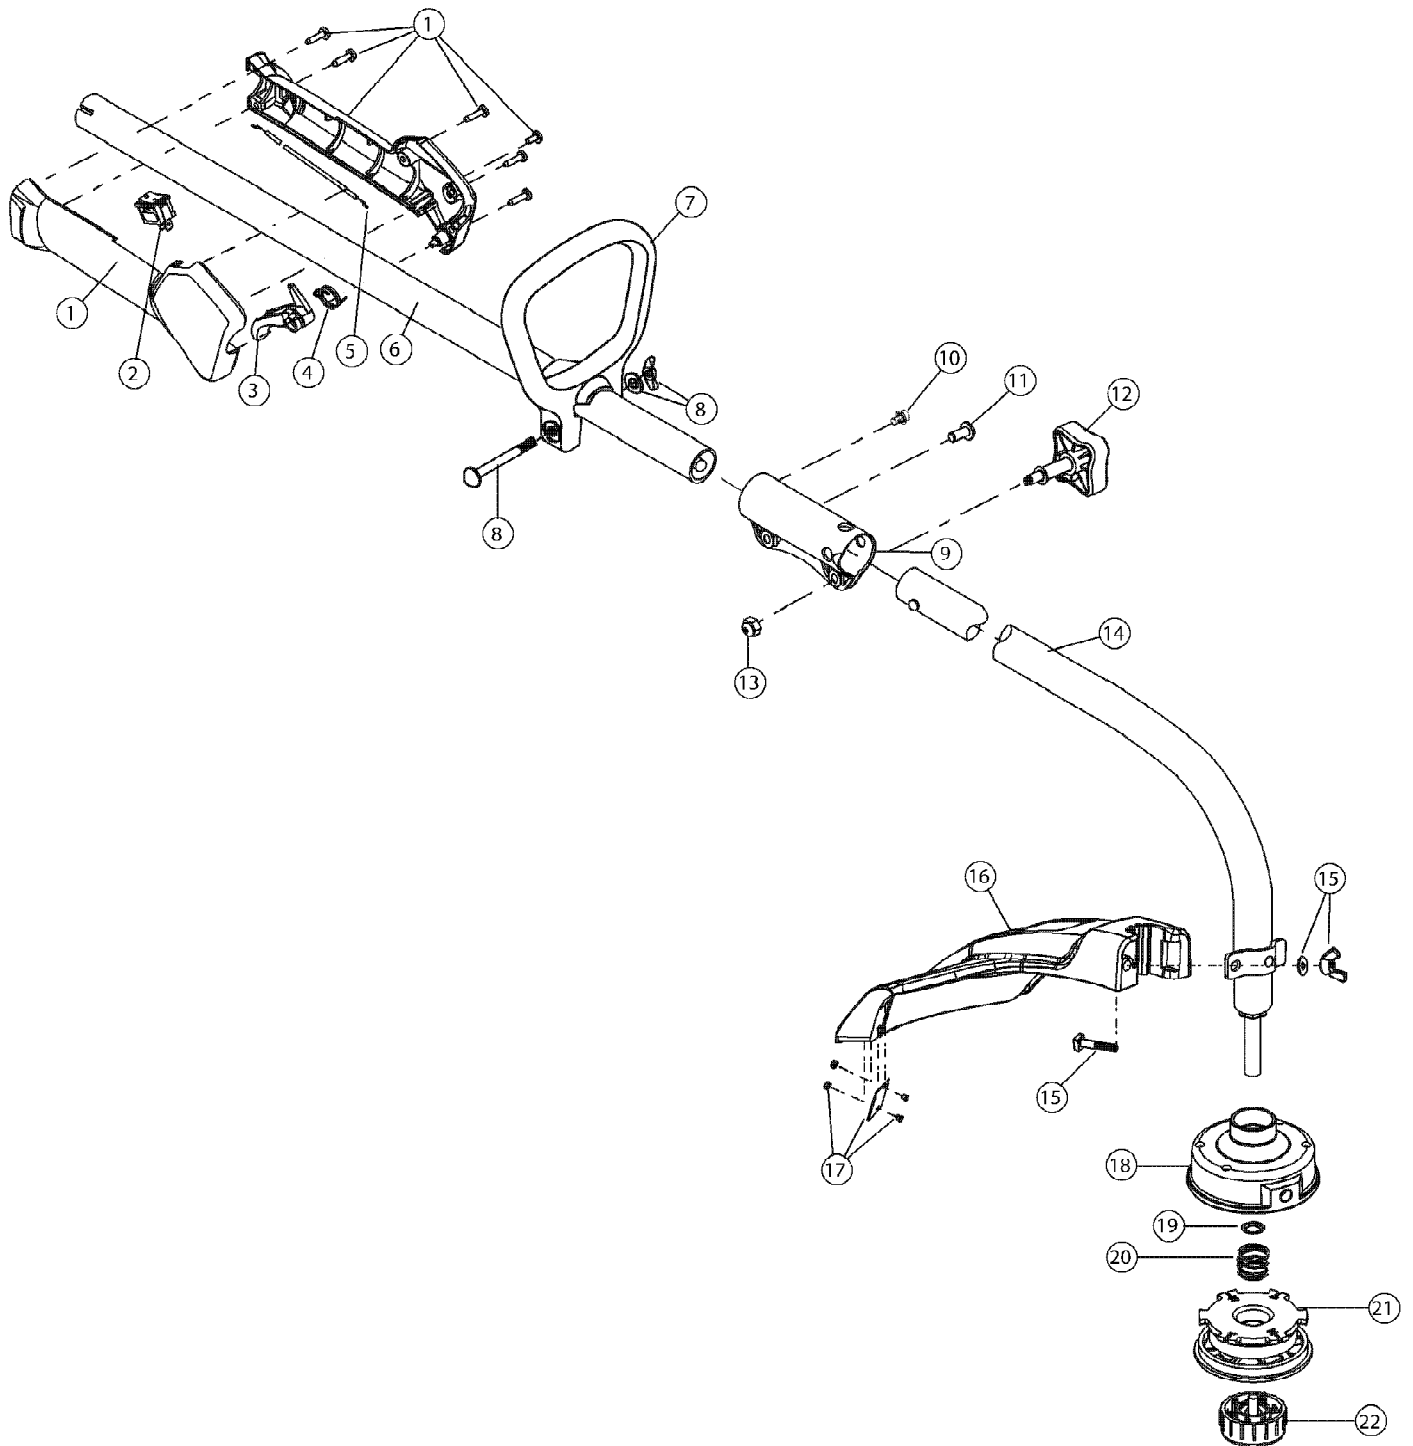

TB20CS 41CDT20C966  
General Assembly

Page 4 of 4

Ref #	Part Number	Qty	S/P/F	Description
1	753-04234	1		Throttle Housing Assembly (Incl. Ref No. 2-4)
2	791-182405	1	/P	Switch
3	753-04119	1	/P	Throttle Trigger
4	791-182690	1		Throttle Trigger Spring
5	753-04405	1	S	Throttle Cable
6	753-04344	1	/P	Upper Drive Shaft Housing Assembly
7	791-153064	1	/P	D-Handle (Incl. Ref No. 8)
8	791-181587	1	/P	D-Handle Hardware
9	753-1190	1	/P	Split Boom Coupler (Incl. Ref No. 10-13)
10	791-182057	1		Screw
11	791-181617	1		Bolt
12	791-181951	1	S	Adjustment Knob (Incl. Ref No. 13)
13	753-04386	1	S	Knob Retaining Nut
14	753-04508	1		Lower Drive Shaft Housing Assembly
15	753-04282	1		Guard Mounting Hardware
16	753-04283	1		Guard Assembly (Incl. Ref No. 17)
17	791-180553	1		Blade Assembly
18	753-04284	1		Outer Spool Assembly (Incl. Ref No. 19)
19	791-610660	1		Retainer
20	791-610317B	1	/P	Spring
21	753-1155	1	/P	Inner Reel
22	791-153066B	1	/P	Bump Head Knob Assembly
	753-1156	1	S	Reel and Line Assembly Not Shown
	753-05778	1		Fixed Line Insert Not Shown