FORM MS-0242-11/97 REPLACES FORM MS-0242-5/96 FILE IN SECT. 2 OF SERVICE MANUAL

#### 135700 to 135799

## Illustrated Parts List Model Series 135700 to 135799

TYPE NUMBERS 0003, 0015, 0016, 0017, 0019, 0100, 0102, 0105, 0116, 0117, 0118, 0125, 0126.


# TO FIND THE CORRECT NUMBER OF THE PART YOU NEED: FOLLOW THE INSTRUCTIONS BELOW

- A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 0123 01 are listed only as 0123 in most instances. The two digits (01 or 02, etc.) to the right of the space may be required for more accurate parts identification in some instances. Select the Illustrated Parts List covering the correct Model Series and Type Number.
- B. Refer to the Illustrations and compare the original part with Illustration. The number next to the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames having individual reference numbers can be purchased separately.
- C. After the Reference Number has been identified, refer to the Numerical text, where Reference and Primary Part Number are listed. THE PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE."
- D. If a "Note" appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types. If your Type number is listed under "Note," order the part referred to at the "Note."
- E. If your Engine Type Number does not appear after any part number listed under "Note," use the Primary Part Number.
- F. For Engine Type Numbers not covered by this book, check other Parts Lists having the same engine model or contact your source of supply.



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

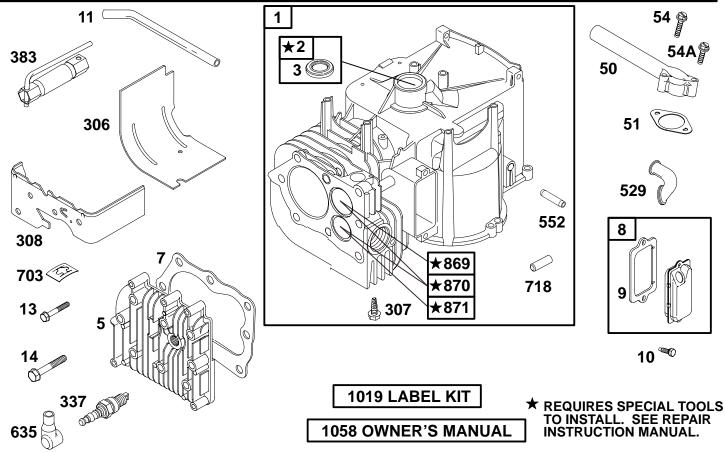


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1 2 3 5 7 8 9 10 11 13 14 50	297565 *299819 214040 %*272157 495758 Ø*27549 94719 231879 94221	Cylinder Assembly Bushing Seal–Oil Head–Cylinder Gasket–Cylinder Head Breather Assembly Gasket–Breather Screw–Hex. Tube–Breather Screw–Hex. (2 3/32" Long) Screw–Hex. (2 15/32" Long) Manifold–Intake	51 54 54A 306 307 308 337 383 529 552 635	93367 93512 223804 94680 224876 802592 89838 67738 231078	Gasket-Intake Screw-Hex. Screw-Hex. Shield-Cylinder Screw-Hex. Cover-Cylinder Plug-Spark (Resistor Type) Wrench-Spark Plug Grommet Bushing-Governor Crank Boot-Spark Plug	703 718 869 870 871 1019 1058	211787 211172 262001 496660	Clip Pin–Locating Seat–Valve (Intake) Seat–Valve (Exhaust) Bushing–Guide (Exhaust) ————————————————————————————————————

<sup>★</sup> Included in Gasket Set-Part No. 496659.

0242 - 2

Included in Carburetor Kit-Part No. 498260.

Ø Included in Valve Overhaul Gasket Set−Part No 498532.
 Included in Carburetor Gasket Set−Part No. 498261.

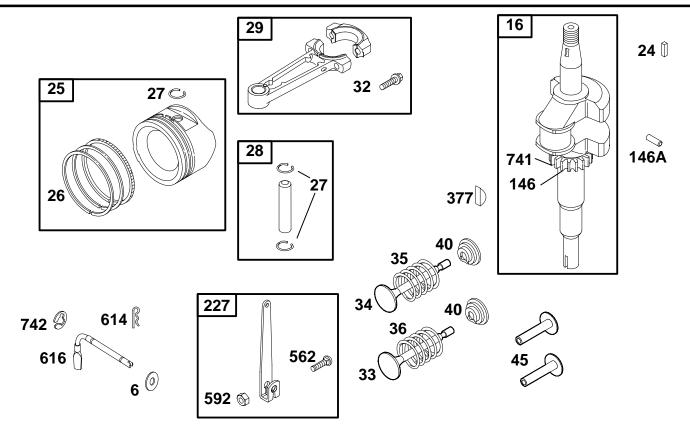


REF. PAR NO. NO	-	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
6 949 16 4920	7 Washer–Flat 11 Crankshaft ———— Note ———	26	298982	Ring Set (Standard)	35 36		Spring–Valve (Intake) Spring–Valve
	<b>397109</b> Crankshaft Used on Type No(s). 0003, 0015, 0019,			298983 Ring Set (.010" O.S.) 298984 Ring Set	40 45	93312 260642	(Exhaust) Retainer-Valve Tappet-Valve
	0117. <b>493410</b> Crankshaft Used on Type No(s).	27	2020	(.020" O.S.) <b>298985</b> Ring Set (.030" O.S.)	146 146A 227	499047 391967	Key–Timing Key–Timing Lever–Governor
	0017, 0102, 0116, 0118. <b>496842</b> Crankshaft Used on Type No(s).	27 28	298909 298909	Lock-Piston Pin Pin-Piston (Standard)	377 562 592 614	94907 231978	Key-Woodruff Bolt-Governor Lever Nut-Hex. Pin-Cotter
	0125. 498234 Crankshaft Used on Type No(s).	29	299429	298908 Pin–Piston (.005" O.S.) Rod–Connecting	616 741	495242	Crank–Governor Gear–Timing  Note
	0126.  18 Key–Flywheel  14 Piston Assembly (Standard)  Note		200.20	(Standard)  Note  390459 Rod  Connecting (.020" Undersize)	742	93307	261696 Gear–Timing Retainer–E-Ring
	393820 Piston Assy. (.010" O.S.) 393821 Piston Assy. (.020" O.S.) 393822 Piston Assy. (.030" O.S.)	32 33 34	_	Screw–Conn. Rod Valve–Exhaust Valve–Intake			

0242 - 3

Assemblies include all parts shown in frames.

<sup>Included in Gasket Set–Part No. 496659.
Included in Carburetor Kit–Part No. 498260.</sup> 

Ø Included in Valve Overhaul Gasket Set−Part No 498532.
 Included in Carburetor Gasket Set−Part No. 498261.

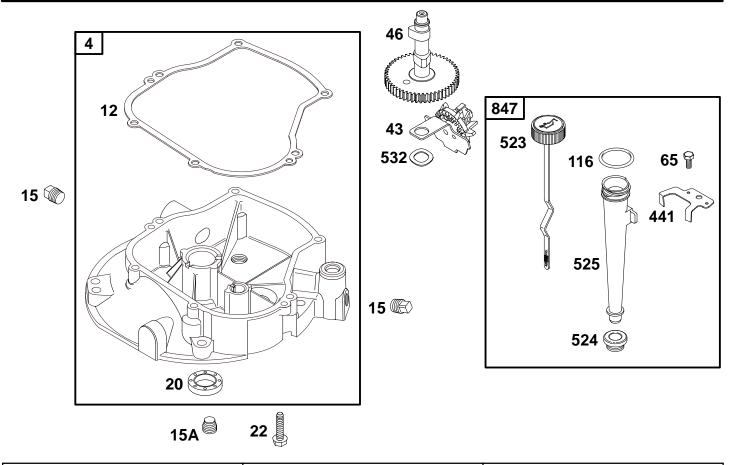


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
12		Sump-Engine Gasket-Crankcase Note *270122 Gasket- Crankcase (.005" Thick) *270123 Gasket- Crankcase (.009" Thick)	15 15A 20 22 43 46 65 116	94880 *391485 94980 496544 214726 94874	Plug-Oil Drain Plug-Oil Drain Seal-Oil Screw-Hex. Gov./Oil Slinger Gear-Cam Screw-Hex. Seal-O-Ring	441 523 524 525 532 847	495228 *281370 280133	Bracket–Oil Fill Dipstick Seal–Fill Tube Tube–Oil Fill Washer–Spring Dipstick/Tube Assembly

0242-4

Assemblies include all parts shown in frames.

<sup>Included in Gasket Set–Part No. 496659.
Included in Carburetor Kit–Part No. 498260.</sup> 

Ø Included in Valve Overhaul Gasket Set–Part No 498532.
 ◆ Included in Carburetor Gasket Set–Part No. 498261.

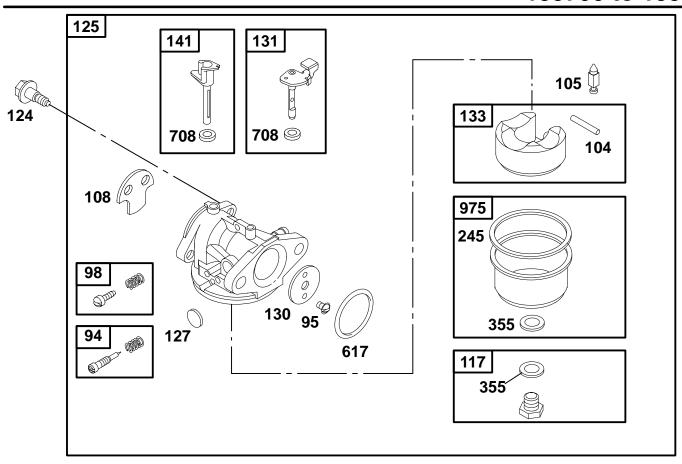


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
94 95 98 104 105 108 117	94098 398185 •231371 •398188 223471	Valve-Idle Adjustment Screw-Choke/Throttle Screw-Idle Speed Pin-Float Hinge Needle/Seat Kit Valve-Choke Jet-Main (Bowl Mounting Screw)	124 125 127 130 131 133 141 245	496649 • 223470 496727 398187 494218	Plug-Welch (Sold in Kit Only)	355 617 708 975	• <b>+270344</b> • <b>+</b>	Washer–Seal (Sold in Kit Only) Seal–Intake Manifold Seal–Dust Bowl–Float

0242 - 5

Assemblies include all parts shown in frames.

<sup>Included in Gasket Set–Part No. 496659.
Included in Carburetor Kit–Part No. 498260.</sup> 

Ø Included in Valve Overhaul Gasket Set−Part No 498532.
 Included in Carburetor Gasket Set−Part No. 498261.

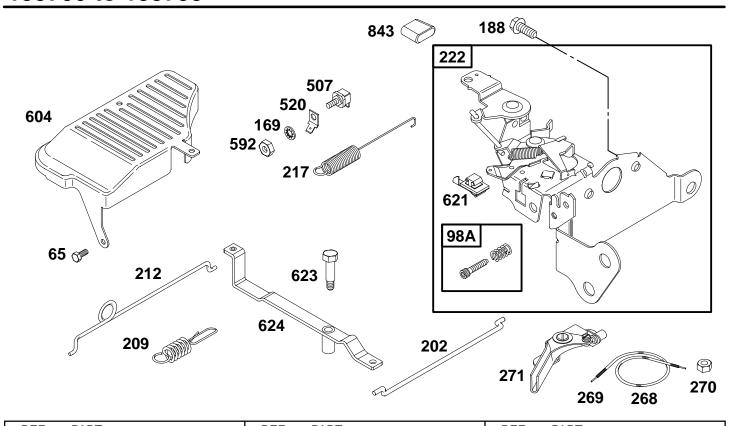


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
65 98A 169 188 202 212 209	94874 493280 92791 94117 260649 262961	Screw-Hex. Screw-Idle Speed Washer-Lock Screw-Hex. Link-Mechanical Governor Link-Throttle Spring-Governor — Note — 262656 Spring- Governor Used on Type No(s). 0003, 0019, 0117, 0118. 262657 Spring- Governor Used on Type No(s). 0015, 0016, 0017, 0102, 0116, 0125. 262659 Spring- Governor Used on Type No(s). 0100, 0105. 262662 Spring- Governor Used on Type No(s). 0125, 0126.	217 222 268	262749 496245 66986	Spring-Choke Bracket-Control (Remote)	270 271 354 507 520 604 621 623 624 843	63426 290568 90576 398525 93722 224907 396847 231520 496288	Locknut-Casing Lever-Control Nut-Hex. Insulator Terminal Cover-Control Switch-Stop Screw-Shoulder Lever-Linkage Sleeve-Lever

0242-6

Assemblies include all parts shown in frames.

<sup>Included in Gasket Set–Part No. 496659.
Included in Carburetor Kit–Part No. 498260.</sup> 

Ø Included in Valve Overhaul Gasket Set–Part No 498532.
 ◆ Included in Carburetor Gasket Set–Part No. 498261.

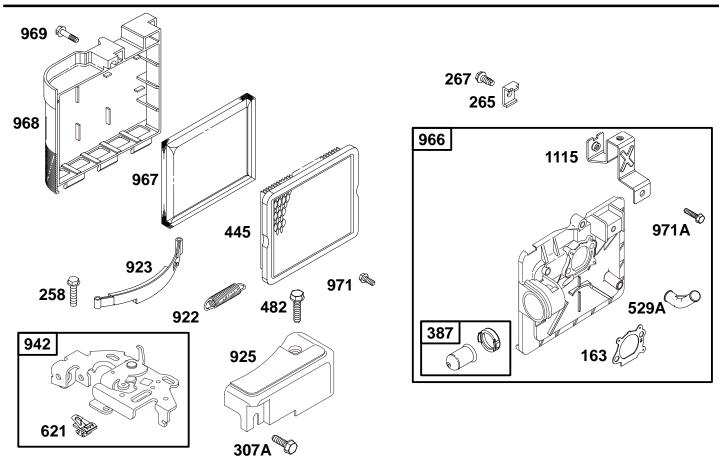


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
163 258 265 267 307A 387 445 482	94902 221535 94882 94807 496115 491588	Gasket–Air Cleaner Screw–Hex. Clamp–Casing Screw–Slotted Hex. Screw–Hex. Primer–Carburetor Filter–A/C Cartridge Screw–Hex.	529A 621 922 923 925 942 966	396847 261647 394867 281285 493248	Grommet Switch–Stop Spring–Brake Brake Cover–Linkage Bracket–Brake Base–Air Cleaner Primer	967 968 969 971 971A 1115	281340 94872 94873 94749	Filter-Pre-Cleaner Cover-Air Cleaner Screw-Slotted Hex. Screw-Hex. Screw-Hex. Bracket-Air Cleaner

0242-7

Assemblies include all parts shown in frames. 7

<sup>Included in Gasket Set–Part No. 496659.
Included in Carburetor Kit–Part No. 498260.</sup> 

Ø Included in Valve Overhaul Gasket Set−Part No 498532.
 Included in Carburetor Gasket Set−Part No. 498261.

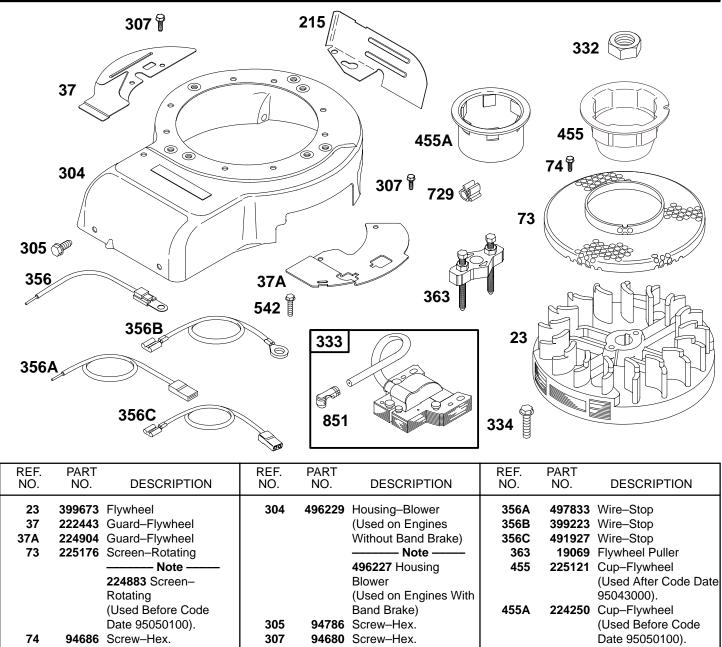

31	222443	Guard-Fiywneei			(Used on Engines	356B	399223	wire-Stop
37A	224904	Guard-Flywheel			Without Band Brake)	356C	491927	Wire-Stop
73	225176	Screen-Rotating			Note	363	19069	Flywheel Puller
		Note			<b>496227</b> Housing	455	225121	Cup-Flywheel
		224883 Screen-			Blower			(Used After Code Date
		Rotating			(Used on Engines With			95043000).
		(Used Before Code			Band Brake)	455A	224250	Cup-Flywheel
		Date 95050100).	305	94786	Screw-Hex.			(Used Before Code
74	94686	Screw-Hex.	307	94680	Screw-Hex.			Date 95050100).
215		Guide-Air	332		Nut-Flywheel	542	94669	Screw-Hex.
			333		Armature-Magneto	729	280470	Clip-Wire
			334		Screw-Hex.	851		Terminal–Cable
			356	496868	Wire-Stop			
					тио отор			
						I		


Included in Gasket Set-Part No. 496659.

0242-8

Assemblies include all parts shown in frames.

Included in Carburetor Kit-Part No. 498260.


Ø Included in Valve Overhaul Gasket Set–Part No 498532.
 ◆ Included in Carburetor Gasket Set–Part No. 498261.

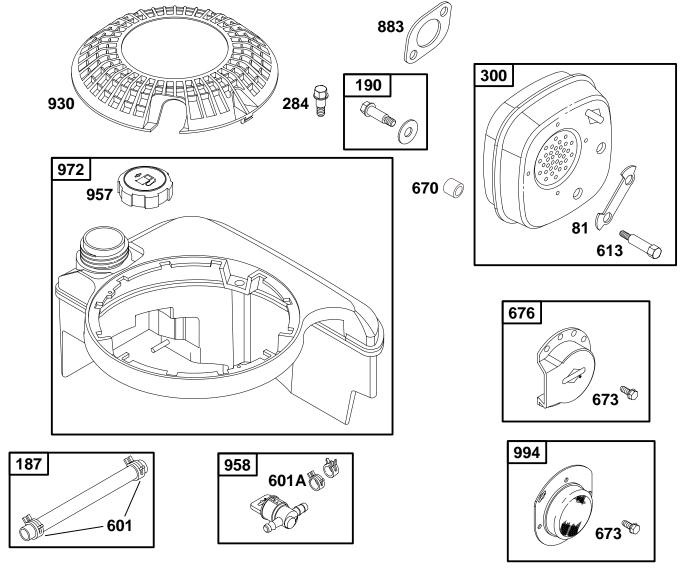

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
81 187 190 284 300 601	298049 496410 94511 494585	Lock-Muffler Screw Line-Fuel Screw-Shoulder Screw-Shoulder Muffler-Exhaust Clamp-Hose	601A 613 670 673 676 883 \$	93935 281362 94896 393757	Clamp-Hose Screw-Shoulder Spacer-Fuel Tank Screw-Hex. Deflector-Muffler Gasket-Exhaust	930 957 958 972 994	397974 494768 495224	Guard-Rewind Cap-Fuel Tank Valve-Shut-Off Tank-Fuel Arrester-Spark

<sup>Included in Gasket Set–Part No. 496659.
Included in Carburetor Kit–Part No. 498260.</sup> 


Ø Included in Valve Overhaul Gasket Set–Part No 498532.
 ◆ Included in Carburetor Gasket Set–Part No. 498261.

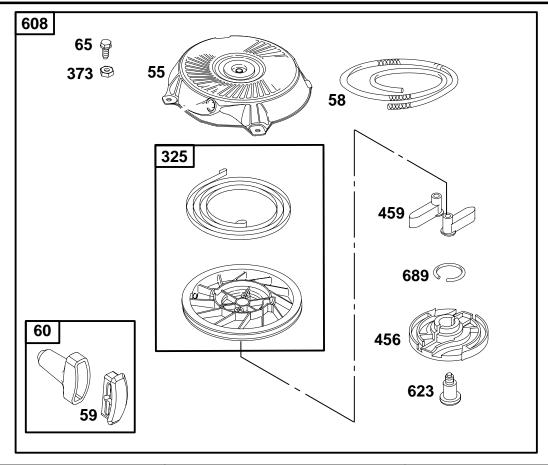

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
	NO. 497442 280399 396892	DESCRIPTION  Housing–Rewind Starter Rope–Starter Insert–Grip Grip–Starter Rope		94904 498144 94908	DESCRIPTION  Screw-Hex. Pulley-Rope Start Nut-Hex. Plate-Pawl Friction		NO. 281505 497830 94943	DESCRIPTION  Pawl-Ratchet Starter-Rewind Screw-Shoulder Spring-Friction

<sup>Included in Gasket Set–Part No. 496659.
Included in Carburetor Kit–Part No. 498260.</sup> 

Ø Included in Valve Overhaul Gasket Set–Part No 498532.
 ◆ Included in Carburetor Gasket Set–Part No. 498261.

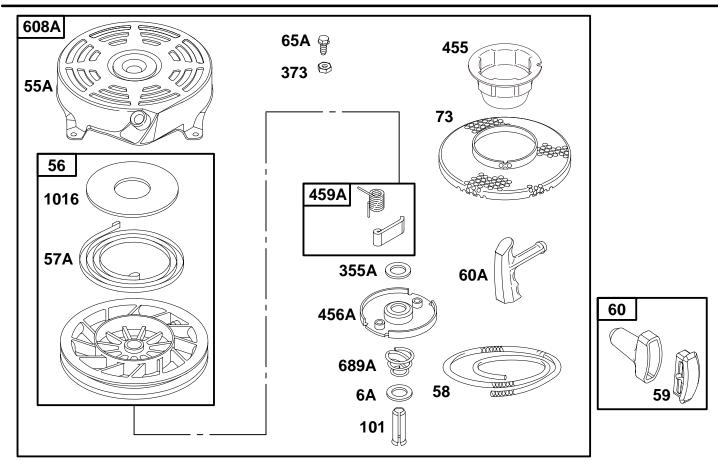


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
6A 55A 56 57A 58 59	224322 492831 493824 491889 281228	Washer–Flat Housing–Rewind Starter Pulley–Starter Spring–Rewind Starter Rope–Starter Insert–Grip	60 60A 65A 73 101 355A 373	393152 281434 94686 225176 262626 280973	Grip-Starter Rope Grip-Starter Rope Screw-Hex. Screen-Rotating Pin-Shaft Washer-Seal Nut-Hex.	455 456A 459A 608A 689A 1016	225121 224321 492833 496650 262625	Cup-Flywheel Plate-Pawl Friction Spring-Pawl Starter-Rewind Spring-Friction Spacer-Rewind


0242-11


Assemblies include all parts shown in frames. 11


<sup>Included in Gasket Set–Part No. 496659.
Included in Carburetor Kit–Part No. 498260.</sup> 

Ø Included in Valve Overhaul Gasket Set–Part No 498532.
 ◆ Included in Carburetor Gasket Set–Part No. 498261.

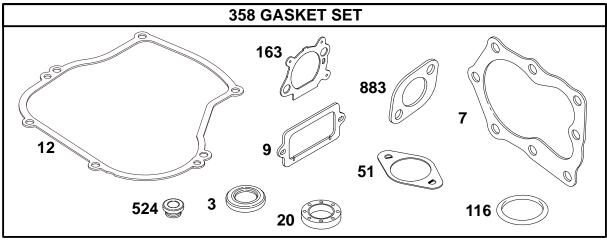

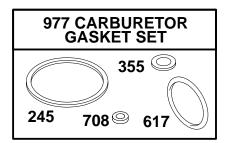

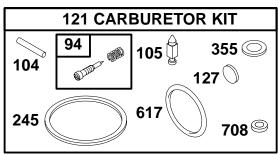

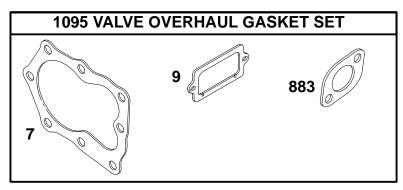

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
3 7 9 12	⊘*272157 ⊘*27549 *270069 *391485	Gasket-Cylinder Head Gasket-Breather Gasket-Crankcase Note *270122 Gasket- Crankcase (.005" Thick) *270123 Gasket- Crankcase (.009" Thick)	94 104 116 121 127 105 163 245	•231371 *270920 498260 • •398188 *272653	Plug-Welch (Sold in Kit Only) Needle/Seat Kit	708	*281370 •+270344 •+ • Ø*272309 498261	Gasket Set Seal-Fill Tube Seal-Intake Manifold Seal-Dust (Sold in Kit Only) Gasket-Exhaust Gasket Set- Carburetor Gasket Set-Valve Overhaul

0242-12

<sup>Included in Gasket Set–Part No. 496659.
Included in Carburetor Kit–Part No. 498260.</sup> 

Ø Included in Valve Overhaul Gasket Set–Part No 498532.
 ◆ Included in Carburetor Gasket Set–Part No. 498261.