



121000

Illustrated Parts List

Model Series

121000

TYPE NUMBERS
0101 through 0114.

TABLE OF CONTENTS


Air Cleaner	5
Blower Housing	6
Camshaft	2
Carburetor	4
Controls	5
Crankcase Cover	2
Crankshaft	2
Cylinder	2
Cylinder Head	3
Exhaust System	5
Flywheel	6
Fuel Supply	4
Governor Spring	5
Ignition	5
Kits/Gaskets - Carburetor	4
Kits/Gaskets - Engine	2
Kits/Gaskets - Valve	3
Lubrication	2
Piston Group	2
Rewind Starter	6






PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

121000








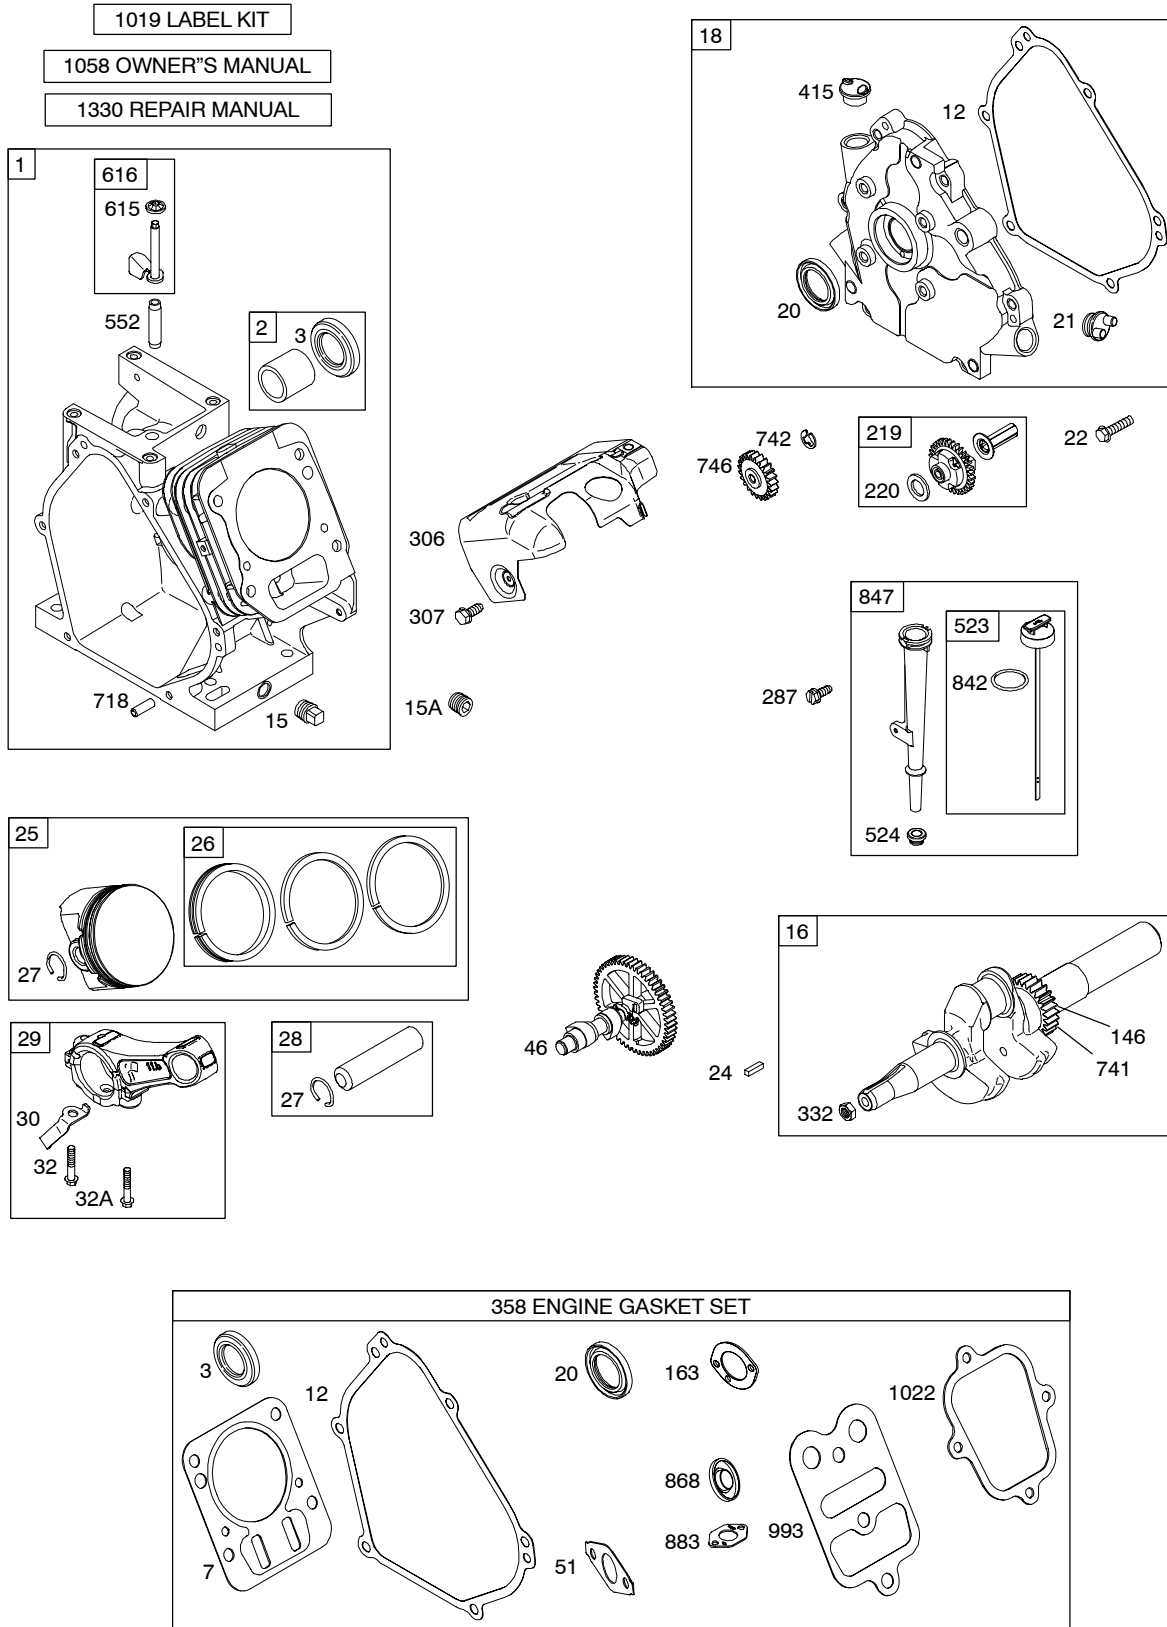


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.




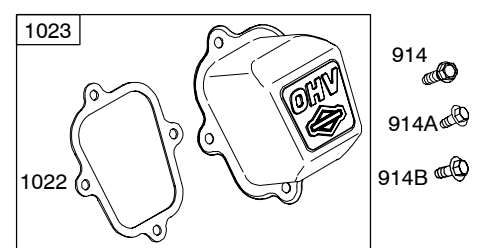
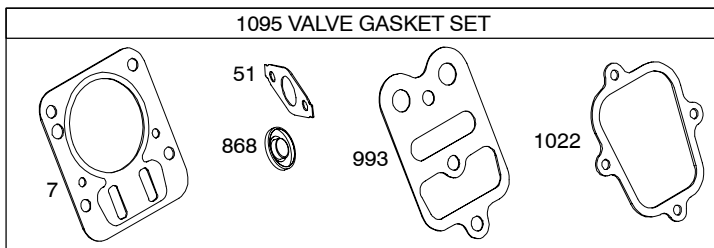
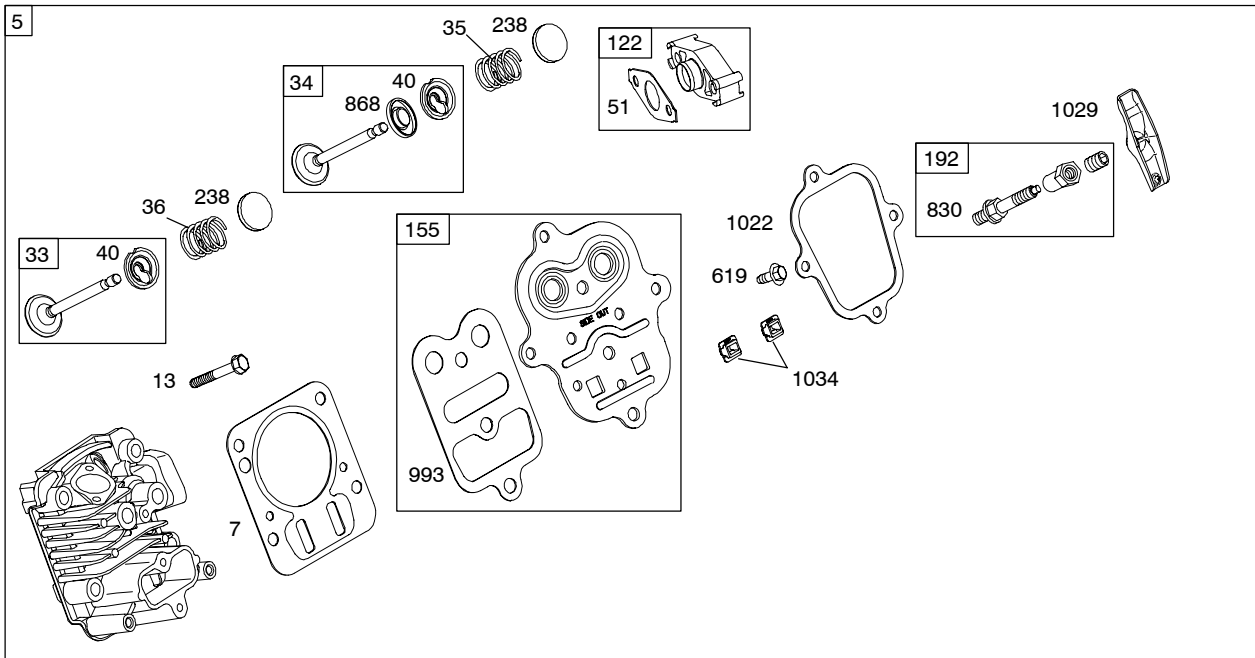


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

121000

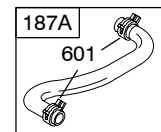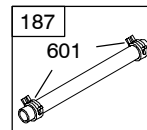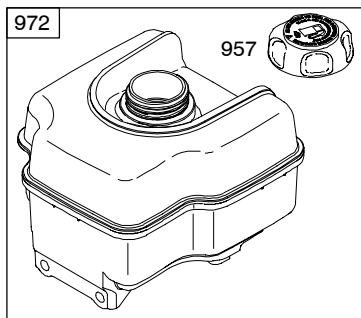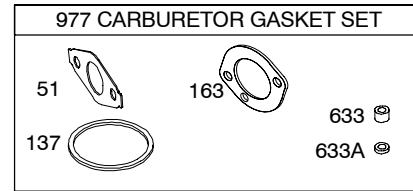
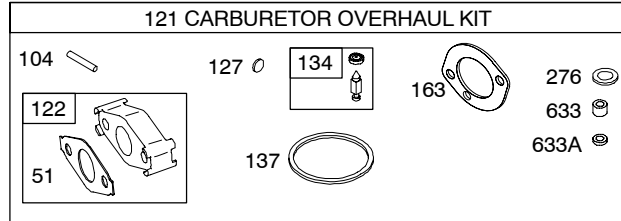
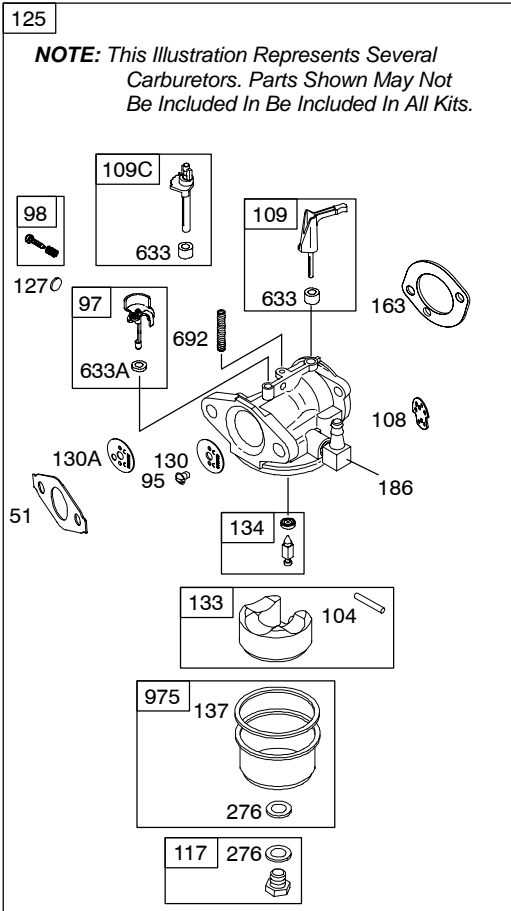


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

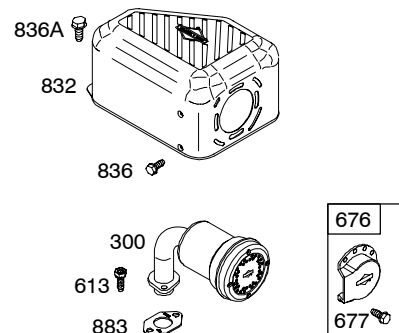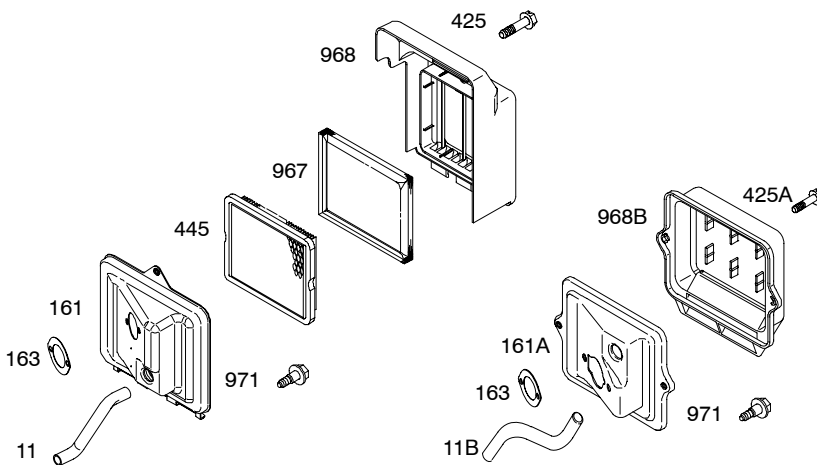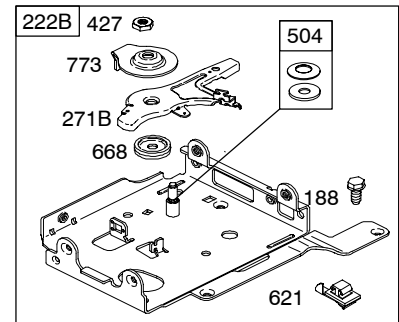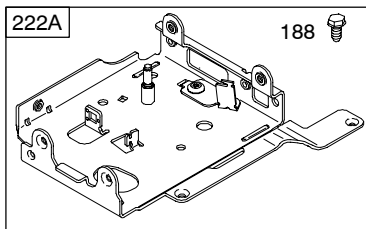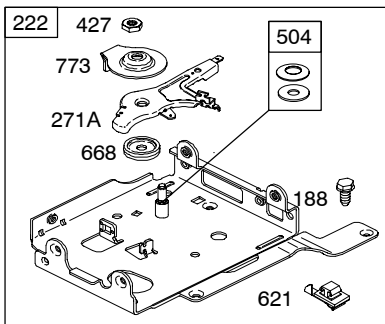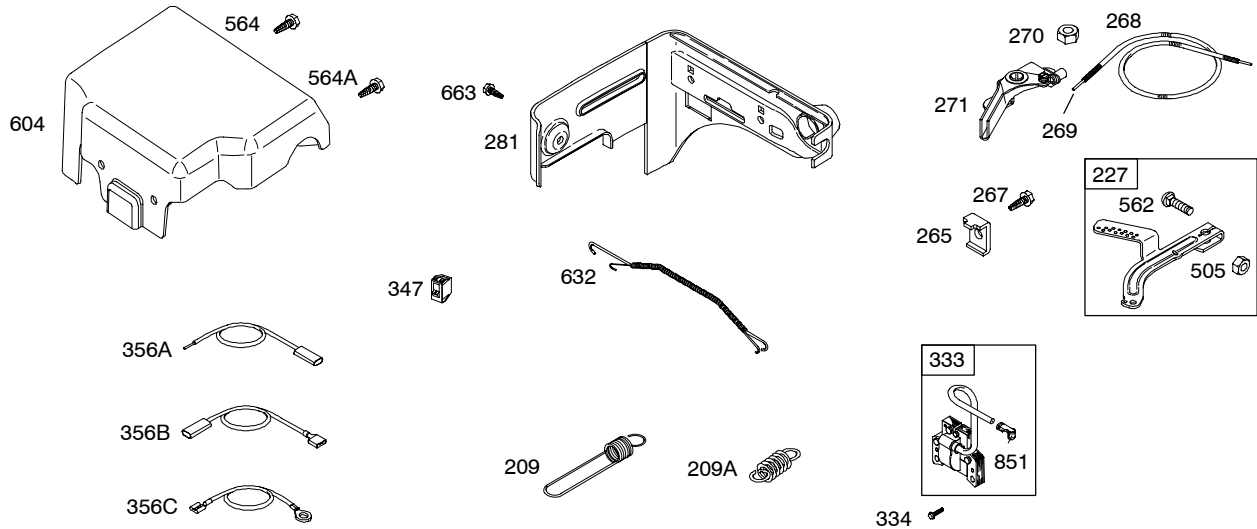

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 3247-5 Assemblies include all parts shown in frames. 11/02/2005

121000

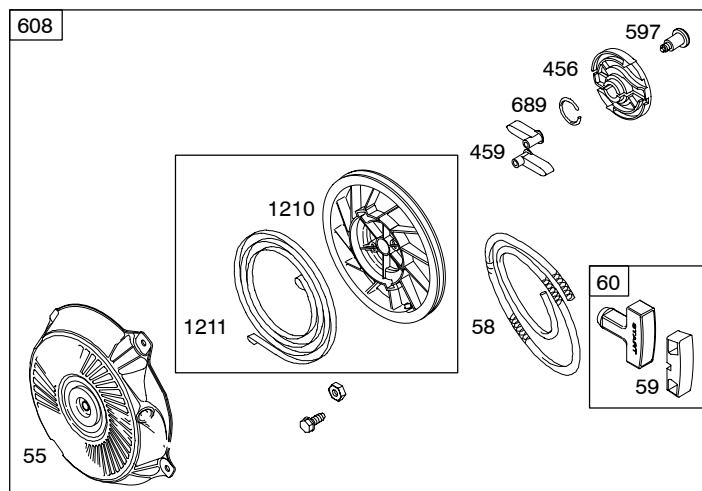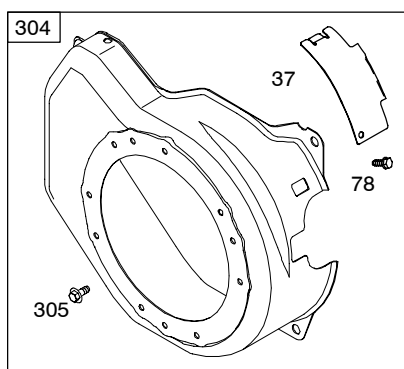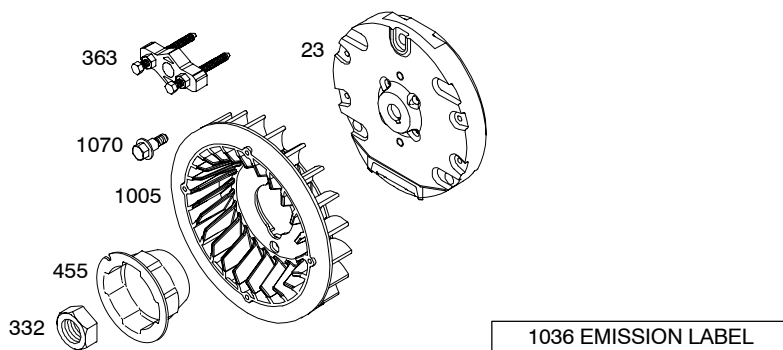

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3247-6

Assemblies include all parts shown in frames.

11/02/2005

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	699510	Cylinder Assembly	25	791968	Piston Assembly (Standard) (Used After Code Date 05060600).	29	690124	Rod-Connecting
2	399269	Kit-Bushing/Seal (Magneto Side)			----- Note -----	30	692562	Dipper-Connecting Rod
3	★299819S	Seal-Oil (Magneto Side)			690021 Piston Assembly (Standard) (Used Before Code Date 05060700).	32	691664	Screw (Connecting Rod)
5	699486	Head-Cylinder			694168 Piston Assembly (.020" Oversize) (Used After Code Date 05060600).	32A	695759	Screw (Connecting Rod)
7	★∅698210	Gasket-Cylinder Head			791326 Piston Assembly (.020" Oversize) (Used Before Code Date 05060700).	33	499642	Valve-Exhaust
11	692600	Tube-Breather (Flat Panel Air Cleaner)			----- Note -----	34	499641	Valve-Intake
11B	790632	Tube-Breather (Ultra Low Air Cleaner)			499631 Ring Set (Standard) (Used Before Code Date 05060700).	35	691304	Spring-Valve (Intake)
12	★699485	Gasket-Crankcase			791324 Ring Set (.020" Oversize) (Used After Code Date 05060600).	36	691304	Spring-Valve (Exhaust)
13	699482	Screw (Cylinder Head)			692786 Ring Set (.020" Oversize) (Used Before Code Date 05060700).	37	699661	Guard-Flywheel
15	691686	Plug-Oil Drain (Square Head)			----- Note -----	40	692194	Retainer-Valve
15A	691682	Plug-Oil Drain (Flush)			499631 Ring Set (Standard) (Used Before Code Date 05060700).	45	690977	Tappet-Valve
16	699445	Crankshaft Used on Type No(s). 0101, 0112. ----- Note -----	26	791969	Ring Set (Standard) (Used After Code Date 05060600).	46	693404	Camshaft
		699451 Crankshaft Used on Type No(s). 0111.			----- Note -----	51	★◆∅692555	Gasket-Intake (2 Required)
		699447 Crankshaft Used on Type No(s). 0114.			499631 Ring Set (Standard) (Used Before Code Date 05060700).	55	691422	Housing-Rewind Starter
18	699804	Cover-Crankcase			791324 Ring Set (.020" Oversize) (Used After Code Date 05060600).	58	693389	Rope-Starter (Cut to Required Length)
20	★692550	Seal-Oil (PTO Side)			692786 Ring Set (.020" Oversize) (Used Before Code Date 05060700).	59	490653	Grip-Insert
21	281658S	Cap-Oil Fill			----- Note -----	60	490652	Grip-Starter Rope (2 Piece)
22	699478	Screw (Crankcase Cover/Sump)			499631 Ring Set (Standard) (Used Before Code Date 05060700).	78	699205	Screw (Flywheel Guard)
23	699488	Flywheel			791324 Ring Set (.020" Oversize) (Used After Code Date 05060600).	95	691636	Screw (Throttle Valve)
24	222698S	Key-Flywheel			692786 Ring Set (.020" Oversize) (Used Before Code Date 05060700).	97	690024	Shaft-Throttle
			27	691866	Lock-Piston Pin	98	398185	Kit-Idle Speed (Carburetor)
			28	499423	Pin-Piston	104	◆691242	Pin-Float Hinge
						108	692567	Valve-Choke
						109	690023	Shaft-Choke (Straight Handle)
						109C	790624	Shaft-Choke

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

121000

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
117	690048	Jet–Main (Standard) ----- Note ----- 691428 Jet–Main (Standard) Used on Type No(s). 0114.	187	791766	Line–Fuel (Cut to Required Length) (Used After Code Date 05063000). ----- Note ----- 691050 Line–Fuel (Cut to Required Length) (Used Before Code Date 05070100).	227	692573	Lever–Governor Control
118	498976	Jet–Main (High Altitude) ----- Note ----- 695042 Jet–Main (High Altitude) Used on Type No(s). 0114.	187A	791867	Line–Fuel (Molded) (Used After Code Date 05063000). ----- Note ----- 692601 Line–Fuel (Molded) (Used Before Code Date 05070100).	238	691300	Valve–Cap
121	696998	Kit–Carburetor Overhaul	188	699479	Screw (Control Bracket)	265	691024	Clamp–Casing
122	★693749	Spacer–Carburetor	190	699220	Screw (Fuel Tank)	267	699492	Screw (Casing Clamp)
125	698474	Carburetor ----- Note ----- 791991 Carburetor Used on Type No(s). 0114.	192	694543	Adjustor–Rocker Arm	268	691025	Casing–Control Wire (Cut to Required Length)
127	●691739	Plug–Welch	209	692571	Spring–Governor ----- Note ----- 693206 Spring– Governor Used on Type No(s). 0114.	269	691026	Wire–Control (Cut to Required Length)
130	691181	Valve–Throttle	209A	691278	Spring–Governor	270	691027	Nut (Control Wire Casing)
130A	691203	Valve–Throttle Used on Type No(s). 0114.	219	693578	Gear–Governor	271	691028	Lever–Control
133	398187	Float–Carburetor	220	691724	Washer (Governor Gear)	271A	694256	Lever–Control
134	●398188	Kit–Needle/Seat	222	699589	Bracket–Control Used on Type No(s). 0101, 0111.	271B	695743	Lever–Control
137	●◆693981	Gasket–Float Bowl	222A	699493	Bracket–Control Used on Type No(s). 0114.	276	●271716	Washer–Sealing
146	690979	Key–Timing	222B	699591	Bracket–Control Used on Type No(s). 0112.	281	699639	Panel–Control
155	★698214	Plate–Cylinder Head				287	699629	Screw (Dipstick Tube)
161	699207	Base–Air Cleaner (Flat Panel Air Cleaner)				300	693593	Muffler
161A	790631	Base–Air Cleaner (Ultra Low Air Cleaner)				304	699598	Housing–Blower
163	★◆◆696024	Gasket–Air Cleaner (Flat Panel Air Cleaner)				305	699480	Screw (Blower Housing)
186	692317	Connector–Hose				306	693610	Shield–Cylinder
						307	699483	Screw (Cylinder Shield)
						332	699359	Nut (Flywheel)
						333	695711	Armature–Magneto
						334	699477S	Screw (Magneto Armature)
						337	491055S	Plug–Spark (Resistor) ----- Note ----- 691043 Plug–Spark (EMS)
						347	698338	Switch–Rocker
						356A	692390	Wire–Stop
						356B	692602	Wire–Stop
						356C	695630	Wire–Stop

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

⊘ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
358	699638	Gasket Set-Engine	621	692310	Switch-Stop	951	790630	Lever-Choke
363	19069	Puller-Flywheel	632	693408	Spring/Link-Mechanical Governor	957	694261	Cap-Fuel Tank
365	699484	Screw (Carburetor)	633	◆693867	Seal-Choke/Throttle Shaft	958	698180	Valve-Fuel Shut Off
383	19374	Wrench-Spark Plug	633A	◆691321	Seal-Choke/Throttle Shaft	967	493537S	Filter-Pre Cleaner (Flat Panel)
415	693463	Plug	635	692076	Boot-Spark Plug	968	692584	Cover-Air Cleaner (Flat Panel Air Cleaner)
425	699208	Screw (Air Cleaner Cover)	663	699206	Screw (Control Panel)	968B	791082	Cover-Air Cleaner (Ultra Low Air Cleaner)
425A	699492	Screw (Air Cleaner Cover)	668	694257	Spacer	971	690370	Screw (Air Cleaner Base)
427	694255	Nut (Control Bracket)	676	393757	Deflector-Muffler	972	694260	Tank-Fuel
445	491588S	Filter-Air Cleaner Cartridge	677	690661	Screw (Muffler Deflector)	975	493640	Bowl-Float
455	692591	Cup-Flywheel	689	691855	Spring-Friction	977	697001	Gasket Set-Carburetor
456	692299	Plate-Pawl Friction	692	690572	Spring-Detent	993	∅694088	Gasket-Cylinder Head Plate
459	281505S	Pawl-Ratchet	718	690959	Pin-Locating	1005	692592	Fan-Flywheel
504	694254	Washer Set-Friction	741	692565	Gear-Timing	1019	694852	Kit-Label
505	691251	Nut (Governor Control Lever)	742	692564	Retainer-E Ring	1022	★∅691890	Gasket-Rocker Cover
523	693618	Dipstick	746	692566	Gear-Idler	1023	499924	Cover-Rocker Arm
524	281370S	Seal-Dipstick Tube	773	694258	Retainer	1026	790287	Rod-Push
552	692346	Bushing-Governor Crank	830	694544	Stud-Rocker Arm	1029	691230	Arm-Rocker
562	691119	Bolt (Governor Control Lever)	832	693583	Guard-Muffler	1034	691343	Guide-Push Rod
564	699491	Screw (Control Cover)	836	699203	Screw (Muffler Guard)	1036		Label-Emission (Available From An Authorized Briggs & Stratton Service Dealer)
564A	699206	Screw (Control Cover)	836A	699632	Screw (Muffler Guard)	1058	276355	Owner's Manual
597	691696	Screw (Pawl Friction Plate)	842	691031	Seal-O Ring (Dipstick Tube)	1070	699201	Screw (Flywheel Fan)
601	95162S	Clamp-Hose	847	693617	Dipstick/Tube Assembly	1095	698215	Gasket Set-Valve
604	697326	Cover-Control	851	493880S	Terminal-Spark Plug	1210	498144	Pulley/Spring Assembly (Pulley)
608	693394	Starter-Rewind	868	★∅692044	Seal-Valve	1211	498144	Pulley/Spring Assembly (Spring)
613	699209	Screw (Muffler)	883	★691893	Gasket-Exhaust	1330	272147	Repair Manual
615	692576	Retainer-Governor Shaft	914	699481	Screw (Rocker Cover) (Bottom)			
616	692547	Crank-Governor	914A	692557	Screw (Rocker Cover) (Top)			
619	699230	Screw (Cylinder Head Plate)	914B	697551	Screw (Rocker Cover) (Center)			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.