



123600

Illustrated Parts List

Model Series

123600

TYPE NUMBERS
0131 through 0164.

TABLE OF CONTENTS


Air Cleaner	6
Blower Housing/Shrouds	7
Camshaft	2
Carburetor	4
Controls	5
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electric Starter	7
Engine Sump	2
Exhaust System	6
Flywheel	7
Flywheel Brake	5
Fuel Supply	4
Governor Spring	5
Ignition	5
Lubrication	2
Piston Group	2
Rewind Starter	7





PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.


123600

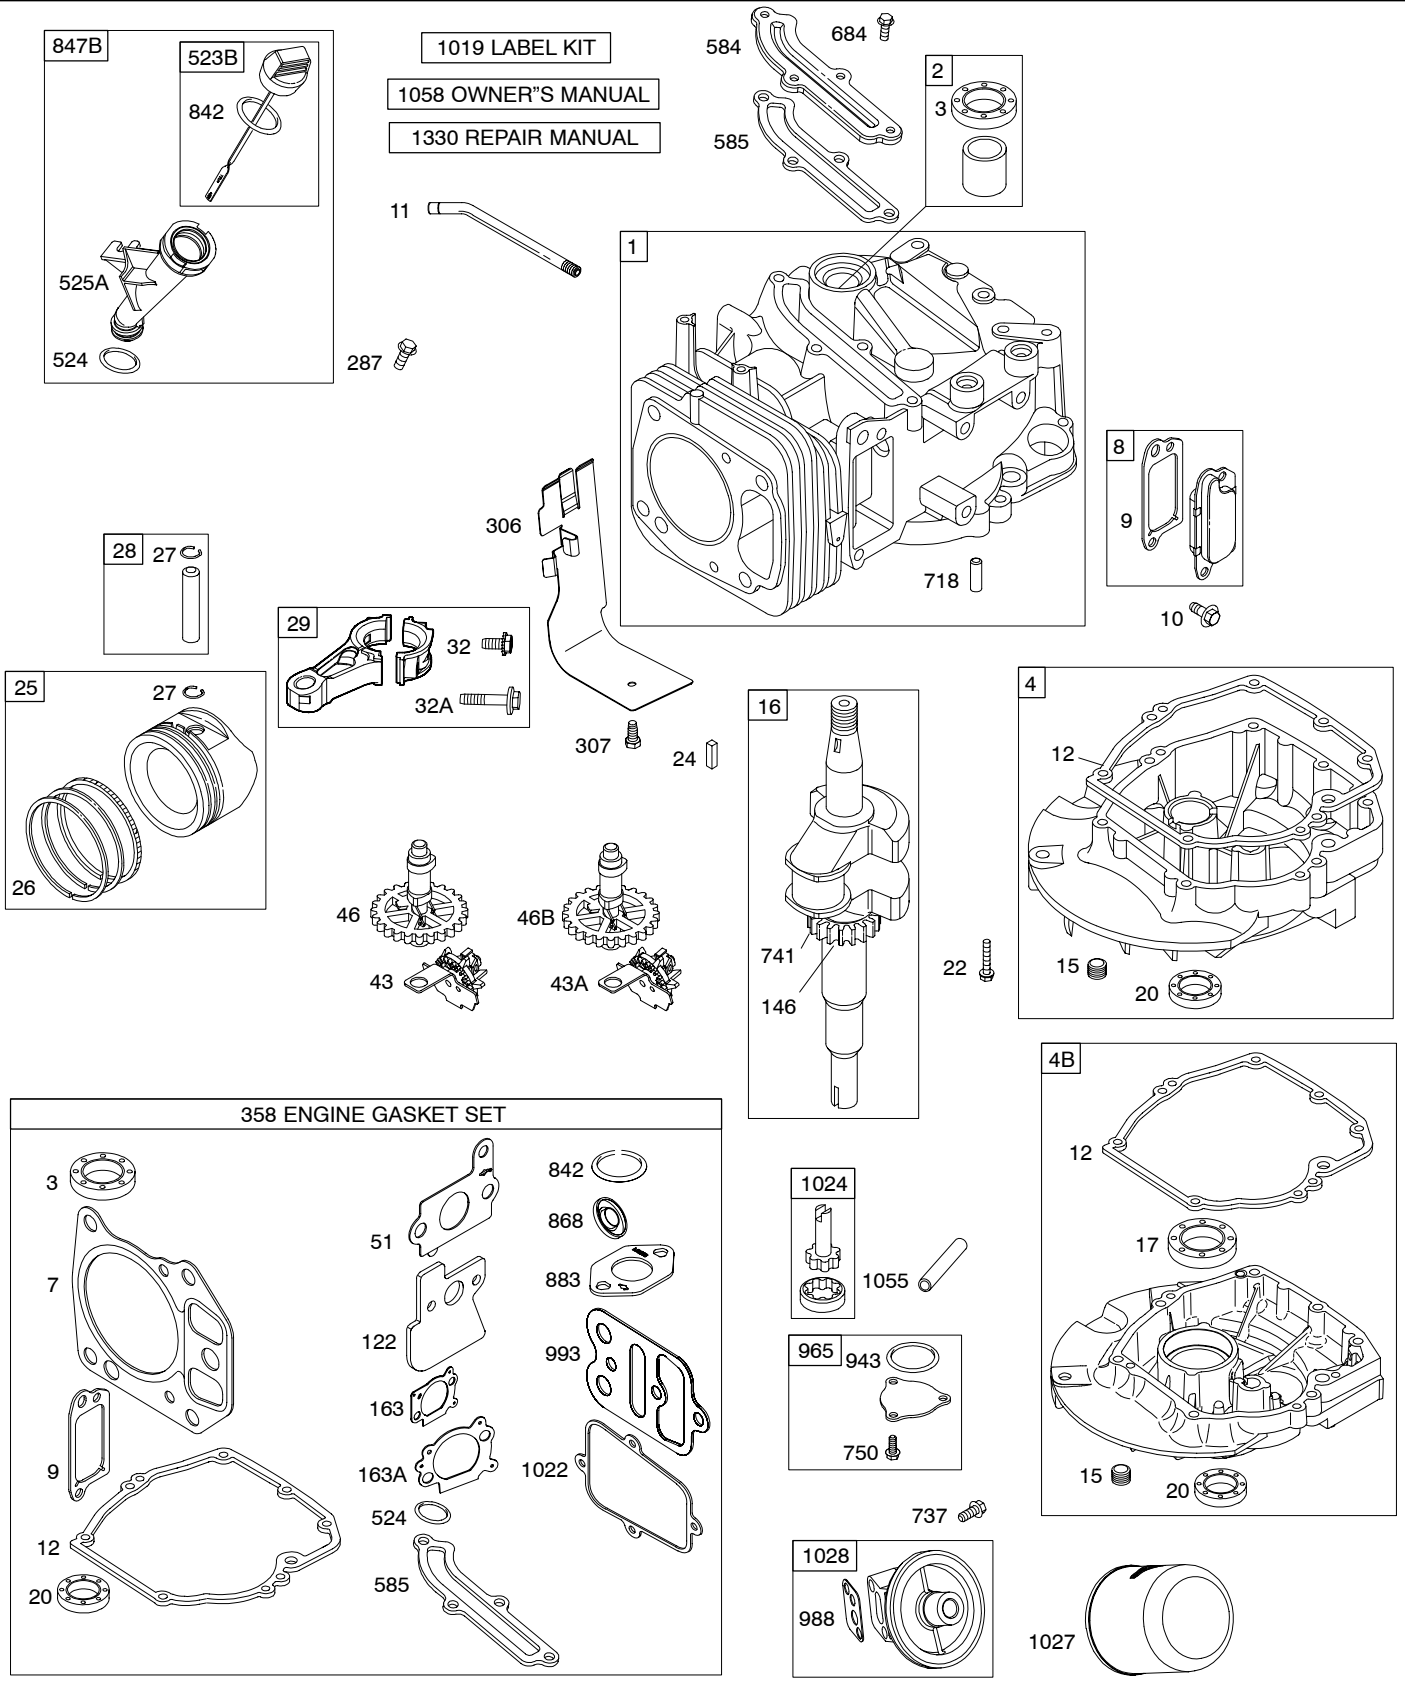

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
4984-2 Assemblies include all parts shown in frames. 10/11/2005





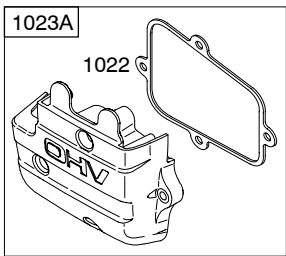
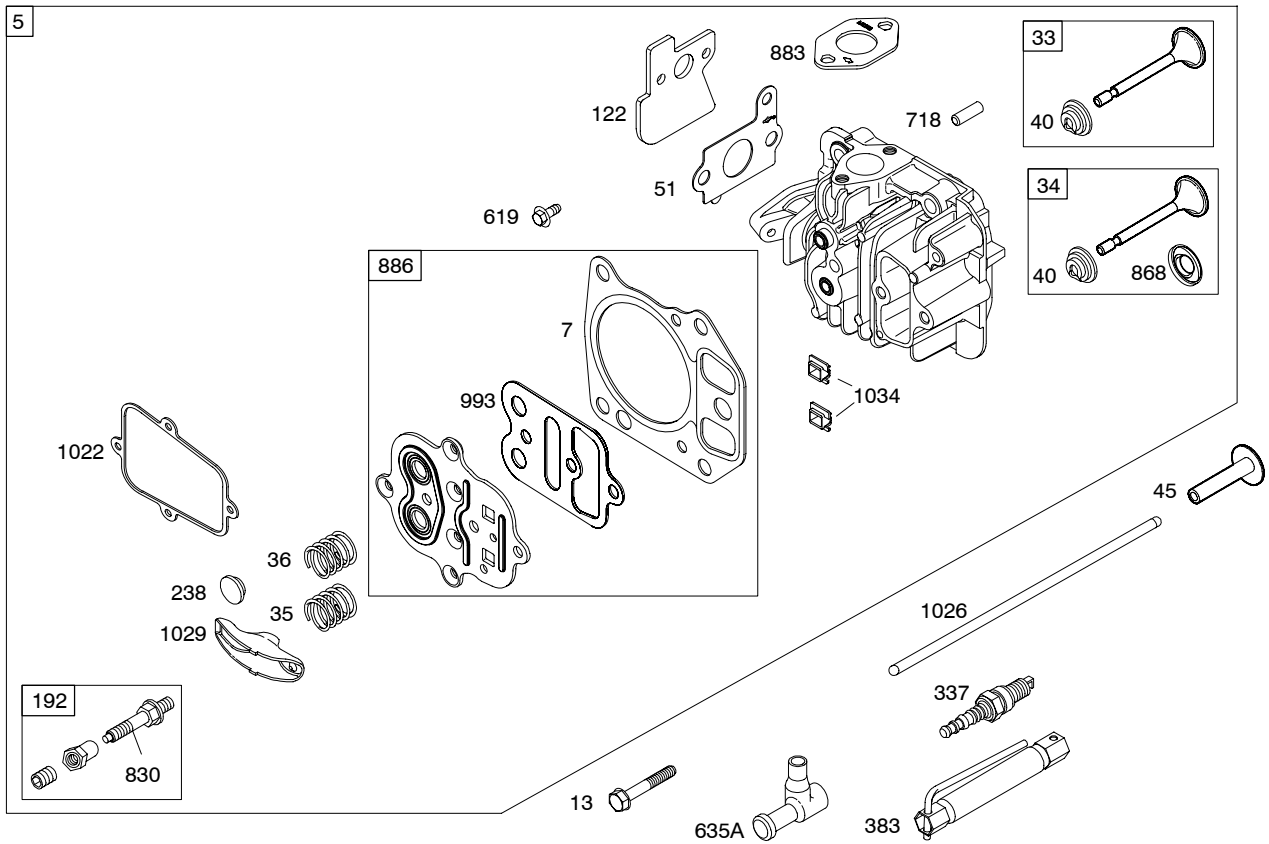


914












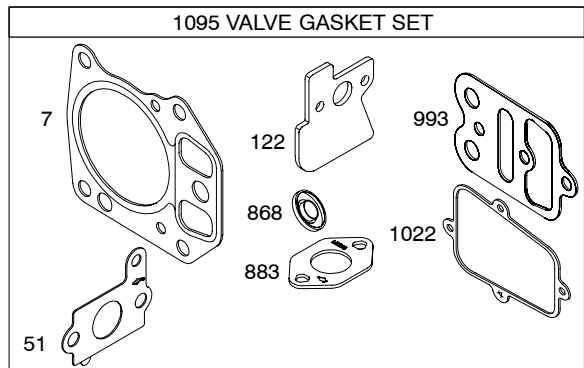


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 4984-3 Assemblies include all parts shown in frames. 10/11/2005

123600

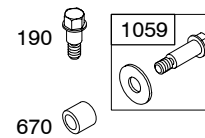
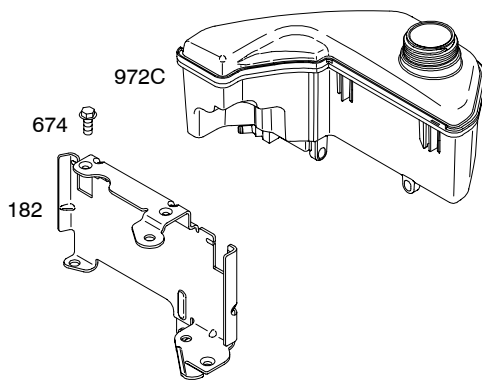
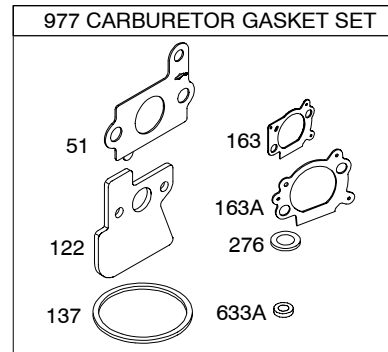
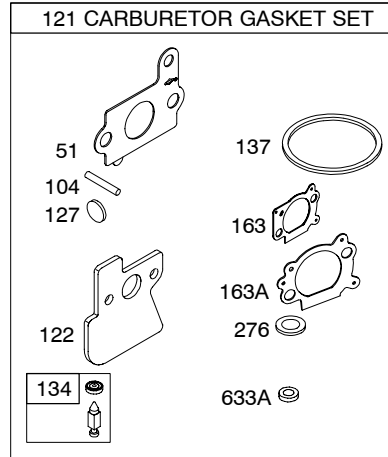
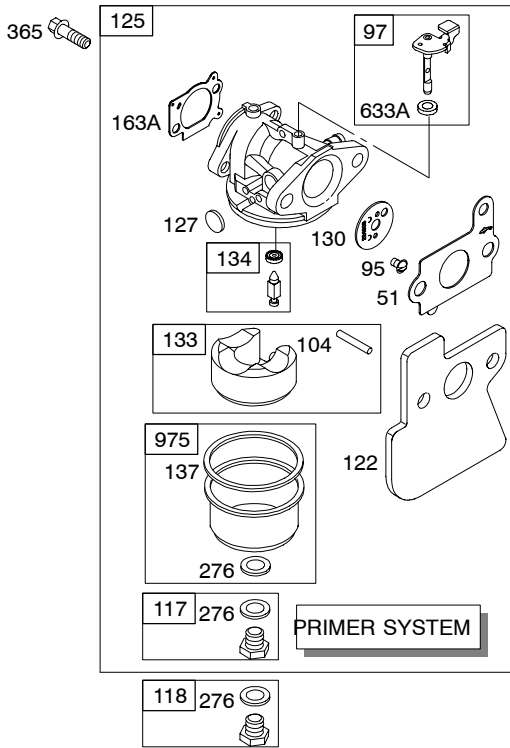


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

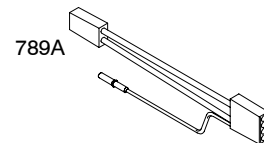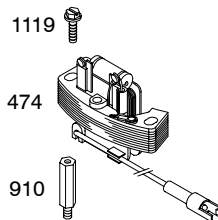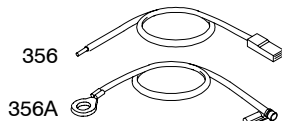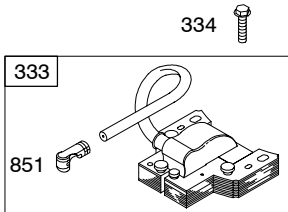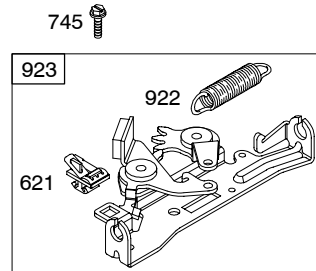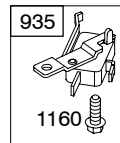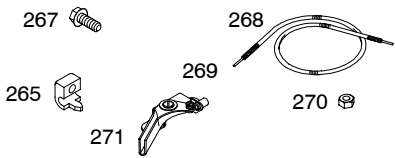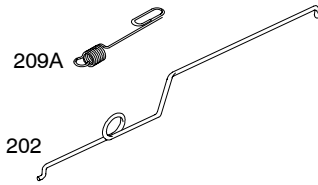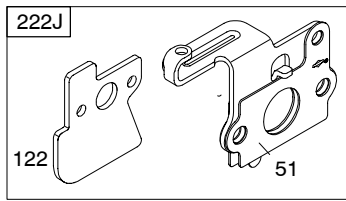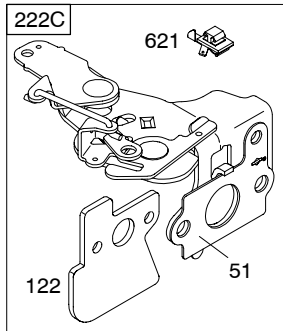


4984-5 *Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.* Assemblies include all parts shown in frames. 10/11/2005







123600

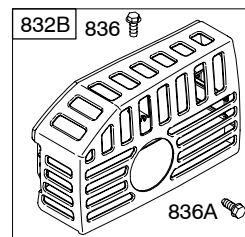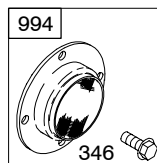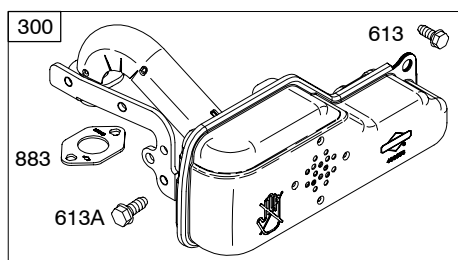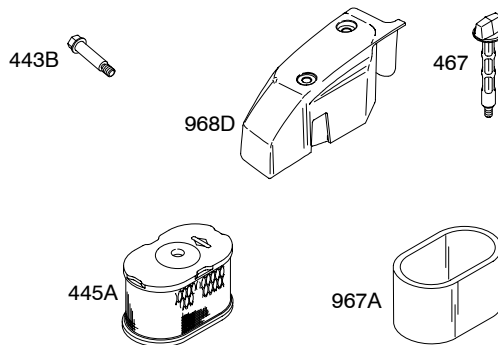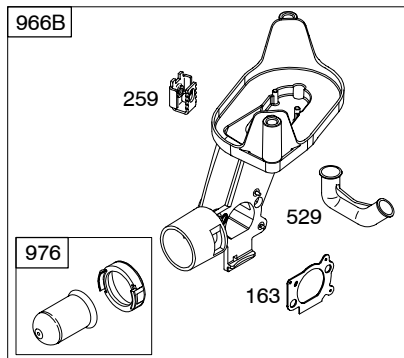

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

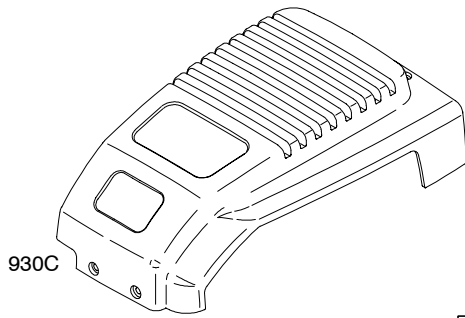

1036 Emission Label

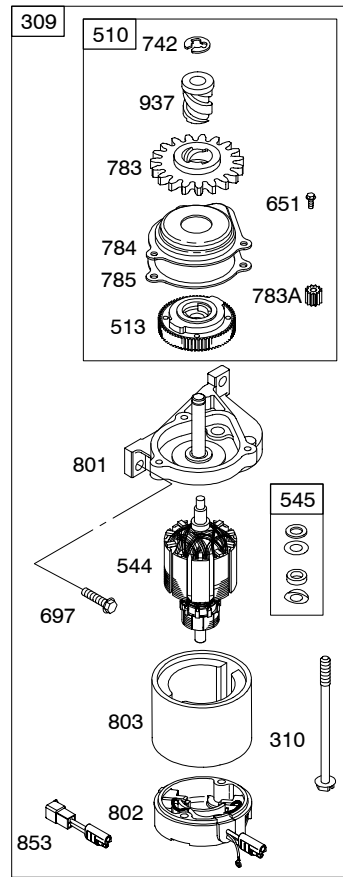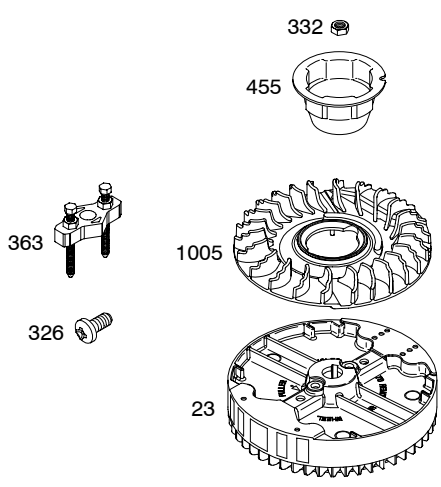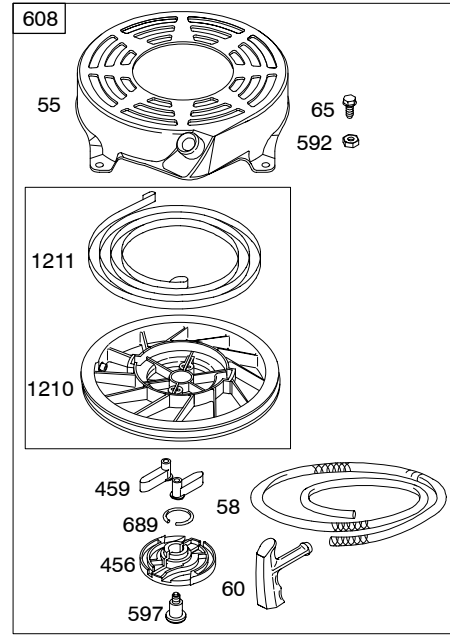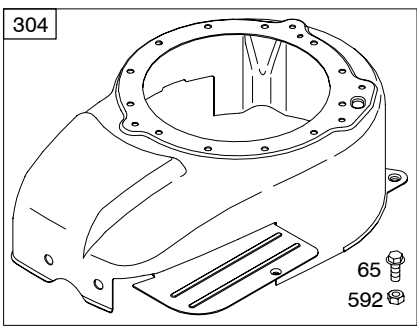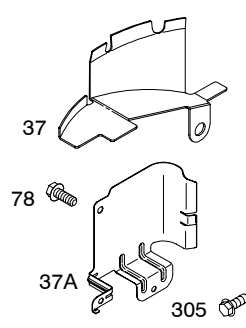

4984-7 *Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.* Assemblies include all parts shown in frames. 10/11/2005

123600

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	790363	Cylinder Assembly (Used After Code Date 04040400). ----- Note ----- 499678 Cylinder-Assembly (Used Before Code Date 04040500).	17	692517	Bearing-Ball	26	791969	Ring Set (Standard) (Used After Code Date 05030700). ----- Note ----- 499631 Ring Set (Standard) (Used Before Code Date 05030800).
2	399269	Kit-Bushing/Seal (Magneto Side)	20	★399781	Seal-Oil (PTO Side)			499631 Ring Set (Standard) (Used Before Code Date 05030800).
3	★299819	Seal-Oil (Magneto Side)	22	691092	Screw (Crankcase Cover/Sump)			499631 Ring Set (Standard) (Used Before Code Date 05030800).
4	493279	Sump-Engine	23	696569	Flywheel			499631 Ring Set (Standard) (Used Before Code Date 05030800).
4B	692509	Sump-Engine Used on Type No(s). 0135, 0136, 0140, 0146, 0147, 0164.	24	222698	Key-Flywheel			499631 Ring Set (Standard) (Used Before Code Date 05030800).
5	695276	Head-Cylinder	25	792004	Piston Assembly (Standard) (Used After Code Date 05030700). ----- Note ----- 499627 Piston Assembly (Standard) (Used Before Code Date 05030800).			499631 Ring Set (Standard) (Used Before Code Date 05030800).
7	★△695166	Gasket-Cylinder Head			692788 Piston Assembly (.010" Oversize)			692785 Ring Set (.010" Oversize) 791324 Ring Set (.020" Oversize) (Used After Code Date 05030700).
8	495786	Breather Assembly			791325 Piston Assembly (.020" Oversize) (Used After Code Date 05030700).			692786 Ring Set (.020" Oversize) (Used Before Code Date 05030800).
9	★272481	Gasket-Breather			692789 Piston Assembly (.020" Oversize) (Used Before Code Date 05030800).			692787 Ring Set (.030" Oversize)
10	691125	Screw (Breather Assembly)			692790 Piston Assembly (.030" Oversize)	27	691866	Lock-Piston Pin
11	499675	Tube-Breather				28	499423	Pin-Piston
12	★692232	Gasket-Crankcase				29	499424	Rod-Connecting
13	691137	Screw (Cylinder Head)				32	691664	Screw (Connecting Rod) (1 5/64" Long)
15	691680	Plug-Oil Drain (Square Socket)				32A	695759	Screw (Connecting Rod) (1 1/2" Long) (Used After Code Date 00042200).
16	691458	Crankshaft ----- Note ----- 695950 Crankshaft (Used After Code Date 00081400). Used on Type No(s). 0149, 0151, 0152, 0153, 0154, 0155, 0156, 0157. 694153 Crankshaft (Used Before Code Date 00081500). Used on Type No(s). 0149, 0151, 0152. 692988 Crankshaft Used on Type No(s). 0132, 0134, 0136, 0138, 0140, 0144, 0146, 0164.				33	499642	Valve-Exhaust
						34	499641	Valve-Intake
						35	691304	Spring-Valve (Intake)
						36	691304	Spring-Valve (Exhaust)
						37	694086	Guard-Flywheel
						37A	692546	Guard-Flywheel
						40	692194	Retainer-Valve
						43	691997	Slinger-Governor/Oil

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
43A	692505	Slinger-Governor/Oil (Used After Code Date 98103100). Used on Type No(s). 0135, 0136, 0140, 0146, 0147, 0164. ----- Note ----- 694518 Slinger-Governor/Oil (Used Before Code Date 98110100). Used on Type No(s). 0135, 0136, 0140, 0146, 0147.	95	691636	Screw (Throttle Valve)	133	398187	Float-Carburetor
			97	499682	Shaft-Throttle ----- Note ----- 790121 Shaft-Throttle (Plastic)	134	●398188	Kit-Needle/Seat
			104	●691242	Pin-Float Hinge	137	●●693981	Gasket-Float Bowl
			117	498981	Jet-Main (Standard) (Used After Code Date 03110600). ----- Note ----- 498978 Jet-Main (Standard) (Used After Code Date 99030700 and Before Code Date 03110700). 494870 Jet-Main (Standard) (Used Before Code Date 99030800).	146	690979	Key-Timing
45	690977	Tappet-Valve				163	▲●691894	Gasket-Air Cleaner
46	694039	Camshaft (Used After Code Date 99030700). ----- Note ----- 694035 Camshaft (Used Before Code Date 99030800).	118	497466	Jet-Main (High Altitude) (Used After Code Date 03110600). ----- Note ----- 498975 Jet-Main (High Altitude) (Used After Code Date 99030700 and Before Code Date 03110700). 497315 Jet-Main (High Altitude) (Used Before Code Date 99030800).	163A	▲●692667	Gasket-Air Cleaner
						182	692441	Bracket-Fuel Tank
46B	694040	Camshaft (Used After Code Date 99030700). Used on Type No(s). 0135, 0136, 0140, 0146, 0147, 0164. ----- Note ----- 694036 Camshaft (Used Before Code Date 99030800). Used on Type No(s). 0135, 0136, 0140, 0146, 0147.				187	791766	Line-Fuel (Cut to Required Length) (Used After Code Date 05063000). ----- Note ----- 691050 Line-Fuel (Cut to Required Length) (Used Before Code Date 05070100).
						188	693168	Screw (Control Bracket)
51 ▲●	692668	Gasket-Intake				190	690940	Screw (Fuel Tank)
55	691421	Housing-Rewind Starter	121	692703	Kit-Carburetor Overhaul	192	694543	Adjuster-Rocker Arm
58	697316	Rope-Starter (Cut To Required Length)	122 ▲●	692799	Spacer-Carburetor	202	691303	Link-Mechanical Governor
60	281434	Grip-Starter Rope	125	790120	Carburetor	209A	690319	Spring-Governor (White) ----- Note ----- 691292 Spring-Governor (Black) Used on Type No(s). 0137, 0138, 0139, 0164.
65	690837	Screw (Rewind Starter)	127	●694468	Plug-Welch (3/8" Diameter)	222C	692617	Bracket-Control ----- Note ----- 692618 Bracket-Control Used on Type No(s). 0132, 0134, 0136, 0138, 0144, 0164.
78	691108	Screw (Flywheel Guard)	130	691203	Valve-Throttle ----- Note ----- 790121 Valve-Throttle (Used With Plastic Throttle Shaft)	222J	697614	Bracket-Control Used on Type No(s). 0148, 0149, 0151, 0152, 0153, 0155.

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

123600

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	
227	691467	Lever-Governor Control	334	691061	Screw (Magneto Armature)	585	★691879	Gasket-Breather Passage	
238	691300	Cap-Valve	337	692051	Plug-Spark (Resistor)	592	690800	Nut (Rewind Starter)	
259	691189	Bracket-Casing Clamp			----- Note -----	597	691696	Screw (Pawl Friction Plate)	
265	691024	Clamp-Casing			692720	Plug-Spark (EMS)	601	95162	Clamp-Hose (Green)
267	690351	Screw (Casing Clamp)	346	690661	Screw (Spark Arrestor)	608	497680	Starter-Rewind	
268	691072	Casing-Control Wire (Cut To Required Length)	356	692390	Wire-Stop	613	691108	Screw (Muffler)	
269	691026	Wire-Control (Cut To Required Length)	356A	499690	Wire-Stop	613A	691140	Screw (Muffler)	
270	691027	Nut (Control Wire Casing)	358	694090	Gasket Set-Engine	615	690340	Retainer-Governor Shaft	
271	691028	Lever-Control	363	19069	Flywheel Puller	616	698801	Crank-Governor	
276	◆271716	Washer-Sealing	365	691136	Screw (Carburetor)	619	691108	Screw (Cylinder Head Plate)	
287	690297	Screw (Dipstick Tube)	383	19374	Wrench-Spark Plug	621	692310	Switch-Stop	
300	694248	Muffler (Used After Code Date 99030700).	404	690272	Washer (Governor Crank)	633A	◆691321	Seal-Choke/Throttle Shaft	
		----- Note -----	443B	690255	Screw (Air Cleaner Primer Base)	635A	692927	Boot-Spark Plug	
		692275 Muffler (Used Before Code Date 99030800).	445A	692446	Filter-Air Cleaner Cartridge	651	690345	Screw (Starter Gear Cover)	
304	499677	Housing-Blower	455	695161	Cup-Flywheel	670	692294	Spacer-Fuel Tank	
		----- Note -----	456	692299	Plate-Pawl Friction	674	691147	Screw (Fuel Tank Bracket)	
		499676 Housing-Blower	459	281505	Pawl-Ratchet	684	690345	Screw (Breather Passage Cover)	
		Used on Type No(s). 0132, 0134, 0136, 0138, 0144, 0164.	467	692447	Knob-Air Cleaner	689	691855	Spring-Friction	
305	691108	Screw (Blower Housing)	474	691991	Alternator	697	691127	Screw (Drive Cap)	
306	691232	Shield-Cylinder	505	691251	Nut (Governor Control Lever)	718	690959	Pin-Locating	
307	690345	Screw (Cylinder Shield)	510	494147	Drive-Starter	737	692511	Screw (Oil Filter Adapter)	
309	695550	Motor-Starter	513	692358	Clutch-Drive	741	790345	Gear-Timing (Use Without Woodruff Key)	
310	692327	Bolt (Starter Motor)	523B	692953	Dipstick			----- Note -----	
326	692438	Screw (Rewind Guard)	524	★692296	Seal-Dipstick Tube			691830 Gear-Timing (Uses Woodruff Key)	
332	690662	Nut (Flywheel)	525A	692445	Tube-Dipstick	742	93941	Retainer-E Ring	
333	802574	Armature-Magneto	529	692937	Grommet	745	691648	Screw (Brake)	
			544	690786	Armature-Starter				
			545	492919	Washer Set (Starter Motor)				
			562	691119	Bolt (Governor Control Lever)				
			584	697734	Cover-Breather Passager				

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
750	691683	Screw (Oil Pump Cover)	842	★691031	Seal-O Ring (Dipstick Tube)	993	★△694088	Gasket-Cylinder Head Plate
783	691918	Gear-Pinion	847B	692777	Dipstick/Tube Assembly	994	695341	Arrestor-Spark
783A	691269	Gear-Pinion	851	493880	Terminal-Spark Plug	1005	499691	Kit-Label
784	692341	Cover-Starter Gear	853	695268	Adapter-Wire	1019	691346	Fan-Flywheel
785	692352	Gasket-Starter Cover	868	★△692044	Seal-Valve	1022	★△691890	Gasket-Rocker Cover
789A	696546	Harness-Wiring (Used After Code Date 00040600). ----- Note ----- 690790 Harness- Wiring (Used Before Code Date 00040700).	883	★△691893	Gasket-Exhaust	1023A	690214	Cover-Rocker
801	690782	Cap-Drive	886	696268	Gasket Kit-Cylinder Head/Plate	1024	692508	Pump-Oil
802	695267	Cap-End (Used After Code Date 00040600). ----- Note ----- 695975 Cap-End (Used Before Code Date 00040700).	910	691094	Stud (Alternator)	1026	692045	Rod-Push
803	695266	Housing-Starter (Used After Code Date 00040600). ----- Note ----- 695975 Housing- Starter (Used Before Code Date 00040700).	914	693398	Screw (Rocker Cover)	1027	692513	Filter-Oil
830	694544	Stud-Rocker Arm	922	691831	Spring-Brake	1028	692516	Adapter-Oil Filter
832B	692499	Guard-Muffler	923	691994	Brake	1029	691230	Arm-Rocker
836	693399	Screw (Muffler Guard)	930C	692443	Guard-Rewind	1034	691343	Guide-Push Rod
836A	690664	Screw (Muffler Guard)	935	499421	Switch-Interlock	1036		Label-Emission (Available From An Authorized Briggs & Statton Sevice Dealer)
			937	691325	Spline-Starter (Oil Pump Cover)	1055	692623	Tube-Oil Pump
			943	692514	Seal-O Ring	1058	276348	Manual-Owner's
			946	691738	Stop-Rope	1059	692311	Kit-Screw/Washer
			965	692507	Cover-Oil Pump	1095	694091	Gasket Set-Valve
			966B	690243	Base-Air Cleaner Primer	1119	692979	Screw (Alternator)
			967A	273356	Filter-Pre Cleaner	1160	691627	Screw (Interlock Switch)
			968D	692444	Cover-Air Cleaner	1210	498144	Pulley/Spring Assembly (Pulley)
			972C	692451	Tank-Fuel (Plastic)	1211	498144	Pulley/Spring Assembly (Spring)
			975	493640	Bowl-Float	1330	272147	Manual-Repair
			976	694395	Primer-Carburetor			
			977	692704	Gasket Set-Carburetor			
			988	692515	Gasket-Oil Adapter			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.