



**124000**

# Illustrated Parts List

## Model Series

# 124000

TYPE NUMBERS  
0101, 0267.

### TABLE OF CONTENTS


<b>Air Cleaner</b> .....	5
<b>Blower Housing</b> .....	5
<b>Camshaft</b> .....	2
<b>Carburetor</b> .....	4
<b>Controls</b> .....	5
<b>Crankcase Cover</b> .....	2
<b>Crankshaft</b> .....	2
<b>Cylinder</b> .....	2
<b>Cylinder Head</b> .....	3
<b>Exhaust System</b> .....	5
<b>Flywheel</b> .....	5
<b>Fuel Supply</b> .....	4
<b>Governor Spring</b> .....	5
<b>Ignition</b> .....	5
<b>Kits/Gaskets - Carburetor</b> .....	4
<b>Kits/Gaskets - Engine</b> .....	2
<b>Kits/Gaskets - Valves</b> .....	3
<b>Lubrication</b> .....	2
<b>Piston Group</b> .....	2
<b>Rewind Starter</b> .....	5







PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION  
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

# 124000





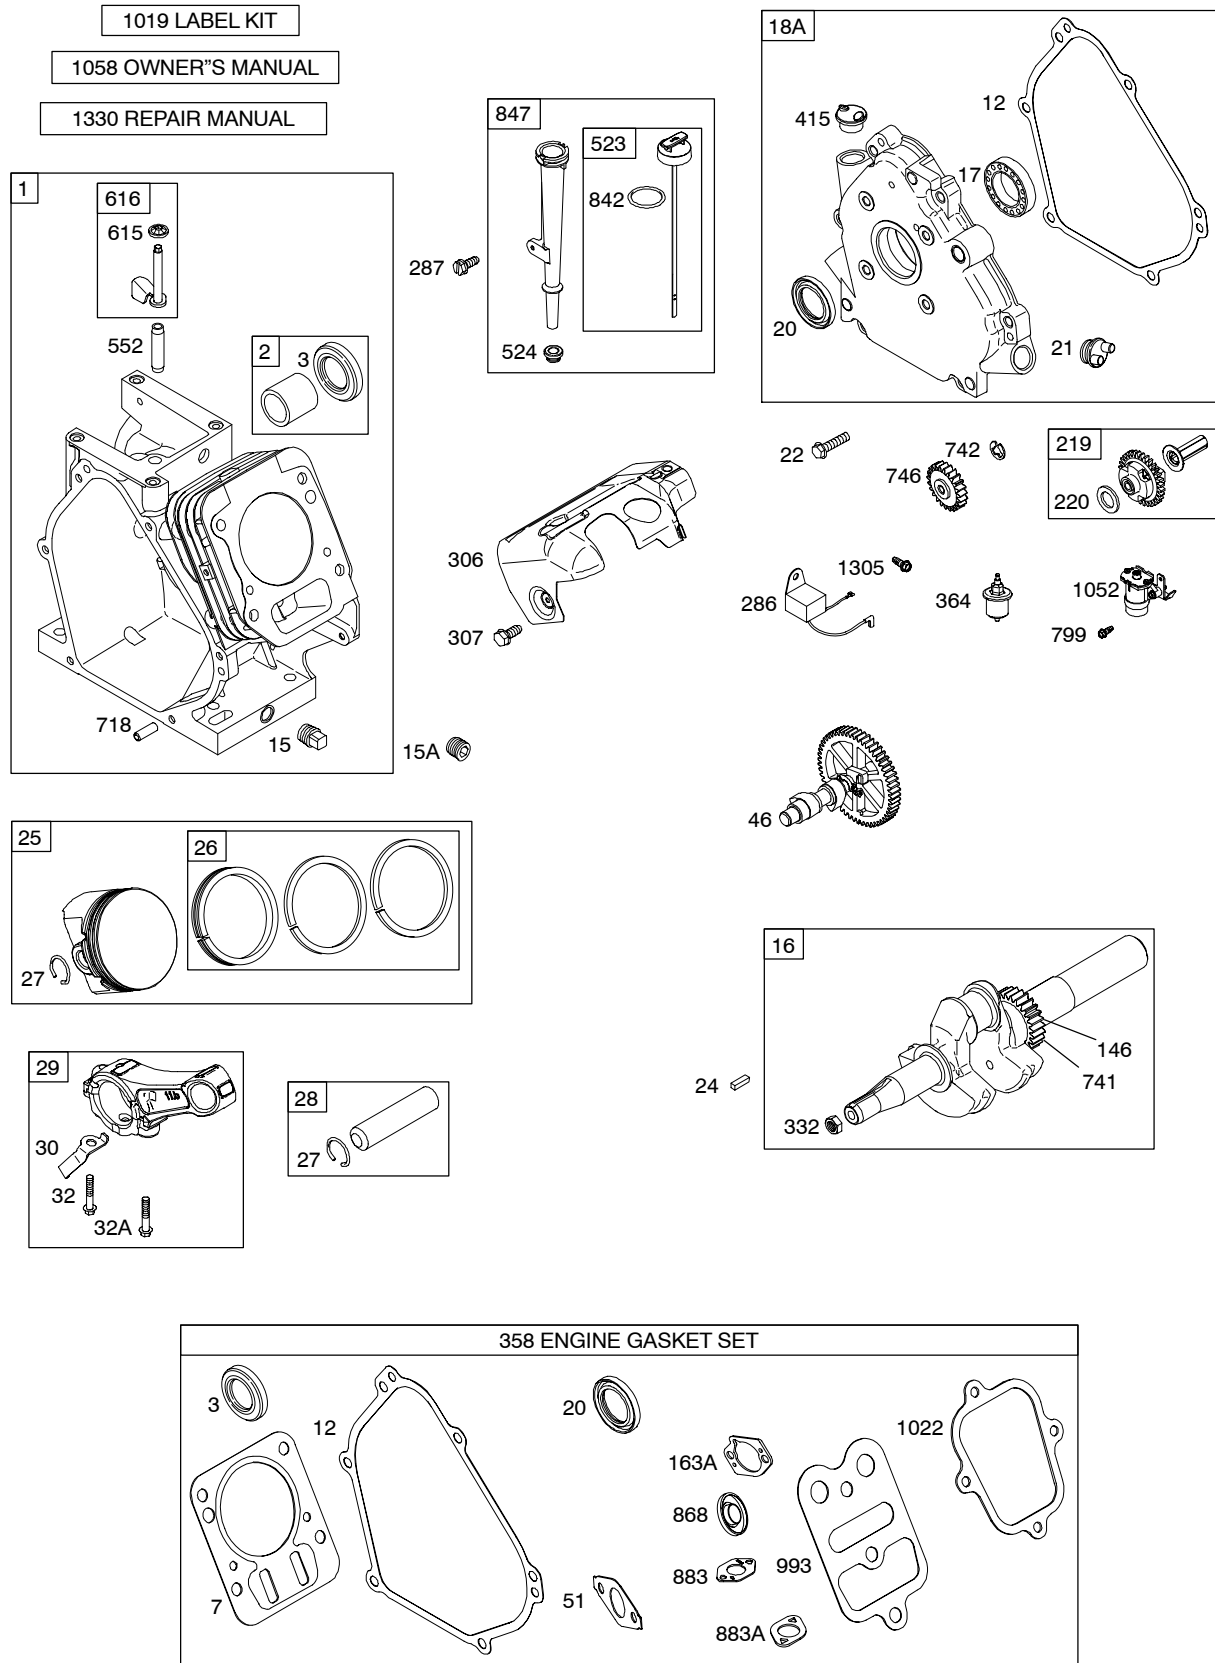


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

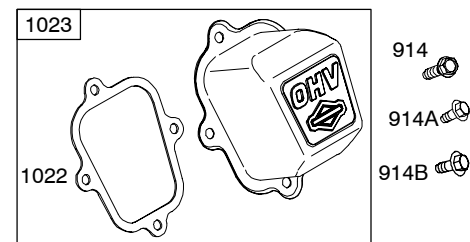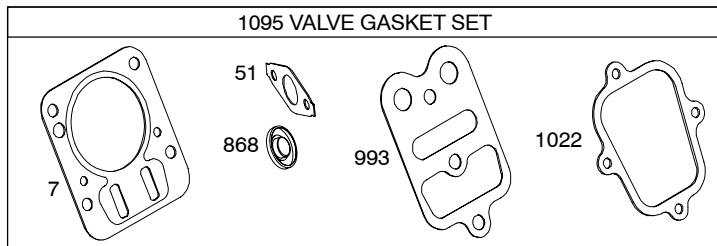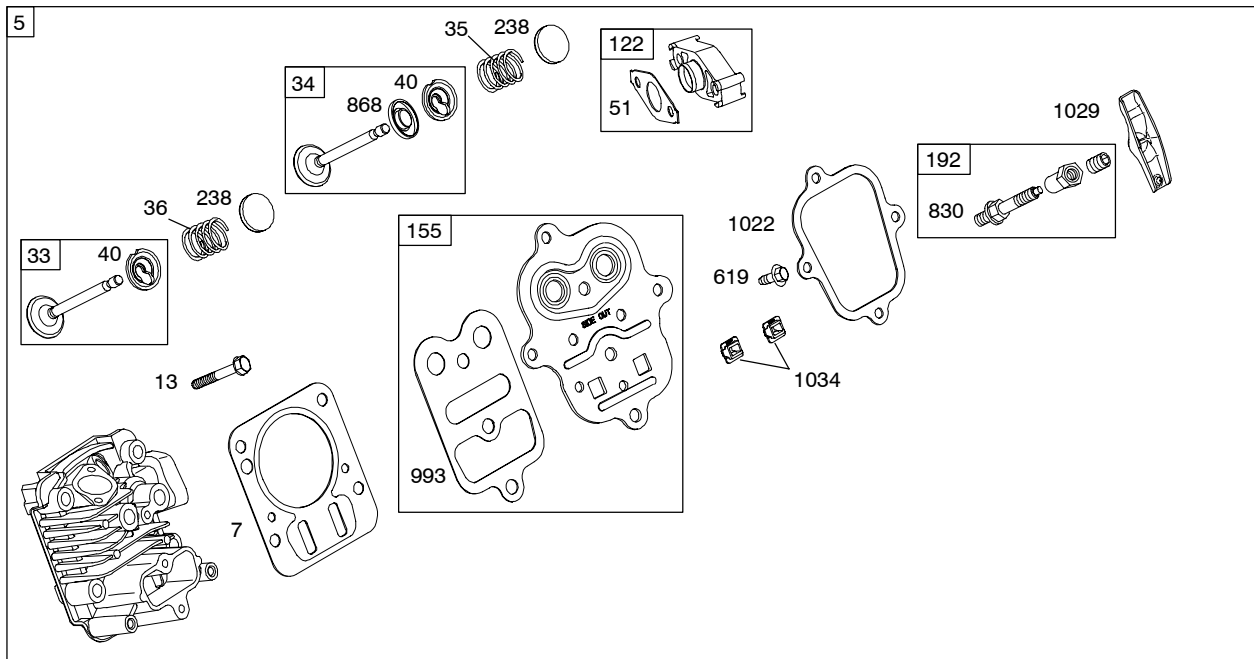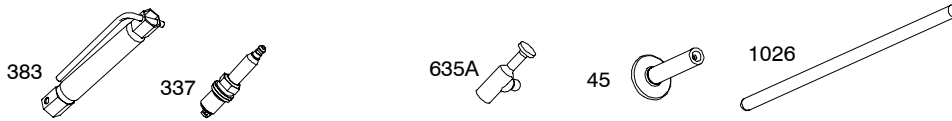


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

# 124000

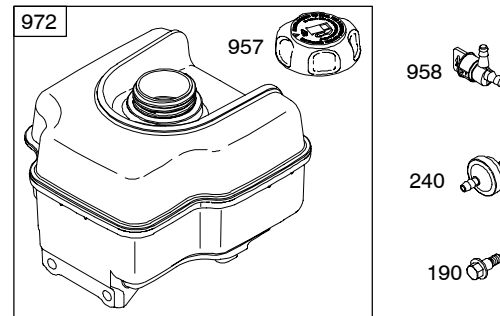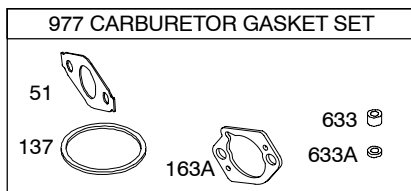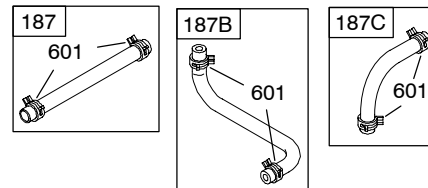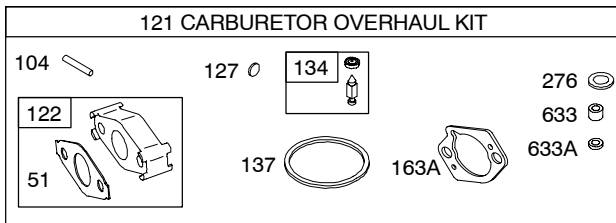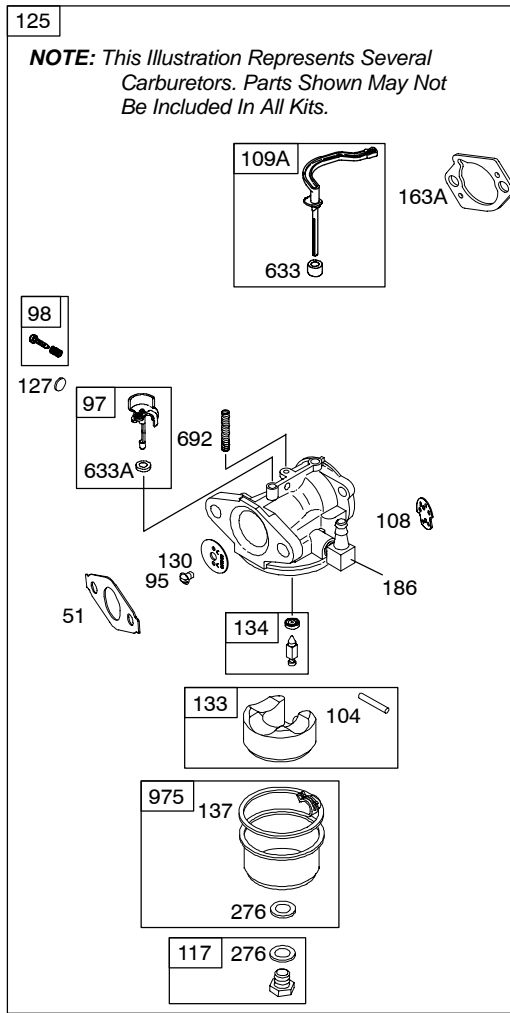

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

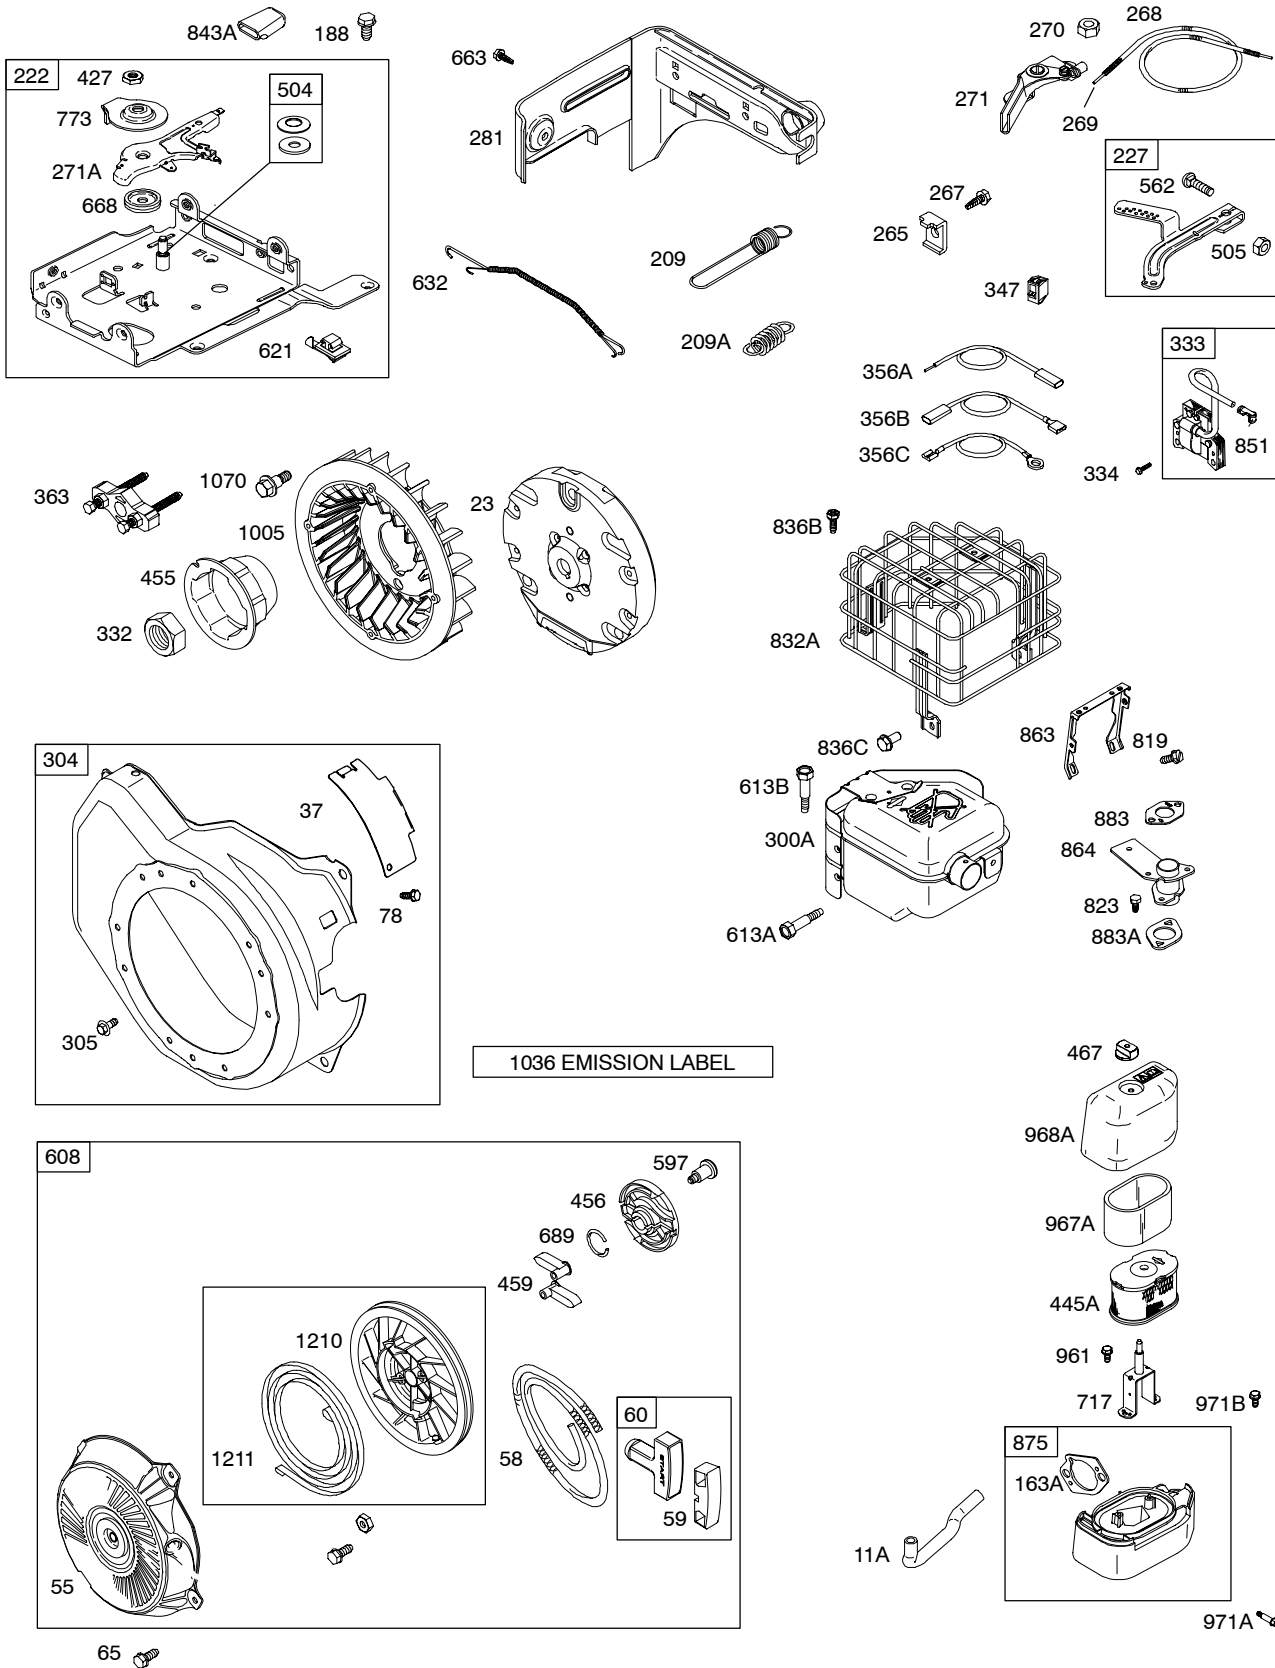

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

# 124000

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	699505	Cylinder Assembly	26	791969	Ring Set (Standard) (Used After Code Date 05030800).	108	692567	Valve-Choke
2	399269	Kit-Bushing/Seal (Magneto Side)				109A	693628	Shaft-Choke
3	*299819S	Seal-Oil (Magneto Side)				117	698344	Jet-Main (Standard)
5	699486	Head-Cylinder				118	694176	Jet-Main (High Altitude)
7	*Ø698210	Gasket-Cylinder Head				121	696998	Kit-Carburetor Overhaul
11A	693647	Tube-Breather (High Mount Air Cleaner)				122	*693749	Spacer-Carburetor
12	*699485	Gasket-Crankcase				125	698475	Carburetor
13	699482	Screw (Cylinder Head)				127	691739	Plug-Welch
15	691686	Plug-Oil Drain (Square Head)				130	691181	Valve-Throttle
15A	691682	Plug-Oil Drain (Flush)				133	398187	Float-Carburetor
16	699449	Crankshaft Used on Type No(s). 0267. ----- Note ----- 699443 Crankshaft Used on Type No(s). 0101.	27	691866	Lock-Piston Pin	134	698188	Kit-Needle/Seat
17	692517	Bearing-Ball	28	499423	Pin-Piston	137	693981	Gasket-Float Bowl
18A	699672	Cover-Crankcase	29	690124	Rod-Connecting	146	690979	Key-Timing
20	*692550	Seal-Oil (PTO Side)	30	692562	Dipper-Connecting Rod	155	*698214	Plate-Cylinder Head
21	281658S	Cap-Oil Fill	32	691664	Screw (Connecting Rod)	163A*	696979	Gasket-Air Cleaner (High Mount)
22	699478	Screw (Crankcase Cover/ Sump)	32A	695759	Screw (Connecting Rod)	186	692317	Connector-Hose
23	699488	Flywheel	33	499642	Valve-Exhaust	187	791766	Line-Fuel (Cut to Required Length)
24	222698S	Key-Flywheel	34	499641	Valve-Intake	187B	791874	Line-Fuel (Molded)
25	792004	Piston Assembly (Standard) (Used After Code Date 05030800). ----- Note ----- 499627 Piston Assembly (Standard) (Used Before Code Date 05030900). 791325 Piston Assembly (.020" Oversize) (Used After Code Date 05030800). 692789 Piston Assembly (.020" Oversize) (Used Before Code Date 05030900).	35	691304	Spring-Valve (Intake)	187C	791866	Line-Fuel (Molded)
			36	691304	Spring-Valve (Exhaust)	188	699479	Screw (Control Bracket)
			37	699661	Guard-Flywheel	190	699220	Screw (Fuel Tank)
			40	692194	Retainer-Valve	192	694543	Adjustor-Rocker Arm
			45	690977	Tappet-Valve	209	692571	Spring-Governor
			46	693404	Camshaft	209A	691278	Spring-Governor
			51*	Ø692555	Gasket-Intake	219	693578	Gear-Governor
			55	691422	Housing-Rewind Starter	220	691724	Washer (Governor Gear)
			58	693389	Rope-Starter (Cut to Required Length)	222	699589	Bracket-Control
			59	490653	Grip-Insert	227	692573	Lever-Governor Control
			60	490652	Grip-Starter Rope	238	691300	Valve-Cap
			65	699228	Screw (Rewind Starter)	240	394358S	Filter-Fuel
			78	699205	Screw (Flywheel Guard)	265	691024	Clamp-Casing
			95	691636	Screw (Throttle Valve)	267	699492	Screw (Casing Clamp)
			97	690024	Shaft-Throttle	268	691025	Casing-Control Wire (Cut to Required Length)
			98	398185	Kit-Idle Speed (Carburetor)	269	691026	Wire-Control (Cut to Required Length)
			104	691242	Pin-Float Hinge	270	691027	Nut (Control Wire Casing)

\* Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.*

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
276	●271716	Washer-Sealing	613A	699230	Screw	883	★691893	Gasket-Exhaust
281	699639	Panel-Control			(Muffler)	883A	★692237	Gasket-Exhaust
286	698611	Module-Oil Sensor	613B	697812	Screw	914	699481	Screw
287	699629	Screw			(Muffler)			(Rocker Cover)
		(Dipstick Tube)	615	692576	Retainer-Governor			(Bottom)
300A	699231	Muffler	616	692547	Crank-Governor	914A	692557	Screw
304	699598	Housing-Blower	619	699230	Screw			(Rocker Cover)
305	699480	Screw			(Cylinder Head Plate)	914B	697551	Screw
		(Blower Housing)	621	692310	Switch-Stop			(Rocker Cover)
306	693610	Shield-Cylinder	632	693408	Spring/Link-Mechanical Governor			(Center)
307	699483	Screw	633	◆693867	Seal-Choke/Throttle Shaft	957	694261	Cap-Fuel Tank
		(Cylinder Shield)				958	698180	Valve-Fuel Shut Off
332	699359	Nut	633A	◆691321	Seal-Choke/Throttle Shaft	961	698304	Screw
		(Flywheel)						(Air Cleaner Bracket)
333	695711	Armature-Magneto	635A	692927	Boot-Spark Plug	967A	273356S	Filter-Pre Cleaner
334	699477	Screw	663	699206	Screw			(High Mount)
		(Magneto Armature)	668	694257	Spacer	968A	693460	Cover-Air Cleaner
337	491055S	Plug-Spark	689	691855	Spring-Friction			(High Mount)
347	697854	Switch-Rocker	692	690572	Spring-Detent	971A	690349	Screw
356A	692390	Wire-Stop	717	693462	Bracket-Air Cleaner			(Air Cleaner Base)
356B	692602	Wire-Stop	718	690959	Pin-Locating	971B	699629	Screw
356C	695630	Wire-Stop	741	695087	Gear-Timing			(Air Cleaner Base)
358	699638	Gasket Set-Engine	742	692564	Retainer-E Ring	972	694260	Tank-Fuel
363	19069	Puller-Flywheel	746	692566	Gear-Idler	975	493640	Bowl-Float
364	695693	Terminal-Oil Plug	773	694258	Retainer	977	697001	Gasket Set-Carburetor
365	699484	Screw	799	699202	Screw	993	∅694088	Gasket-Cylinder Head Plate
		(Carburetor)	819	699233	Screw	1005	692592	Fan-Flywheel
383	19374S	Wrench-Spark Plug			(Muffler Bracket)	1019	694852	Kit-Label
415	693463	Plug	823	699209	Screw	1022	★∅691890	Gasket-Rocker Cover
427	694255	Nut			(Muffler Adapter)	1023	499924	Cover-Rocker Arm
		(Control Bracket)	830	694544	Stud-Rocker Arm	1026	790287	Rod-Push
445A	697029	Filter-Air Cleaner	832A	697818	Guard-Muffler	1029	691230	Arm-Rocker
		Cartridge	836B	699209	Screw	1034	691343	Guide-Push Rod
		(High Mount)			(Muffler Guard)	1036		Label-Emission
455	692591	Cup-Flywheel	836C	699234	Screw			(Available From An
456	692299	Plate-Pawl Friction			(Muffler Guard)	1052	790141	Sensor-Oil
459	281505S	Pawl-Ratchet	842	691031	Seal-O Ring	1058	276355	Owner's Manual
467	691668	Knob-Air Cleaner			(Dipstick Tube)	1070	699201	Screw
504	694254	Washer Set-Friction	843A	695588	Sleeve-Lever			(Flywheel Fan)
505	691251	Nut	847	693617	Dipstick/Tube Assembly	1095	698215	Gasket Set-Valve
		(Governor Control Lever)	851	493880S	Terminal-Spark Plug	1210	498144	Pulley/Spring Assembly
523	693618	Dipstick	863	699229	Bracket-Muffler			(Pulley)
524	281370S	Seal-Dipstick Tube	864	699232	Adapter-Muffler	1211	498144	Pulley/Spring Assembly
552	692346	Bushing-Governor Crank	868	★∅692044	Seal-Valve			(Spring)
562	691119	Bolt	875	697030	Base-Air Cleaner	1305	699691	Screw
		(Governor Control Lever)			(High Mount)			(Oil Sensor Module)
597	691696	Screw				1330	272147	Repair Manual
		(Pawl Friction Plate)						
601	95162S	Clamp-Hose						
608	693394	Starter-Rewind						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No. 1095.

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.*