



Illustrated Parts List

Model Series

207400

TYPE NUMBERS
0115 through 0132.

TABLE OF CONTENTS

Air Cleaner	6
Alternator	10
Blower Housing/Shrouds	7
Camshaft	2
Carburetor #1	4
Carburetor #2	5
Controls	8
Crankcase Cover	2
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electric Starter	9
Exhaust System	6
Flywheel	7
Fuel Supply	8
Gear Reduction	9
Governor Spring	8
Ignition	10
Kit/Gasket Sets-Carburetor	5
Kit/Gasket Sets-Engine	2
Kit/Gasket Sets-Valve	3
Lubrication	2
Piston, Rings, Connecting Rod	2
Rewind Starter	7
Valves	3


BRIGGS & STRATTON




PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

207400

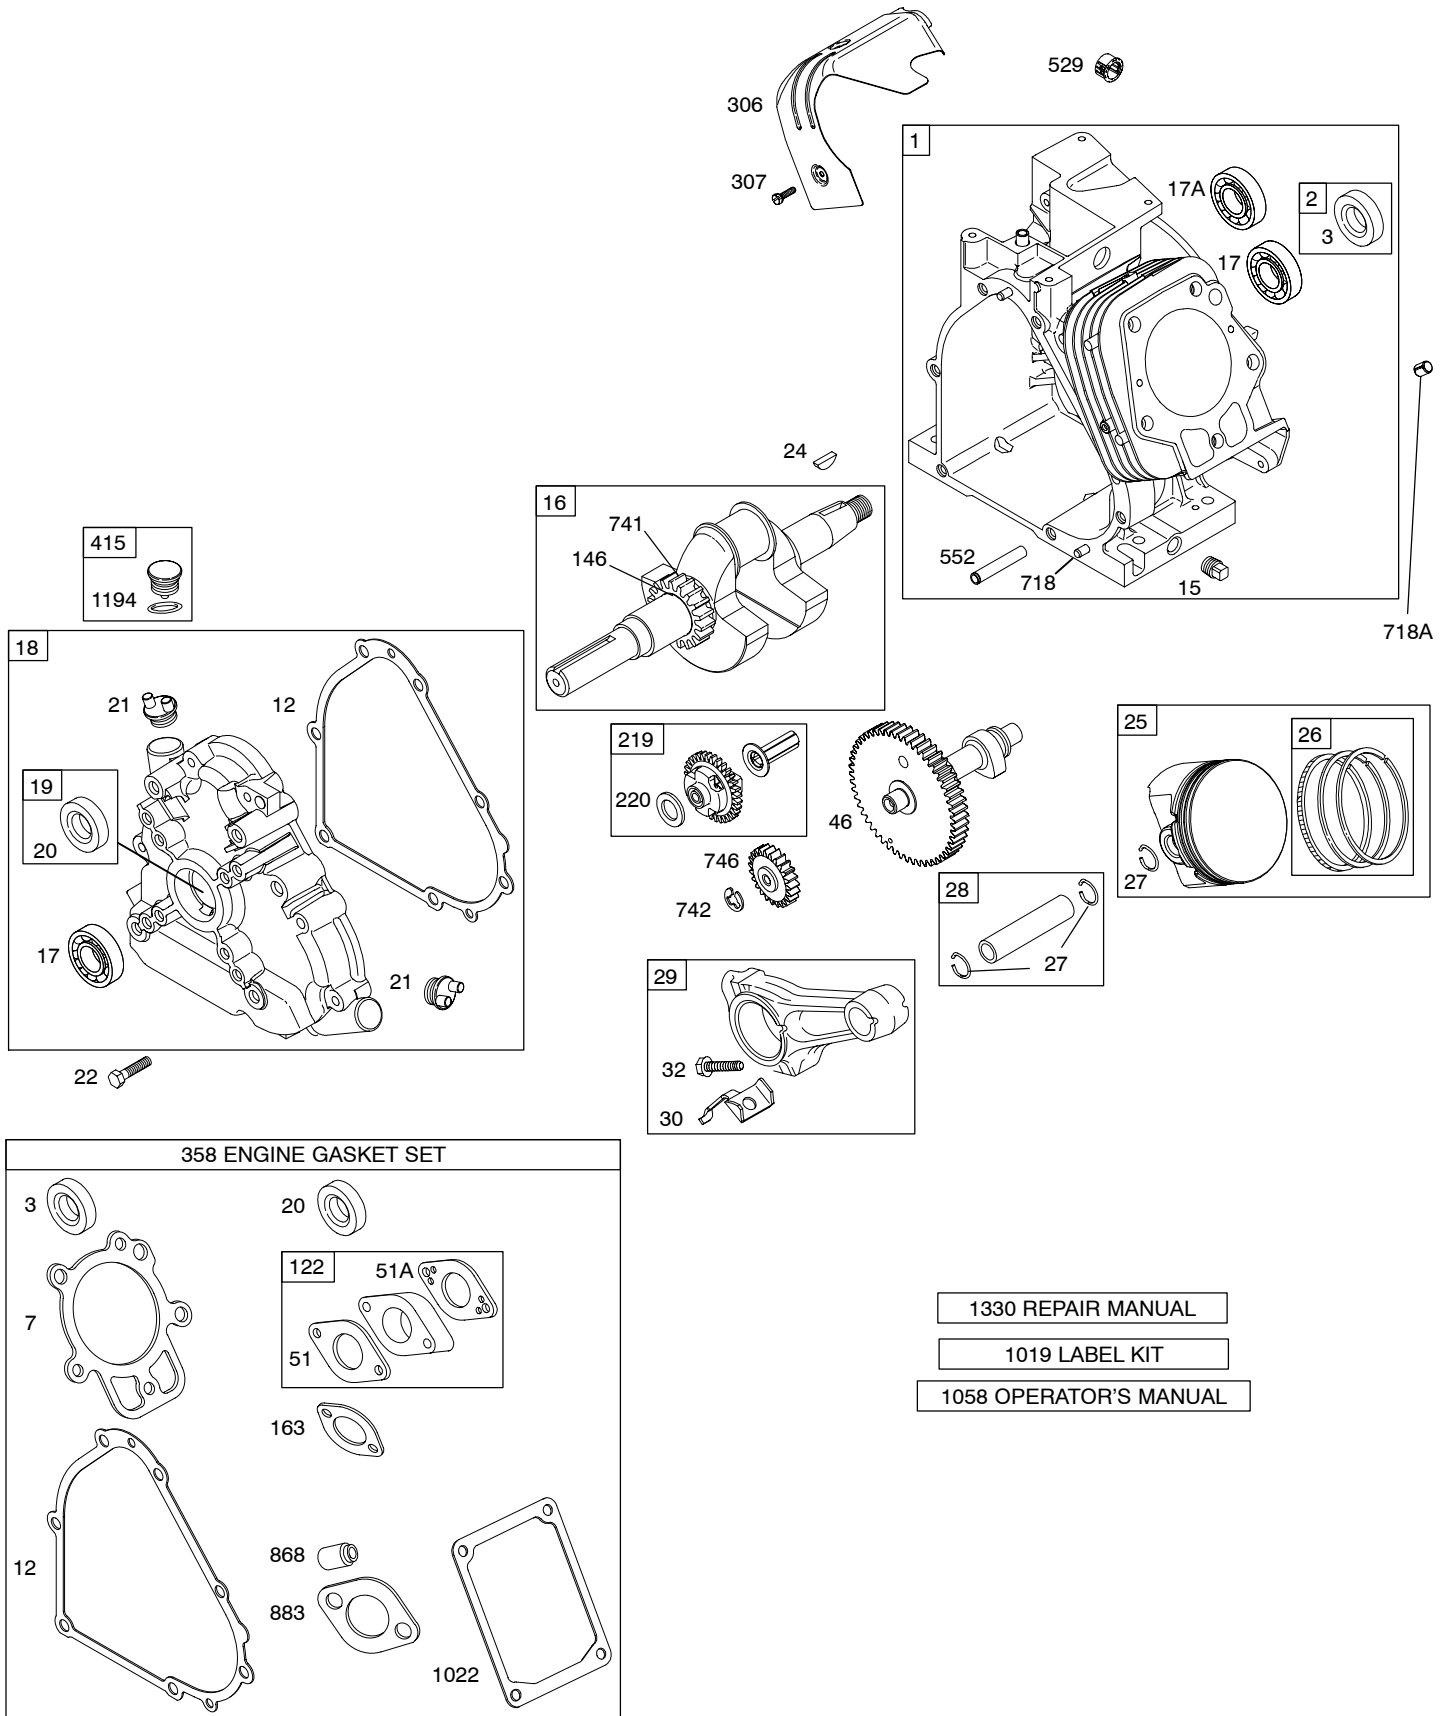

Illustrations cover a range of engines. Parts shown without corresponding text are not used on this engine.
6662-2 Assemblies include all parts shown in frames. **07/11/2005**

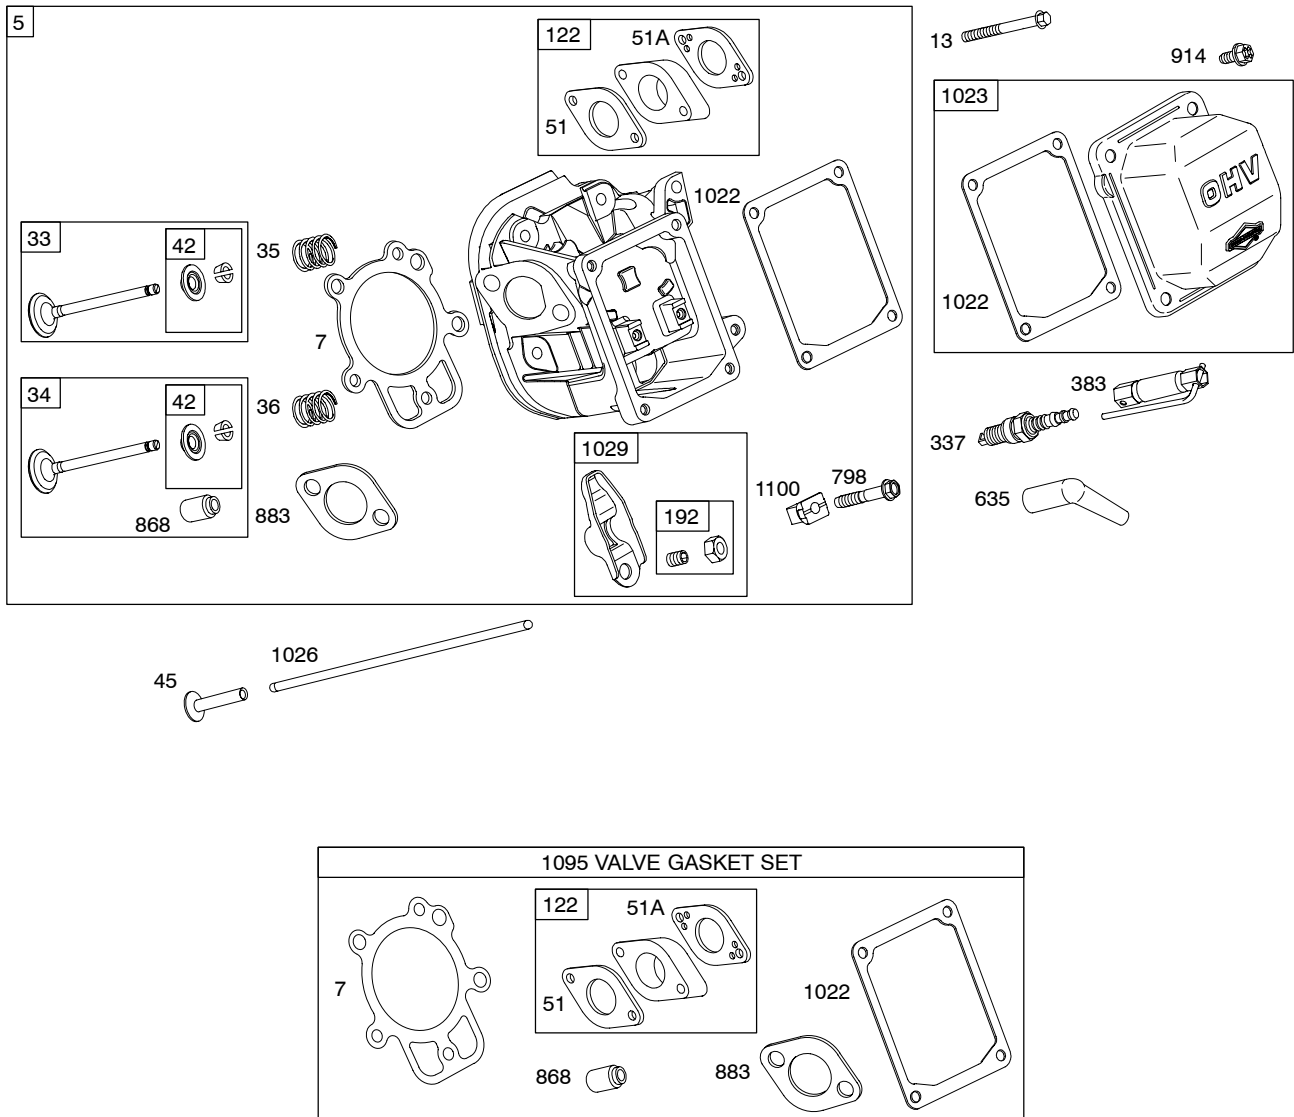



Illustrations cover a range of engines. Parts shown without corresponding text are not used on this engine.





6662-3

Assemblies include all parts shown in frames.


07/11/2005

207400

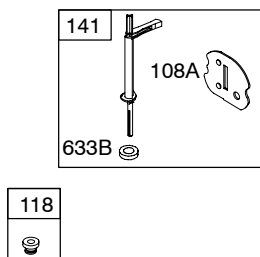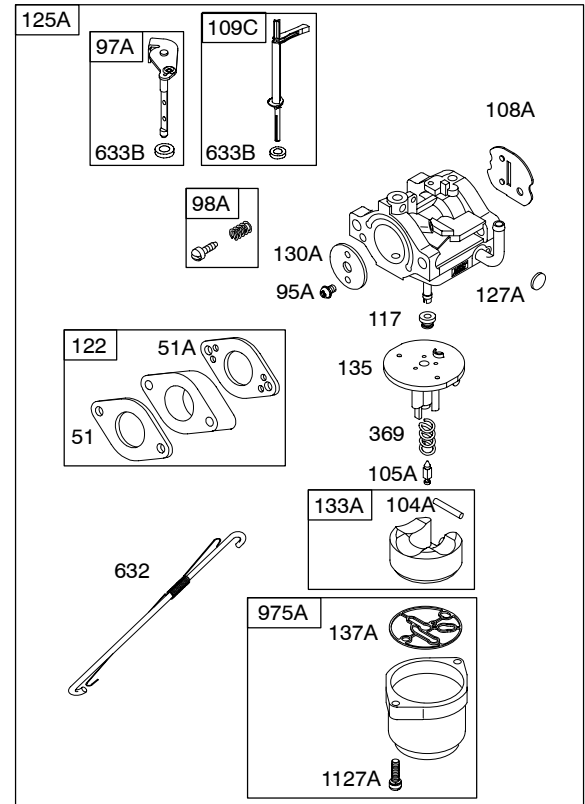

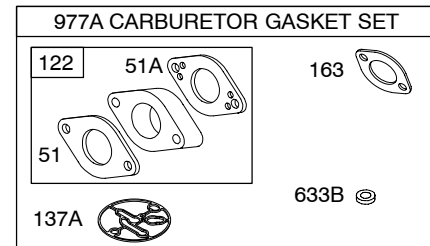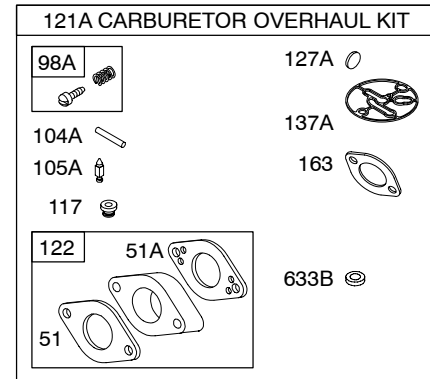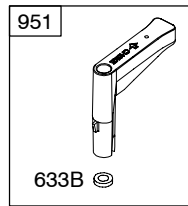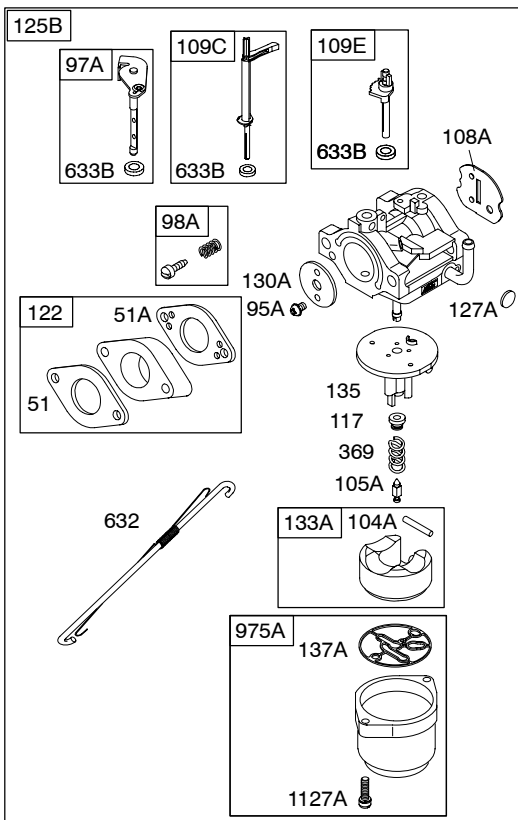

207400

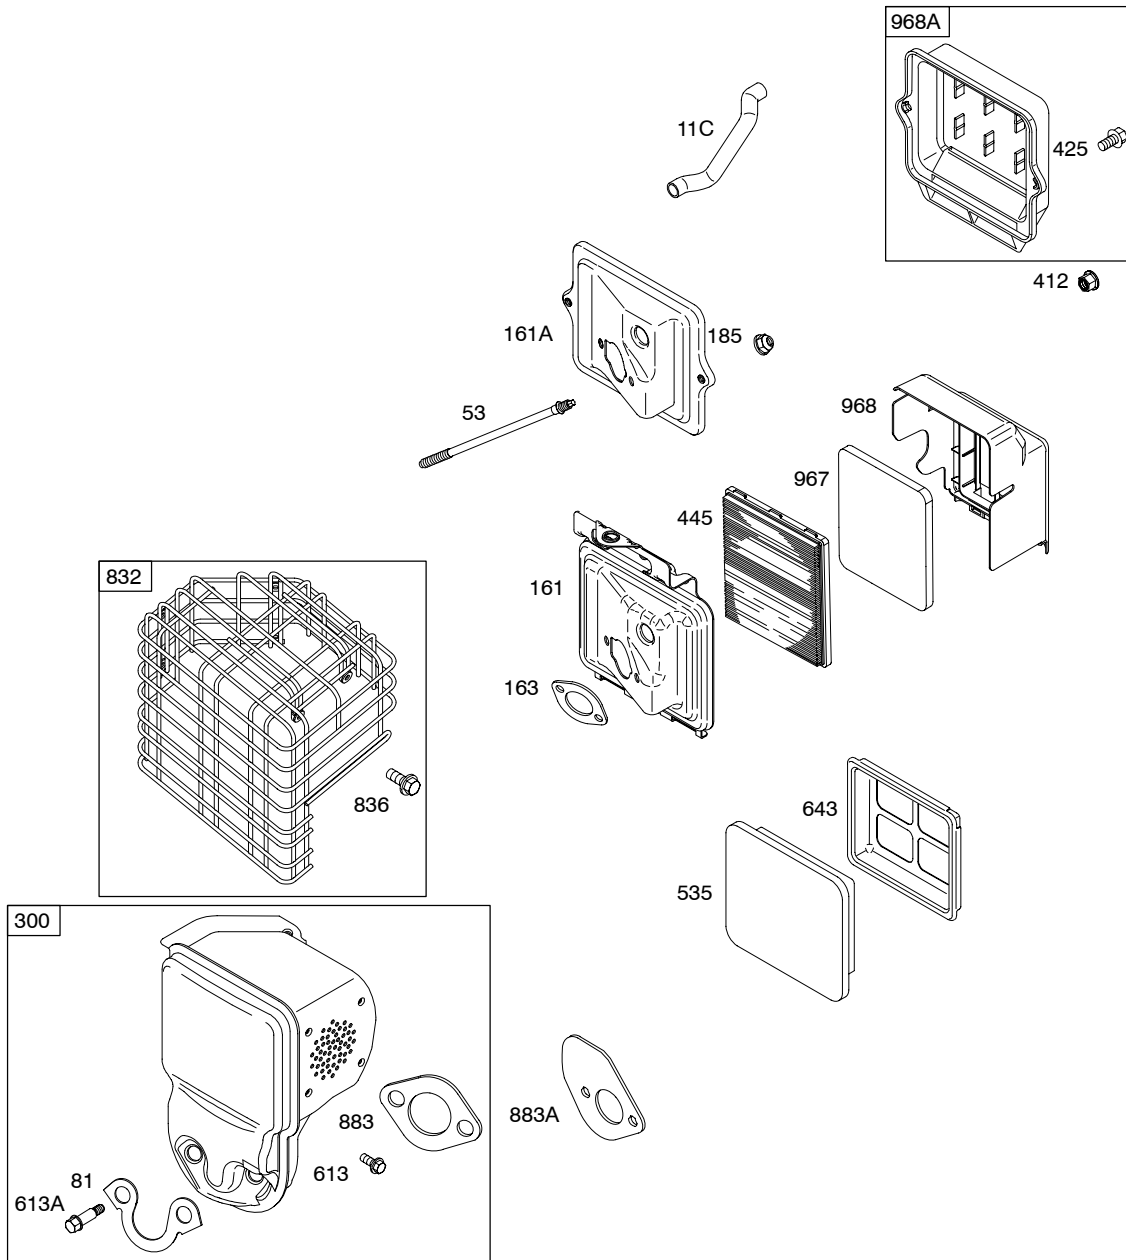


Illustrations cover a range of engines. Parts shown without corresponding text are not used on this engine.

6662-6

Assemblies include all parts shown in frames.

07/11/2005

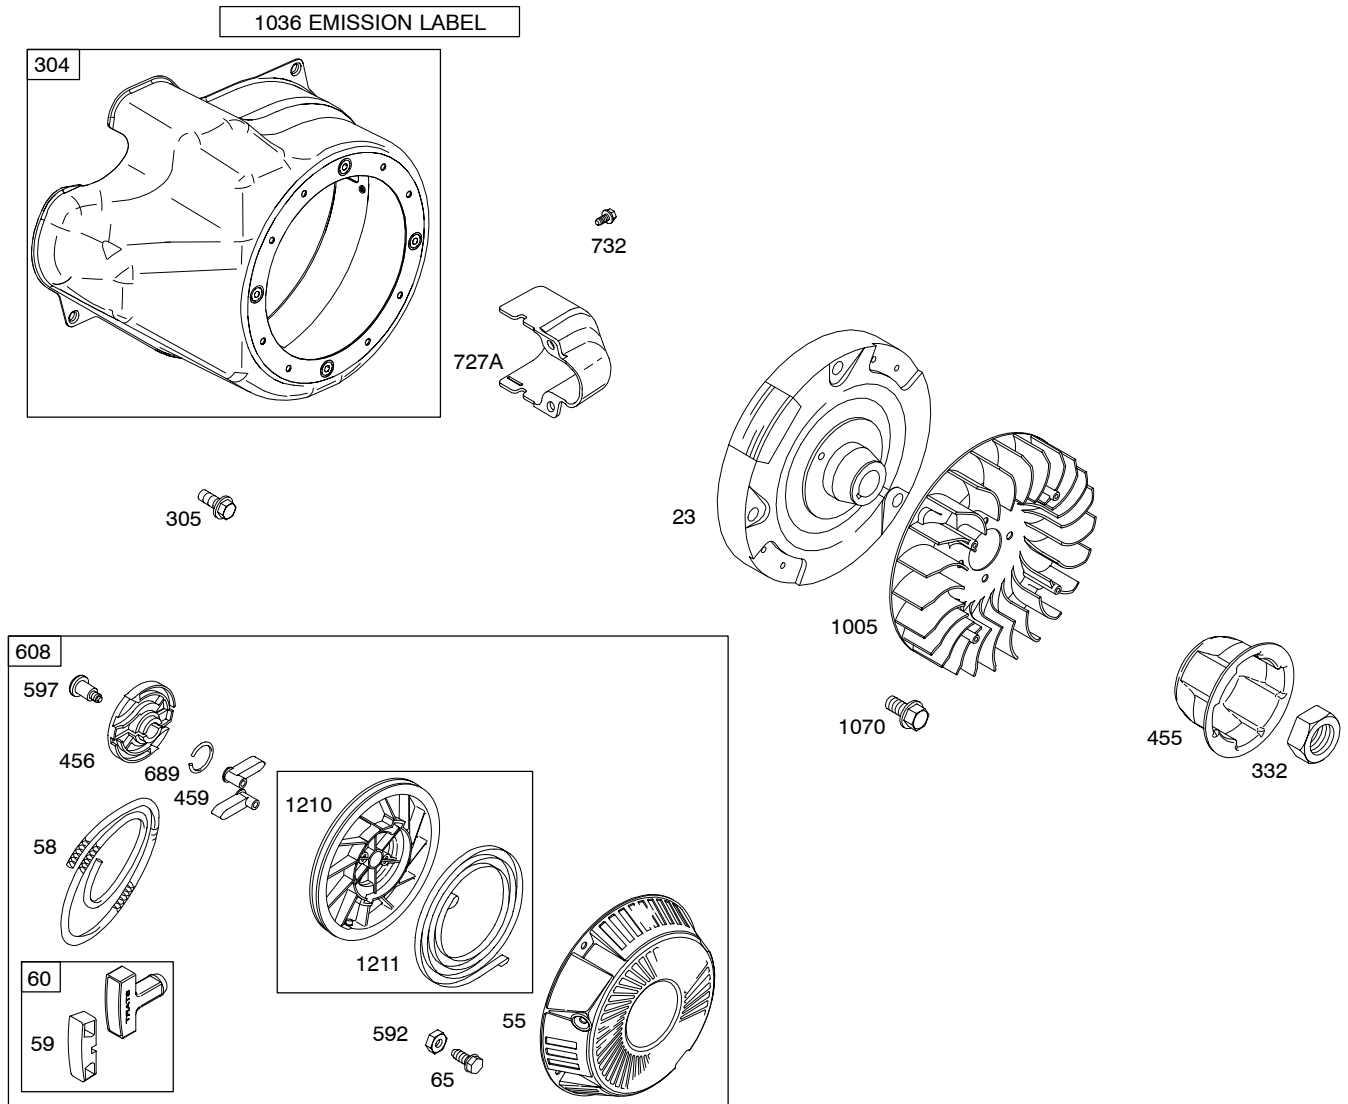


Illustrations cover a range of engines. Parts shown without corresponding text are not used on this engine.

6662-7

Assemblies include all parts shown in frames.

07/11/2005

207400


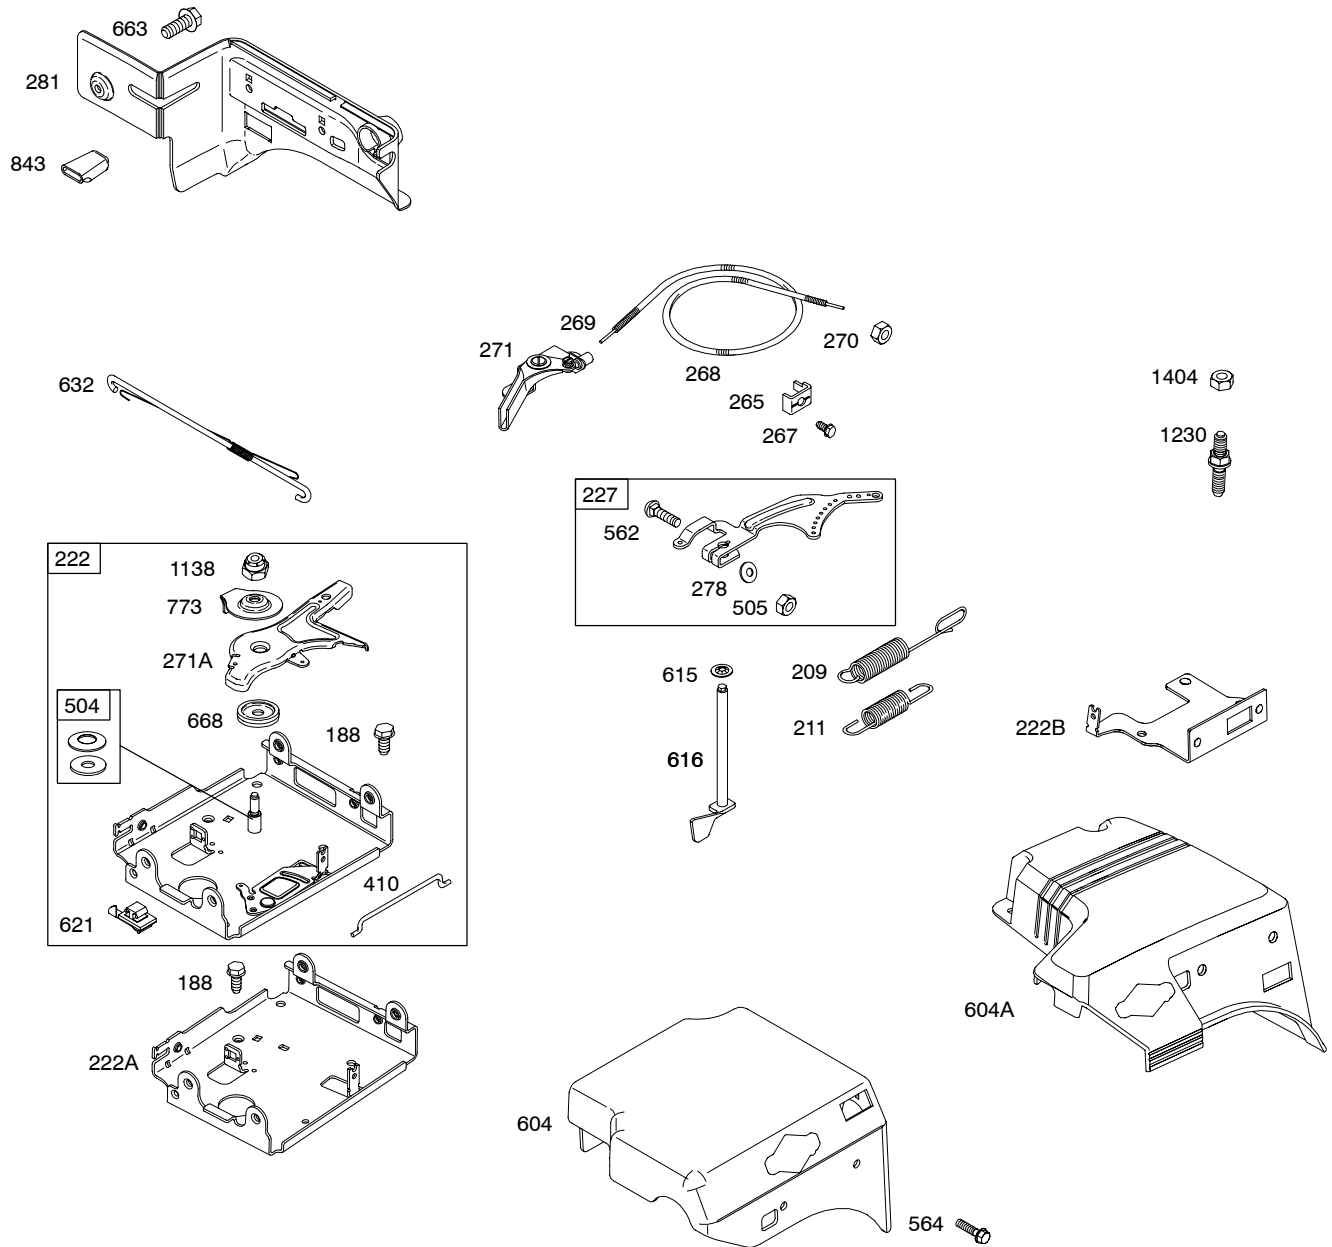


Illustrations cover a range of engines. Parts shown without corresponding text are not used on this engine.



6662-8

Assemblies include all parts shown in frames.

07/11/2005

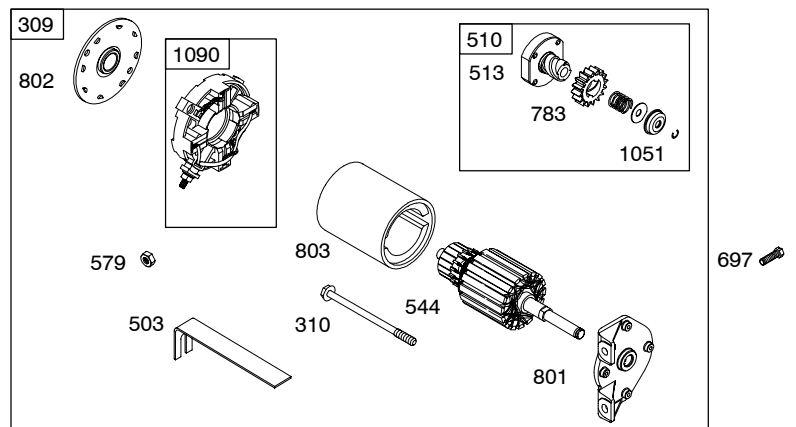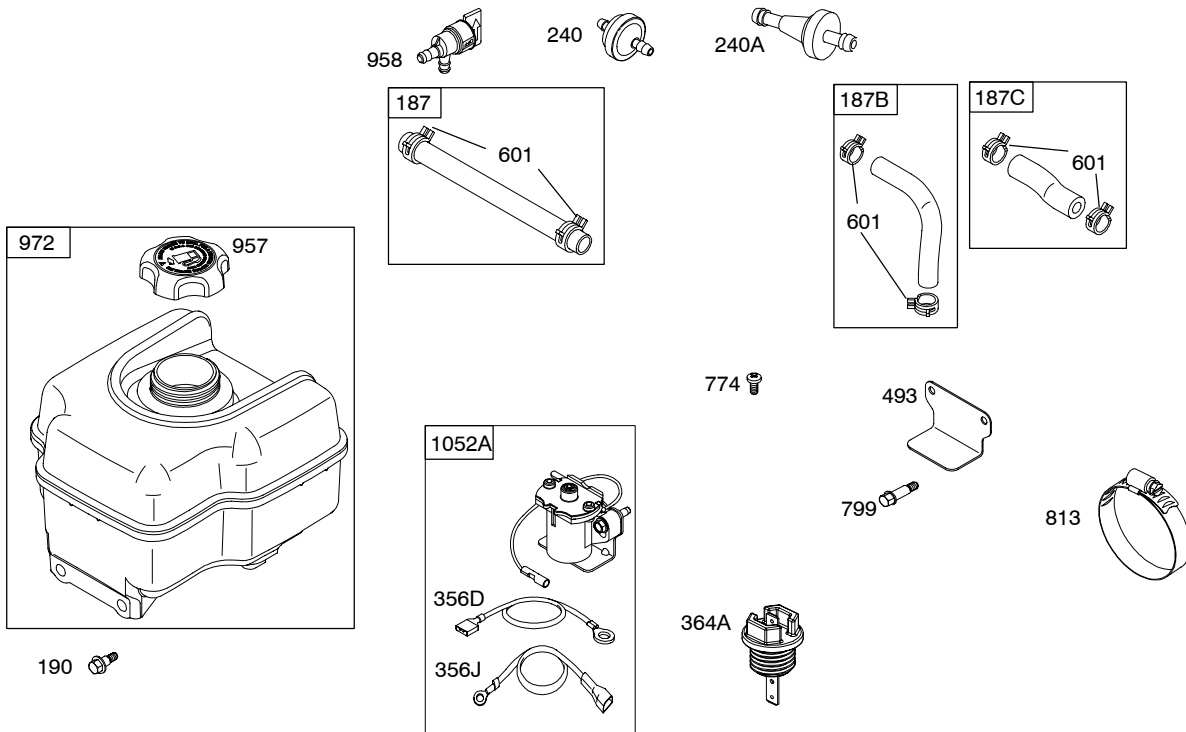

207400

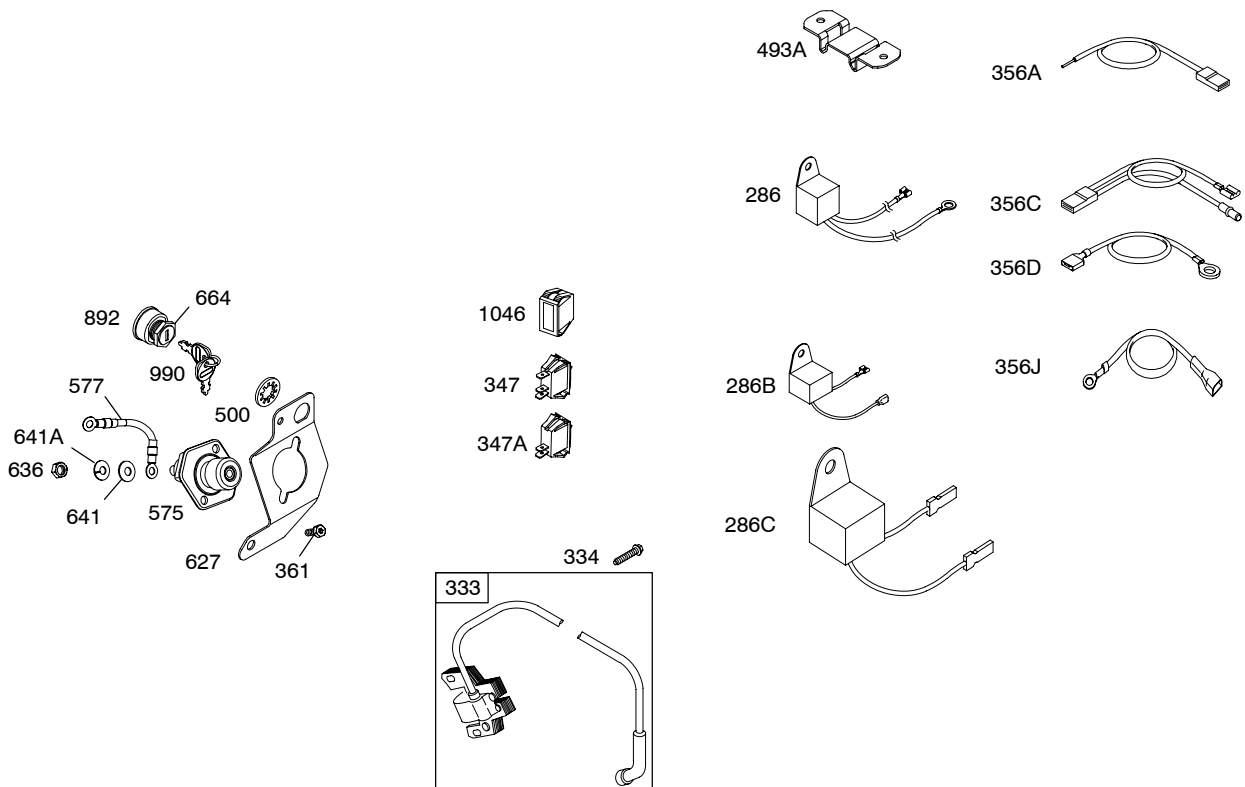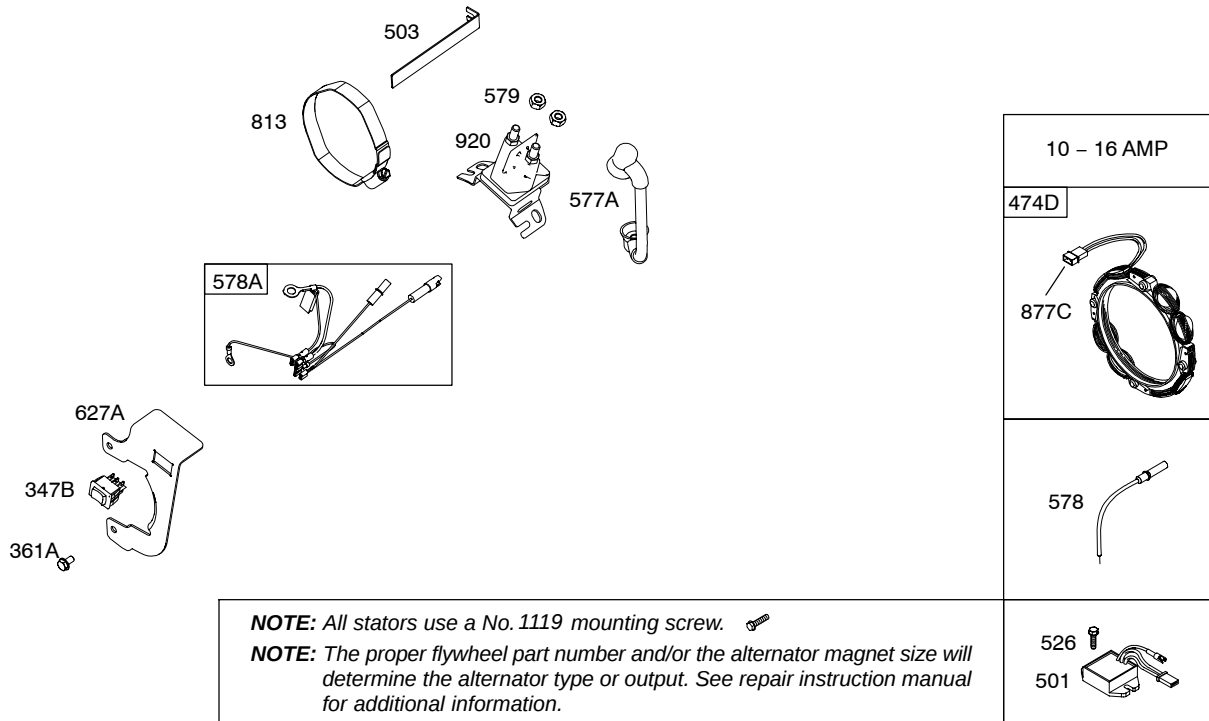

Illustrations cover a range of engines. Parts shown without corresponding text are not used on this engine.

6662-10

Assemblies include all parts shown in frames.

07/11/2005

207400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	696314	Cylinder Assembly	26	792026	Ring Set (Standard) (Used After Code Date 05081000)	58	693389	Rope-Starter (Cut To Required Length)
2	698340	Kit-Bushing/Seal (Magneto Side)				59	805957	Insert-Grip
3	★391086	Seal-Oil (Magneto Side)		694004	Ring Set (Used Before Code Date 05081100)	60	490652	Grip-Starter Rope
5	697233	Head-Cylinder (Used After Code Date 01102800)			----- Note -----	65	690759	Screw (Rewind Starter)
		----- Note -----		792073	Ring Set (.020" Oversize) (Used After Code Date 05081000)	81	695400	Lock-Muffler Screw
		698040 Head-Cylinder (Used Before Code Date 01102900)				95A	690718	Screw (Throttle Valve)
7	★△694872	Gasket-Cylinder Head		694008	Ring Set (.020" Oversize) (Used Before Code Date 05081100)	97A	696387	Shaft-Throttle
11C	696796	Tube-Breather	27	690975	Lock-Piston Pin	98A	●695408	Kit-Idle Speed
12	★694953	Gasket-Crankcase	28	696581	Pin-Piston	104A	●694918	Pin-Float Hinge
13	690360	Screw (Cylinder Head)	29	694691	Rod-Connecting	105A	●696136	Valve-Float Needle
15	691686	Plug-Oil Drain	30	694692	Dipper-Connecting Rod	108A	696143	Valve-Choke
16	695462	Crankshaft				109E	696735	Shaft-Choke Used on Type No(s). 0131.
		----- Note -----	32	690976	Screw (Connecting Rod)	117	●696134	Jet-Main (Standard)
		694678 Crankshaft Used on Type No(s). 0121, 0123, 0125, 0126, 0130, 0131.	33	499596	Valve-Exhaust	118	696135	Jet-Main (High Altitude)
17	695434	Bearing-Ball	34	697464	Valve-Intake	121A	696146	Kit-Carburetor Overhaul (Nikki)
17A	691069	Bearing-Ball	35	694865	Spring-Valve (Intake)	122★△●	694876	Spacer-Carburetor
18	695372	Cover-Crankcase	36	694865	Spring-Valve (Exhaust)	125A	695919	Carburetor (Nikki)
19	698340	Kit-Bushing/Seal (PTO Side)	42	499586	Keeper-Valve	125B	699966	Carburetor (Nikki) Used on Type No(s). 0131.
20	★391086	Seal-Oil (PTO Side)	45	690977	Tappet-Valve			
21	281658	Cap-Oil Fill	46	790496	Camshaft	127A	●690727	Plug-Welch
22	695174	Screw (Crankcase Cover/Sump)	51★△●	694874	Gasket-Intake	130A	696139	Valve-Throttle
			51A★△●	694875	Gasket-Intake	133A	694914	Float-Carburetor
23	694954	Flywheel Used on Type No(s). 0115, 0121, 0122, 0126, 0130.	53	694869	Stud (Carburetor)	135	696142	Tube-Fuel Transfer
		----- Note -----	55	695288	Housing-Rewind Starter	137A	●◆695426	Gasket-Float Bowl
		695485 Flywheel Used on Type No(s). 0117, 0123, 0124, 0125, 0127.				141A	696145	Kit-Choke Shaft
24	222698	Key-Flywheel				146	690979	Key-Timing
25	792117	Piston Assembly (Standard)						
		----- Note -----						
		792144 Piston Assembly (.020" Oversize)						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

6662-11

Assemblies include all parts shown in frames.

07/11/2005

207400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
161	695384	Base–Air Cleaner (Metal)	222B	791753	Bracket–Control	286C	699952	Module–Oil Sensor (Used After Code Date 03010600)
161A	699960	Base–Air Cleaner (Metal)	227	694864	Lever–Governor Control			Used on Type No(s). 0124, 0125, 0127.
		Used on Type No(s). 0131.	240	394358	Filter–Fuel			699952 Module–Oil Sensor
163★◆	692277	Gasket–Air Cleaner			----- Note -----			(Used After Code Date 03092300)
185	690958	Nut (Air Cleaner Base)			298090 Filter–Fuel			Used on Type No(s). 0129, 0132.
187	791766	Line–Fuel (Used After Code Date 05063000)	240A	694485	Filter–Fuel			----- Note -----
		----- Note -----	265	691024	Clamp–Casing			699951 Module–Oil Sensor
		691050 Line–Fuel (Cut To Required Length)	267	692577	Screw (Casing Clamp)			(Used After Code Date 03010500)
		(Used Before Code Date 05070100)	268	691025	Casing–Control Wire (Cut To Required Length)			Used on Type No(s). 0117, 0121, 0122, 0123.
187B	791834	Line–Fuel (Used After Code Date 05063000)	269	691026	Wire–Control (Cut To Required Length)	300	697252	Muffler (Used After Code Date 02012000)
		----- Note -----	270	691027	Nut (Control Wire Casing)			----- Note -----
		695482 Line–Fuel (Used Before Code Date 05070100)	271	691028	Lever–Control			695311 Muffler (Used Before Code Date 02012100)
187C	791871	Line–Fuel (Used After Code Date 05063000)	271A	695381	Lever–Control	304	791479	Housing–Blower (Used After Code Date 01102800)
		----- Note -----	278	792008	Washer (Governor Control Lever)			----- Note -----
		695483 Line–Fuel (Used Before Code Date 05070100)	281	697268	Panel–Control (Used After Code Date 01102800)			696476 Housing–Blower (Electric Start)
188	690877	Screw (Control Bracket)			----- Note -----			(Used After Code Date 01102900)
190	692127	Screw (Fuel Tank)	286	695186	Module–Oil Sensor (Used Before Code Date 03010600)	305	691108	Screw (Blower Housing)
192	690083	Adjuster–Rocker Arm			Used on Type No(s). 0121, 0122.	306	697240	Shield–Cylinder (Used After Code Date 01102800)
209	694867	Spring–Governor	286B	696058	Module–Oil Sensor (Used Before Code Date 03010600)			----- Note -----
211	695307	Spring–Governed Idle (Use With Nikki Carburetor)			Used on Type No(s). 0117, 0123, 0124, 0125.			694677 Shield–Cylinder (Used Before Code Date 01102900)
219	693578	Gear–Governor						
220	691724	Washer (Governor Gear)						
222	695380	Bracket–Control						
222A	694866	Bracket–Control (Used on Type No(s). 0121, 0123, 0125, 0131.						

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

△ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

207400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
307	691660	Screw (Cylinder Shield)	369	695422	Spring-Float Bowl	504	695383	Washer Set-Friction
309	695479	Motor-Starter Used on Type No(s). 0117, 0123, 0124, 0125, 0127.	383	19374	Wrench-Spark Plug	505	691251	Nut (Governor Control Lever)
310	690323	Screw (Starter Motor)	410	695382	Link-Control	510	693699	Drive-Starter
332	694685	Nut (Flywheel)	412	690958	Nut (Air Cleaner Cover)	513	692024	Clutch-Drive
333	715231	Armature-Magneto	415	691363	Plug	526	690297	Screw (Regulator) Used on Type No(s). 0117, 0123, 0124, 0125, 0127.
334	691061	Screw (Magneto Armature)	425	694515	Screw (Air Cleaner Cover) Used on Type No(s). 0131.	529	791822	Grommet
337	491055	Plug-Spark	445	481588	Filter-Air Cleaner Cartridge Used on Type No(s). 0131.	535	696315	Filter-Air Cleaner Foam
347	698338	Switch-Rocker Used on Type No(s). 0115, 0126.	455	694683	Cup-Flywheel	544	692034	Armature-Starter
347A	697854	Switch-Rocker Used on Type No(s). 0121.	456	692299	Plate-Pawl Friction	552	694674	Bushing-Governor Crank
356A	692390	Wire-Stop Used on Type No(s). 0130.	459	281505	Pawl-Ratchet	562	691119	Bolt (Governor Control Lever)
356C	695295	Wire-Stop	474D	695466	Alternator (10 Amp Regulator) Used on Type No(s). 0117, 0123, 0124, 0125, 0127, 0129.	564	692198	Screw (Control Cover) Used on Type No(s). 0121, 0123, 0125, 0131.
356D	695366	Wire-Stop (Used Before Code Date 03082900) Used on Type No(s). 0124, 0125, 0127, 0129.	493	694861	Bracket-Mounting	575	692303	Switch-Starting Used on Type No(s). 0124, 0125, 0127.
		----- Note -----	493A	691177	Bracket-Mounting Used on Type No(s). 0117, 0123, 0124, 0125, 0127.	577	690630	Cable-Starter Used on Type No(s). 0124, 0125, 0127.
		695366 Wire-Stop (Used Before Code Date 03072400) Used on Type No(s). 0117, 0121, 0122, 0123.	500	691086	Washer (Key Switch) Used on Type No(s). 0124, 0125, 0127.	578	692306	Wire Assembly Used on Type No(s). 0127.
356J	699994	Wire-Stop (Used After Code Date 03082800) Used on Type No(s). 0124, 0125, 0127, 0129, 0132.	501	691185	Regulator Used on Type No(s). 0117, 0123, 0124, 0125, 0127.	579	691029	Nut (Starter Cable)
		699994 Wire-Stop (Used After Code Date 03072300) Used on Type No(s). 0117, 0121, 0122, 0123.	503	691532	Strap-Starter Used on Type No(s). 0117, 0123, 0124, 0125, 0127.	592	690800	Nut (Rewind Starter)
358	695438	Gasket Set-Engine				597	691696	Screw (Pawl Friction Plate)
361	691681	Screw (Starting Switch)				601	95162	Clamp-Hose
364A	699947	Terminal-Oil Plug Used on Type No(s). 0117, 0121, 0122, 0123, 0124, 0125, 0127, 0129, 0132.				604	697326	Cover-Control Used on Type No(s). 0121, 0123, 0125, 0131.
						604A	791752	Cover-Control

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**6662-13**

Assemblies include all parts shown in frames.

07/11/2005

207400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
608	695287	Starter-Rewind	697	690372	Screw (Drive Cap) Used on Type No(s). 0117, 0123, 0124, 0125.	843	695588	Sleeve-Lever
613	695312	Screw (Muffler)				868	★△690968	Seal-Valve
613A	695399	Screw (Muffler)				877C	399916	Wire/Connector- Alternator
615	694676	Retainer-Governor Shaft	718	690959	Pin-Locating (Cylinder)	883	★△695398	Gasket-Exhaust (Used Before Code Date 02012000)
616	694675	Crank-Governor	718A	695178	Pin-Locating (Head) Used on Type No(s). 0117, 0123.	883A	★△697255	Gasket-Exhaust (Used After Code Date 02011900)
621	692310	Switch-Stop Used on Type No(s). 0124, 0125, 0127, 0129, 0130.	727A	697465	Cover-Starter Drive Used on Type No(s). 0117, 0123, 0124, 0125, 0127.	892	392833	Switch-Key Used on Type No(s). 0124, 0125, 0127.
627	696064	Bracket-Stopschwitch Used on Type No(s). 0124, 0125, 0127.	732	691097	Screw (Starter Drive Cover) Used on Type No(s). 0117, 0123, 0127.	914	693732	Screw (Rocker Cover)
632	695917	Link-Throttle (Use With Nikki Carburetor)	741	691288	Gear-Timing	951	699961	Lever-Choke
633B	◆690998	Seal Choke- Throttle Shaft	742	692564	Retainer-E Ring	957	694261	Cap-Fuel Tank (Plastic)
635	710901	Boot-Spark Plug	746	694679	Gear-Idler	958	698180	Valve-Fuel Shut Off (Plastic)
636	696198	Nut (Starting Switch) Used on Type No(s). 0124, 0125, 0127.	773	694258	Retainer	967	491435	Filter-Pre Cleaner
			774	695447	Screw (Stop Wire)	968	697061	Cover-Air Cleaner
641	691075	Washer (Starting Switch) Used on Type No(s). 0124, 0125, 0127.	783	693713	Gear-Pinion	968A	692321	Cover-Air Cleaner Used on Type No(s). 0131.
			798	697890	Screw (Rocker Arm)	972	694260	Tank-Fuel (Plastic)
641A	690282	Washer (Starting Switch)	799	695446	Screw (Oil Sensor)	975A	696138	Bowl-Float
643	696264	Retainer-Air Filter	801	694482	Cap-Drive	977A	◆696147	Gasket Set-Carburetor (Use With Nikki Carburetor)
663	692577	Screw (Control Panel) ----- Note ----- 690372 Screw (Control Panel) Used on Type No(s). 0124, 0125, 0127.	802	691286	Cap-End	990	691959	Key Set Used on Type No(s). 0124, 0125, 0127.
			803	693757	Housing-Starter	951	699961	Shaft-Choke Used on Type No(s). 0131.
664	691087	Nut (Key Switch) Used on Type No(s). 0124, 0125, 0127.	813	690635	Clamp Used on Type No(s). 0117, 0123, 0124, 0125, 0127.	1005	694684	Fan-Flywheel
			832	695386	Guard-Muffler	1019	695442	Kit-Label
668	694257	Spacer (Control Bracket)	836	695312	Screw (Muffler Guard) (Used After Code Date 01061000) ----- Note ----- 690367 Screw (Muffler Guard) (Used Before Code Date 01061100)	1022	★△690971	Gasket-Rocker Cover
689	691855	Spring-Friction				1023	697691	Cover-Rocker
						1026	695177	Rod-Push
						1029	690972	Arm-Rocker

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

6662-14

Assemblies include all parts shown in frames.

07/11/2005

207400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1036	790466	Label-Emissions (Used After Code Date 04063000) ----- Note ----- 698237 Label- Emissions (Used After Code Date 02063000 and Before Code Date 04070100). 695703 Label- Emissions (Used Before Code Date 02070100)	1051	691265	Ring-Retaining	1194	691876	Seal-O Ring (Plug)
			1052A	790274	Sensor-Oil	1210	498144	Pulley/Spring Assembly (Pulley)
			1058	275092	Manual-Operator's	1211	498144	Pulley/Spring Assembly (Spring)
			1070	691058	Screw (Flywheel Fan)	1230	791754	Stud (Control Bracket)
			1090	691293	Retainer-Brush	1330	272147	Repair Manual
			1095	695440	Gasket Set-Valve	1404	696757	Nut (Control Cover)
			1100	690973	Pivot-Rocker Arm			
			1119	691183	Screw (Alternator)			
			1127A	695407	Screw (Float Bowl)			
1046	691337	Plug-Blower Housing Used on Type No(s). 0125, 0131.	1138	694255	Nut (Control Bracket)			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**6662-15**

Assemblies include all parts shown in frames.

07/11/2005