



20C400

Illustrated Parts List

Model Series

20C400

TYPE NUMBERS
0111 Through 0372.

TABLE OF CONTENTS

Air Cleaner	5
Alternator	8
Blower Housing/Shrouds	6
Camshaft	2
Carburetor	4
Controls	7
Crankcase Cover	2
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electric Starter	8
Exhaust System	5
Flywheel	6
Fuel Supply	8
Governor Spring	7
Ignition	9
Kit/Gasket Sets - Carburetor	4
Kit/Gasket Sets - Engine	2
Kit/Gasket Sets - Valves	3
Lubrication	2
Piston, Rings, Connecting Rod	2
Rewind Starter	6
Valves	3


BRIGGS & STRATTON



PRINTED IN U.S.A.


COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

20C400

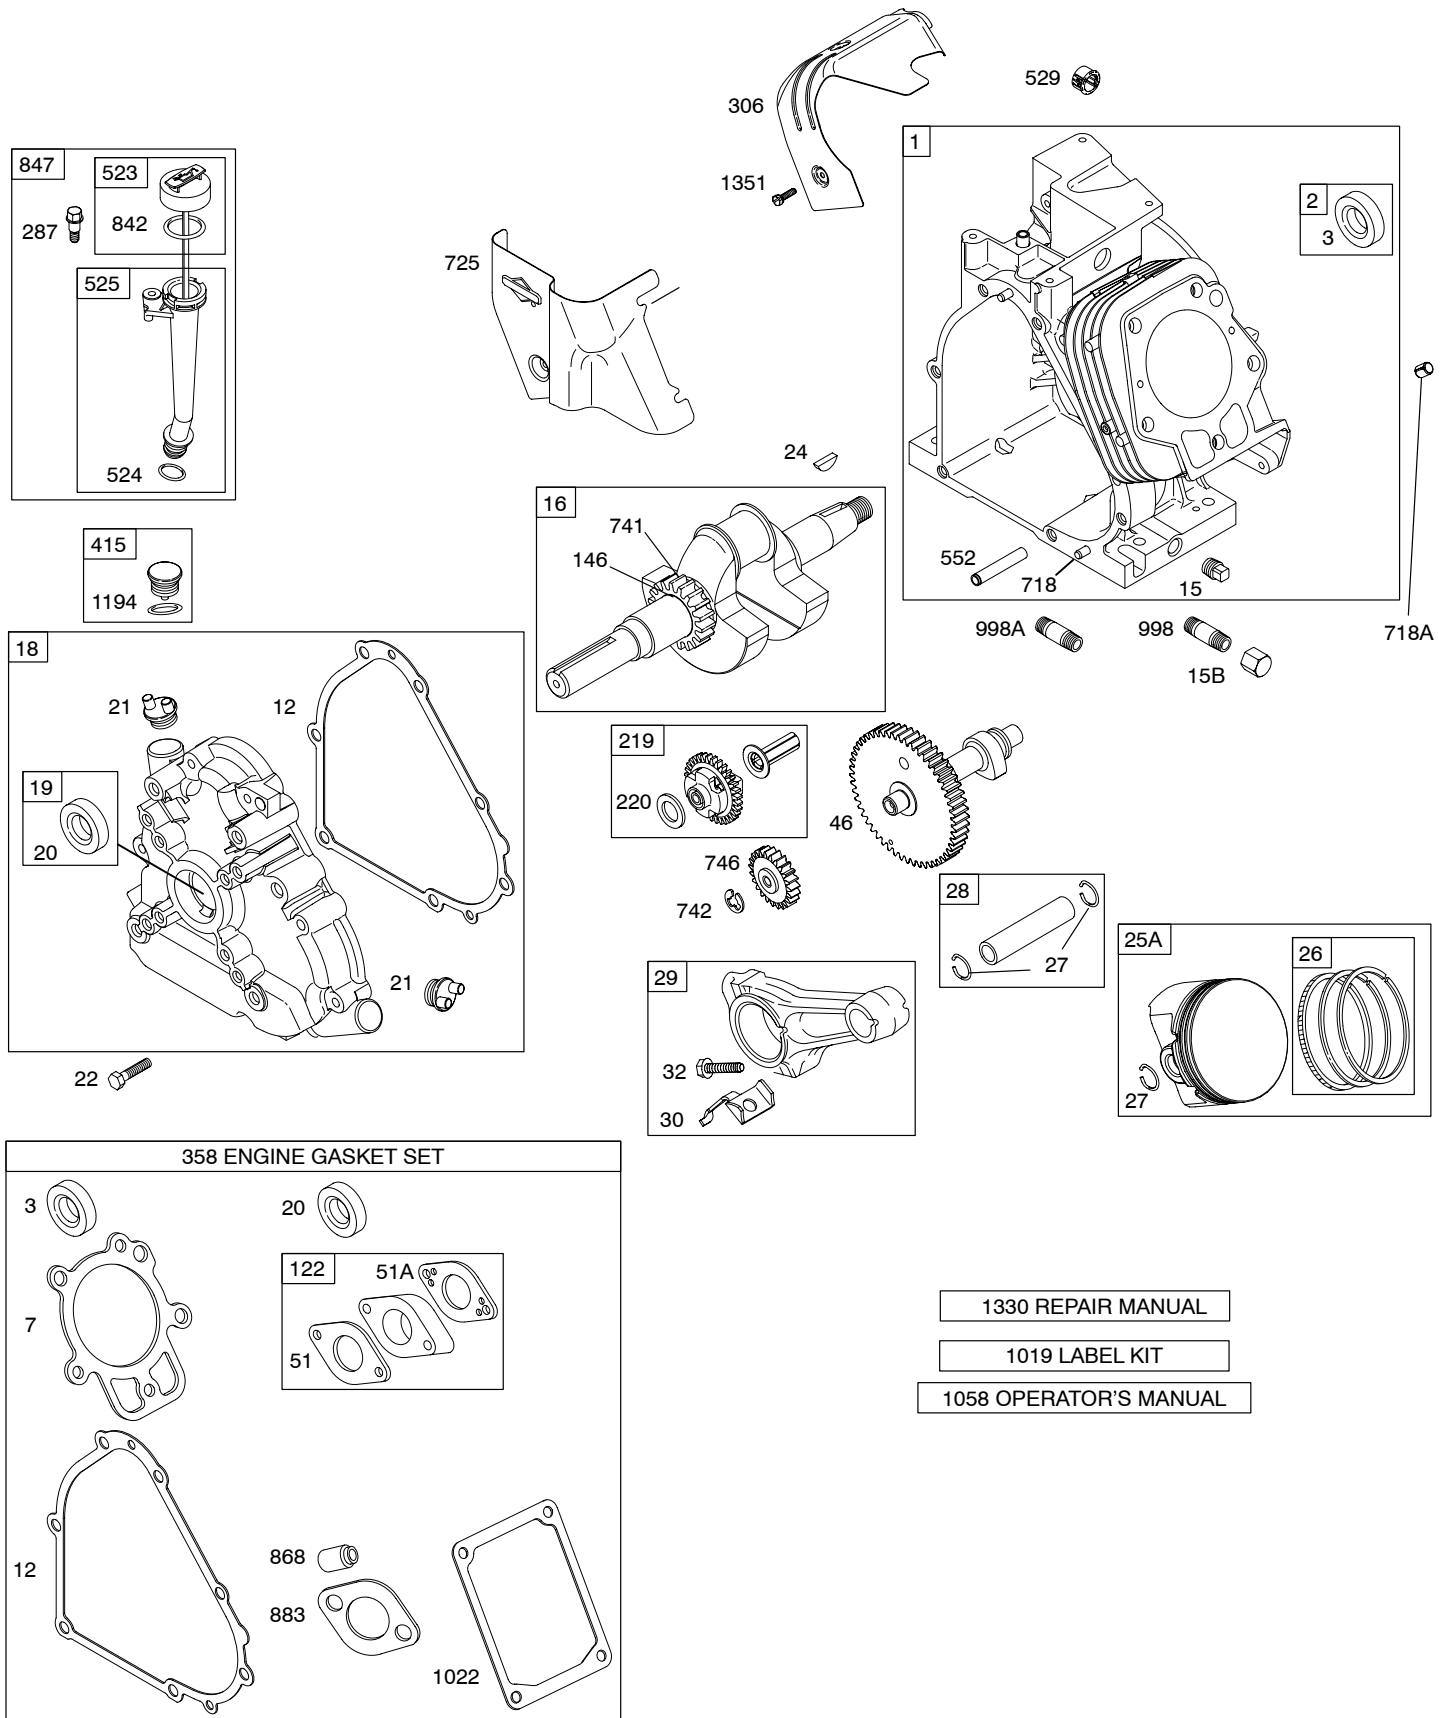

1330 REPAIR MANUAL
1019 LABEL KIT
1058 OPERATOR'S MANUAL

Illustrations cover a range of engines. Parts shown without corresponding text are not used on this engine.
5060-2 Assemblies include all parts shown in frames. 09/26/2005

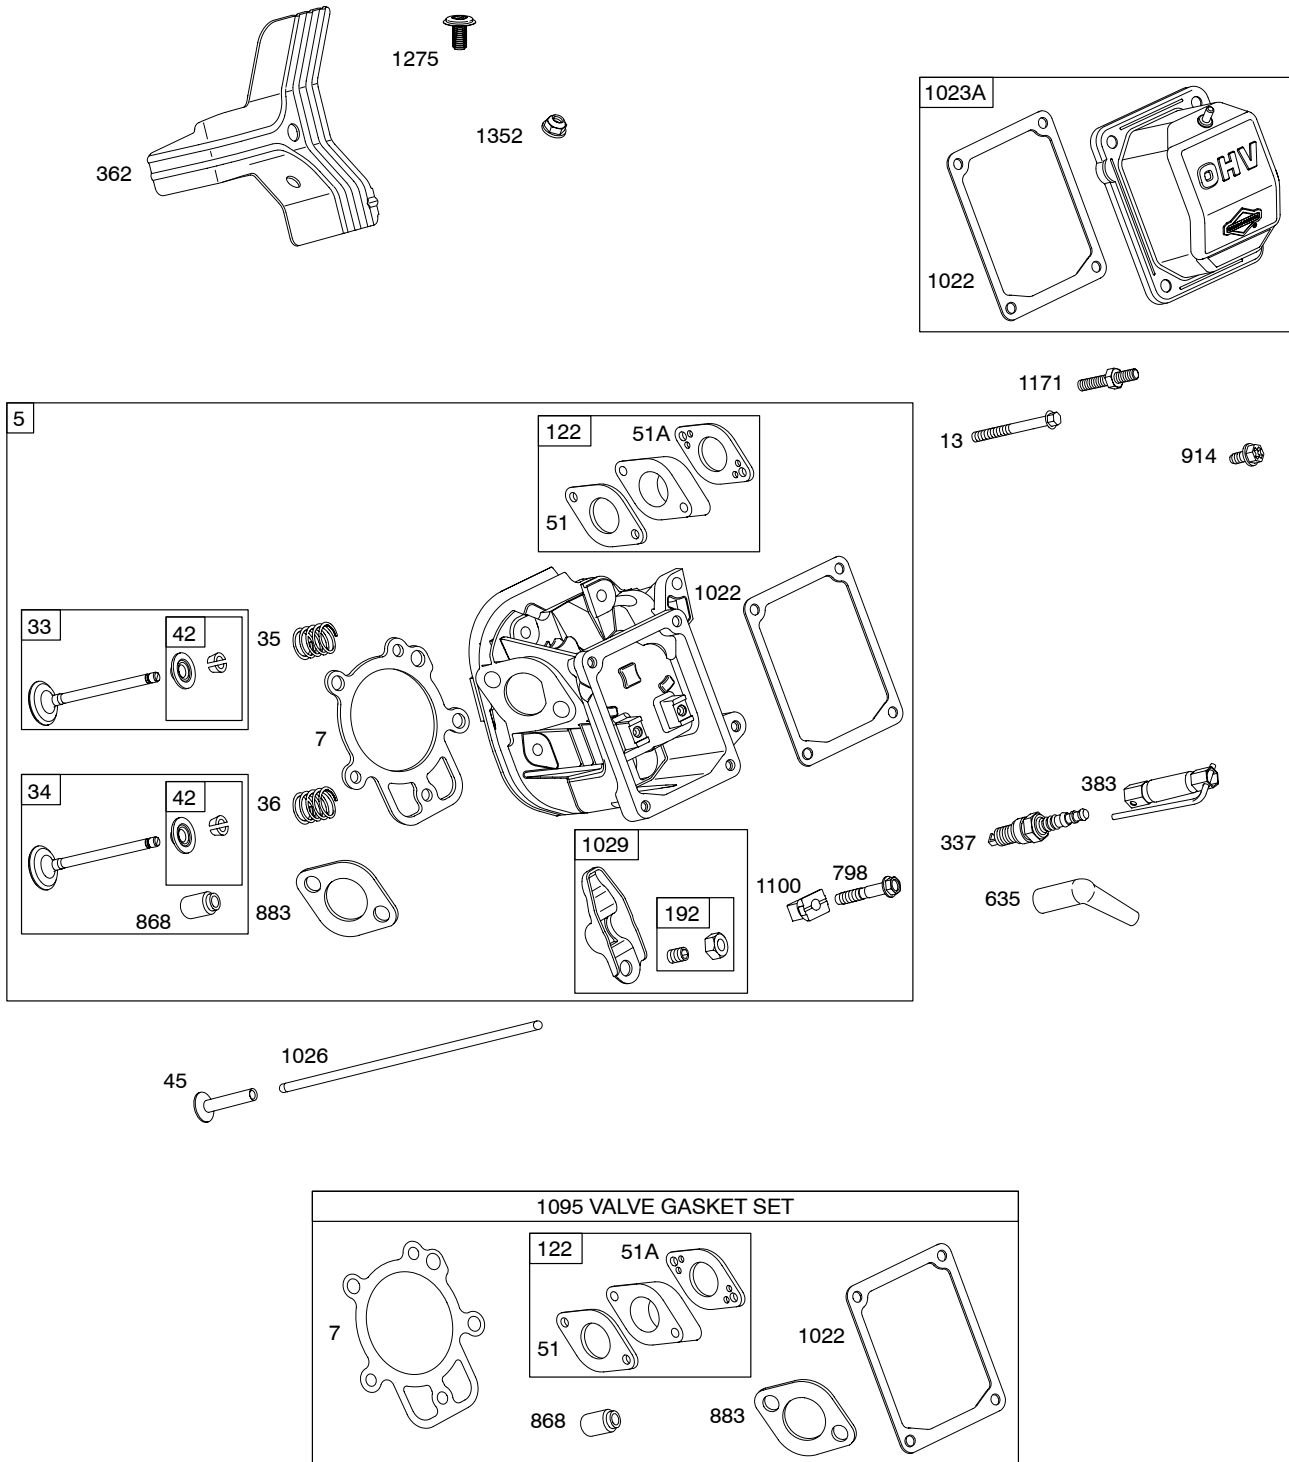




Illustrations cover a range of engines. Parts shown without corresponding text are not used on this engine.





5060-3

Assemblies include all parts shown in frames.

09/26/2005



20C400

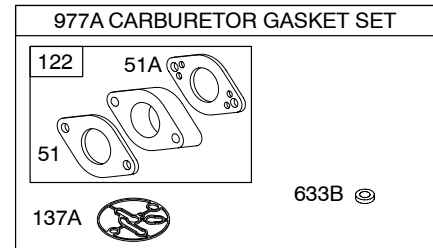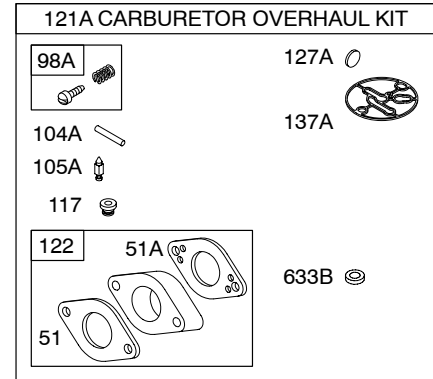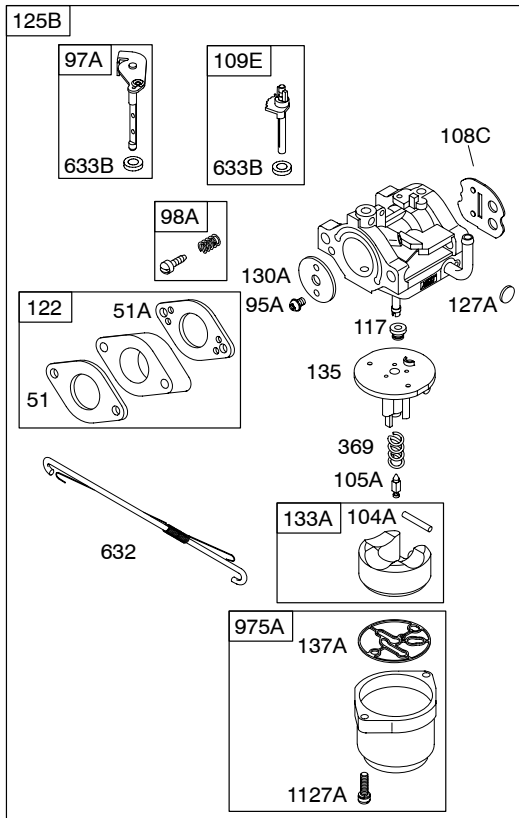

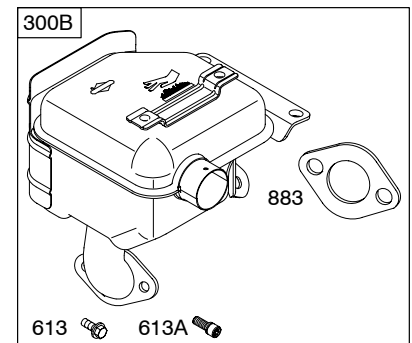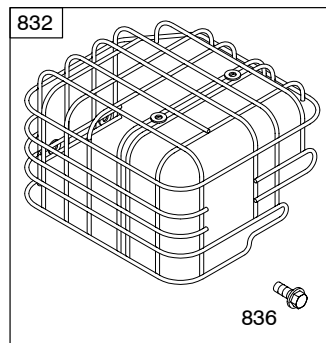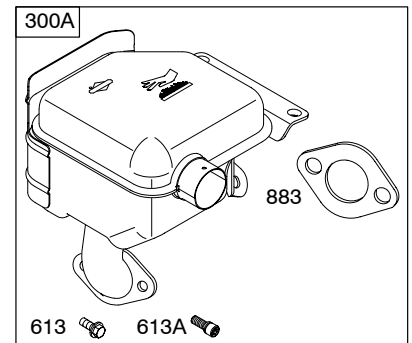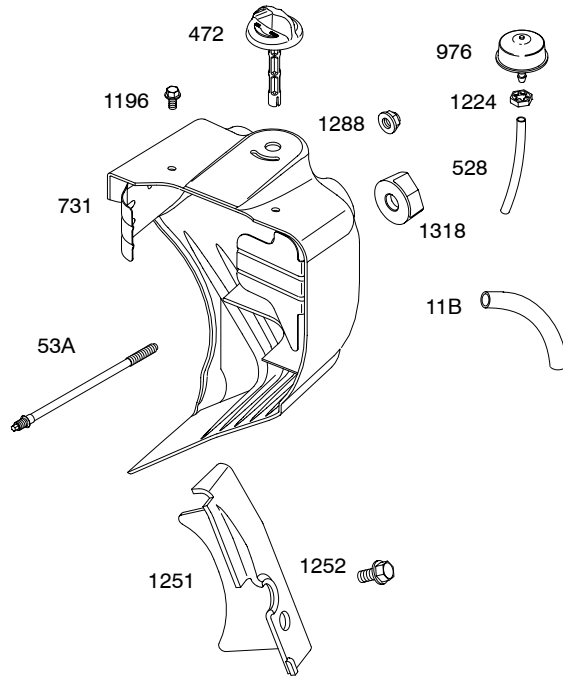

Illustrations cover a range of engines. Parts shown without corresponding text are not used on this engine.
5060-5 Assemblies include all parts shown in frames. **09/26/2005**

20C400






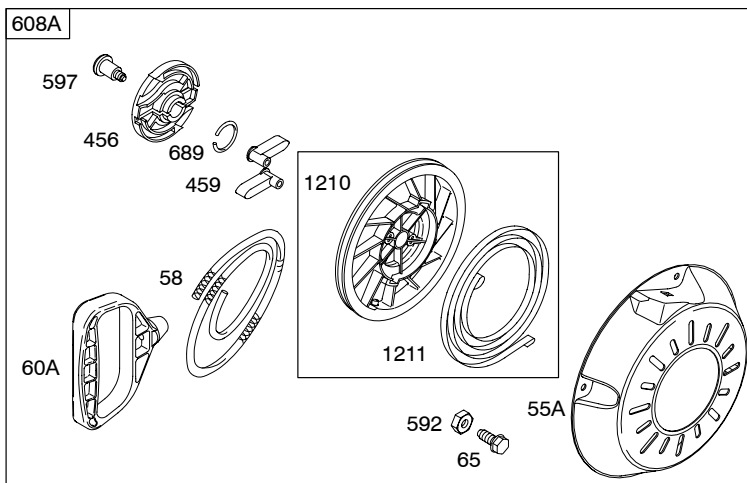
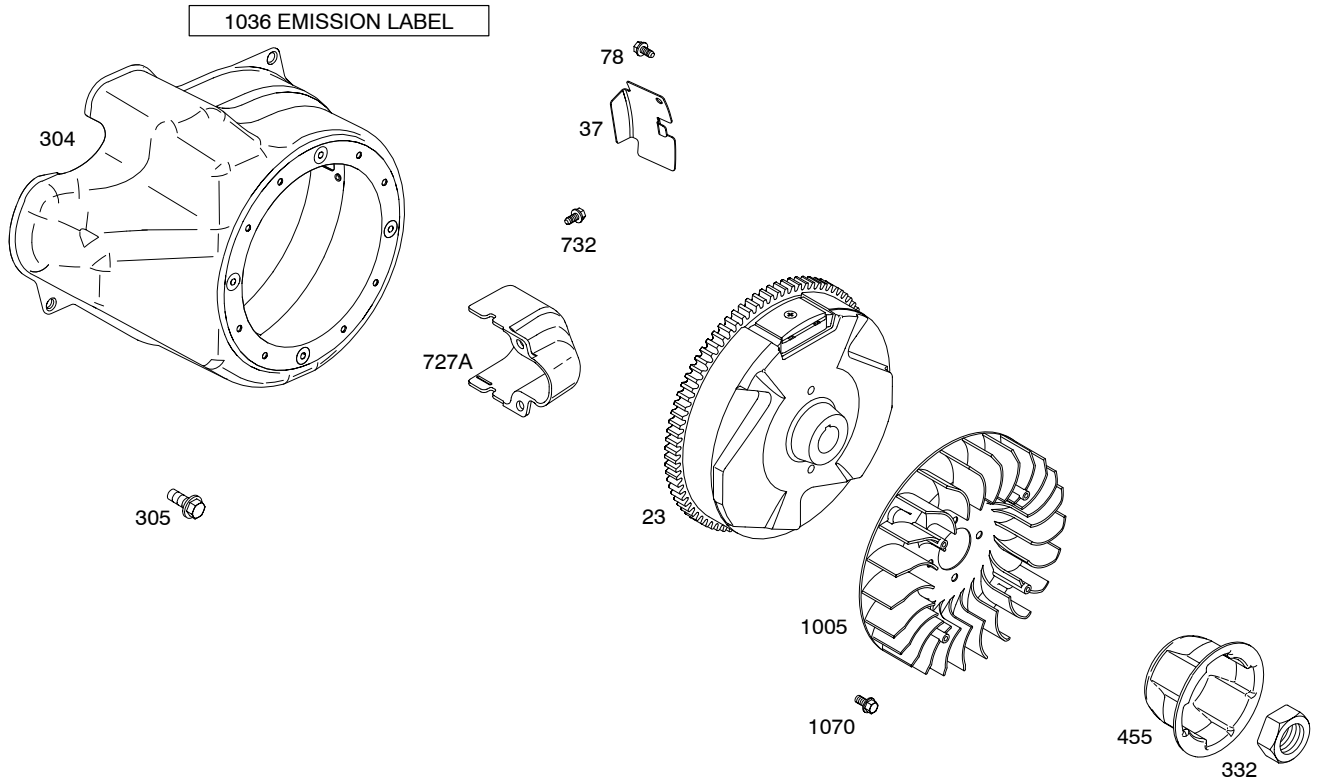


Illustrations cover a range of engines. Parts shown without corresponding text are not used on this engine.

5060-6





Assemblies include all parts shown in frames.


09/26/2005

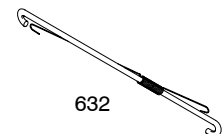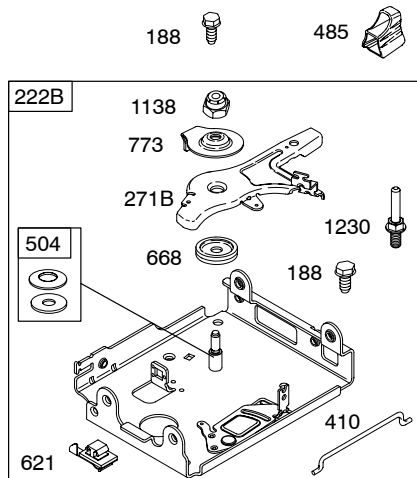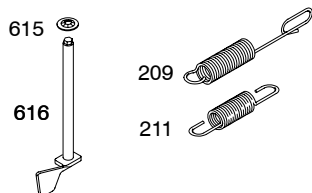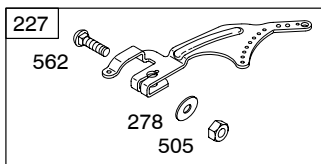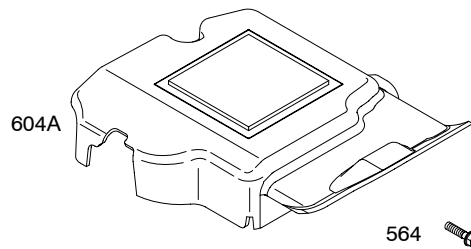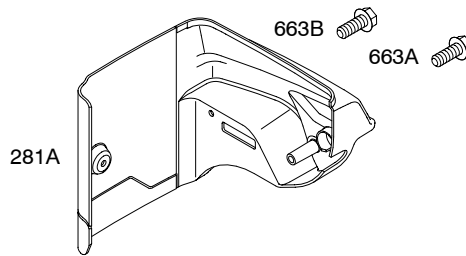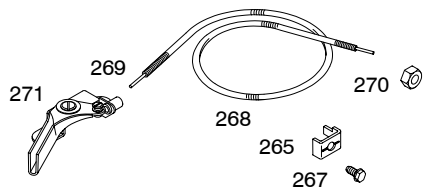





Illustrations cover a range of engines. Parts shown without corresponding text are not used on this engine.
5060-7 Assemblies include all parts shown in frames. **09/26/2005**

20C400

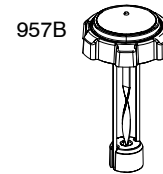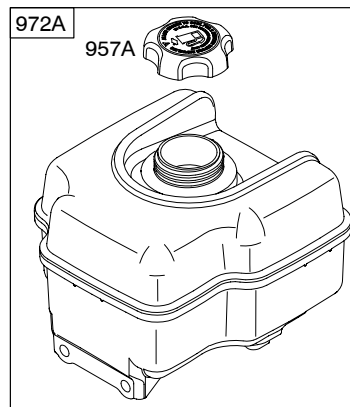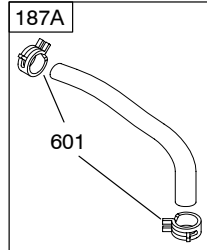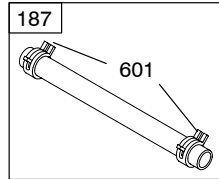

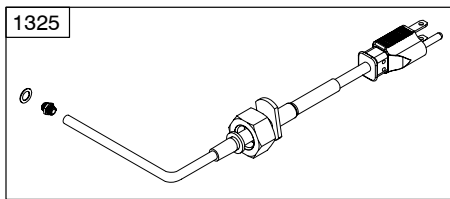

AC ONLY	DC ONLY	DUAL CIRCUIT	DUAL CIRCUIT
474	474A	474B	474H
NOTE: All stators use a No. 1119 mounting screw. NOTE: The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information.		878	878

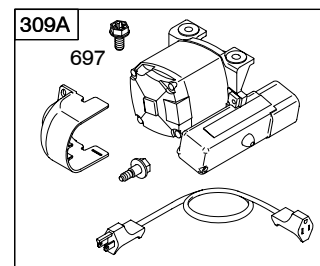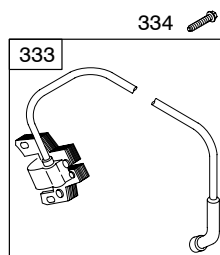

Illustrations cover a range of engines. Parts shown without corresponding text are not used on this engine.

5060-9

Assemblies include all parts shown in frames.

09/26/2005

20C400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	695464	Cylinder Assembly	23	695485	Flywheel	51	★♦♦694874	Gasket-Intake
2	698340	Kit-Bushing/Seal (Magneto Side)	24	222698	Key-Flywheel	51A	★♦♦694875	Gasket-Intake
3	★391086	Seal-Oil (Magneto Side)	25	792117	Piston Assembly (Standard)	53A	696753	Stud (Carburetor)
5	697233	Head-Cylinder (Used After Code Date 01102800).			----- Note -----	55A	696710	Housing-Rewind Starter
		----- Note -----		792144	Piston Assembly (.020" Oversize)	58	693389	Rope-Starter (Cut to Required- Length)
		698040 Head-Cylinder (Used Before Code Date 01102900).	26	792026	Ring Set (Standard) (Used After Code Date 05081000)	60A	695740	Grip-Starter Rope
7	★Δ694872	Gasket-Cylinder Head			----- Note -----	65	695453	Screw (Rewind Starter)
11B	696750	Tube-Breather		694004	Ring Set (Standard) (Used Before Code Date 05081100)	78	695724	Screw (Flywheel Guard)
12	★694953	Gasket-Crankcase		792073	Ring Set (.020" Oversize) (Used After Code Date 05081000)	95A	690718	Screw (Throttle Valve)
13	690360	Screw (Cylinder Head)		694008	Ring Set (.020" Oversize) (Used Before Code Date 05081100)	97A	696387	Shaft-Throttle
15	691686	Plug-Oil Drain				98A	♦695408	Kit-Idle Speed
15B	695757	Plug-Oil Drain	27	690975	Lock-Piston Pin	104A	♦694918	Pin-Float Hinge
16	695462	Crankshaft	28	690229	Pin-Piston	105A	♦696136	Valve-Float Needle
		----- Note -----	29	694691	Rod-Connecting	108C	696736	Valve-Choke
		696412 Crankshaft Used on Type No(s). 0148, 0160, 0206, 0372.	30	694692	Dipper-Connecting Rod	109E	696735	Shaft-Choke
18	696914	Cover-Crankcase	32	690976	Screw (Connecting Rod)	117	♦696134	Jet-Main (Standard)
19	698340	Kit-Bushing/Seal (PTO Side)	33	499596	Valve-Exhaust	118	696135	Jet-Main (High Altitude)
20	★391086	Seal-Oil (PTO Side)	34	697464	Valve-Intake	121A	696146	Kit-Carburetor Overhaul (Nikki Carburetor)
21	281658	Cap-Oil Fill	35	694865	Spring-Valve (Intake)	122	★Δ♦♦694876	Spacer-Carburetor
22	695174	Screw (Crankcase-Cover/ Sump)	36	694865	Spring-Valve (Exhaust)	125B	696737	Carburetor
			37	696701	Guard-Flywheel	127A	♦690727	Plug-Welch
			40	499586	Retainer-Valve	130A	696139	Valve-Throttle
			42	499586	Keeper-Valve	133A	694914	Float-Carburetor
			45	690977	Tappet-Valve	135	696142	Tube-Fuel Transfer
			46	790496	Camshaft	137A	♦♦695426	Gasket-Float Bowl
						146	690979	Key-Timing

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121 & 121A.

♦ Included in Carburetor Gasket Set-Ref. No. 977 & 977A.

Δ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text are not used on this engine.

5060-10

Assemblies include all parts shown in frames.

09/26/2005

20C400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
187	691050	Line-Fuel (Cut to Required Length)	281A	697400	Panel-Control ----- Note -----	332	694685	Nut (Flywheel)
187A	695429	Line-Fuel ----- Note -----			698081 Panel-Control Used on Type No(s). 0148, 0160, 0206.	333	715231	Armature-Magneto
		698080 Line-Fuel Used on Type No(s). 0148, 0206, 0372.	287	691693	Screw (Dipstick/Tube)	334	691061	Screw (Magneto Armature)
188	690877	Screw (Control Bracket)	300A	699211	Muffler	337	491055	Plug-Spark
190	692127	Screw (Fuel Tank)	300B	699222	Muffler (Used After Code Date 03041300). Used on Type No(s). 0160, 0206, 0372.	356G	696748	Wire-Stop
192	690083	Adjuster-Rocker Arm			----- Note -----	356J	696700	Wire-Stop
209	694867	Spring-Governor			698160 Muffler (Used Before Code Date 03041400). Used on Type No(s). 0160, 0206.	358	695438	Gasket Set-Engine
211	695307	Spring-Governor Idle	304	791479	Housing-Blower (Used After Code Date 01102800). ----- Note -----	362	698041	Shield-Spark Plug
219	693578	Gear-Governor			791478 Housing- Blower (Used Before Code Date 01102900).	369	695422	Spring-Float Bowl
220	691724	Washer (Governor Gear)	305	691108	Screw (Blower Housing)	383	19374	Wrench-Spark Plug
222B	698034	Bracket-Control ----- Note -----	306	697240	Shield-Cylinder (Used After Code Date 01102800). ----- Note -----	410	695382	Link-Control
		698161 Bracket- Control Used on Type No(s). 0111.			694677 Shield Cylinder (Used Before Code Date 01102900).	415	691363	Plug
227	694864	Lever-Governor Control	309A	696611	Motor-Starter ----- Note -----	455	697226	Cup-Flywheel
265	691024	Clamp-Casing			698608 Motor- Starter Used on Type No(s). 0160.	456	692299	Plate-Pawl Friction
267	692577	Screw (Casing Clamp)			698112 Motor-Starter Used on Type No(s). 0148, 0206, 0372.	459	281505	Pawl-Ratchet
268	691025	Casing-Control Wire (Cut to Required Length)				472	696752	Knob-Choke Shaft
269	691026	Wire-Control (Cut to Required Length)				474	694457	Alternator Used on Type No(s). 0206.
270	691027	Nut (Control Wire Casing)				474A	695730	Alternator
271	691028	Lever-Control				474B	696742	Alternator (Dual Circuit)
271B	696697	Lever-Control Used on Type No(s). 0111, 0148. ----- Note -----				474H	698230	Alternator (Dual Circuit)
		698035 Lever-Control Used on Type No(s). 0160.				485	695755	Knob-Control
278	792008	Washer (Governor Control Lever)				504	695383	Washer Set-Friction ----- Note -----
								694254 Washer Set Friction Used on Type No(s). 0148.
						505	691251	Nut (Governor Control Lever)
						523	695344	Dipstick
						524	691876	Seal-O Ring (Dipstick Tube)
						525	695343	Tube-Dipstick
						528	696751	Hose-Primer
						529	791822	Grommet
						552	694674	Bushing-Governor Crank
						562	691119	Bolt (Governor Control Lever)

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121 & 121A.

◆ Included in Carburetor Gasket Set-Ref. No. 977 & 977A.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text are not used on this engine.**5060-11**

Assemblies include all parts shown in frames.

09/26/2005

20C400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
564	696692	Screw (Rocker Cover)	718	690959	Pin-Locating (Cylinder)	883	★△695398	Gasket-Exhaust
592	690800	Nut (Rewind Starter)	718A	695178	Pin-Locating (Head)	892A	★△696749	Switch-Key
597	691696	Screw (Pawl Friction Plate)	725	696756	Shield-Heat	914	693732	Screw (Rocker Cover)
601	95162	Clamp-Hose	727A	697465	Cover-Starter Drive	930	696709	Guard-Rewind
604A	696758	Cover-Control	731	790222	Hood-Snow (Used After Code Date 01102800).	957A	694261	Cap-Fuel (Plastic)
608A	699335	Starter-Rewind	----- Note -----			957B	698109	Cap-Fuel (Plastic) Used on Type No(s). 0160, 0206, 0372.
613	695312	Screw (Muffler) (1/4" Diameter)	696755 Hood-Snow (Used Before Code Date 01102900).			958	698180	Valve-Fuel Shut Off (Plastic)
----- Note -----			732	691097	Screw (Starter Drive Cover)	972A	694260	Tank-Fuel (Plastic)
691003 Screw (Muffler) (10-24)			741	691288	Gear-Timing	975A	696138	Bowl-Float
613A	696705	Screw (Muffler) (Torx Head)	742	692564	Retainer-E Ring	976	790221	Primer-Carburetor (Used After Code Date 04061500).
615	694676	Retainer-Governor Shaft	746	694679	Gear-Idler	----- Note -----		
616	694675	Crank-Governor	773	694258	Retainer	695750 Primer- Carburetor (Used Before Code Date 04061600).		
621	692310	Switch-Stop	798	697890	Screw (Rocker Arm)	977A	◆696147	Gasket Set-Carburetor (Used With Nikki Carburetor)
632A	695917	Link-Throttle (Used With Nikki Carburetor)	832	698135	Guard-Muffler Used on Type No(s). 0160.	990A	695756	Key Set
633B	◆690998	Seal-Choke/Throttle Shaft	----- Note -----			998	695758	Pipe-Oil
635	710901	Boot-Spark Plug (Alternator)	699223 Guard-Muffler Used on Type No(s). 0206.			998A	696683	Pipe-Oil Used on Type No(s). 0148, 0160, 0206, 0372.
663A	696685	Screw (Control Panel) (1/2" Long)	836	691003	Screw (Muffler Guard)	1005	694684	Fan-Flywheel
663B	696704	Screw (Control Panel) (1-3/4" Long)	842	691031	Seal-O Ring (Dipstick Tube)	1019	696745	Kit-Label
668	694257	Spacer (Control Bracket)	847	695342	Dipstick/Tube Assembly	----- Note -----		
689	691855	Spring-Friction	868	★△690968	Seal-Valve	695751 Kit-Label Used on Type No(s). 0111.		
697	698113	Screw (Drive Cap)	877	393814	Wire/Connector- Alternator			
			877A	393456	Wire/Connector- Alternator Used on Type No(s). 0111.			
			878	398661	Harness-Alternator			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121 & 121A.

◆ Included in Carburetor Gasket Set-Ref. No. 977 & 977A.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text are not used on this engine.**5060-12**

Assemblies include all parts shown in frames.

09/26/2005

20C400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1022	★Δ690971	Gasket-Rocker Cover	1138	694255	Nut (Control Bracket)	1251	696762	Shield-Snow Used on Type No(s). 0148, 0160, 0206, 0372.
1023A	698042	Cover-Rocker Arm	1171	696754	Stud (Rocker Cover)	1252	691108	Screw (Snow Shield)
1026	695177	Rod-Push	1194	691876	Seal-O Ring (Plug)	1275	693732	Nut (Rocker Cover)
1029	690972	Arm-Rocker	1196	699166	Screw (Snow Hood) ----- Note -----	1288	696757	Nut (Snow Hood)
1036	790467	Label-Emission (Available from an Authorized Briggs & Stratton Service Dealer)		696685	Screw (Snow Hood)	1318	698111	Knob-Snow Hood
1058	275697	Owner's Manual	1210	498144	Pulley/Spring Assembly (Pulley)	1325	699358	Heater-Block Used on Type No(s). 0206, 0372.
1070	691058	Screw (Flywheel Fan)	1211	498144	Pulley/Spring Assembly (Spring)	1330	272147	Repair Manual
1095	695440	Gasket Set-Valve	1224	696824	Nut (Carburetor Primer)	1351	790017	Screw (Cylinder Shield)
1100	690973	Pivot-Rocker Arm	1230	696747	Stud (Control Bracket)	1352	790026	Nut (Spark Plug Shield)
1119	691183	Screw (Alternator)						
1127A	695407	Screw (Float Bowl)						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121 & 121A.

◆ Included in Carburetor Gasket Set-Ref. No. 977 & 977A.

Δ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text are not used on this engine.**5060-13**

Assemblies include all parts shown in frames.

09/26/2005