



219800

Illustrated Parts List

Model Series

219800

TYPE NUMBERS
0113 through 0389.

TABLE OF CONTENTS


Air Cleaner	6
Alternator	9
Blower Housing	6
Camshaft	3
Carburetor	5
Controls	8
Crankshaft	3
Cylinder	2
Cylinder Head	4
Electric Starter	7
Engine Sump	2
Exhaust System	6
Flywheel	7
Fuel Supply	8
Gasket Set - Engine	4
Gasket Set - Valve	4
Governor Spring	8
Ignition	8
Kit - Carburetor Overhaul	5
Lubrication	3
Piston, Rings, Connecting Rod	3
Valves	3

PRINTED IN U.S.A.




COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

219800

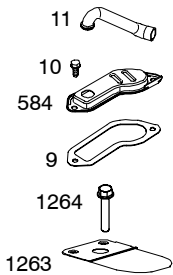

1058 OWNER'S MANUAL

1330 REPAIR MANUAL







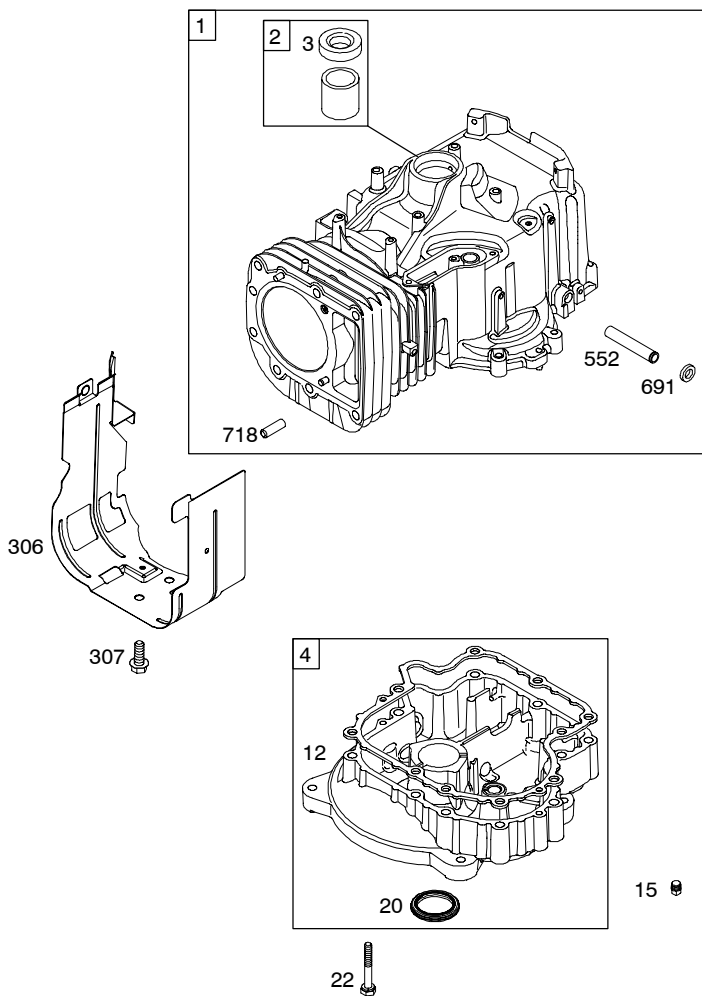


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5709-2

Assemblies include all parts shown in frames.




10/07/2005

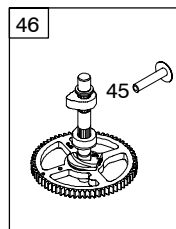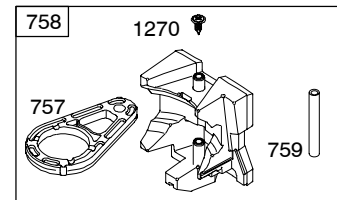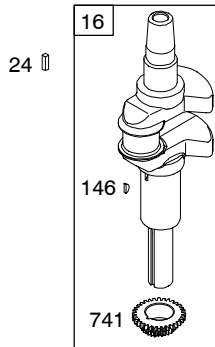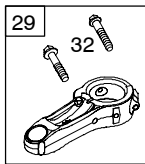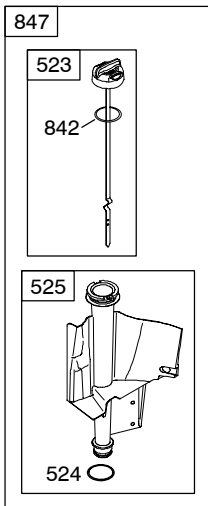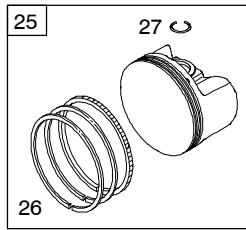








5709-3 *Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.* Assemblies include all parts shown in frames.

10/07/2005

219800

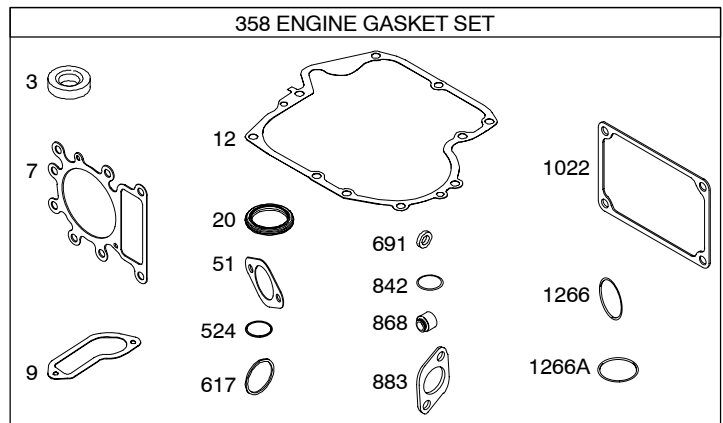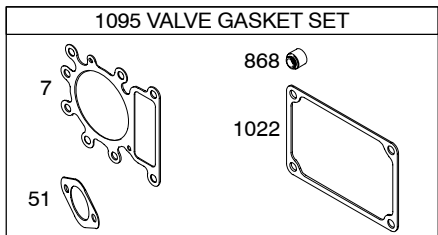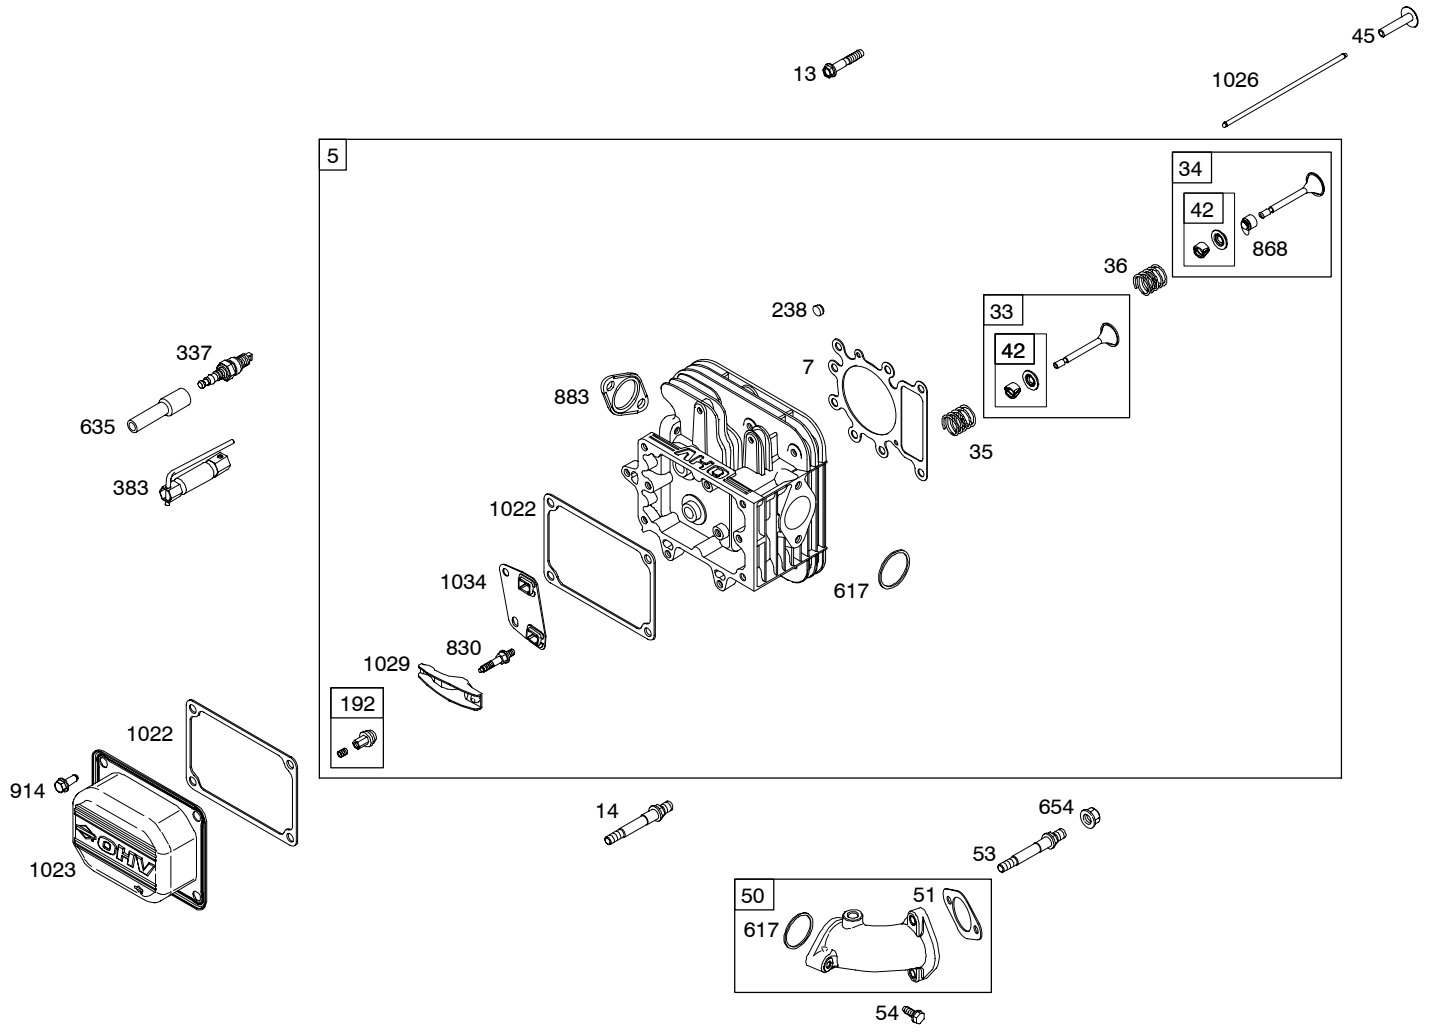







Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5709-4 Assemblies include all parts shown in frames. **10/07/2005**

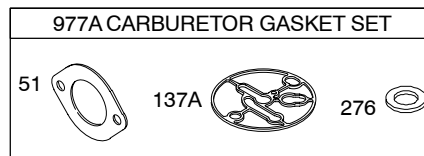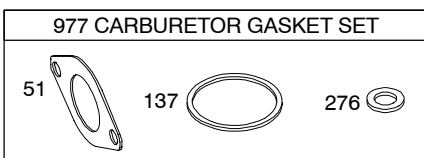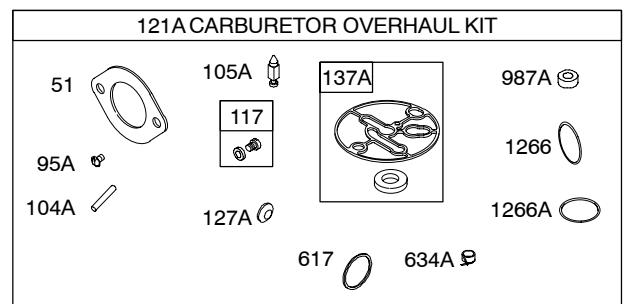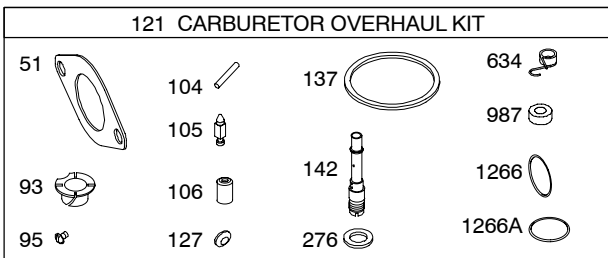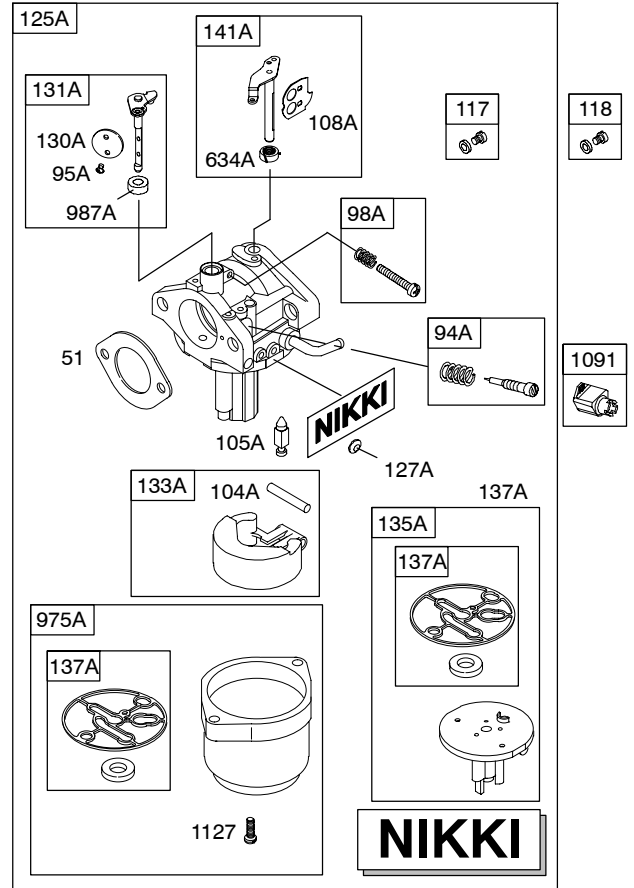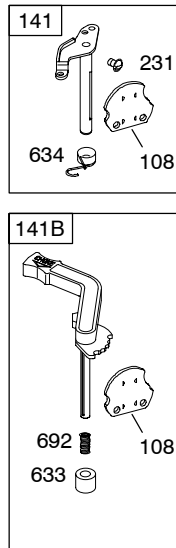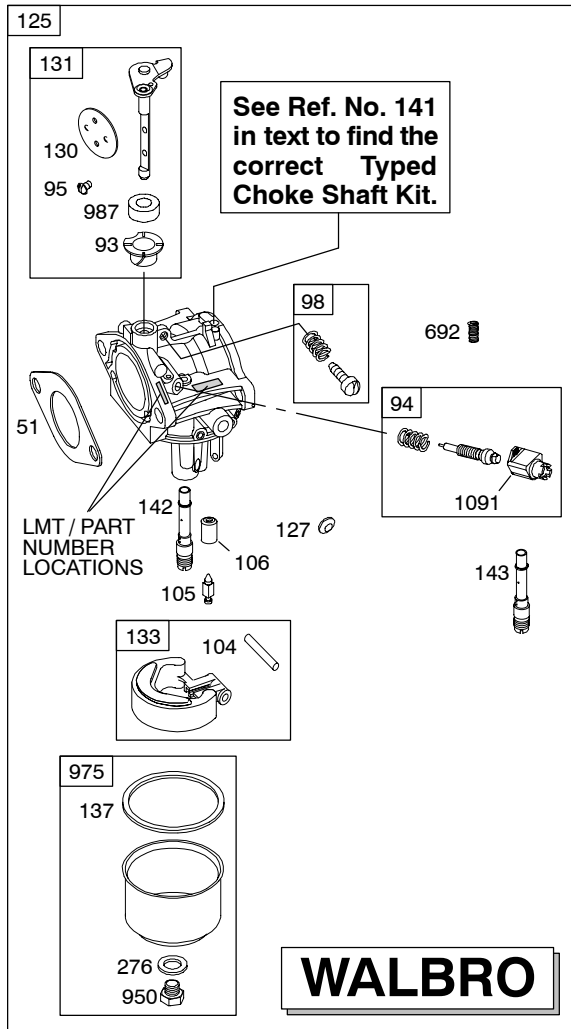

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.




219800

1036 EMISSION LABEL

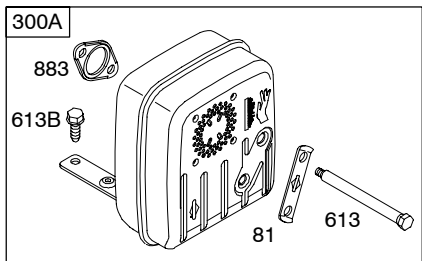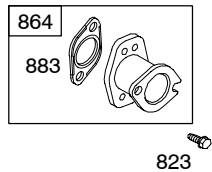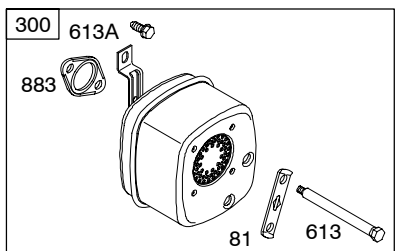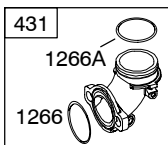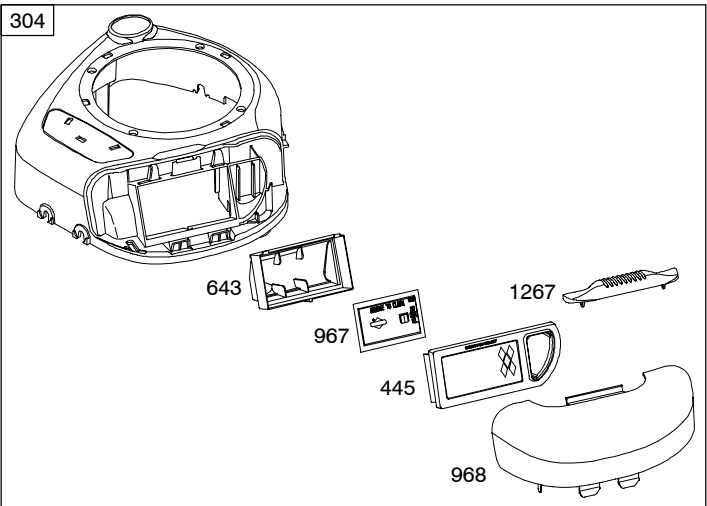






Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5709-6 Assemblies include all parts shown in frames.

10/07/2005









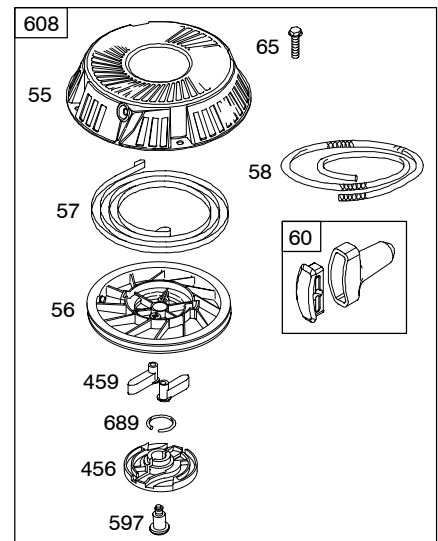
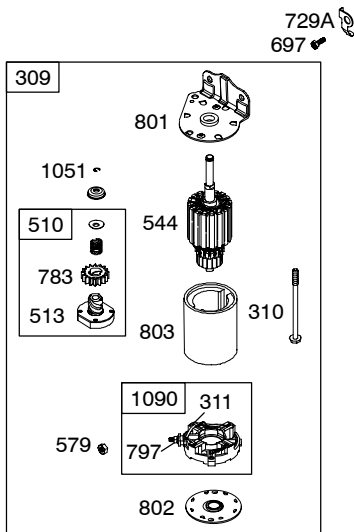
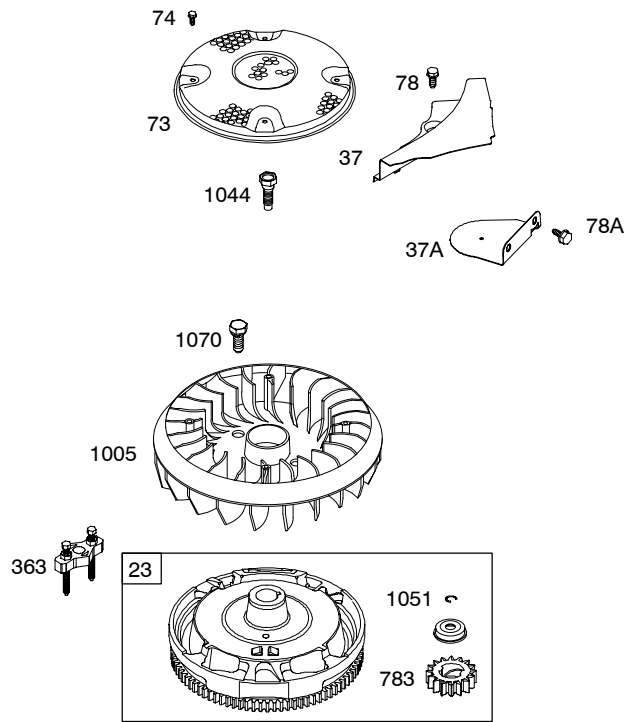


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

219800

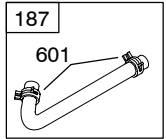

385

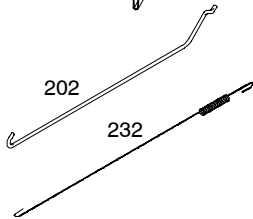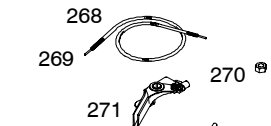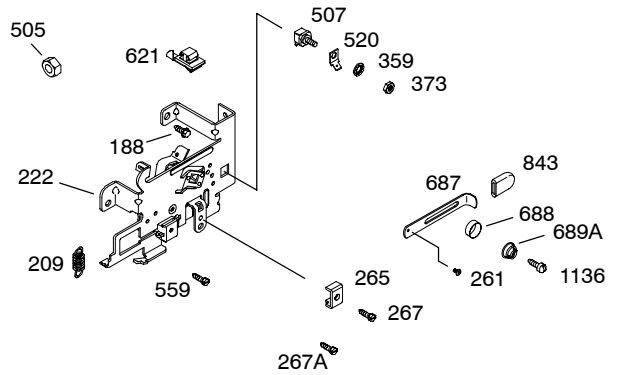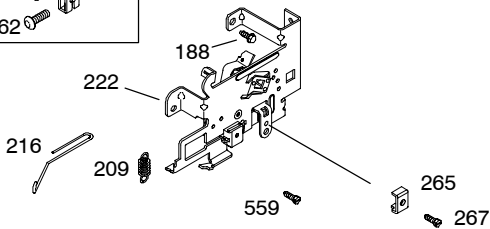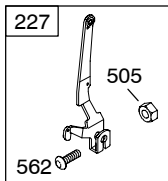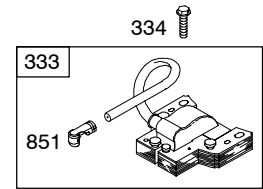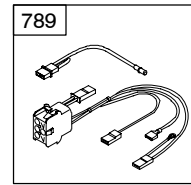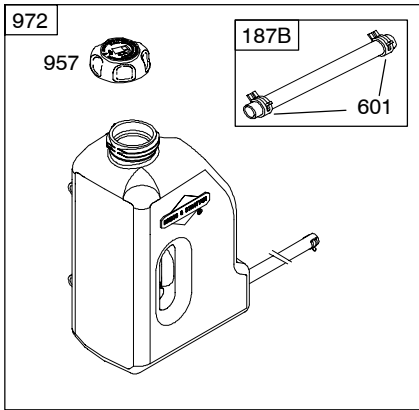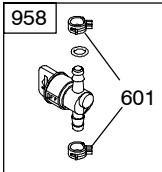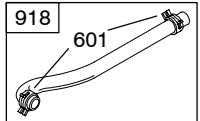



Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5709-8

Assemblies include all parts shown in frames.

10/07/2005

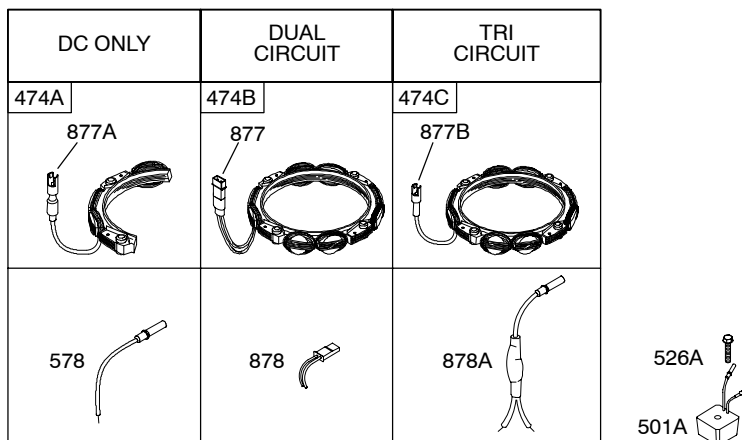

NOTE: All stators use a No. 1119 mounting screw. 

NOTE: The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information.

219800

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	697377	Cylinder Assembly	24	222698	Key-Flywheel	28	697099	Pin-Piston
2	399265	Kit-Bushing/Seal (Magneto Side)	25	698767	Piston Assembly (Standard)	29	697364	Rod-Connecting (Standard)
3	391086	Seal-Oil (Magneto Side)			----- Note -----			----- Note -----
4	697106	Sump-Engine		698768	Piston Assembly (.010" Oversize)		697262	Rod-Connecting (.020" Undersize)
5	697396	Head-Cylinder		698769	Piston Assembly (.020" Oversize)	32	692852	Screw (Connecting Rod)
7	273280	Gasket-Cylinder Head		698770	Piston Assembly (.030" Oversize)	33	695760	Valve-Exhaust
9	697109	Gasket-Breather		698371	Piston Assembly (Standard)	34	695761	Valve-Intake
10	697157	Screw (Breather Assembly)			Used on Type No(s). 0121.	35	691279	Spring-Valve (Intake)
11	697113	Tube-Breather		698393	Piston Assembly (.010" Oversize)	36	691279	Spring-Valve (Exhaust)
12	697110	Gasket-Crankcase (.015" Thick)(Standard)			Used on Type No(s). 0121.	37	697352	Guard-Flywheel
13	690360	Screw (Cylinder Head)		698394	Piston Assembly (.020" Oversize)	37A	697626	Guard-Flywheel Used on Type No(s). 0117, 0118.
14	790560	Stud (Cylinder Head) Used on Type No(s). 0121.			Used on Type No(s). 0121.	42	499586	Keeper-Valve
15	690946	Plug-Oil Drain (3/8" Standard)		698395	Piston Assembly (.030" Oversize)	43	691968	Slinger-Governor/Oil
16	698382	Crankshaft ----- Note ----- 697390 Crankshaft Used on Type No(s). 0121.			Used on Type No(s). 0121.	45	690564	Tappet-Valve
20	690947	Seal-Oil (PTO Side)		698375	Ring Set (Standard)	46	790400	Camshaft
22	692125	Screw (Crankcase Cover/Sump)			----- Note ----- 698376 Ring Set (.010" Oversize)	50	697361	Manifold-Intake
23	698281	Flywheel Used on Type No(s). 0121, 0311, 0336, 0371. ----- Note ----- 698282 Flywheel Used on Type No(s). 0113, 0121, 0123. 698283 Flywheel Used on Type No(s). 0117, 0118.	26		698377 Ring Set (.020" Oversize)	51	692137	Gasket-Intake
			27	698469	Lock-Piston Pin (Used After Code Date 02100300) ----- Note ----- 698138 Lock-Piston Pin (Used Before Code Date 02100400)	53	690227	Stud (Carburetor)
						54	691148	Screw (Intake Manifold)
						55	695130	Housing-Rewind Starter
						56	695129	Pulley-Starter
						57	695131	Spring-Rewind Starter Used on Type No(s). 0121.
						58	695132	Rope-Starter Used on Type No(s). 0121.
						60	494212	Grip-Starter Rope Used on Type No(s). 0121.
						65	697725	Screw (Rewind Starter)
						73	697133	Screen-Rotating
						74	697897	Screw (Rotating Screen)
						78	691003	Screw (Flywheel Guard)
						78A	690364	Screw (Flywheel Guard)

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

219800

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
81	691178	Lock-Muffler Screw	125	790019	Carburetor (Walbro) (Gravity Feed)	135A	698780	Tube-Fuel Transfer (Nikki)
93	690602	Bushing-Throttle Shaft			Used on Type No(s). 0322, 0389.			Used on Type No(s). 0113, 0311, 0336, 0371.
94	498030	Kit-Idle Mixture (Walbro)			----- Note -----			----- Note -----
94A	695425	Kit-Idle Mixture (Nikki)			790020 Carburetor (Walbro)(Pump Feed)			790030 Tube-Fuel Transfer (Nikki)
95	691636	Screw (Throttle Valve)(Walbro)			Used on Type No(s). 0124.			Used on Type No(s). 0114, 0121, 0122, 0123.
95A	690718	Screw (Throttle Valve)(Nikki)			790021 Carburetor (Walbro)(Pump Feed)	137	281165	Gasket-Float Bowl (Walbro)
98	495800	Kit-Idle Speed (Walbro)			Used on Type No(s). 0117, 0118.	137A	698781	Gasket-Float Bowl (Nikki)
98A	695408	Kit-Idle Speed (Nikki)	125A	791178	Carburetor (Nikki)(Gravity Feed)	141	790902	Kit-Choke Shaft (Walbro)
104	690525	Pin-Float Hinge (Walbro)			Used on Type No(s). 0113, 0311, 0336, 0371.	141A	698778	Kit-Choke Shaft (Nikki)
104A	694918	Pin-Float Hinge (Nikki)			----- Note -----	141B	790903	Kit-Choke Shaft (Walbro)
105	231855	Valve-Float Needle (Walbro)			791266 Carburetor (Nikki)(Pump Feed)			Used on Type No(s). 0117, 0118.
105A	696136	Valve-Float Needle (Nikki)			Used on Type No(s). 0114, 0121, 0122, 0123.	142	790025	Nozzle-Carburetor (Standard)(Walbro)
106	690577	Seat-Inlet (Gravity Feed)	127	694524	Plug-Welch (Walbro)	143	790028	Nozzle-Carburetor (High Altitude)(Walbro)
		Used on Type No(s). 0322, 0389.	127A	690727	Plug-Welch (Nikki)	146	691639	Key-Timing
		----- Note -----	130	790024	Valve-Throttle	187	791805	Line-Fuel (Formed)(10-1/4 Inches Long)(Cut to Required Length)
		691780 Seat-Inlet (Pump Feed)			Used on Type No(s). 0113, 0114.	187B	296004	Line-Fuel (Cut To Required Length)
		Used on Type No(s). 0117, 0118, 0124.	130A	698774	Valve-Throttle (Nikki)	188	691693	Screw (Control Bracket)
108	691227	Valve-Choke (Walbro)	131	790901	Kit-Throttle Shaft (Walbro)			
108A	698773	Valve-Choke (Nikki)	131A	698776	Kit-Throttle Shaft (Nikki)			
117	699897	Jet-Main (Standard)	133	494381	Float-Carburetor (Walbro)			
118	699898	Jet-Main (High Altitude)	133A	694914	Float-Carburetor (Nikki)			
121	790031	Kit-Carburetor Overhaul (Walbro)						
		Used on Type No(s). 0117, 0118, 0124.						
		----- Note -----						
		792376 Kit-Carburetor Overhaul (Walbro)						
		Used on Type No(s). 0322, 0389.						
121A	698787	Kit-Carburetor Overhaul (Nikki)						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

219800

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
192	691986	Adjuster-Rocker Arm	270	691027	Nut (Control Wire Casing)	358	697151	Gasket Set-Engine
202	691841	Link-Mechanical Governor	271	691028	Lever-Control	359	691077	Washer (Ground Terminal) Used on Type No(s). 0117, 0118, 0124.
209	692208	Spring-Governor Used on Type No(s). 0113, 0121. ----- Note ----- 691798 Spring-Governor Used on Type No(s). 0114. 690480 Spring-Governor Used on Type No(s). 0123. 260902 Spring-Governor Used on Type No(s). 0311, 0371. 690576 Spring-Governor Used on Type No(s). 0336.	276	692255	Washer-Sealing	363	19203	Puller-Flywheel
			300	697048	Muffler Used on Type No(s). 0118, 0121, 0122, 0124.	373	691612	Nut (Ground Terminal) Used on Type No(s). 0117, 0118, 0124.
			300A	697349	Muffler Used on Type No(s). 0114, 0117.	383	89838	Wrench-Spark Plug
			304	699085	Housing-Blower (Red) Used on Type No(s). 0121, 0122, 0123, 0311, 0322, 0336, 0371, 0389. ----- Note ----- 698473 Housing-Blower (Black) Used on Type No(s). 0113, 0114, 0117, 0118, 0124.	385	694476	Screw (Fuel Pump)
216	691840	Link-Choke	305	697102	Screw (Blower Housing)	385A	690297	Screw (Fuel Pump)
222	694042	Bracket-Control	305A	697103	Screw (Blower Housing)	387	697090	Pump-Fuel (Includes Mounting Bracket)
227	691374	Lever-Governor Control	306	697359	Shield-Cylinder	387A	808656	Pump-Fuel
231	691636	Screw (Choke Valve)	307	691003	Screw (Cylinder Shield)	404	691691	Washer (Governor Crank)
232	691842	Spring-Governor Link	309	693551	Motor-Starter	431	697122	Elbow-Intake
238	691843	Cap-Valve	310	690323	Screw (Starter Motor)	445	698413	Filter-Air Cleaner Cartridge (Non Washable)
240	394358	Filter-Fuel (White, 75 Microns) Used on Type No(s). 0113, 0311, 0336, 0371.	311	497608	Brush Set	455	695113	Cup-Flywheel Used on Type No(s). 0121.
240A	691035	Filter-Fuel (Clear, 40 Microns) Used on Type No(s). 0114, 0117, 0118, 0121, 0123.	333	492341	Armature-Magneto	456	695128	Plate-Pawl Friction Used on Type No(s). 0121.
			334	691061	Screw (Magneto Armature)	459	281505	Pawl-Ratchet Used on Type No(s). 0121.
261	697176	Screw (Control Slide) Used on Type No(s). 0117, 0118, 0124.	337	691043	Plug-Spark ----- Note ----- 491055 Plug-Spark Used on Type No(s). 0114.	474A	696578	Alternator (DC Only) Used on Type No(s). 0114, 0122, 0124.
265	691024	Clamp-Casing	356	697397	Wire-Stop Used on Type No(s). 0113, 0114, 0121, 0122, 0123.	474B	696459	Alternator (Dual Circuit) Used on Type No(s). 0121, 0311, 0322, 0336, 0371, 0389.
267	690804	Screw (Casing Clamp)	356A	398808	Wire-Stop	474C	696457	Alternator (Tri Circuit) Used on Type No(s). 0113, 0123.
267A	695134	Screw (Casing Clamp)	356B	697089	Wire-Stop Used on Type No(s). 0113, 0123.	501A	691188	Regulator (5 To 9 Amp Regulated) Used on Type No(s). 0113, 0123.
268	691025	Casing-Control Wire (Cut To Required Length)	356C	399222	Wire-Stop Used on Type No(s). 0117, 0118, 0124.			
269	691026	Wire-Control (Cut To Required Length)						

★ Included in Engine Gasket Set-Ref. No.358.
● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.
△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

219800

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
505	691251	Nut (Governor Control Lever)	613A	691678	Screw (Muffler)	783	693713	Gear-Pinion
507	691972	Insulator Used on Type No(s). 0117, 0118, 0124.	613B	690297	Screw (Muffler)	789	698329	Harness-Wiring Used on Type No(s). 0311, 0336, 0371.
510	693699	Drive-Starter	614	691620	Pin-Cotter	797	693167	Nut (Brush Retainer)
513	692024	Clutch-Drive	616	692012	Crank-Governor	801	691283	Cap-Drive
520	691084	Terminal-Ground Used on Type No(s). 0117, 0118, 0124.	617	692138	Seal-O Ring (Intake Manifold)	802	691286	Cap-End
521	690581	Shield-Cable Used on Type No(s). 0311.	621	692310	Switch-Stop Used on Type No(s). 0117, 0118, 0124.	803		Housing-Starter (Service With 693551 Starter Motor)
523	699908	Dipstick	633	690597	Seal-Choke/Throttle Shaft Used on Type No(s). 0117, 0118.	823	698941	Screw (Muffler Adapter)
524	691032	Seal-Dipstick Tube	634	690802	Spring/Seal Assembly (Walbro)	830	691095	Stud-Rocker Arm
525	697184	Tube-Dipstick Used on Type No(s). 0113, 0311, 0322, 0336, 0371, 0389.	634A	698779	Spring/Seal Assembly (Nikki)	842	691031	Seal-O Ring (Dipstick Tube)
		----- Note ----- 697085 Tube-Dipstick Used on Type No(s). 0114, 0117, 0118, 0121, 0122, 0123, 0124.	635	691909	Boot-Spark Plug	843	697158	Sleeve-Lever Used on Type No(s). 0117, 0118, 0124.
526A	697088	Screw (Regulator)(5 To 9 Amp Regulated)	643	697155	Retainer-Air Filter	847	790442	Dipstick/Tube Assembly Used on Type No(s). 0113, 0311, 0322, 0336, 0371, 0389.
527	792167	Clamp-Tube	644	690958	Nut (Carburetor)			----- Note ----- 790443 Dipstick/Tube Assembly Used on Type No(s). 0114, 0117, 0118, 0121, 0122, 0123, 0124.
544	692034	Armature-Starter	687	697175	Slide-Control Used on Type No(s). 0117, 0118, 0124.	851	692424	Terminal-Spark Plug
552	697144	Bushing-Governor Crank	688	690395	Cap-Friction Used on Type No(s). 0117, 0118, 0124.	864	697346	Adapter-Muffler Used on Type No(s). 0114, 0117, 0118, 0121, 0122, 0124.
559	697561	Screw (Remote Choke Stop) Used on Type No(s). 0371.	689	691855	Spring-Friction	868	690968	Seal-Valve
562	691119	Bolt (Governor Control Lever)	689A	690529	Spring-Friction Used on Type No(s). 0117, 0118, 0124.	877	393456	Wire/Connector- Alternator (Dual Circuit)
578	692306	Wire Assembly	691	692407	Seal-Governor Shaft	877A	393814	Wire/Connector- Alternator (DC Only)
579	691029	Nut (Starter Cable)	692	691301	Spring-Detent Used on Type No(s). 0114, 0117, 0118.	877B	393537	Wire/Connector- Alternator (Tri Circuit)
584	697112	Cover-Breather Passage	697	690372	Screw (Drive Cap)	878	398661	Harness-Alternator
597	691696	Screw (Pawl Friction Plate) Used on Type No(s). 0121.	705	790561	Nut (Fuel Tank)	878A	691955	Harness-Alternator (Tri Circuit)
601	791850	Clamp-Hose	718	690959	Pin-Locating	883	692236	Gasket-Exhaust
608	695058	Starter-Rewind Used on Type No(s). 0117, 0118, 0121, 0122.	729	691335	Clip-Wire (Wire Retainer)	914	691108	Screw (Rocker Cover)
613	691416	Screw (Muffler)	729A	691224	Clip-Wire (Starter Motor)	918	791851	Hose-Vacuum (Molded)
			741	697128	Gear-Timing	950	691657	Screw-Float Bowl (Bottom Of Bowl)
			757	697607	Link-Counterweight Used on Type No(s). 0121.			
			758	697391	Counterweight Used on Type No(s). 0121.			
			759	697392	Pin-Counterweight Used on Type No(s). 0121.			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5709-13

Assemblies include all parts shown in frames.

10/07/2005

219800

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
957	694261	Cap-Fuel Tank (Plastic)	987A	698777	Seal-Throttle Shaft (Nikki)	1090	691293	Retainer-Brush
958	698183	Valve-Fuel Shut Off (Plastic) Used on Type No(s). 0113.	1005	699044	Fan-Flywheel	1091	691333	Cap-Limiter
967	697292	Filter-Pre Cleaner	1022	272475	Gasket-Rocker Cover	1095	691581	Gasket Set-Valve
968	697420	Cover-Air Cleaner (Black)	1023	692492	Cover-Rocker	1119	691183	Screw (Alternator)
		----- Note -----	1026	697395	Rod-Push (Exhaust)	1127	695407	Screw (Float Bowl)
		697422 Cover-Air Cleaner (Red) Used on Type No(s). 0121.			----- Note -----	1136	690278	Screw (Control Bracket) Used on Type No(s). 0117, 0118, 0124.
972	792168	Tank-Fuel (Plastic) Used on Type No(s). 0117, 0118, 0121, 0122, 0124.	1029	691751	Arm-Rocker	1263	697124	Reed-Breather
975	495933	Bowl-Float (Walbro)	1034	690822	Guide-Push Rod	1264	697104	Screw (Breather Reed)
975A	698783	Bowl-Float (Nikki)	1036		Label-Emissions (Available from an Authorized Briggs & Stratton Service Dealer)	1266	691917	Seal-O Ring (Intake Elbow)
977	690192	Gasket Set-Carburetor (Walbro)	1040	698368	Plate-Trim (Exhaust) Used on Type No(s). 0113, 0114.	1266A	697123	Seal-O Ring (Intake Elbow)
977A	790032	Gasket Set-Carburetor (Nikki)	1044	698139	Screw (Flywheel)	1267	697419	Latch-Blower Housing (Black)
987	691326	Seal-Throttle Shaft (Walbro)	1051	691265	Ring-Retaining			----- Note -----
			1054	280275	Tie-Cable	1270	697156	Plug-AVS Counterweight Used on Type No(s). 0121.
			1058	276344	Operator's Manual	1330	272147	Repair Manual
			1070	690372	Screw (Flywheel Fan)			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.