

313700

Illustrated Parts List

Model Series

313700

TYPE NUMBERS
0112 through 0163.

TABLE OF CONTENTS

Air Cleaner	7
Alternator	9
Blower Housing	6
Cam	3
Carburetor	5
Controls	9
Crankcase Cover/Sump	2
Crankshaft	3
Cylinder	2
Electric Starter	8
Flywheel	8
Fuel	7
Head	4
Ignition	9
Kits/Gaskets – Carburetor	5
Kits/Gaskets – Engine	2
Kits/Gaskets – Valve	4
Muffler	7
Oil	3
Piston	3

PRINTED IN U.S.A.


















COPYRIGHT by BRIGGS & STRATTON CORPORATION
 All rights reserved. No part of this material may be reproduced or transmitted,
 in any form or by any means, electronic or mechanical, including photocopying,
 recording or by any information storage and retrieval system, without permission
 in writing from Briggs & Stratton Corporation.

313700






1058 OPERATOR'S MANUAL

1330 REPAIR MANUAL

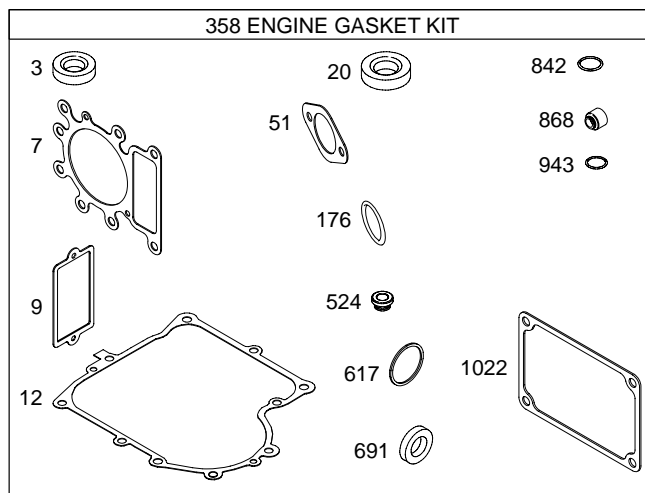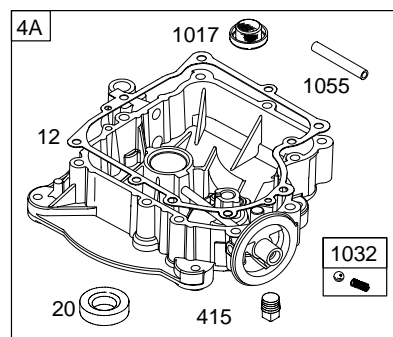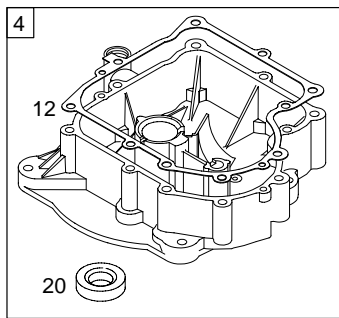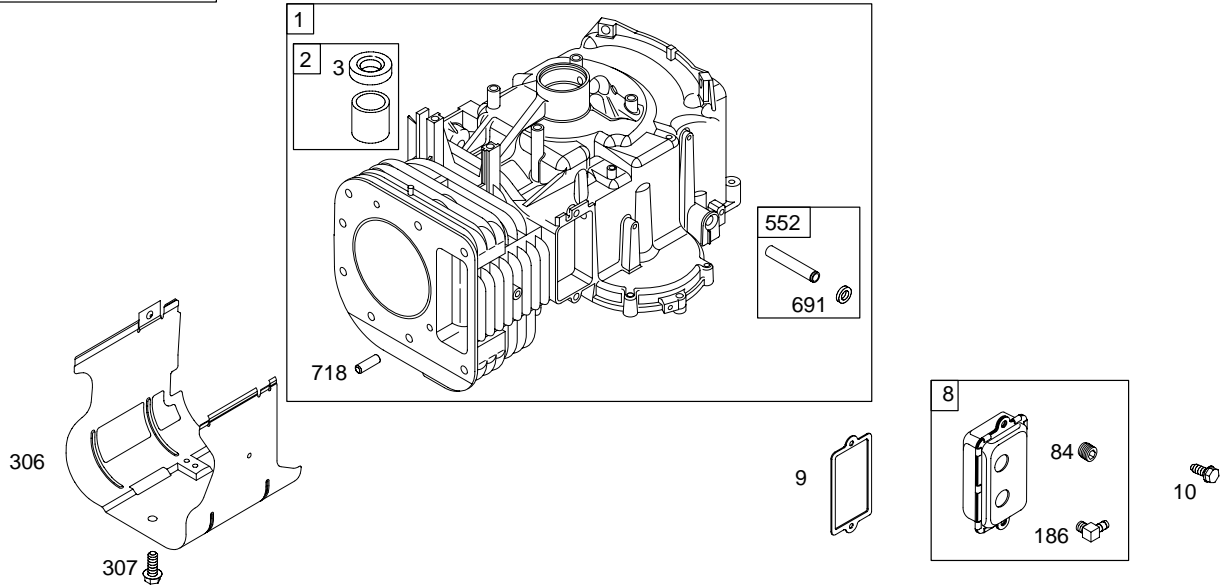

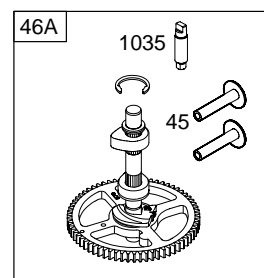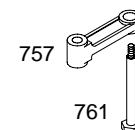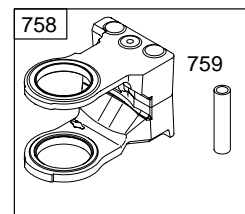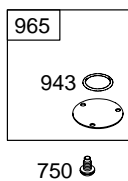

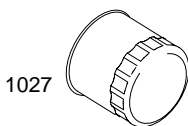
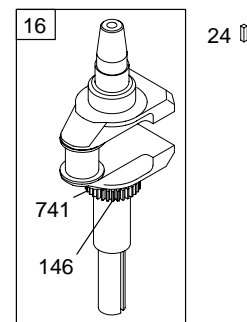
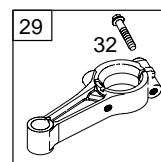

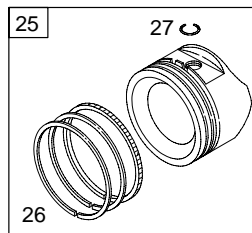
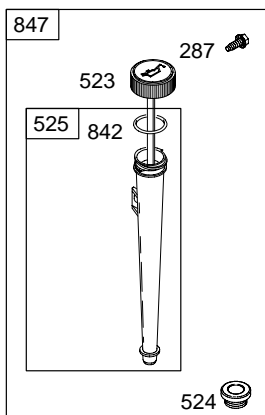


313700

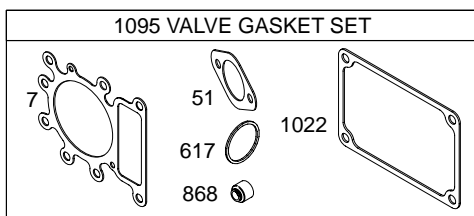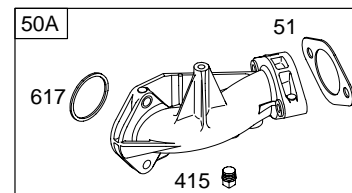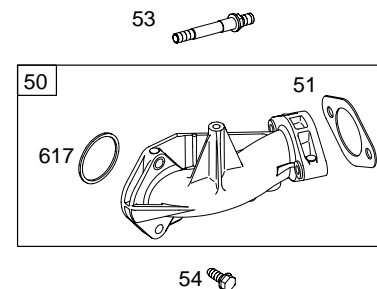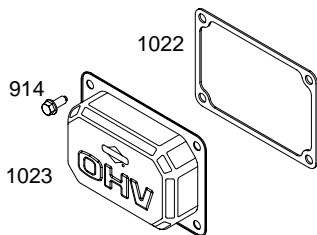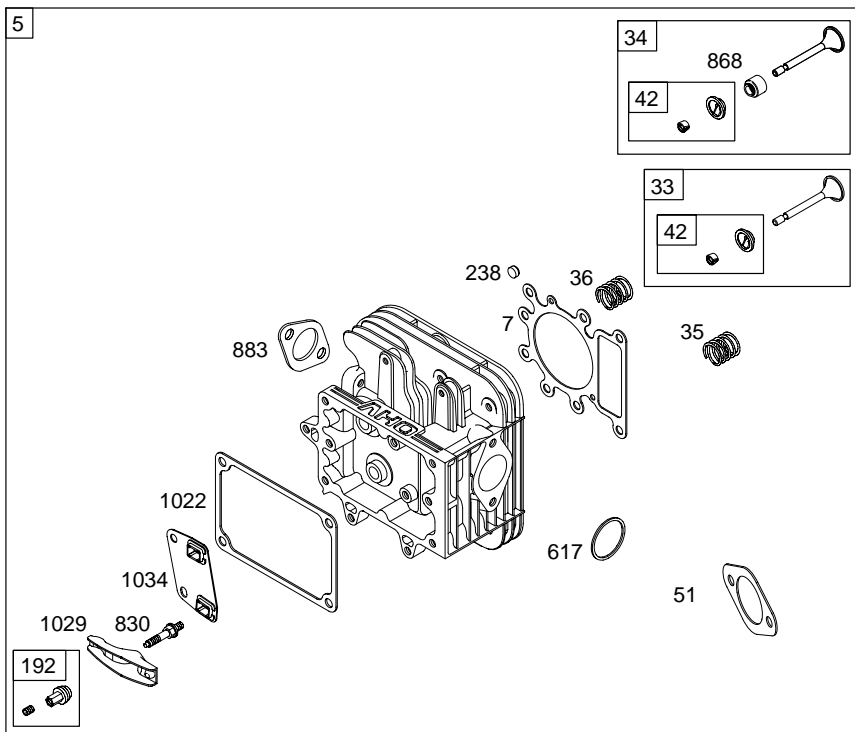

WALBRO




NIKKI

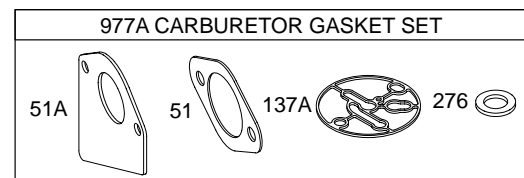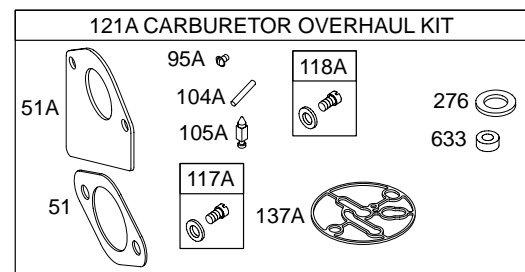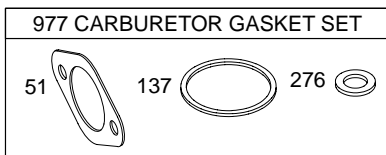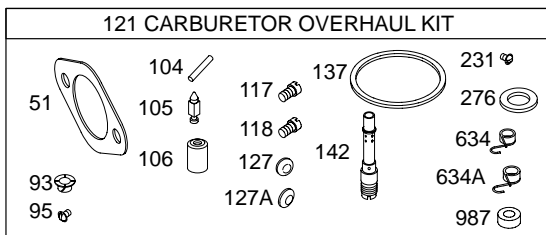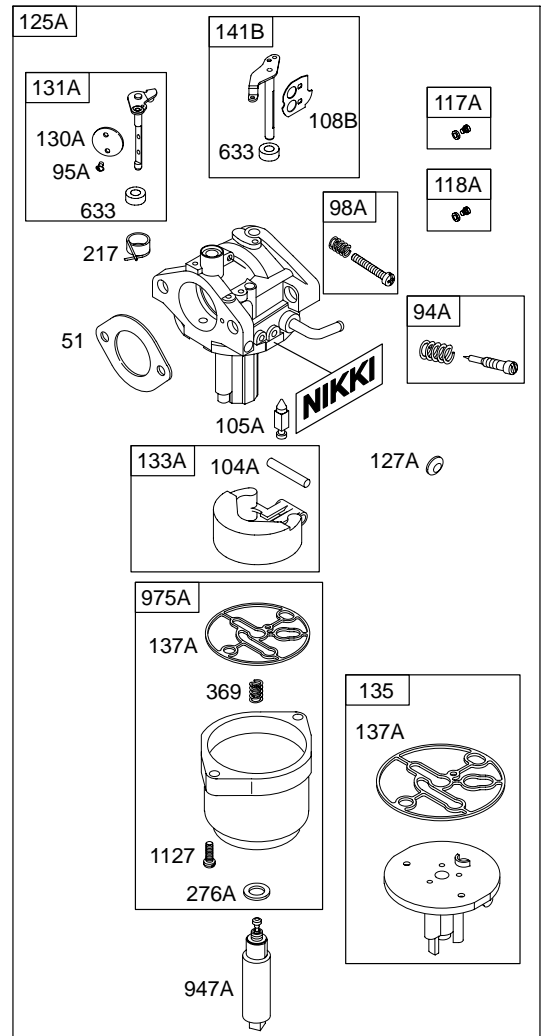
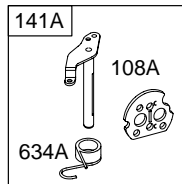
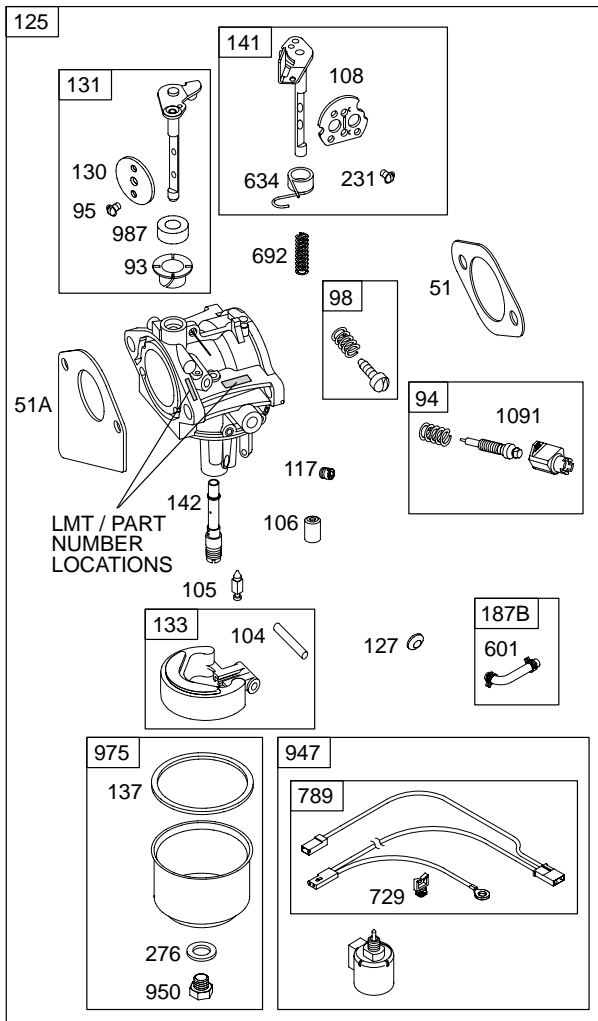


313700





1019 LABEL KIT


1036 EMISSION LABEL

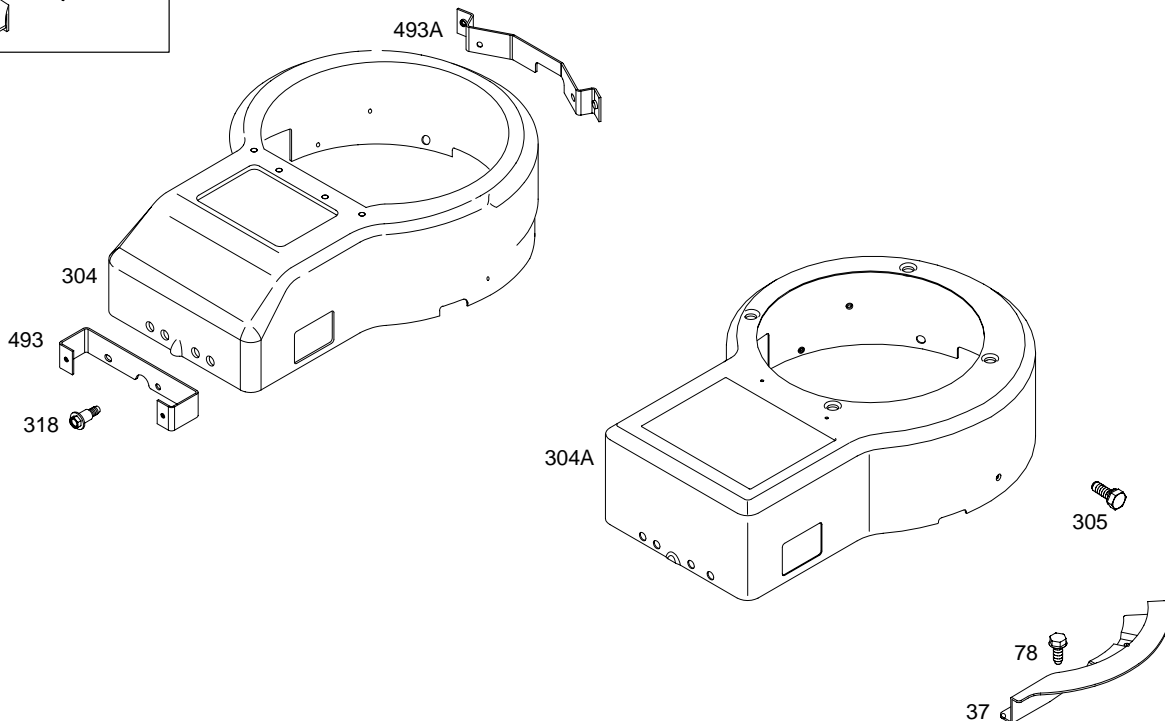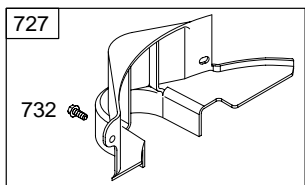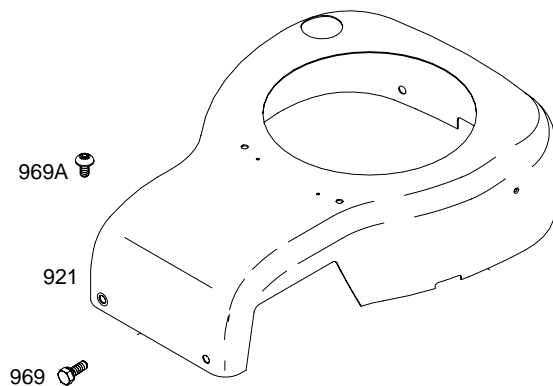

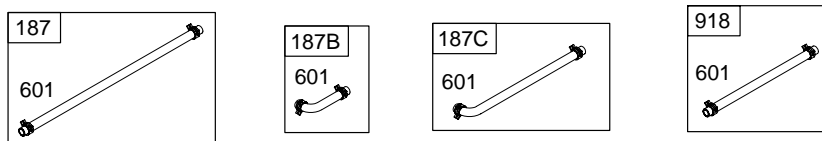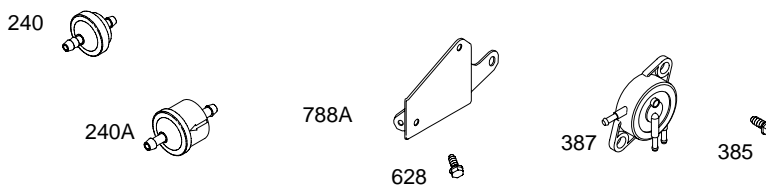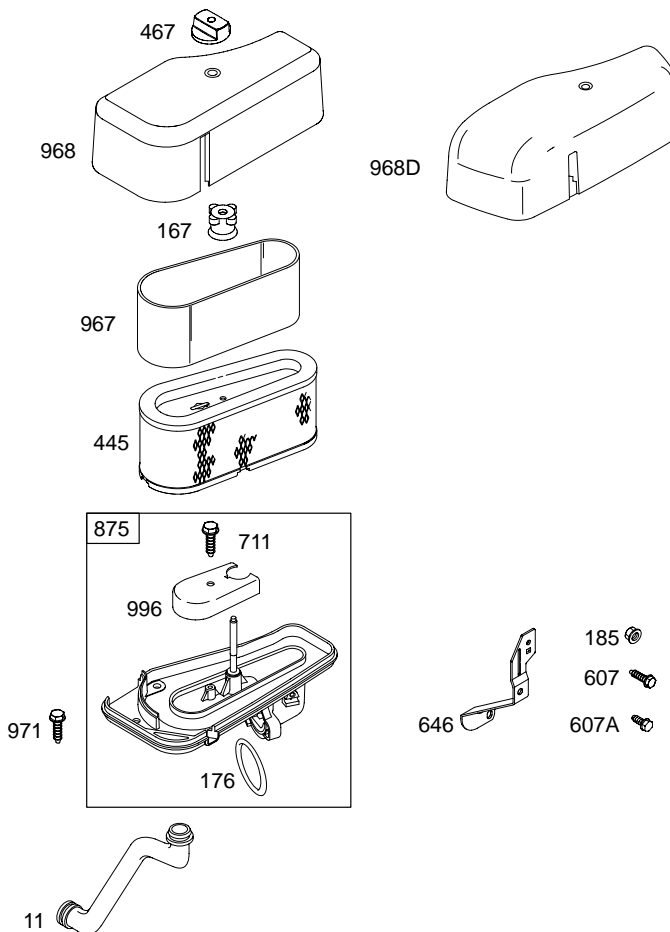


313700

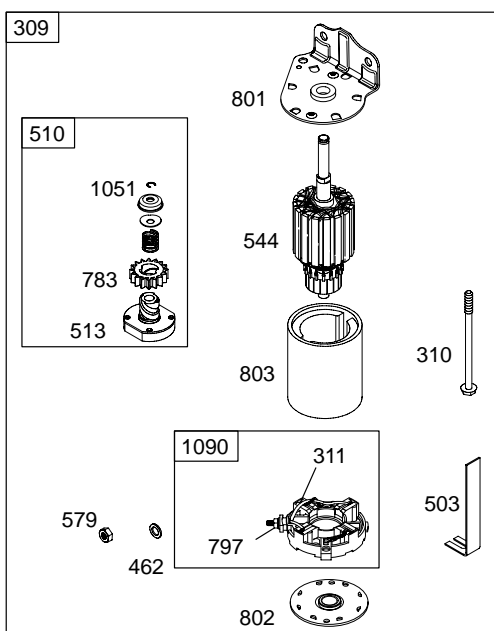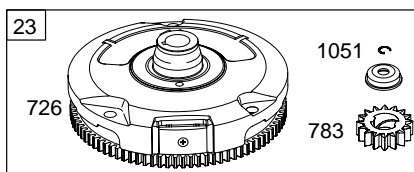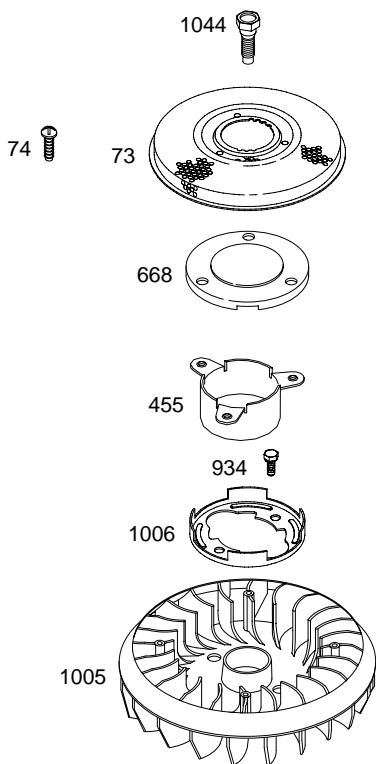

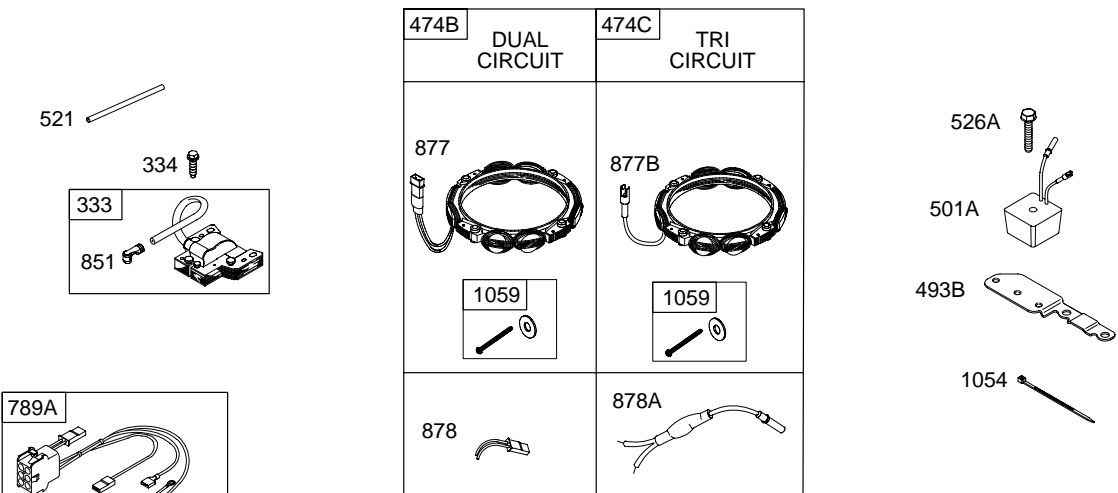

NOTE: All stators use Reference 1119 mounting screw.

NOTE: The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information.

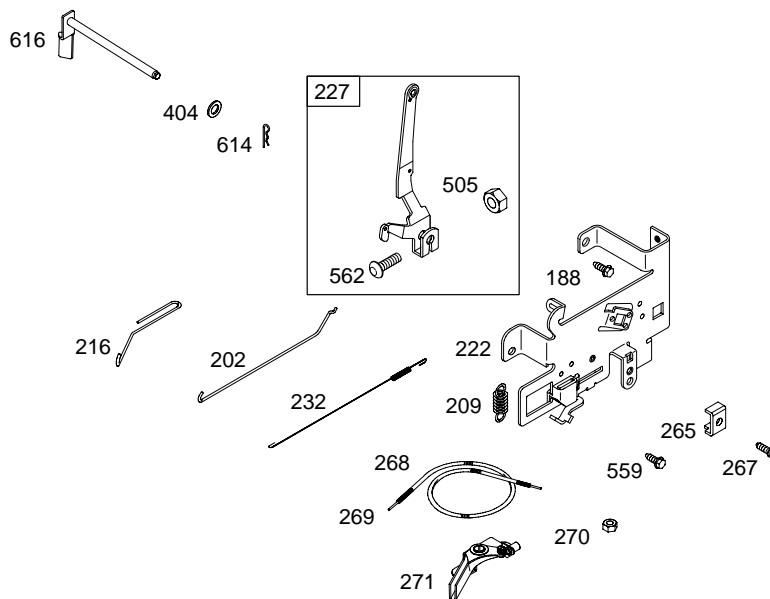

313700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	690156	Cylinder Assembly	25	692271	Piston Assembly (Standard)	51	692137	Gasket-Intake
2	399265	Kit-Bushing/Seal (Magneto Side)			Note	51A	692284	Gasket-Intake
3	391086	Seal-Oil (Magneto Side)				53	690227	Stud (Carburetor)
4	494238	Sump-Engine Used on Type No(s). 0126, 0132, 0133, 0162.				54	691148	Screw (Intake Manifold)
4A	693582	Sump-Engine Used on Type No(s). 0112, 0134, 0135, 0160, 0163.	26	690162	Ring Set (Standard)	73	690492	Screen-Rotating
5	698148	Head-Cylinder			Note	74	691655	Screw (Rotating Screen)
7	699168	Gasket-Cylinder Head				78	697561	Screw (Flywheel Guard)
8	696126	Breather Assembly				84	690343	Plug-Breather (Breather Assembly)
9	27803	Gasket-Breather				93	690602	Bushing-Throttle Shaft
10	691666	Screw (Breather Assembly)				94	498030	Kit-Idle Mixture
11	691328	Tube-Breather	27	691299	Lock-Piston Pin	94A	695425	Kit-Idle Mixture
12	692226	Gasket-Crankcase (.015" Thick, Standard)	28	498319	Pin-Piston (Standard)	95	691636	Screw (Throttle Valve)
		Note			Note	95A	690718	Screw (Throttle Valve)
		692406 Gasket-Crankcase (.005" Thick)				98	495800	Kit-Idle Speed
		692405 Gasket-Crankcase (.009" Thick)	29	692419	Rod-Connecting (Standard)	98A	695408	Kit-Idle Speed
13	690360	Screw (Cylinder Head)			Note	104	690525	Pin-Float Hinge
15	690946	Plug-Oil Drain (Standard)				104A	694918	Pin-Float Hinge
15A	691680	Plug-Oil Drain Used on Type No(s). 0112, 0132, 0163.				105	231855	Valve-Float Needle
16	690136	Crankshaft				105A	694922	Valve-Float Needle
20	291675	Seal-Oil (PTO Side)				106	690577	Seat-Inlet
22	692125	Screw (Crankcase Cover/Sump)				108	690464	Valve-Choke (LMT 155, 697482)
23	693557	Flywheel (Steel Ring Gear)	32	692852	Screw (Connecting Rod)	108A	692344	Valve-Choke (LMT 154, 697481)
		Note	33	695760	Valve-Exhaust	108B	695419	Valve-Choke
		693556 Flywheel (Steel Ring Gear) Used on Type No(s). 0160.	34	695761	Valve-Intake	117	692408	Jet-Main (Standard)
24	222698	Key-Flywheel	35	691279	Spring-Valve (Intake)	117A	695415	Jet-Main (Standard)
			36	691279	Spring-Valve (Exhaust)	118	692411	Jet-Main (High Altitude)
			37	690456	Guard-Flywheel	118A	695416	Jet-Main (High Altitude)
			42	499586	Keeper-Valve	121	690191	Kit-Carburetor Overhaul
			43	691968	Slinger-Governor/Oil	121A	695427	Kit-Carburetor Overhaul
			45	690564	Tappet-Valve	125	698620	Carburetor (LMT 154, 155, 697481, 697482)
			46A	698492	Camshaft (Used After Code Date 02111700).	125A		Carburetor (Nikki Carburetor, Service With Walbro Carburetor)
					Note	127	695005	Plug-Welch
						127A	690727	Plug-Welch
			50	690193	Manifold-Intake	130	691750	Valve-Throttle
			50A	695527	Manifold-Intake Used on Type No(s). 0162, 0163.	130A	695418	Valve-Throttle

★ Engine Gasket Set-Reference 358
● Carburetor Overhaul Kit-Reference 121

◆ Carburetor Gasket Set-Reference 977
⊘ Valve Gasket Set-Reference 1095

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
131	494379	Kit-Throttle Shaft	216	691840	Link-Choke	310	690323	Bolt (Starter Motor)
131A	695421	Kit-Throttle Shaft	217	695409	Spring-Choke Return	311	497608	Brush Set
133	494381	Float-Carburetor	222	694042	Bracket-Control	318	692127	Screw (Mounting Bracket)
133A	694914	Float-Carburetor	227	691374	Lever-Governor Control	333	492341	Armature-Magneto
135	696142	Tube-Fuel Transfer	231	●691636	Screw (Choke Valve)	334	691061	Screw (Magneto Armature)
137	●281165	Gasket-Float Bowl	232	691842	Spring-Governor Link	337	491055	Plug-Spark
137A	●695426	Gasket-Float Bowl	238	691843	Cap-Valve	Note		
141	495097	Kit-Choke Shaft (Manual Choke) (LMT 155, 697482)	240	298090	Fuel Filter (Red)	691043	Plug-Spark	Used on Type No(s). 0160.
141A	495931	Kit-Choke Shaft (LMT 154, 697481)	240A	691035	Fuel Filter (Clear) Used on Type No(s). 0160.	358	690189	Gasket Set-Engine
141B	695420	Kit-Choke Shaft	265	691024	Clamp-Casing	363	19203	Puller-Flywheel
142	●692412	Nozzle-Carburetor (Standard)	267	690804	Screw (Casing Clamp)	369	695422	Spring-Float Bowl
146	691639	Key-Timing	268	691025	Casing-Control Wire (Cut to Required Length)	383	89838	Wrench-Spark Plug
167	692297	Seal-Air Cleaner Nut	269	691026	Wire-Control (Cut to Required Length)	385	691108	Screw (Fuel Pump)
176	★691917	Seal-O Ring (Air Cleaner Base)	270	691027	Nut (Control Wire Casing)	387	808656	Pump-Fuel
185	690958	Nut (Air Cleaner Base)	271	691028	Lever-Control	404	691691	Washer (Governor Crank)
186	691609	Connector-Hose (Breather Assembly)	276	●692255	Washer-Sealing	415	690283	Plug (Used in Engine Sump as Oil Pressure Switch Plug and Intake Manifold as Vacuum Plug)
186A	692317	Connector-Hose (Used Before Code Date 02102900).	276A	●695410	Washer-Sealing	445	496894	Filter-Air Cleaner Cartridge
187	296004	Line-Fuel (Cut to Required Length)	287	691002	Screw (Dipstick Tube)	455	691173	Cup-Flywheel
187B	699331	Line-Fuel (Formed) (Cut to Required Length) Used on Type No(s). 0112, 0126, 0132, 0133, 0134, 0135.	304	690497	Housing-Blower (Black)	462	691261	Washer (Starter Cable)
187C	697907	Line-Fuel (Formed) (9 Inches Long) Used on Type No(s). 0160.	304A	690844	Housing-Blower (Red) Used on Type No(s). 0126, 0135, 0162, 0163.	467	691668	Knob-Air Cleaner
188	691693	Screw (Control Bracket)	Note			474B	696459	Alternator (Dual Circuit)
192	691986	Adjuster-Rocker Arm	690845 Housing- Blower (Black) Used on Type No(s). 0160.			474C	696457	Alternator (Tri-Circuit) Used on Type No(s). 0160.
202	691841	Link-Mechanical Governor	305	691108	Screw (Blower Housing)	493	690493	Bracket-Mounting (Blower Housing Front)
209	692208	Spring-Governor (Green)	306	698454	Shield-Cylinder	493A	690494	Bracket-Mounting (Blower Housing Rear)
Note			307	691003	Screw (Cylinder Shield)	493B	694475	Bracket-Mounting (Regulator) Used on Type No(s). 0160.
691795 Spring- Governor (Yellow) Used on Type No(s). 0160.			309	693551	Motor-Starter			

★ Engine Gasket Set-Reference 358
● Carburetor Overhaul Kit-Reference 121

◆ Carburetor Gasket Set-Reference 977
∅ Valve Gasket Set-Reference 1095

313700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
501A	691188	Regulator	711	690703	Screw (Carburetor Shield)	878	691237	Harness-Alternator (Dual Circuit)
503	691532	Strap-Starter	718	690959	Pin-Locating	878A	691655	Harness-Alternator (Tri-Circuit) Used on Type No(s). 0160.
505	691251	Nut (Governor Control Lever)	726		Gear-Ring (Steel) (Sold In Flywheel Kit, Reference 23, Only)	883	★692236	Gasket-Exhaust
510	693699	Drive-Starter	727	490324	Cover-Starter Drive	914	690960	Screw (Rocker Cover)
513	692024	Clutch-Drive	729	691335	Clip-Wire	918	393815	Hose-Vacuum Used on Type No(s). 0160.
521	690581	Shield-Cable	729A	691224	Clip-Wire	921	692417	Cover-Blower Housing (Red)
523	692014	Dipstick	732	691002	Screw (Starter Drive Cover)	934	690372	Screw (Fan Retainer)
524	★281370	Seal-Dipstick Tube	741	691284	Gear-Timing	943	★690589	Seal-O Ring (Oil Pump Cover)
525	691398	Tube-Dipstick	750	691033	Screw (Oil Pump Cover)	947	692734	Solenoid-Fuel
526A	694476	Screw (Regulator)	757	691714	Link-Counterweight	947A	695423	Solenoid-Fuel
544	692034	Armature-Starter	758	692423	Counterweight	950	691657	Screw (Float Bowl)
552	491986	Bushing-Governor Crank	759	691239	Pin-Counterweight	965	499613	Cover-Oil Pump
559	693675	Screw (Remote Choke Stop)	761	691096	Screw (Counterweight)	967	272403	Filter-Pre Cleaner
562	691119	Bolt (Governor Control Lever)	783	693713	Gear-Pinion	968	691916	Cover-Air Cleaner Used on Type No(s). 0126, 0135, 0160, 0162, 0163.
579	691029	Nut (Starter Cable)	788A	690458	Bracket-Fuel Pump Used on Type No(s). 0160.	968D	692139	Cover-Air Cleaner Used on Type No(s). 0112, 0132, 0133, 0134.
601	95162	Clamp-Hose	789	692037	Harness-Wiring (Carburetor)	969	691108	Screw (Blower Housing Cover)
607	690703	Screw (Air Cleaner Brace)	789A	698329	Harness-Wiring Used on Type No(s). 0160.	969A	690365	Screw (Blower Housing Cover)
607A	691693	Screw (Air Cleaner Brace)	797	693167	Nut (Brush Retainer)	971	692129	Screw (Air Cleaner Base To Carburetor)
614	691620	Pin-Cotter	801	691283	Cap-Drive	975	495933	Bowl-Float
616	692012	Crank-Governor	802	691286	Cap-End	975A	695417	Bowl-Float
617	Δ★692138	Seal-O Ring (Intake Manifold)	803	693757	Housing-Starter	977	690192	Gasket Set-Carburetor
628	690661	Screw (Fuel Pump Bracket)	830	691095	Stud-Rocker Arm	977A	695428	Gasket Set-Carburetor
633	●695414	Seal-Choke/Throttle Shaft	842	★691870	Seal-O Ring (Dipstick Tube)			
634	●690801	Spring/Seal Assembly (Manual Choke) (LMT 155, 697482)	847	496415	Dipstick/Tube Assembly			
634A	●690802	Spring/Seal Assembly (LMT 154, 697481)	851	692424	Terminal-Spark Plug			
635	691909	Boot-Spark Plug	868	Δ★690968	Seal-Valve			
646	690460	Brace-Air Cleaner	875	696129	Base-Air Cleaner			
668	691323	Spacer (Rotating Screen)	877	393456	Wire/Connector- Alternator (Dual Circuit)			
691	★692407	Seal-Governor Shaft	877B	393537	Wire/Connector- Alternator (Tri-Circuit) Used on Type No(s). 0160.			
692	690572	Spring-Detent						
697	690372	Screw (Drive Cap)						

★ Engine Gasket Set-Reference 358
● Carburetor Overhaul Kit-Reference 121

◆ Carburetor Gasket Set-Reference 977
∅ Valve Gasket Set-Reference 1095

313700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
987	●691326	Seal-Throttle Shaft	1035	693784	Shaft-Pump	1044	698139	Screw
996	690678	Shield-Carburetor	1036	695700	Label-Emissions			(Flywheel)
1005	697853	Fan-Flywheel			(Used After Code Date	1051	691265	Ring-Retaining
1006	690452	Retainer-Fan			00063000).	1054	280275	Tie-Cable
1017	690770	Screen-Oil Pump			———— Note ————	1055	690528	Tube-Oil Pump
1019	690180	Kit-Label			694997 Label-	1058	275935	Operator's Manual
1022	Δ*272475	Gasket-Rocker Cover			Emissions	1059	698516	Kit-Screw/Washer
1023	691192	Cover-Rocker			(Used After Code Date			(Alternator)
1024	499054	Pump-Oil			99093000 and Before	1090	691293	Retainer-Brush
1026	692003	Rod-Push			Code Date 00070100).	1091	691333	Cap-Limiter
		(Intake)			694332 Label-	1095	690190	Gasket Set-Valve
1026A	692011	Rod-Push			Emissions	1119	691183	Screw
		(Exhaust)			(Used After Code Date			(Alternator)
1027	492932	Filter-Oil			98123100 and Before	1127	695407	Screw
1029	691751	Arm-Rocker			Code Date 99100100).			(Float Bowl)
1032	491710	Ball-Oil Pump			692468 Label-	1330	272147	Repair Manual
1034	690822	Guide-Push Rod			Emissions			
					(Used Before Code			
					Date 99010100).			

★ Engine Gasket Set-Reference 358
 ● Carburetor Overhaul Kit-Reference 121

◆ Carburetor Gasket Set-Reference 977
 ∅ Valve Gasket Set-Reference 1095