



**405500**

# Illustrated Parts List

## Model Series

# 405500

TYPE NUMBERS  
0110 through 0379.

### TABLE OF CONTENTS










- Air Cleaner** ..... 5
- Alternators** ..... 7
- Blower Housing** ..... 5
- Camshaft** ..... 2
- Carburetor** ..... 4
- Controls** ..... 6
- Engine Sump** ..... 2
- Crankshaft** ..... 2
- Cylinder** ..... 2
- Cylinder Head** ..... 3
- Electric Starter** ..... 6
- Flywheel** ..... 6
- Ignition** ..... 7
- Gasket Set - Engine** ..... 4
- Gasket Set - Valve** ..... 4
- Governor Spring** ..... 4
- Lubrication** ..... 2
- Kit - Carburetor Overhaul** ..... 4
- Muffler** ..... 6
- Piston** ..... 2
- Valves** ..... 3



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION  
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

# 405500

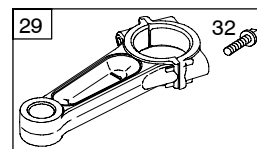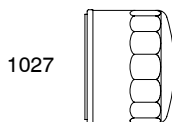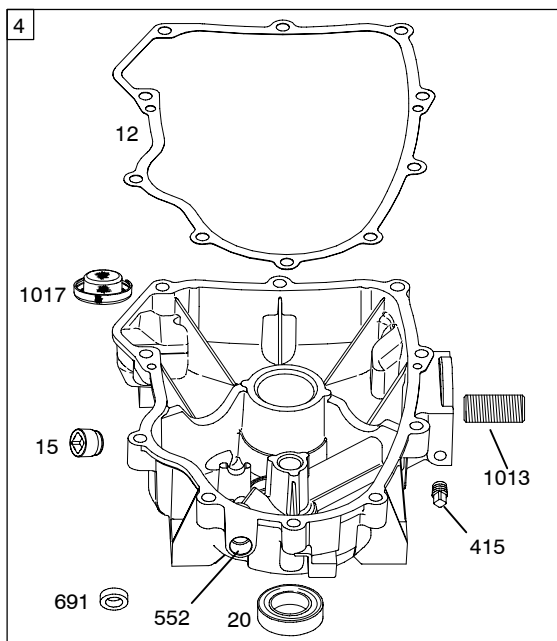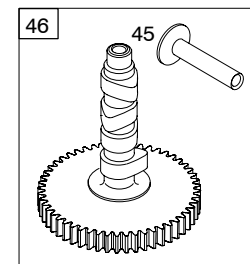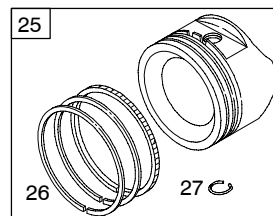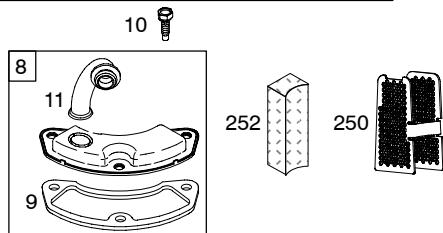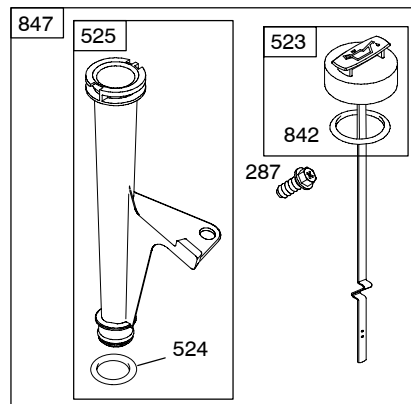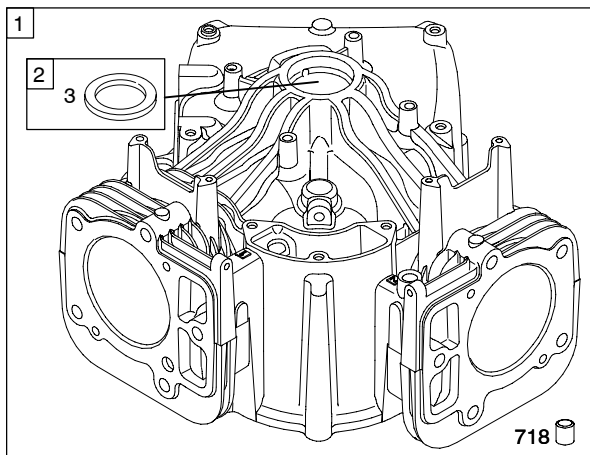




1019 LABEL KIT

1036 EMISSIONS LABEL

1058 OPERATOR'S MANUAL

1330 REPAIR MANUAL

24




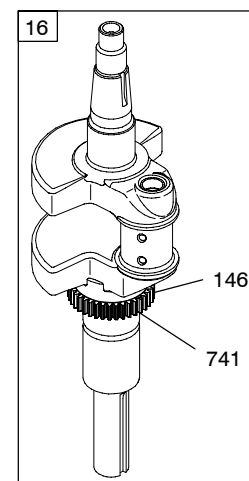
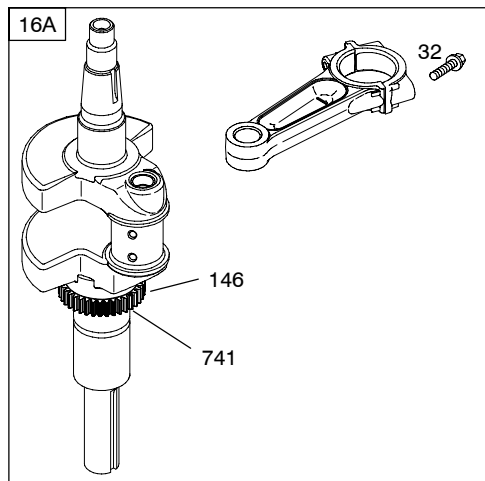
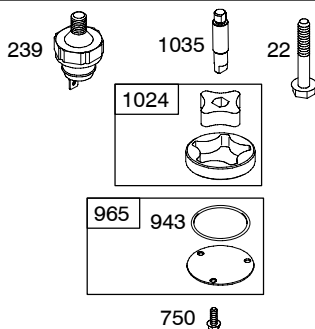


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5861-2








Assemblies include all parts shown in frames.

06/30/2005

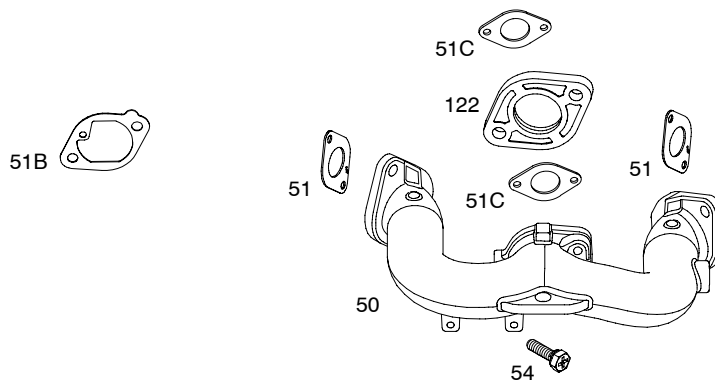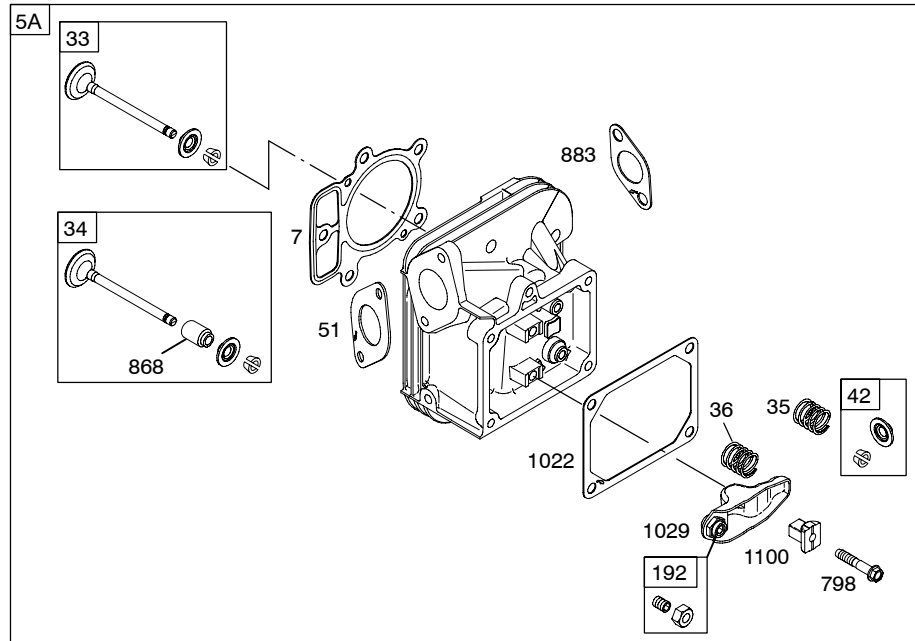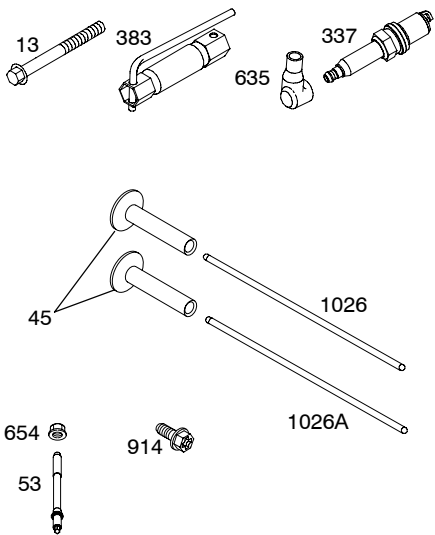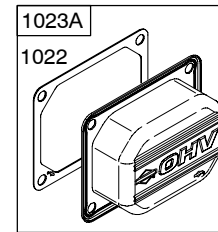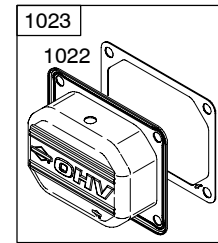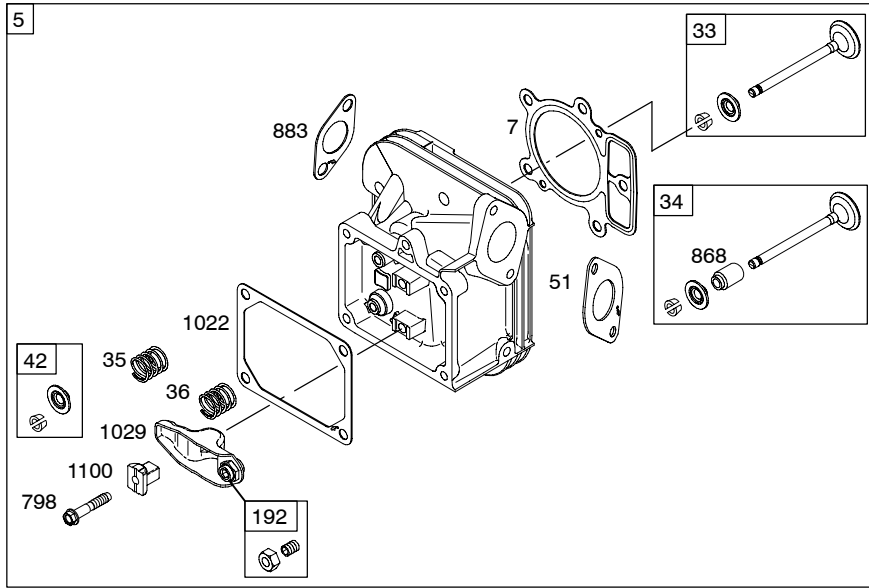


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
 5861-3 Assemblies include all parts shown in frames. 06/30/2005

**405500**

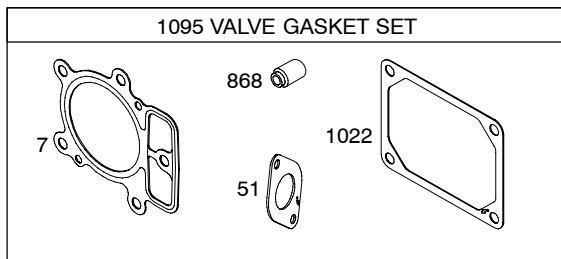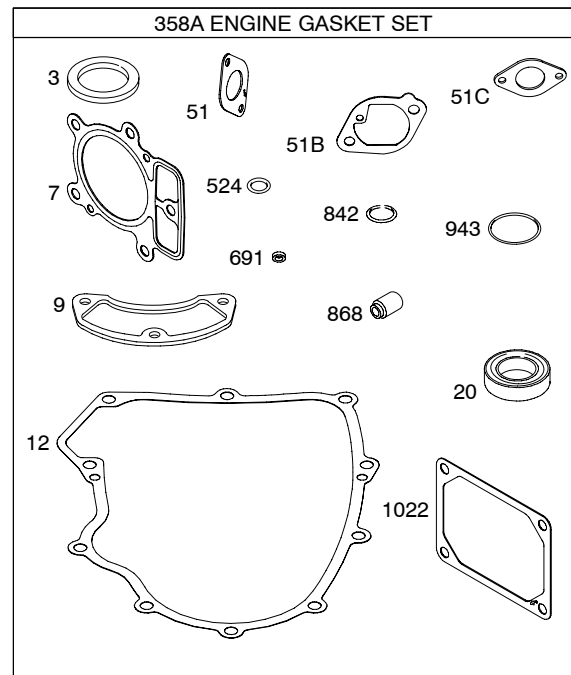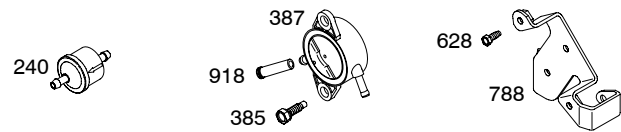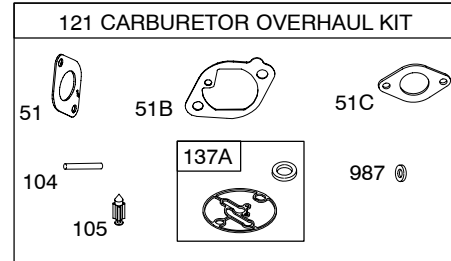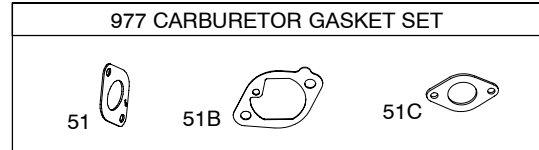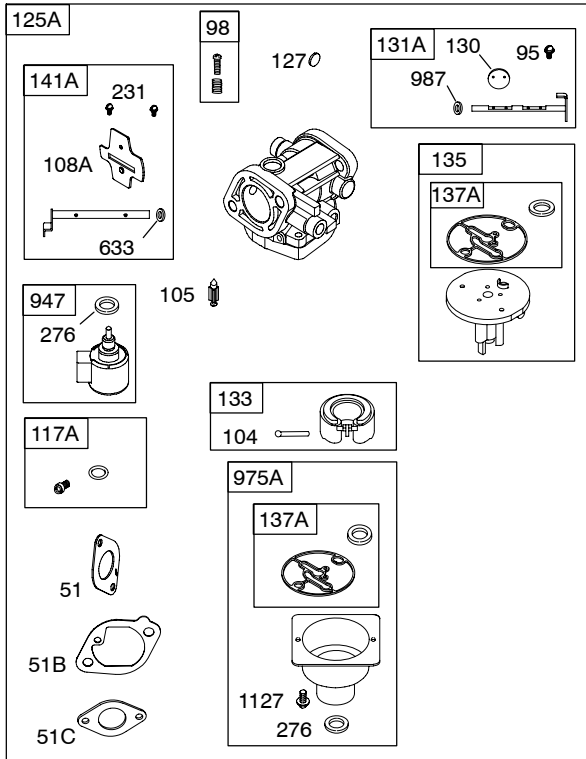


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
 5861-4 Assemblies include all parts shown in frames. 06/30/2005

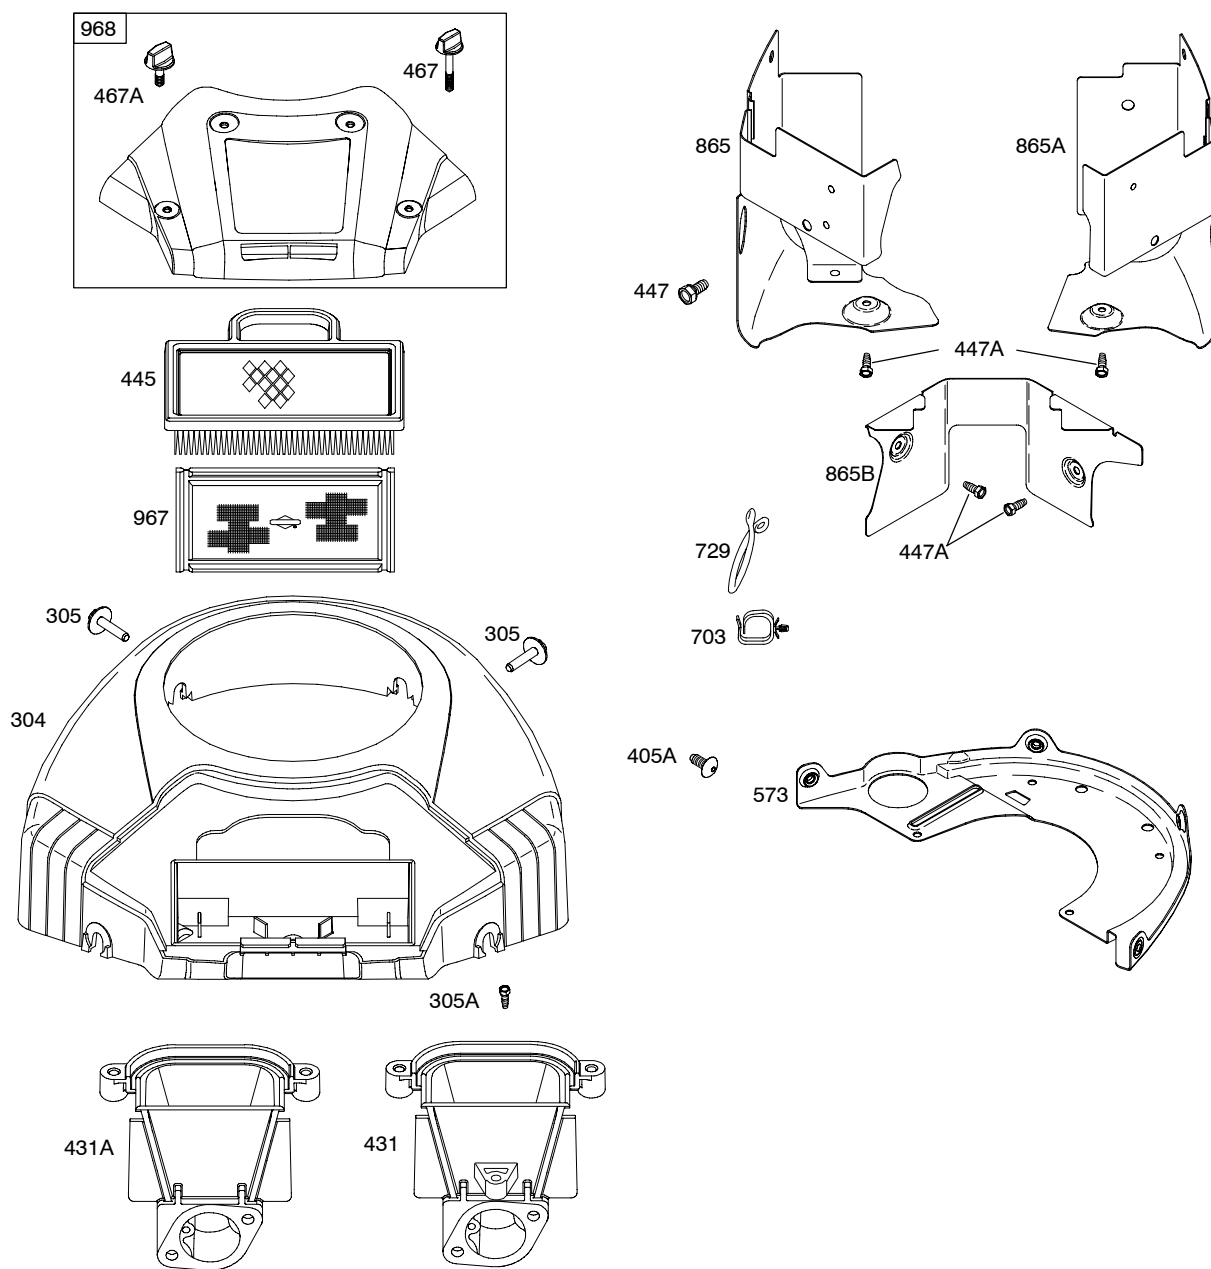



Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
 5861-5 Assemblies include all parts shown in frames. 06/30/2005

**405500**



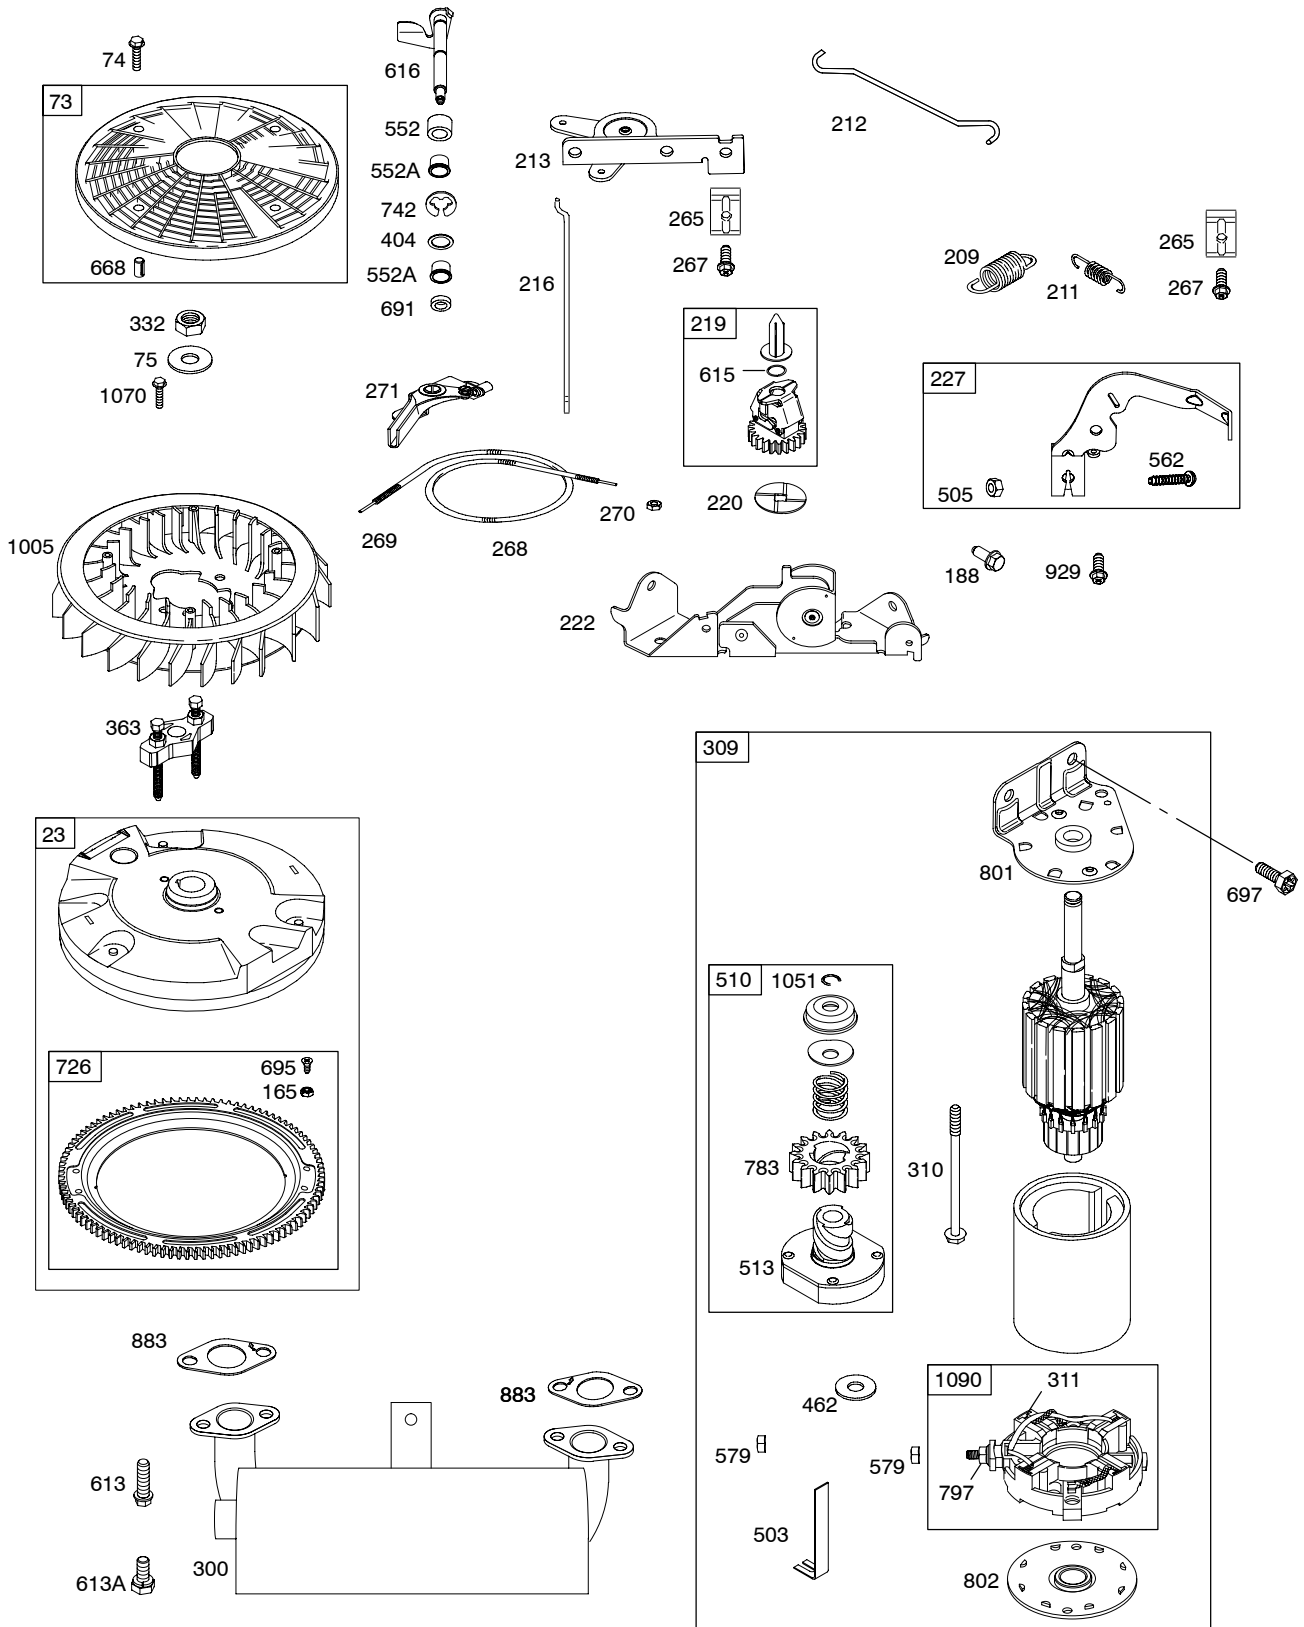


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
 5861-6 Assemblies include all parts shown in frames. 06/30/2005

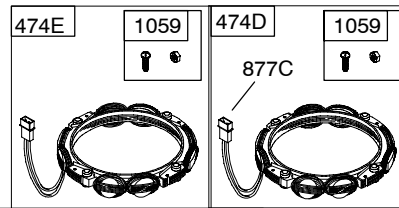

**NOTE:** All stators use a No. 1119 mounting screw. 

**NOTE:** The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information.

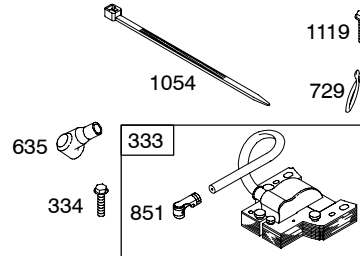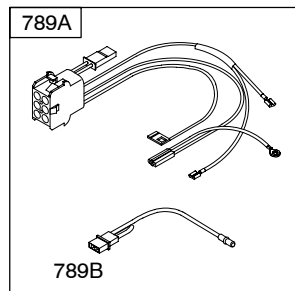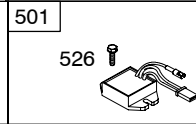

# 405500

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	699751	Cylinder Assembly	26	499604	Ring Set (Standard)	75	691056	Washer (Flywheel)
2	499585	Kit-Bushing/Seal (Magneto Side)			----- <b>Note</b> -----	95	690718	Screw (Throttle Valve)
3	★391086	Seal-Oil (Magneto Side)			499606 Ring Set (.020" Oversize)	98	699721	Kit-Idle Speed
4	699747	Sump-Engine	27	690975	Lock-Piston Pin	104	●694918	Pin-Float Hinge
5	693998	Head-Cylinder (Cylinder 1)	28	690229	Pin-Piston	105	●698537	Valve-Float Needle
5A	693999	Head-Cylinder (Cylinder 2)	29	699699	Rod-Connecting (Used After Code Date 03122700).	108A	699808	Valve-Choke
7	★△690962	Gasket-Cylinder Head			----- <b>Note</b> -----	117A	791405	Jet-Main (Standard)
8	499601	Breather Assembly			(For Replacement Connecting Rod, See Reference 16A)	118	699820	Jet-Main (High Altitude)
9	★690937	Gasket-Breather			(Used Before Code Date 03122800).	121	699814	Kit-Carburetor Overhaul
10	691108	Screw (Breather Assembly)	32	690976	Screw (Connecting Rod)	122	699802	Spacer-Carburetor
11	690942	Tube-Breather	33	499596	Valve-Exhaust	125A	699807	Carburetor
12	★697227	Gasket-Crankcase	34	697464	Valve-Intake	127	699810	Plug-Welch
13	791130	Screw (Cylinder Head)	35	690963	Spring-Valve (Intake)	130	699809	Valve-Throttle
15	691680	Plug-Oil Drain	36	690963	Spring-Valve (Exhaust)	131A	699812	Kit-Throttle Shaft
16	699700	Crankshaft (Used After Code Date 03122700).	42	499586	Keeper-Valve	133	694914	Float-Carburetor
16A	699701	Crankshaft (Used Before Code Date 03122800).	45	690977	Tappet-Valve	135	792022	Tube-Fuel Transfer
20	★690947	Seal-Oil (PTO Side)	46	790562	Camshaft	137A	●698781	Gasket-Float Bowl
22	694966	Screw (Crankcase Cover/Sump)	50	699801	Manifold-Intake	141A	699811	Kit-Choke Shaft
23	691053	Flywheel	51★●◆△690949	Gasket-Intake	146	690979	Key-Timing	
23	691054	Flywheel Used on Type No(s). 0379.	51B★●◆△699800	Gasket-Intake	165	693148	Nut (Ring Gear)	
24	222698	Key-Flywheel	51C★●◆△699803	Gasket-Intake	187	791872	Line-Fuel	
25	499588	Piston Assembly (Standard)	53	690951	Stud (Carburetor)	187A	791744	Line-Fuel (Molded)
		----- <b>Note</b> -----	54	699816	Screw (Intake Manifold)	188	691003	Screw (Control Bracket)
		499590 Piston Assembly (.020" Oversize)			(Used After Code Date 04110400).	192	690083	Adjuster-Rocker Arm
					----- <b>Note</b> -----	209	692909	Spring-Governor
					695240 Screw (Intake Manifold)			----- <b>Note</b> -----
					(Used Before Code Date 04110500).			790034
					73 494439 Screen-Rotating			Spring-Governor
					74 698425 Screw (Rotating Screen)			Used on Type No(s). 0110.
								792018
								Spring-Governor
								Used on Type No(s). 0379..

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**



**405500**

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
211	691019	Spring-Governed Idle	310	691263	Screw (Starter Motor)	523	691036	Dipstick
212	699805	Link-Throttle			----- <b>Note</b> -----	524	★691032	Seal-Dipstick Tube
213	691021	Bracket-Choke Control			690323	525	691037	Tube-Dipstick
216	691022	Link-Choke			Screw (Starter Motor)	526	691108	Screw (Regulator)(10-16 Amp Regulated)
219	698231	Gear-Governor			Used on Type No(s). 0110, 0379.	552	690552	Bushing-Governor Crank
220	690412	Washer (Governor Gear)	311	497608	Brush Set	552A	690553	Bushing-Governor Crank
222	698761	Bracket-Control	332	691059	Nut (Flywheel)	562	690311	Bolt (Governor Control Lever)
227	691048	Lever-Governor Control	333	691060	Armature-Magneto	573	790444	Plate-Back
231	690718	Screw (Choke Valve)	334	691061	Screw (Magneto Armature)	579	691029	Nut (Starter Cable)
239	491657	Switch-Oil Pressure	337	491055	Plug-Spark	601A	691038	Clamp-Hose
240	691035	Filter-Fuel	358A	694012	Gasket Set-Engine	613	690297	Screw (Muffler)
250	690957	Retainer-Breather	363	19203	Puller-Flywheel	613A	690341	Screw (Muffler)
252	690956	Collector-Oil	383	19374	Wrench-Spark Plug	615	698290	Retainer-Governor Shaft
265	691024	Clamp-Casing	385	691108	Screw (Fuel Pump)	616	691045	Crank-Governor
267	691044	Screw (Casing Clamp)	387	808656	Pump-Fuel	628	691108	Screw (Fuel Pump Bracket)
268	691025	Casing-Control Wire (Cut To Required Length)	404	690442	Washer (Governor Crank)	633	●695414	Seal-Choke/Throttle Shaft
269	691026	Wire-Control (Cut To Required Length)	405A	697820	Screw (Back Plate)	635	66538	Boot-Spark Plug
270	691027	Nut (Control Wire Casing)(Control Wire Casing)	415	690283	Plug	654	690958	Nut (Carburetor)
271	691028	Lever-Control	431	790628	Elbow-Intake	668	691215	Spacer
276	●695410	Washer-Sealing	431A	699806	Elbow-Intake Used on Type No(s). 0111.	691	★690657	Seal-Governor Shaft
287	691108	Screw (Dipstick Tube)	445	499486	Filter-Air Cleaner Cartridge	695	693149	Screw (Ring Gear)
300	696226	Muffler (Black) Used on Type No(s). 0110.	447	691003	Screw (Air Guide Cover)	697	690372	Screw (Drive Cap)
304	790688	Housing-Blower (Black)	447A	691108	Screw (Air Guide Cover)	703	691010	Clip
305	691005	Screw (Blower Housing)	462	691261	Washer (Starter Cable)	718	690959	Pin-Locating
305A	790690	Screw (Blower Housing)	467	691008	Knob-Air Cleaner	726	499612	Gear-Ring
309	497401	Motor-Starter ----- <b>Note</b> ----- 497595 Motor-Starter Used on Type No(s). 0110, 0379.	467A	790697	Knob-Air Cleaner	729	694123	Clip-Wire
			474D	696458	Alternator (10 Amp Circuit)	741	690980	Gear-Timing
			474E	696459	Alternator			
			501	691185	Regulator (10-16 Amp Regulated)			
			503	691532	Strap-Starter			
			505	691029	Nut (Governor Control Lever)			
			510	696541	Drive-Starter			
			513	692024	Clutch-Drive			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.*

5861-9

Assemblies include all parts shown in frames.

06/30/2005

### 405500

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
742	690328	Retainer-E Ring	918	694000	Hose-Vacuum	1026A	690982	Rod-Push (Aluminum)
750	696999	Screw (Oil Pump Cover)	929	691003	Screw (Choke Control Bracket)	1027	492932	Filter-Oil
783	695708	Gear-Pinion	943	★690589	Seal-O Ring (Oil Pump Cover)	1029	690972	Arm-Rocker
788	691039	Bracket-Fuel Pump	947	699728	Solenoid-Fuel	1035	691042	Shaft-Pump
789A	698330	Harness-Wiring	965	499613	Cover-Oil Pump	1036		Label-Emissions (Available from an Authorized Briggs and Stratton Service Dealer)
789B	790544	Harness-Wiring	967	273638	Filter-Pre Cleaner	1051	691265	Ring-Retaining
797	693167	Nut (Brush Retainer)	968	790689	Cover-Air Cleaner	1054	280275	Tie-Cable
798	697890	Screw (Rocker Arm)	975A	699502	Bowl-Float	1058	276245	Operator's Manual (Emission)
801	691283	Cap-Drive	977	699815	Gasket Set-Carburetor	1059	698516	Kit-Screw/Washer
802	691286	Cap-End	987	●699813	Seal-Throttle Shaft	1070	690372	Screw (Flywheel Fan)
842	★691031	Seal-O Ring (Dipstick Tube)	1005	790698	Fan-Flywheel	1090	691293	Retainer-Brush
847	499602	Dipstick/Tube Assembly	1013	690954	Nipple-Oil Filter	1095	699822	Gasket Set-Valve
851	493880	Terminal-Spark Plug	1017	690770	Screen-Oil Pump	1100	791959	Pivot-Rocker Arm
865	691012	Cover-Air Guide (Cylinder 1)	1019	698414	Kit-Label	1119	691183	Screw (Alternator)
865A	691014	Cover-Air Guide (Cylinder 2)	1022	★△690971	Gasket-Rocker Cover	1127	695407	Screw (Float Bowl)
865B	691015	Cover-Air Guide (Valley)	1023	499599	Cover-Rocker (Cylinder 2)	1330	273521	Repair Manual
868	★△690968	Seal-Valve	1023A	499600	Cover-Rocker (Cylinder 2)			
877C	399916	Wire/Connector-Alternator	1024	499054	Pump-Oil			
883	★△690970	Gasket-Exhaust	1026	690981	Rod-Push (Steel)			
914	691127	Screw (Rocker Cover)						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**